
Assembly Instructions

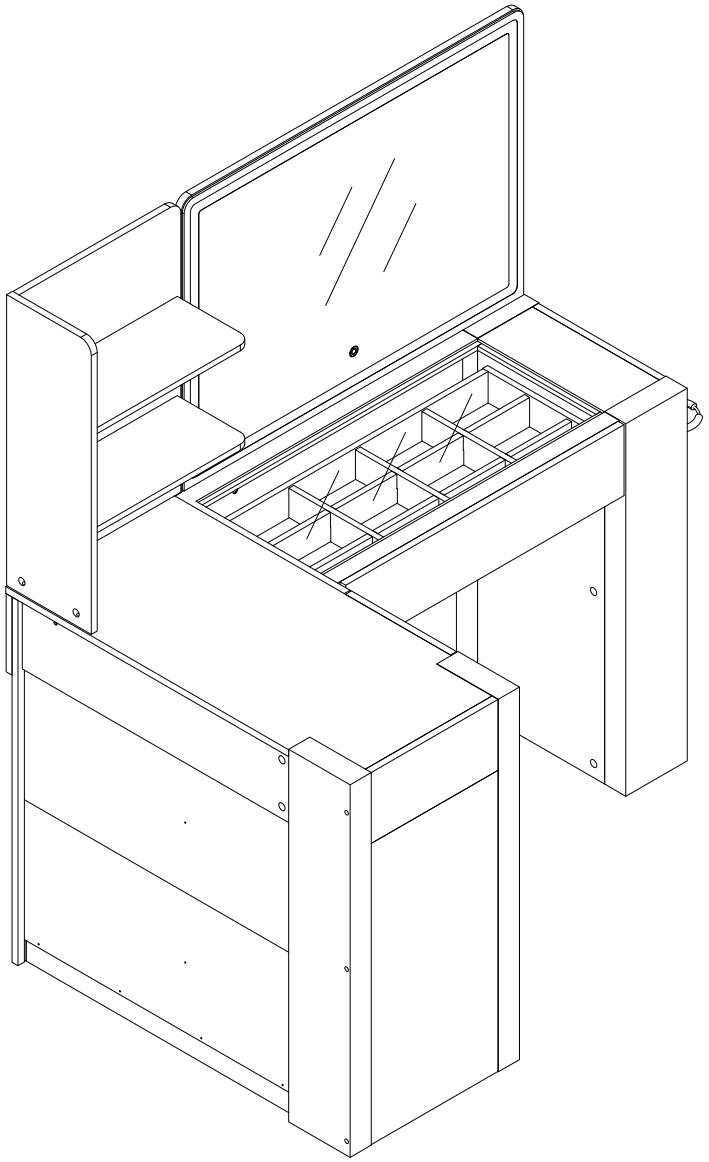

Date 2026-06-01 Rev,01


General Assembly Guidelines

I. Ensure that all parts and hardware are available before beginning assembly.


II. Follow each step carefully to ensure the proper assembly of this product.

III. Two people are recommended for ease in the assembly of this product.

VI. A Phillips head screwdriver is required for the assembly of this product .

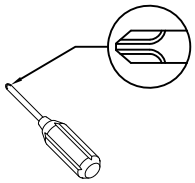

V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

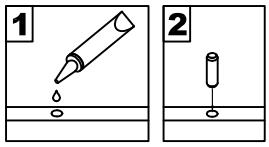

In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.




VI. HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.


2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.

3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.


4.Use the sticker to conceal the Cam.

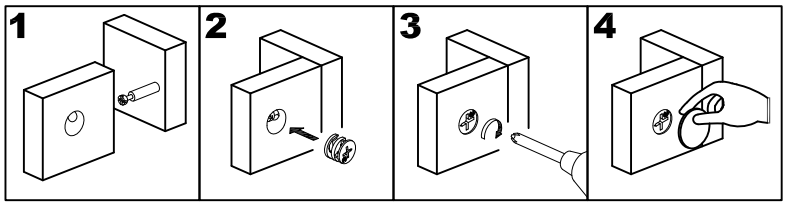







VII. Power tools should not be used to assemble this product .

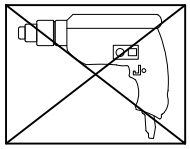


Parts List

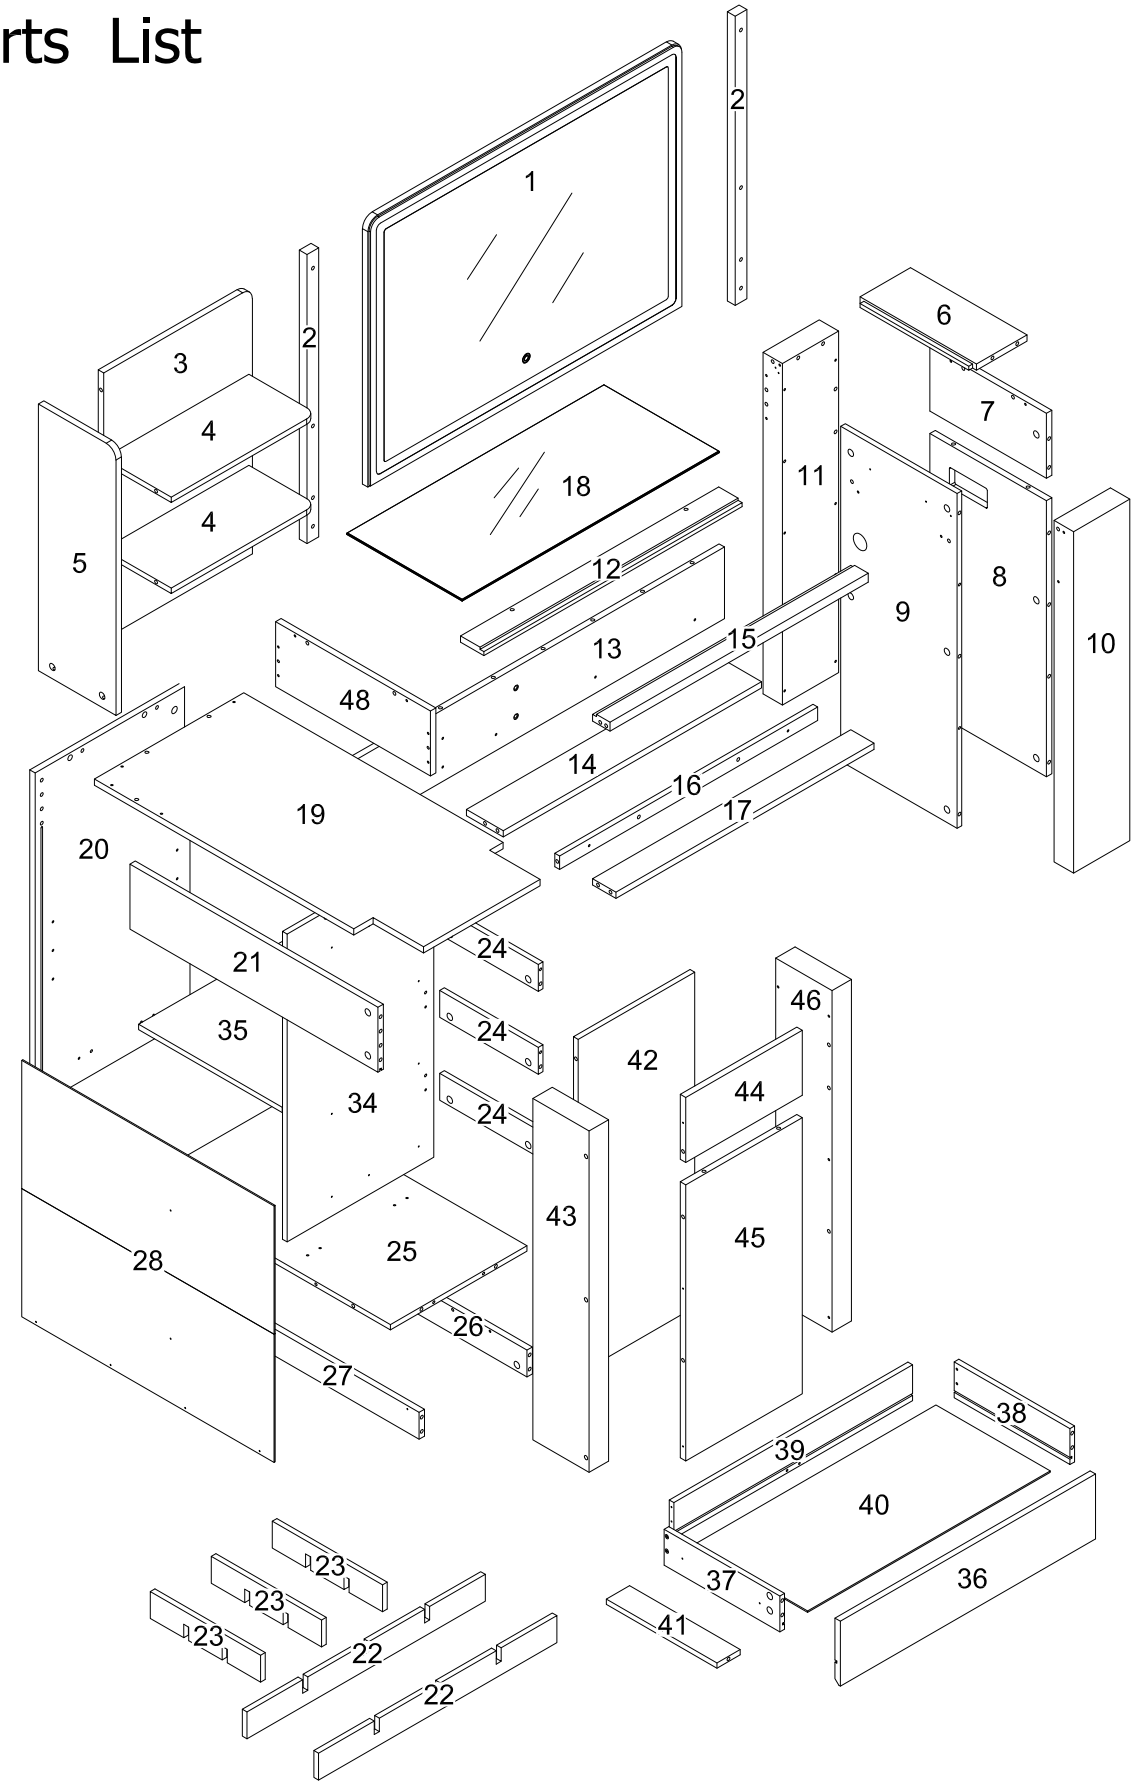
1
2
2
3
4
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
22
23
23
23
24
24
24
25
26
27
28
30
32
33
31
29
x3
30
32
33
31
47
34
35
36
37
38
39
40
41
42
43
44
45
46
48





Hardware List


A		Ø6x30mm	Dowel (small)	84	pcs
B		Ø6x35mm	Cam bolt	98	pcs
C		Ø15x9.5mm	Large Cam lock	98	pcs
D		Ø30mm	Cam cover	98	pcs
E		Ø4.2x70mm	Screw	6	pcs
F		Ø4x32	Screw	22	pcs
G			Glue Tube	2	pcs
H		Ø3x17mm	Flat-head Screw	6	pcs
I			Plastic Wedge	6	pcs
J		Ø3.5x12mm	Screw	68	pcs
K		12"	Left Glide Track	4	pcs
L		12"	Right Glide Track	4	pc
M		12"	Left Glide Runner	4	pcs
N		12"	Right Glide Runner	4	pcs
O		Ø3x12mm	Screw	18	pcs
P		12"	Drawer slider	1	set
Q		1/4"x30mm	Bolt	10	pcs

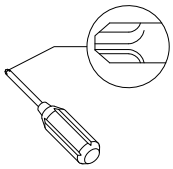

Philips head screwdriver required for assembly
(not included)


Hardware List

R		Ø8x20mm	Dowel (Short)	2	pcs
S		M 4	Allen wrench	1	pc
T			Metal Plate	5	pcs
U			L-shaped bracket	4	pcs
V			Power Plug	1	pc
W			USB Interface	1	pc
X		Ø4x12mm	Screw	4	pcs
Y			Tipping Restraint Hardware	2	sets
Z			Power Plug	1	pc
AA		Ø4x25	Screw	4	pcs
BB		Ø5x17mm	Shelf Fixing	4	pcs
CC		Ø5x48mm	Bolt	10	pcs
DD				6	pcs
EE		Ø1/4" x 12mm	Bolt	12	pcs

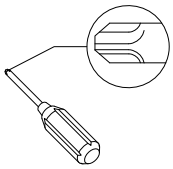


Philips head screwdriver required for assembly
(not included)


Step 1

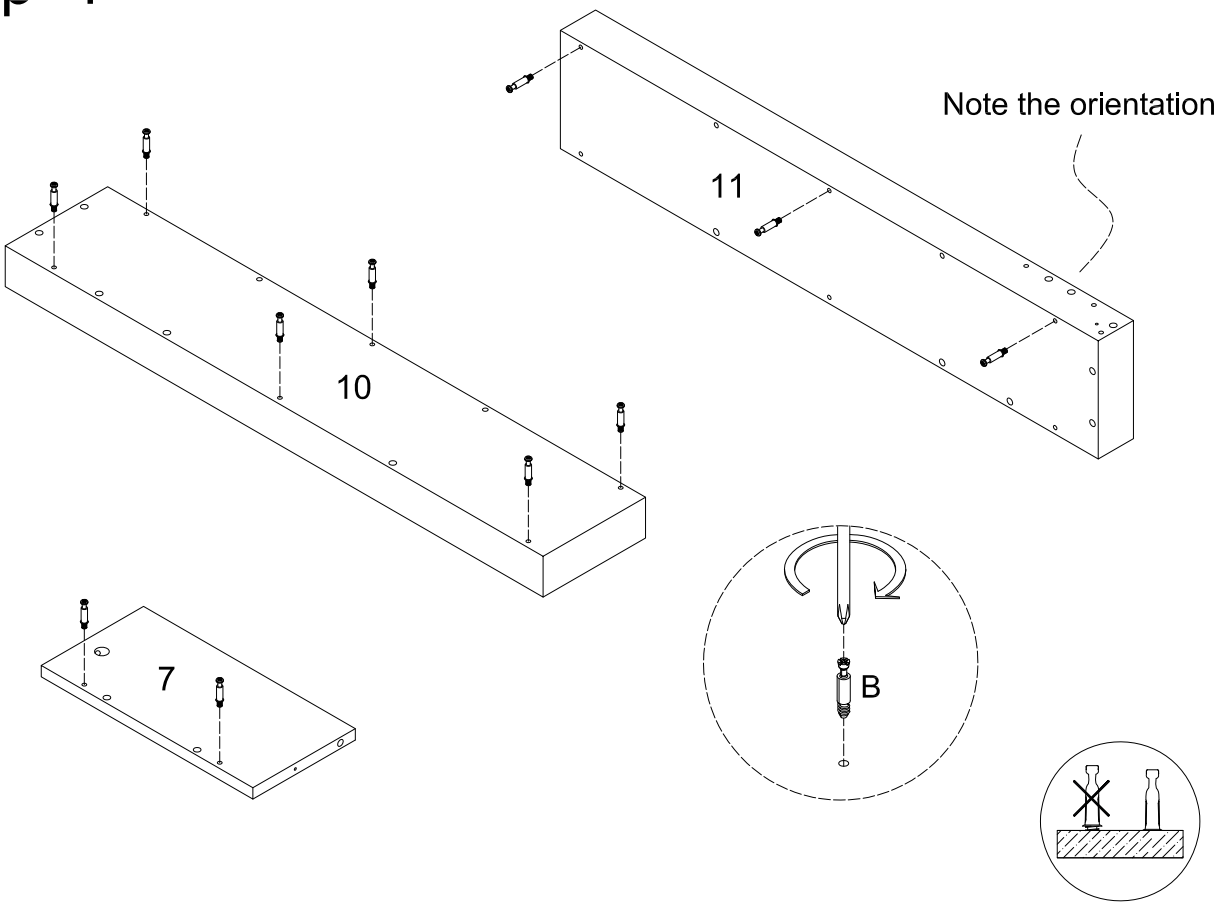



Step 2

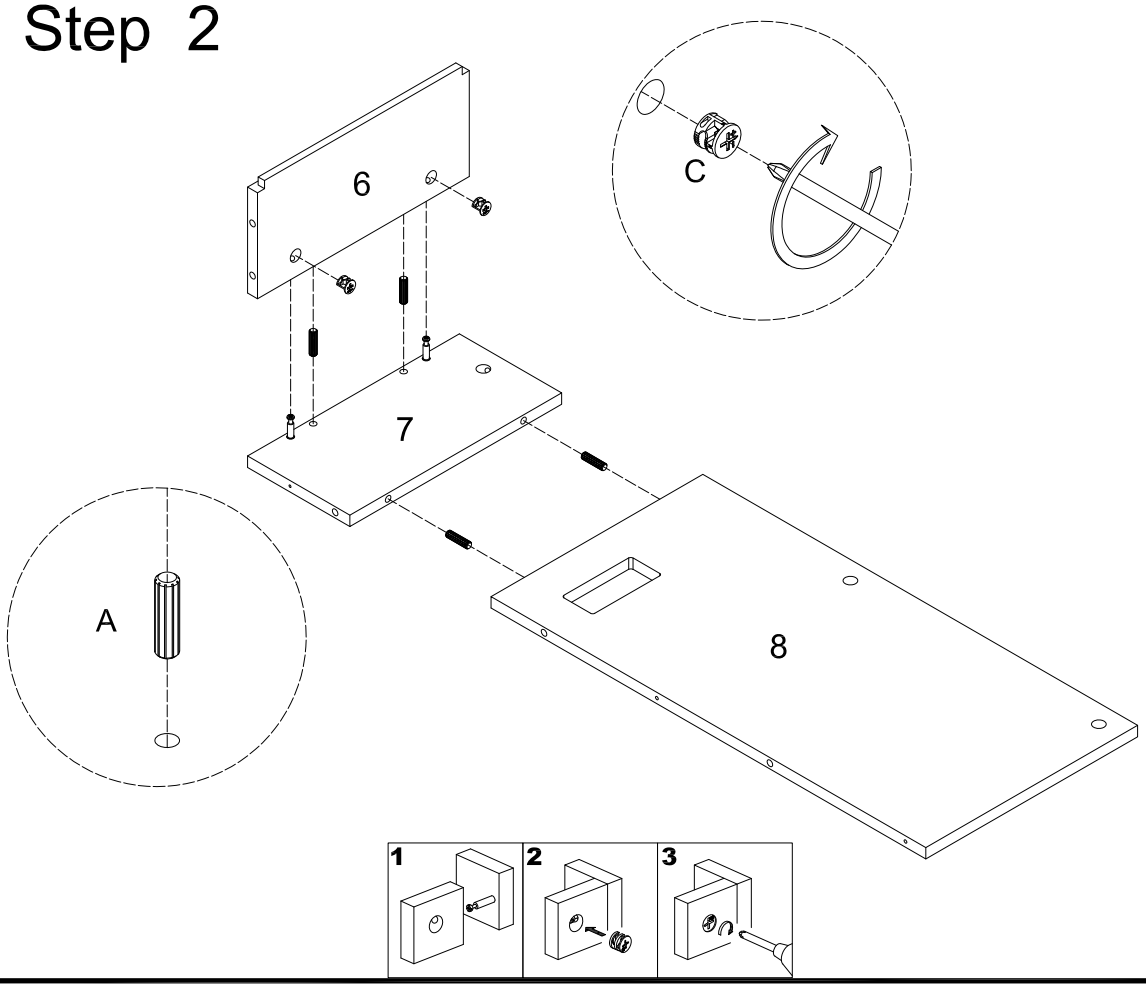


Step 3

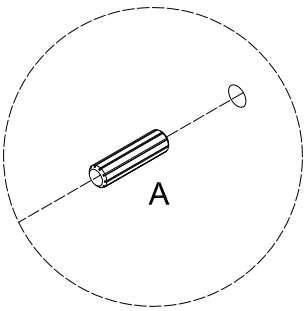


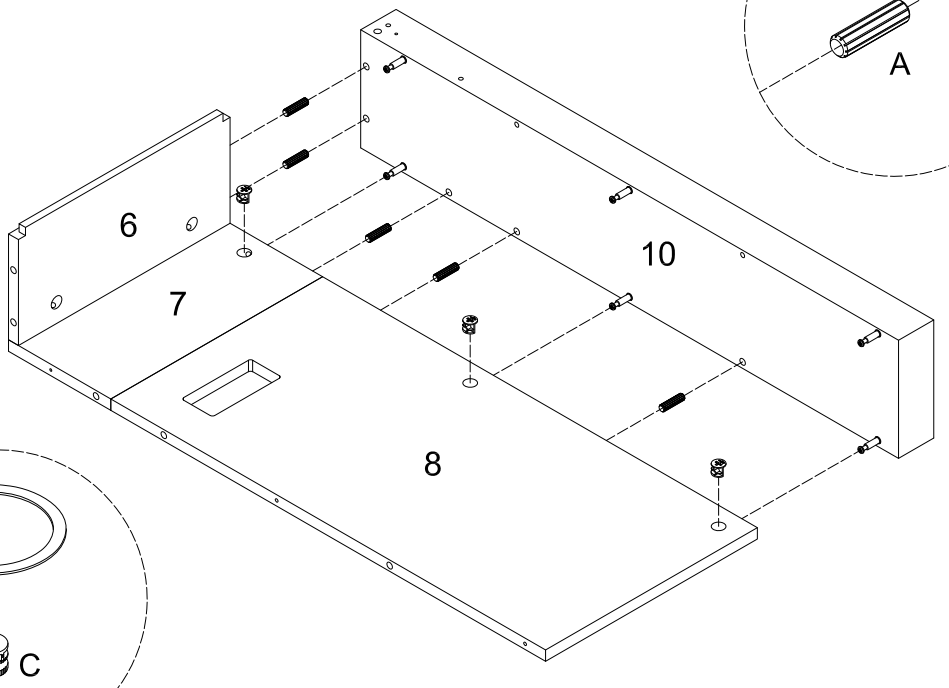


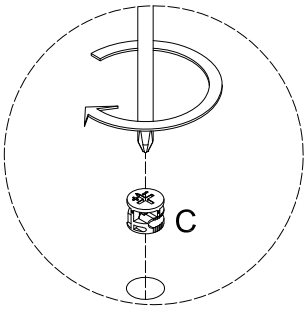


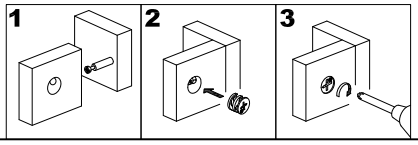


Step 4

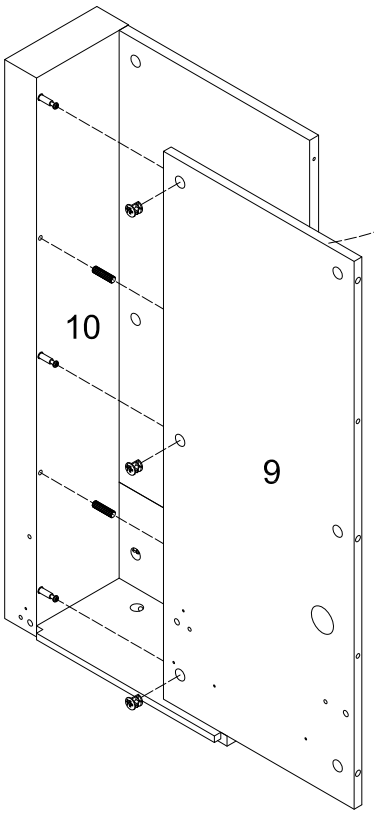


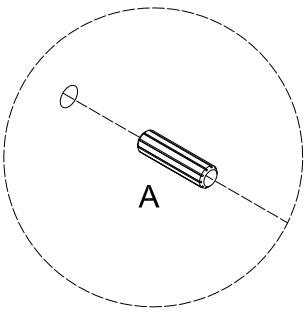


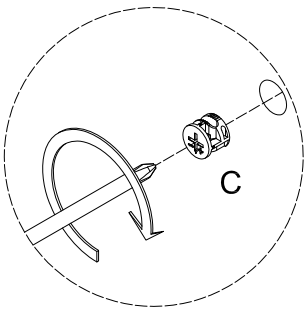


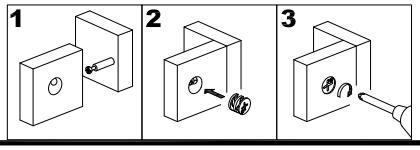



Step 5

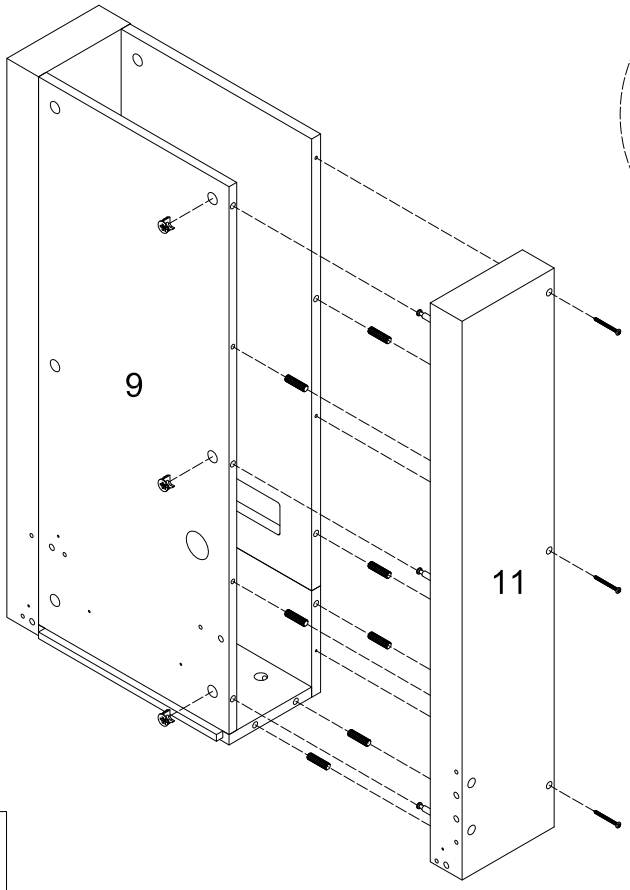

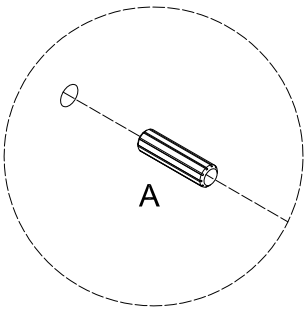


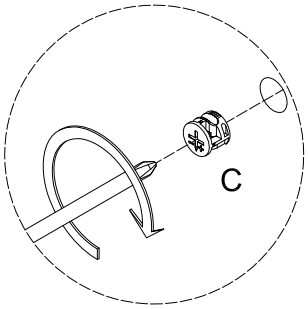

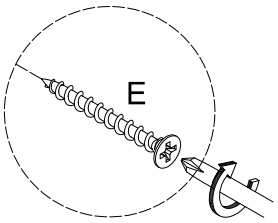


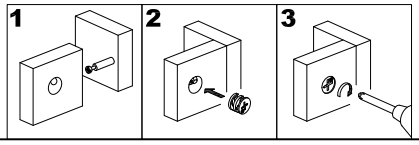


Step 6

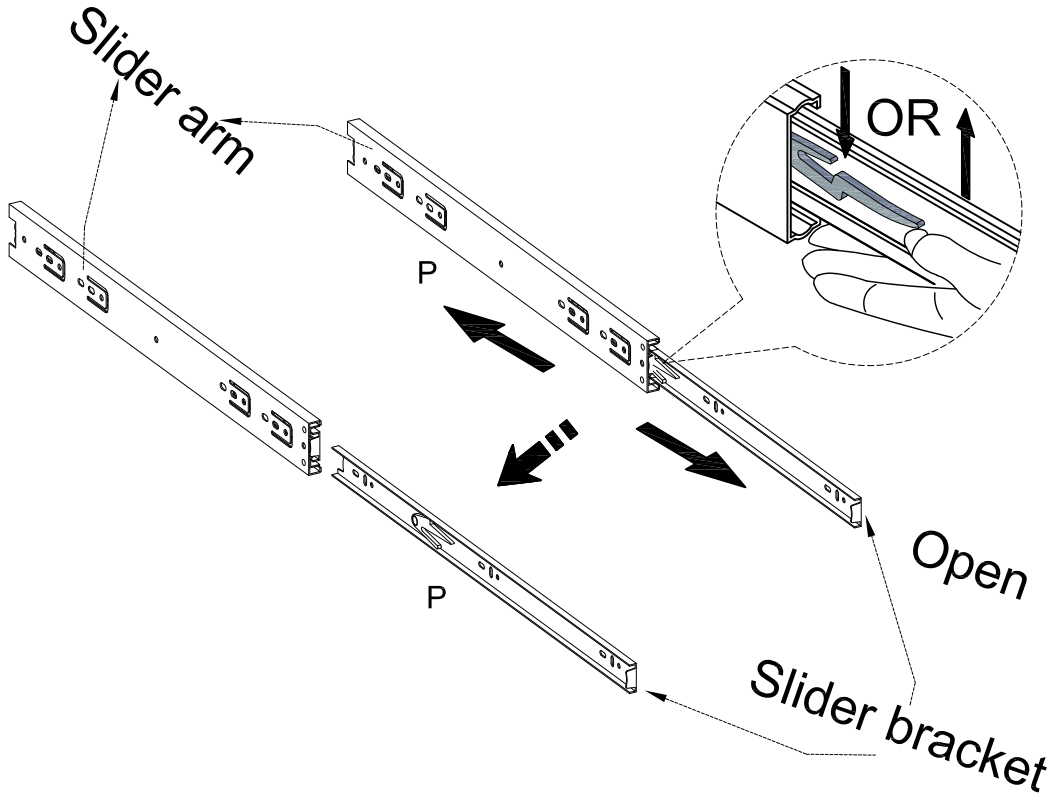


Step 7

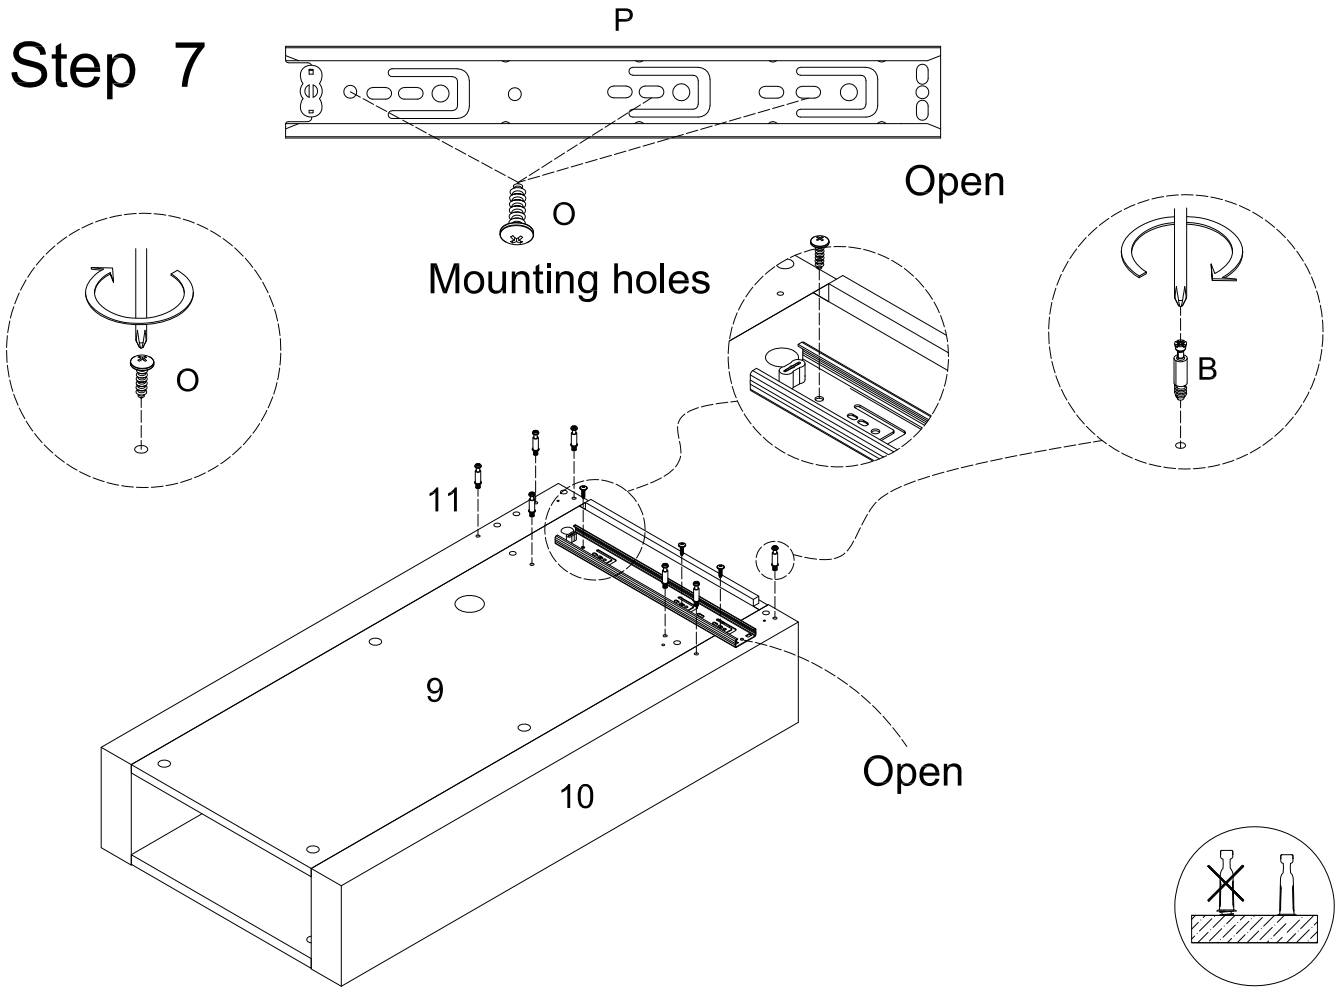


Step 8

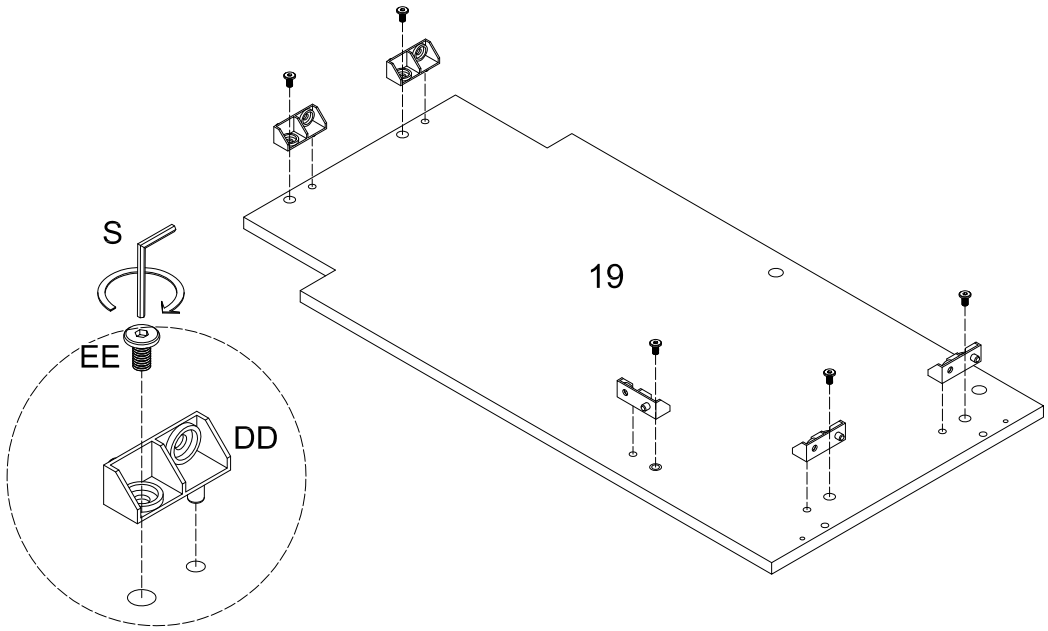


Step 9

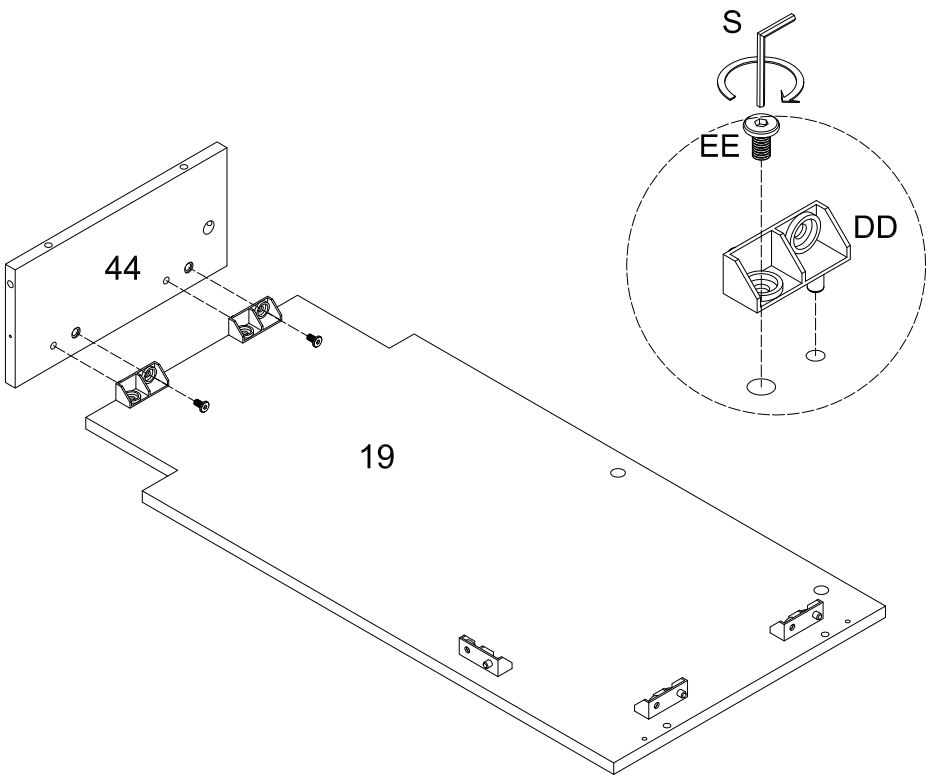


Step 10

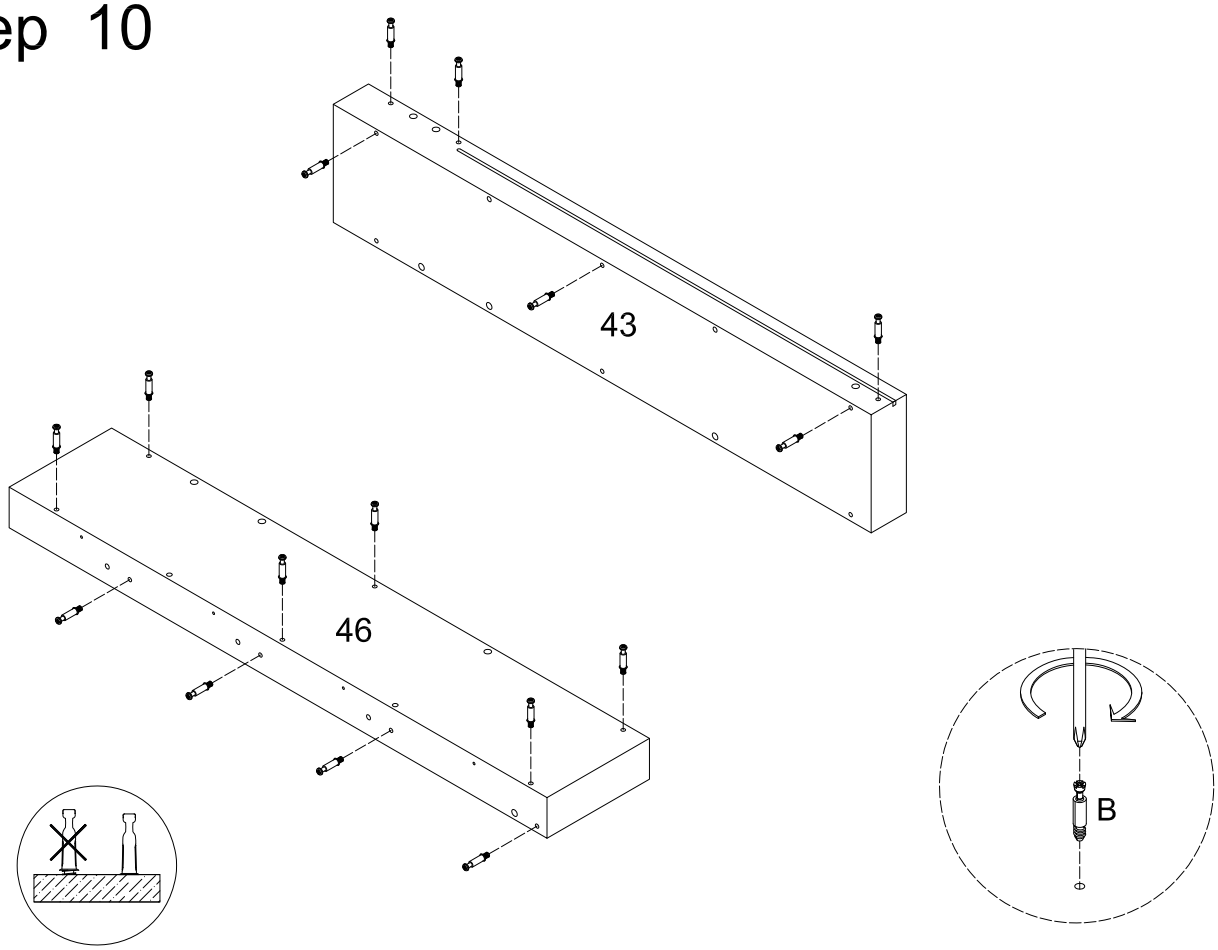


Step 11

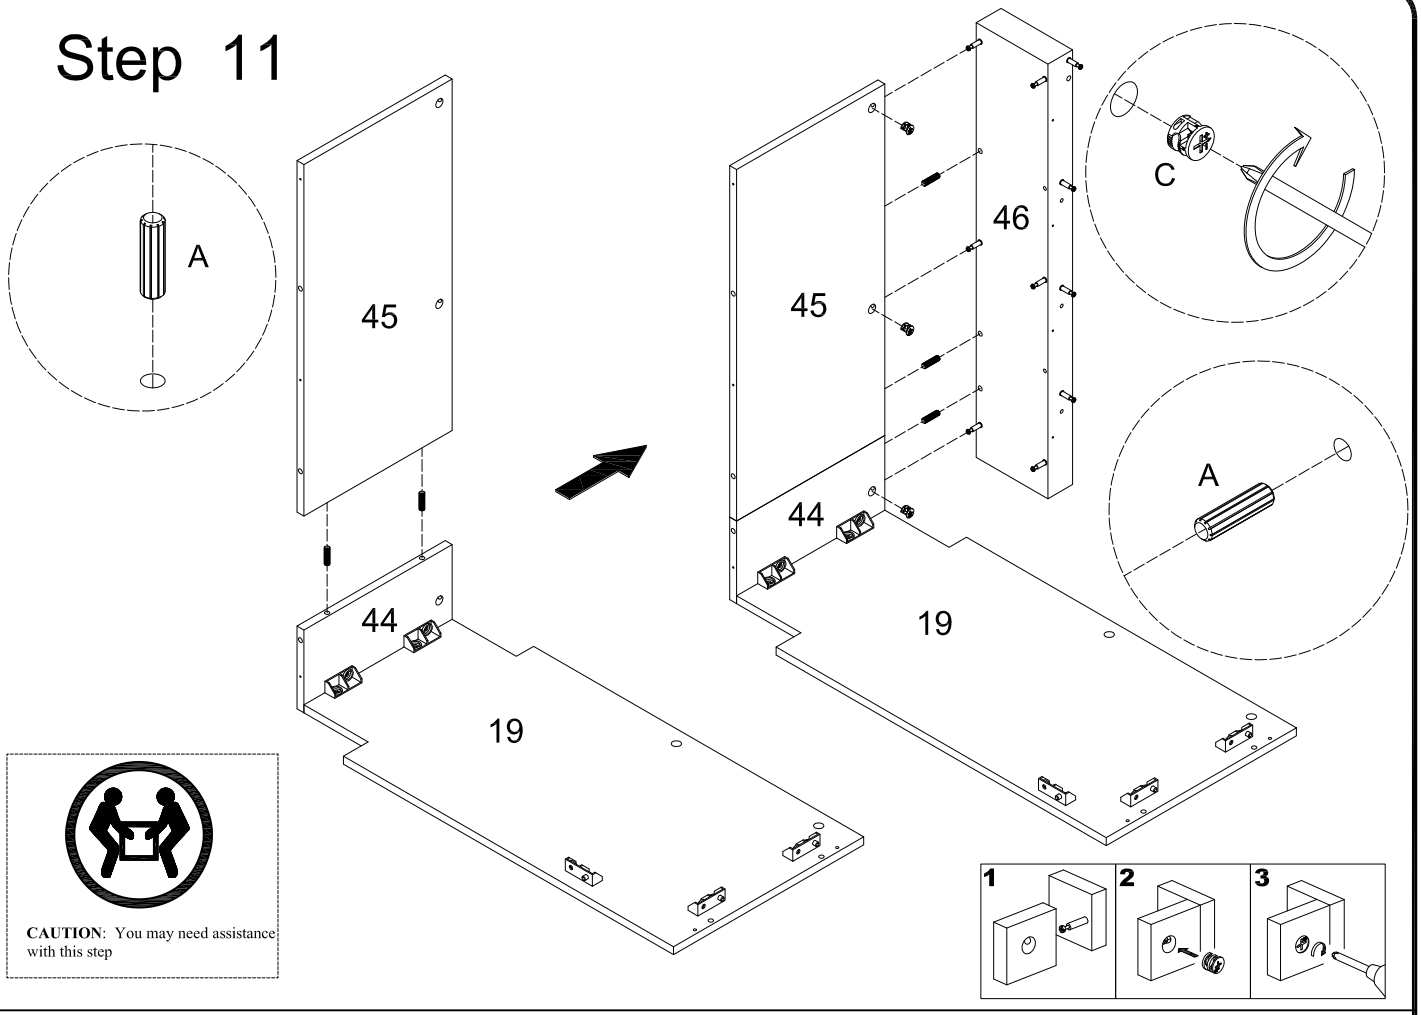


Step 12

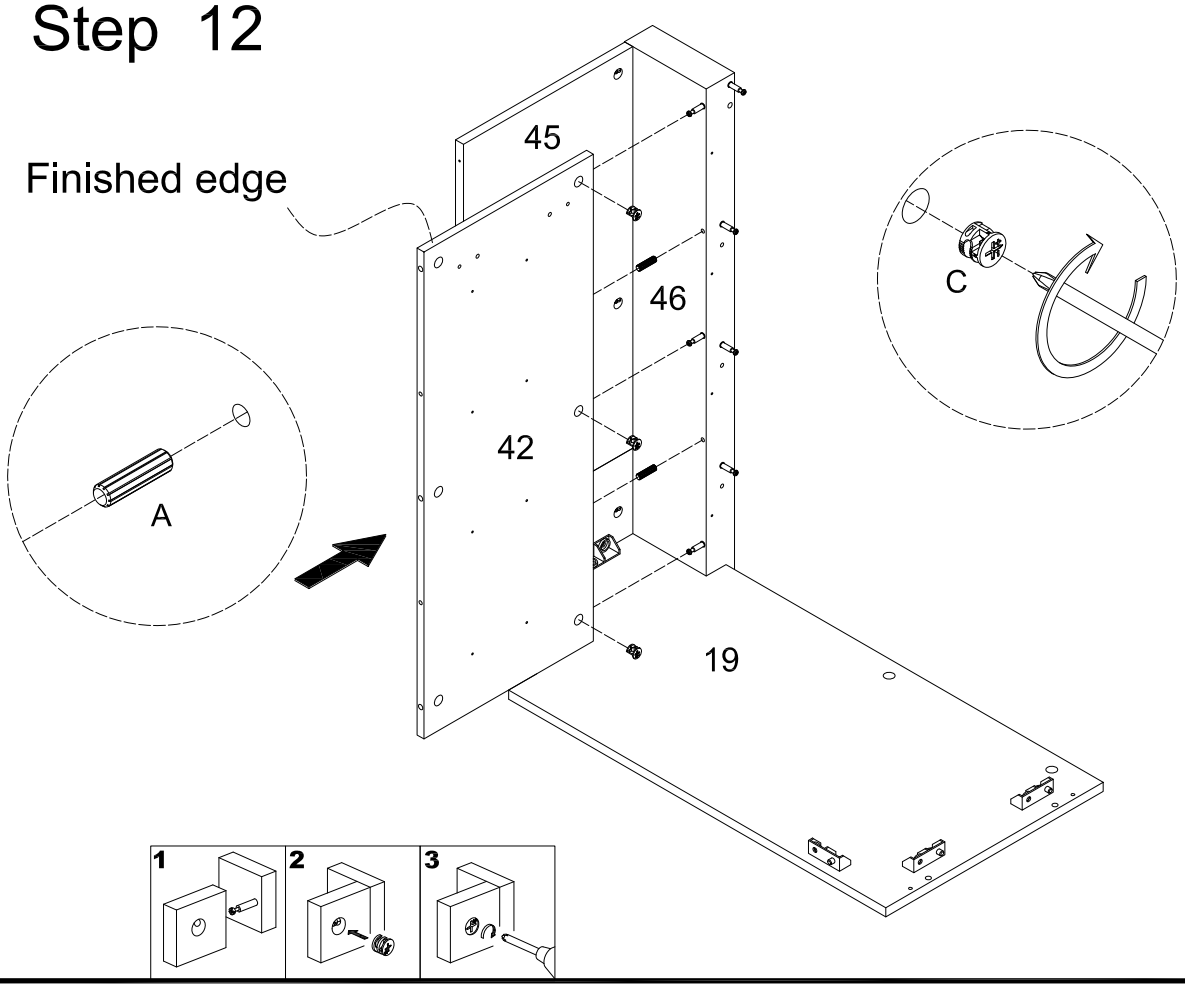


Step 13

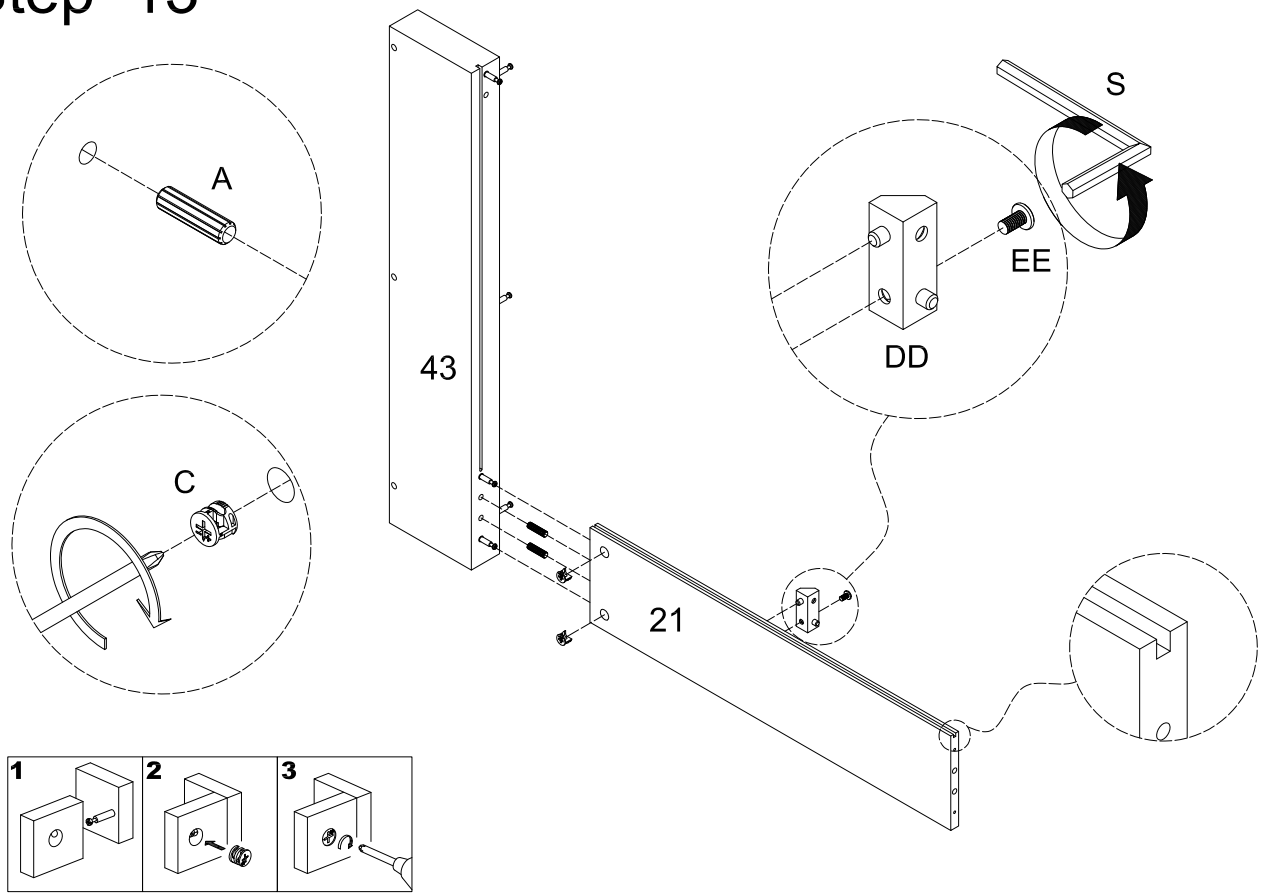


Step 14

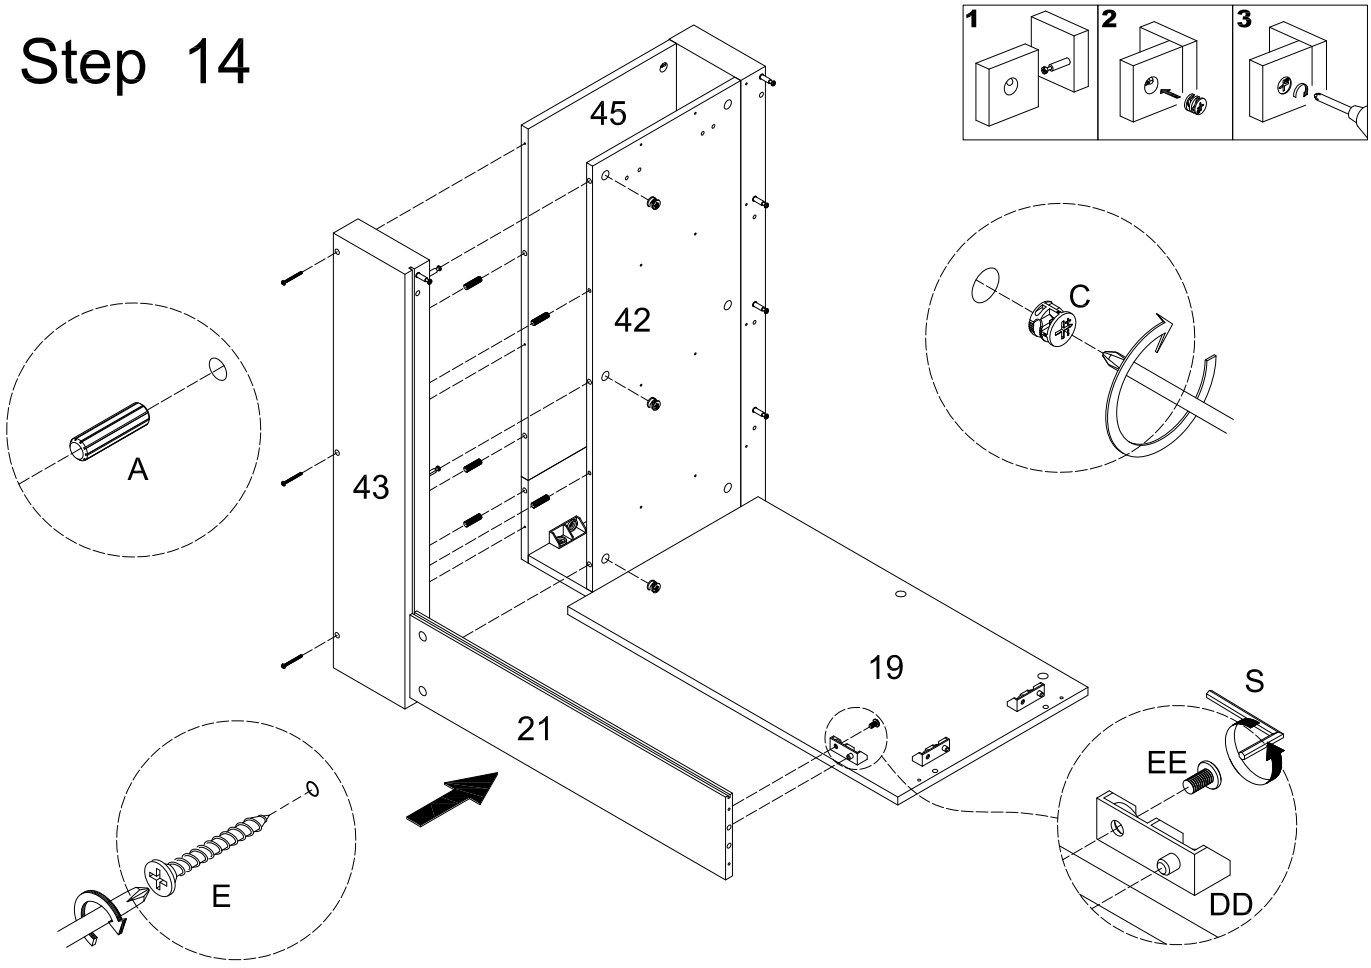


Step 15

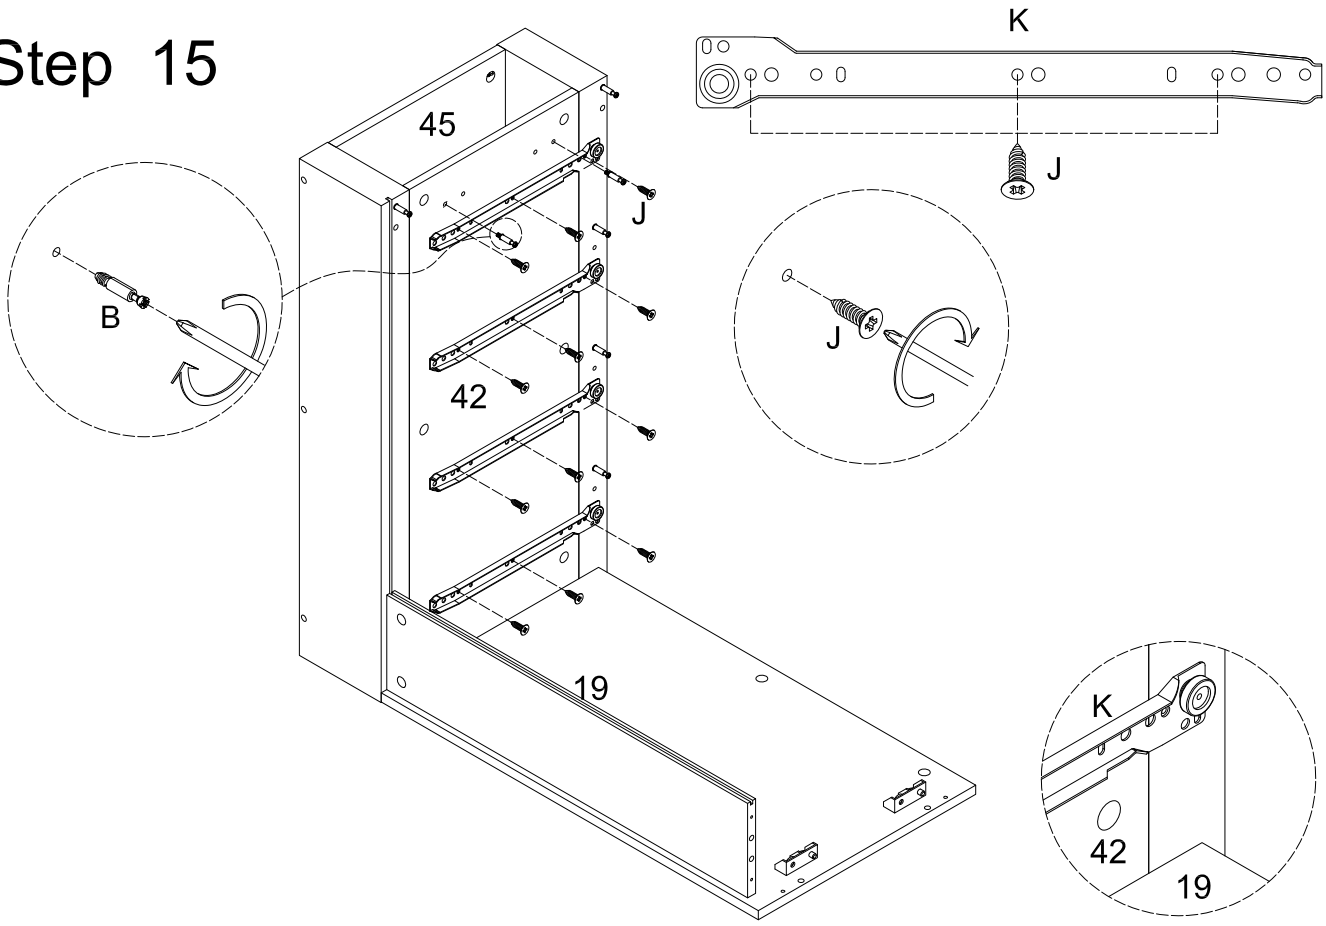


Step 16

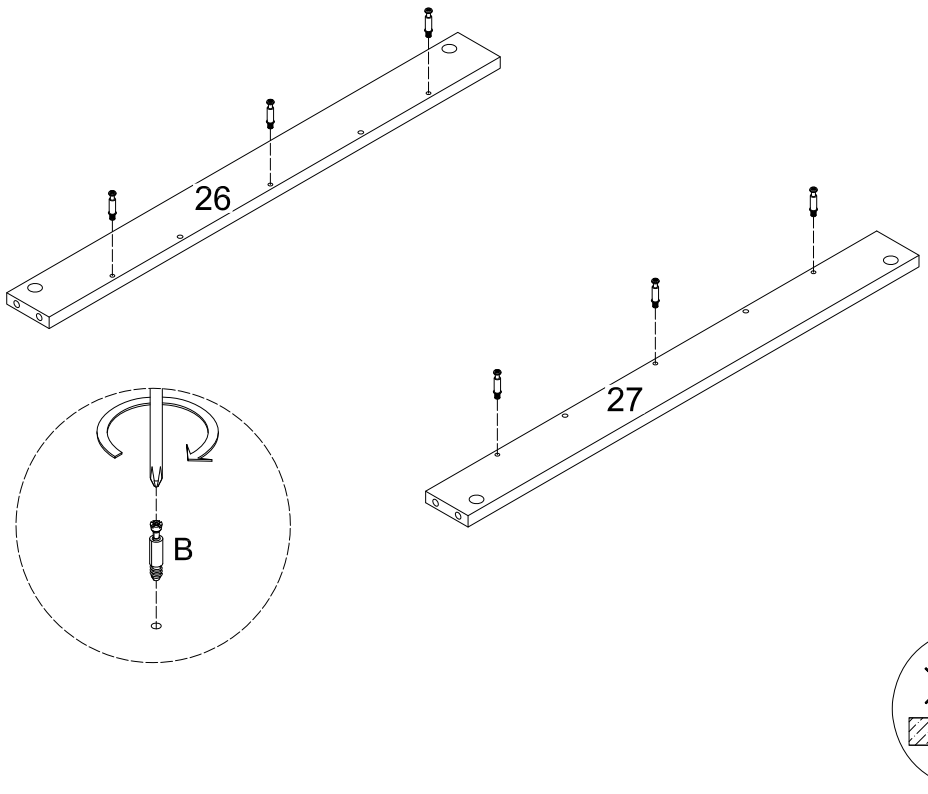


Step 17

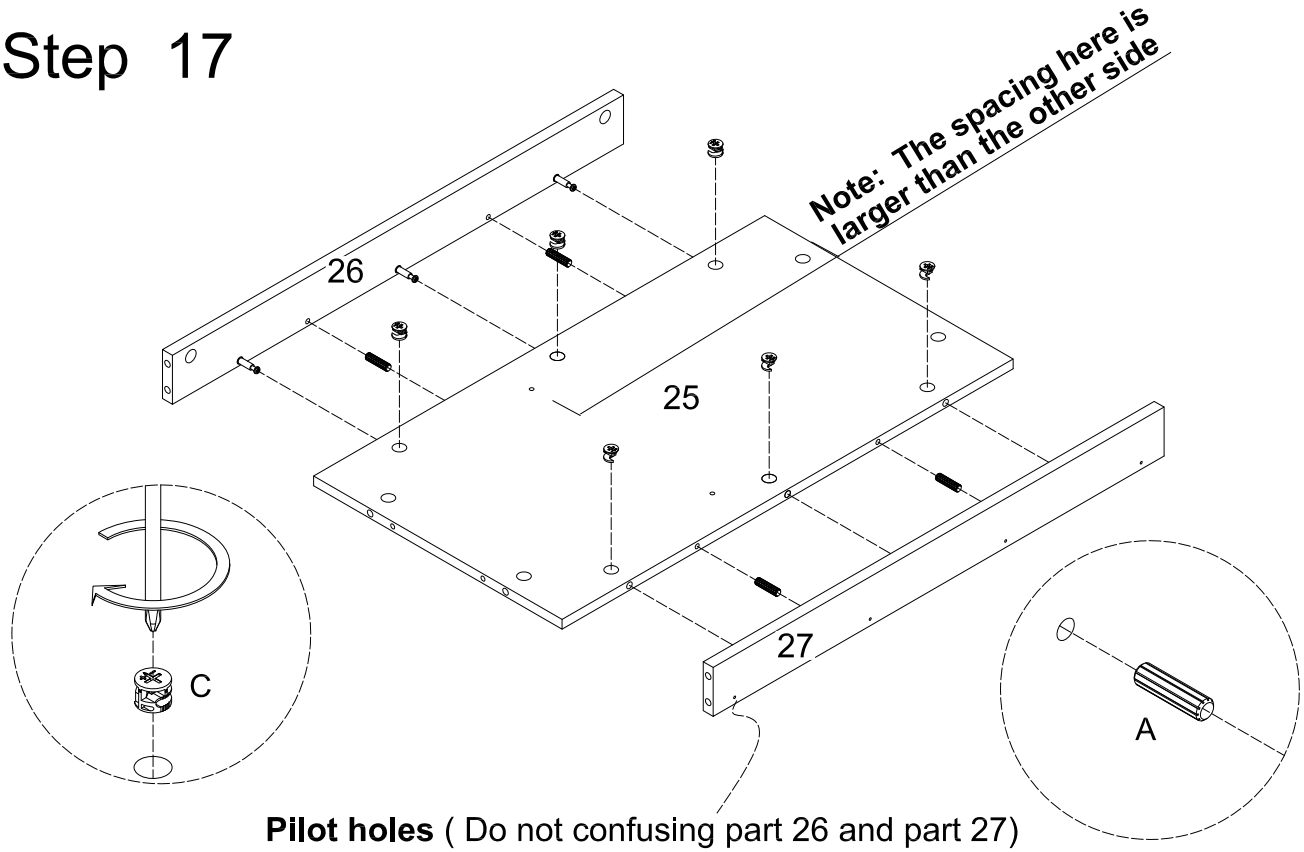


Pilot holes (Do not confusing part 26 and part 27)

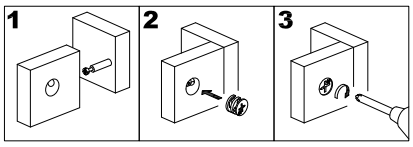


Step 18

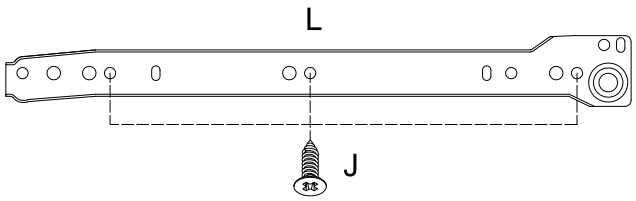


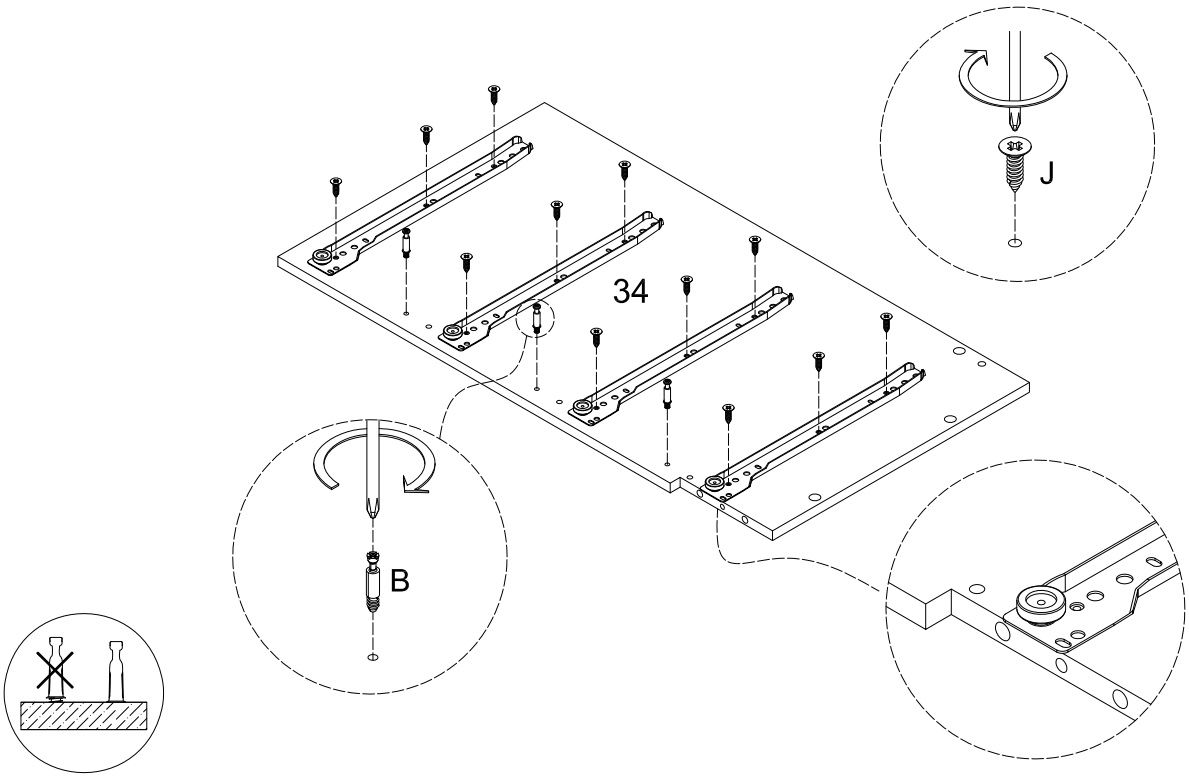


Step 19

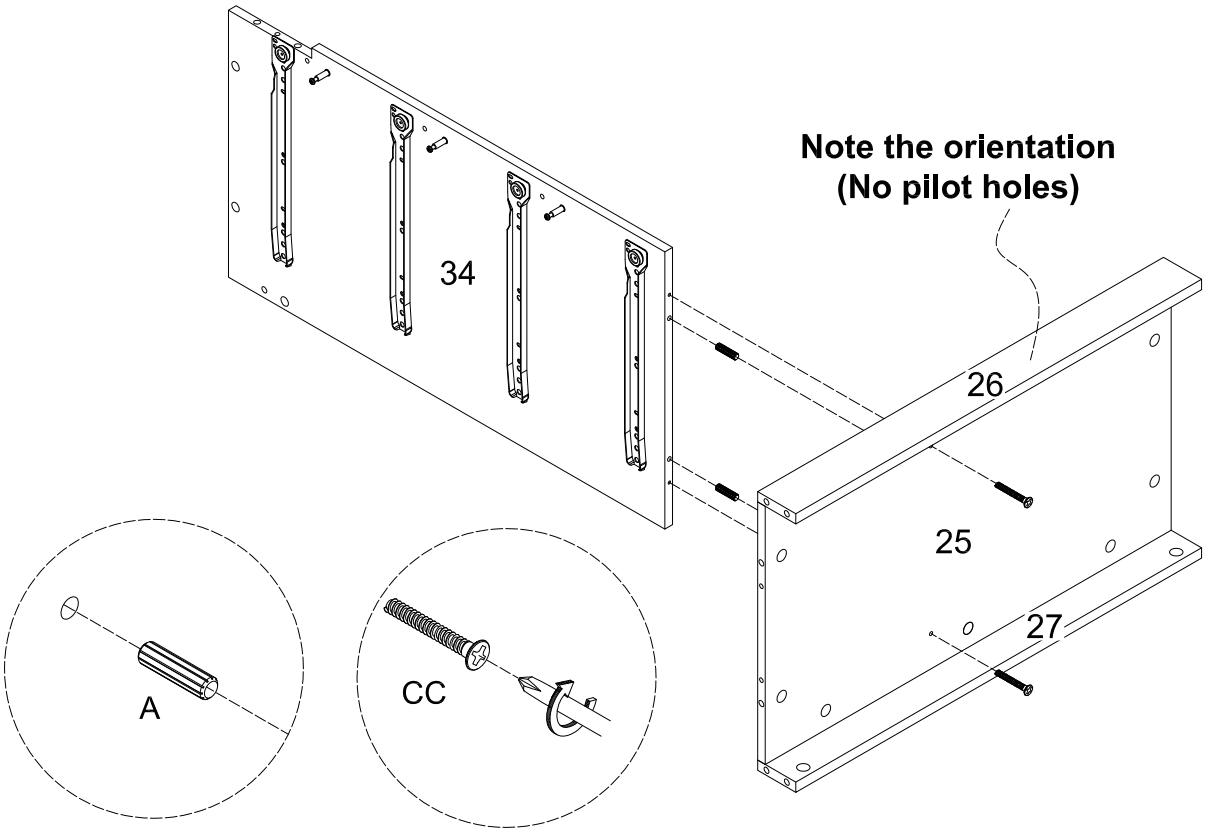



Step 20

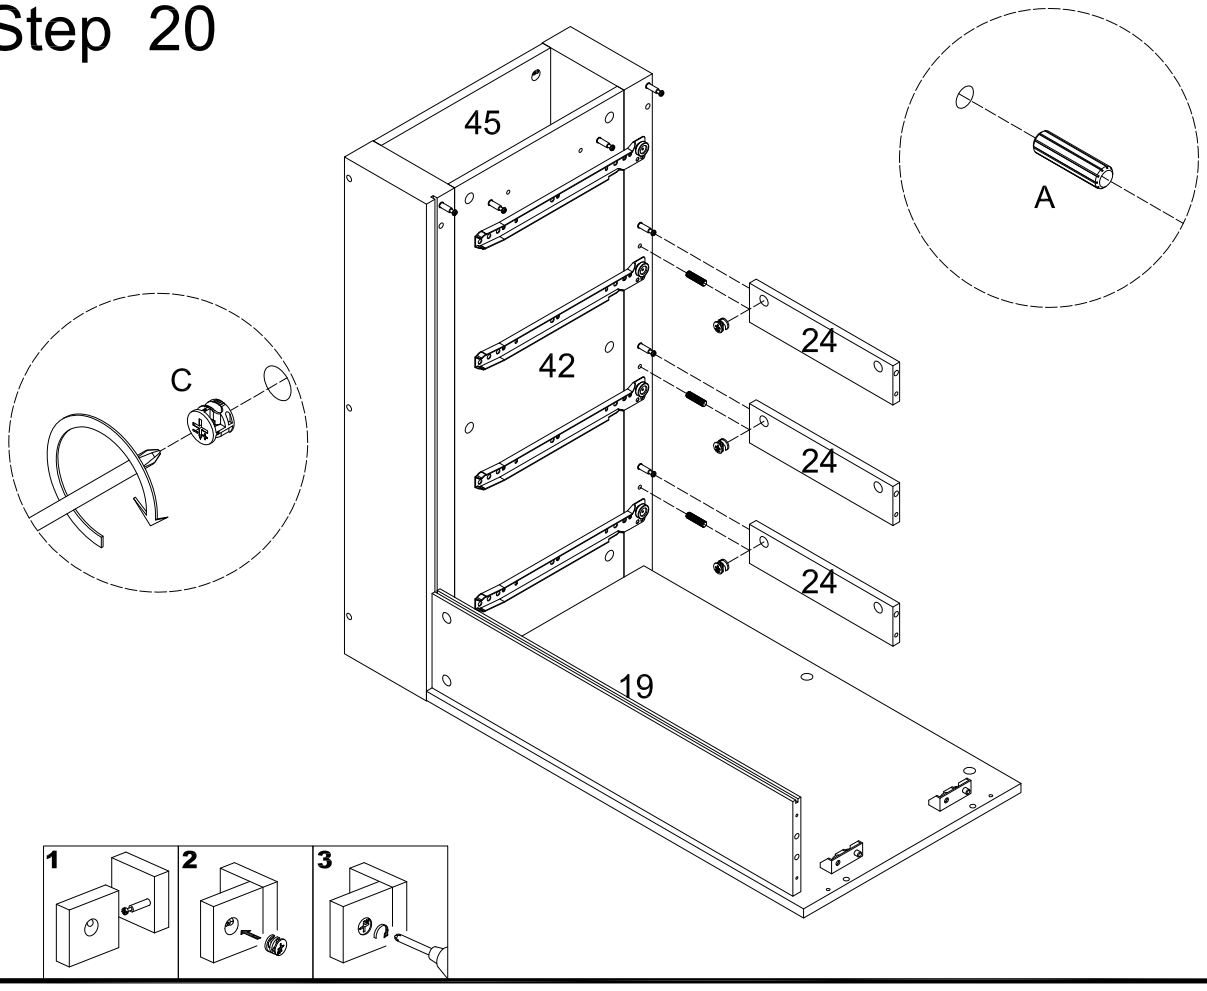


Step 21

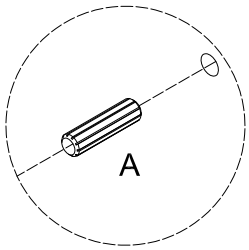


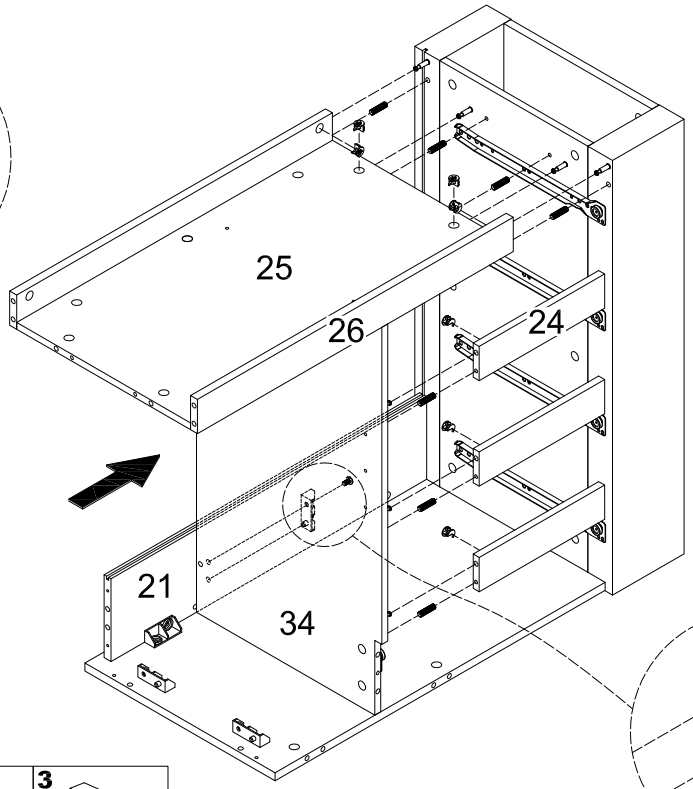

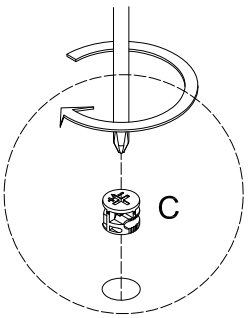





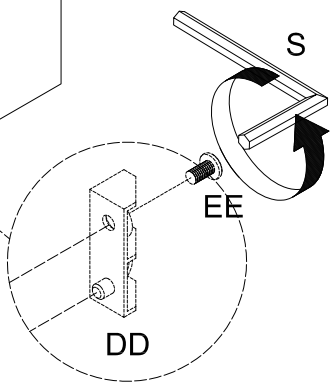


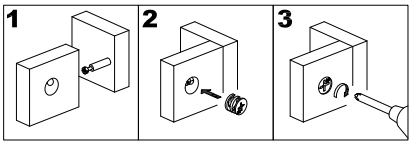


Step 22

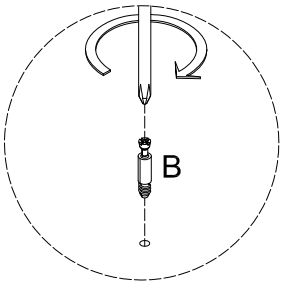

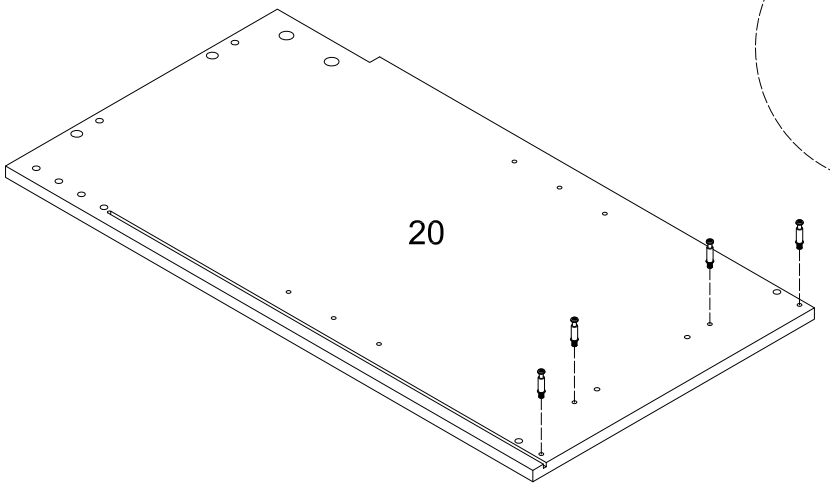

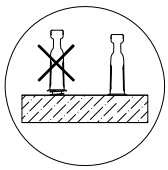


Step 23

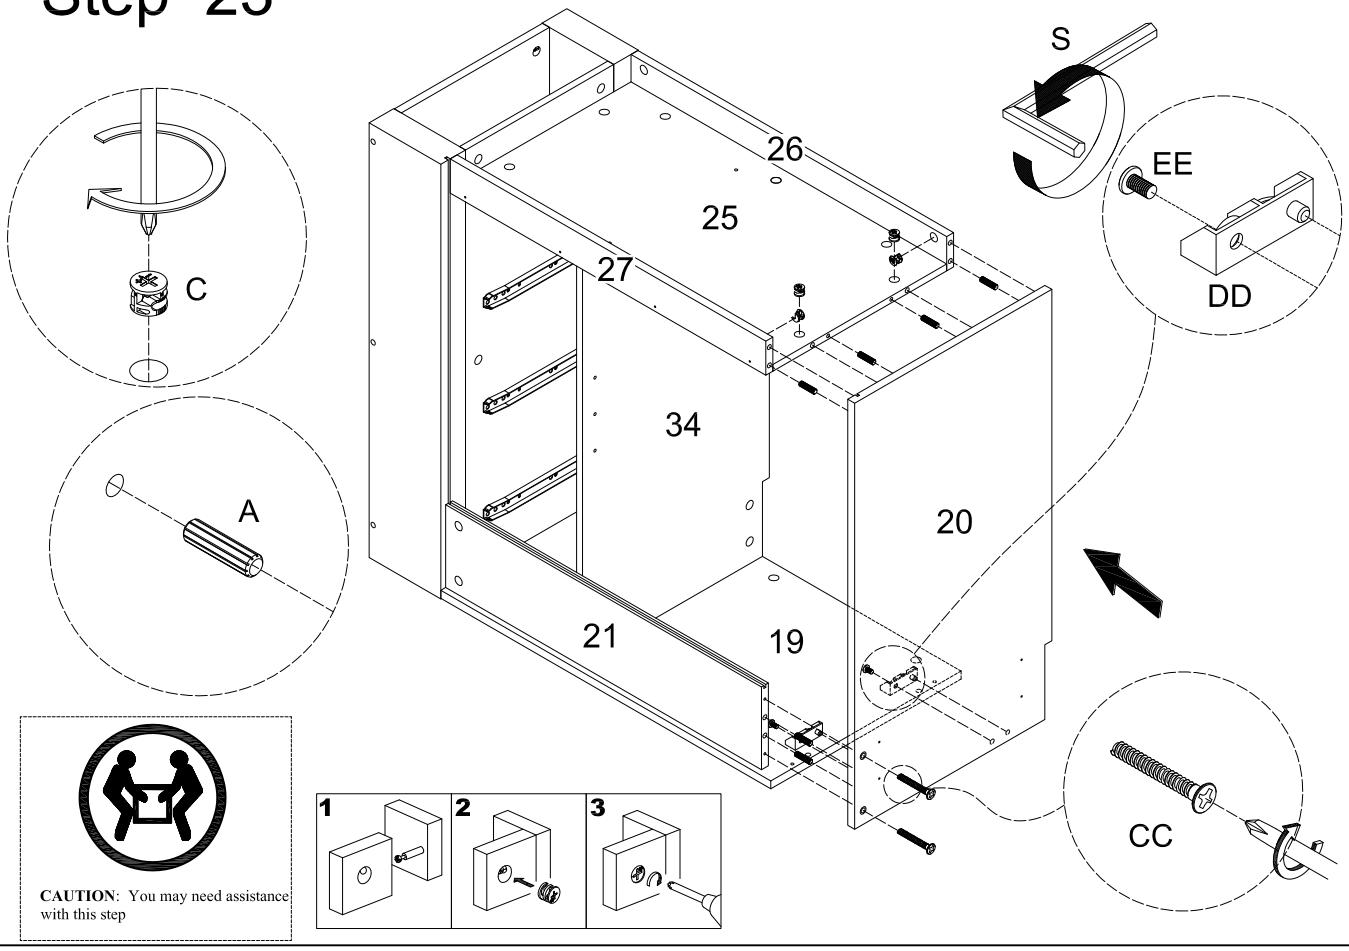



CAUTION: You may need assistance with this step


Step 24

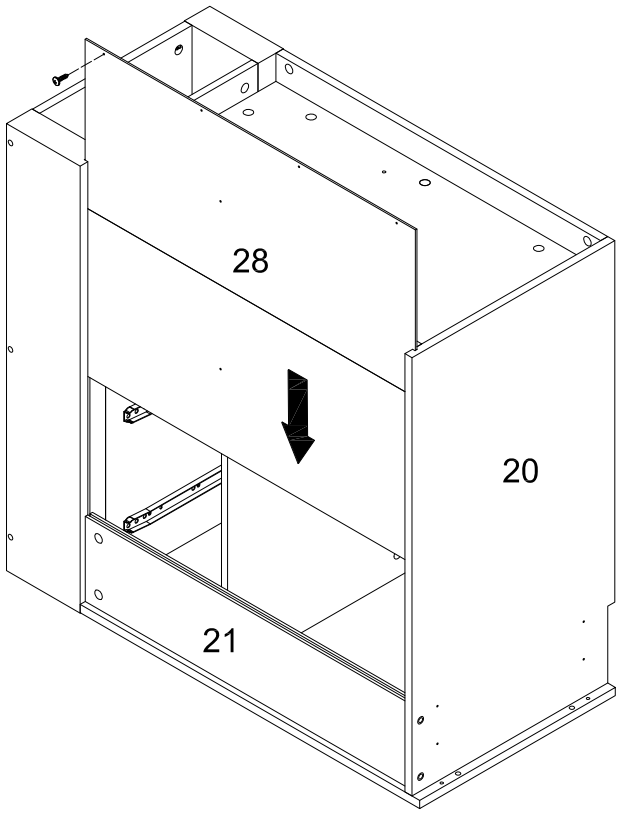


Step 25

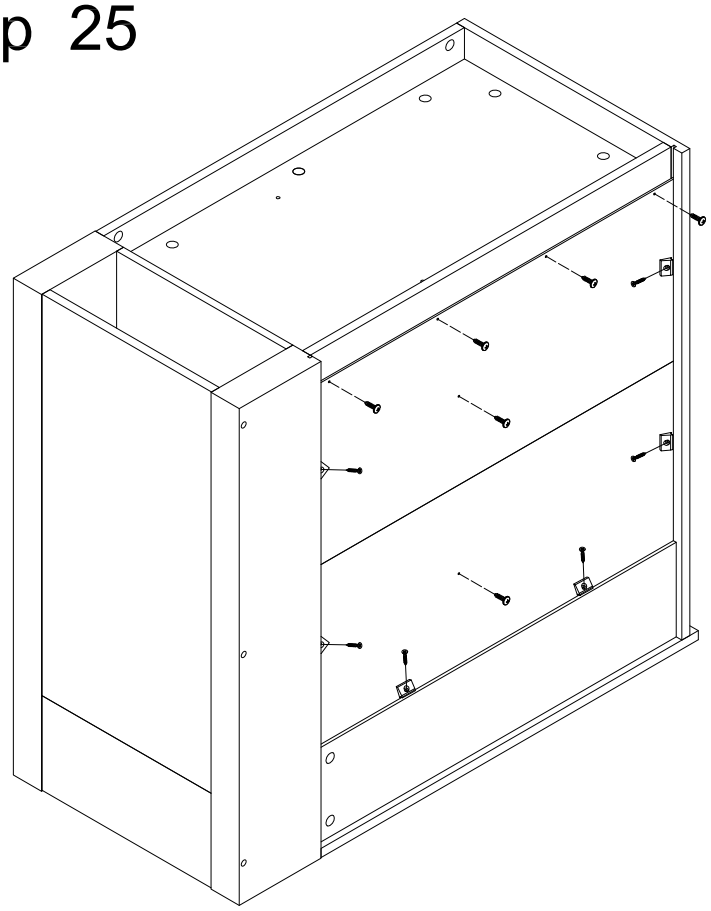

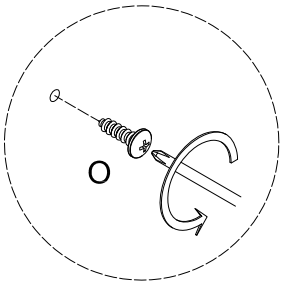

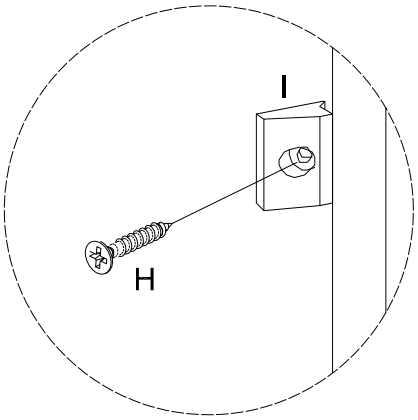



Step 26

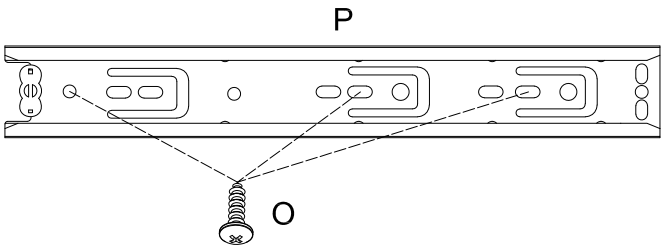



Mounting holes

Open

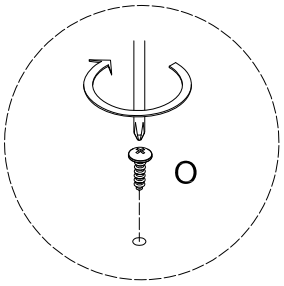

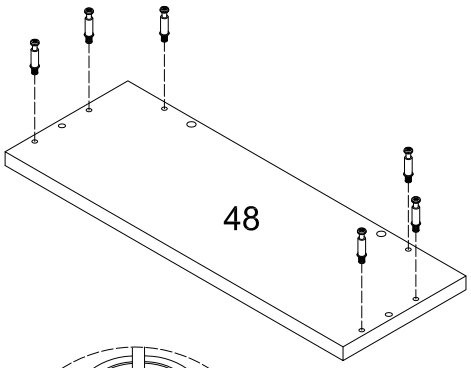


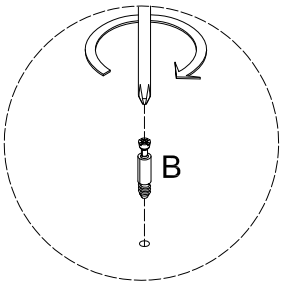

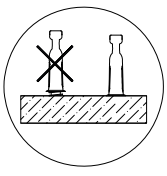


180°

flip

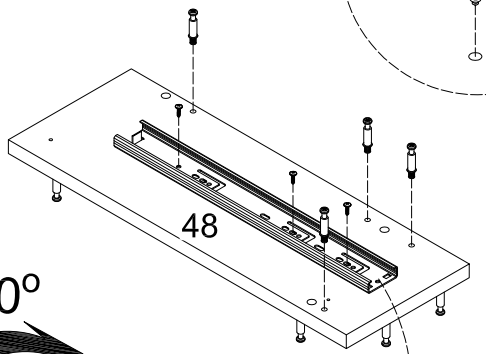


Open

Step 27

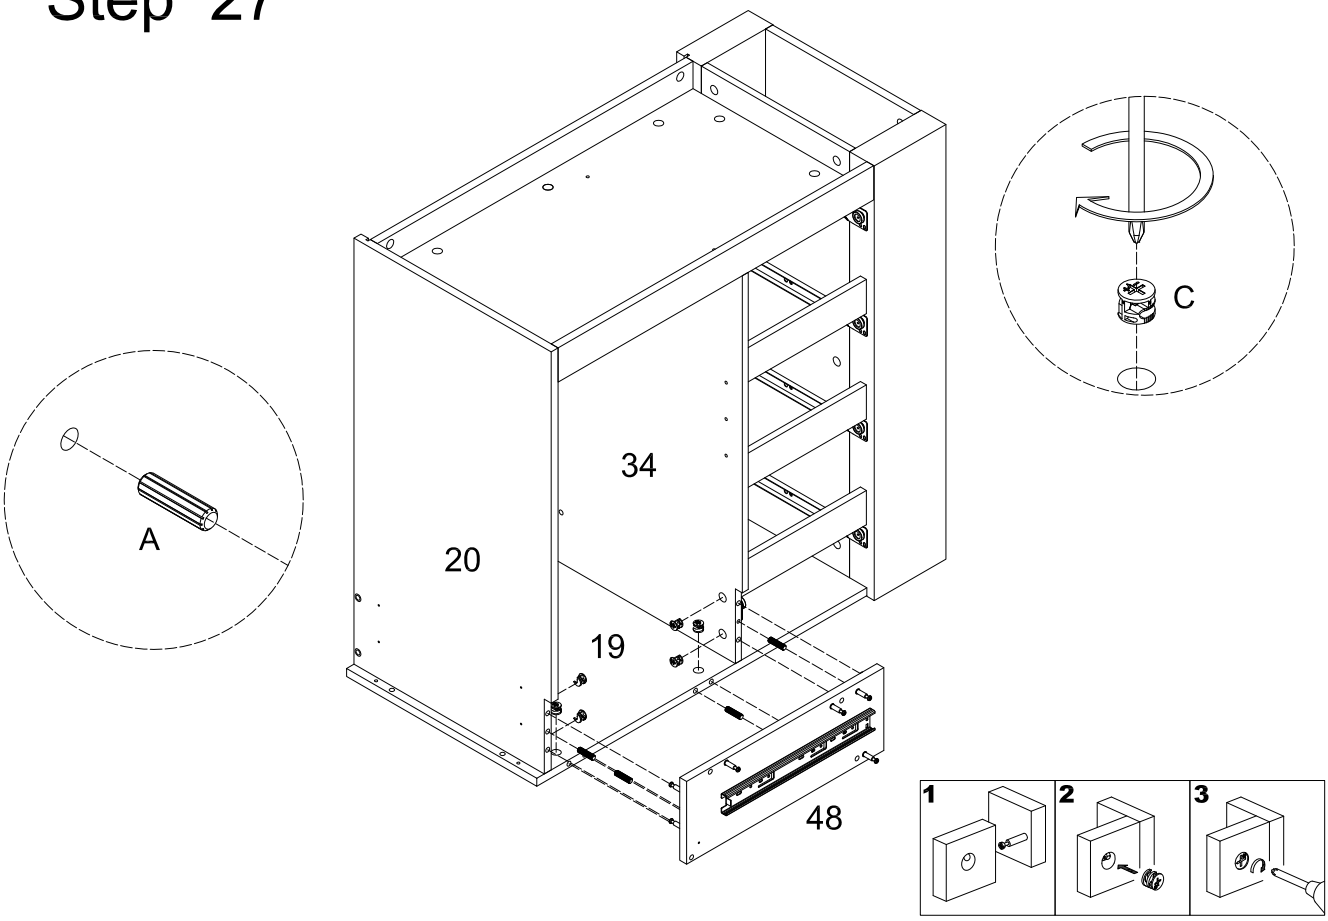


Step 28

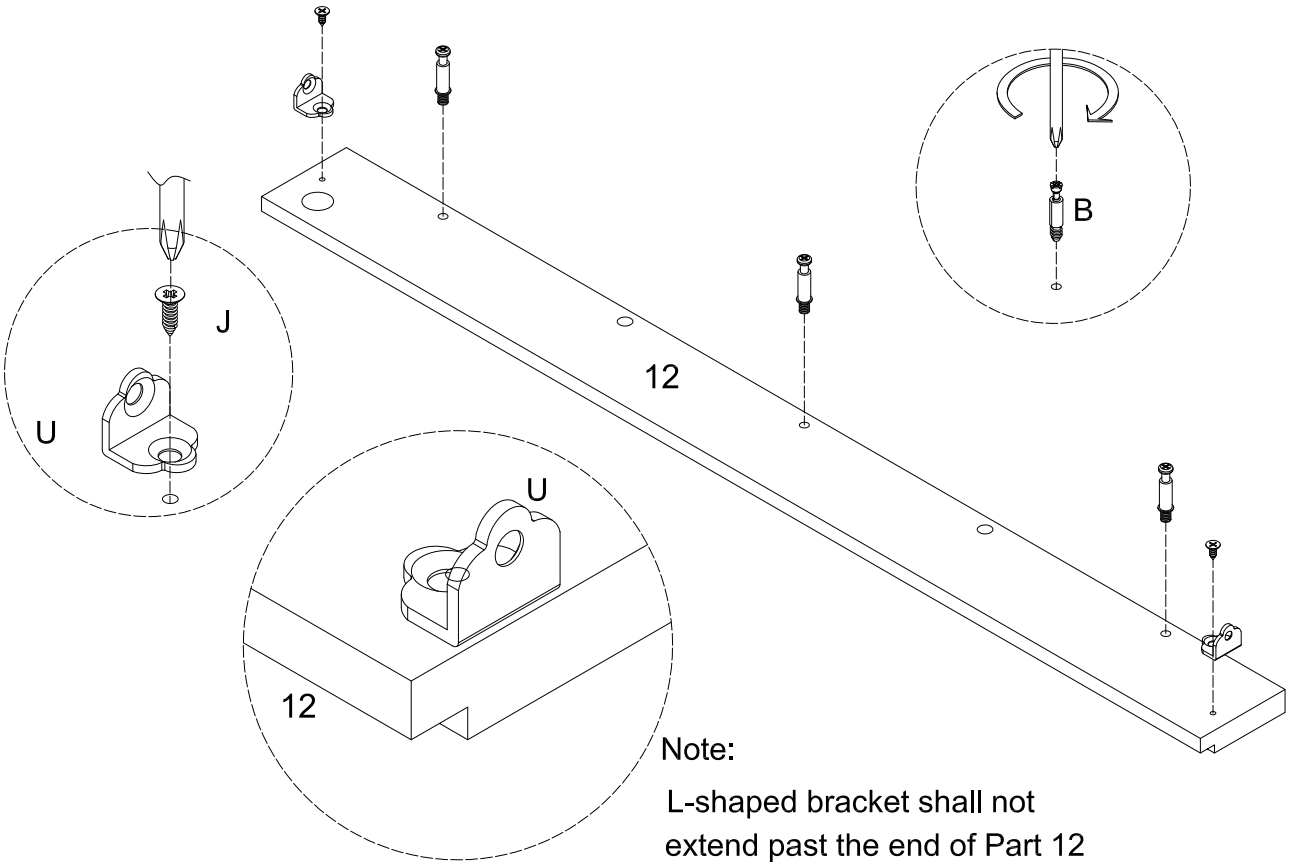


Note:

L-shaped bracket shall not extend past the end of Part 12


Step 29

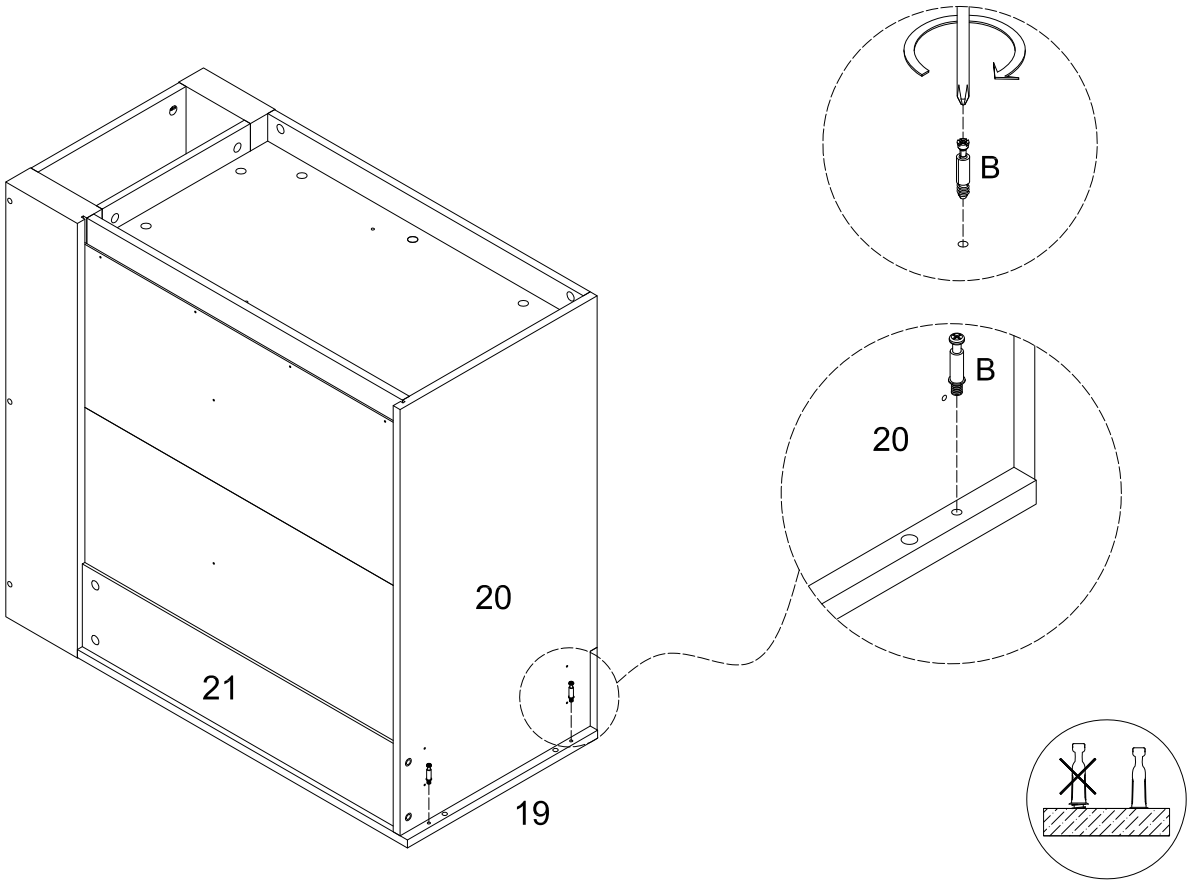

Step 30

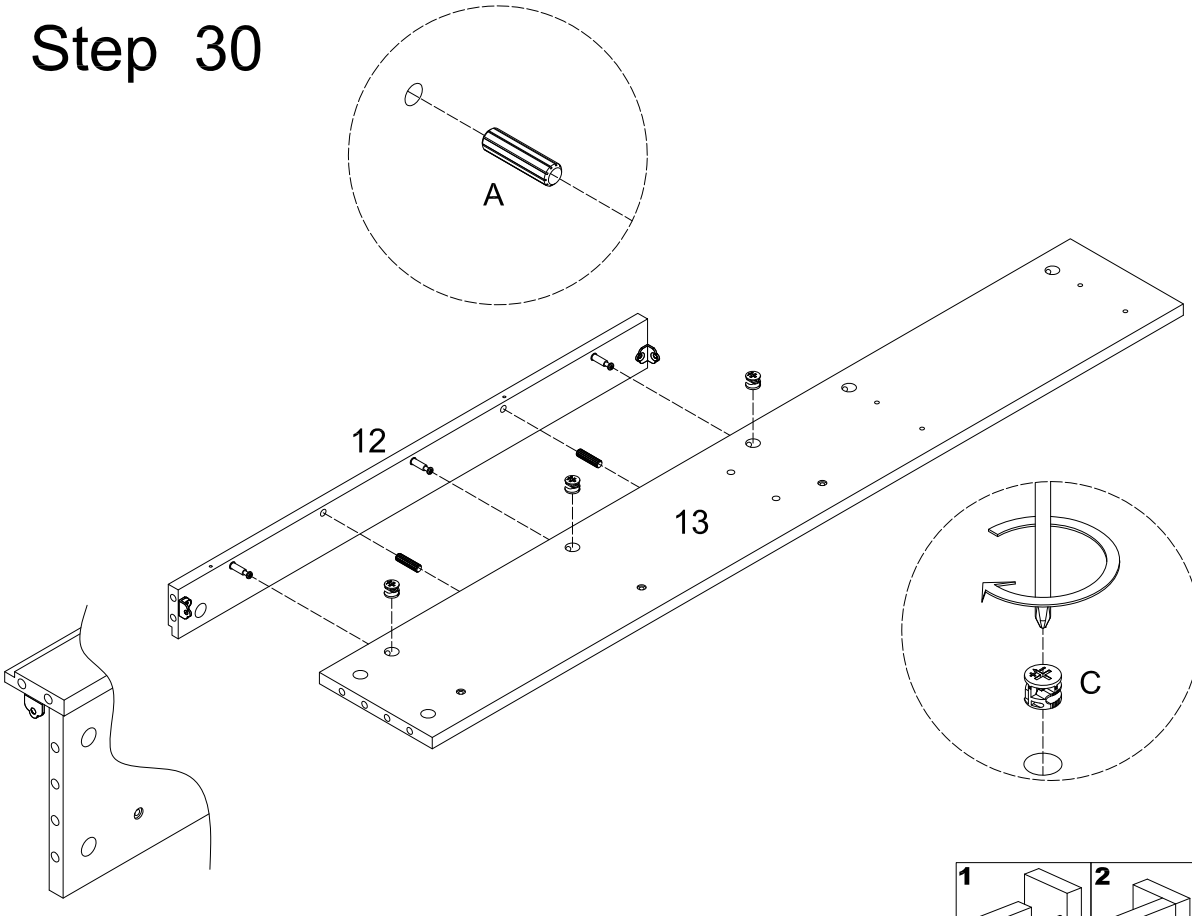



Final effect

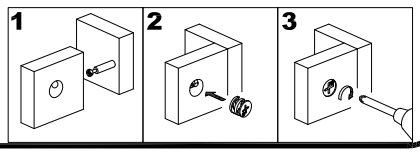



Step 31


CAUTION: You may need assistance with this step

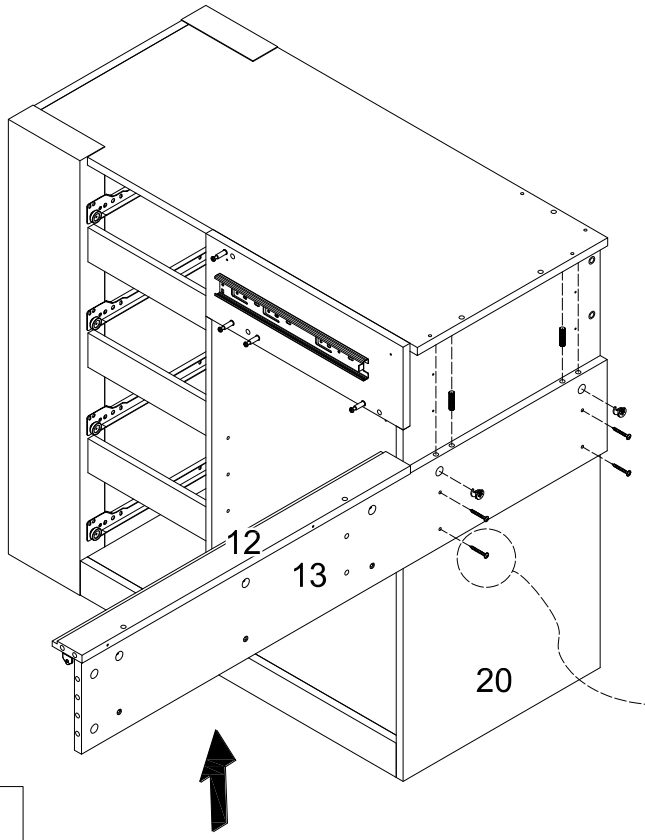

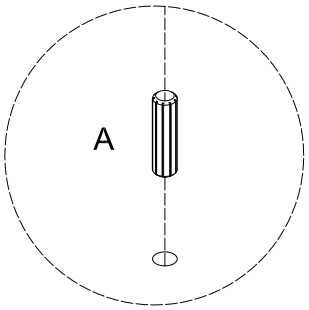


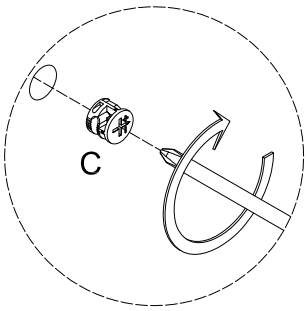


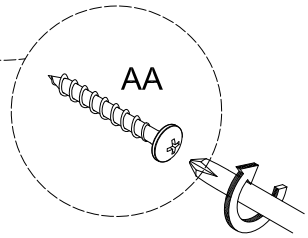


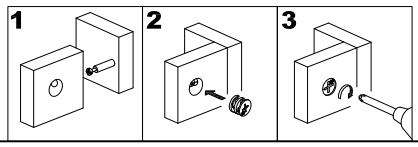



Step 32

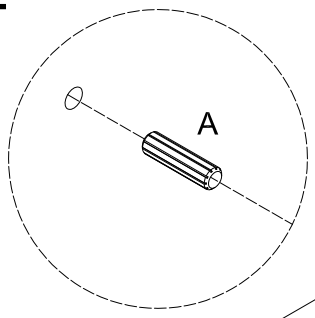

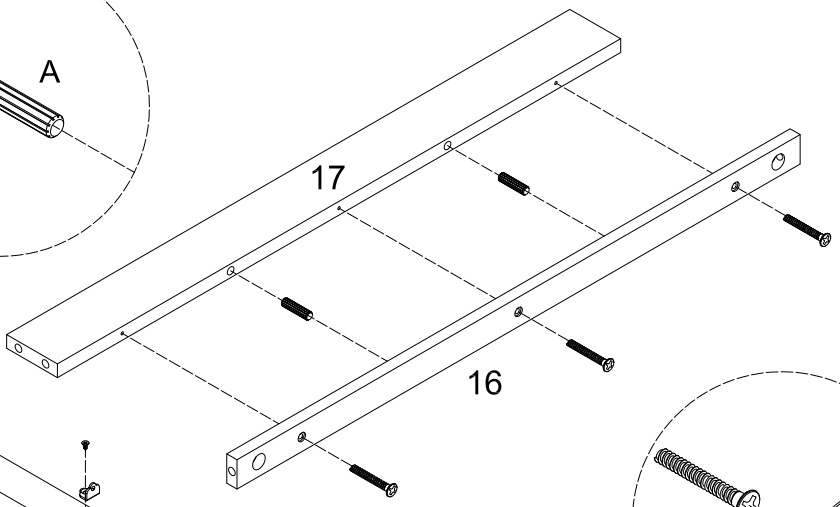

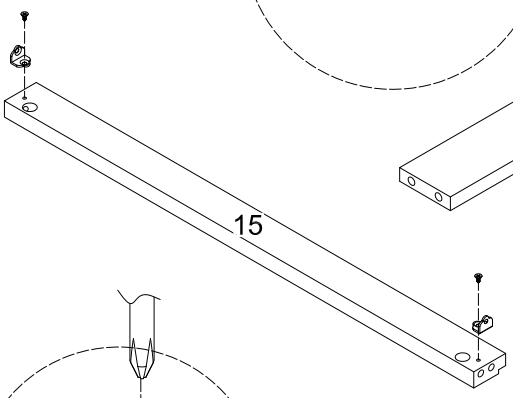

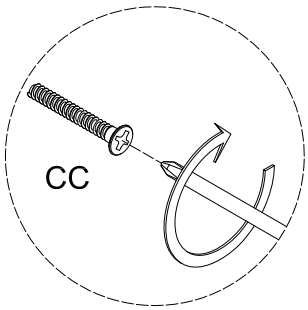


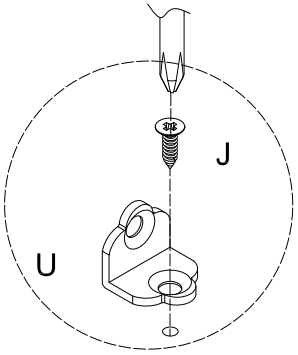


Note:

L-shaped bracket shall not extend past the end of Part 15

Step 33

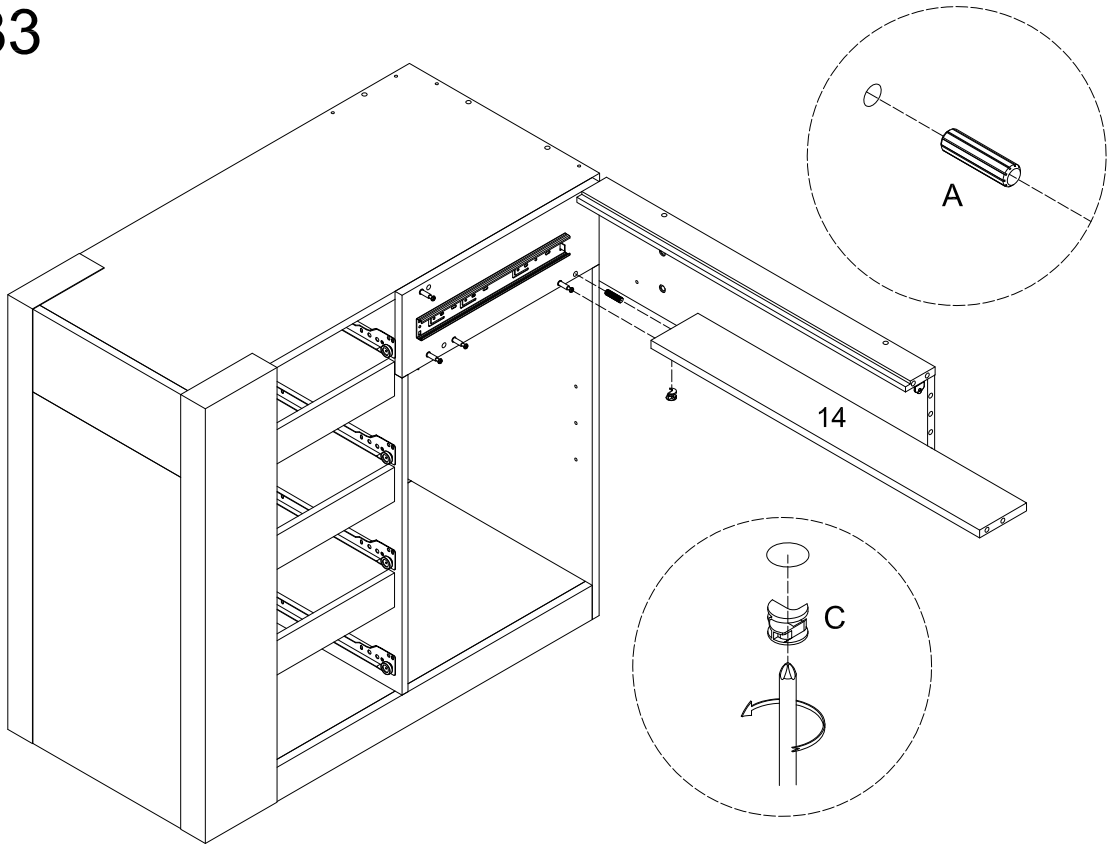


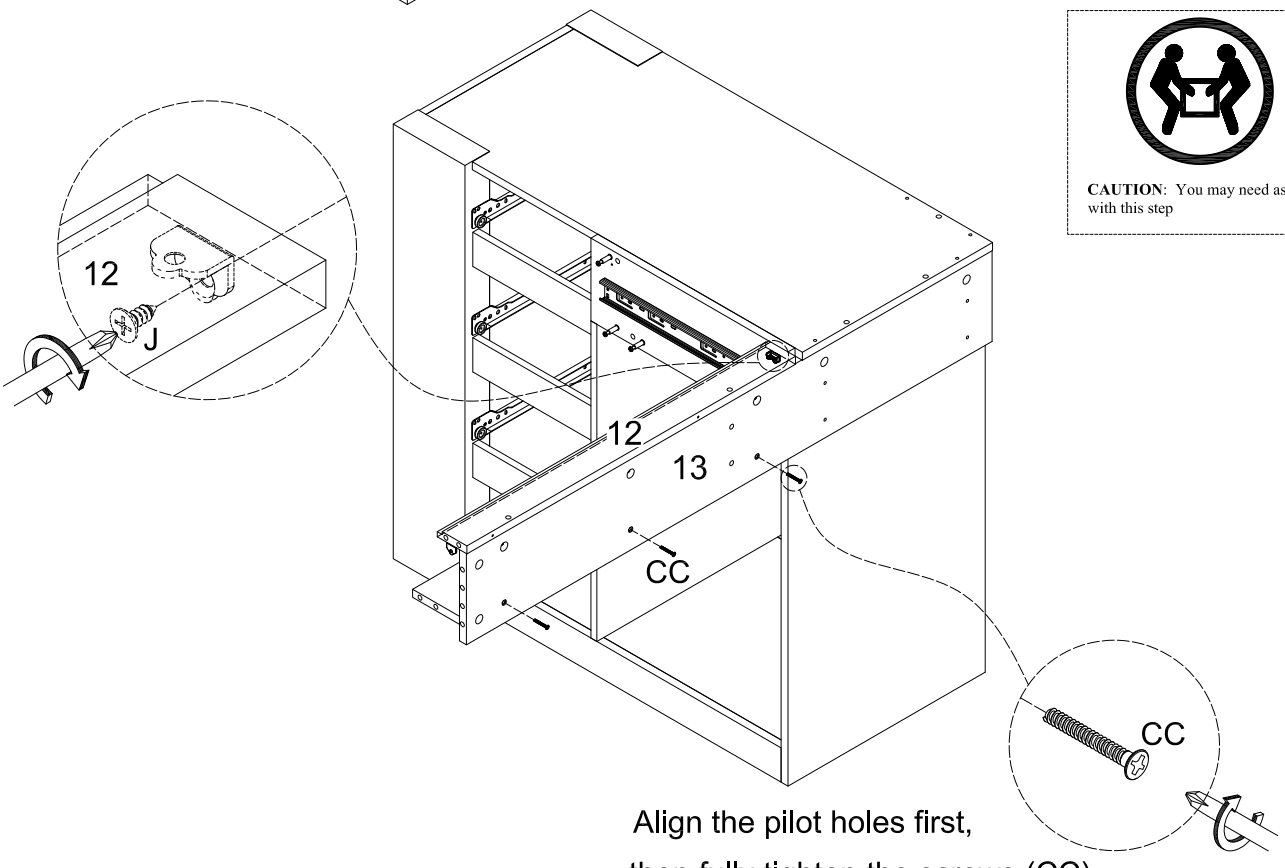



CAUTION: You may need assistance with this step

Align the pilot holes first,
then fully tighten the screws (CC)

Step 34

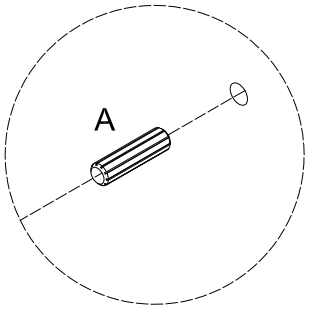


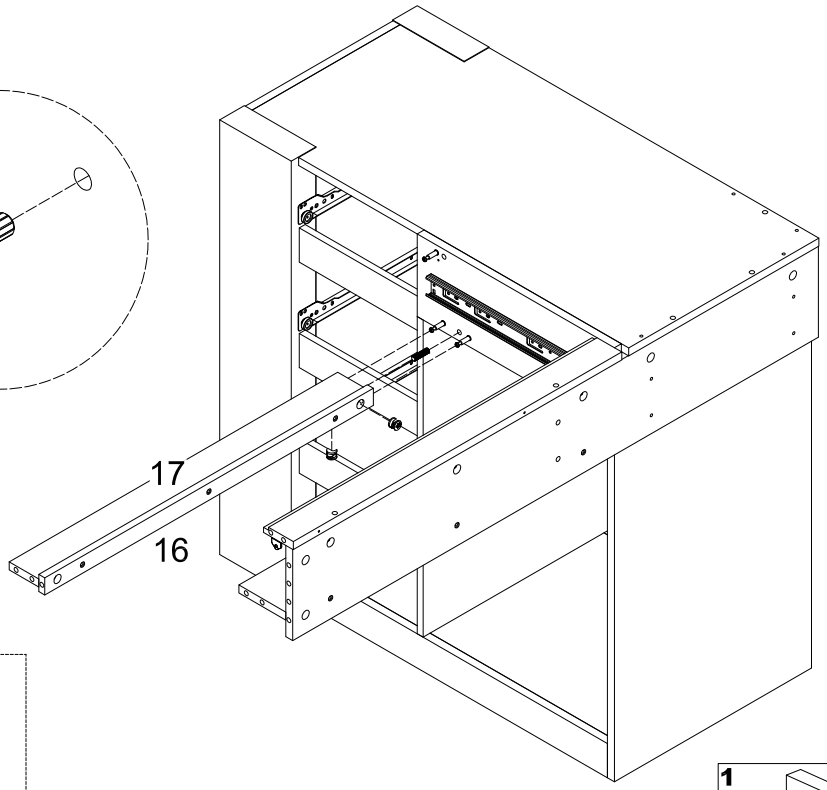

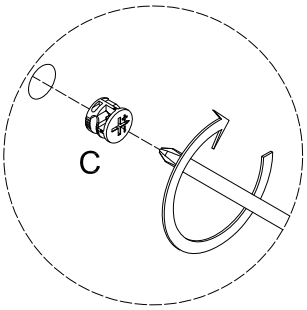






CAUTION: You may need assistance with this step

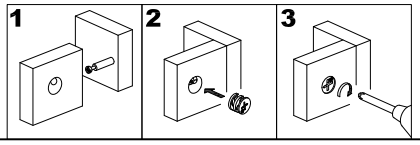


Step 35

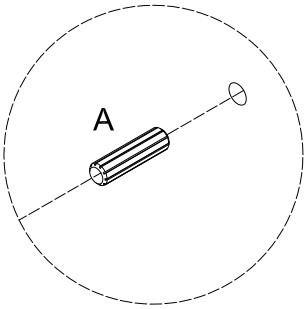

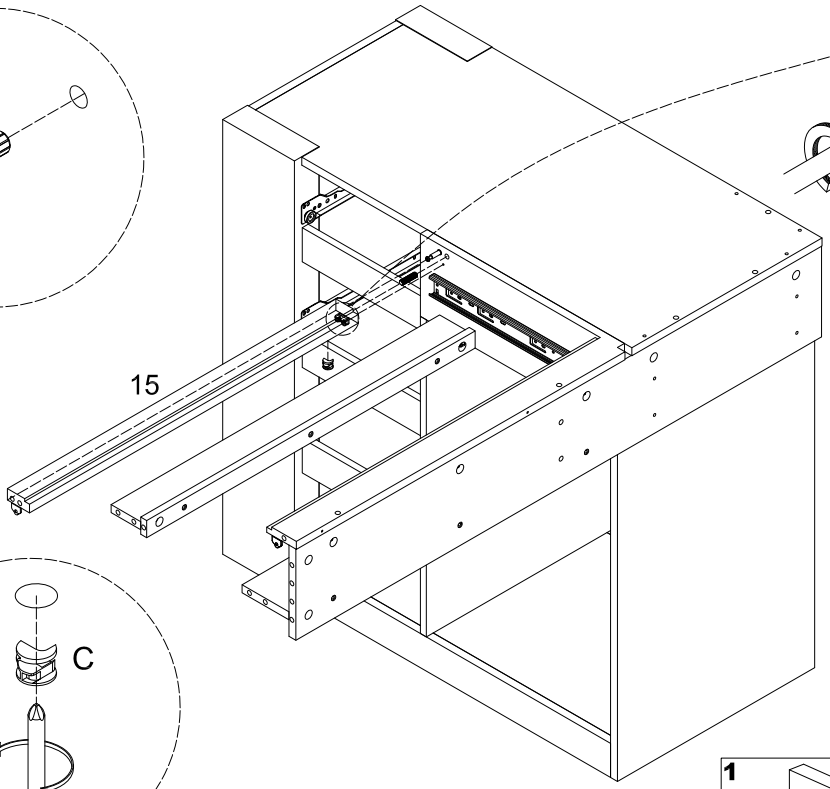


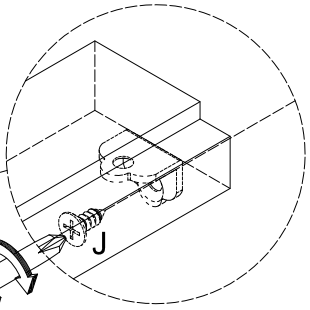

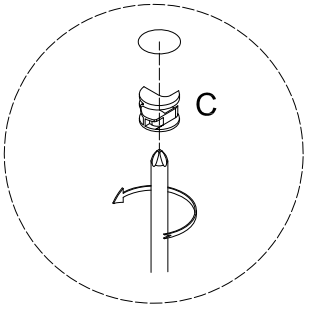





CAUTION: You may need assistance with this step

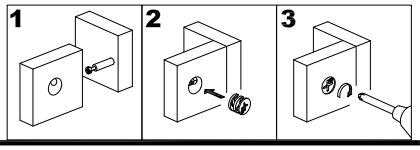


Step 36

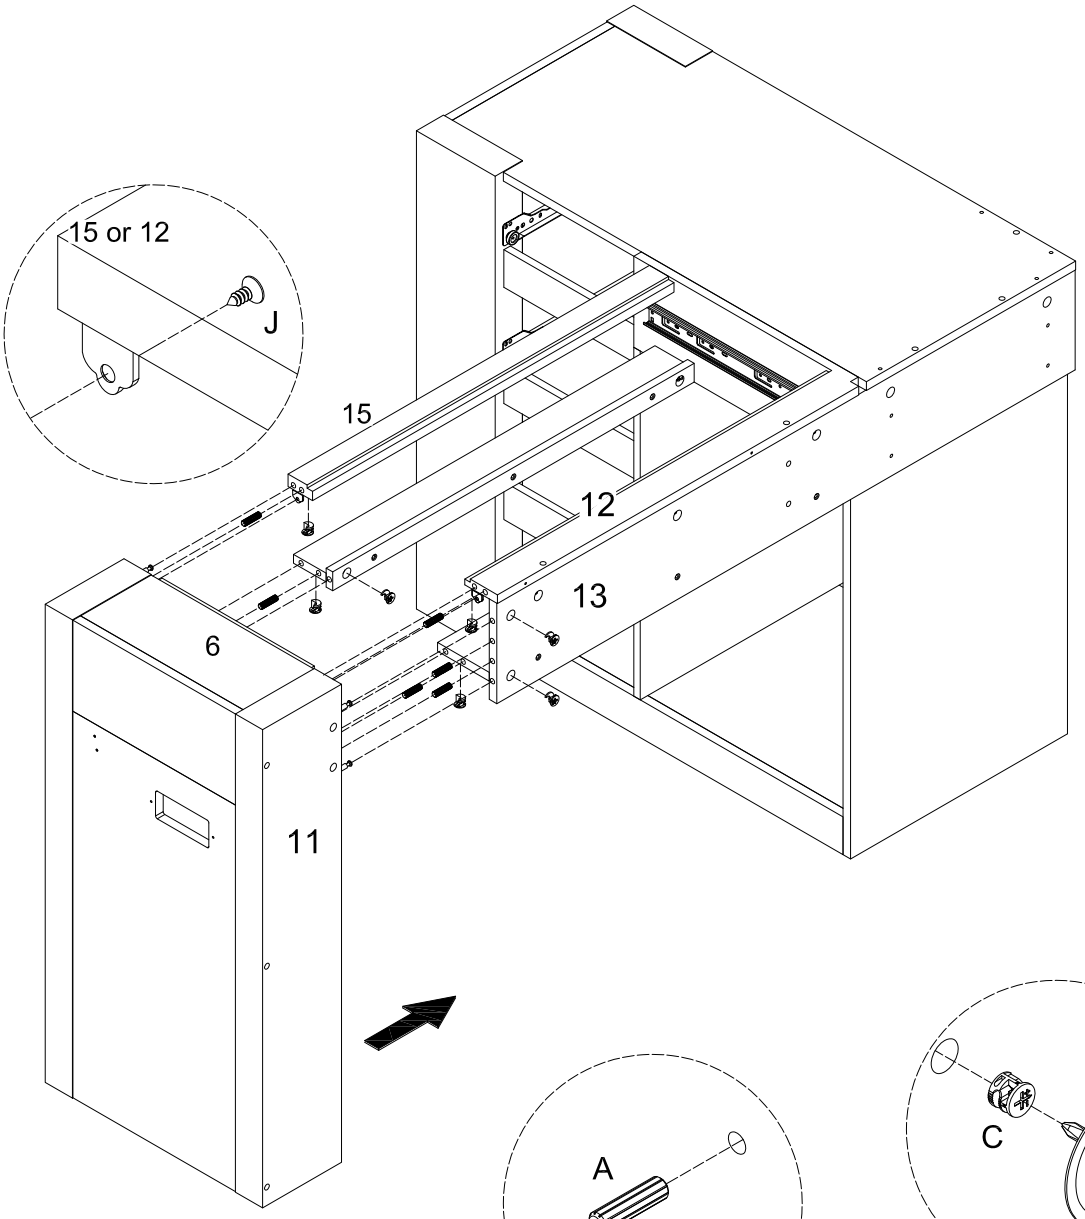

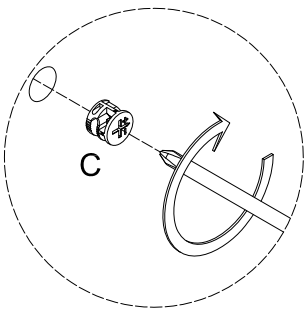





CAUTION: You may need assistance with this step

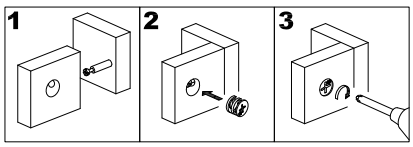


Step 37

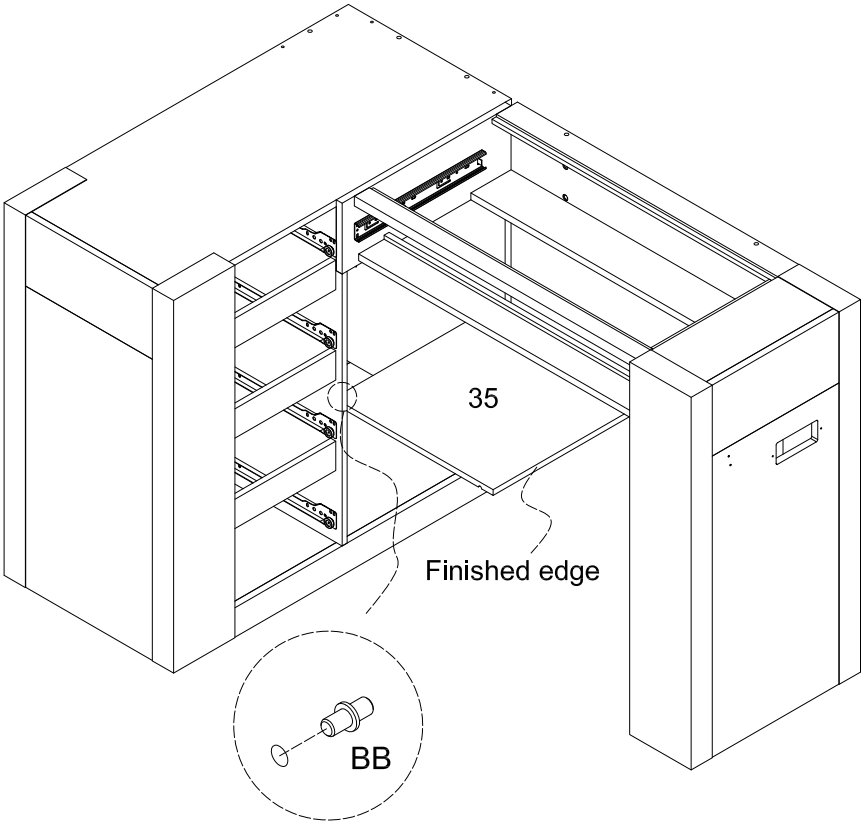


Step 38

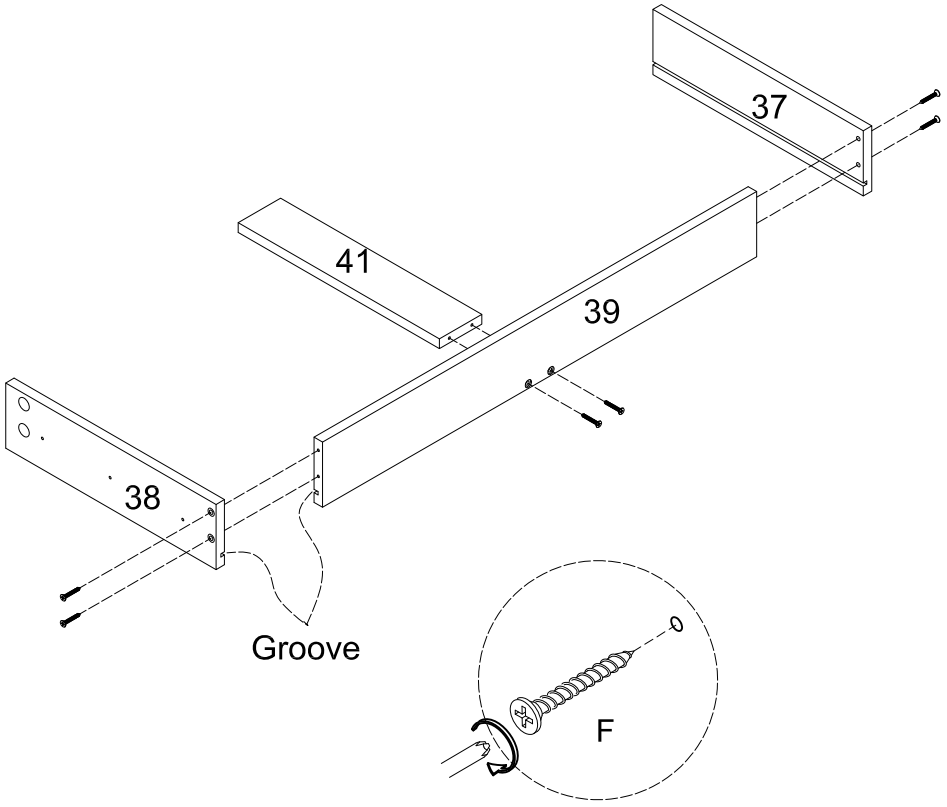


Step 39

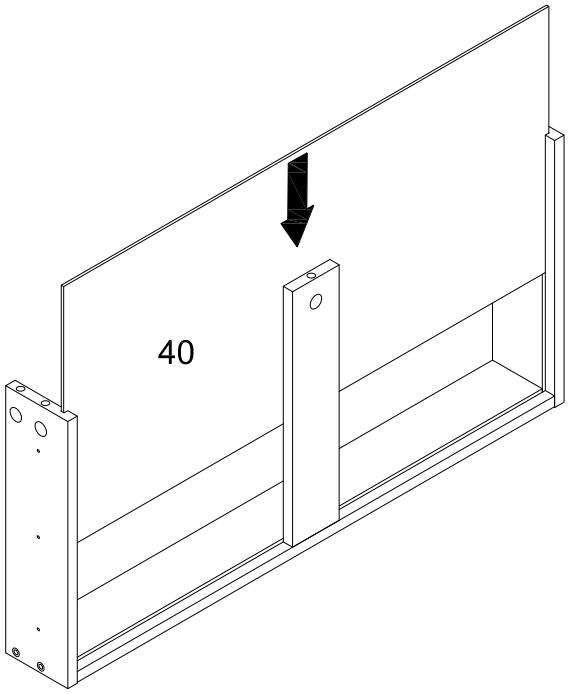



Step 40

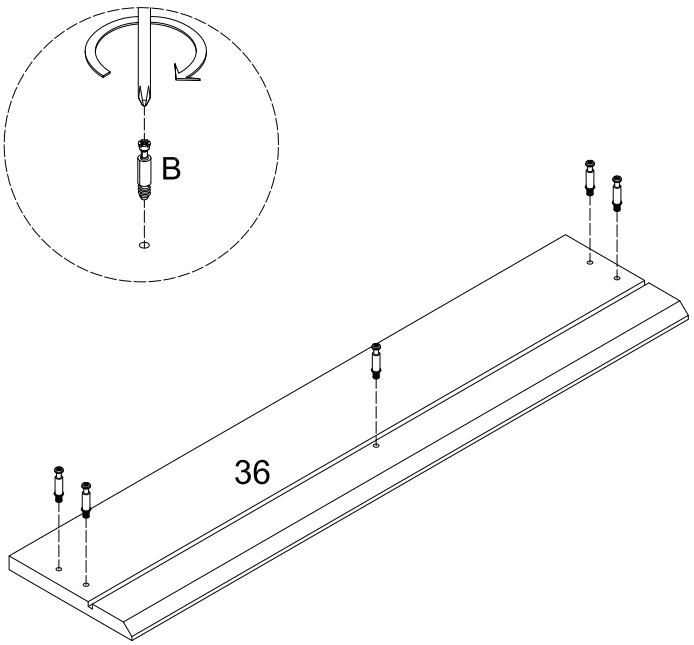

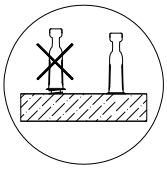



Step 41

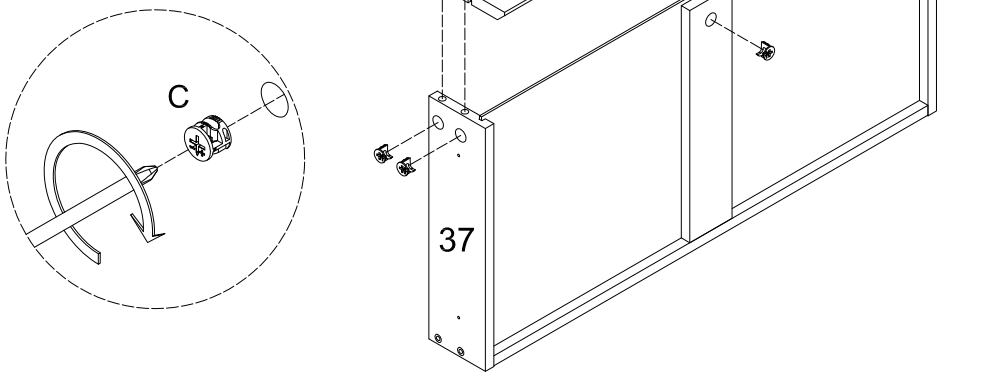

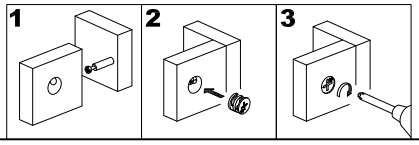


Step 42

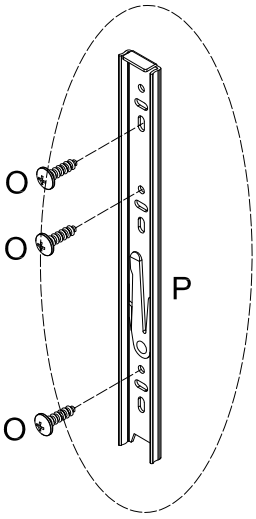


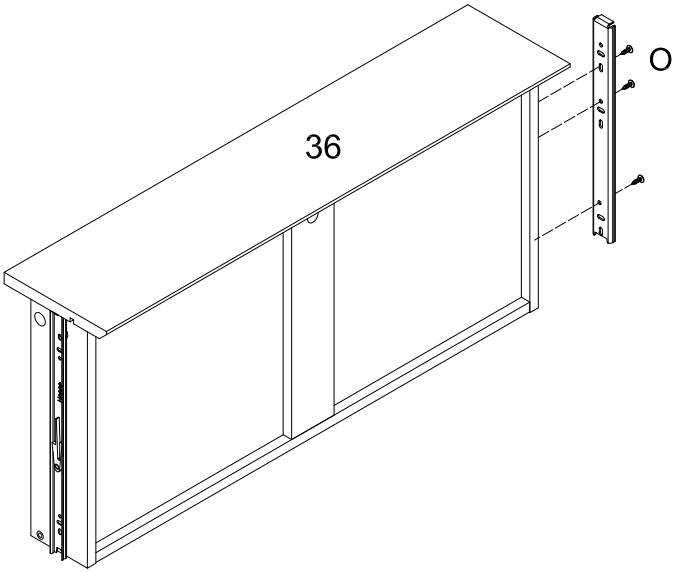


Step 43

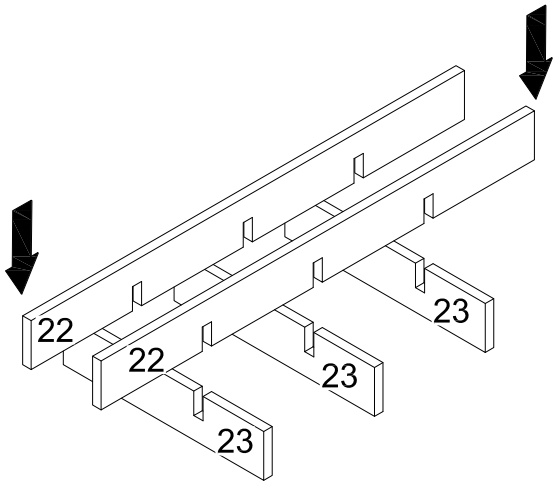


Step 44

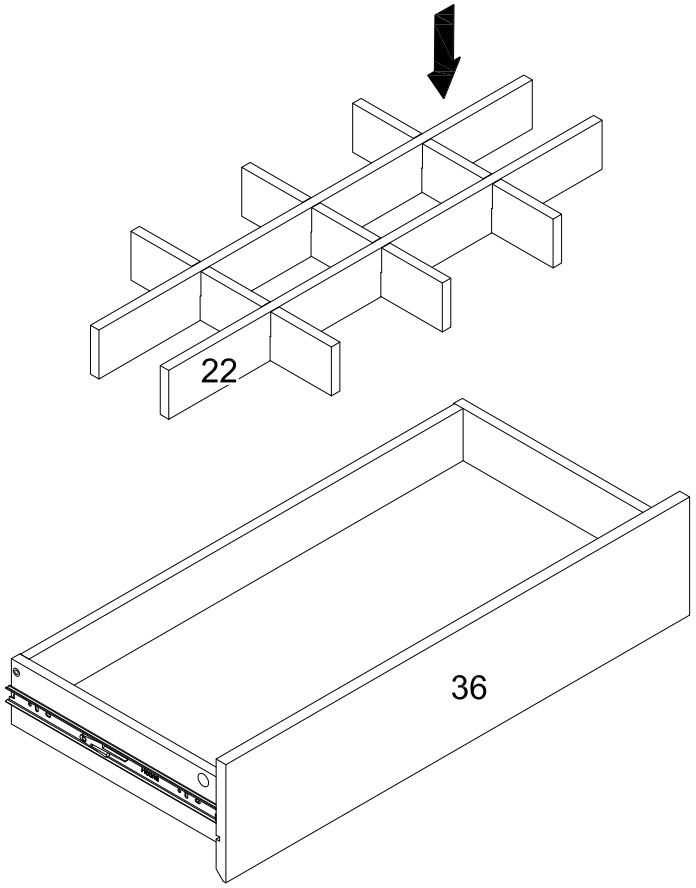


Step 45

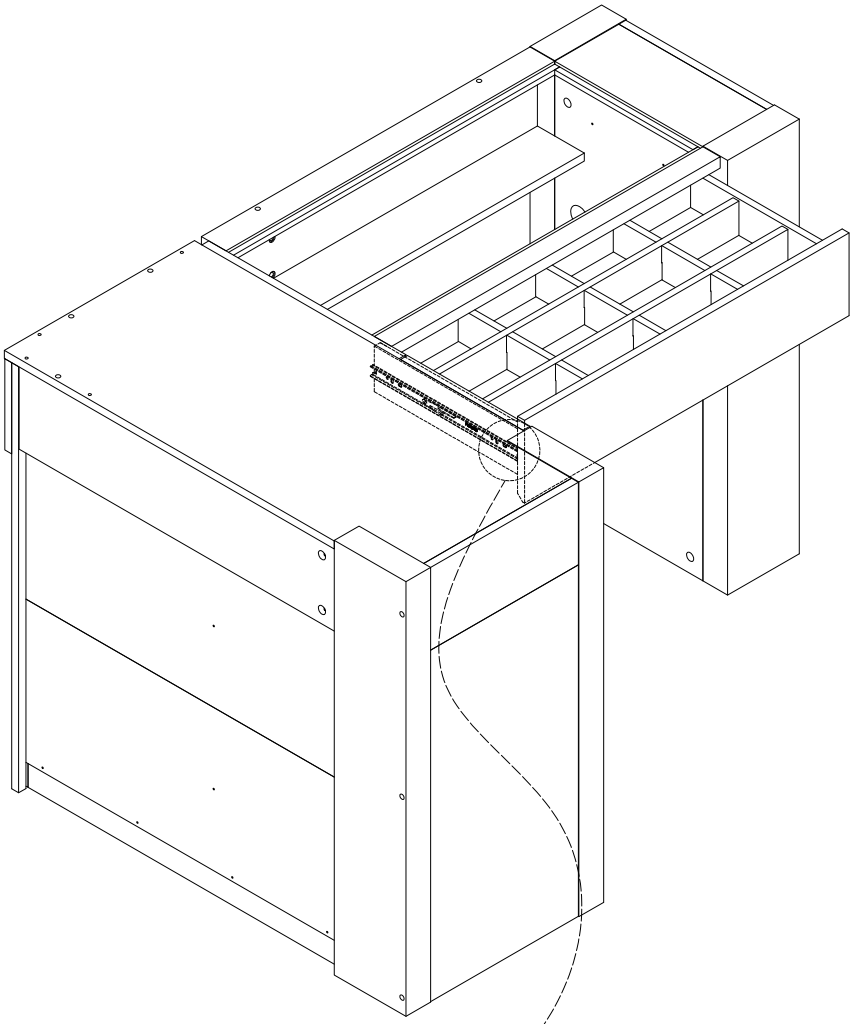


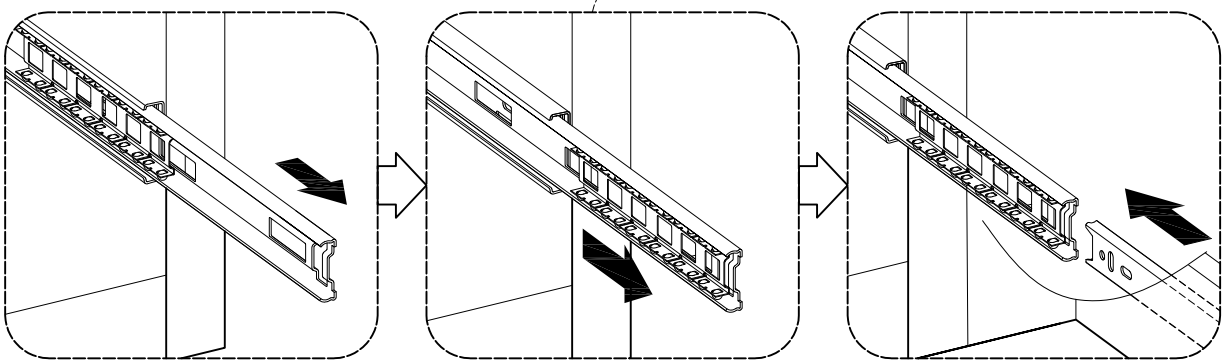

Step 46

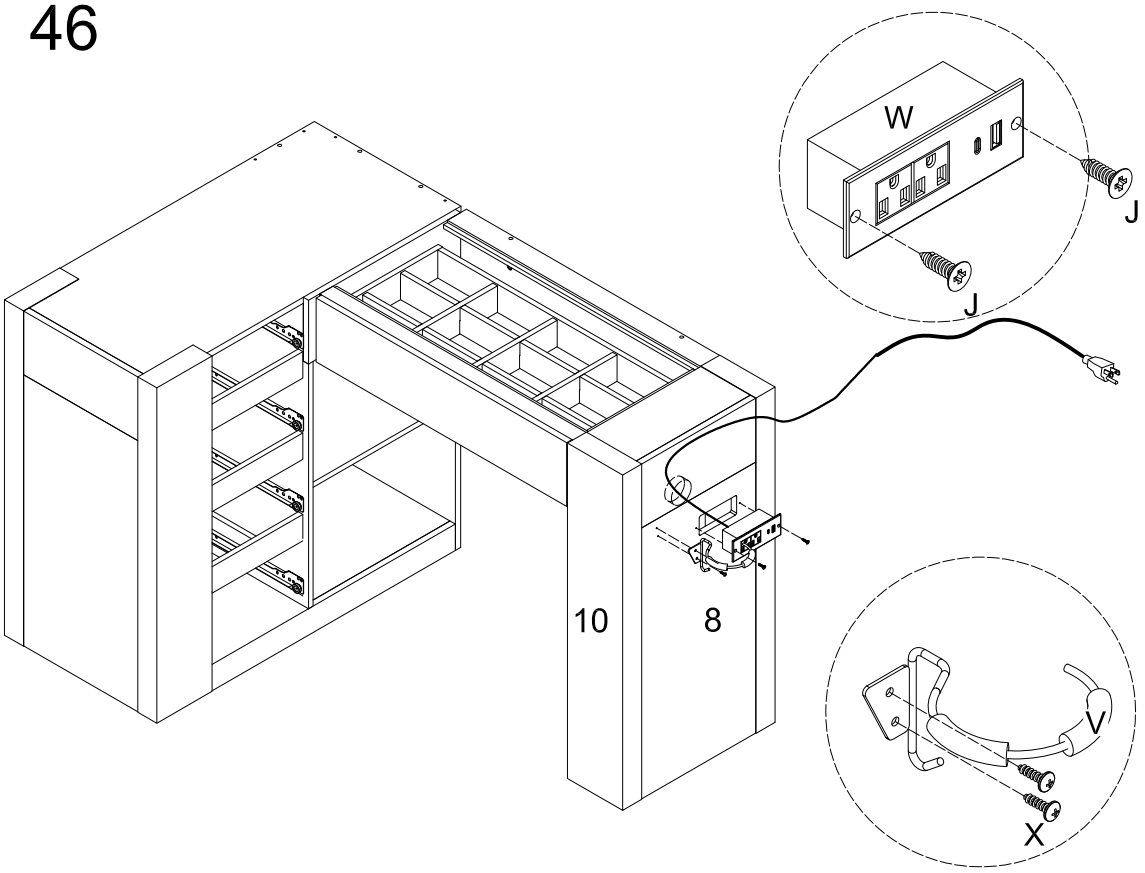


Step 47

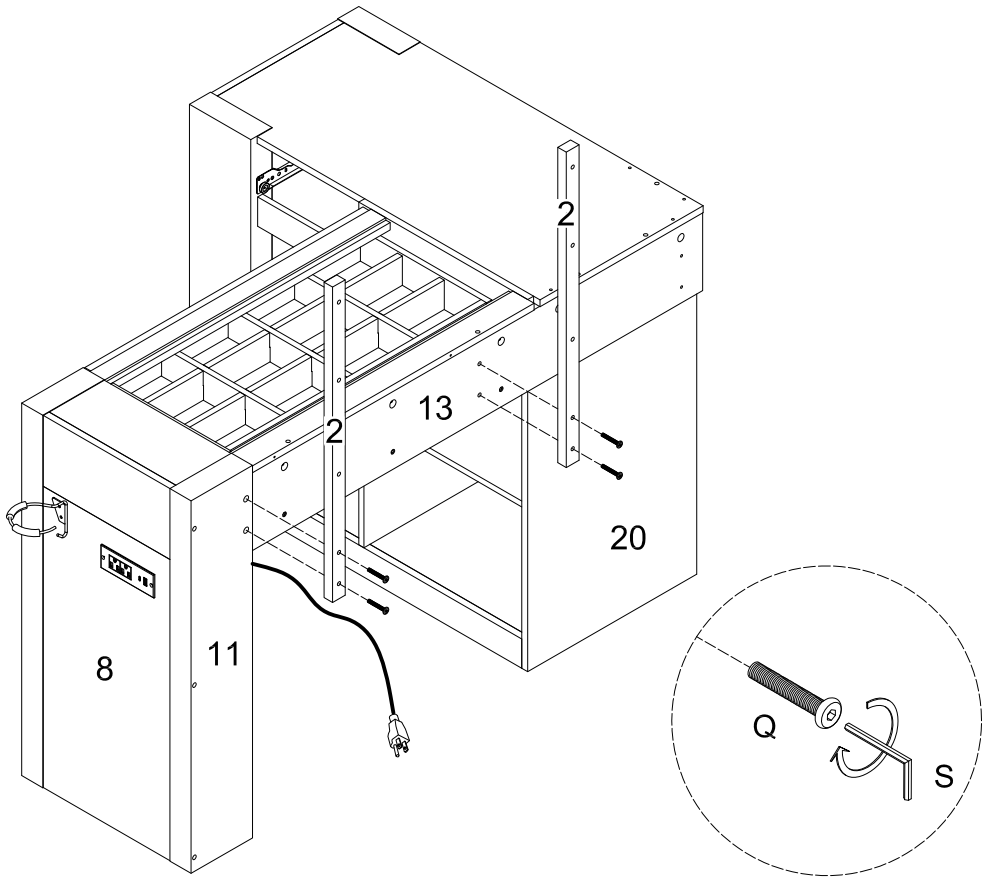



Note: Do not fully tighten the bolts (Q)


Step 48

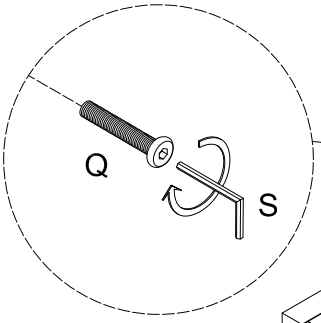

Note: After align all bolts (Q), then fully tighten them

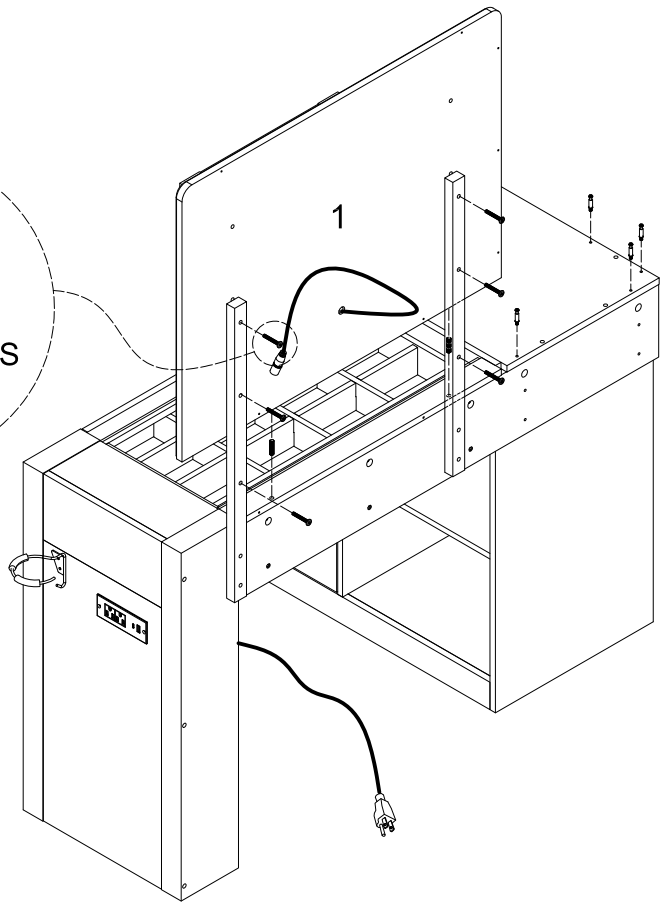

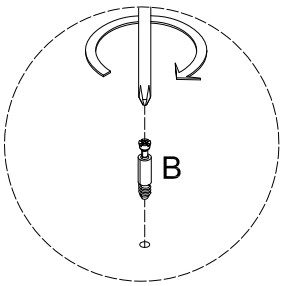

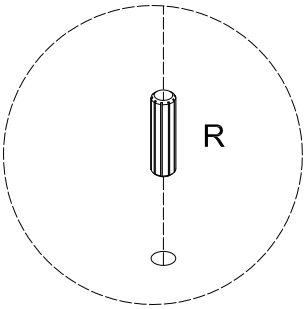



Dowel (Short)





CAUTION: You may need assistance with this step

Step 49

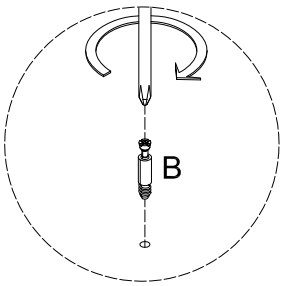


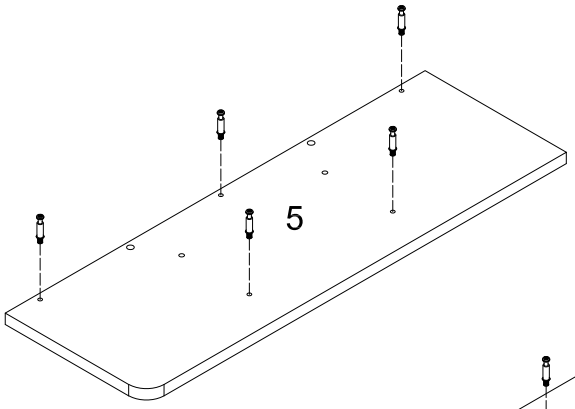


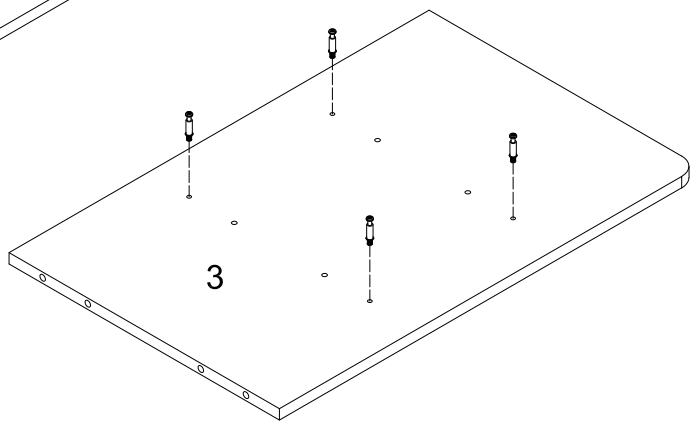


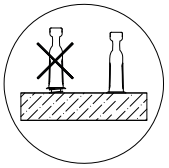



Step 50

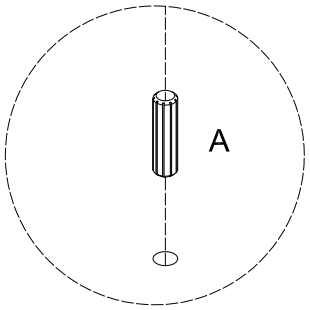

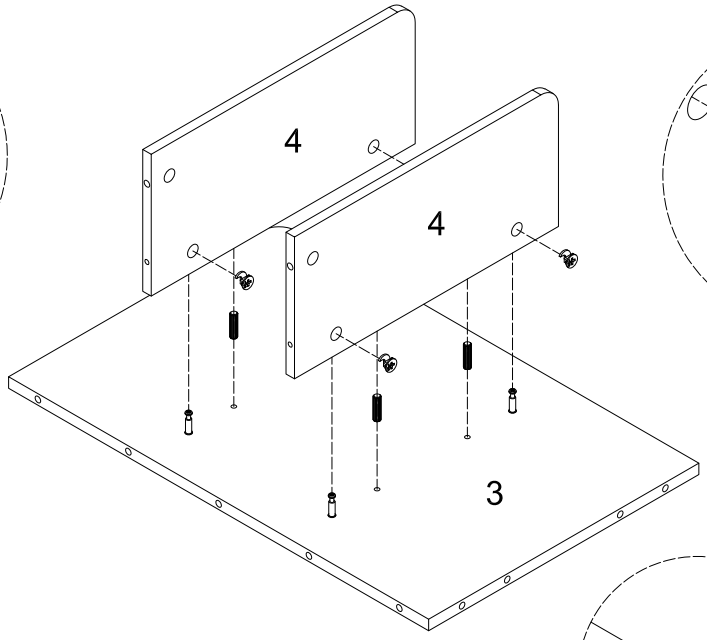


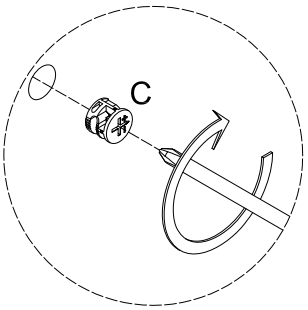


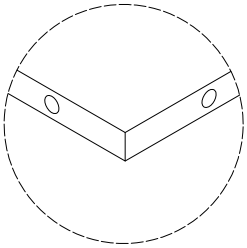


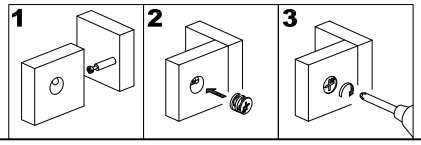


Step 51

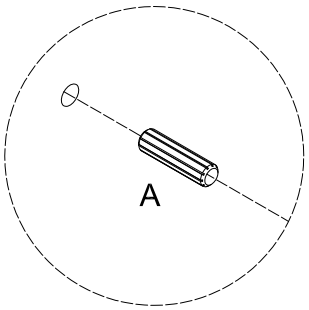


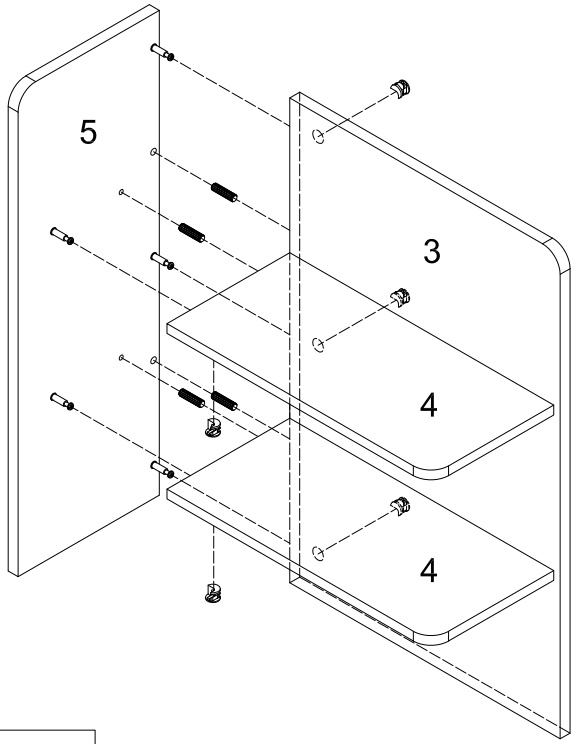


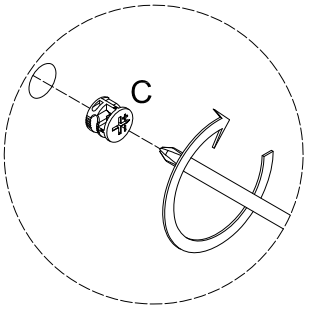


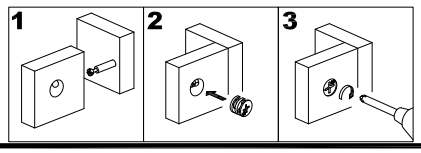


Step 52

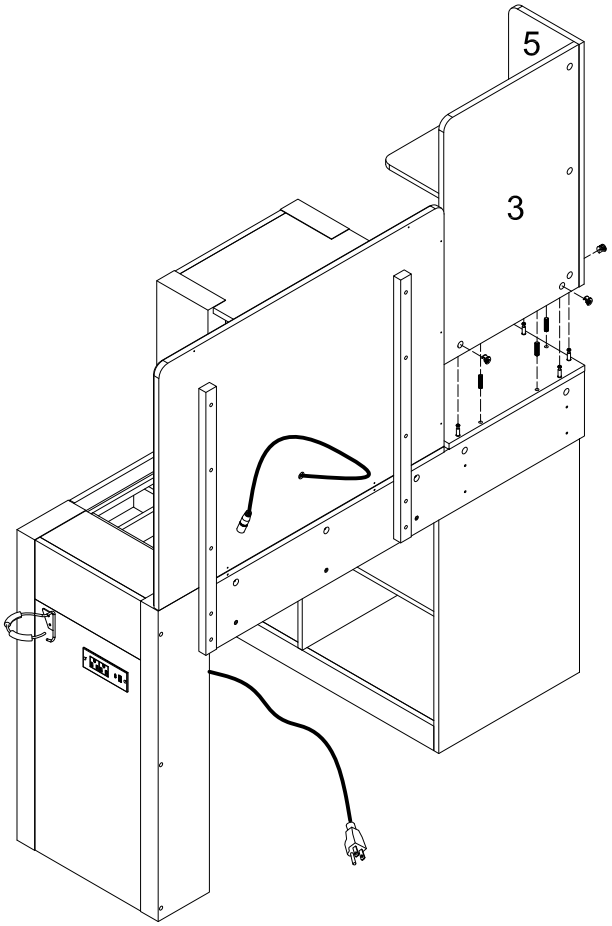

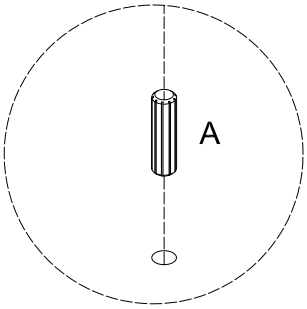

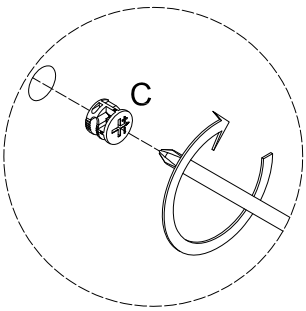


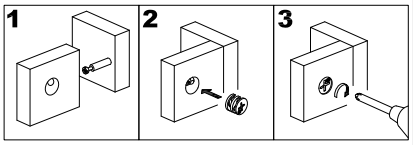





CAUTION: You may need assistance with this step


Step 53

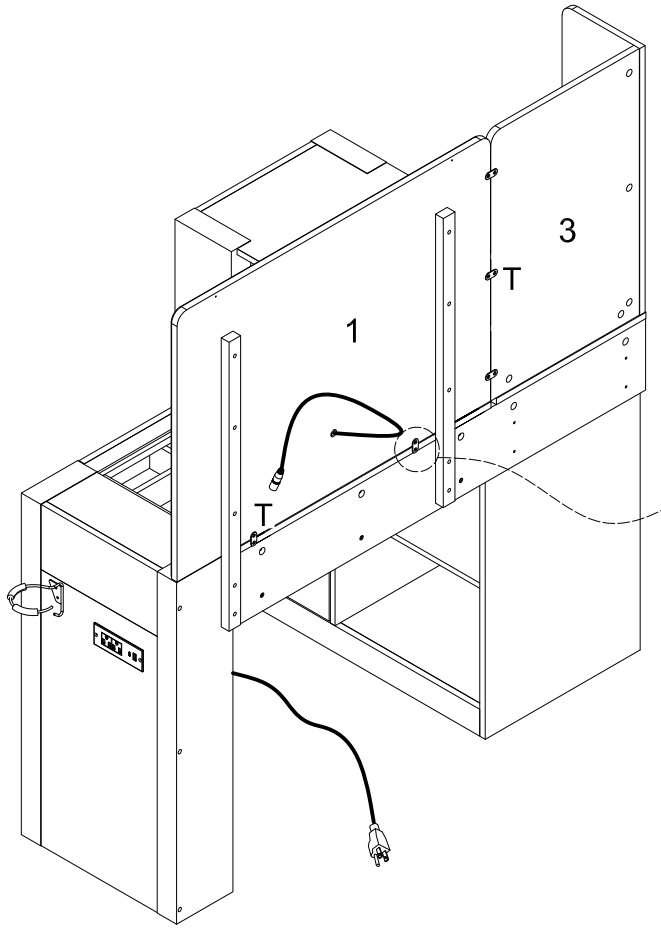

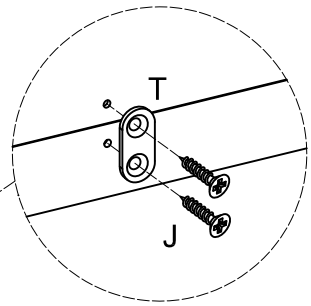


Step 54

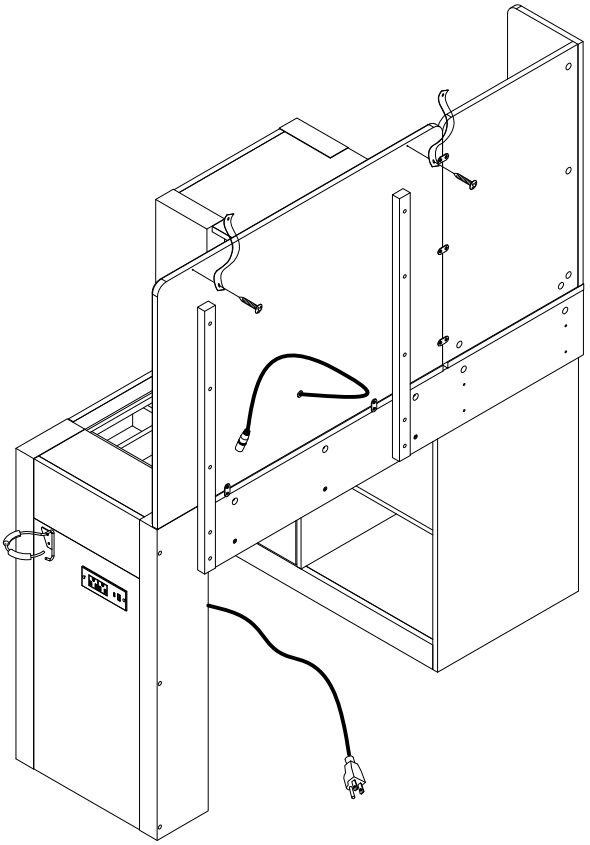


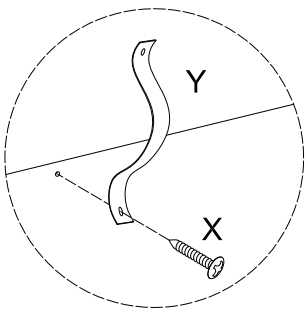

Step 55

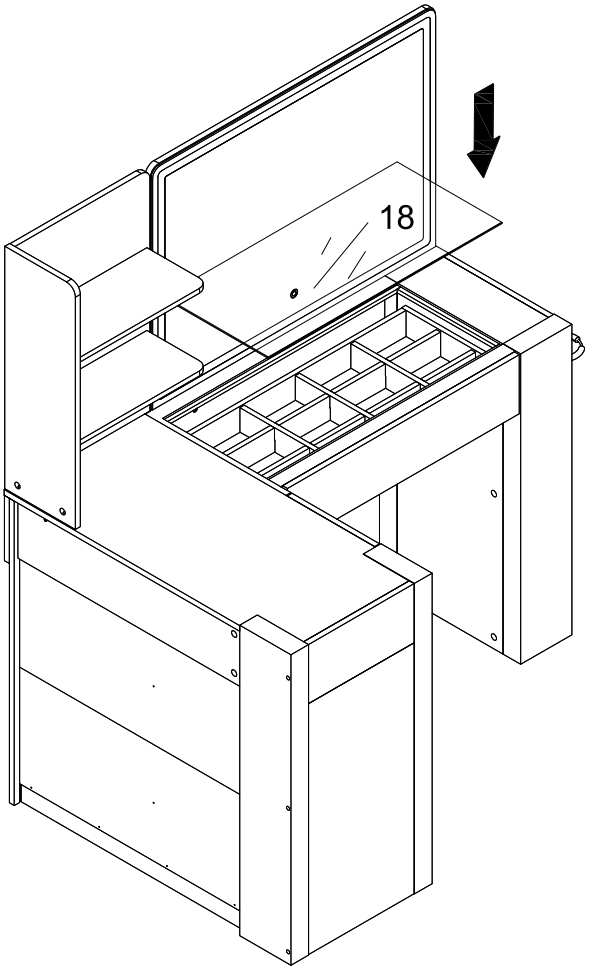


Step 56

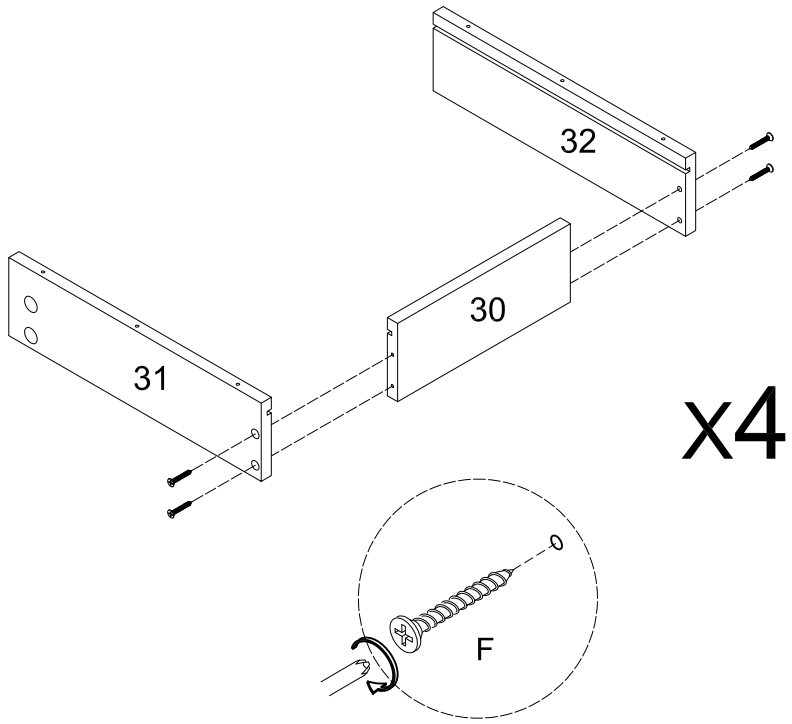


x4


Step 57

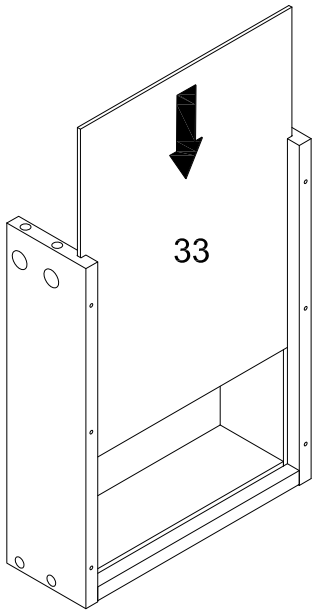


x4


Step 58

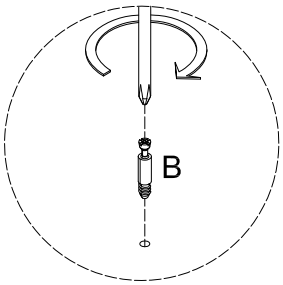

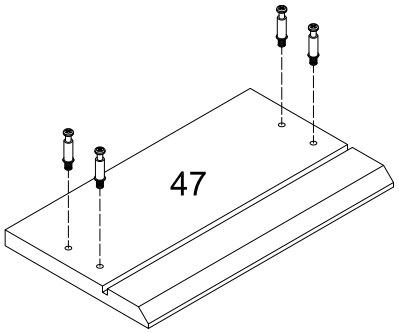

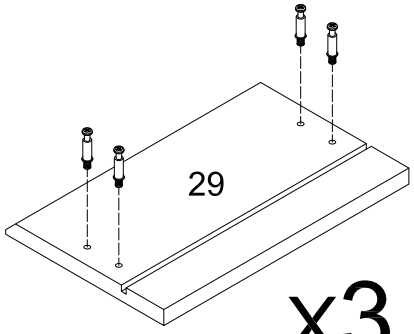



X3

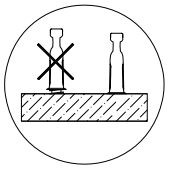



Step 59

X3

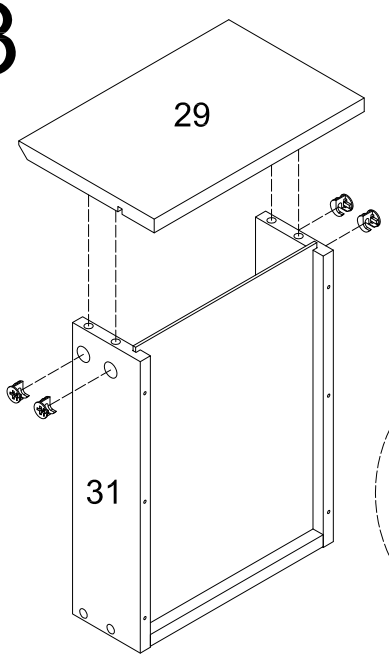

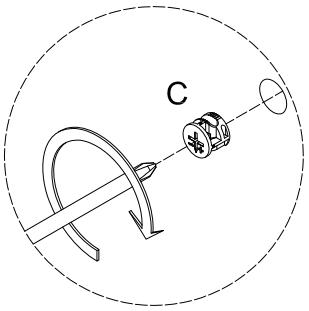


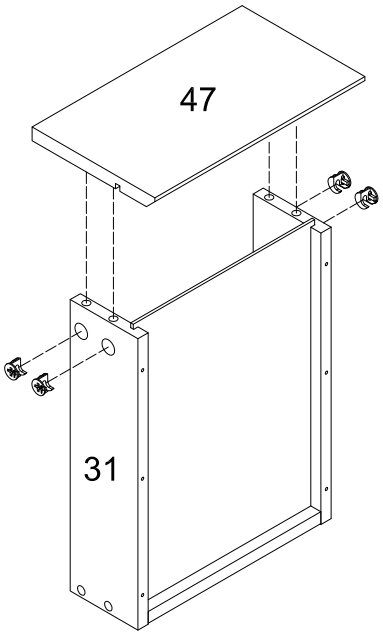

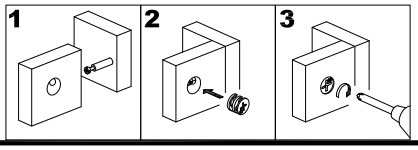


Step 60


x3

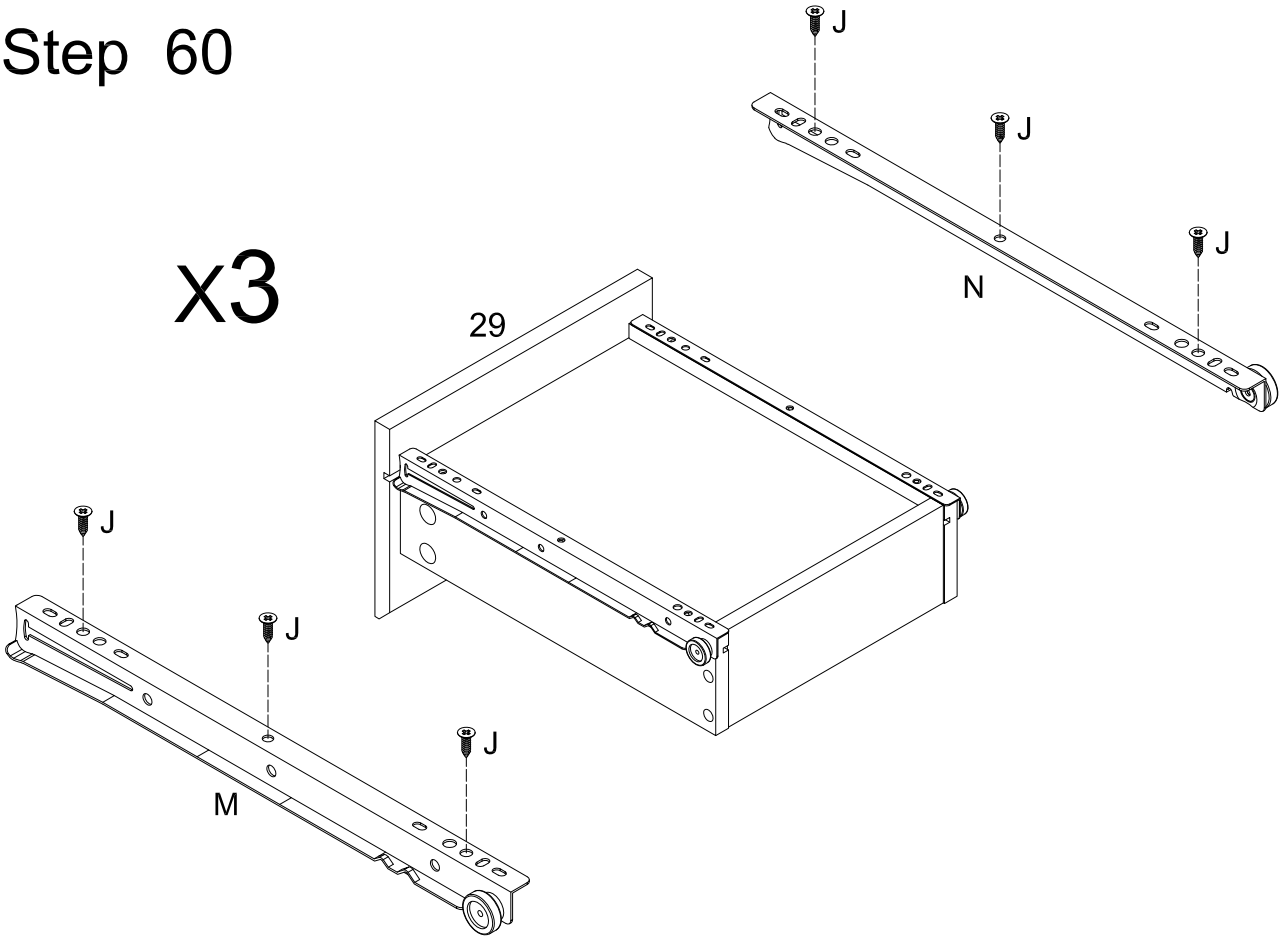


Step 61

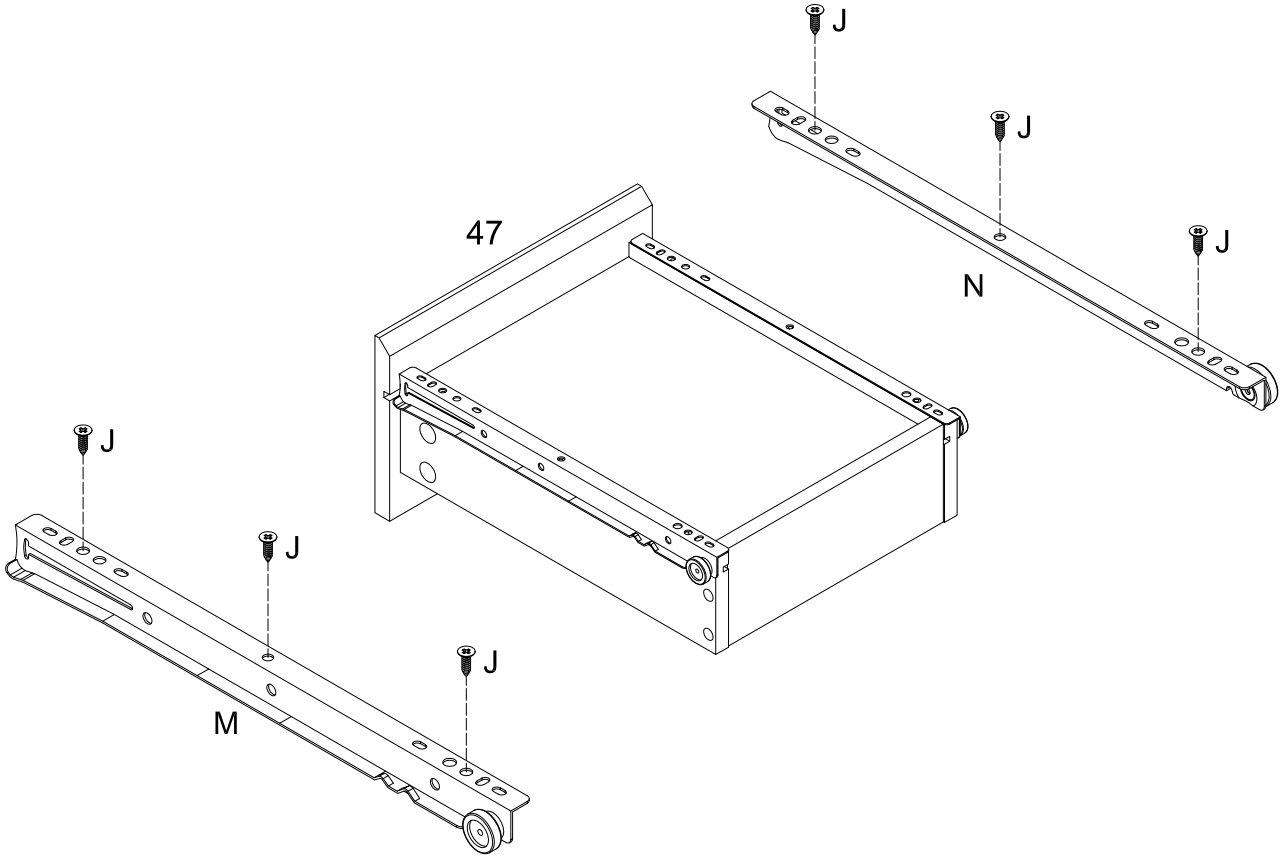

Step 62

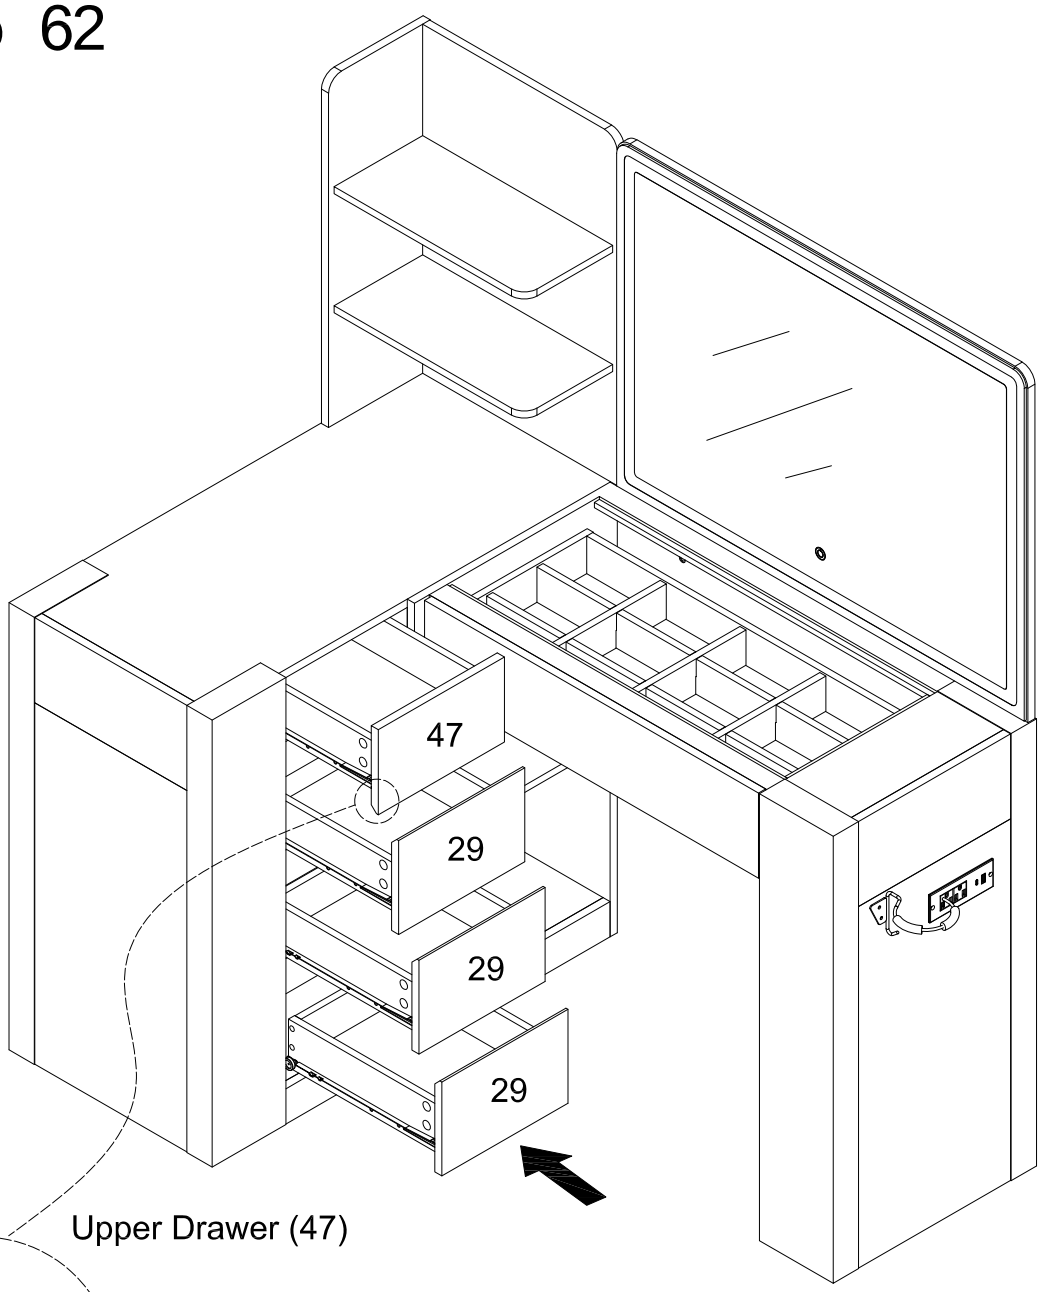


Upper Drawer (47)

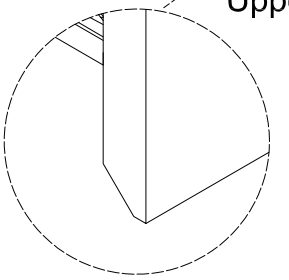


Bevel edge


It is recommended that three people carry it into place before installing the drawers.

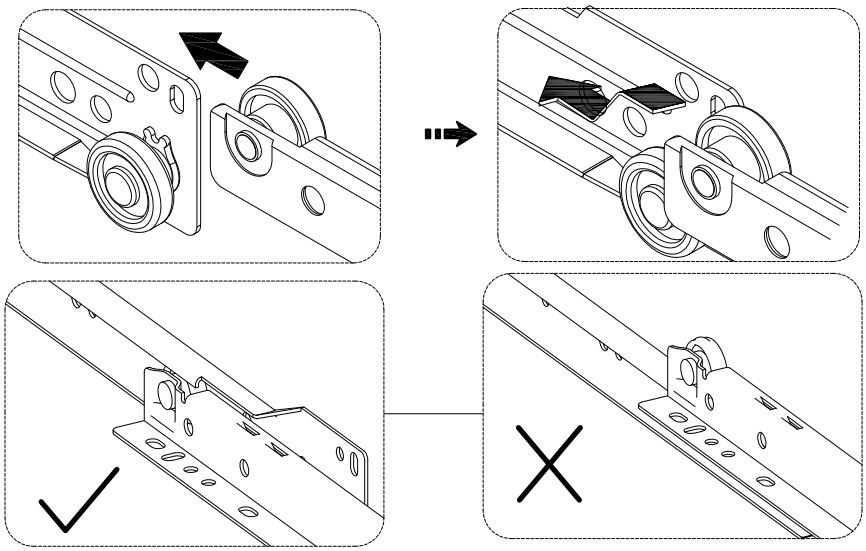


Step 63

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

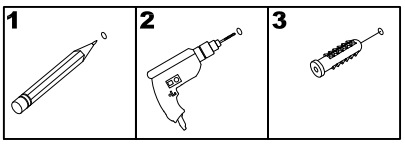

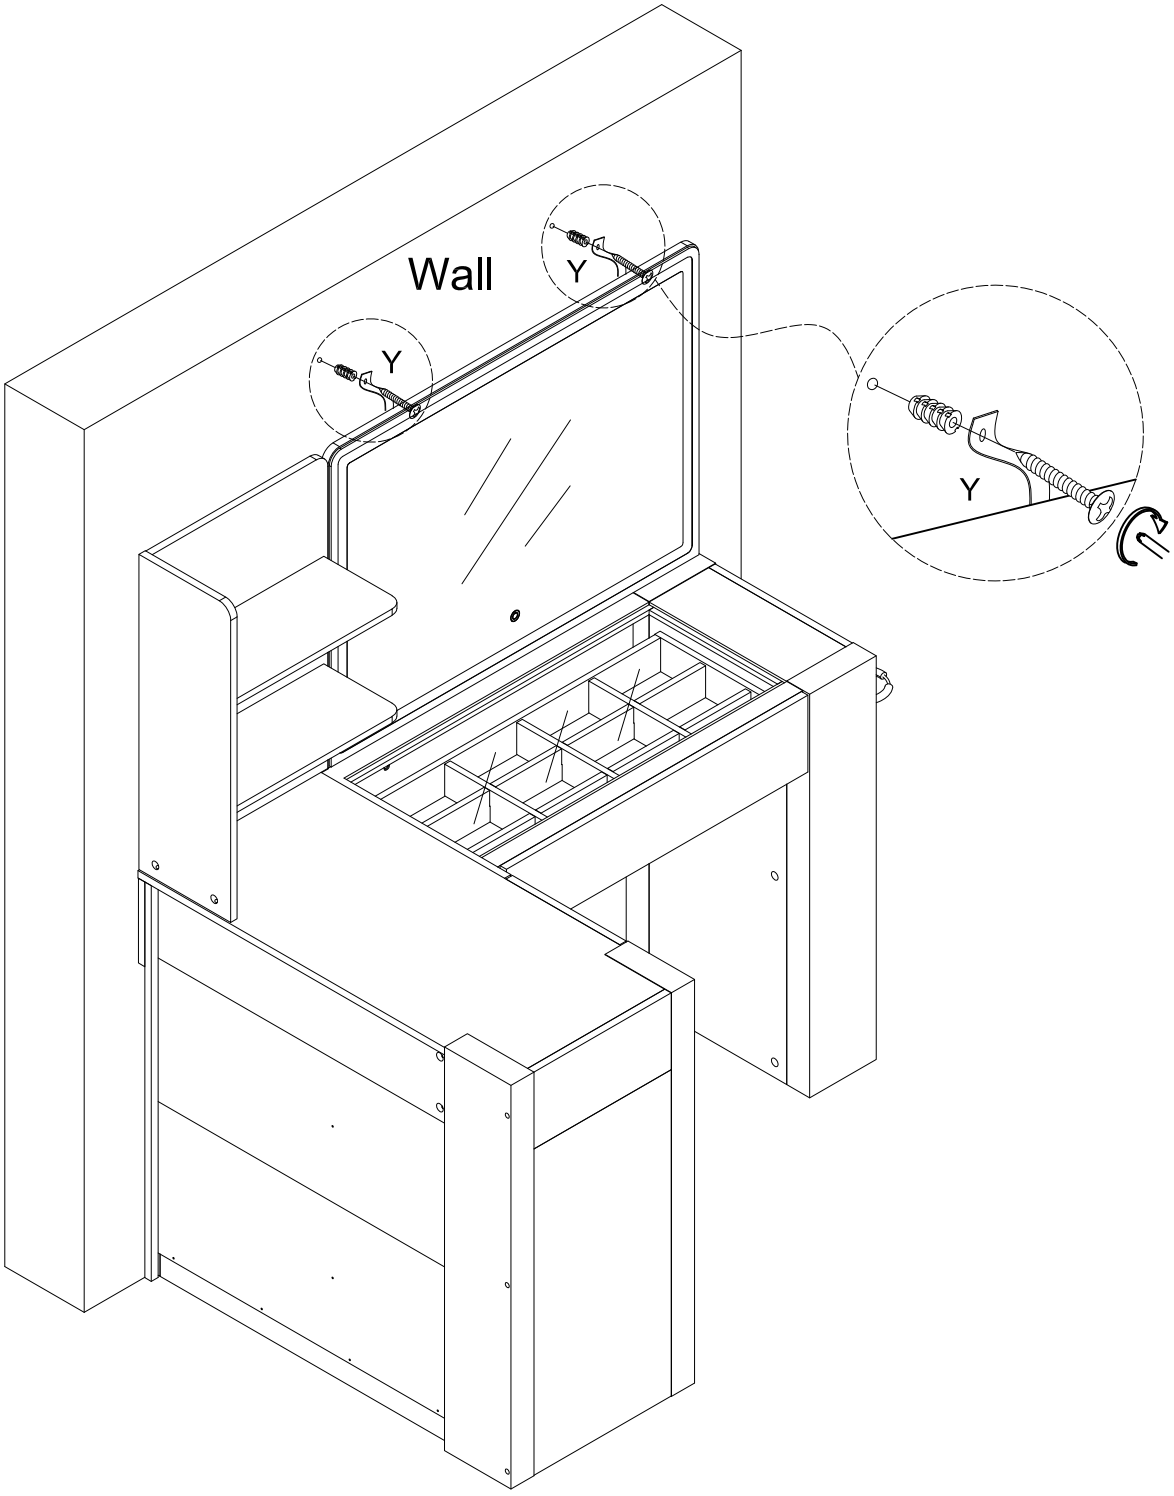

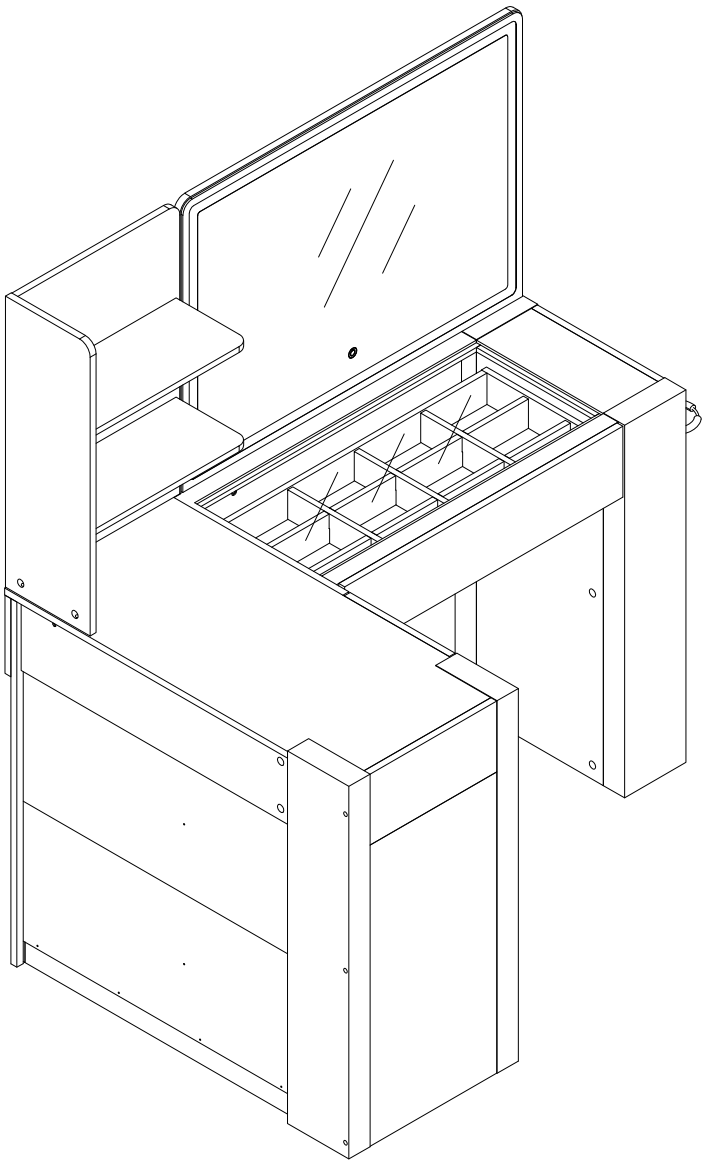

Final Assembly