OWNER'S MANUAL

Contact Us


If you have any questions,
Please contact customer servicce.

Email: service@cozfurn.com


Scan the QR code to watch the installation video.




Assembly Checklist

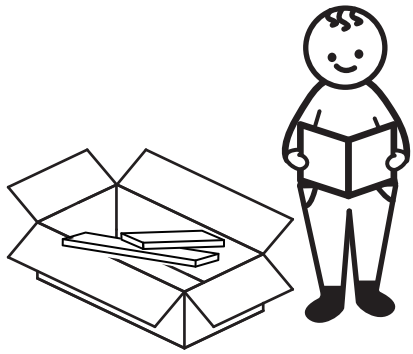


Read through the instructions carefully before you begin.

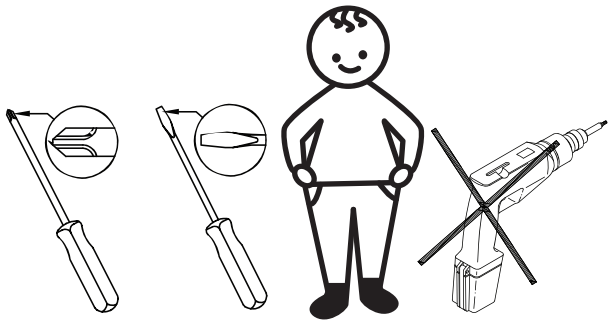

Make sure you have all the required tools. Never use power tools unless instructed.

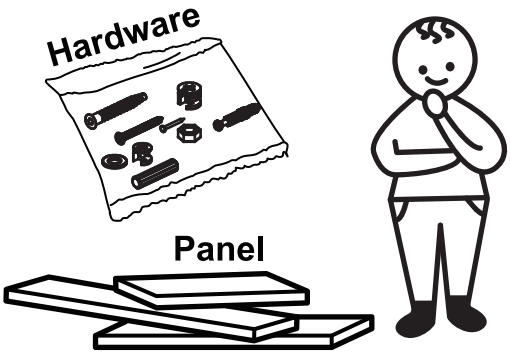

Identify and lay out all of the components before you begin assembly.

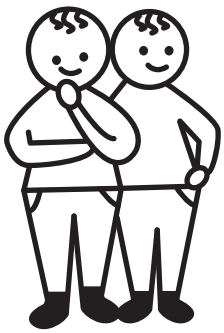


Two people are required to assemble.

Useful Information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
! Never use any glue until you are certain that the parts belong together.
! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
! If you are having any difficulties assembling your product, missing any hardware or components please email us.


SAFETY PRECAUTIONS

QUICKFIT

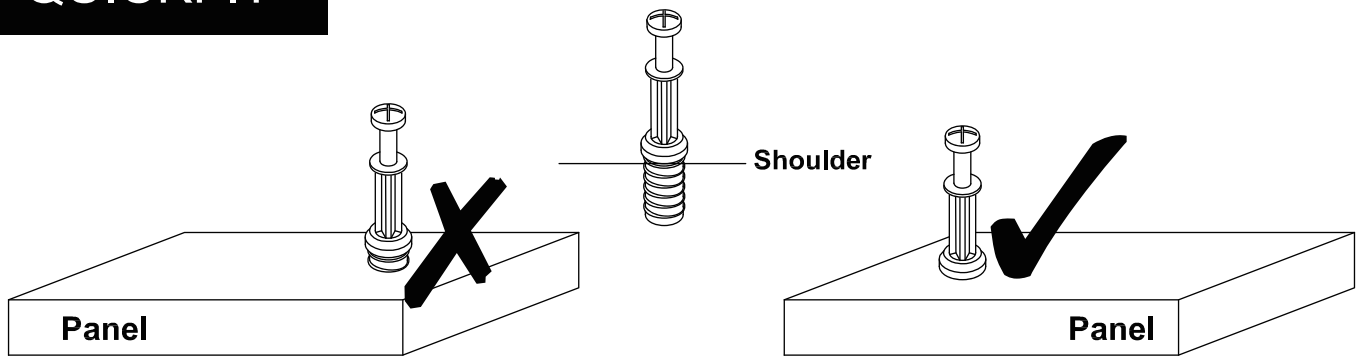


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

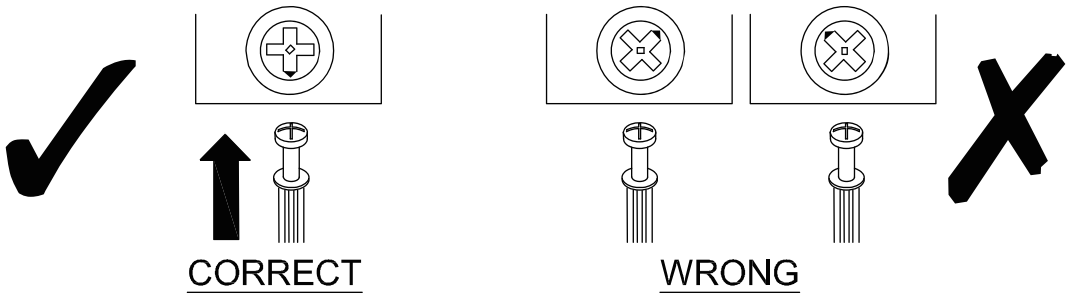

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

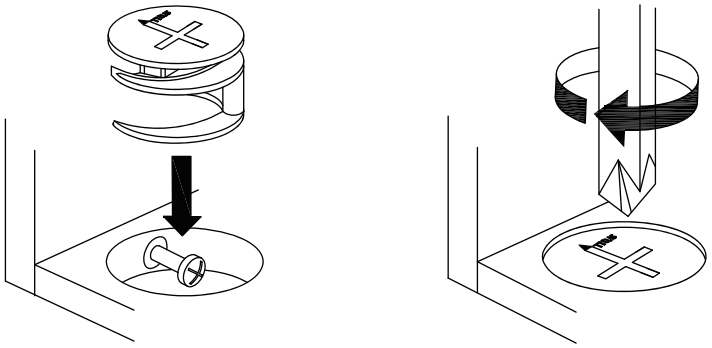

Turn cam lock clockwise to tighten.

SAFETY PRECAUTIONS

Wall Mounting & Fixing Guide

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.

IMPORTANT:
When drilling into walls, always check for hidden wires or pipes, etc.


Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.


- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

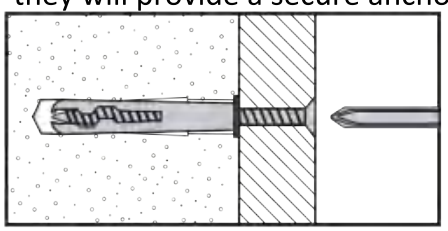


1. General Purpose Wall Plug
Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

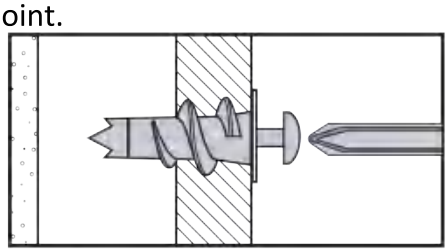


2. Plasterboard Wall Plug
For use when attaching light loads onto plasterboard partitions.

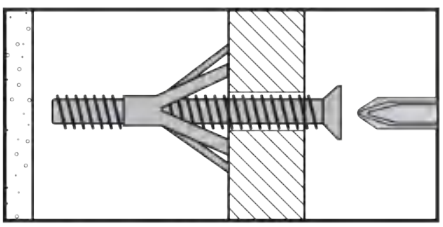


3. Cavity Fixing Wall Plug
For use with plasterboard partitions or hollow wooden doors.

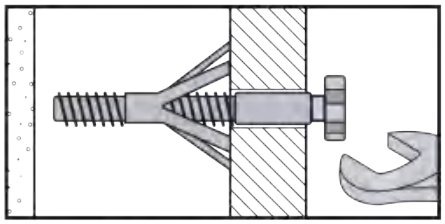

4. Cavity Fixing Heavy Duty Wall Plug
For use when fitting or supporting heavy loads such as shelving and wall cabinets.

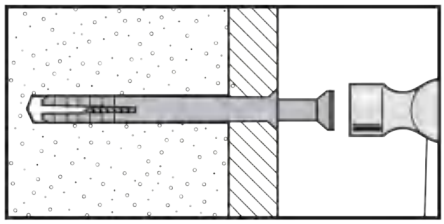

5. Hammer Fixing Wall Plug
For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

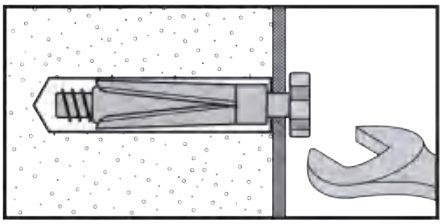

6. Shield Anchor Wall Plug Heavy Loads
For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.

PRODUCT WARRANTY INSTRUCTION

Free Warranty Period:

The free warranty period starts from the product receipt date andasts one year.

Coverage during the Free Warranty Period:

1. If any components of the purchased product are damaged dueto non-human-induced reasons natural wear and tear excludedcorresponding new parts will be replaced free of charge.

2.If the entire purchased product is damaged due to non-human-induced reasons natural wear and tear excluded and cannot befurther used, corresponding parts or a brand-new product will bereplaced free of charge.

Coverage after the Free Warranty Period:


After the warranty period expires, replacement components will beprovided to customers at cost price for continued service.

Additional Services:

After purchasing the product, customers can consult our staff for anyproduct-related inguiries.

Contact Email : Service@cozfurn.com

ACCESSORIES DISPLAY

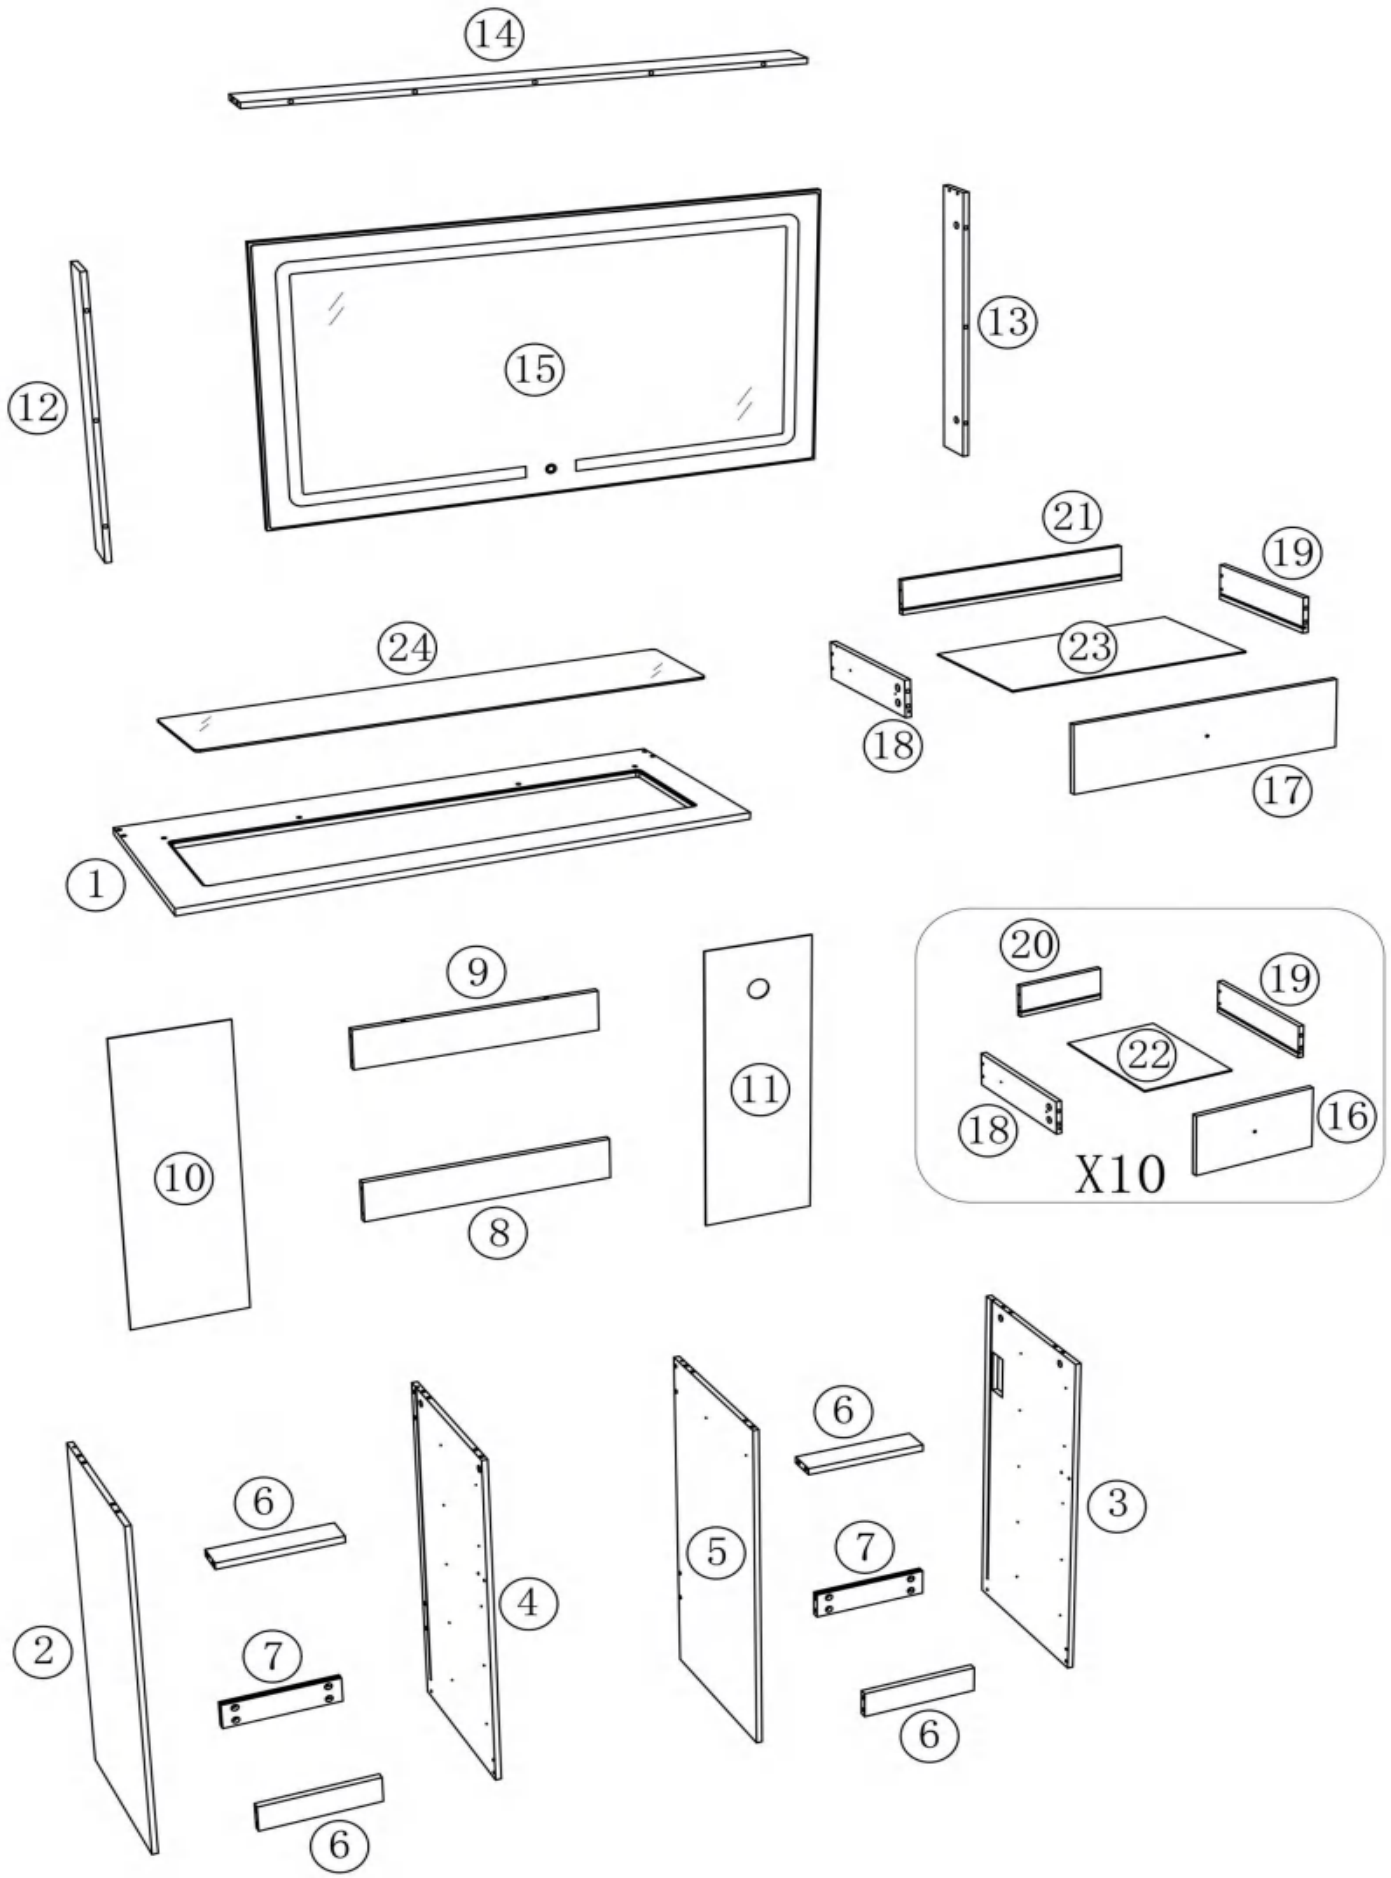

ACCESSORIES DISPLAY

A X89



B X26



ϕ15X12

C X63



ϕ15X10

D X11




E X11



M4X16

F X46




M4X40

G X2



M4X14

H X16



M6X40

I X1



J X1




K X1



L X8



M X2

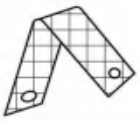

N X2



O X12



M3X14


P X89



Q X12



R X12



M8X40

S X92



M3. 5X12

T X1





U X22




PRODUCT ASSEMBLY

STEP1

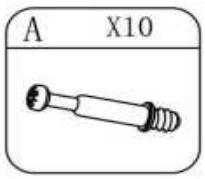

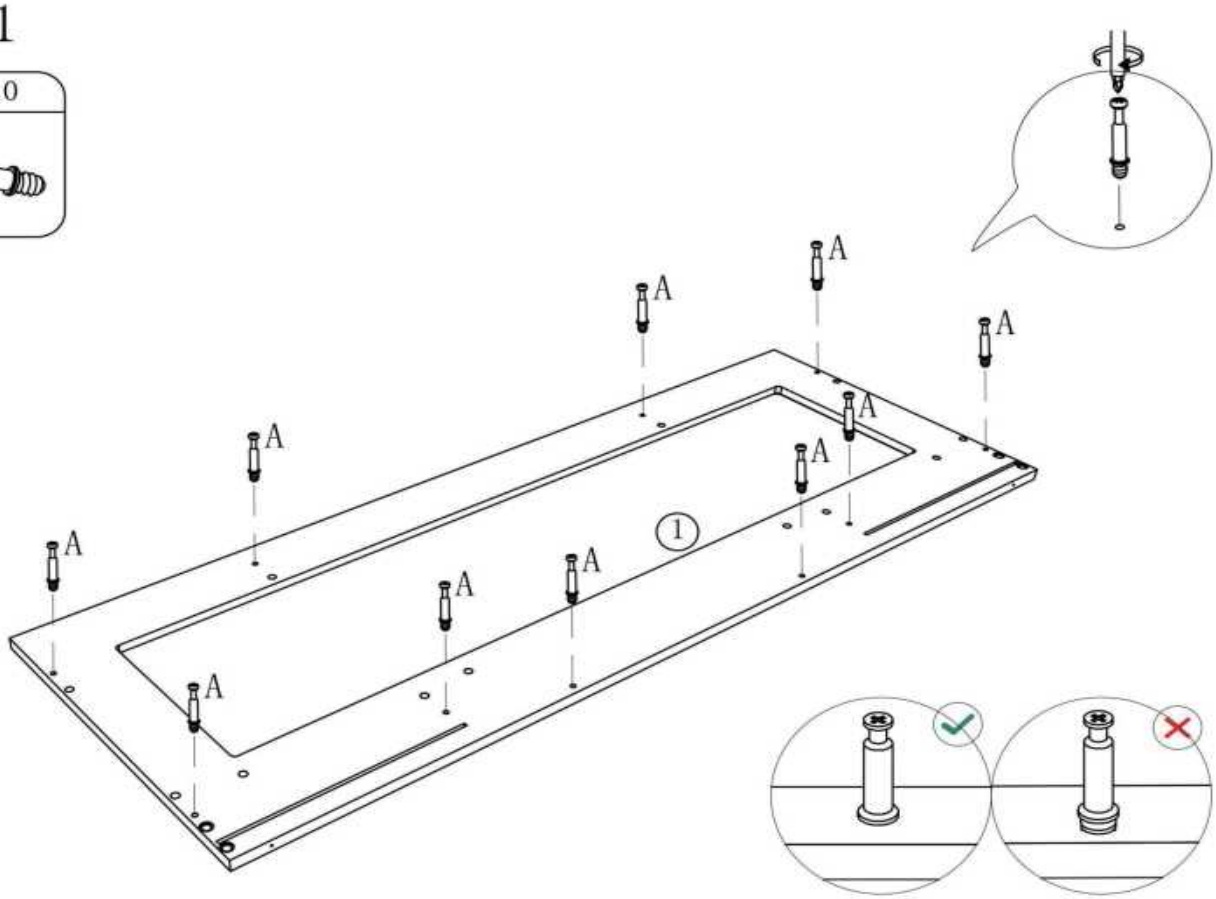



STEP2

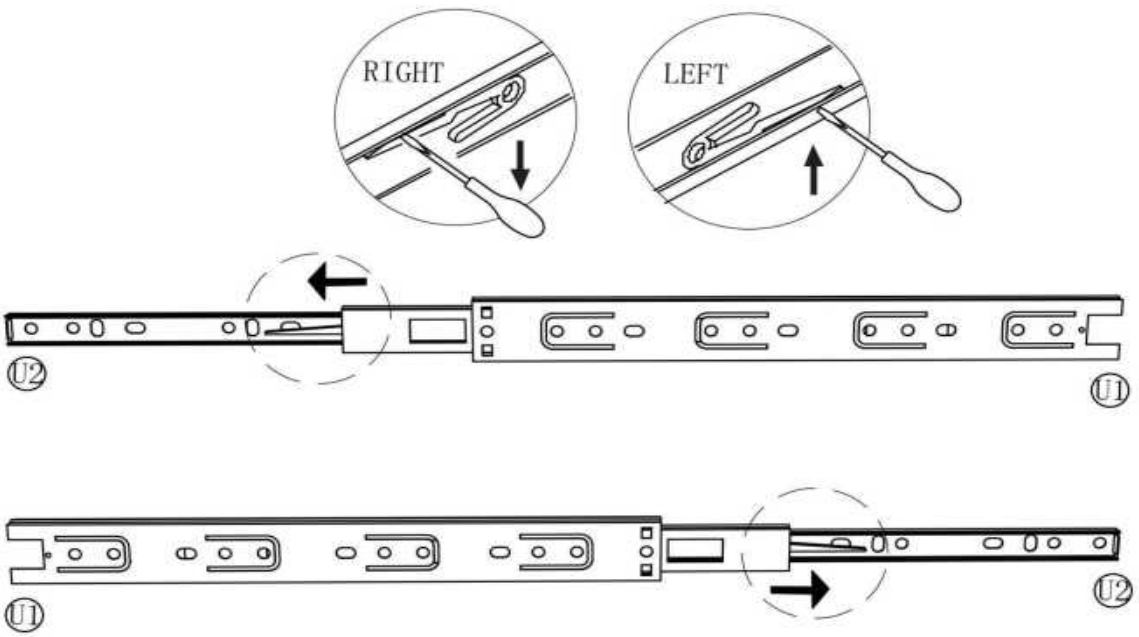


PRODUCT ASSEMBLY


STEP3

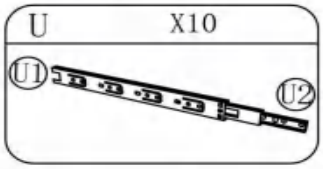


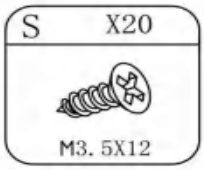

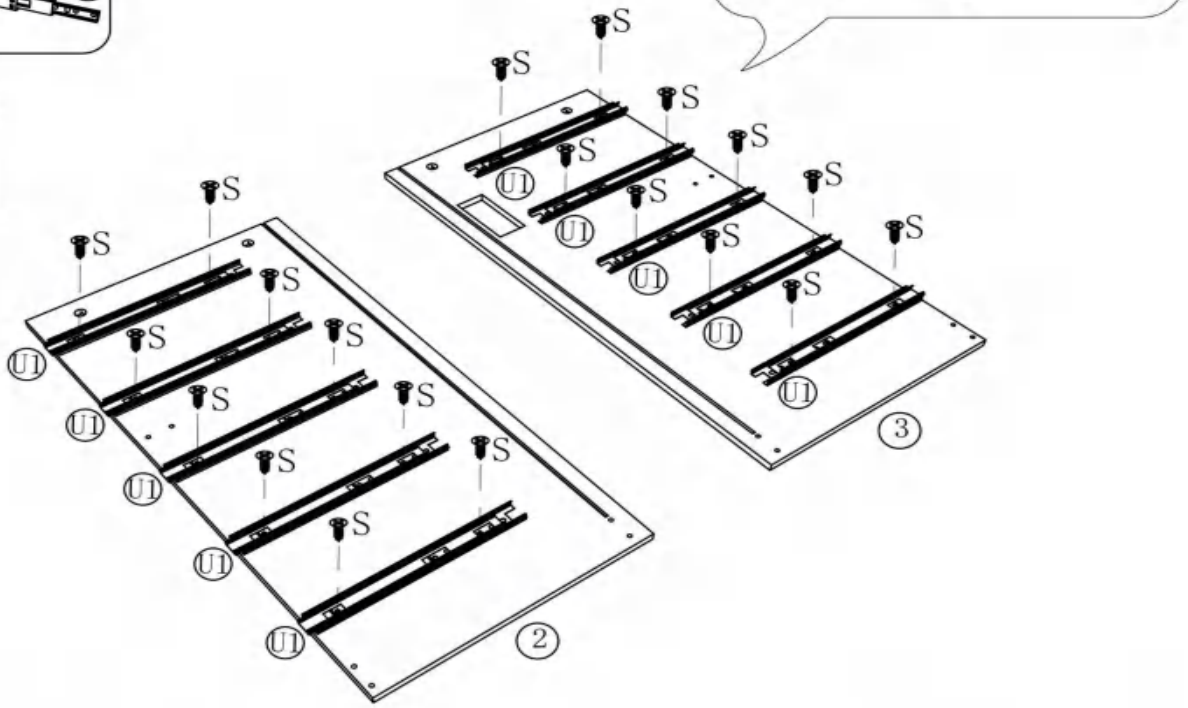

STEP4

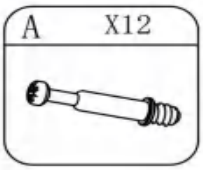


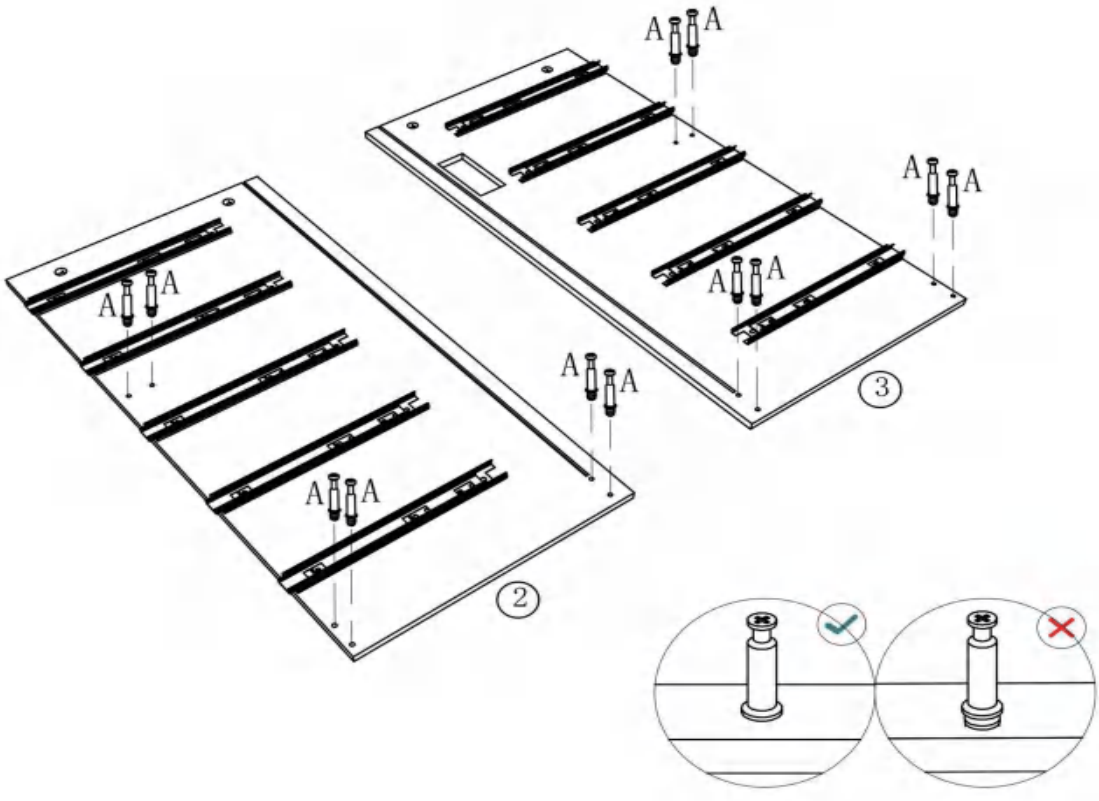


Email:Service@cozfurn.com

PRODUCT ASSEMBLY

STEP5

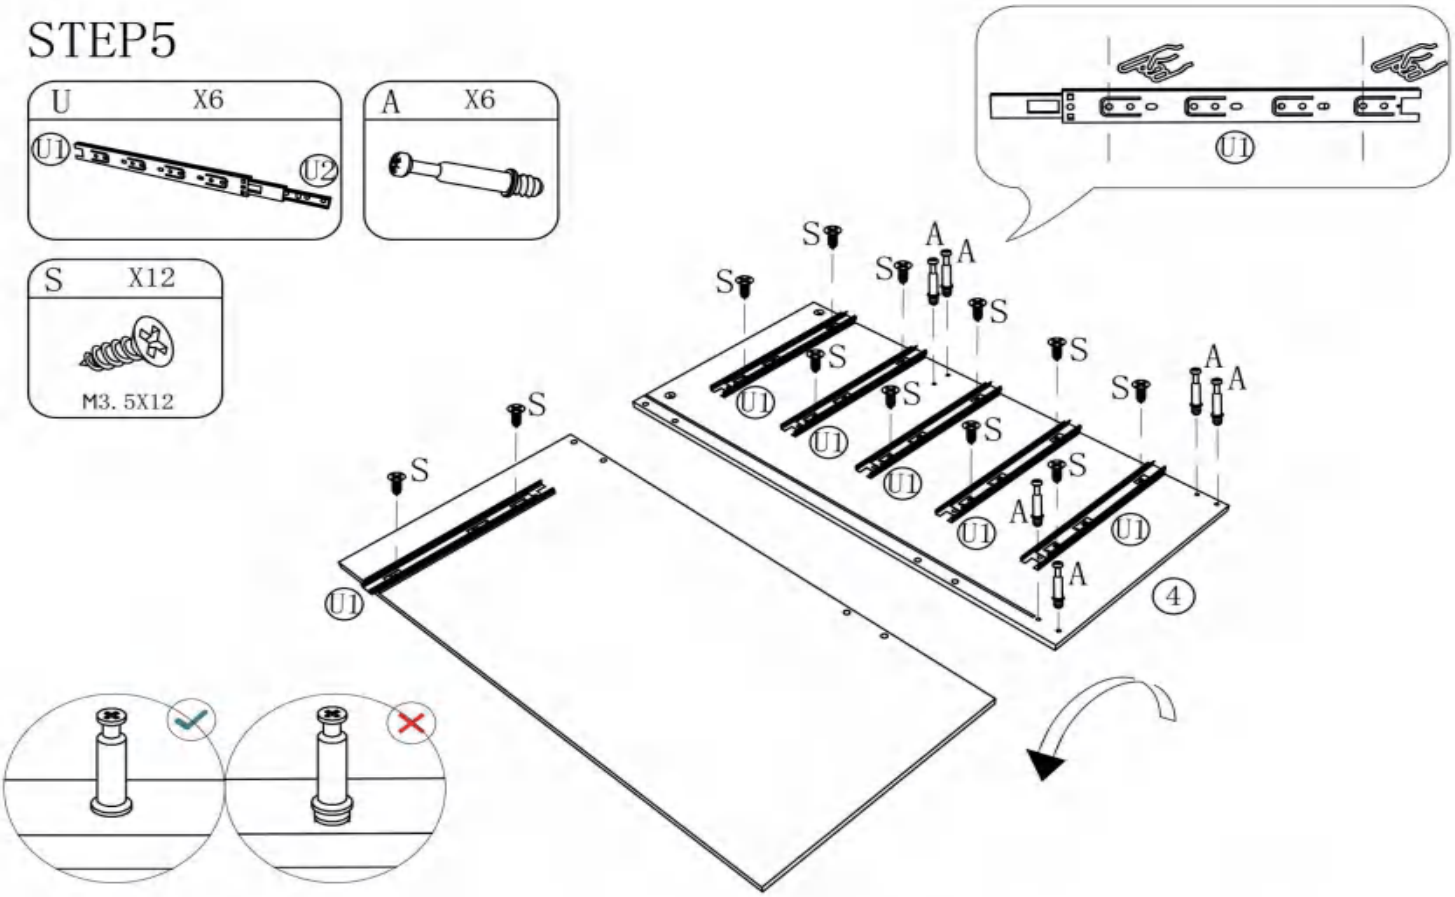


STEP6

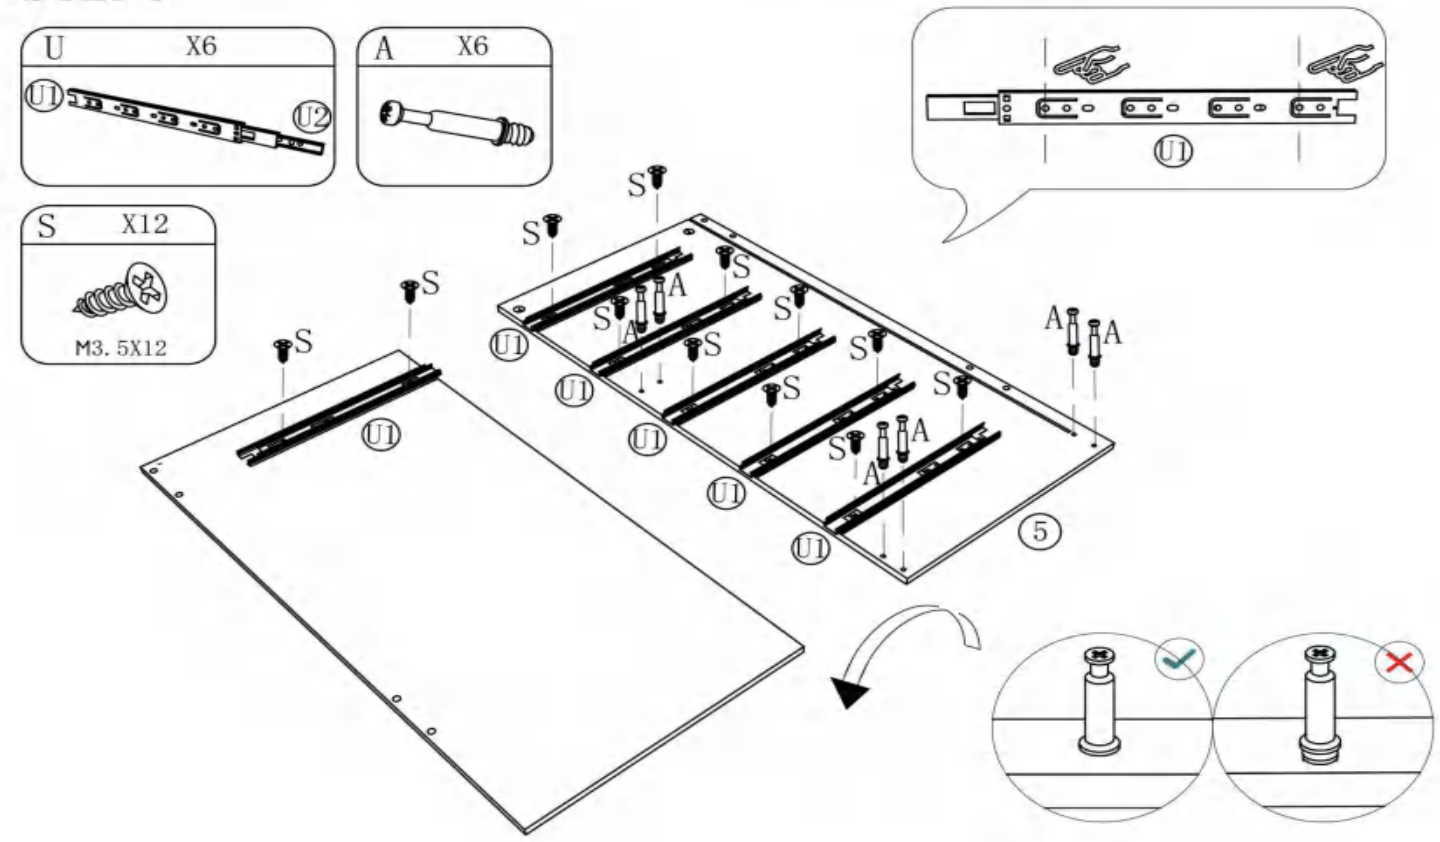



Email:Service@cozfurn.com

PRODUCT ASSEMBLY


STEP7

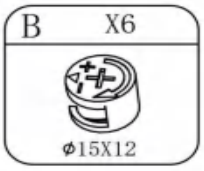


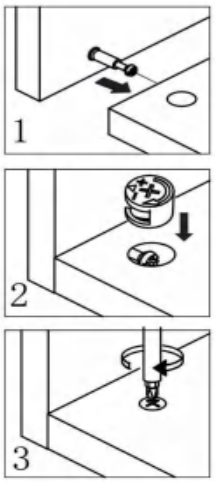


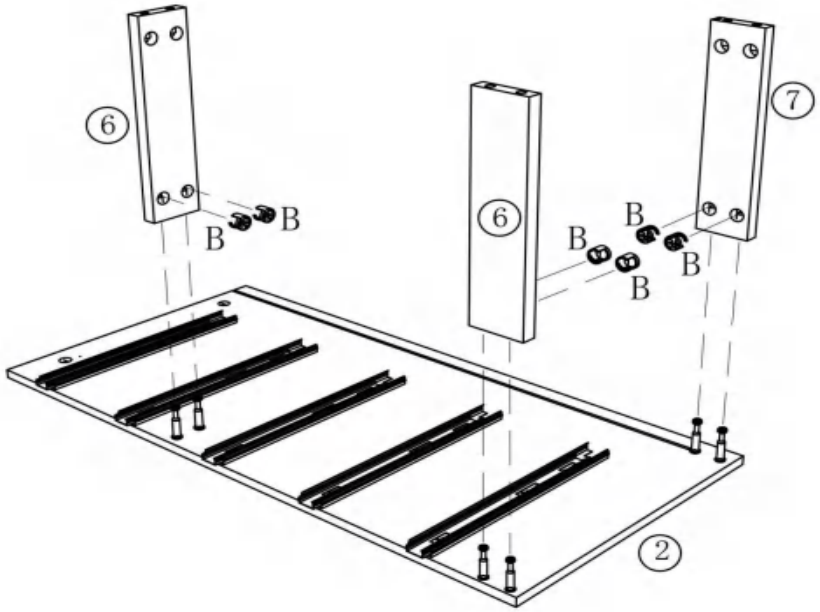

STEP8

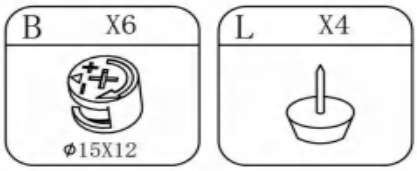

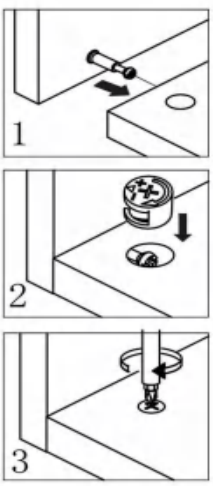


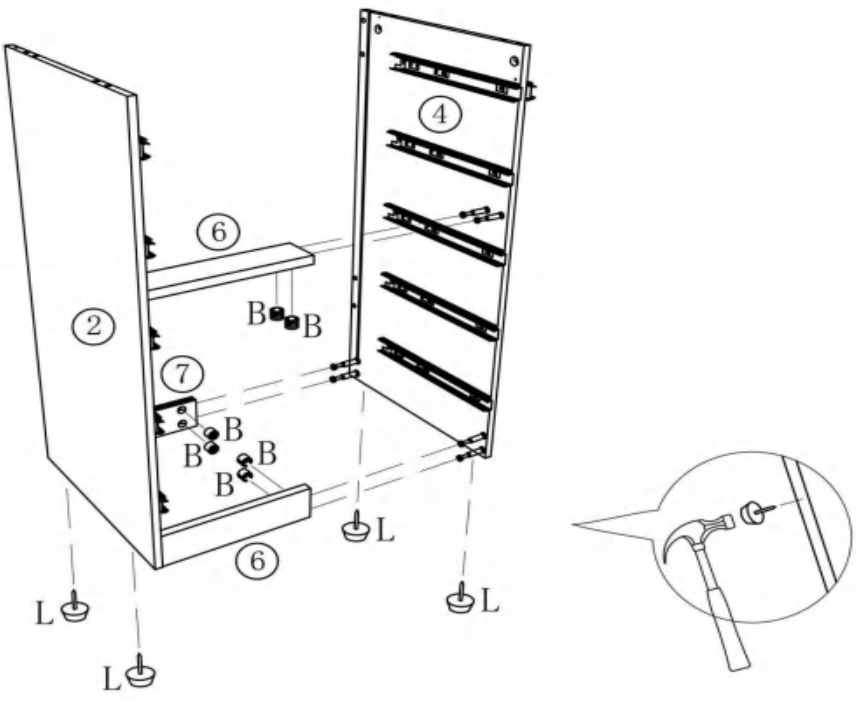



Email:Service@cozfurn.com

PRODUCT ASSEMBLY


STEP9

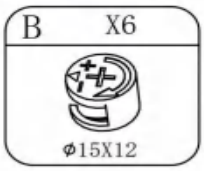


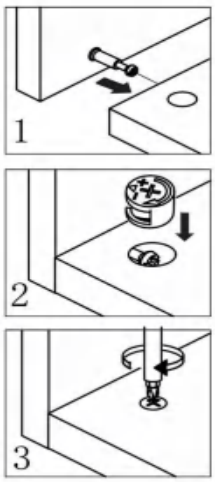


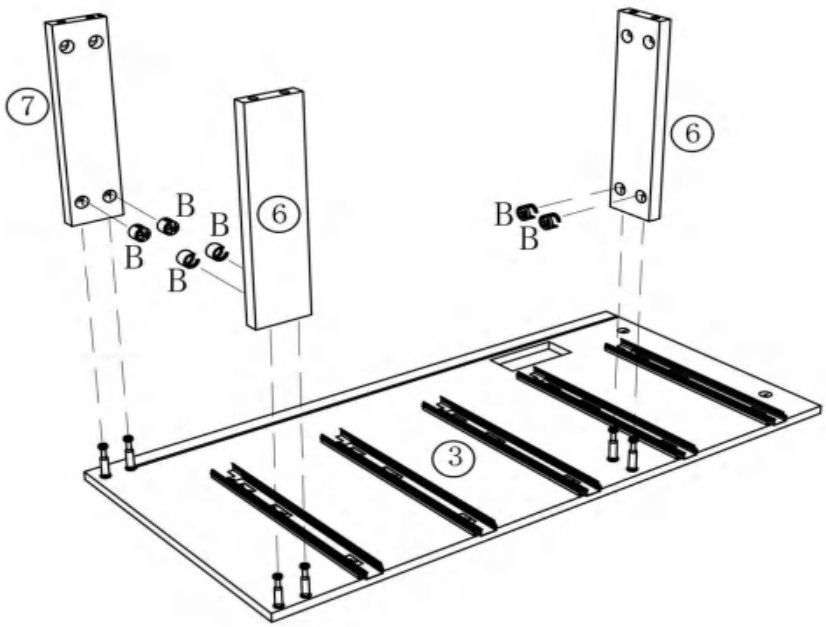


STEP10

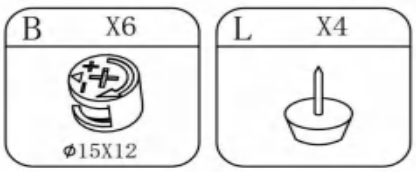

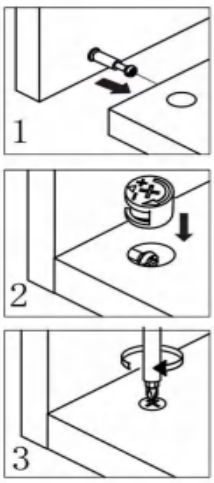

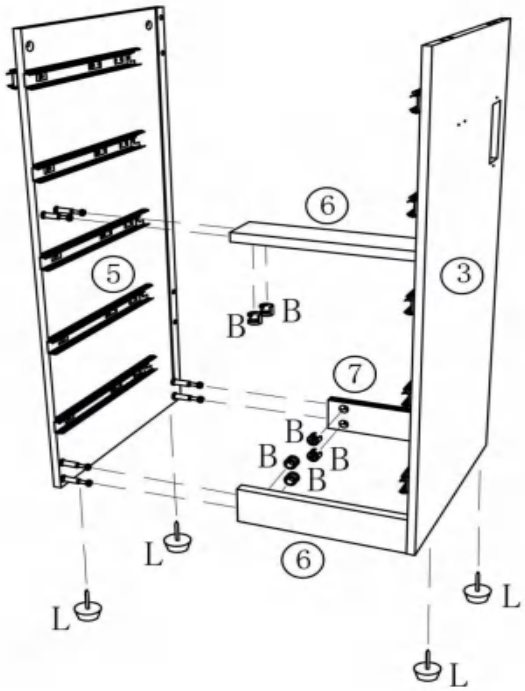


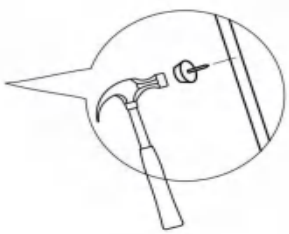


Email:Service@cozfurn.com


PRODUCT ASSEMBLY


STEP11

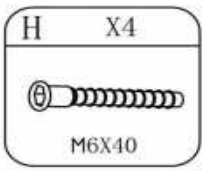

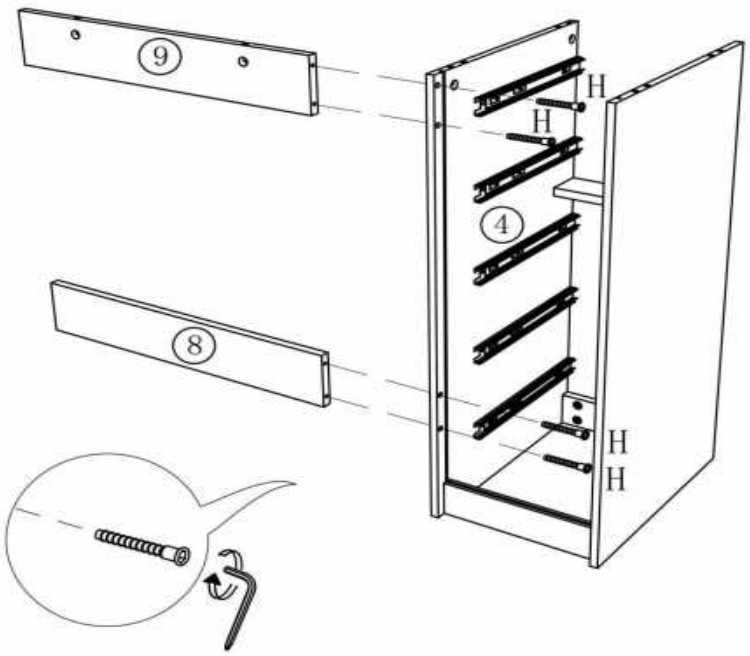


STEP12

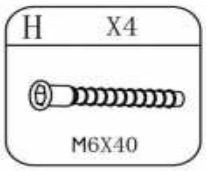

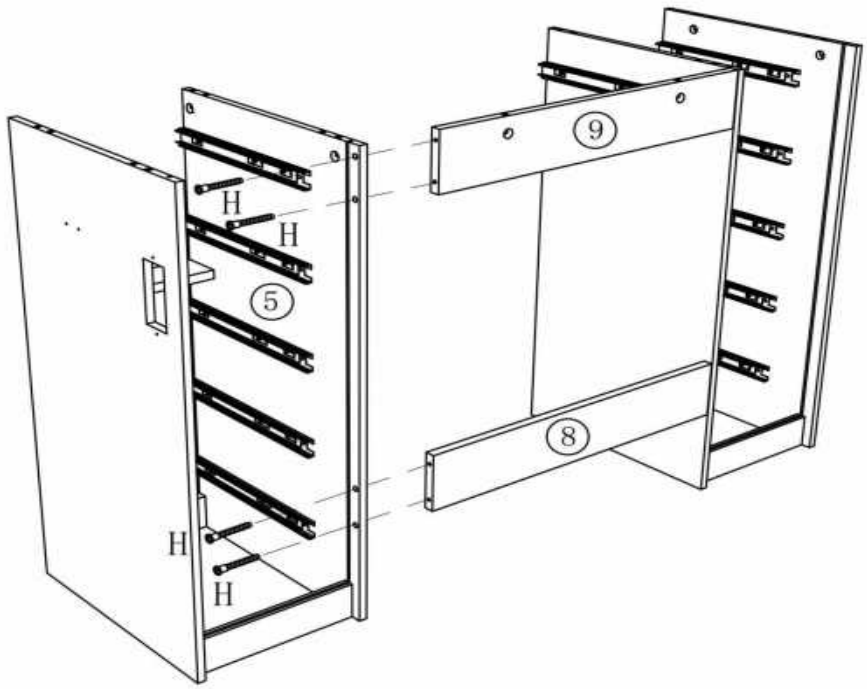



Email:Service@cozfurn.com


STEP13

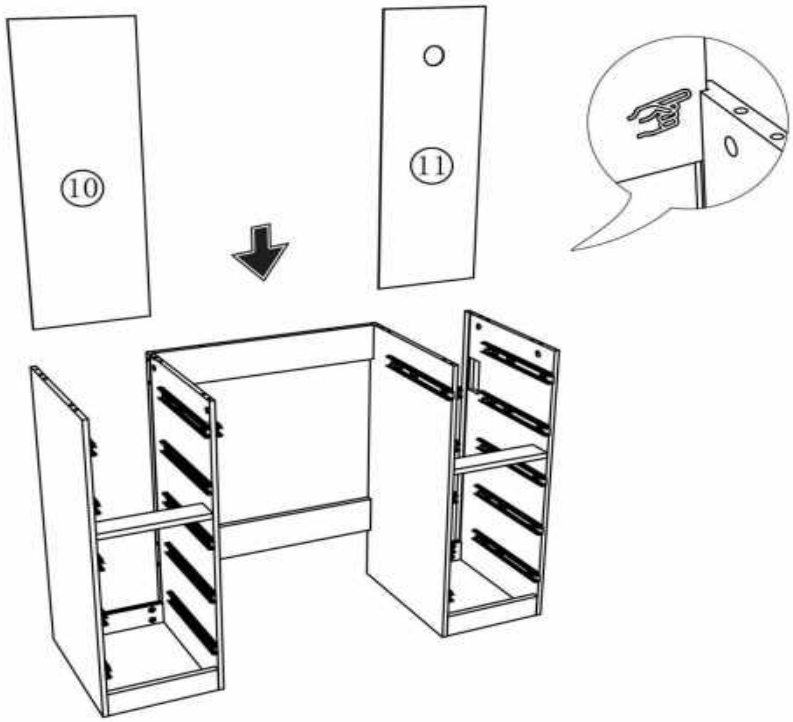

STEP14

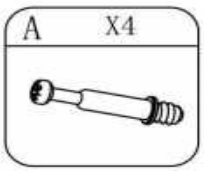


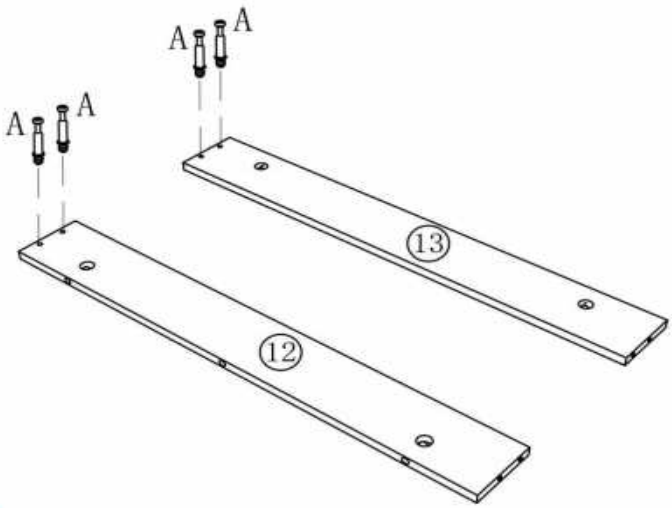


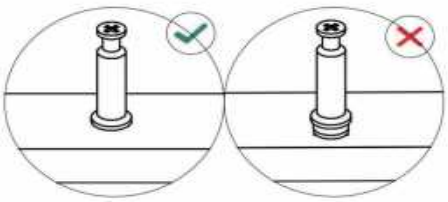


Email:Service@cozfurn.com


STEP15

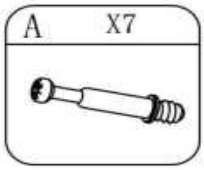


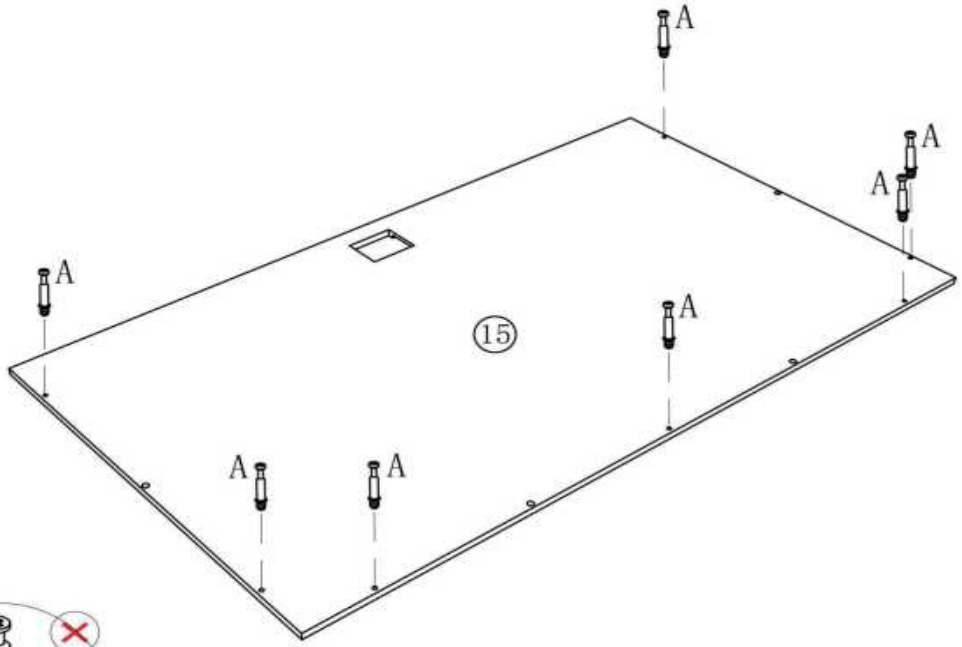


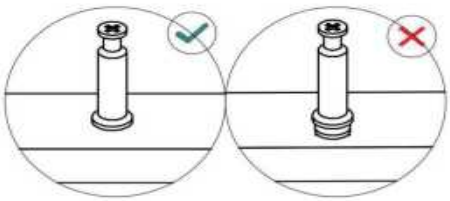



STEP16

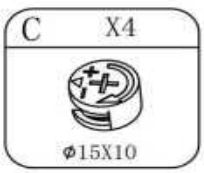

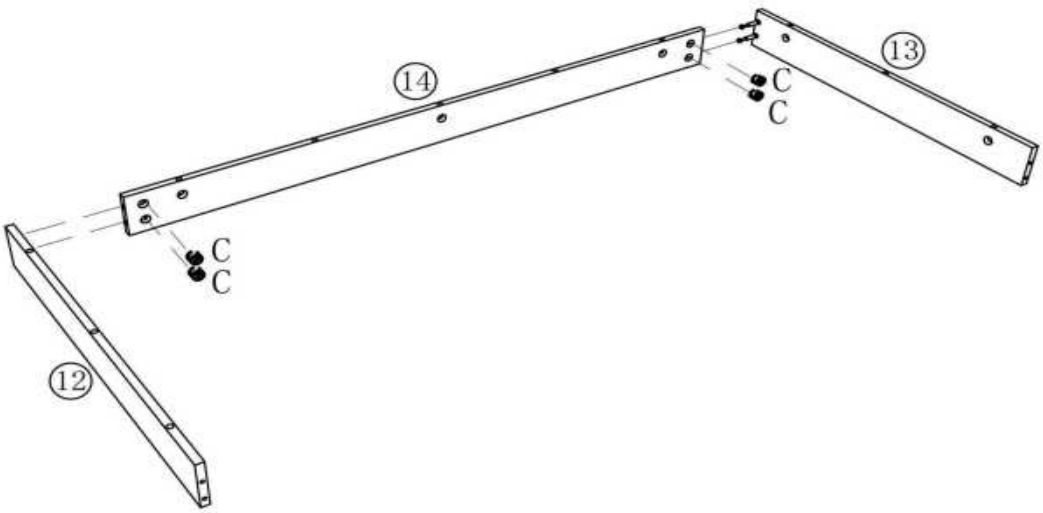

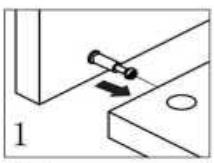


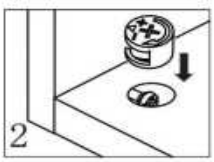


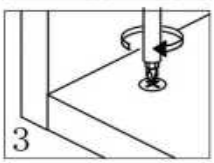


Email:Service@cozfurn.com


STEP17

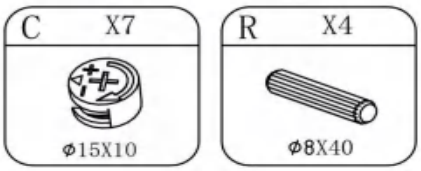


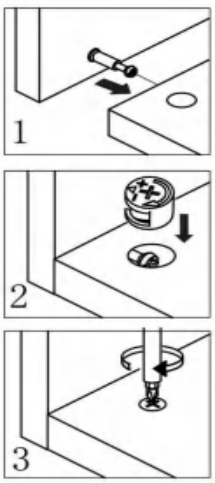

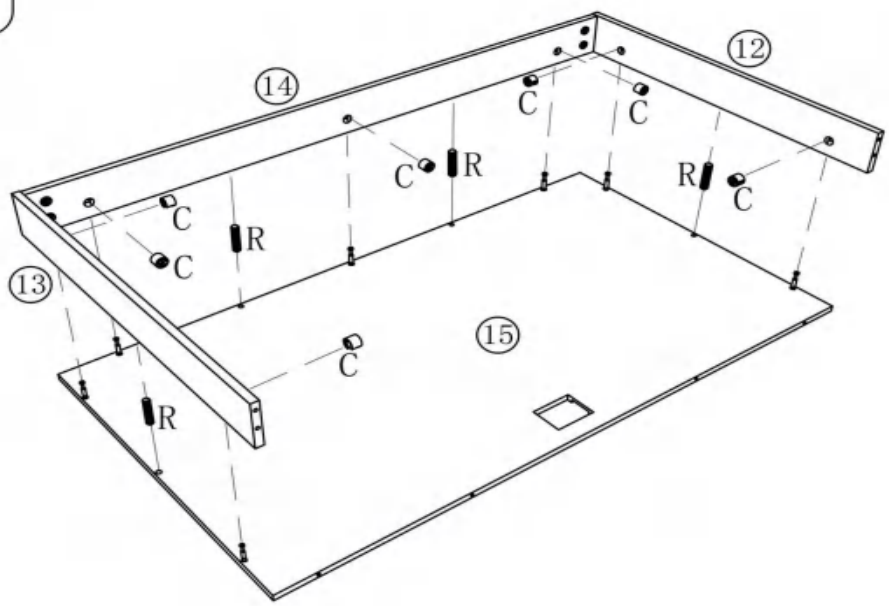


STEP18

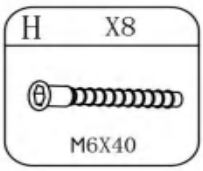


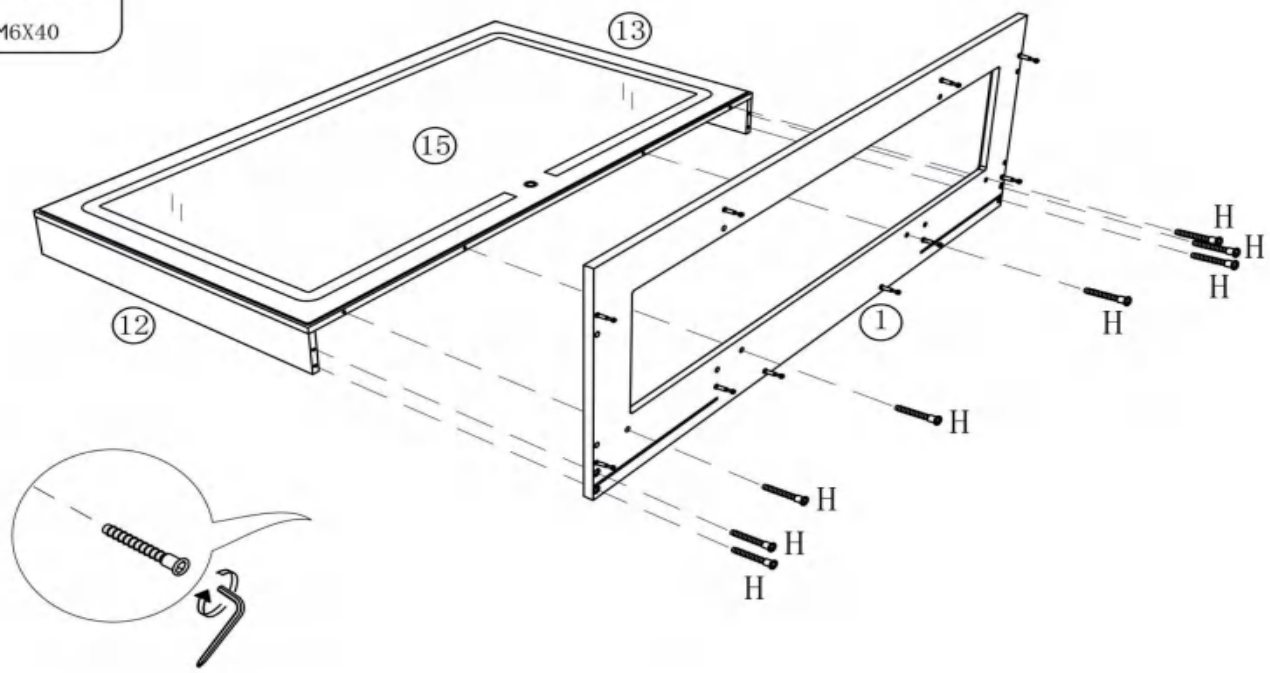



Email:Service@cozfurn.com


STEP19

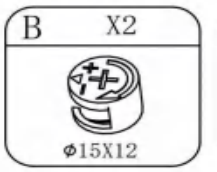

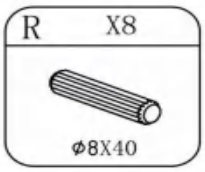


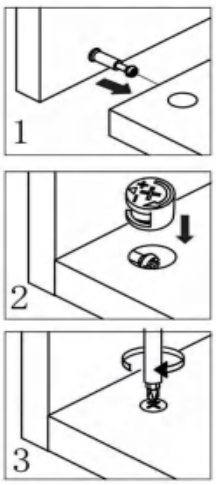


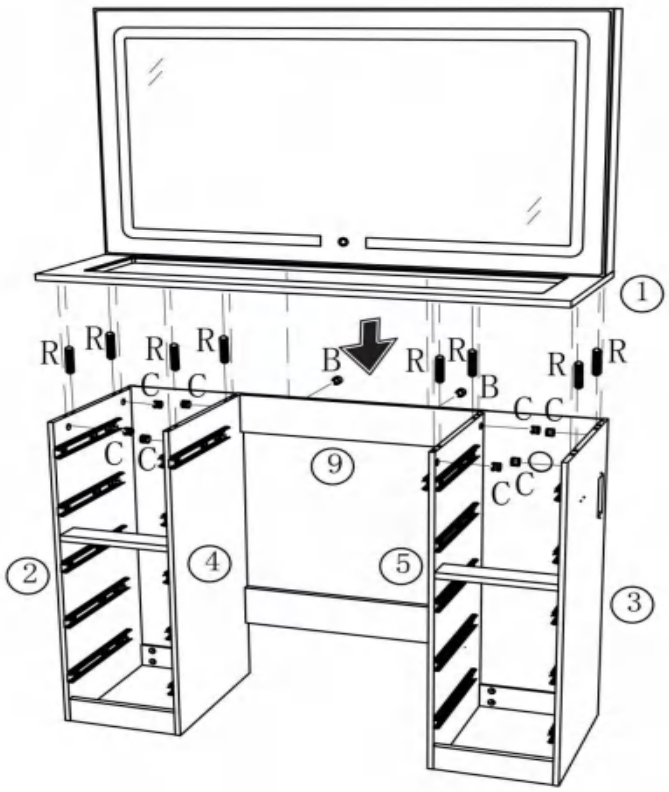


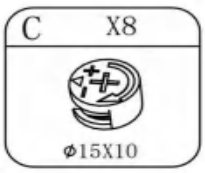


STEP20

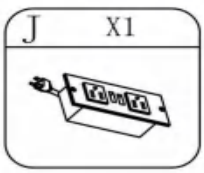

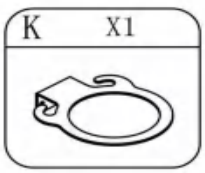


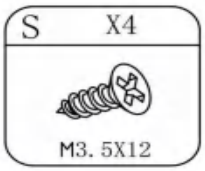


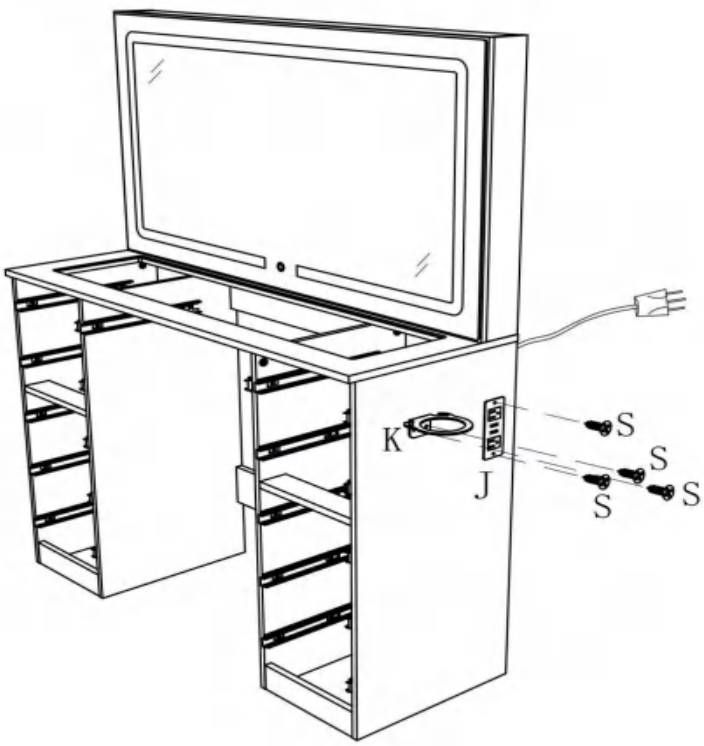


Email:Service@cozfurn.com


STEP21

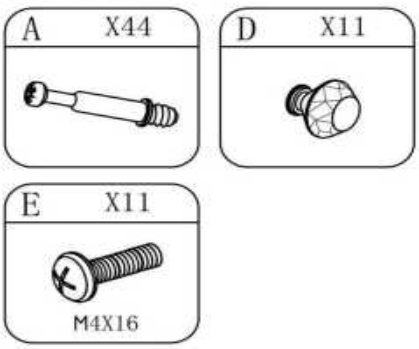


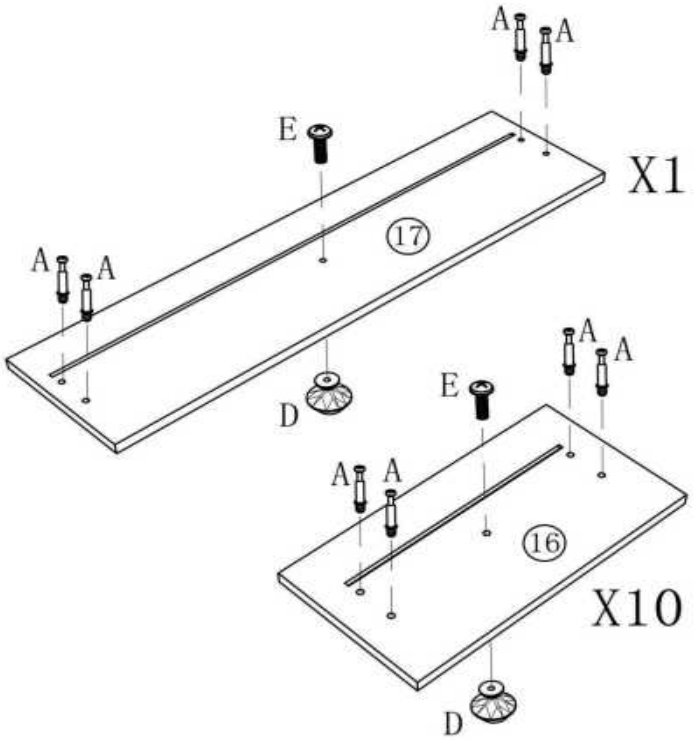


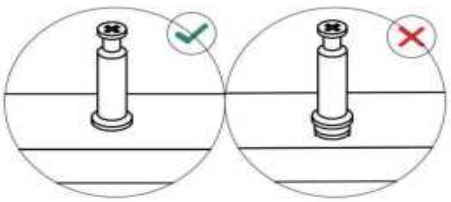

STEP22

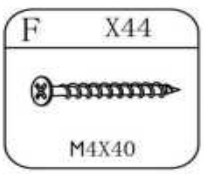


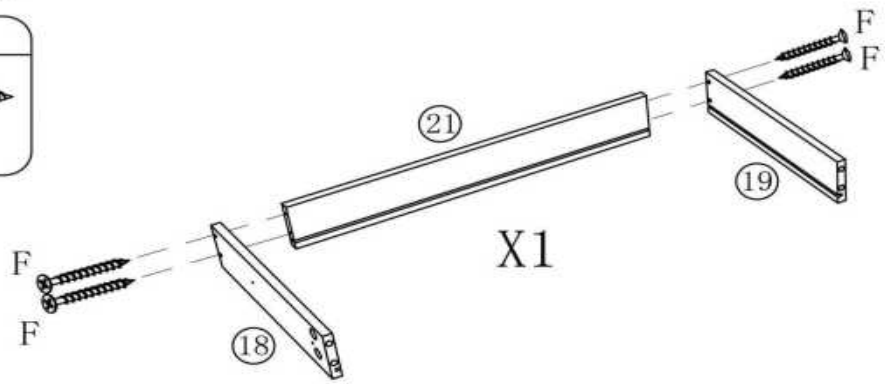


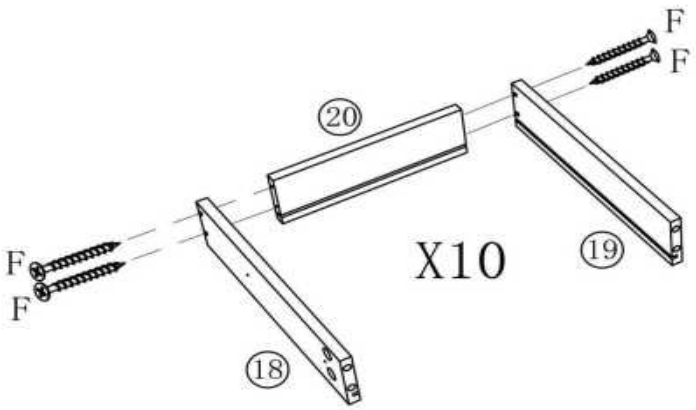



Email:Service@cozfurn.com

STEP23

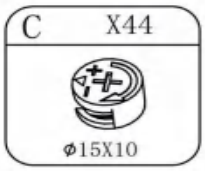

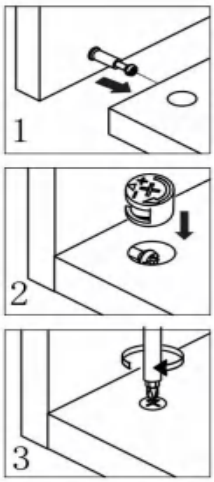


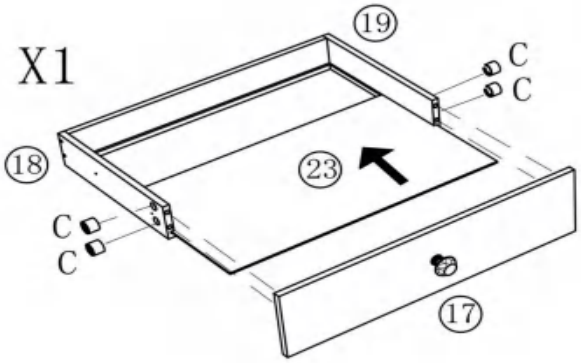


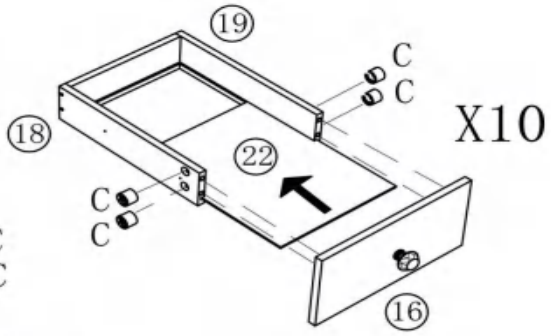


STEP24



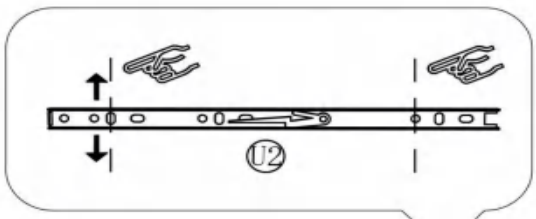


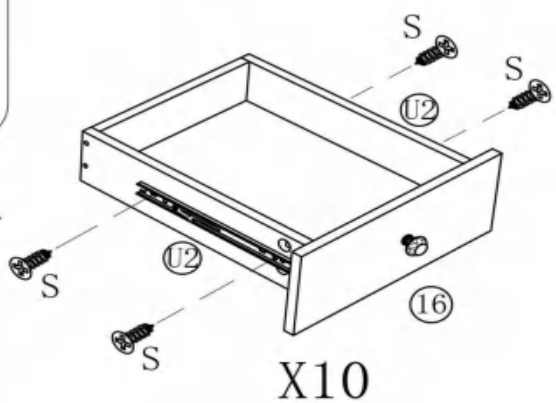


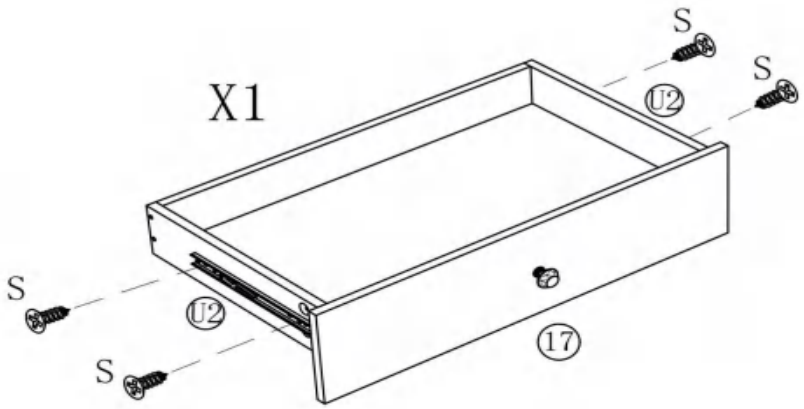

Email:Service@cozfurn.com


STEP25

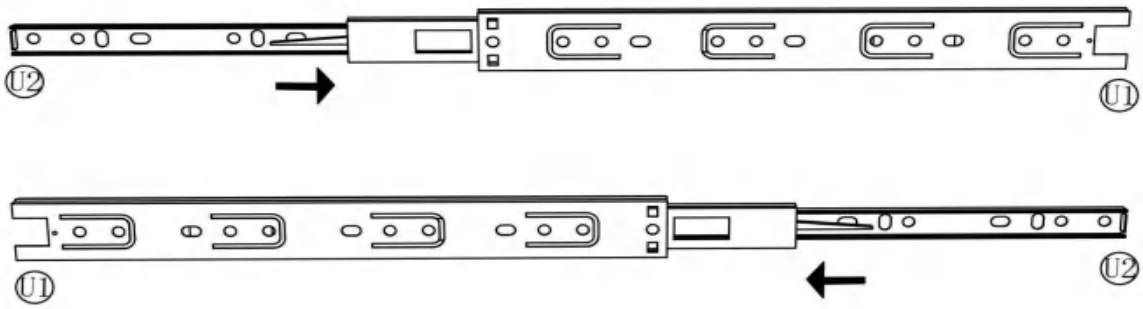


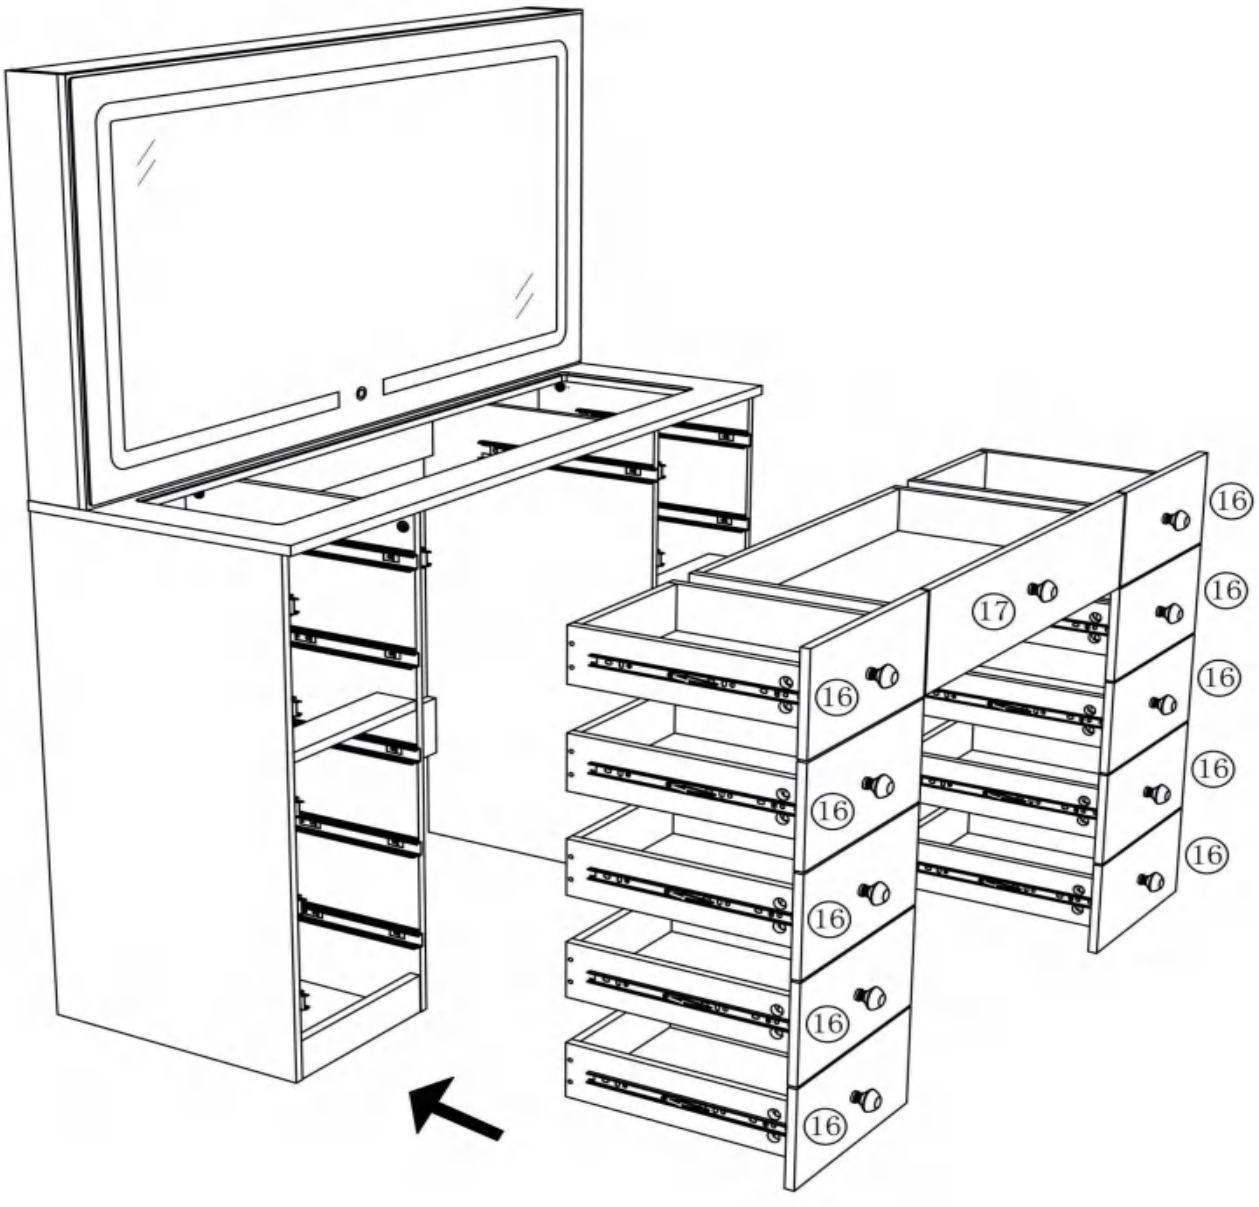


Email:Service@cozfurn.com


STEP26

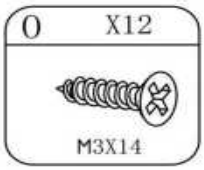


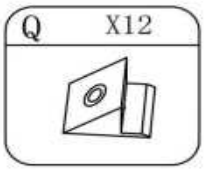

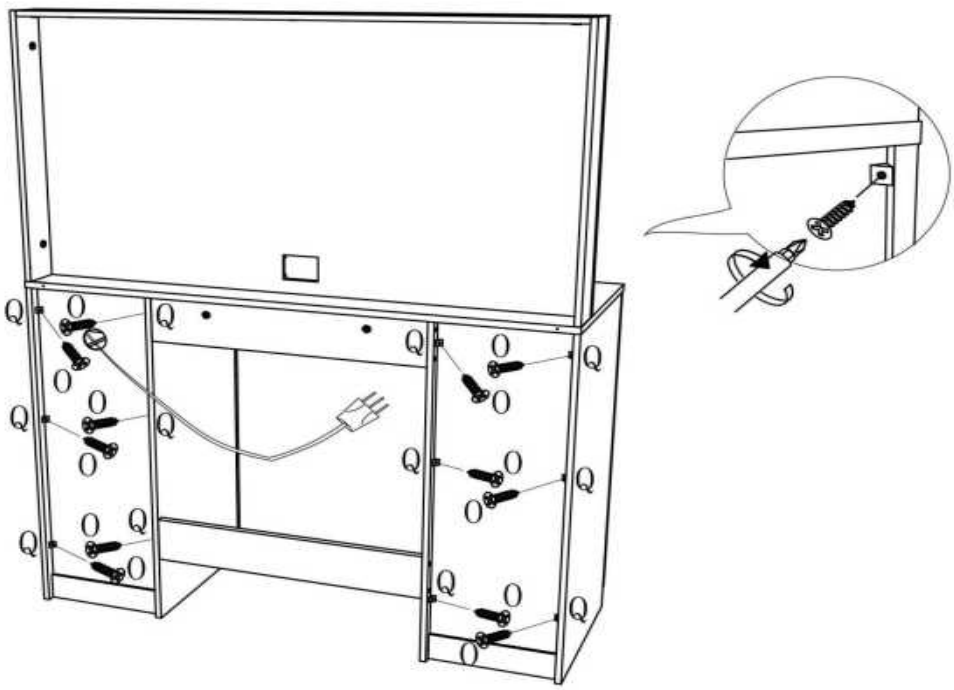


STEP27

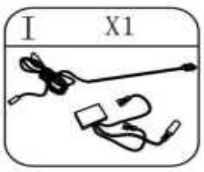

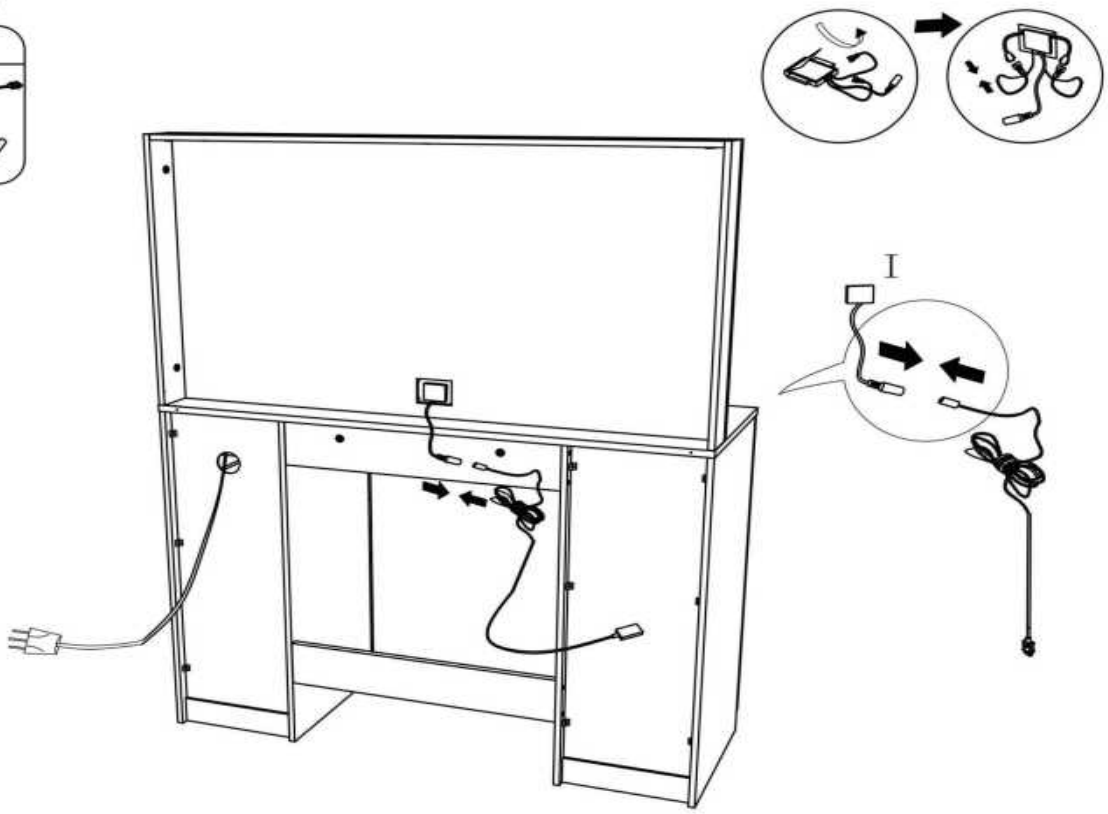



Email:Service@cozfurn.com

STEP28

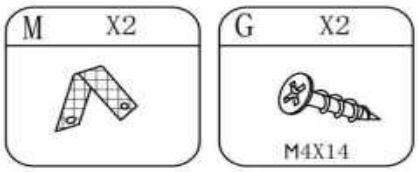


STEP29

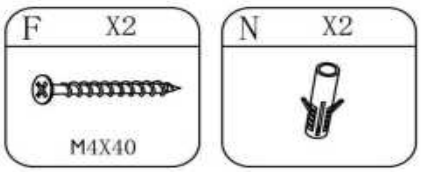

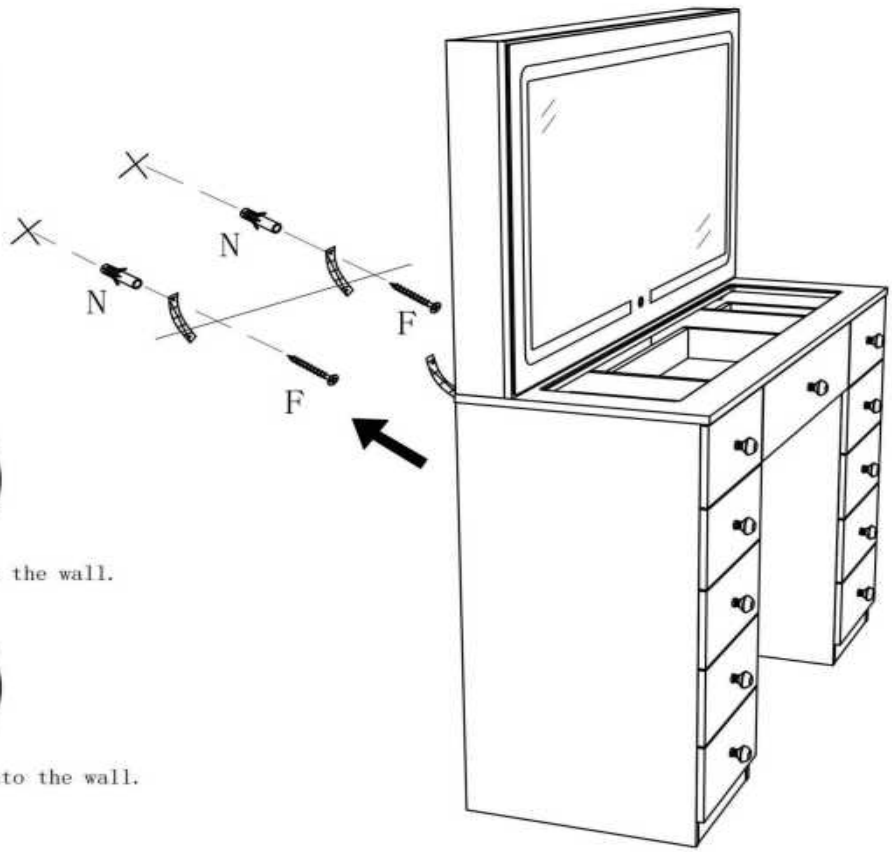





1,Mark on the wall.

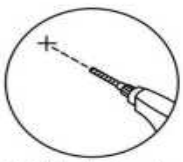

2,Drill holes in the wall.

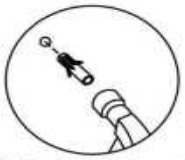


3,Push in the plastic plug.

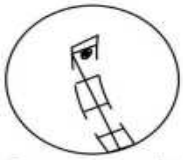


4,Long screws into the wall.


Email:Service@cozfurn.com

STEP30

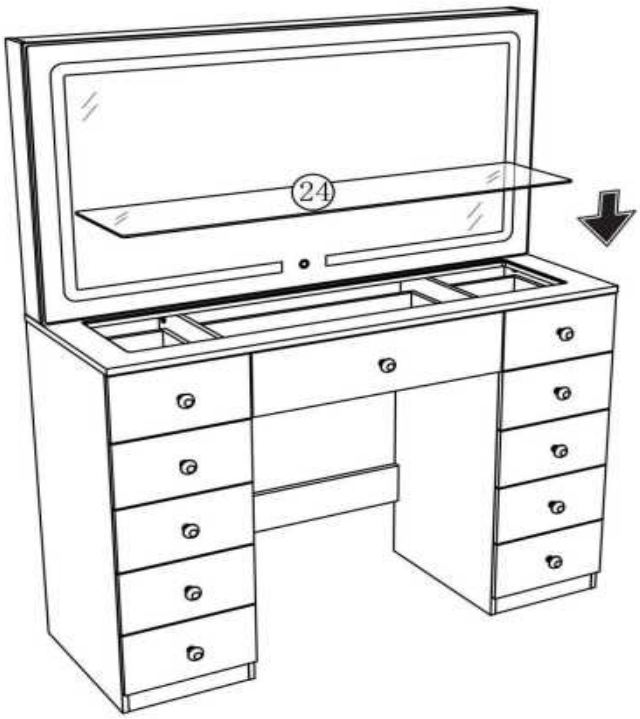

STEP31

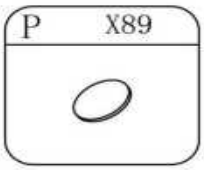

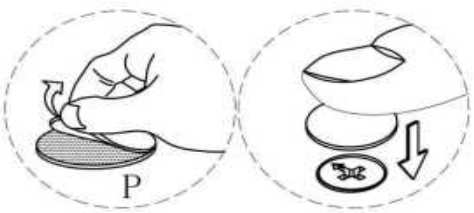

In order to make the product more beautiful ,please paste hardware P on the exposed holes.



Email:Service@cozfurn.com