




Assmebly Instruction

A*1		E*5+1EXT	 M6*40MM
B*1		F*4+1EXT	 M6*25MM
C*1		H*9+1EXT	 M6*18*1.5MM
D*1		I*9+1EXT	
		G*1	 M6


STEP 1

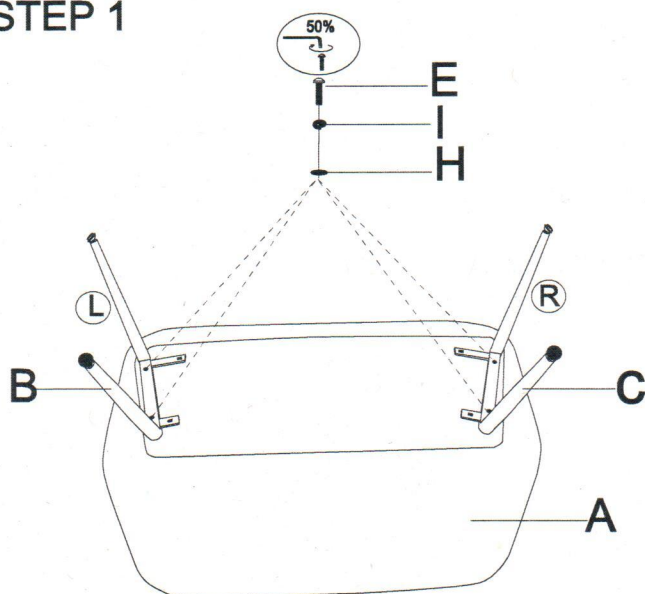

STEP 2

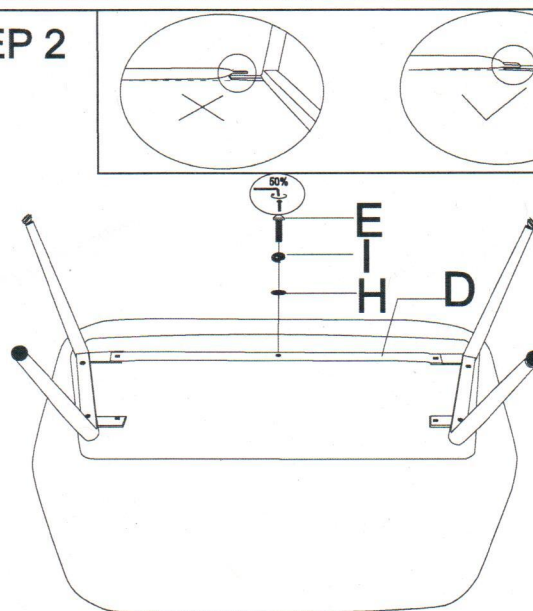

STEP 3

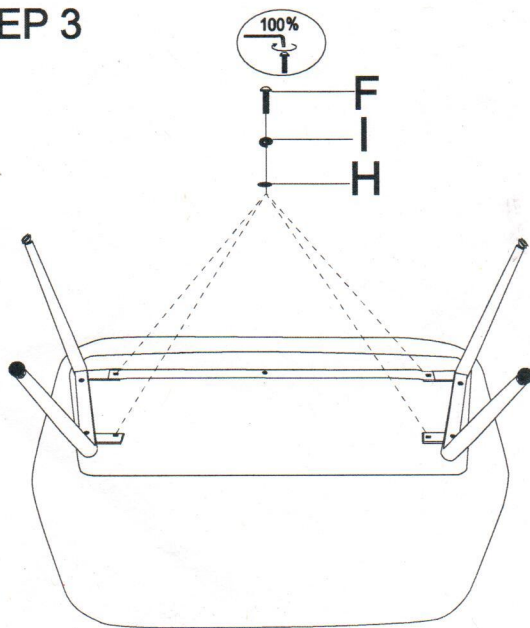

STEP 4



NOTE : step1 and step2 screw up to 50%. Step3 screw up and tighten all the screws . if the foot