
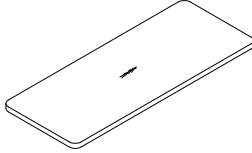
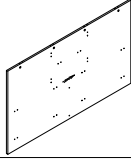
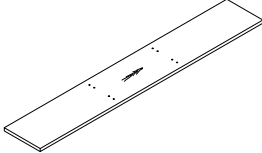
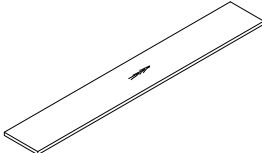




# ASSEMBLY INSTRUCTION FOR ACME FURNITURE

## MODEL# DN01935 COUNTER HEIGHT TABLE


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Separate, identify, and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of the part(s) needed.

**\*\*\* Do not fully tighten screws until fully assembled \*\*\***

| COMPONENT PARTS |                                                                                                           |           |
|-----------------|-----------------------------------------------------------------------------------------------------------|-----------|
| DECERPTION      | PART NAME                                                                                                 | Q'TY(PCS) |
| ①               | Leg                     | 2pcs      |
| ②               | Table top               | 1pc       |
| ③               | Back upright board     | 1pc       |
| ④               | Middle horizon board  | 1pc       |
| ⑤               | Down horizon board    | 1pc       |
| ⑥               | Middle upright board   | 2pcs      |
| ⑦               | Middle board          | 1pc       |
| ⑧               | Triangle board         | 2pcs      |
| ⑨               | Cup holder            | 1pc       |

## HARDWARE REQUIRED:

|                                                                                         |                           |
|-----------------------------------------------------------------------------------------|---------------------------|
| (A)    | Bolt 1/4"x5/8" - 4pcs     |
| (B)    | Bolt 1/4"x1-1/8" - 4pcs   |
| (C)    | Bolt 1/4"x2-1/2" - 4pcs   |
| (D)    | Washer Ø25xØ6x2.0 - 4pcs  |
| (E)    | Set Screw Ø6x30 - 30pcs   |
| (F)    | Cam Bolt M6x40 - 30pcs    |
| (G)    | Cam Lock Ø14.5x11 - 30pcs |
| (H)    | Cam Bolt M6x24 - 6pcs     |
| (I)    | Cam Lock Ø12x10.5 - 6pcs  |
| (J)   | Allen Wrench M4 - 1pc     |
| (K)  | Bolt 1/4"x1-3/8" - 4pcs   |

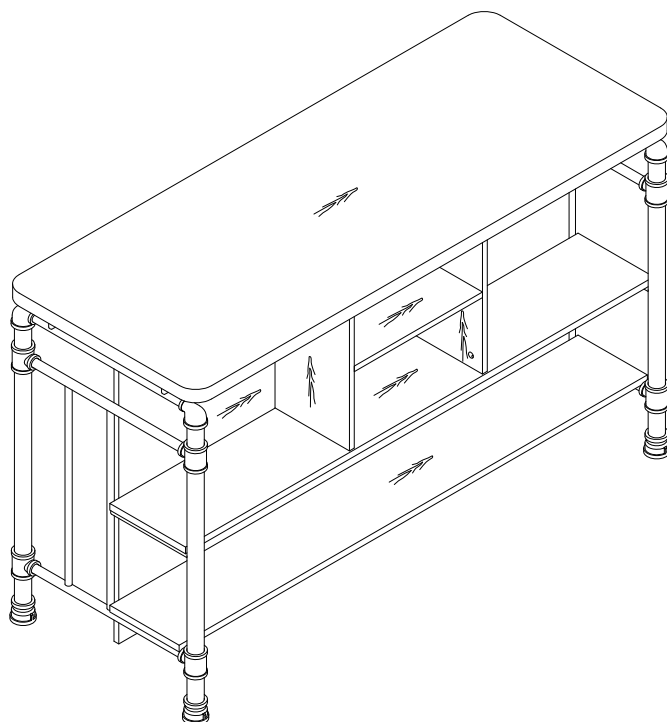

### Attention:


\*\*\*Mattresses not included.

\*\*\*Some number parts listed on the instruction sheet may not be in parts bag as they may already be assemble.  
Carefully check parts and packing materials prior to ordering replacements.


How to Assemble:

STEP 1.

Exploded View

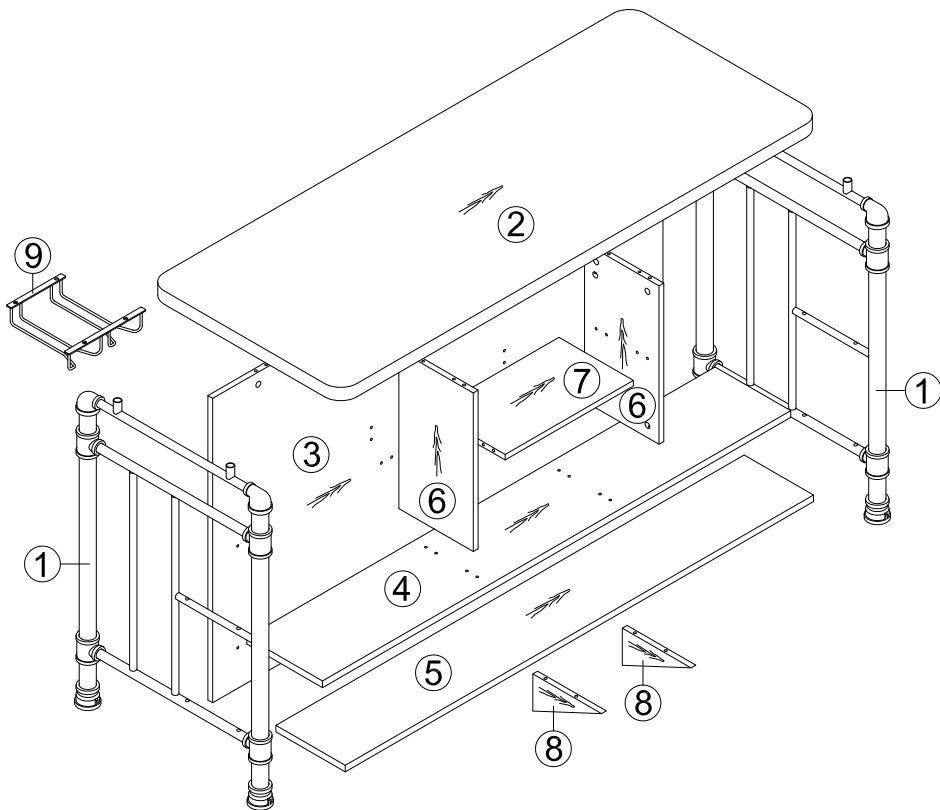


STEP 2.

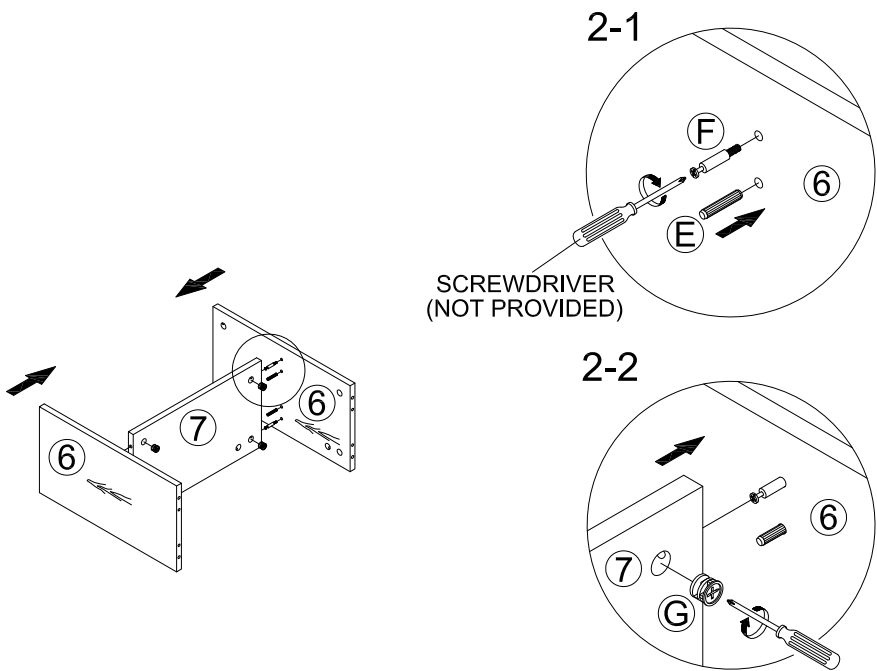


|   |  |      |
|---|--|------|
| E |  | 4pcs |
| F |  | 4pcs |
| G |  | 4pcs |

How to Assemble:

STEP 3.

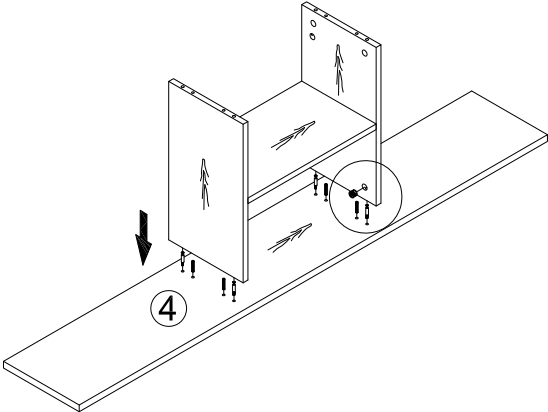


3-1

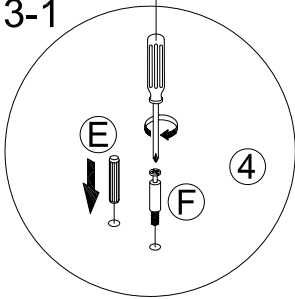


SCREWDRIVER  
(NOT PROVIDED)

3-2

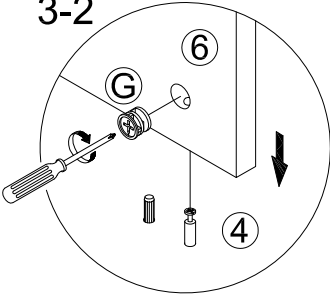


|   |                                                                                       |      |
|---|---------------------------------------------------------------------------------------|------|
| E |    | 4pcs |
| F |  | 4pcs |
| G |  | 4pcs |

STEP 4.

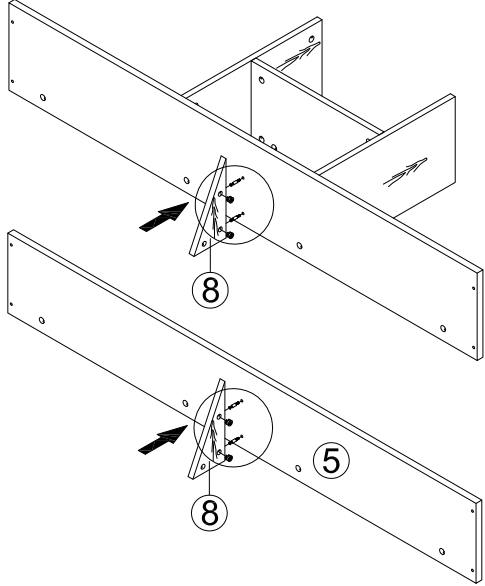


4-1

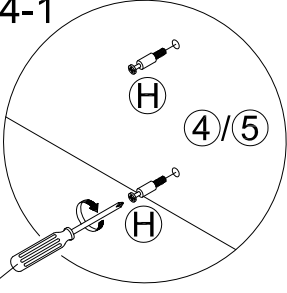

SCREWDRIVER  
(NOT PROVIDED)

4-2

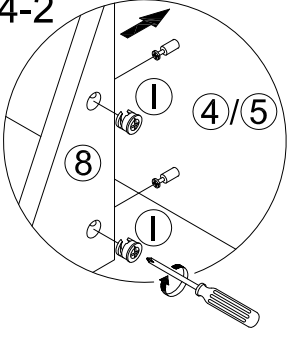

|   |                                                                                       |      |
|---|---------------------------------------------------------------------------------------|------|
| H |  | 4pcs |
| I |  | 4pcs |

How to Assemble:

**STEP 5.**

**5-1** SCREWDRIVER (NOT PROVIDED)  
E F 3

**5-2** G 4 3

**5-3** H 3

**5-4** 8 I 3

|   |  |       |
|---|--|-------|
| E |  | 14pcs |
| F |  | 14pcs |
| G |  | 14pcs |
| H |  | 2pcs  |
| I |  | 2pcs  |

**STEP 6.**


**6-1** 2 F E SCREWDRIVER (NOT PROVIDED)

**6-2** 2 G 3

|   |  |      |
|---|--|------|
| E |  | 8pcs |
| F |  | 8pcs |
| G |  | 8pcs |

How to Assemble:

STEP 7.

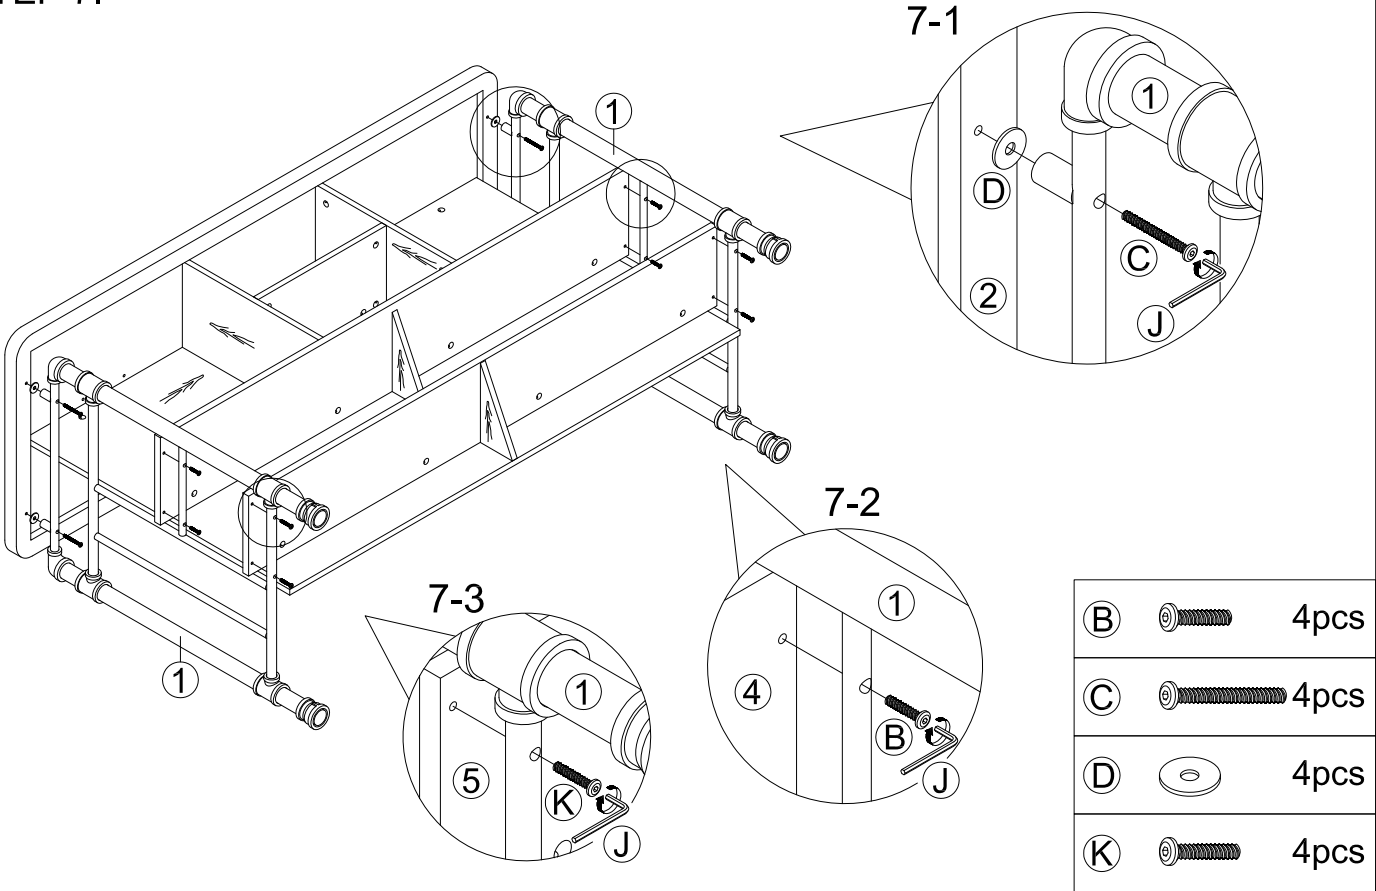

STEP 8.

