

ASSEMBLY INSTRUCTIONS

SKU# 12600

Before beginning

Unpack all parts and hardware to ensure you have all needed components for assembly.

Read this guide cover before beginning assembly.


Assemble this item on a soft surface such as carpet to protect finish.

Proper assembly of this item requires 2 people & 20 minutes to assemble.

CARE INSTRUCTIONS


Wipe with a soft dry cloth. To protect finish, avoid the use of chemicals and household cleaners, Any liquid spilled on the table should be cleaned up immediately with a damp cloth.

TOP

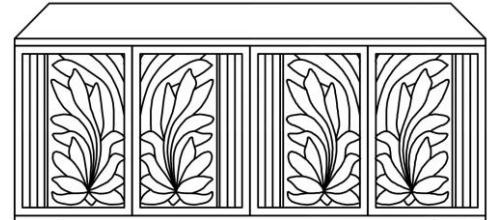


A

LEG

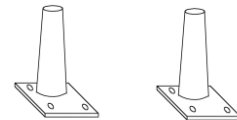

BX4

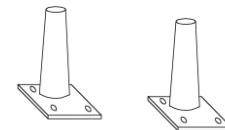

HOW TO ASSEMBLY

STEP-1 Place the sideboard top upside down on rug.




STEP -2 Insert allen bolt (C) with flat washer (D) then tighten with allen key (E). Always match same numeric sticker while fixing legs.

1-1,2-2,3-3,& 4-4


Aero marking should be followed in assembly.

STEP-3. Turn the sideboard upside top. Sideboard is ready to use

Hardware & Tool Required: -


No.	Sketch	Description	Size	Qty.	Ext.
C		Allen bolt	(0.78"x0.31")	16	1
D		Washer	(0.78"x0.31")	16	1
E		Allen key	(0.19")	1	0

STEP-1

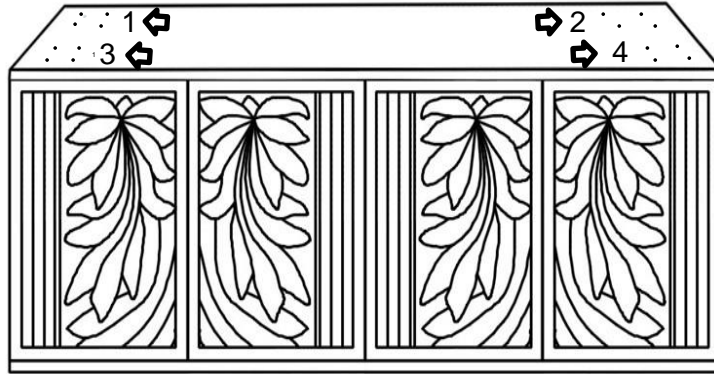


A

STEP-2

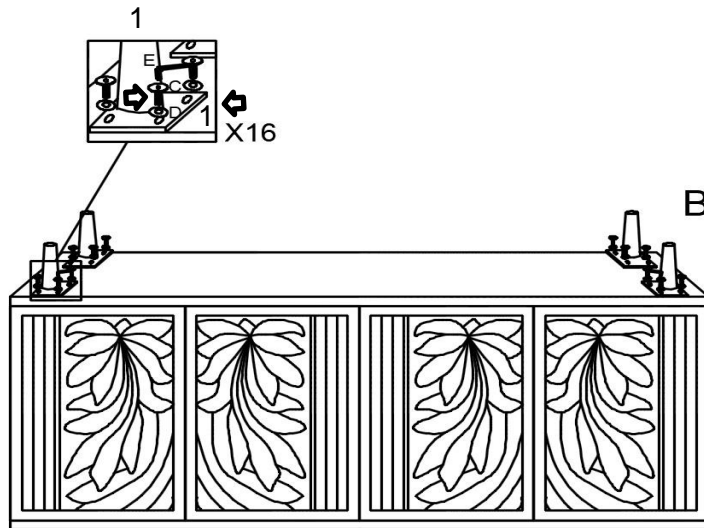

A

STEP-3

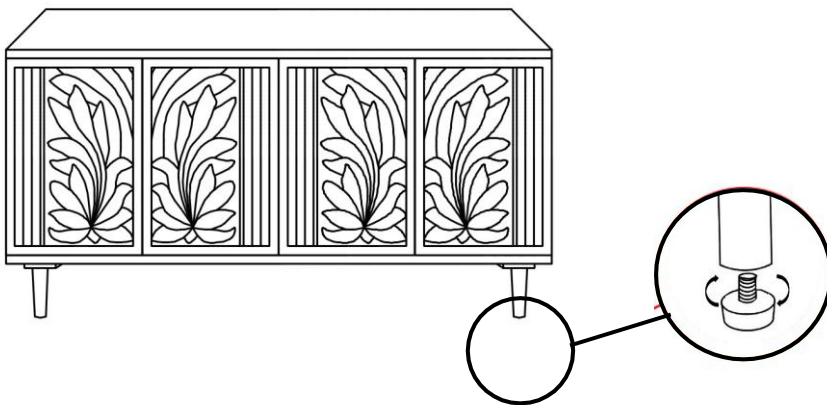

Tip for levelling of product:
When the product rests on an uneven floor surface it will appear to be unbalanced to aid in levelling, try adjusting the levelers located on the bottom of each foot.

FINAL PRODUCT