


Installation Instruction

FOR PENDENT LAMP


WARNING SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

SWH-CDL-OK101

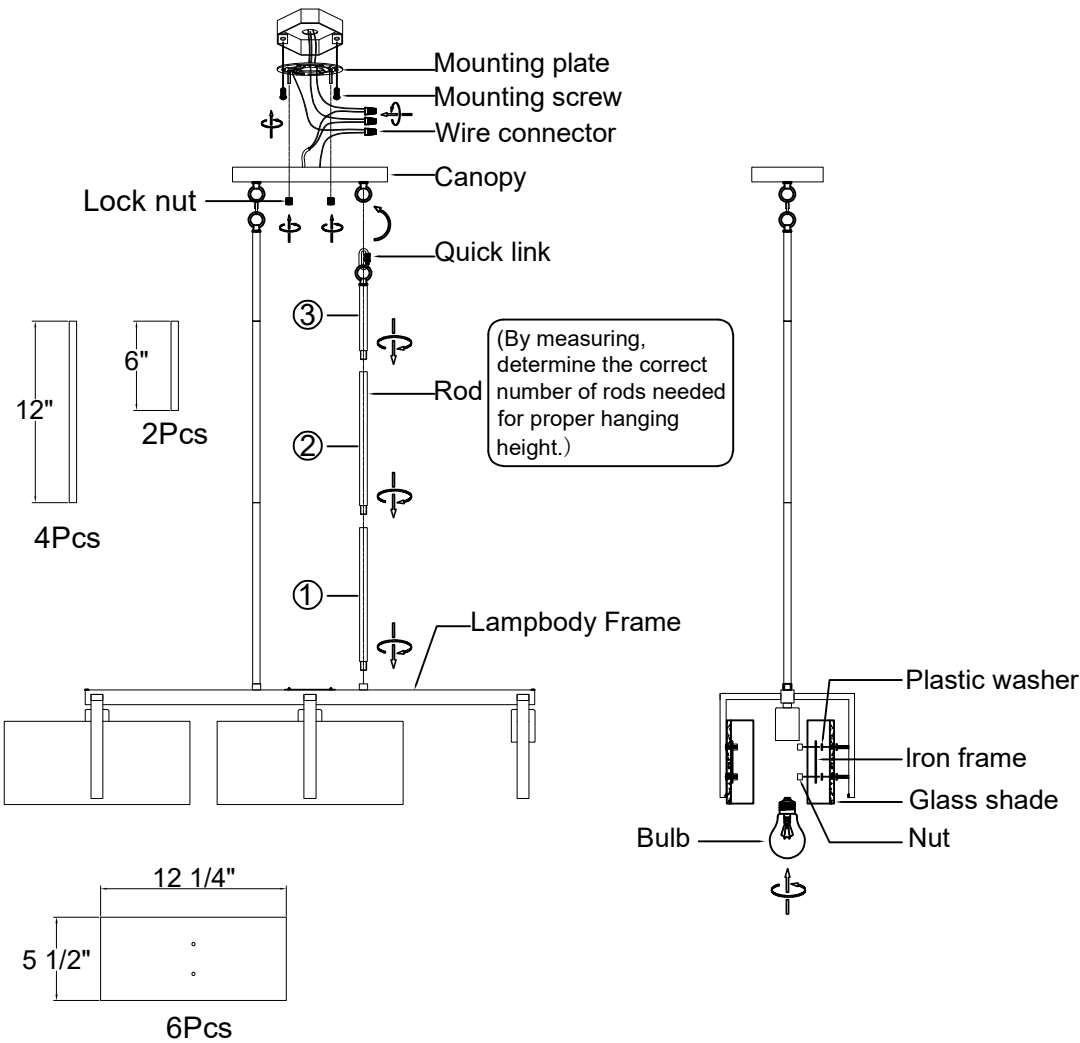


Please completely comply with this instructions and notes to ensure that the product is operated in a safe condition.

1

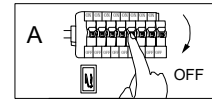


Turn off the power

2

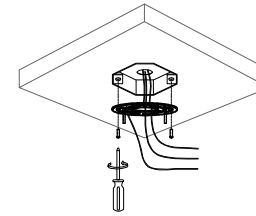


Install of bracket and side screws

3

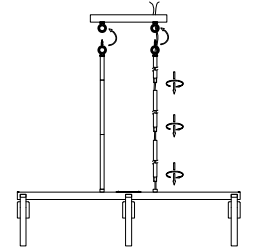


Pass fixture wires and ground wire through rod ①②③/canopy/ then screw the rods one by one together onto the top of lampbody frame, finally attach the quick link to canopy.

4

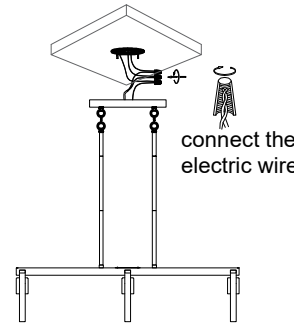


connect the electric wire

5

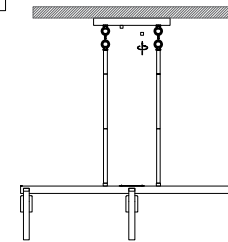


Attach the canopy to mounting plate by screwing lock nut.

6

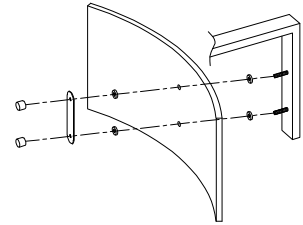


Assemble glass: Pass through the plastic washer-glass-another plastic washer-iron frame to the screw, Secure them with nut to tighten the glass.

7

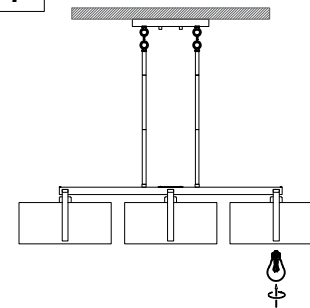

Install bulbs (not included)

8

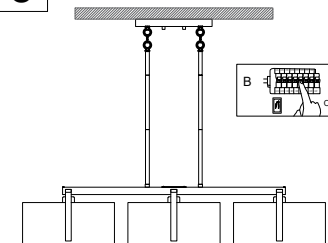

Finish installation