




■ ASSEMBLY INSTRUCTIONS

- Patio Daybed Furniture Set

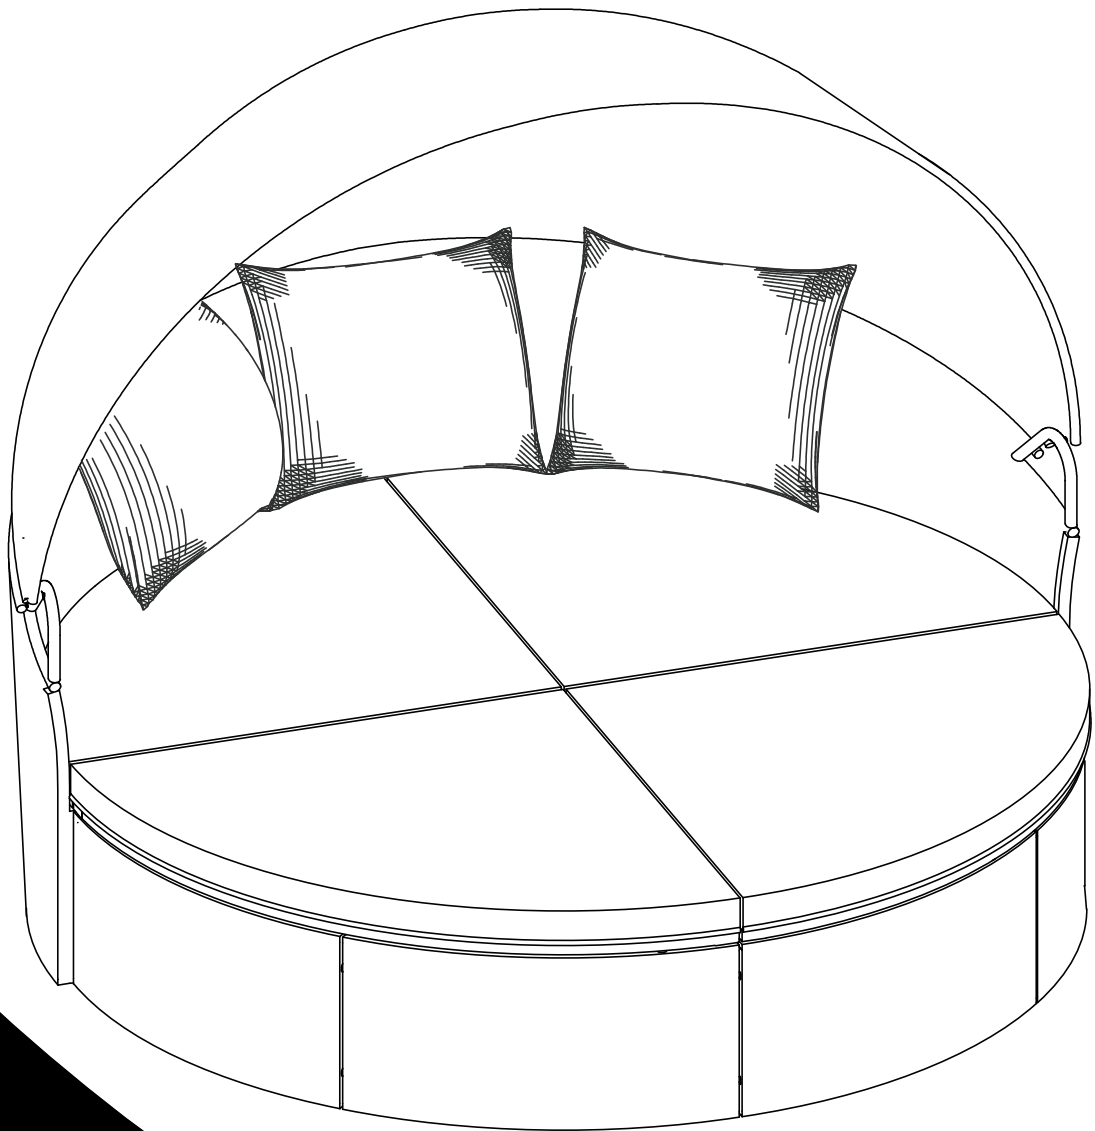

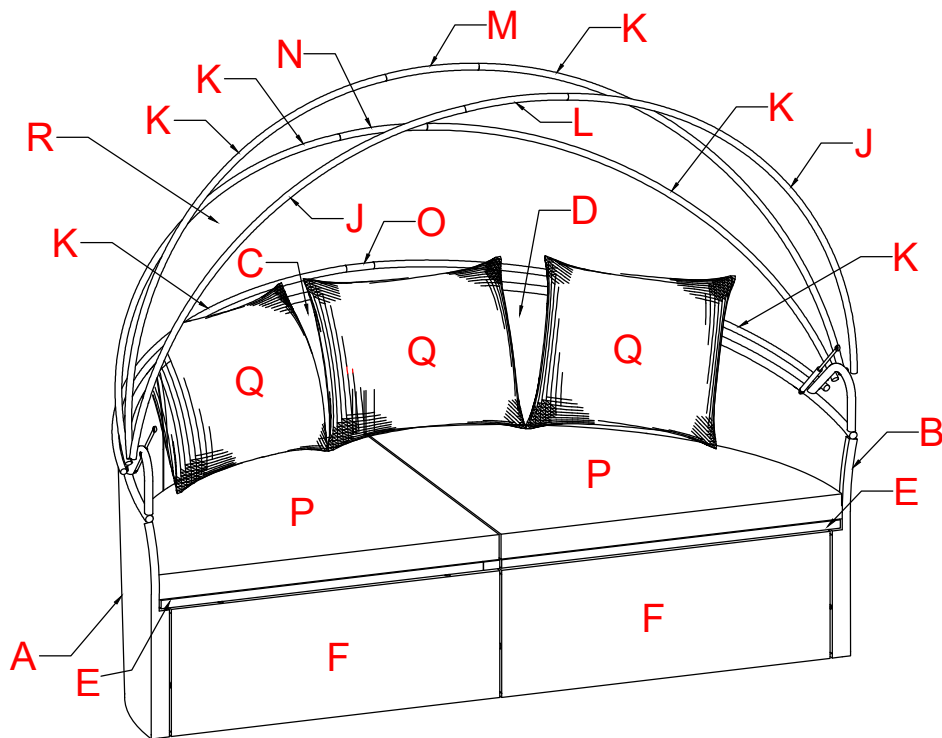

● 1-Daybed

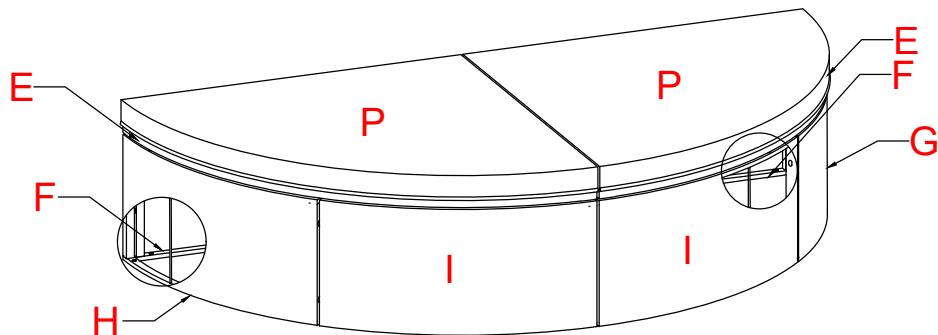

● 1-Ottoman


Notice:

1. 80% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screw with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws
7. Remove the sponge from the cushion when washing, Hand wash only. The washing machine and brush harm the fabric.




Carton Content


● Box 2-1

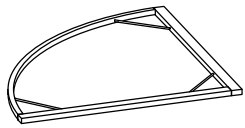

E Seat Frame (4Pcs)

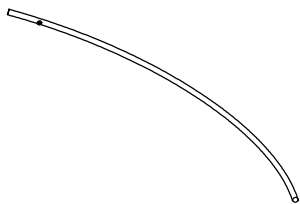

J Support Umbrella J (2Pcs)

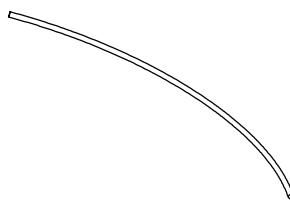

K Support Umbrella K (6Pcs)



L Support Umbrella L (1Pc)




M Support Umbrella M (1Pc)




N Support Umbrella N (1Pc)




O Support Umbrella O (1Pc)

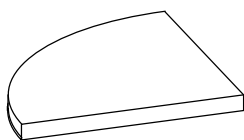

P Seat Cushion (4Pcs)

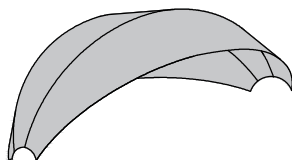


R Umbrella (1Pc)

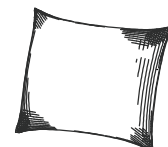


Q Back Cushion (1Pc)


● Box 2-2

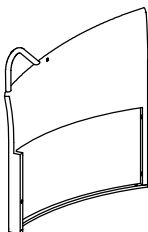


A Right Armrest Frame (1Pc)

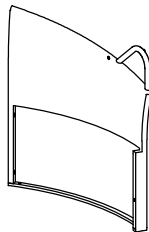


B Left Armrest Frame (1Pc)

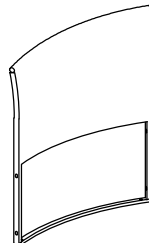


C Right Back Frame (1Pc)

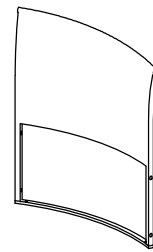


D Left Back Frame (1Pc)




F Front Frame (4Pcs)

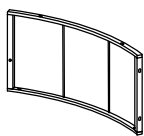


G Left Front Side Frame (1Pc)

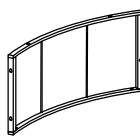


H Right Front Side Frame (1Pc)




I Front Middle Frame (2Pcs)

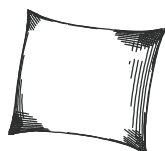

Q Back Cushion (2Pcs)




S Gaslift (2Pcs)




T Support Side Back (2Pcs)
Extra (1pc)



U Support Daybed (13Pcs)
Extra (1Pc)




















V Connector (4Pcs)



Hardware









Parts List

Check and make sure you get the components on the list, contact us for any missing

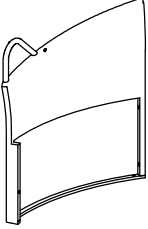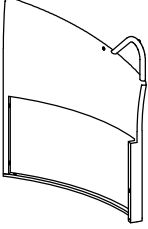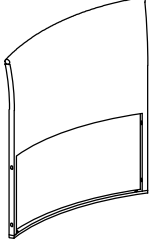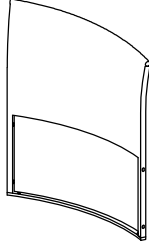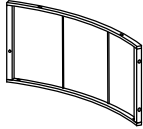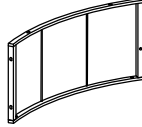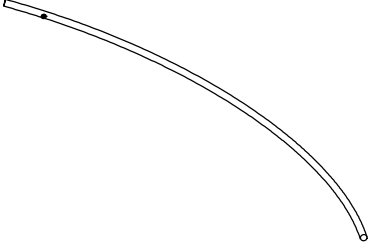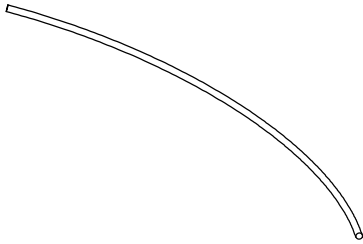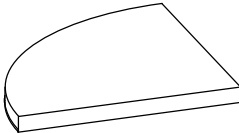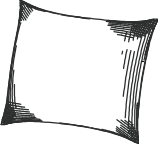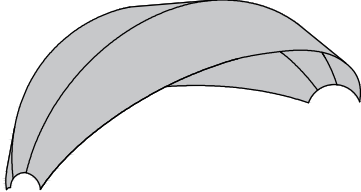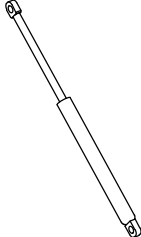A Right Armrest Frame (1Pc)	B Left Armrest Frame (1Pc)	C Right Back Frame (1Pc)	D Left Back Frame (1Pc)
			
E Seat Frame (4Pcs)	F Front Frame (4Pcs)	G Left Front Side Frame (1Pc)	H Right Front Side Frame (1Pc)
			
I Front Middle Frame (2Pcs)	J Support Umbrella J (2Pcs)	K Support Umbrella K (6Pcs)	L Support Umbrella L (1Pc)
			
M Support Umbrella M (1Pc)	N Support Umbrella N (1Pc)	O Support Umbrella O (1Pc)	P Seat Cushion (4Pcs)
			
Q Back Cushion (3Pcs)	R Umbrella (1Pc)	S GASLIFT (2Pcs)	T Support Side Back (2Pcs) Extra (1pc)
			
U Support Daybed (13Pcs) Extra (1pc)	V Connector (4Pcs)		
			



Hardware List

Check and make sure you get the components on the list, contact us for any missing

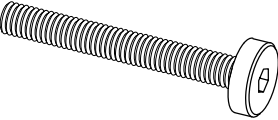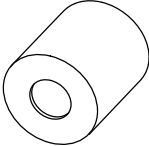1 Allen Bolt M6 x 20mm (30Pcs) 	2 Allen Bolt M6 x 30mm (18Pcs) 	3 Allen Bolt M6 x 40mm (14Pcs) 	4 Allen Bolt M6 x 60mm (14Pcs) 
5 Flat Washer M6x1mm (90Pcs) 	6 Washer M6 x 5mm (10Pcs) 	7 Washer M6 x 20mm (2Pcs) 	8 Nut M6 (14Pcs) 
9 Screw M4 x 15mm (8Pcs) 	10 Key M6 (1Pc) 	11 Allen Key (3Pcs) 	


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

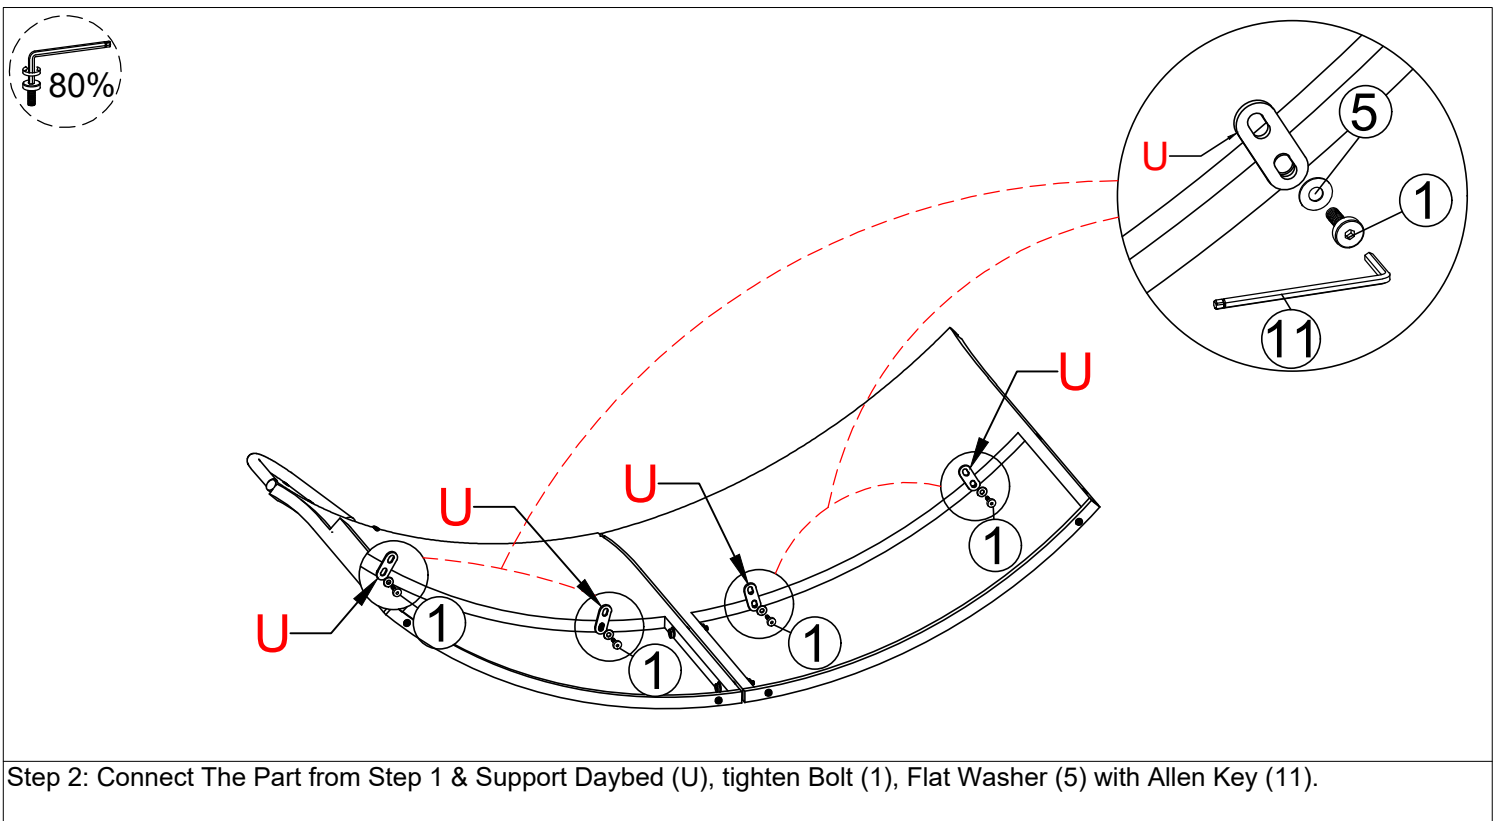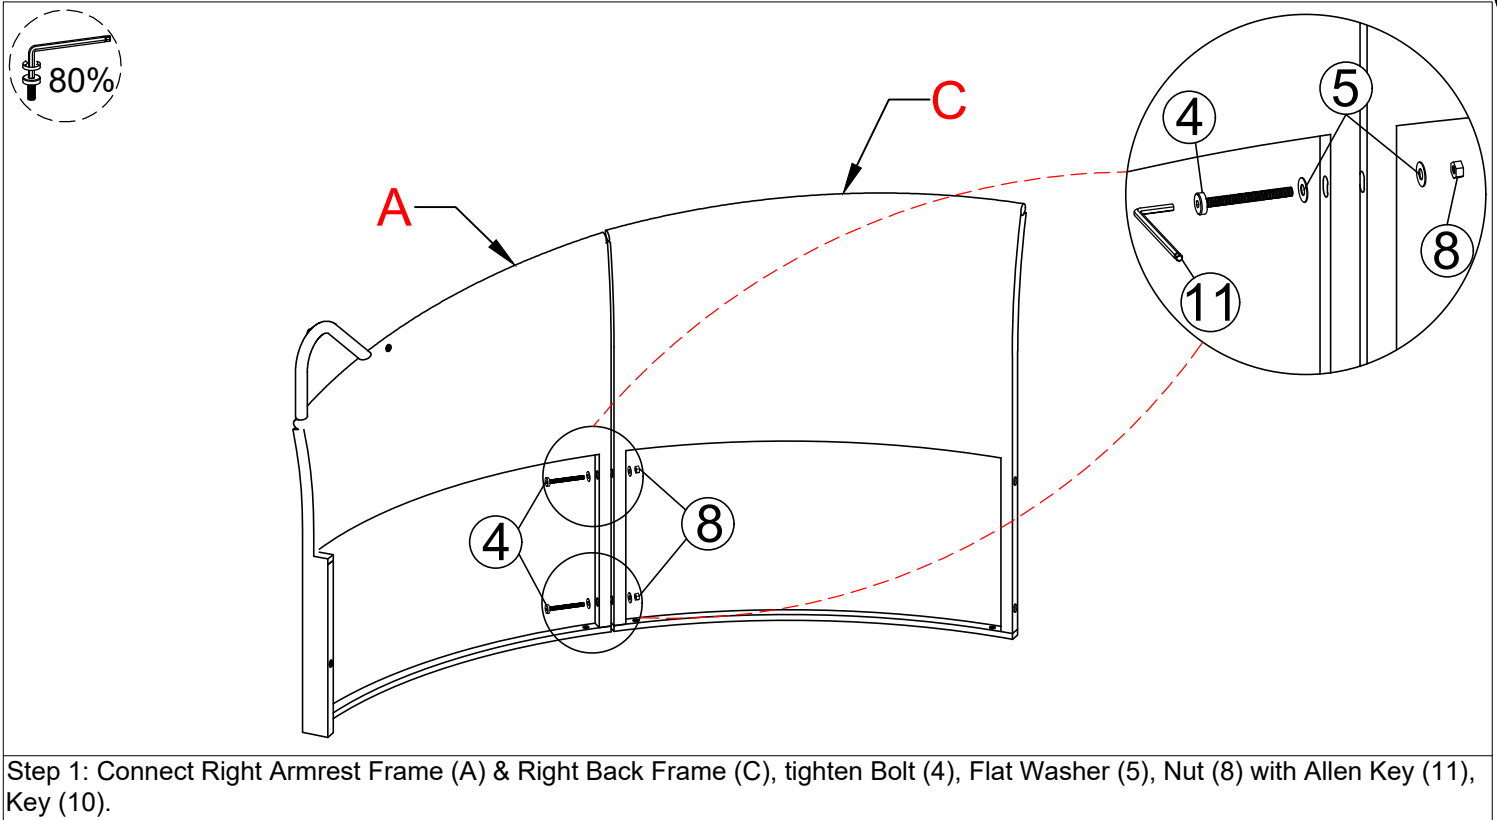


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

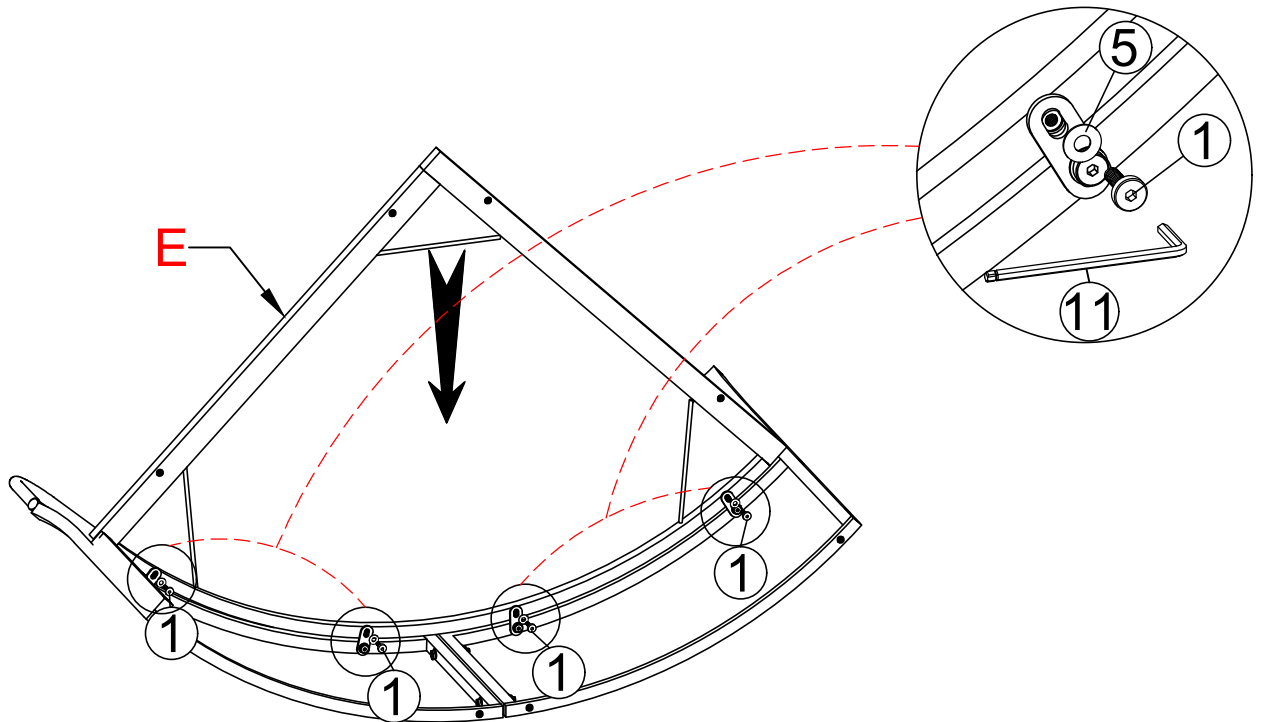



Step 3: Connect The Part from Step 2 & Seat Frame (E), tighten Bolt (1), Flat Washer (5) with Allen Key (11).

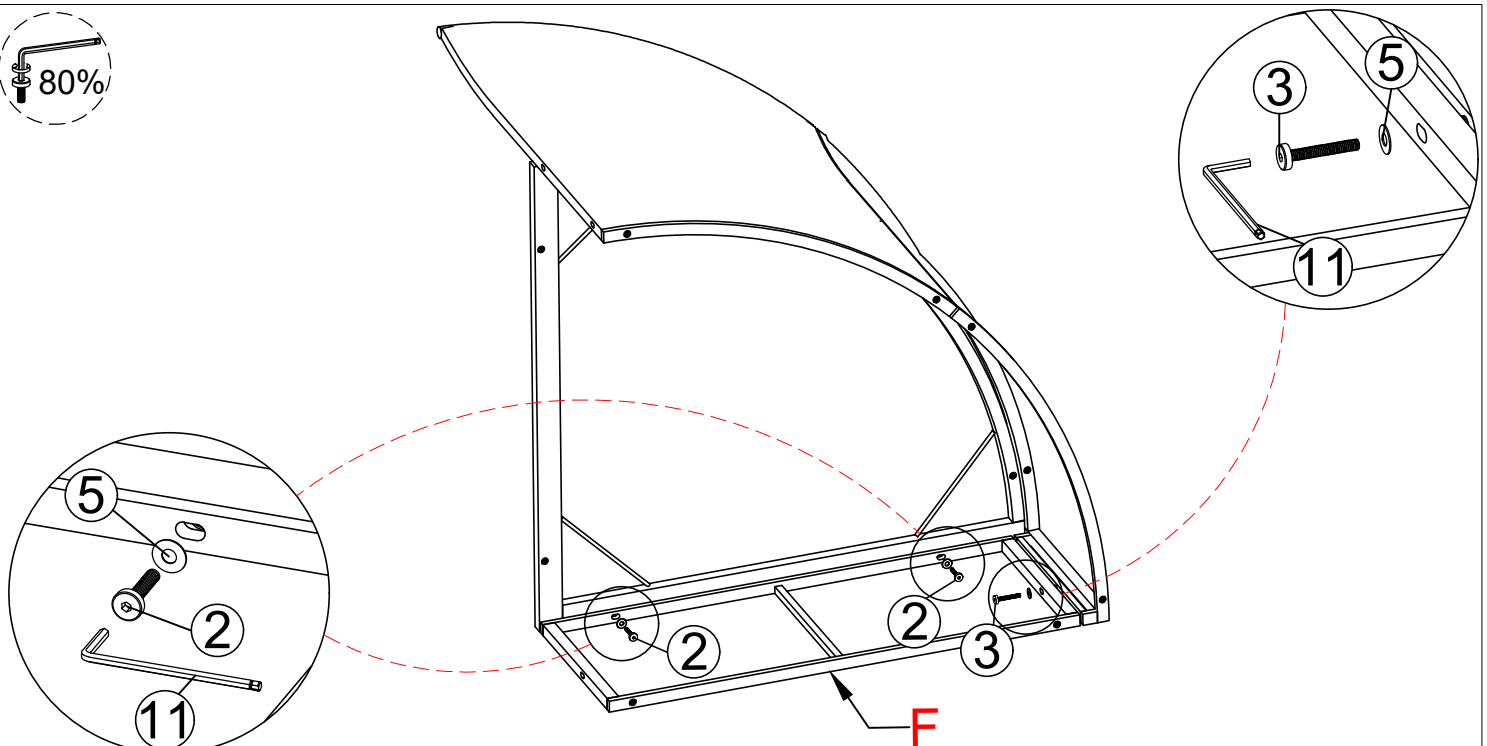

Step 4: Connect The Part from Step 3 & Front Frame (F), tighten Bolt (2),(3) Flat Washer (5) with Allen Key (11).


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

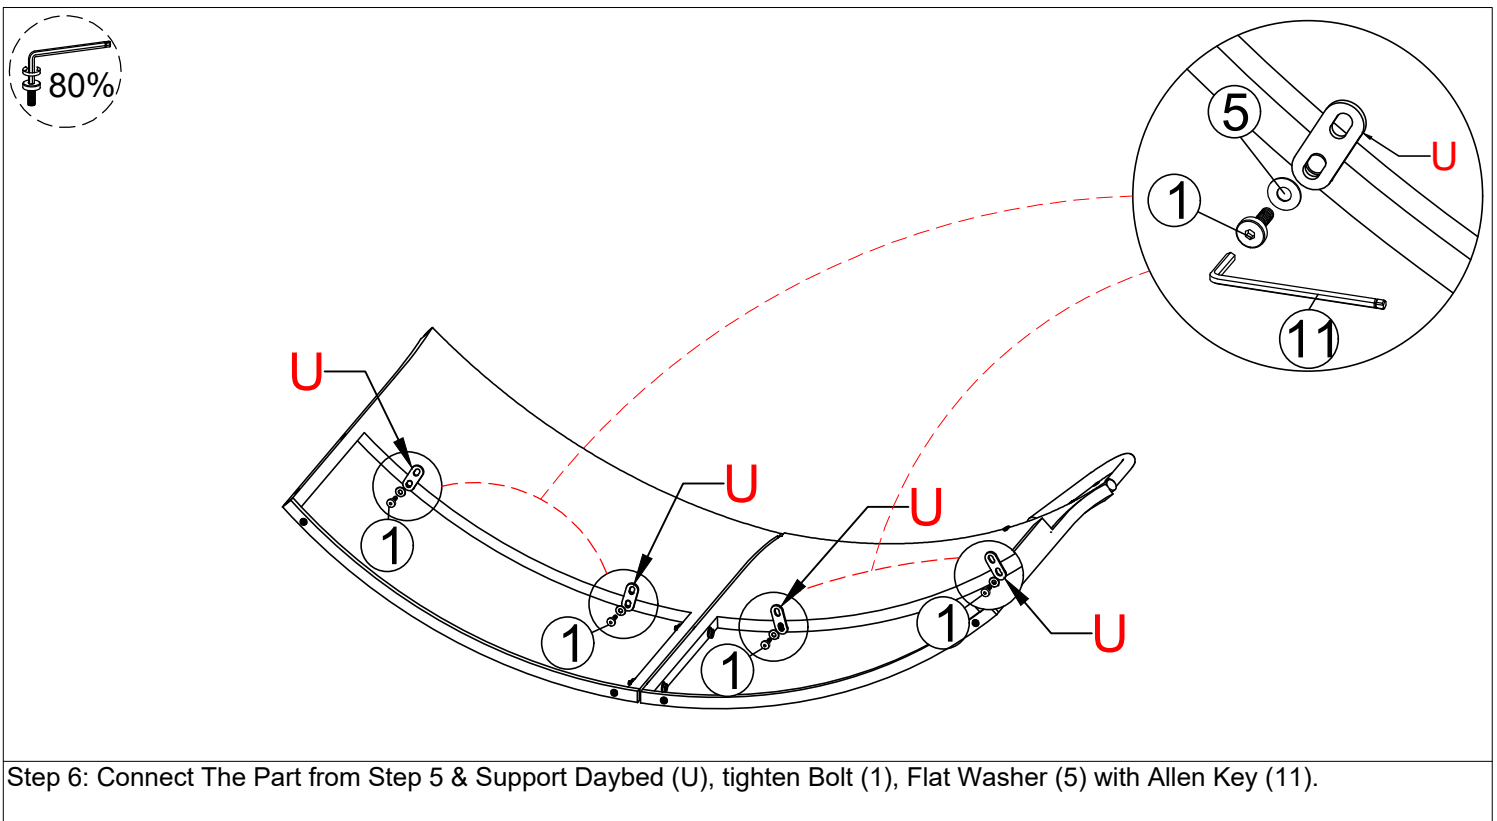
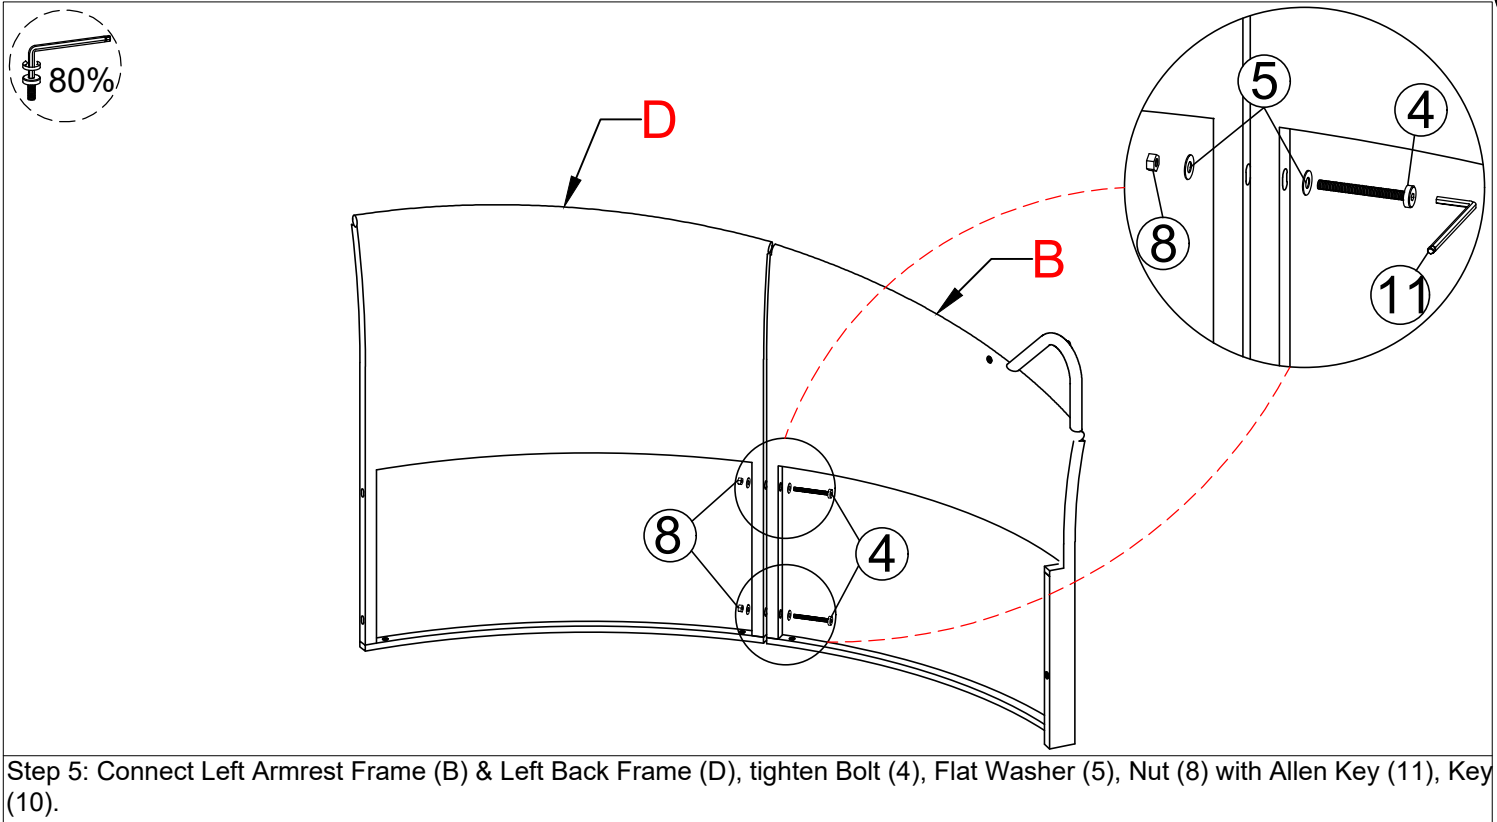


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

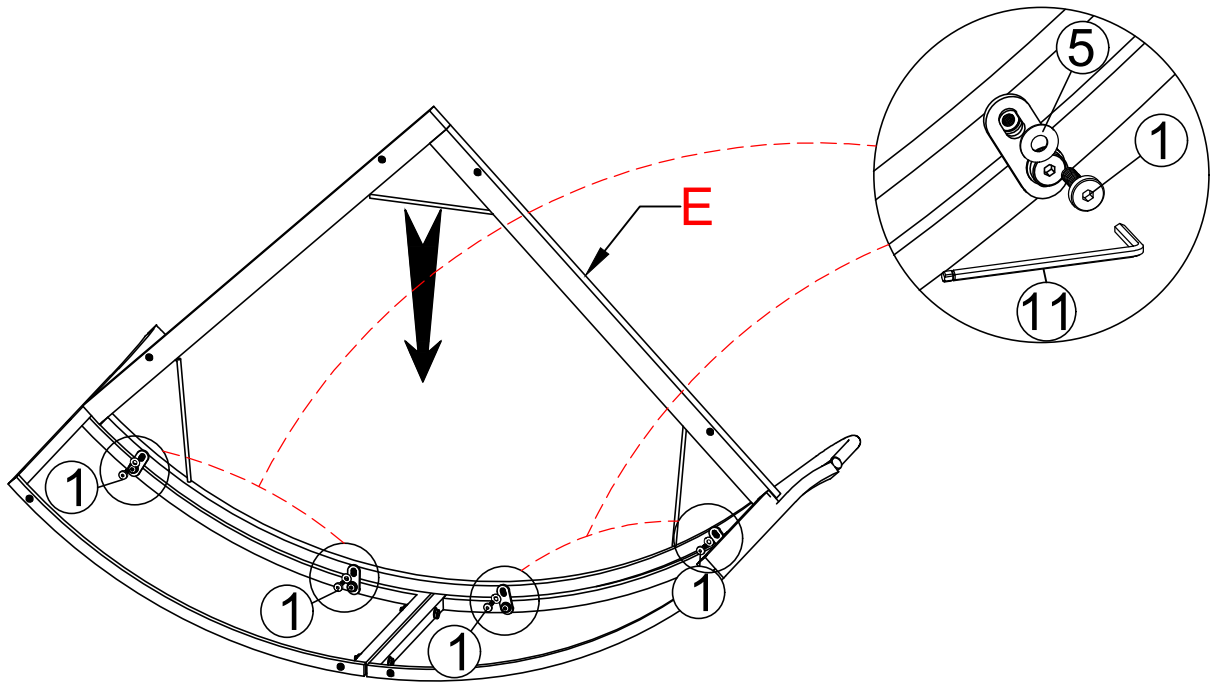



Step 7: Connect The Part from Step 6 & Seat Frame (E), tighten Bolt (1), Flat Washer (5) with Allen Key (11).

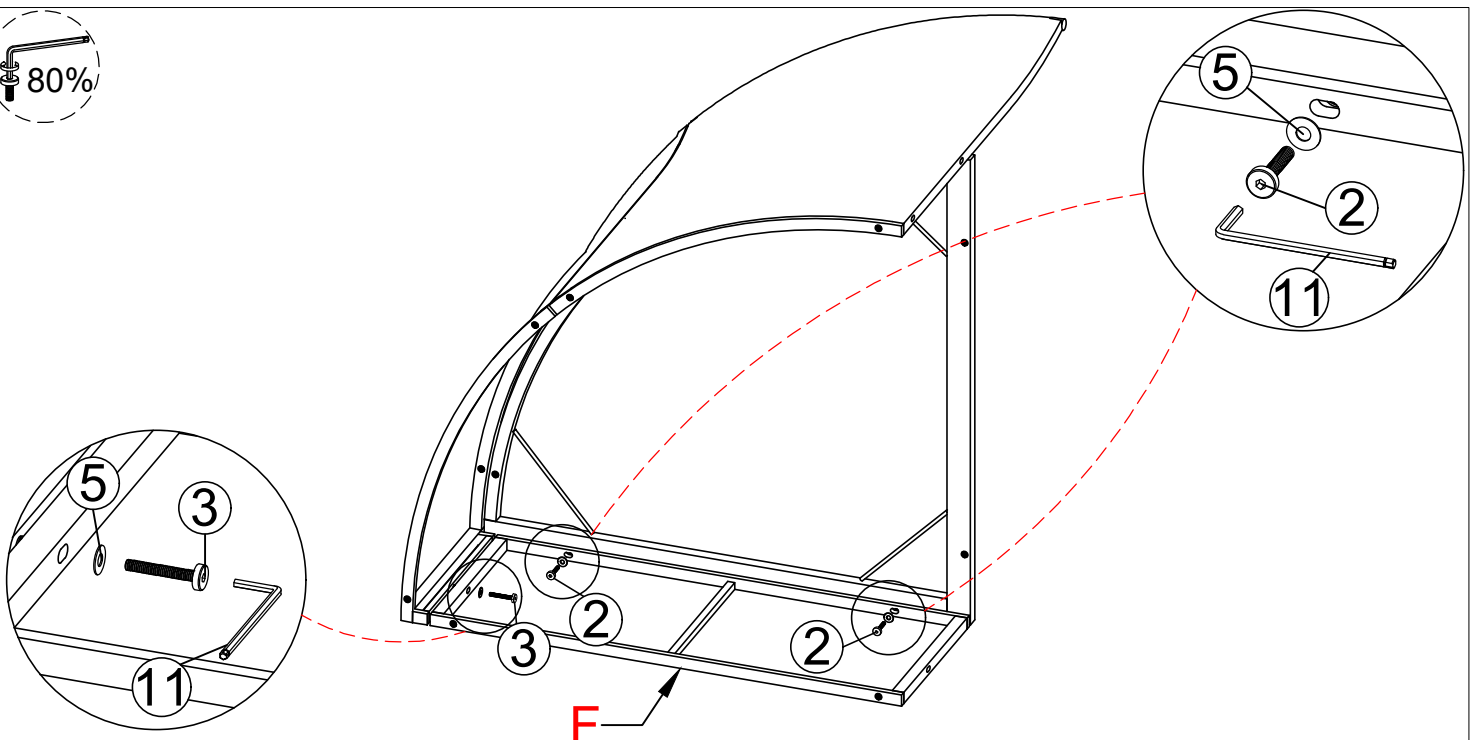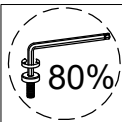

Step 8: Connect The Part from Step 7 & Front Frame (F), tighten Bolt (2),(3) Flat Washer (5) with Allen Key (11).


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

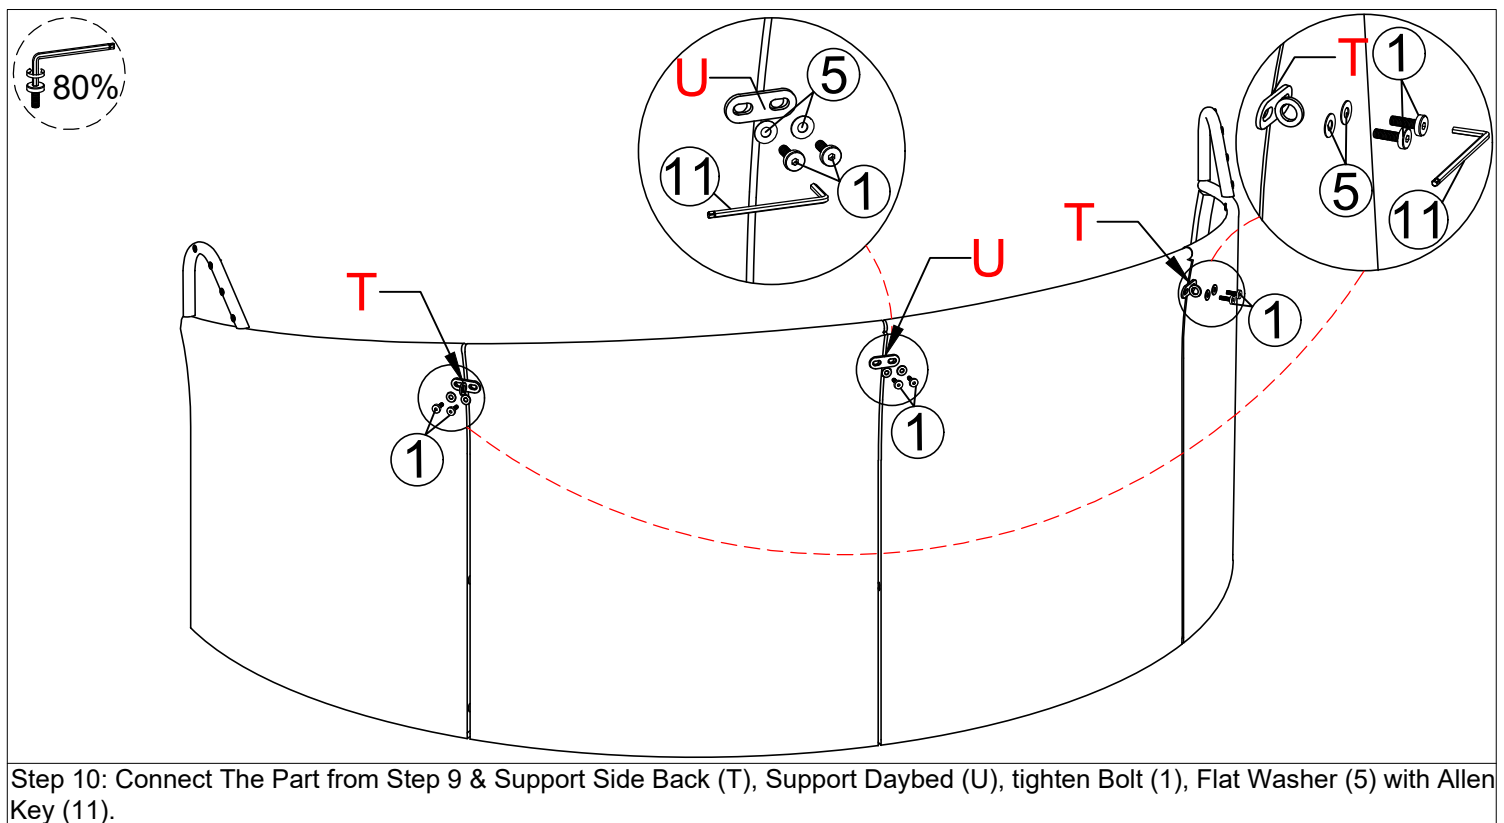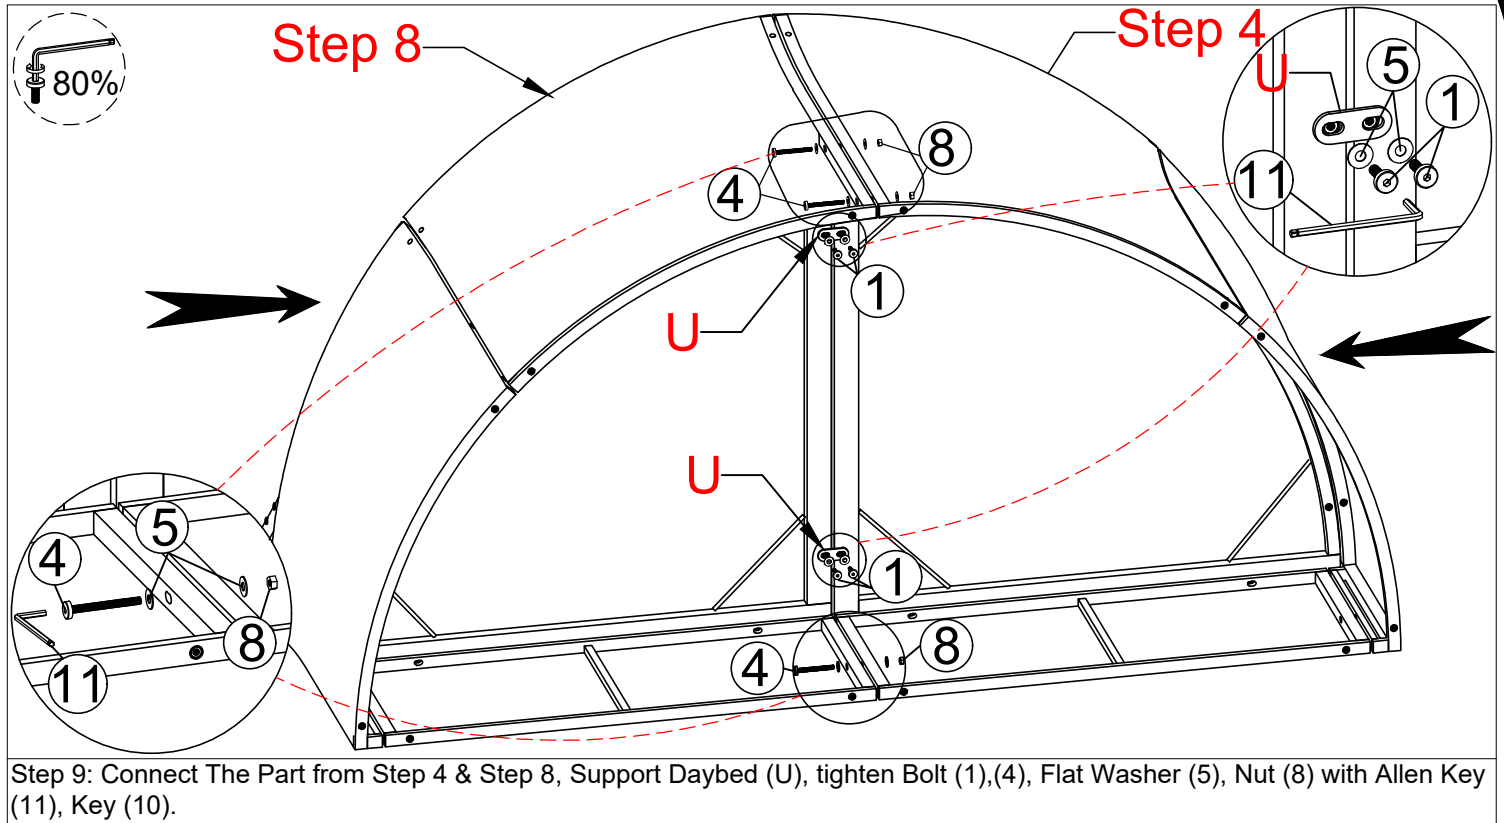

Installation step


For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

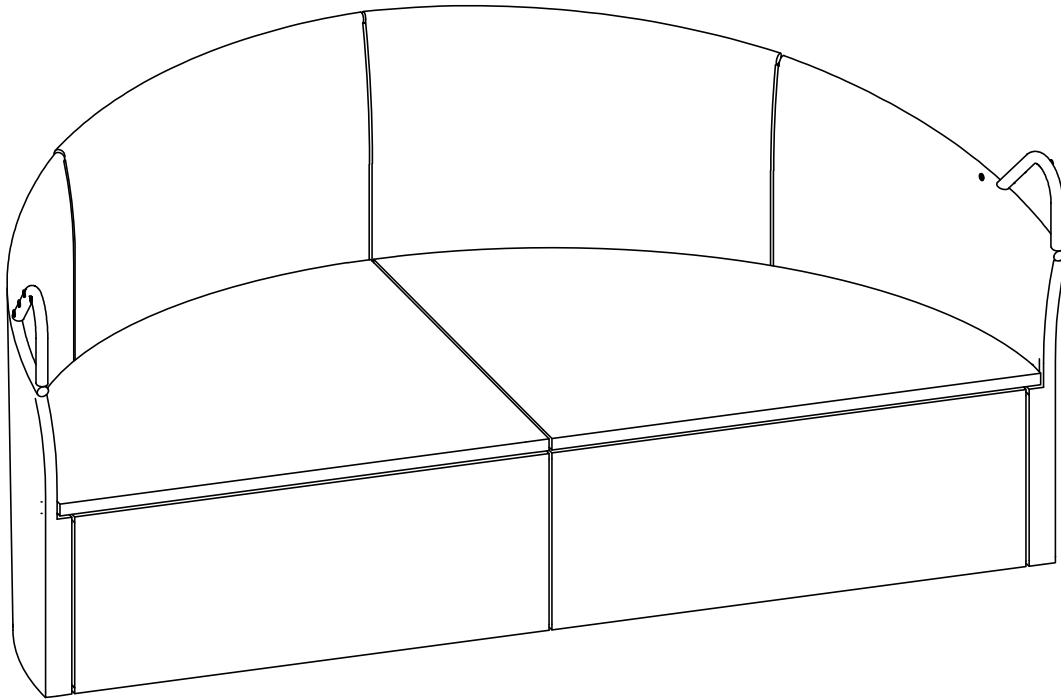

Step 11: Put the Daybed upright and make sure all legs are level, then firmly tighten Bolts with Key (10), Allen Key (11).


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

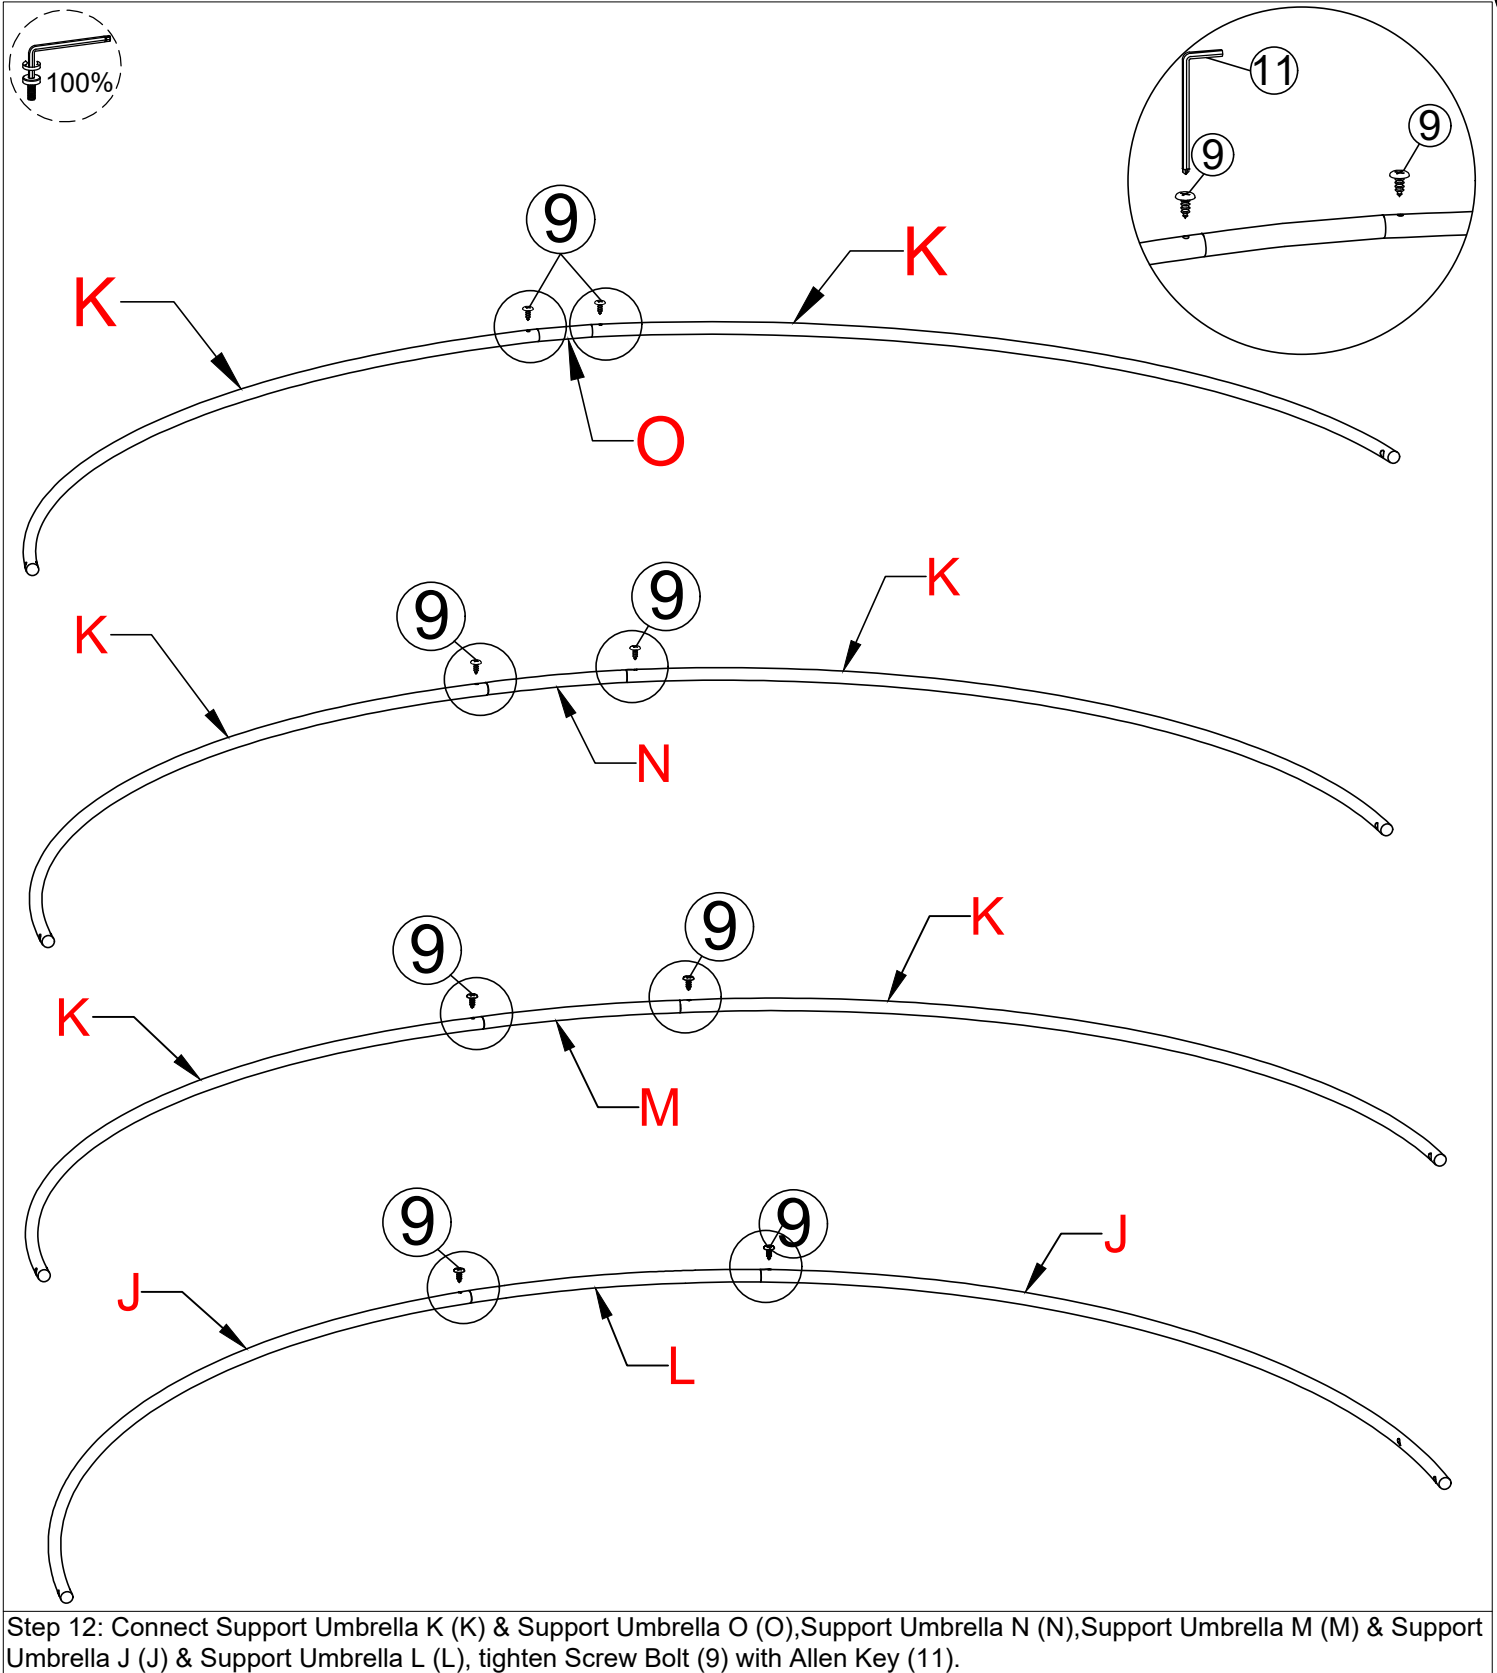


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

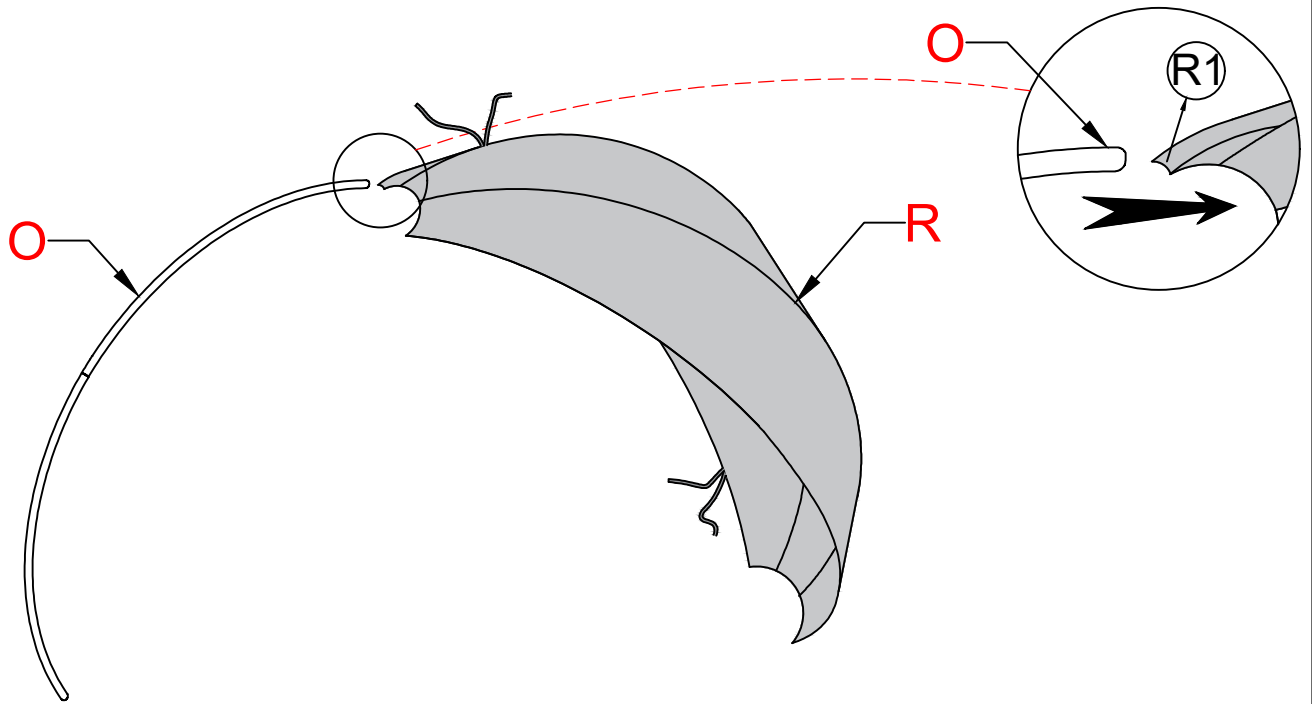


Step 13: Connect Umbrella O & Umbrella R1 (R) .

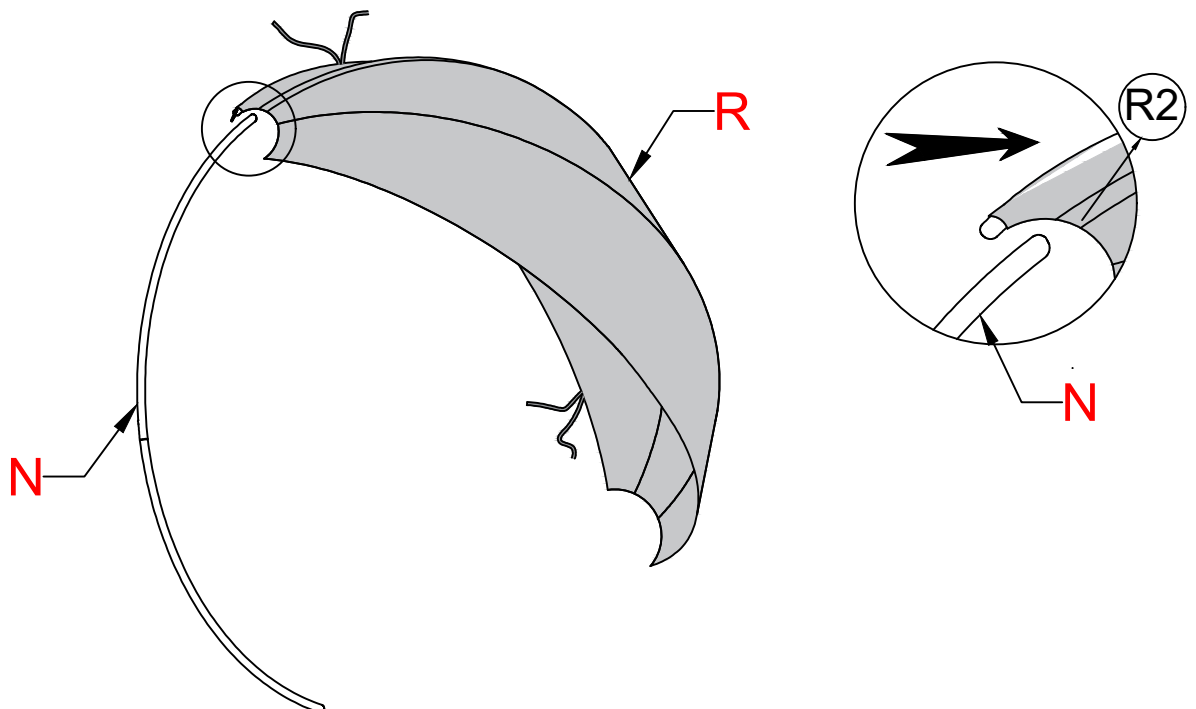


Step 14: Connect The Part from Step 13 & Umbrella N & Umbrella R2 (R).

Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

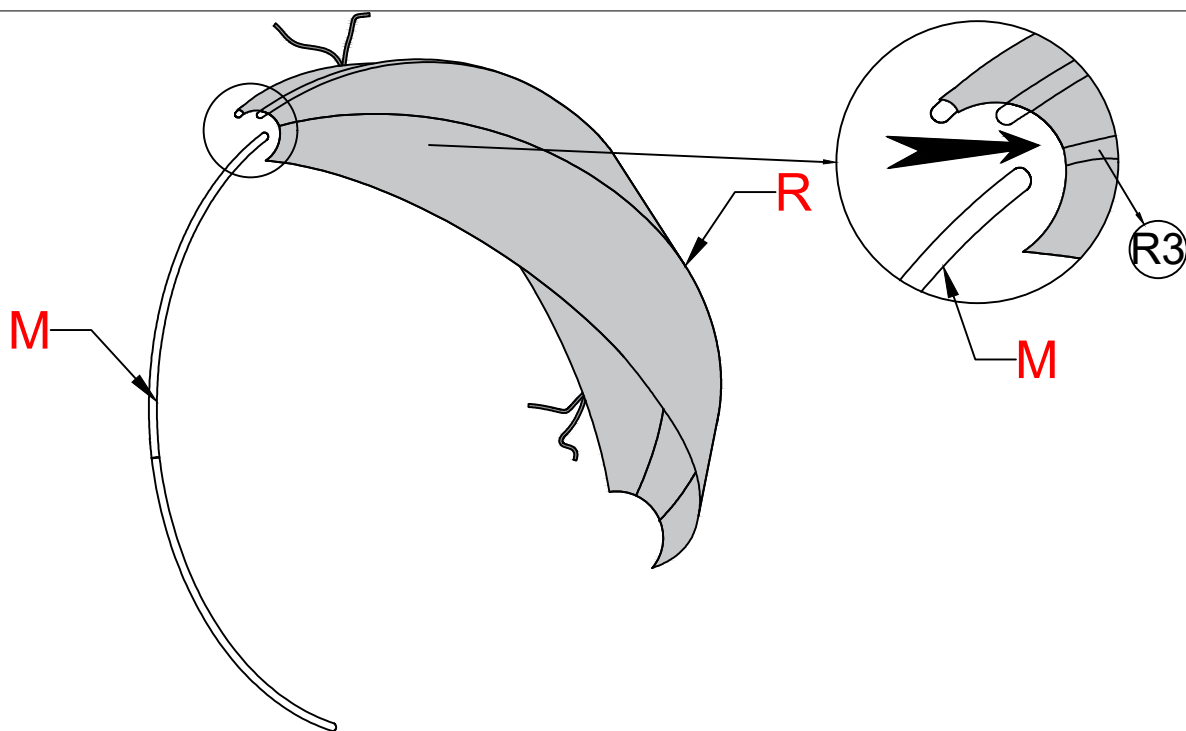


Step 15: Connect The Part from Step 14 & Umbrella M & Umbrella R3 (R).

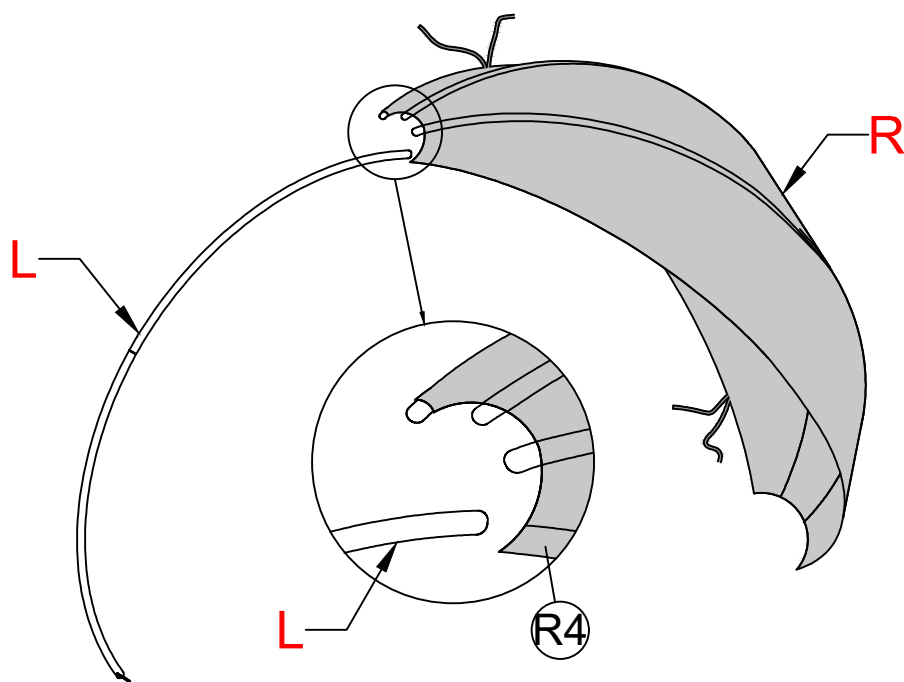

Step 16: Connect The Part from Step 15 & Umbrella L & Umbrella R4 (R).


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

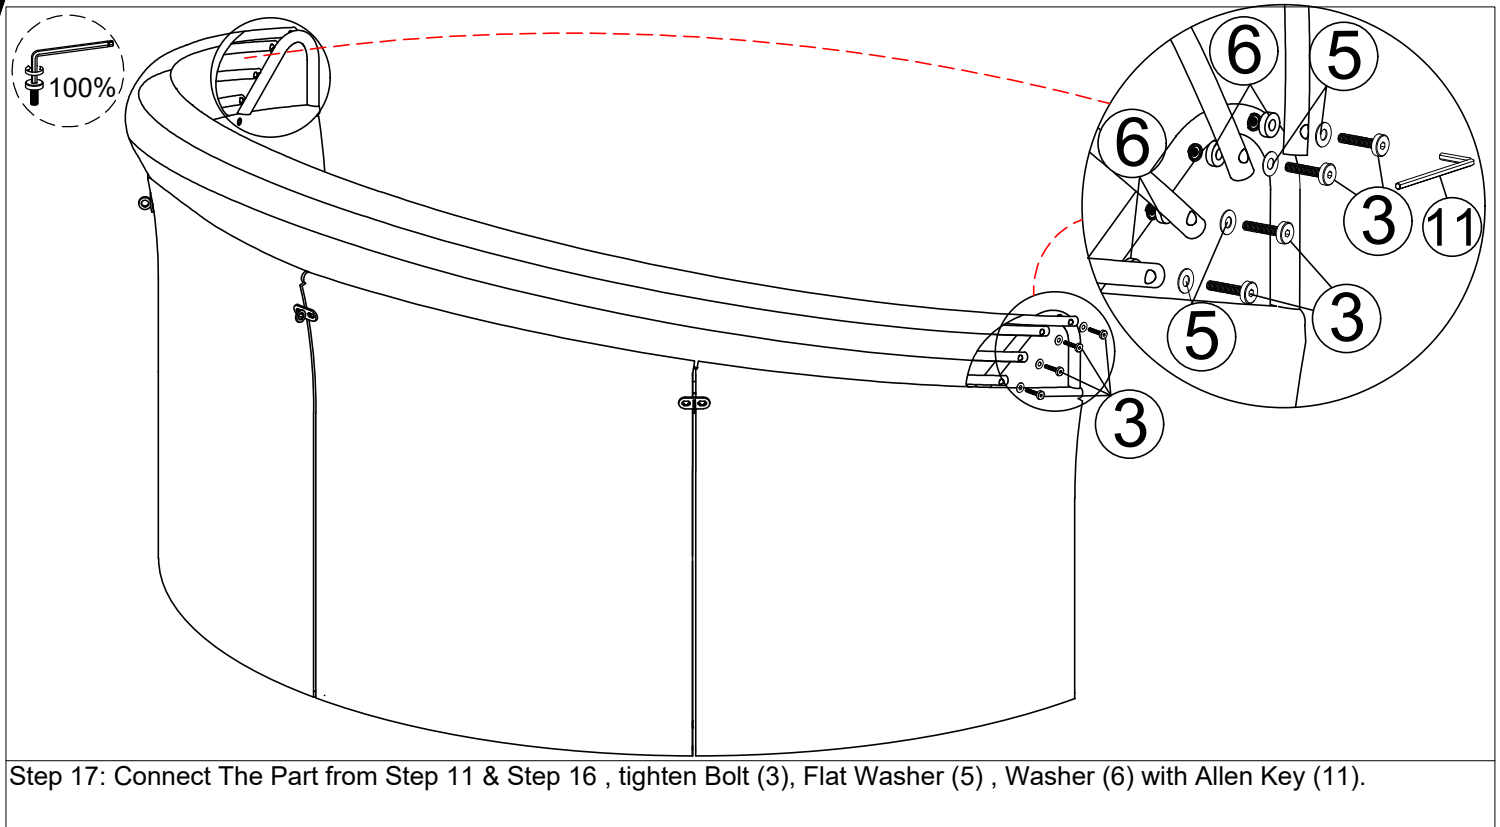

Installation step


For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

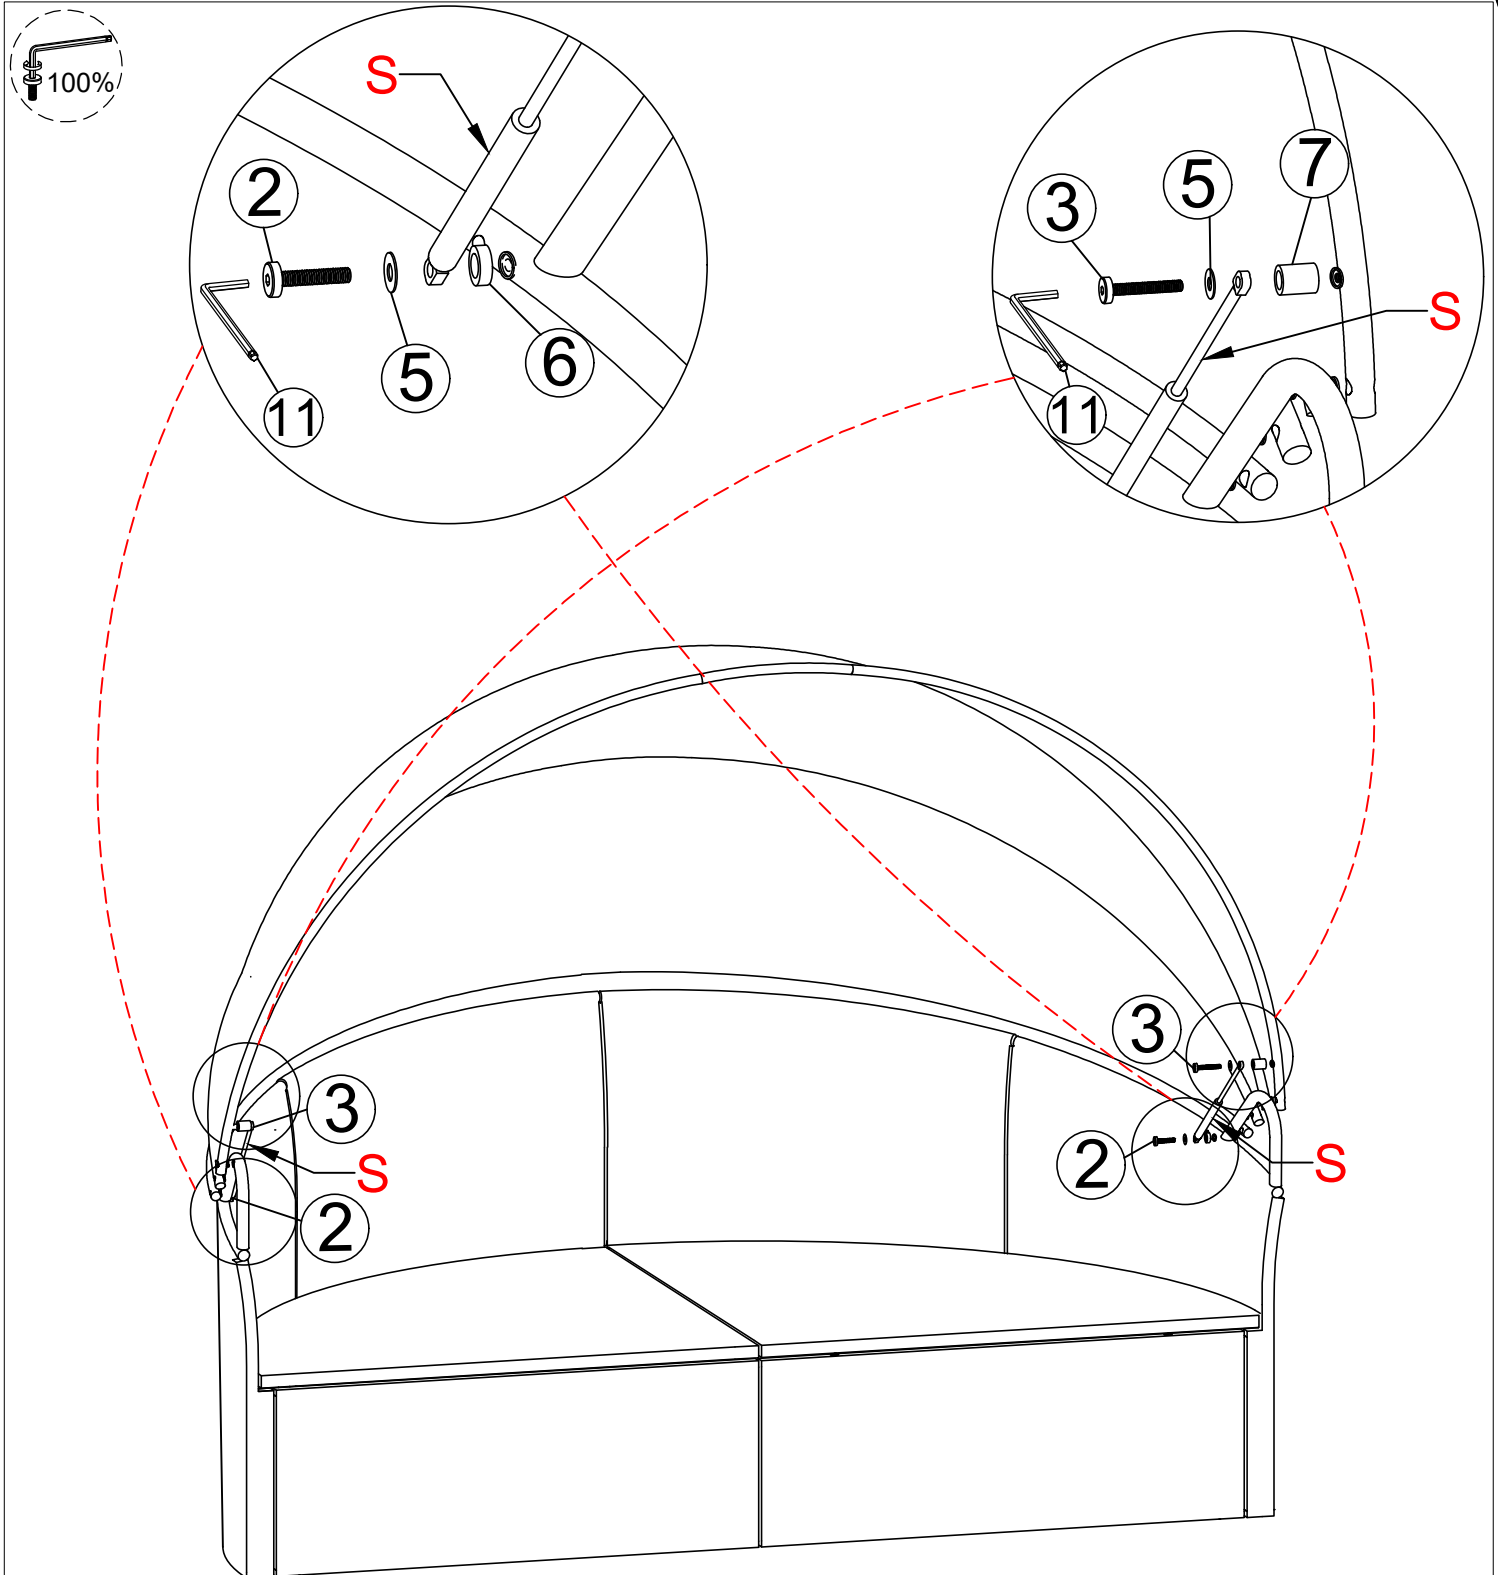


Step 18: Connect The Part from Step 17 & Gaslift (S), tighten Bolt (2),(3), Flat Washer (5), Washer (6),(7) with Allen Key (11).

Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

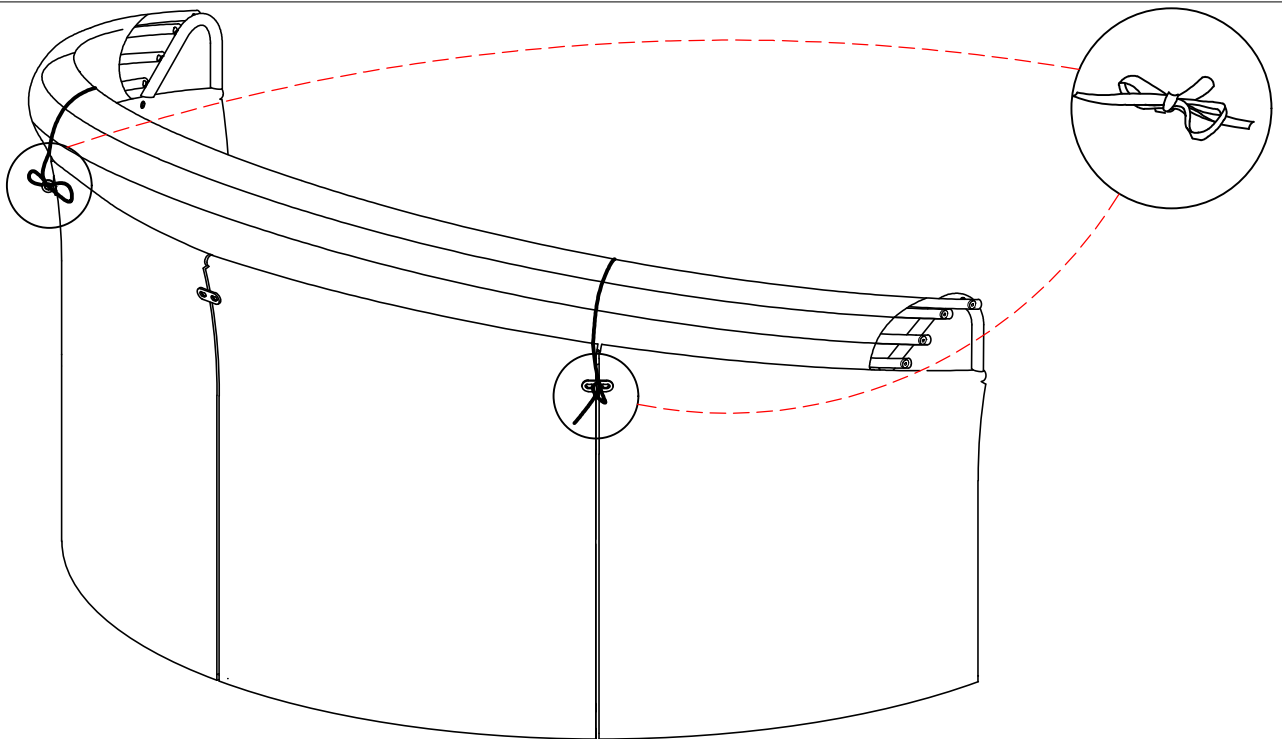



Step 19: Stick string to Umbrella (R) to Daybed.

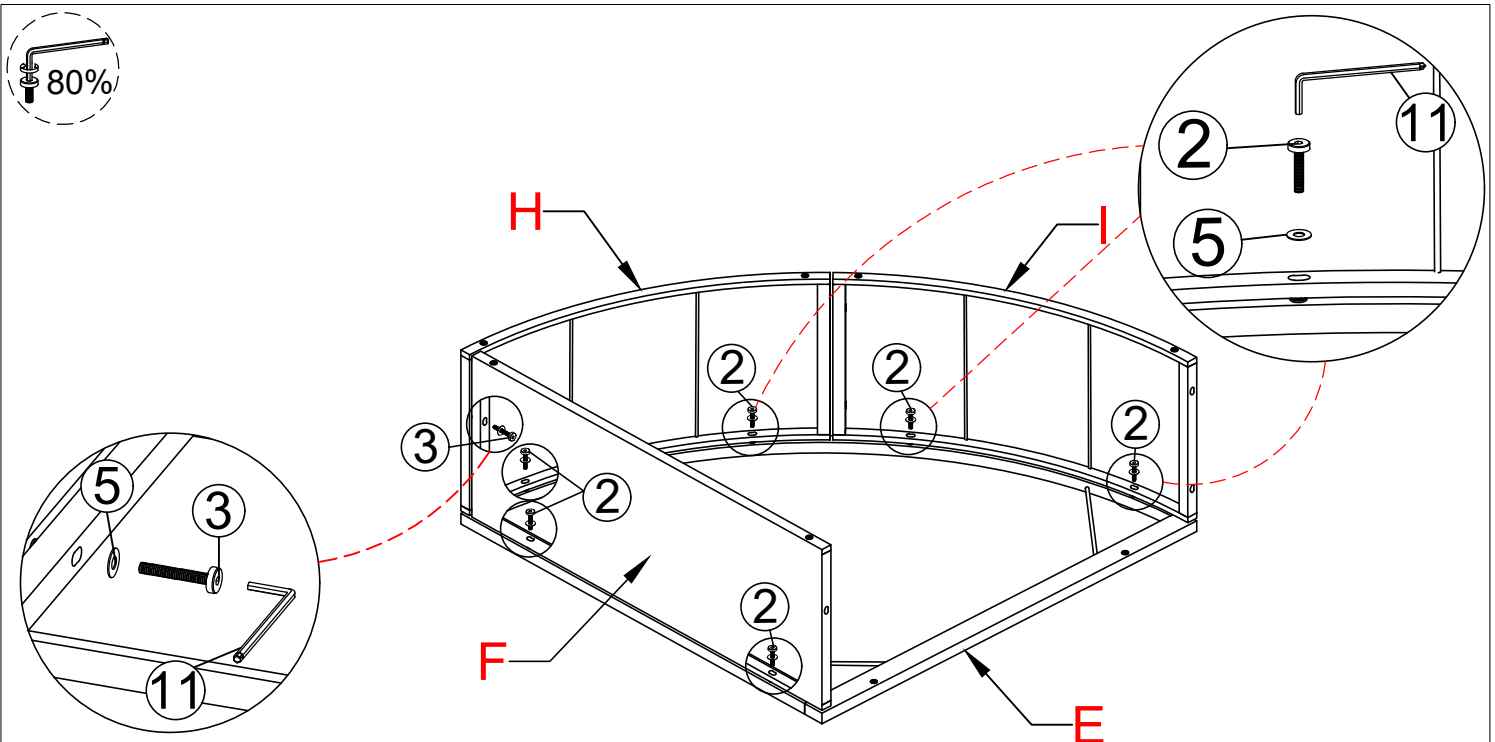

Step 20: Connect Seat Frame (E) & Right Front Side Frame (H), Front Middle Frame (I), Front Frame (F), tighten Bolt (2),(3) FlatWasher (5) with Allen Key (11).


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

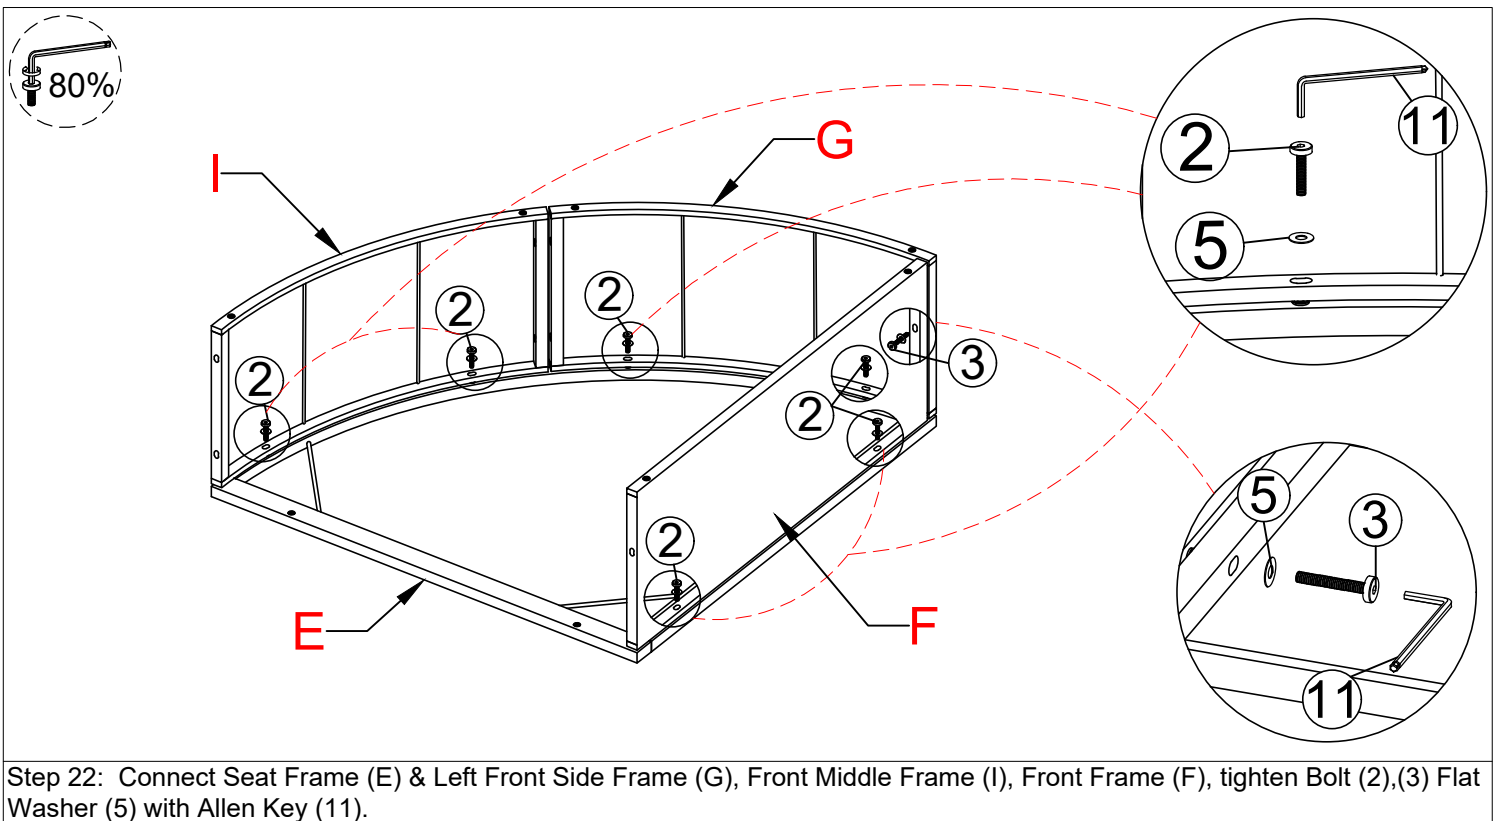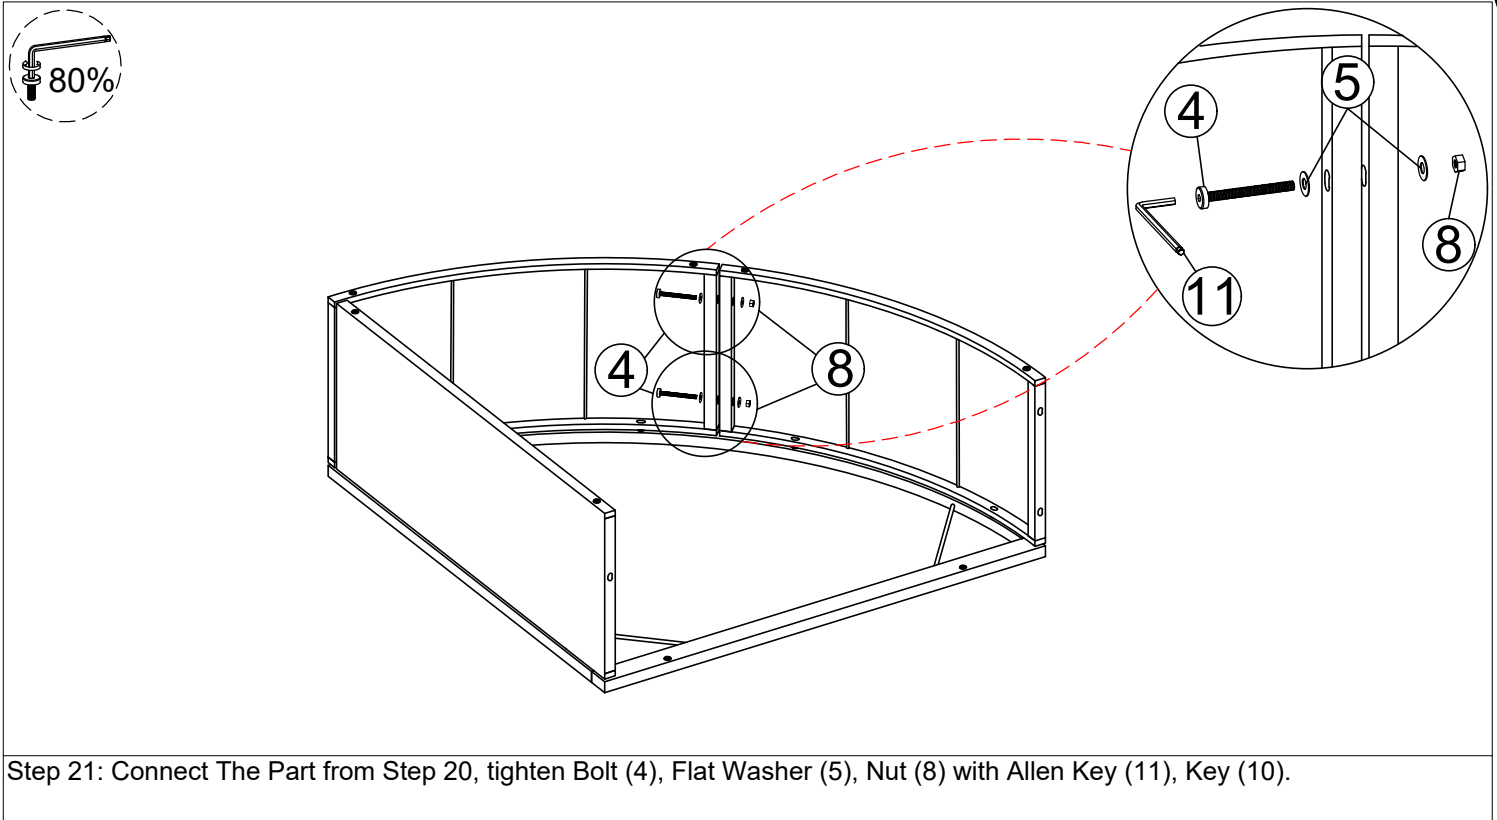


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

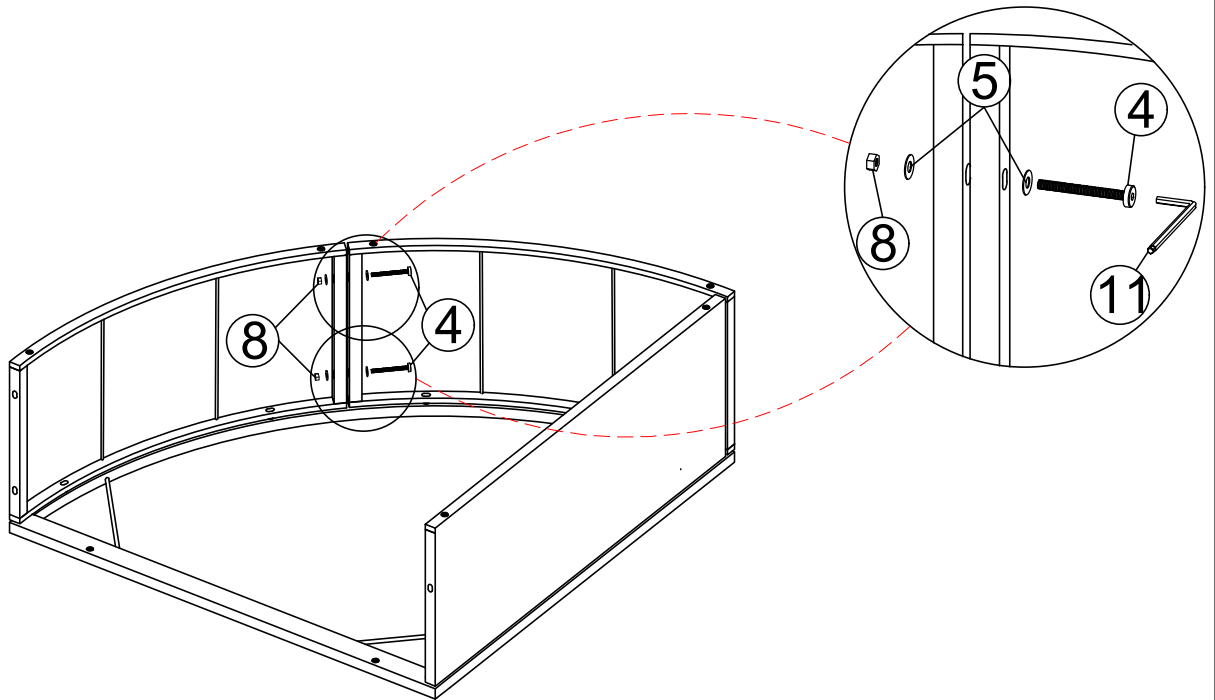



Step 23: Connect The Part from Step 22, tighten Bolt (4), Flat Washer (5), Nut (8) with Allen Key (11), Key (10).

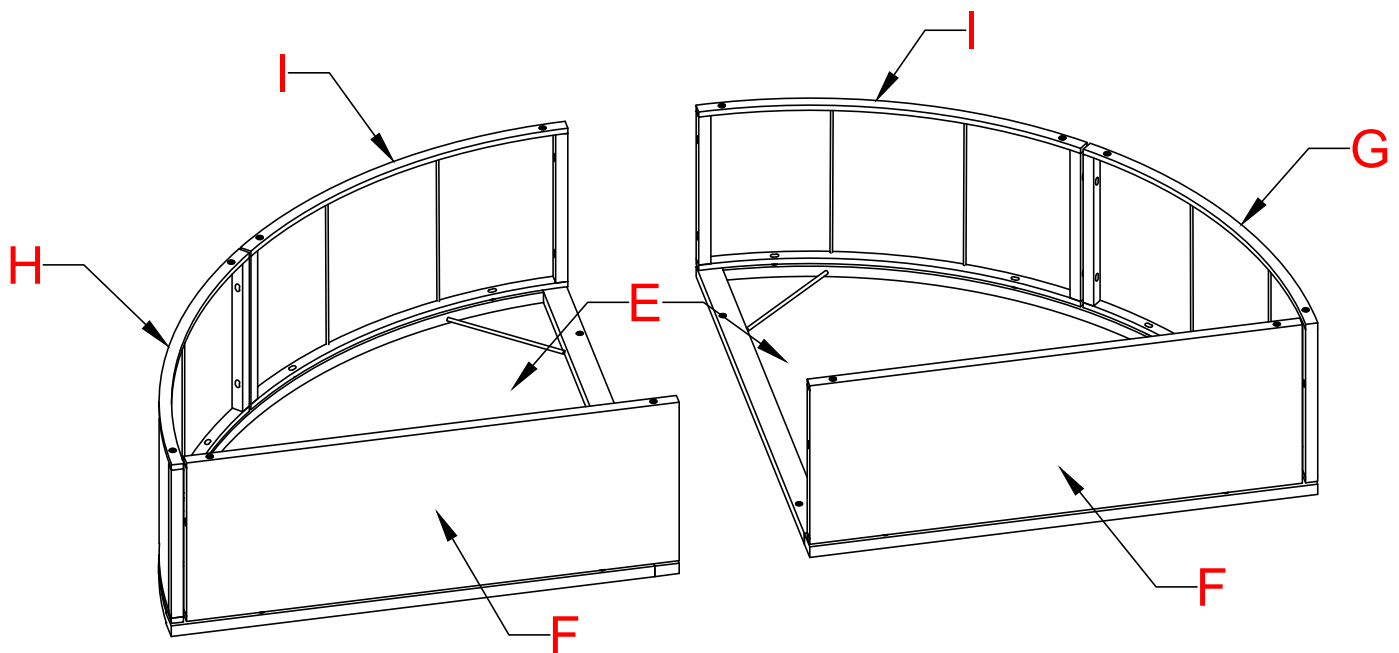

Step 24: Connect The Part from Step 21 & Step 23


Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

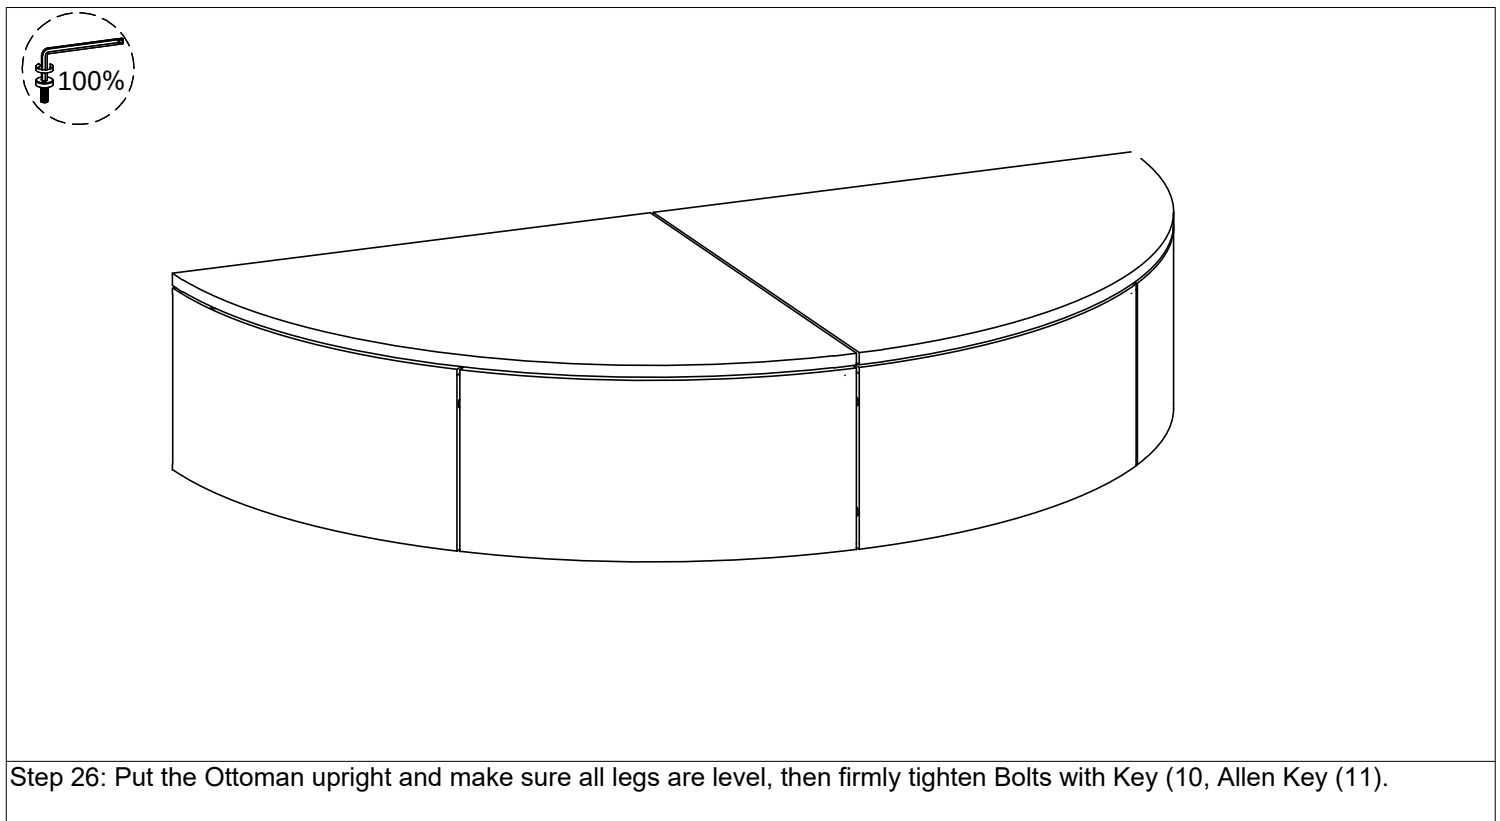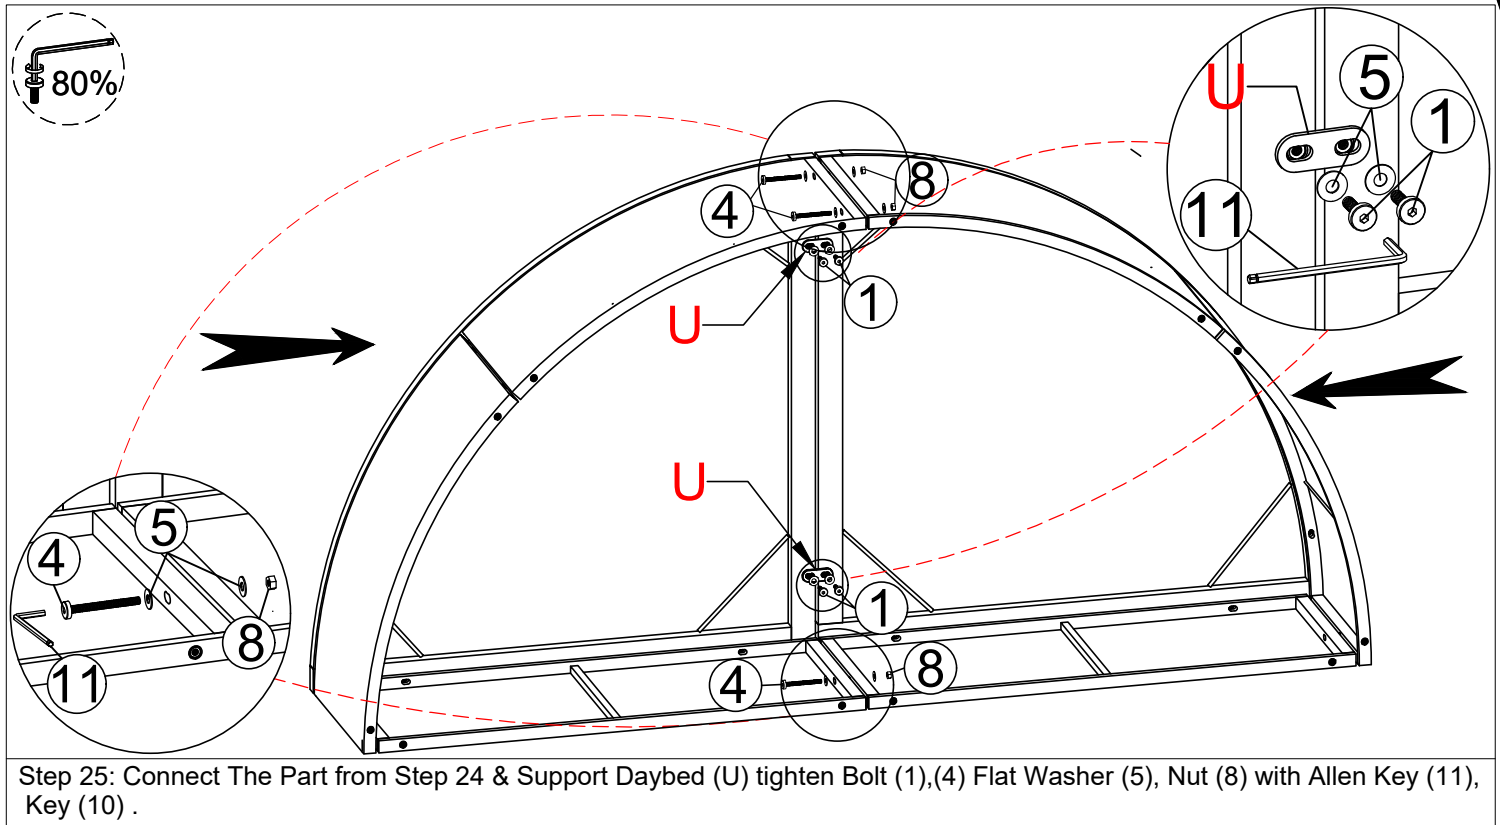

Installation step


For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

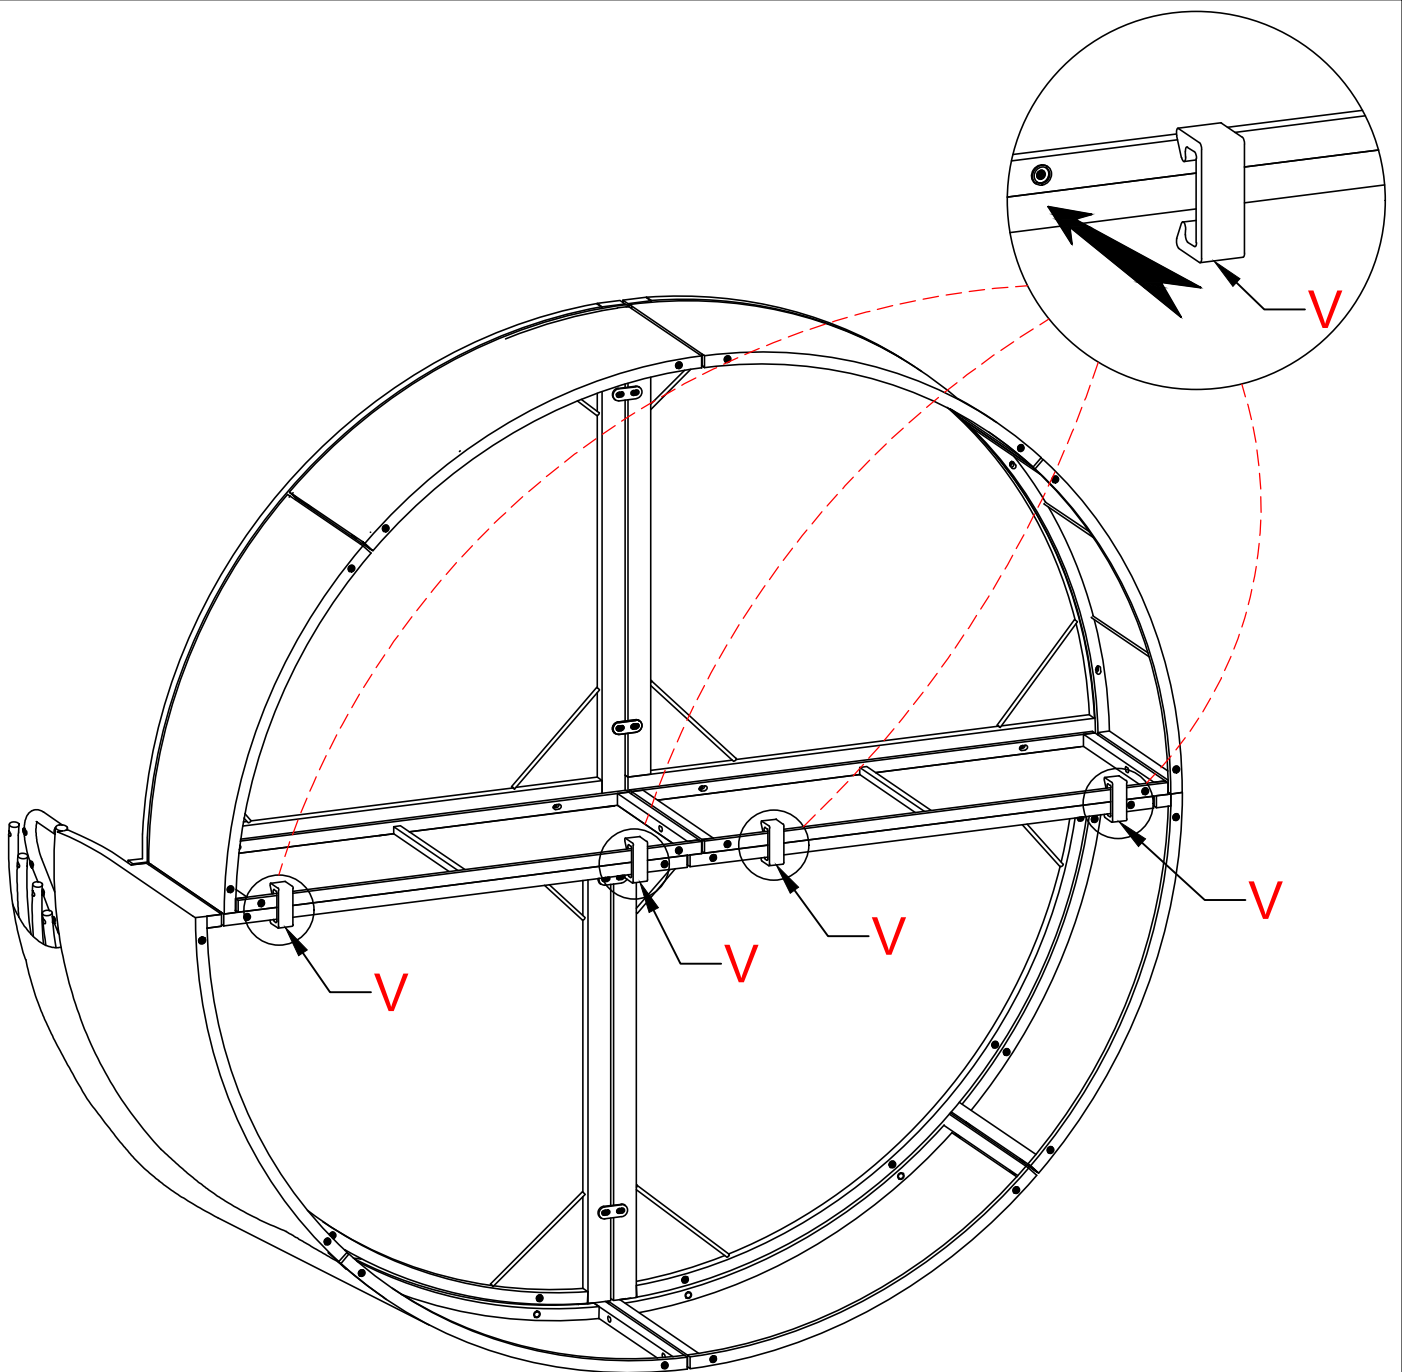

Step 27: Connect Daybed & Ottoman to Connector (V)

Installation step

For successful installation, When installing, please do not tighten the screws once, when the screws are all installed, a unified tighten all the screws

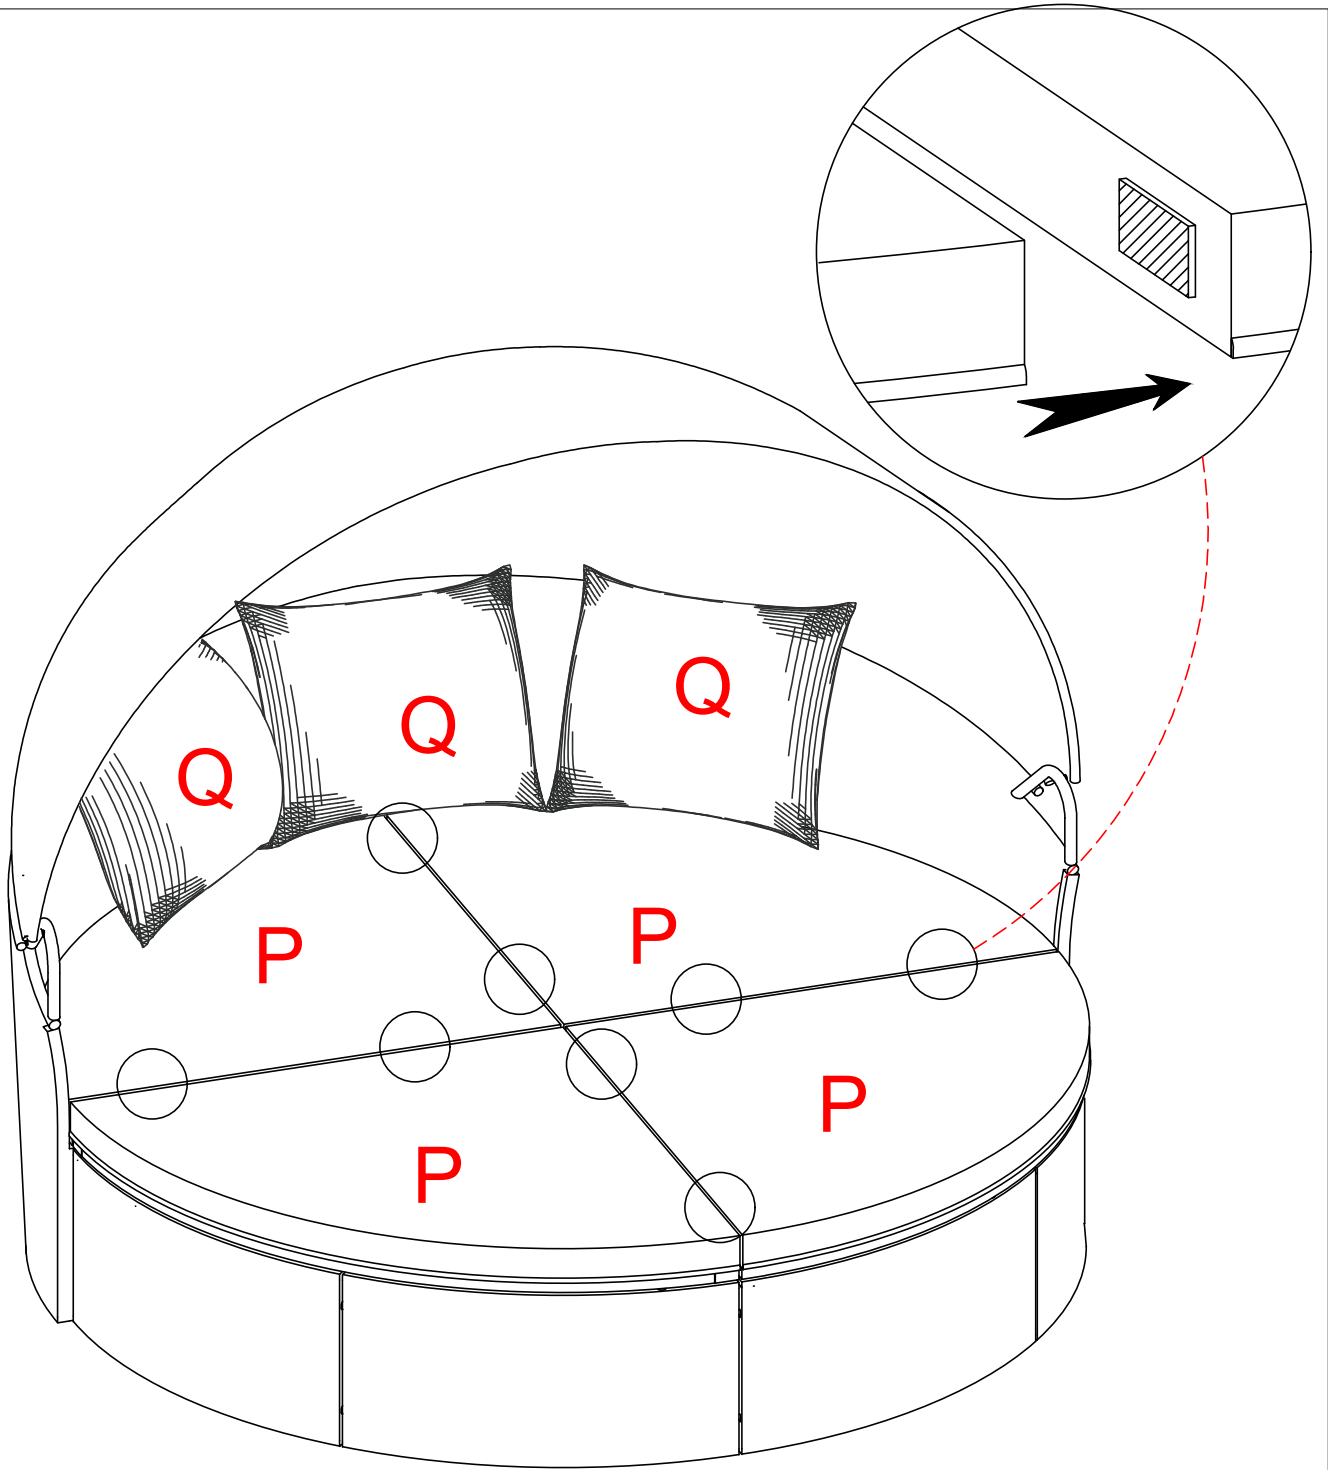

Step 28: Put on Seat Cushion (P) and Back Cushion (Q) to Daybed, Stick string to daybed and Finish Daybed .