















Assembly Instruction

eHemco 2 Tone Rustic 2 Doors Distressed Turquoise Cabinet with Dark Oak Top.


PARTS	A 	B 	C 	D 	E 	F 	G 			
QTY	1	1	1	2	1	1	4			

PARTS	H1 	H2 	H3 	H4 	H5 	H6 				
QTY	8	8	4	1	2	2				


STEP 1

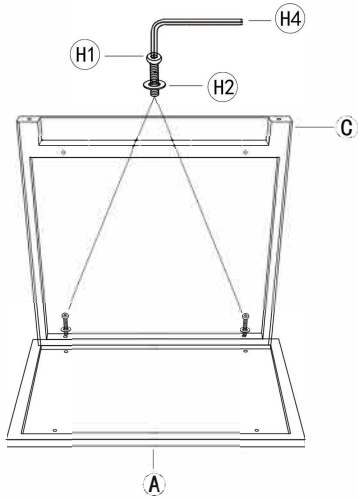


STEP 2

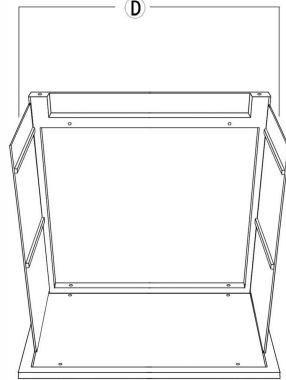


STEP 3

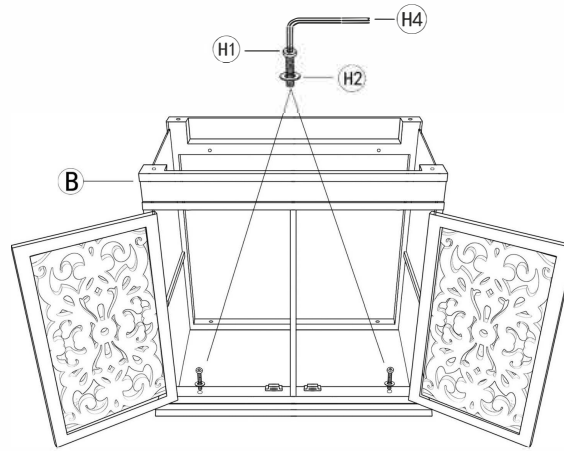


STEP 4

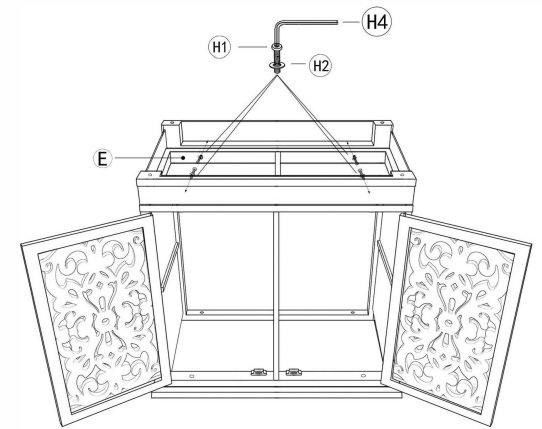


STEP 5

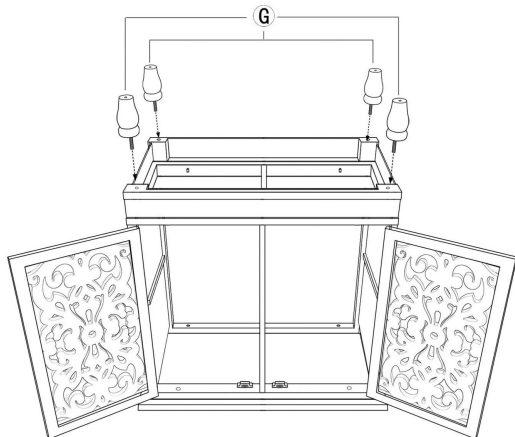

STEP 6

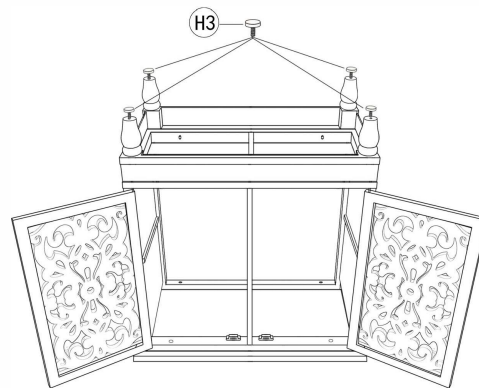

STEP 7

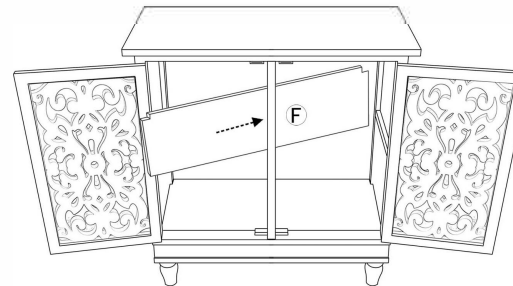

STEP 8

