




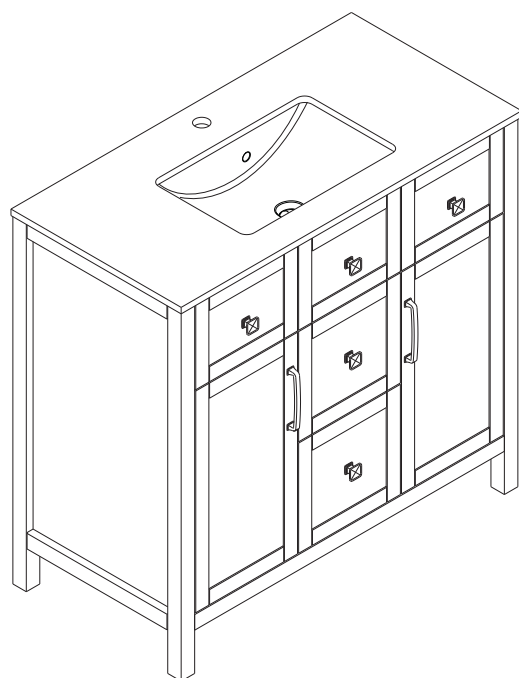

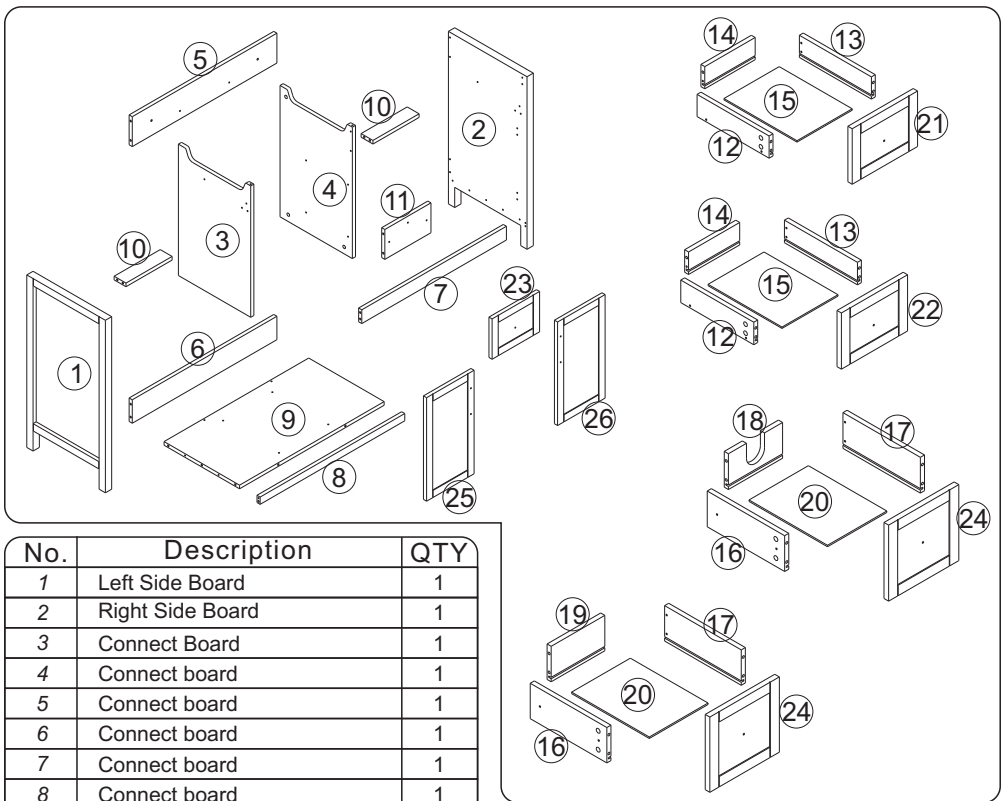


No.	Description	QTY
1	Left Side Board	1
2	Right Side Board	1
3	Connect Board	1
4	Connect board	1
5	Connect board	1
6	Connect board	1
7	Connect board	1
8	Connect board	1
9	Bottom board	1
10	Connect board	2
11	Connect board	1
12	Left board for up drawer	2
13	Right board for up drawer	2
14	Back board for up drawer	2
15	Bottom board for up drawer	2
16	Left board for down drawer	2
17	Right board for down drawer	2
18	Back board for down drawer	1
19	Back board for down drawer	1
20	Bottom board for down drawer	2
21	Drawer up left	1
22	Drawer up right	1
23	Connect board	1
24	Drawer down front	2
25	Door left	1
26	Door right	1








27		Three-in-one Connector	72
28		Wood Plug	10
29		Screws ST4x14	56
30		Hinges	4
31		Slider	8
32		Handle1	5
		Handle1 Screws M4x20	5
33		Handle2	2
		Handle2 Screws M4x22	4
34		Screws M4x35	1
35		Screws ST4x25	2
36		Screws ST5.5x60	2

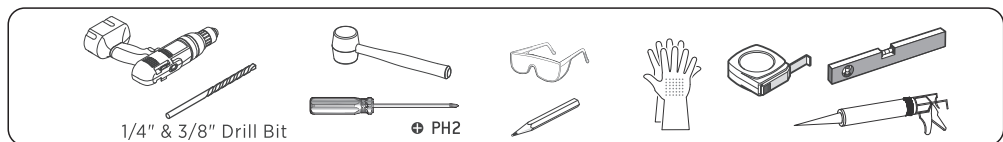




Step1

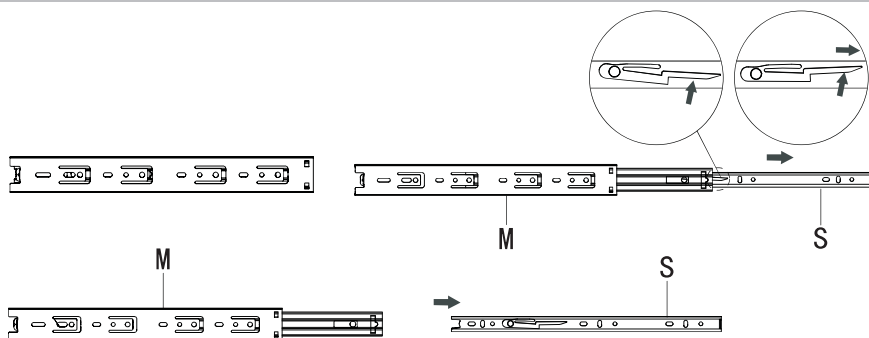

●Keep pressing here,then pull out to devide the slide.

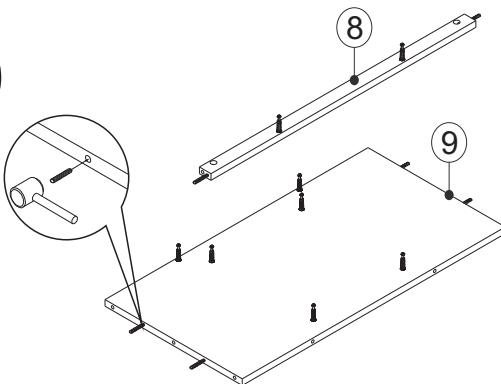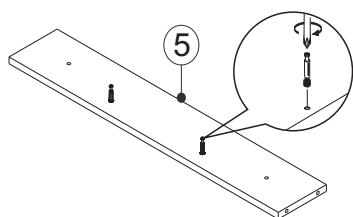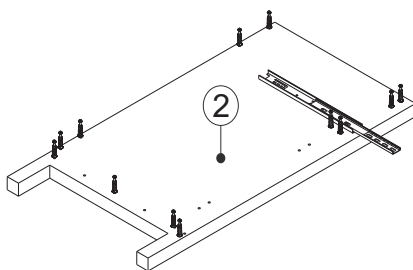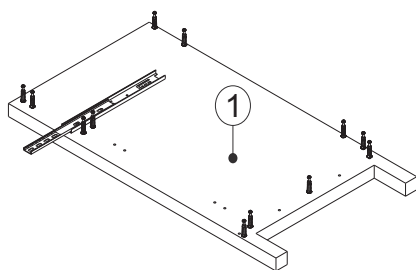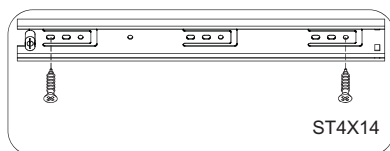
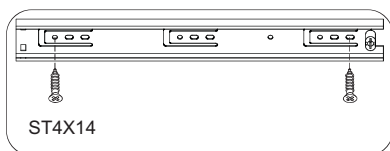
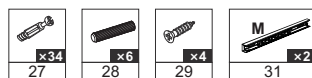


Step2

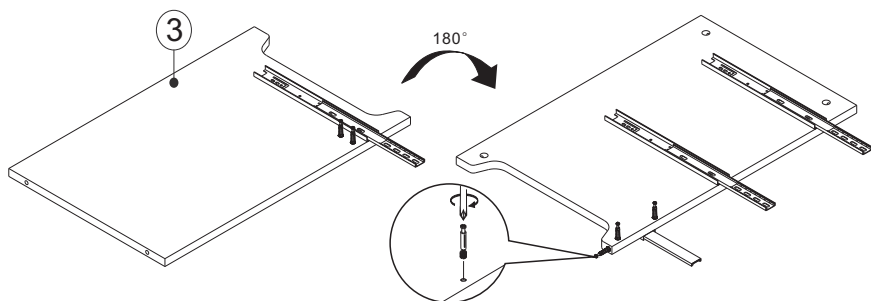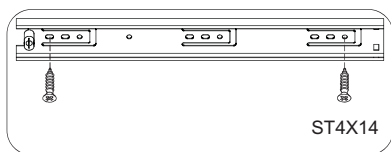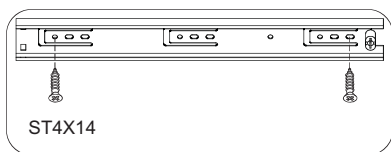


#4's installation steps are the same as #3


Step3

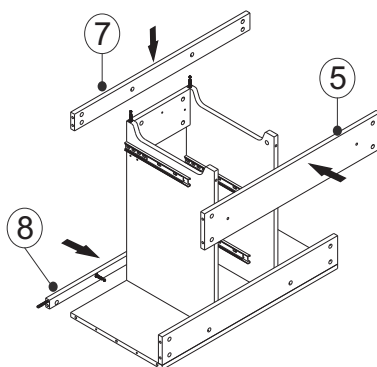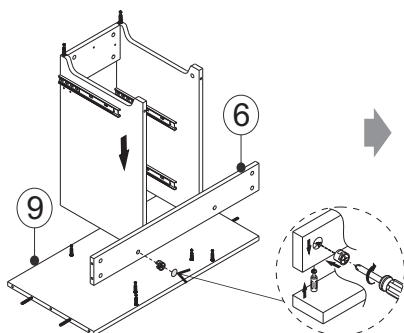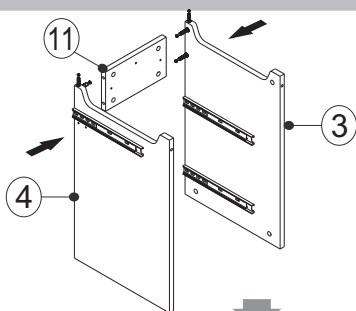


Step4

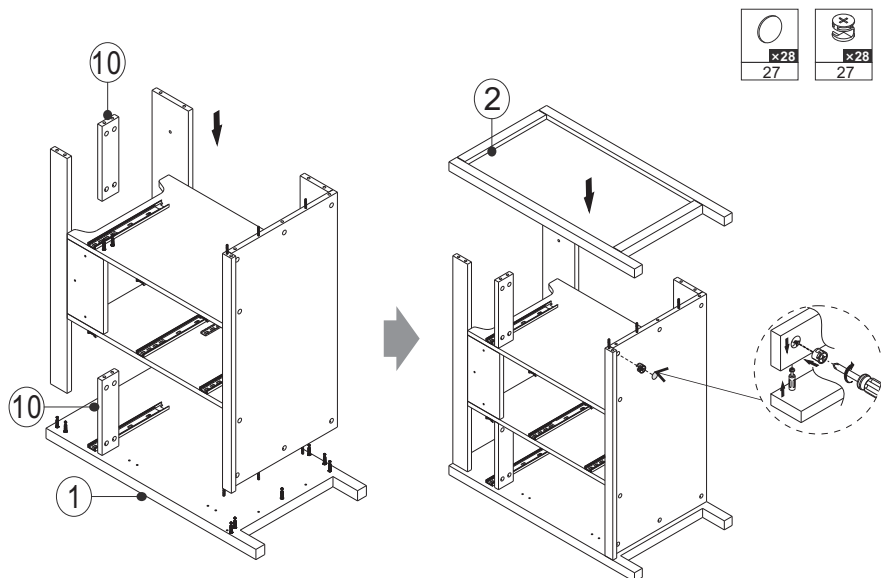

Step5

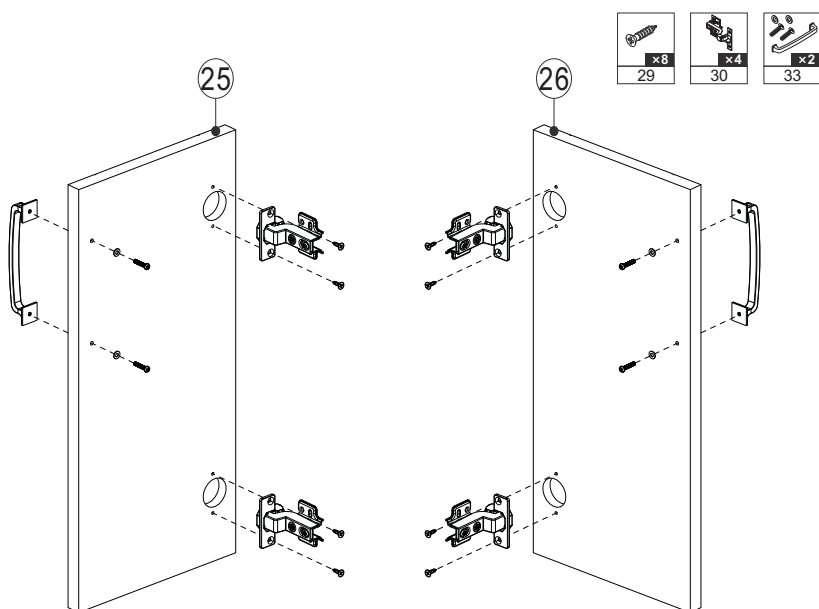


Step6

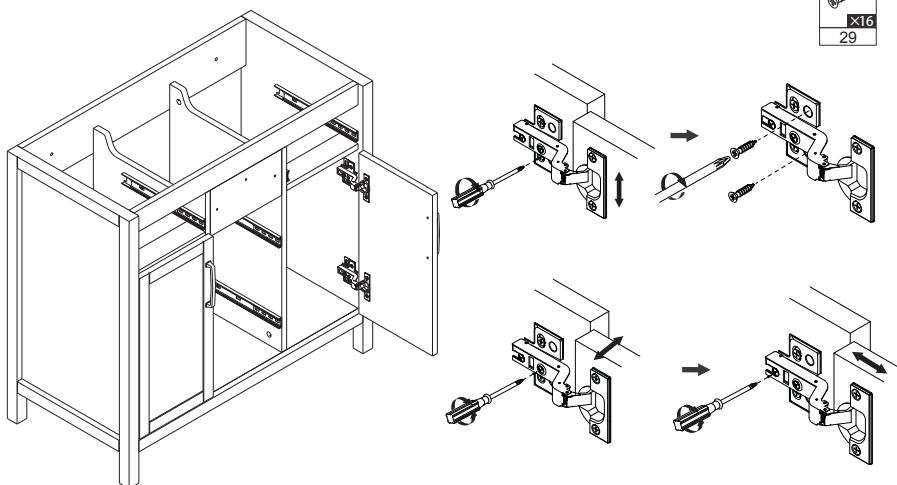

Adjust the screws as shown on the sketch map to ensure all the door gaps are in the same level.


Step7

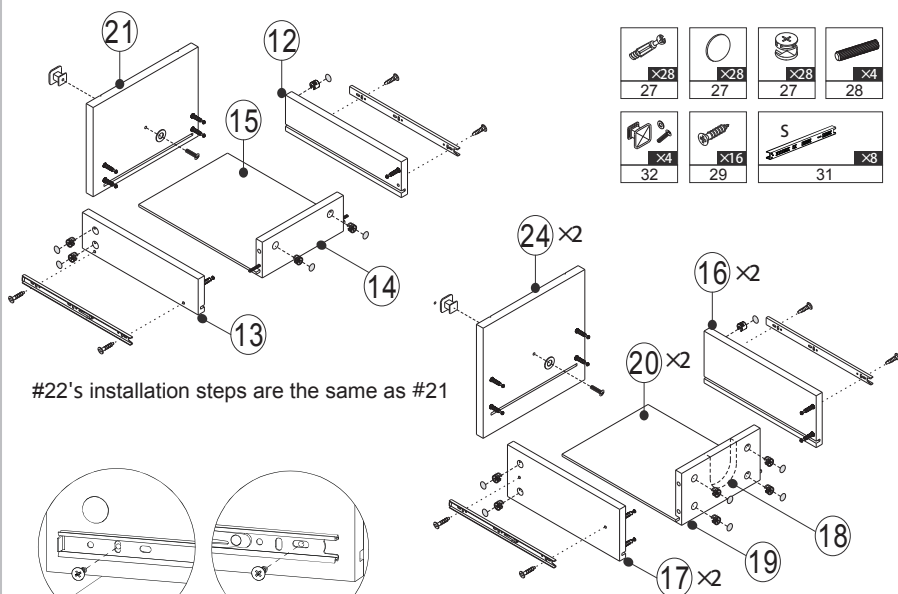


#22's installation steps are the same as #21

#18 and #19 are different with the drawer


Step8

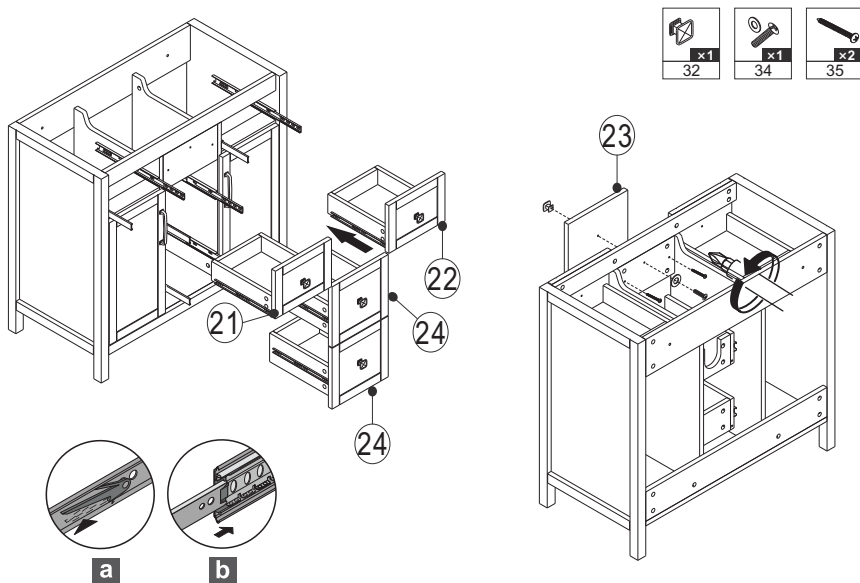


Step9

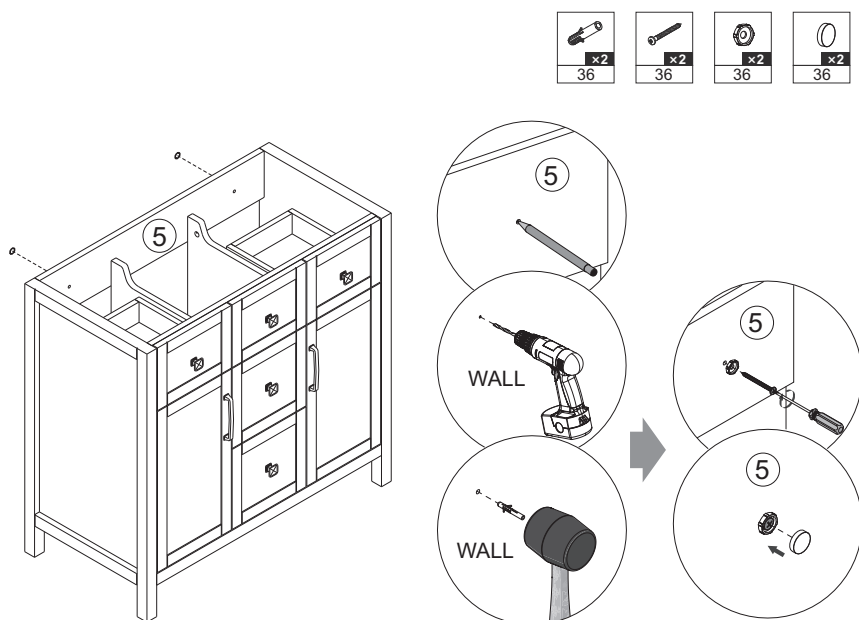

Step10

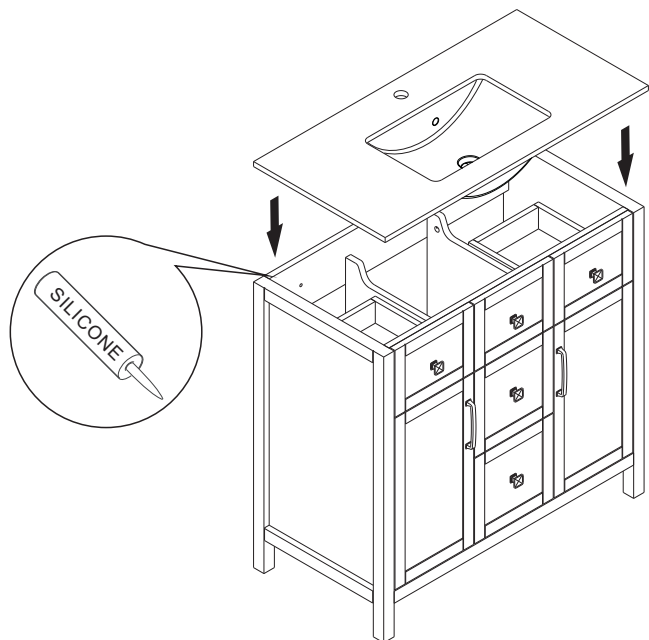

Install the basin on the cabinet with glue.

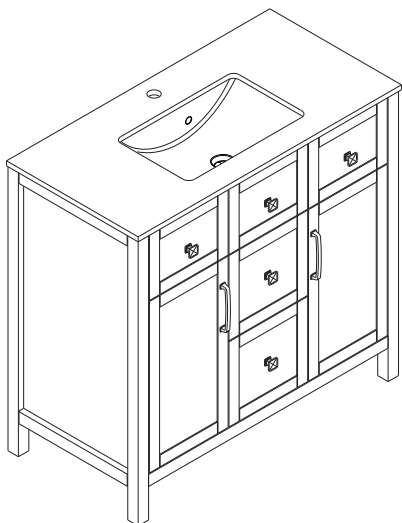

Put into use after 24 hours.