



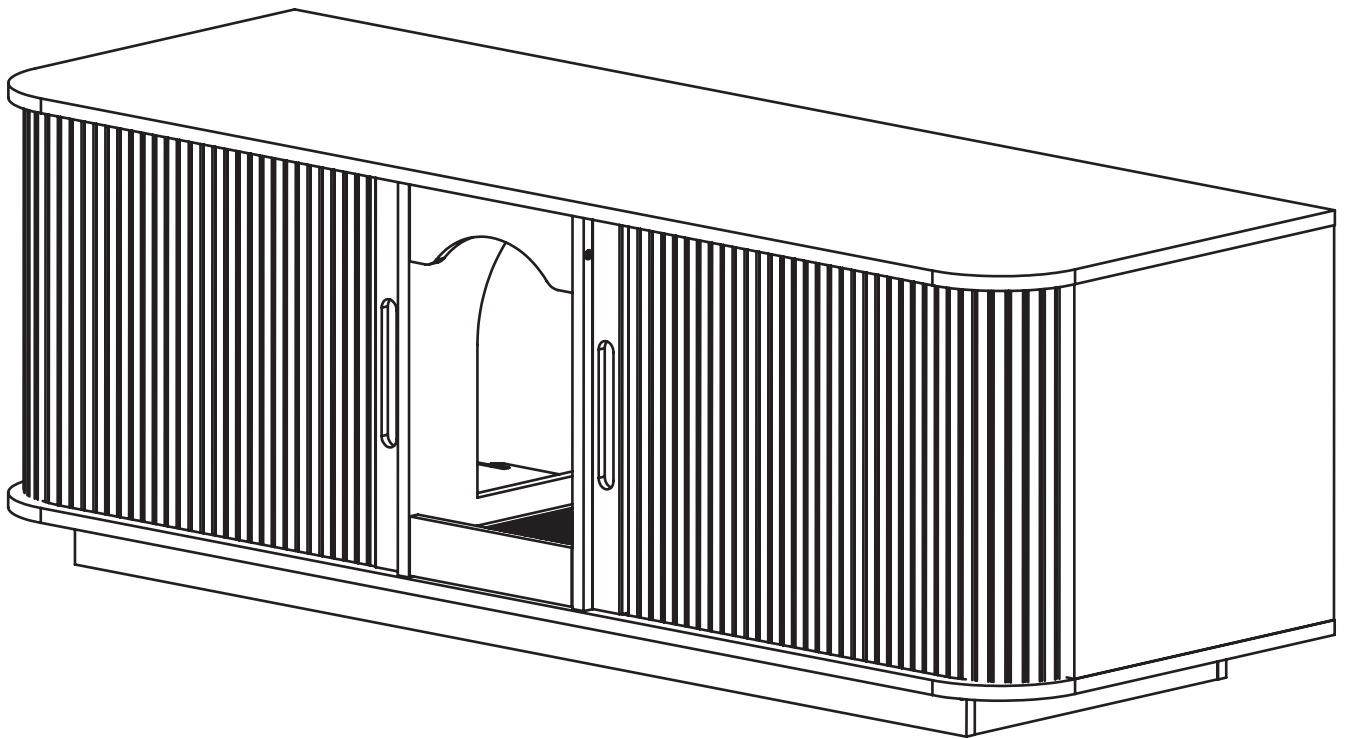

Before You Start

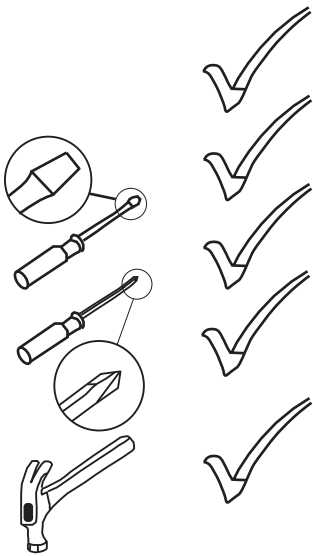

Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process

Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing, please pay attention to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.

-Identify, sort and count the parts before attempting assembly.

-Compression dowels are lightly tapped in with a hammer.

-Slides are labeled with an R(right) and L(left) for proper placement.

-Make sure to always face the point on the top of the Cam Lock towards the outer edge.

-If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.

-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.


-Do NOT use harsh chemicals or abrasive cleaners on this item.

-Never push, pull, or drag your furniture.




Board Identification

Not actual size

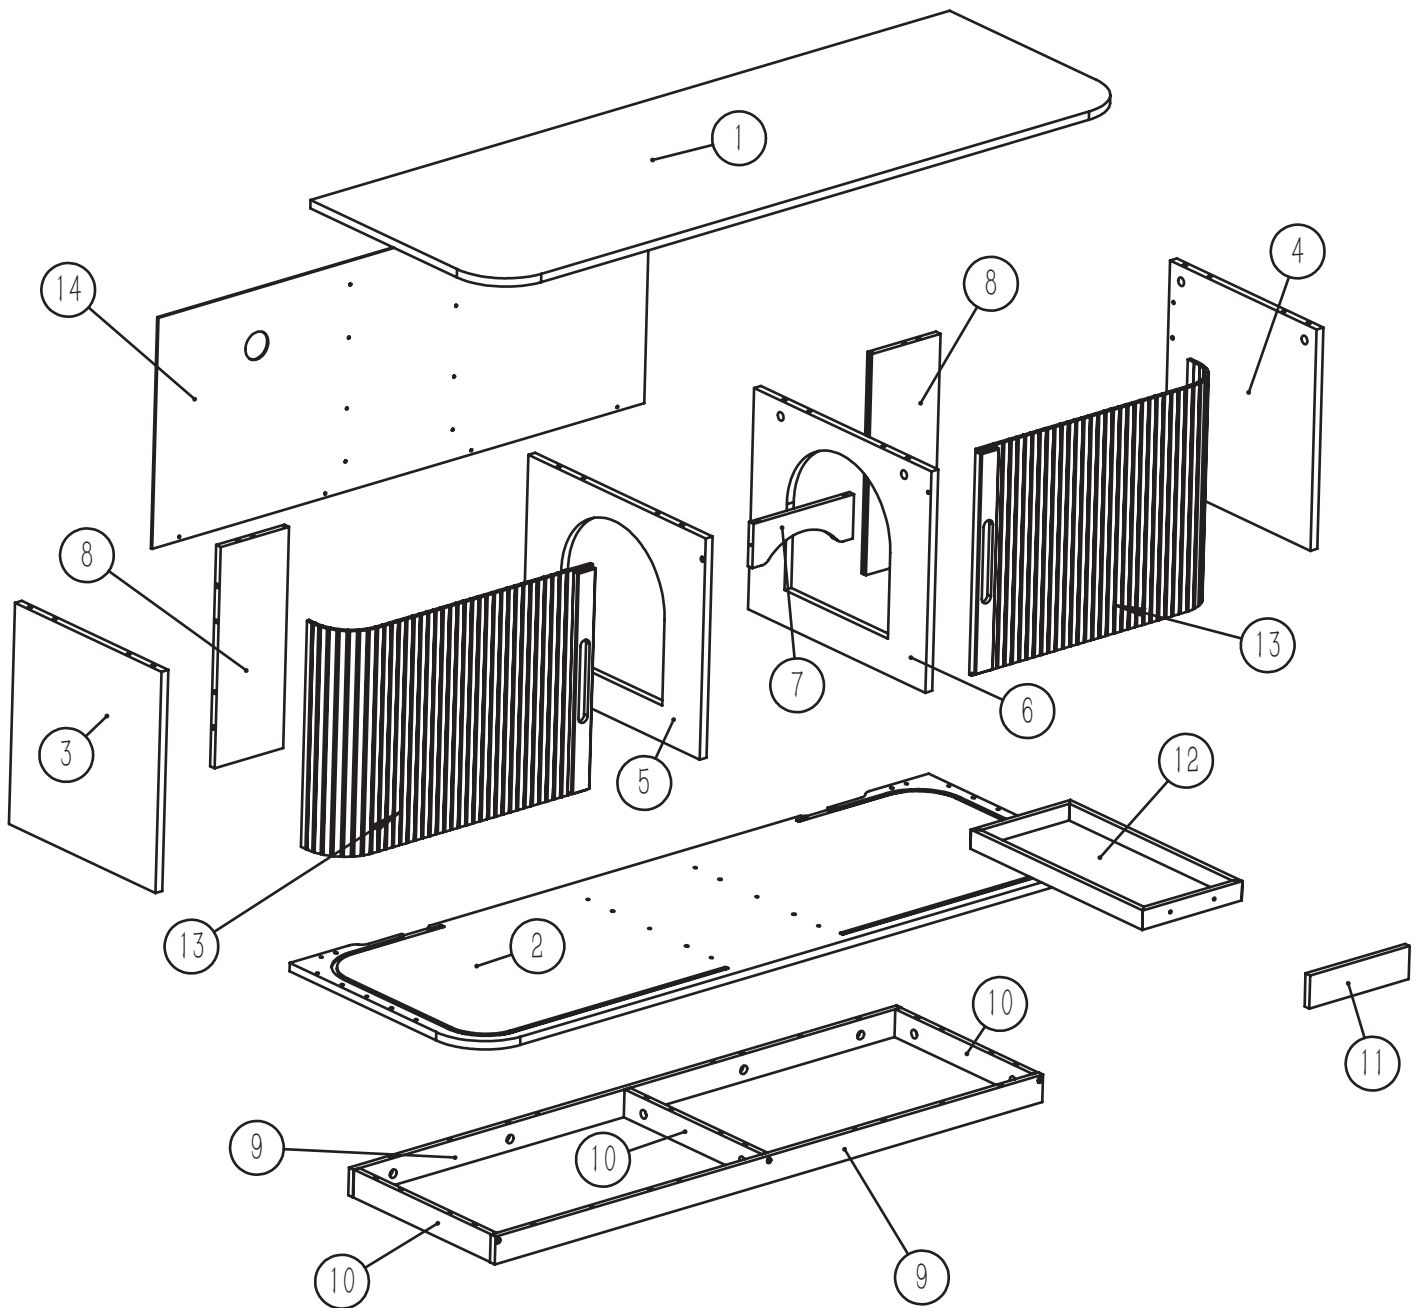


Board Identification

Not actual size

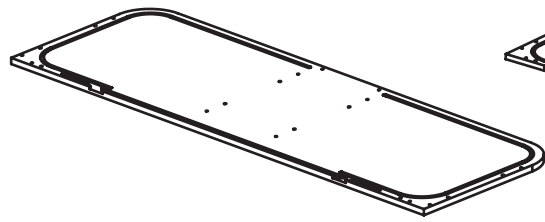


1

Qty:1

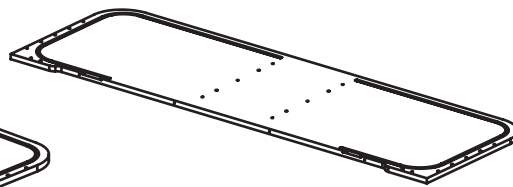


2

Qty:1

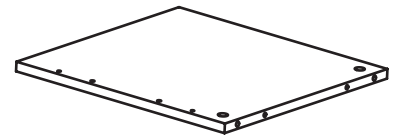


3

Qty:1

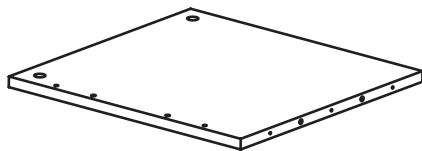


4

Qty:1

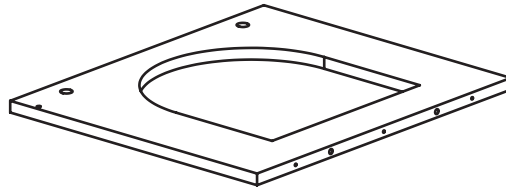


5

Qty:1

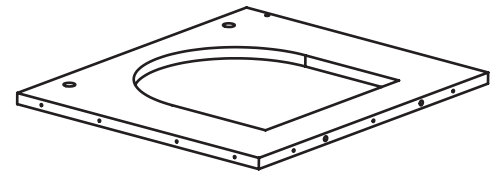


6

Qty:1

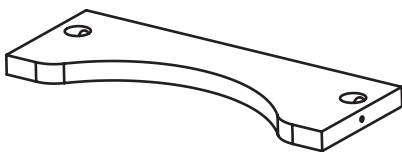


7

Qty:1

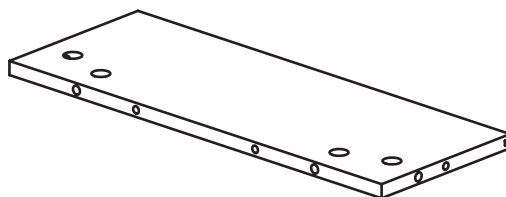

8

Qty:2

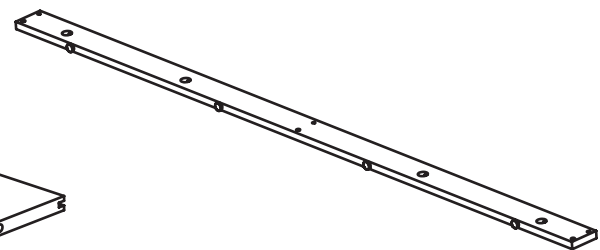


9

Qty:2


Board Identification

Not actual size

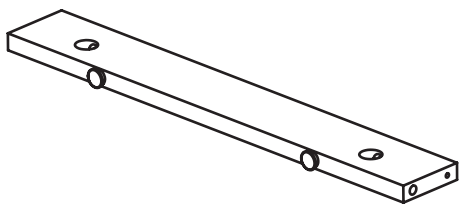


10

Qty:3

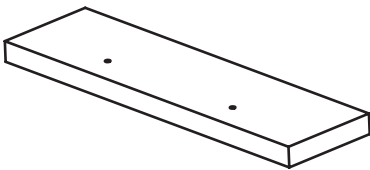


11

Qty:1

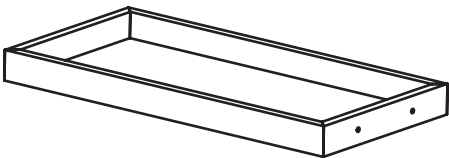


12

Qty:1

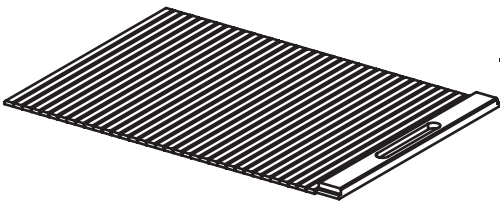

13


Qty:2

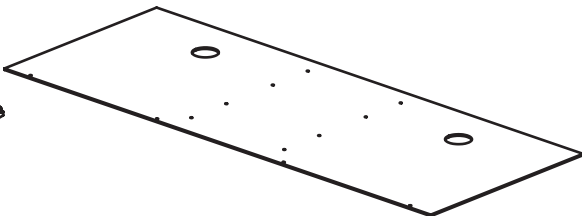


14

Qty:1


Part List

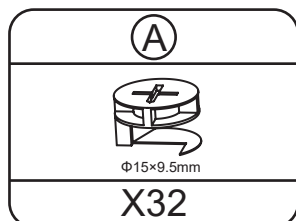


CAM LOCK

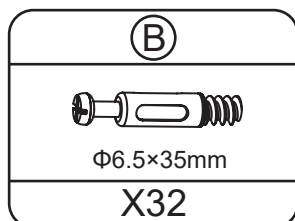


CAM BOLT

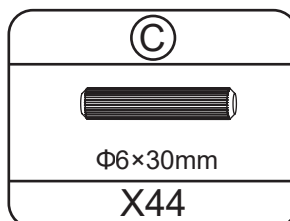


WOOD DOWEL

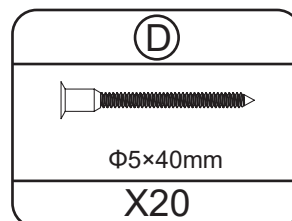


SCREWS

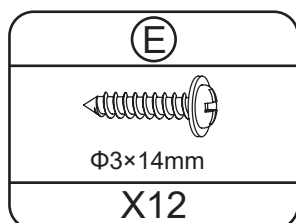


SCREWS

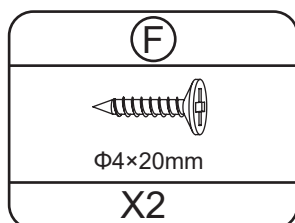


SCREWS

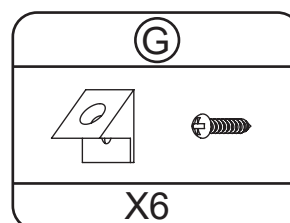


BACK PANEL BUCKLE

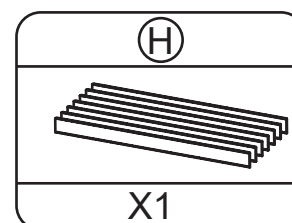

CAT SCRATCHING PAD

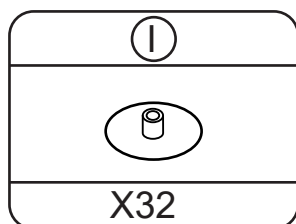


HOLE PLUG

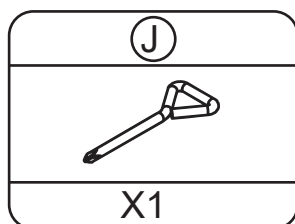

SCREWDRIVER

Cam Lock Fastening System




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

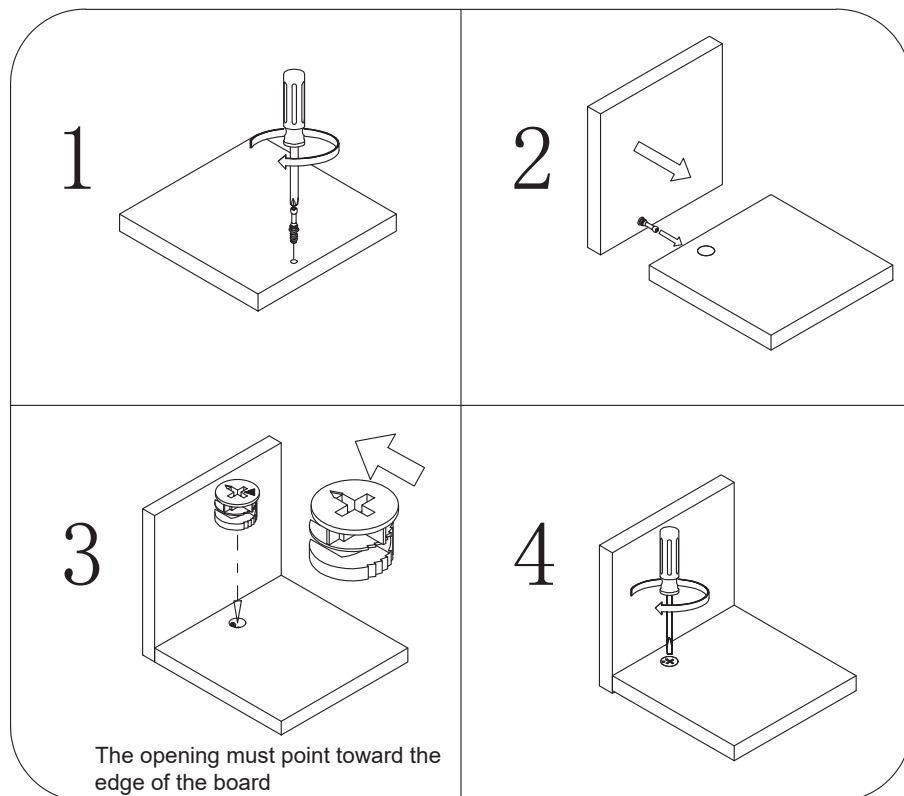






REMARK

1. Put a blanket under the board to avoid scratch or damage.





2. Please do not screw too deep or too shallow.

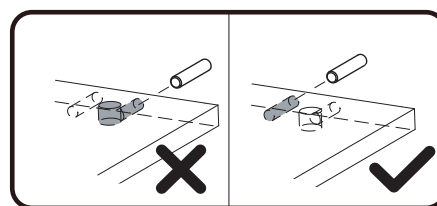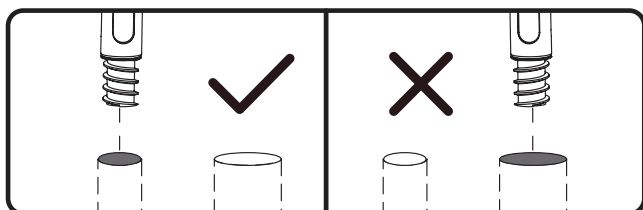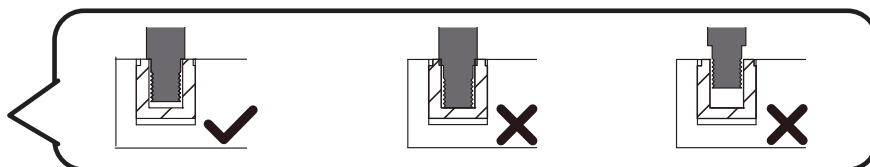





STEP1

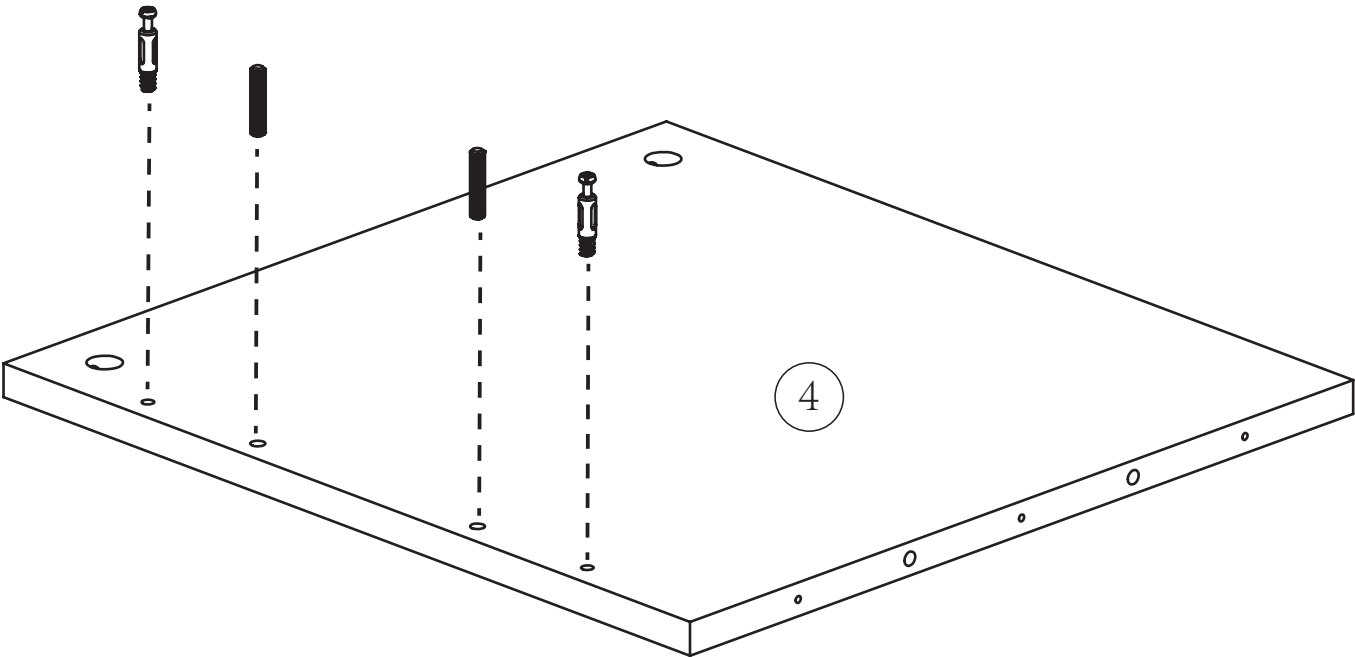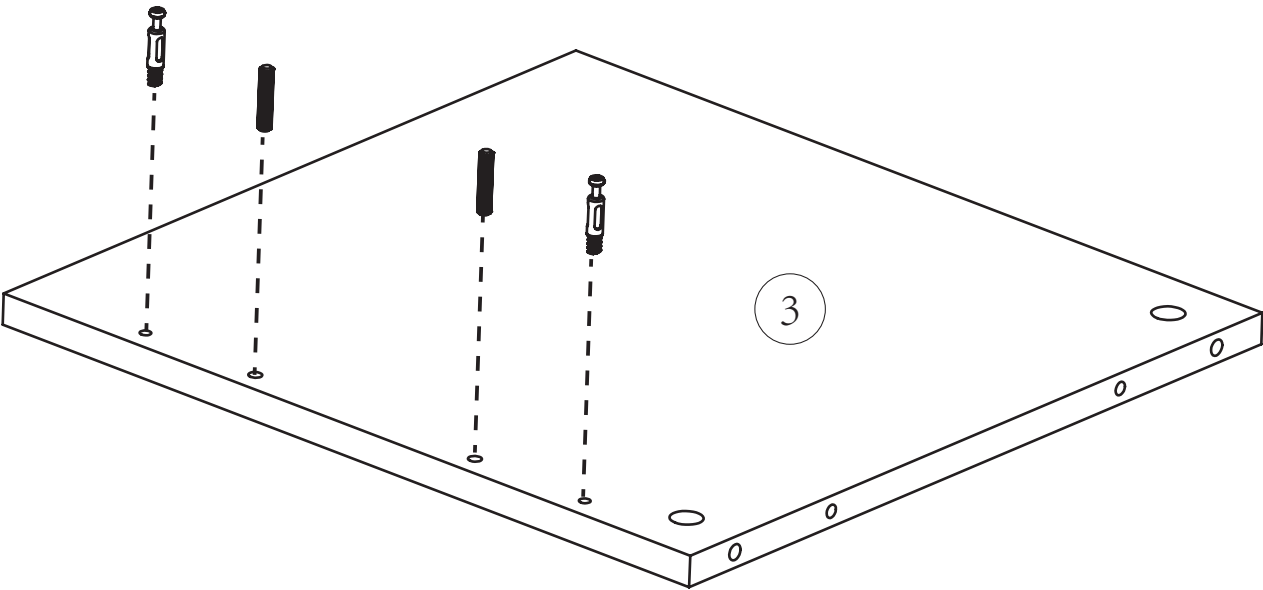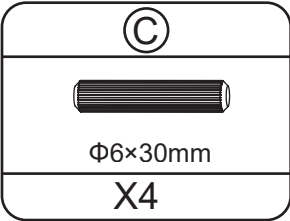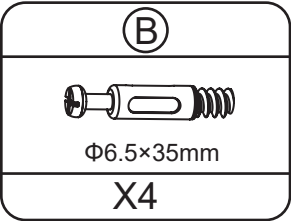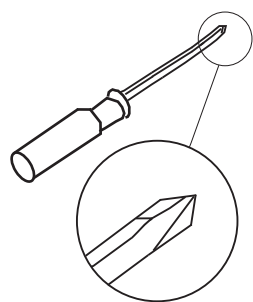



STEP2

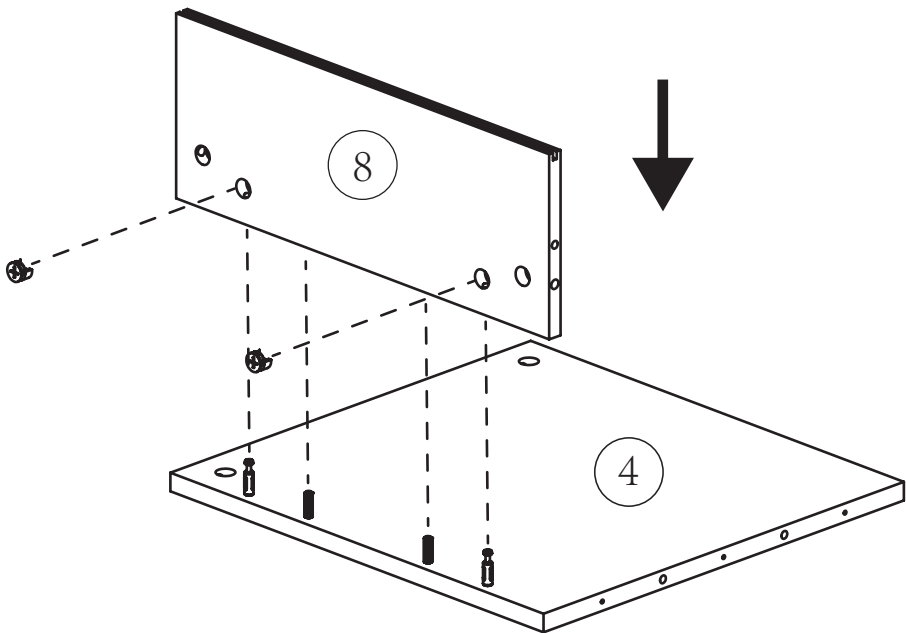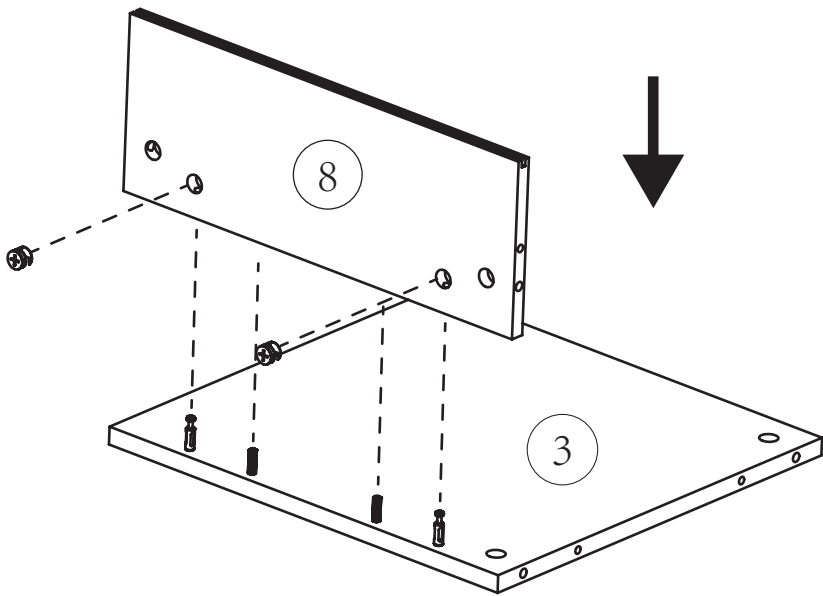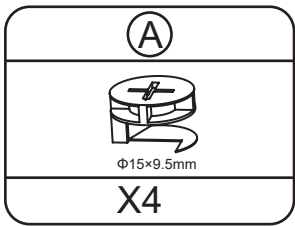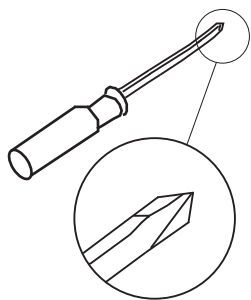




STEP3

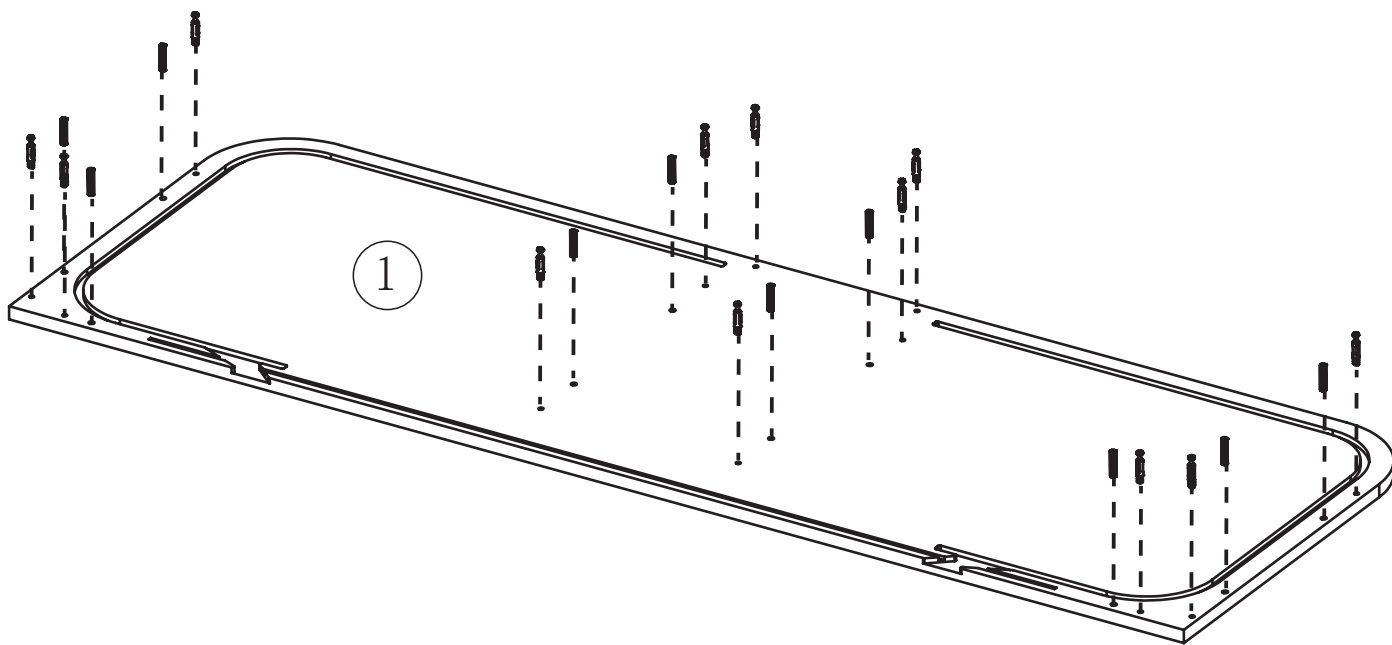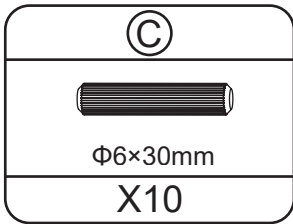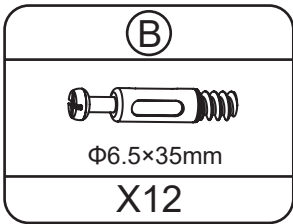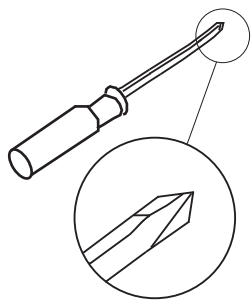



STEP4

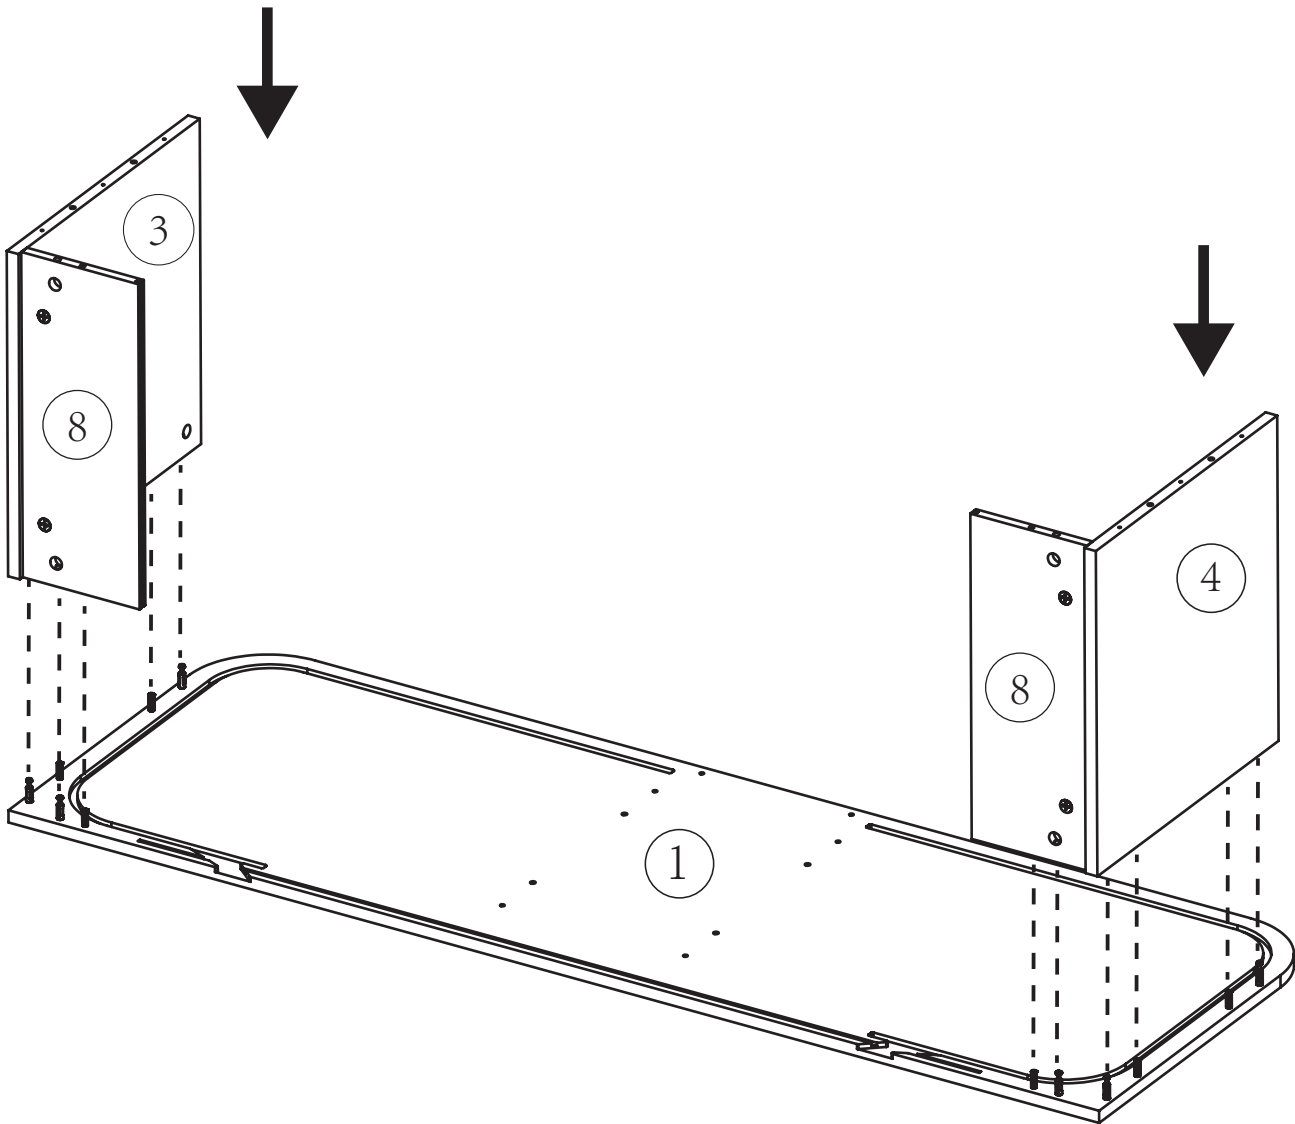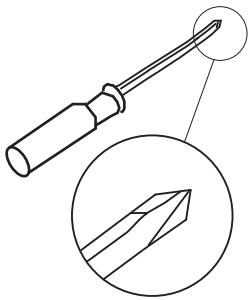





STEP5

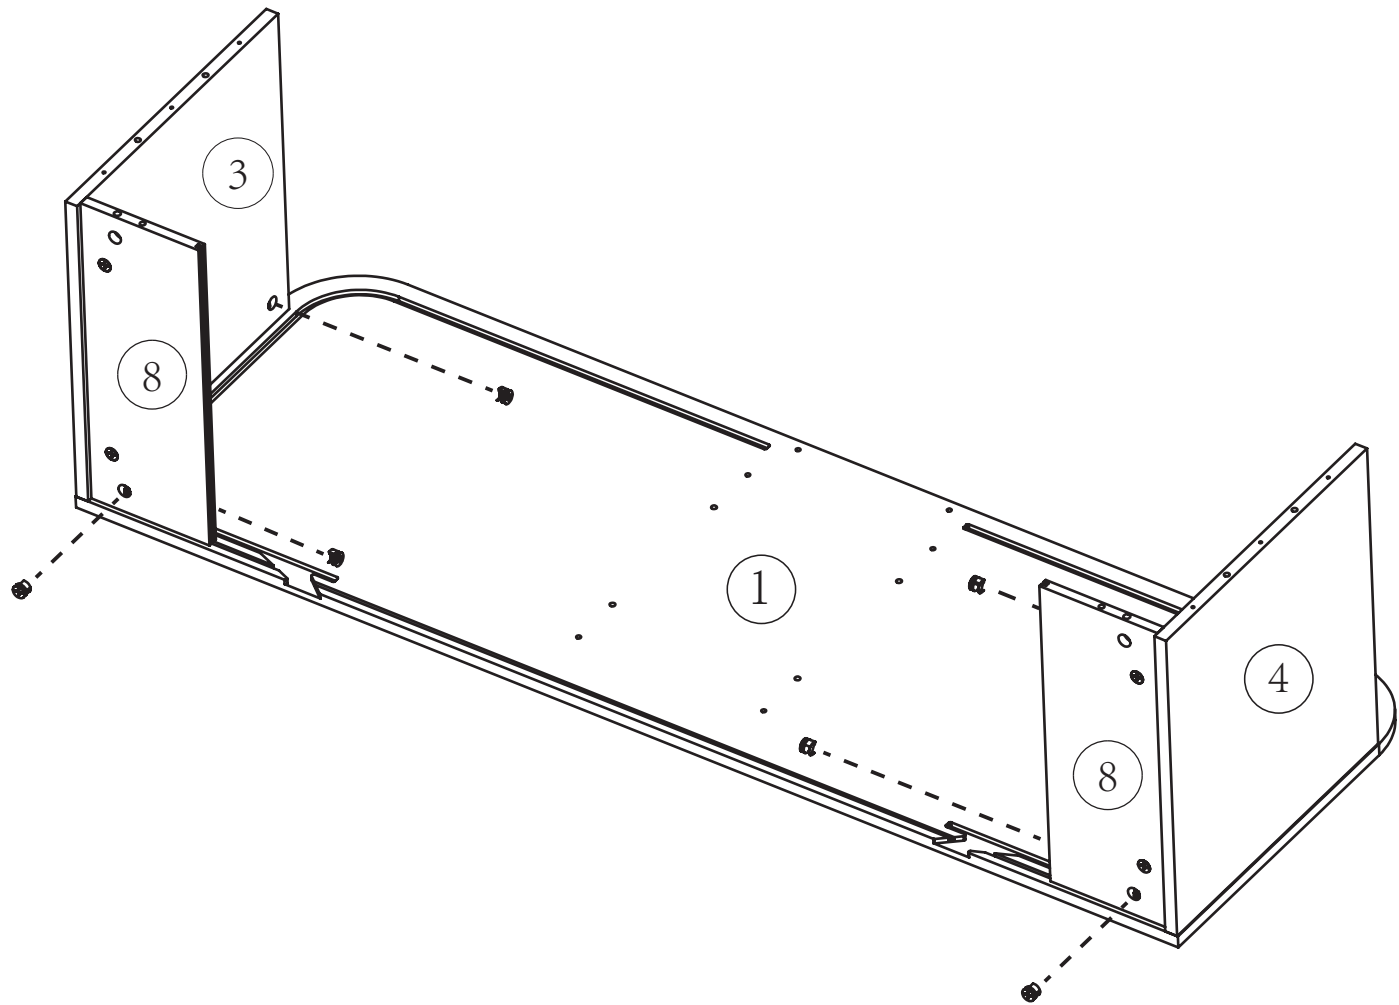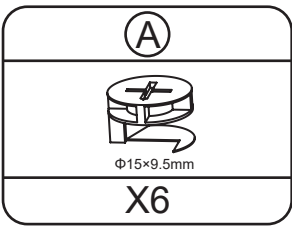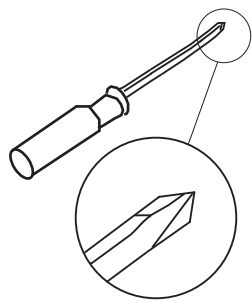




STEP6

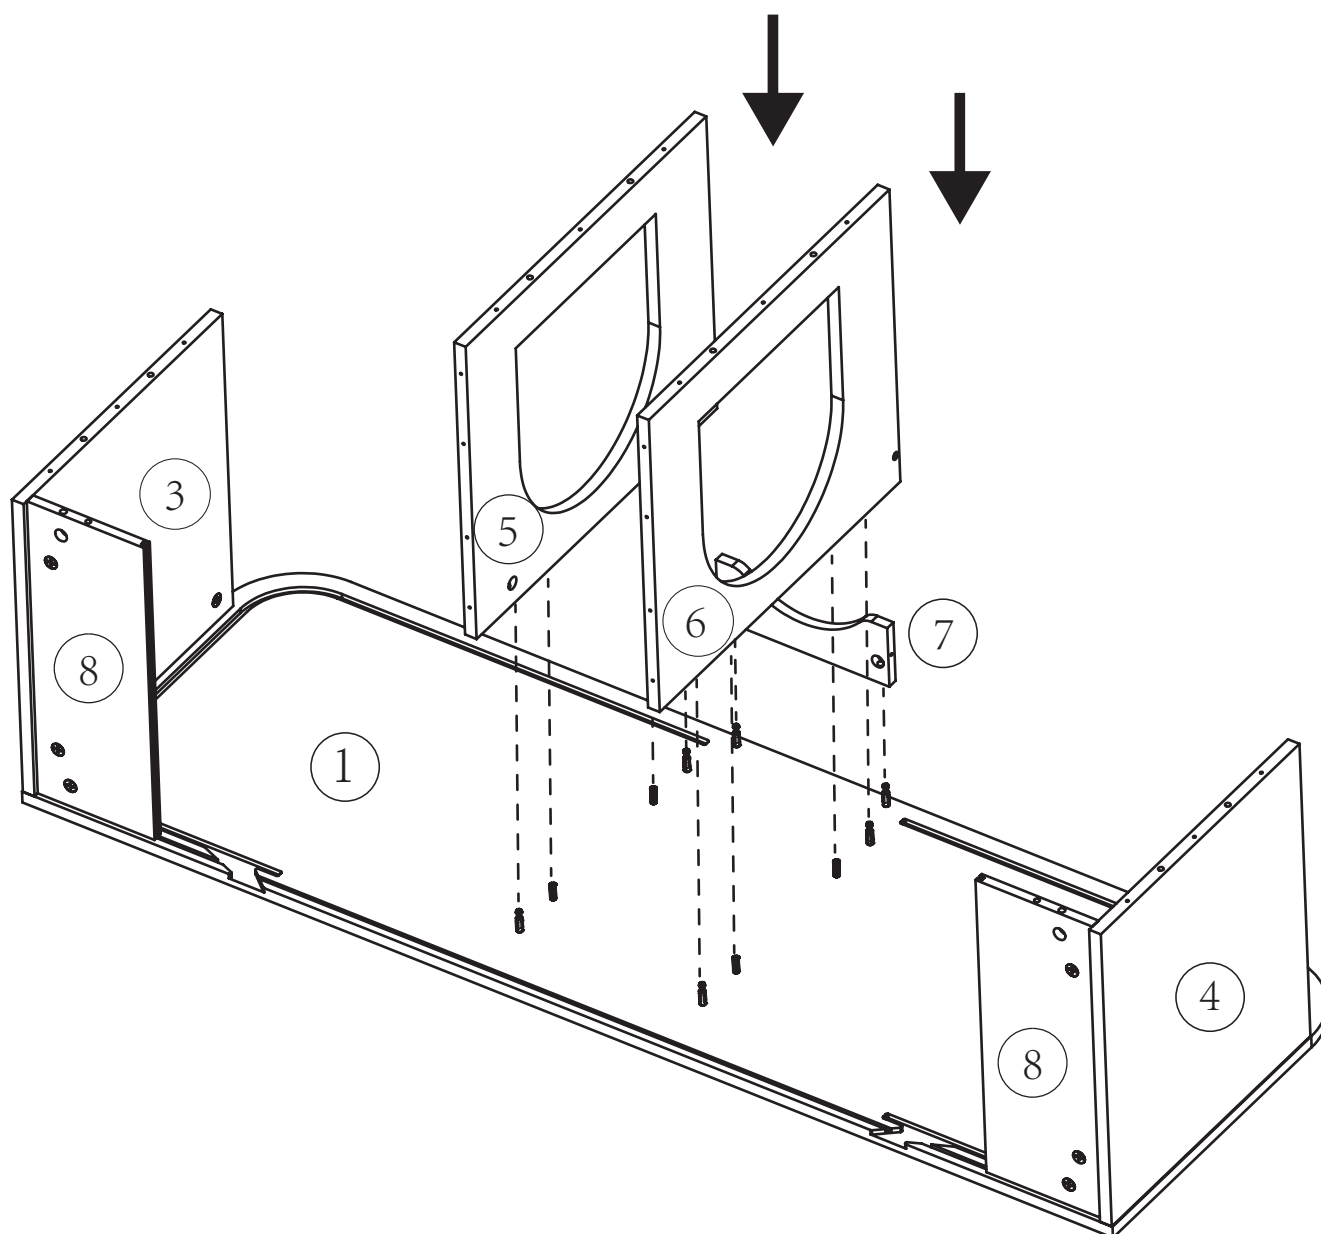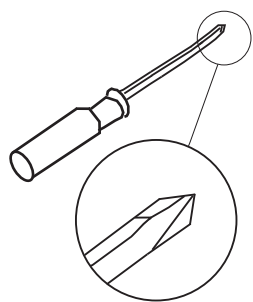






STEP7

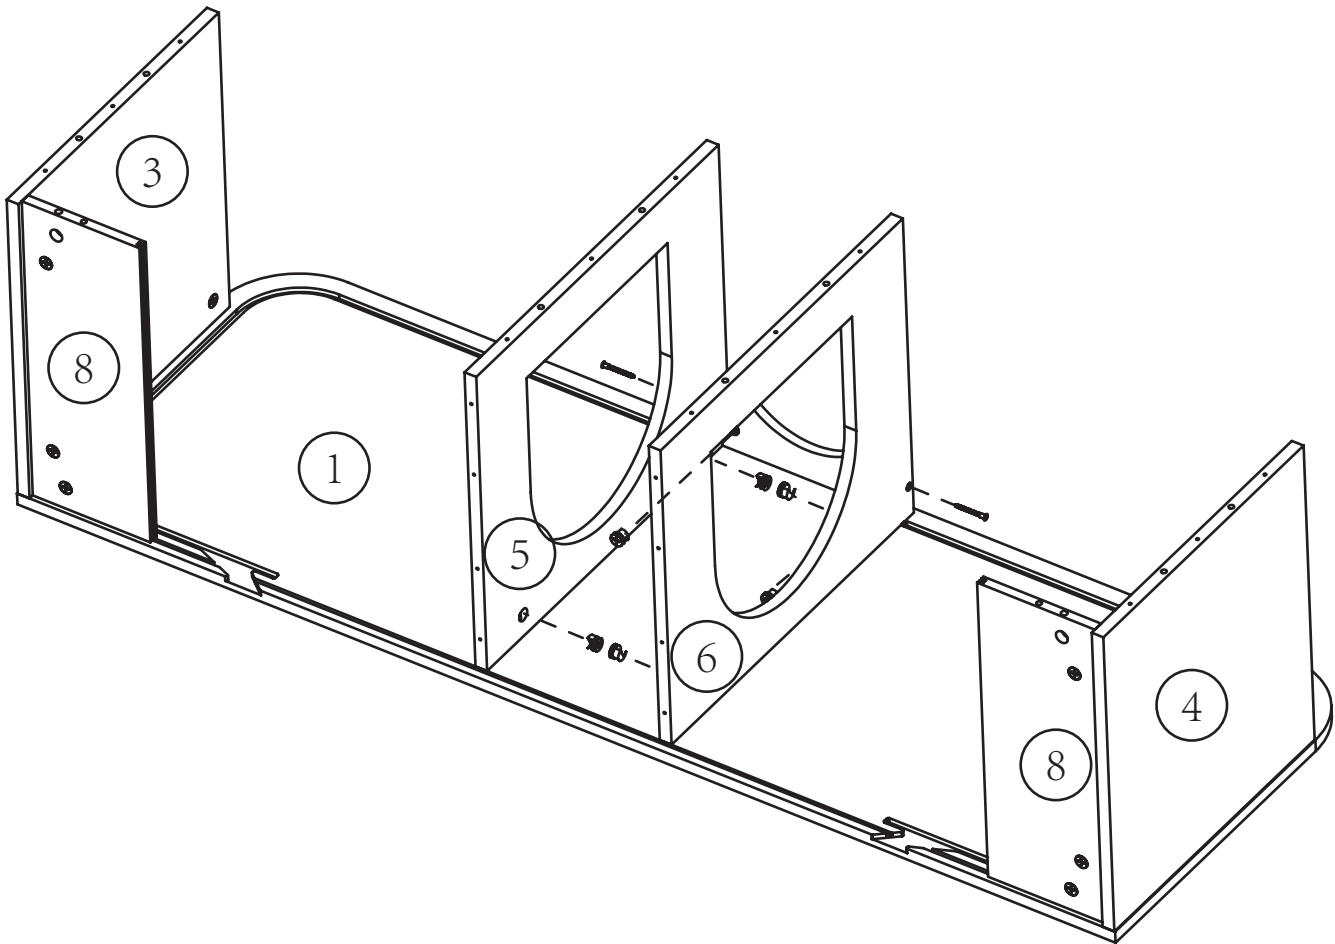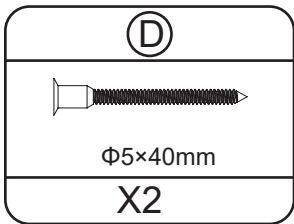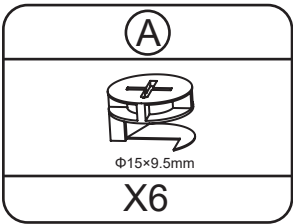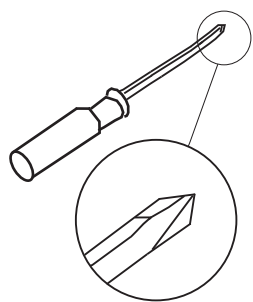





STEP8

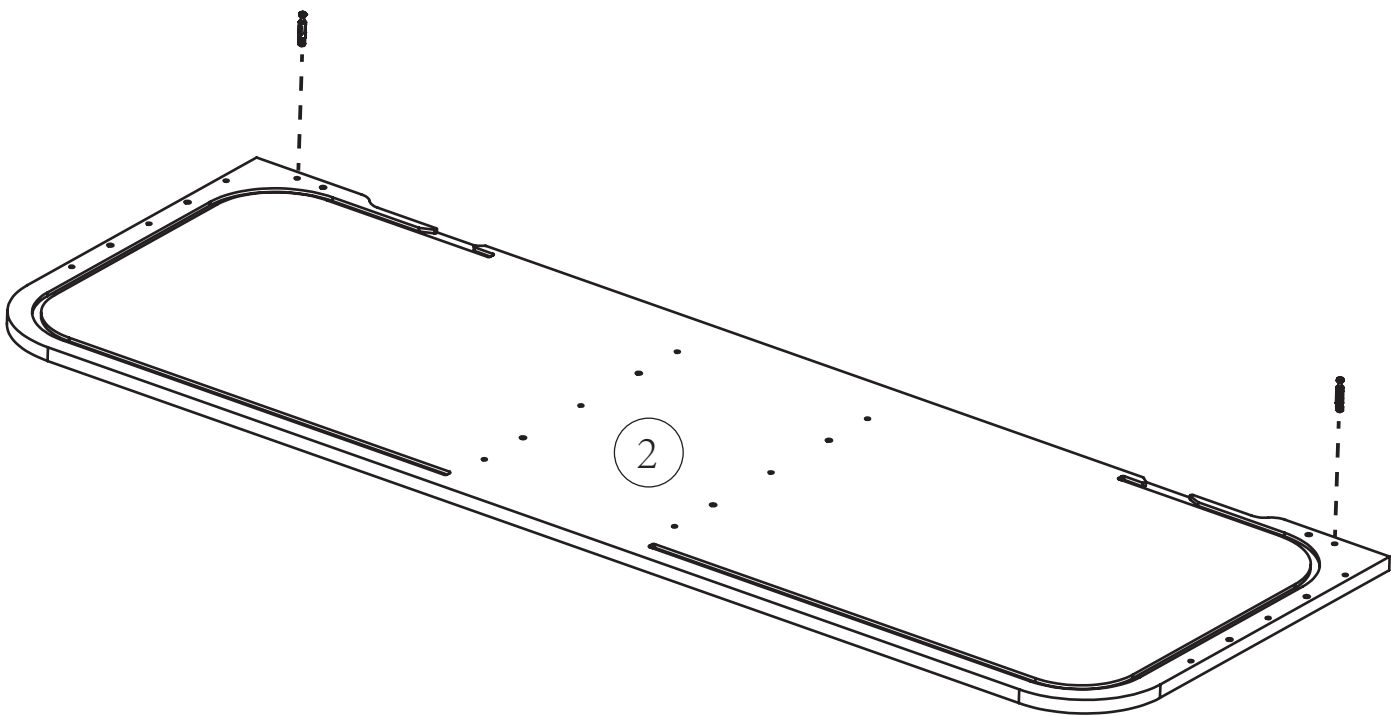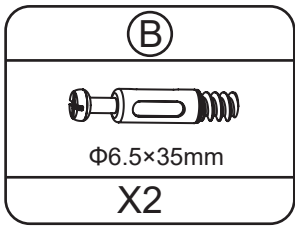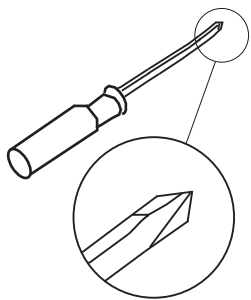





STEP9

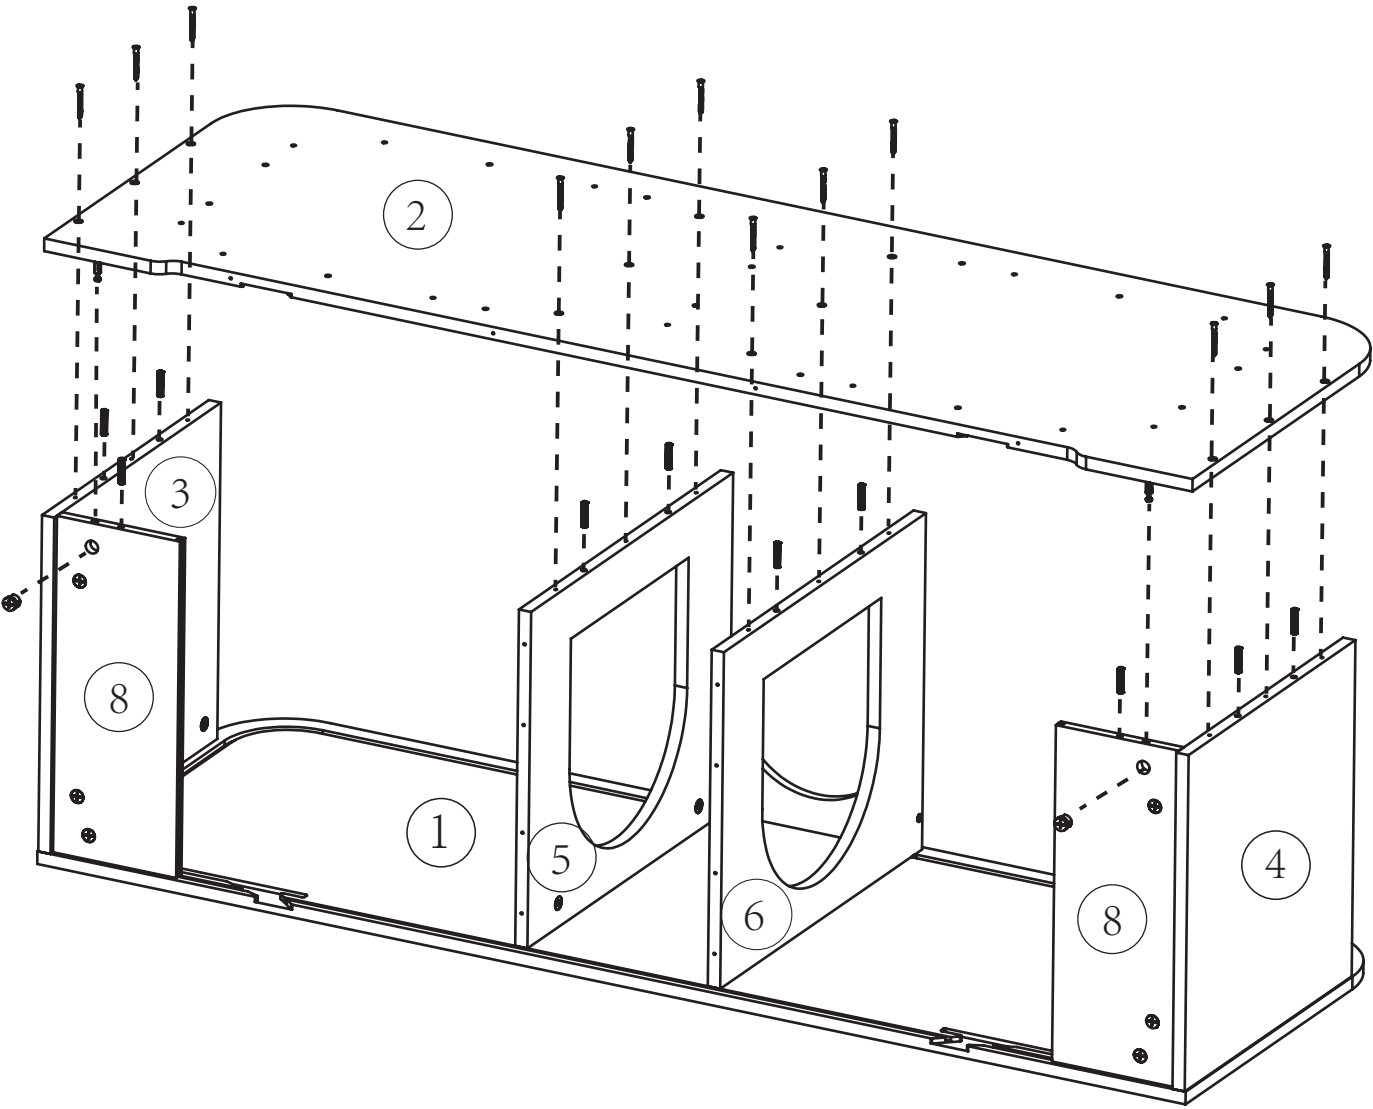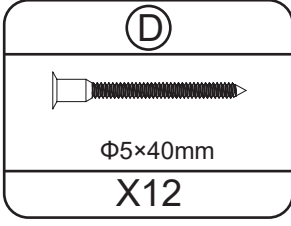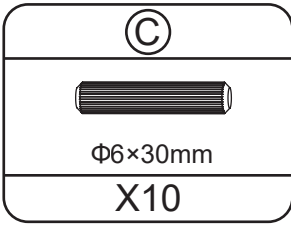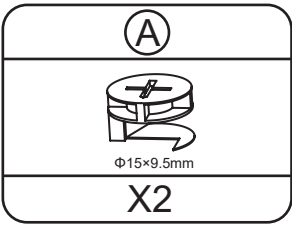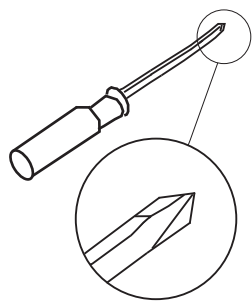




STEP10

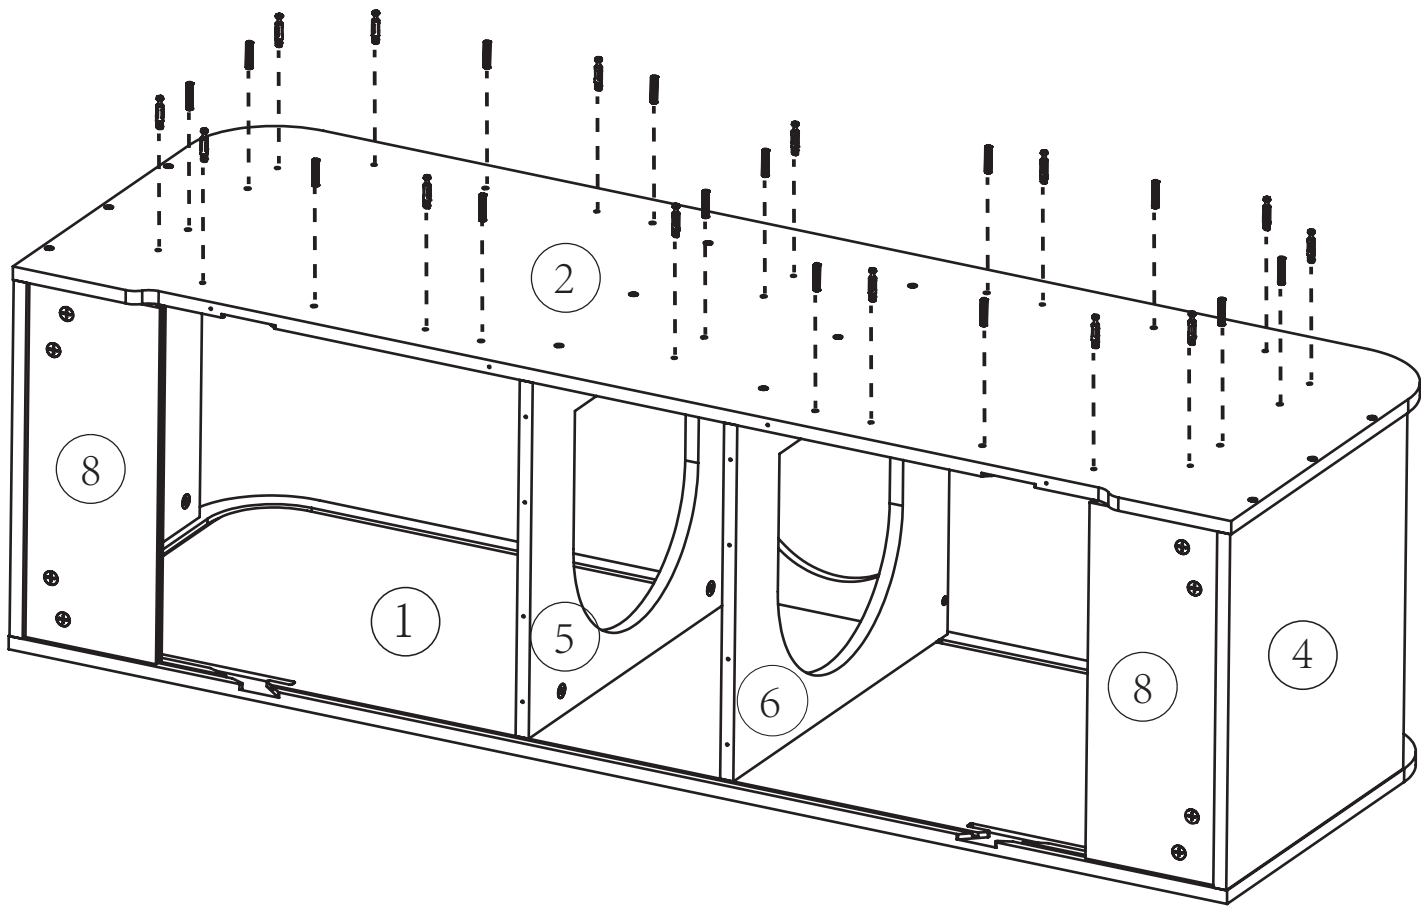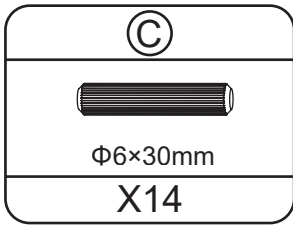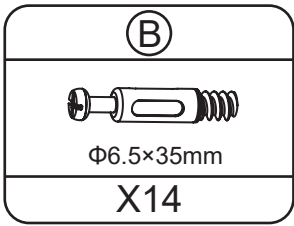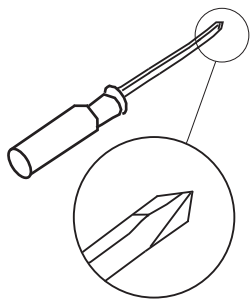



STEP11

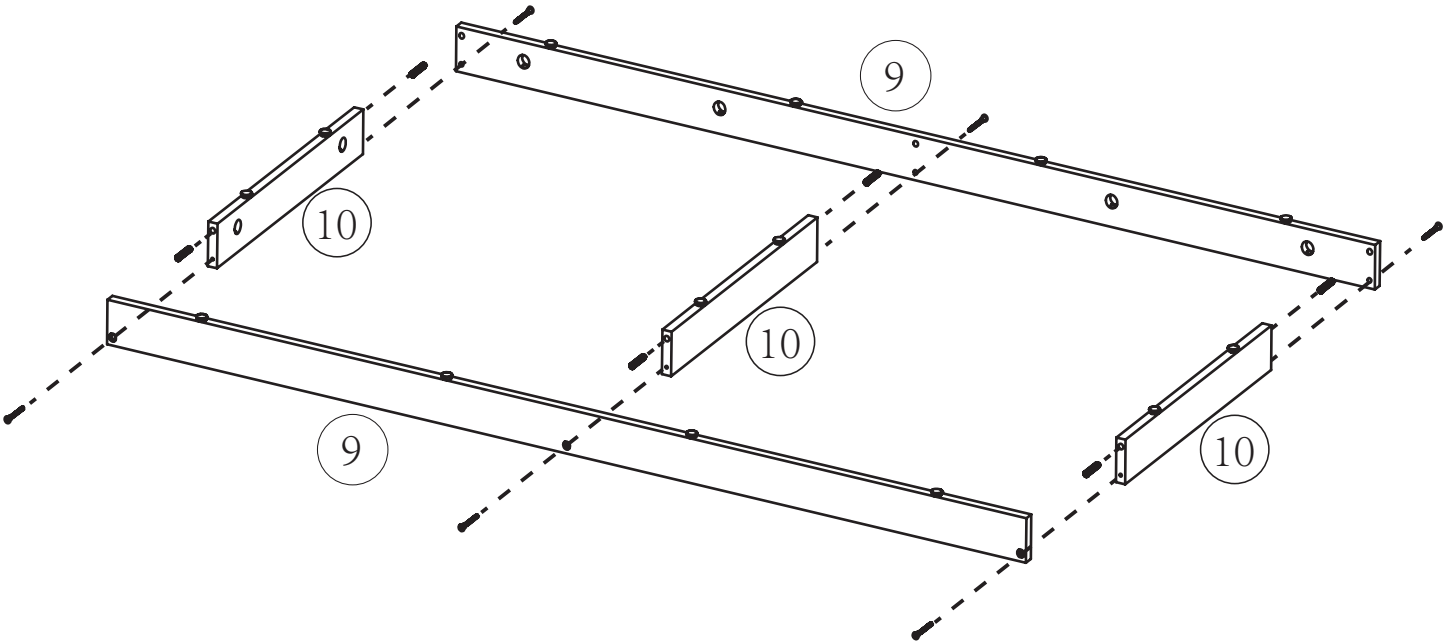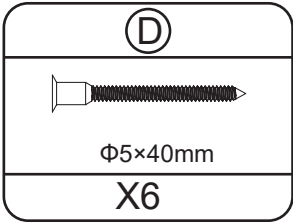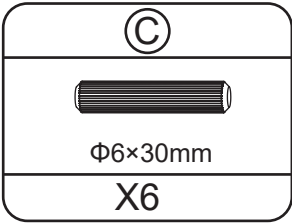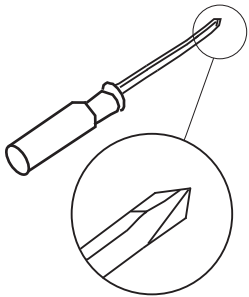



STEP12

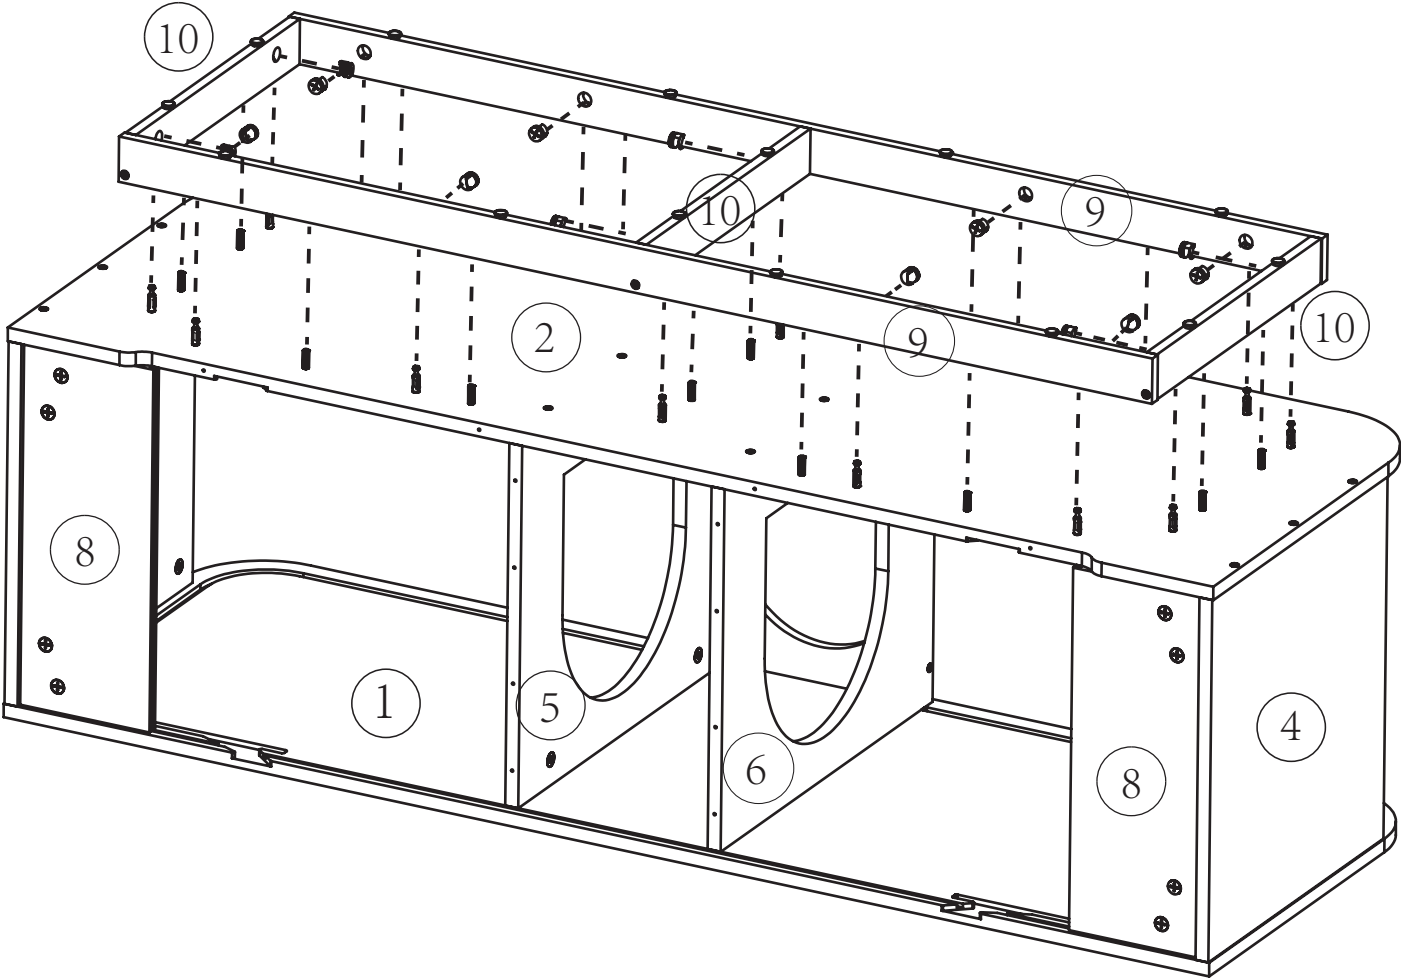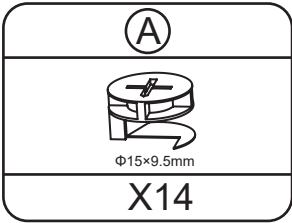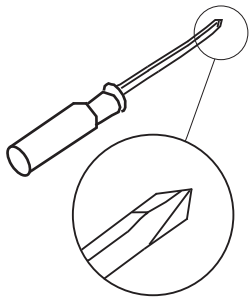



STEP13

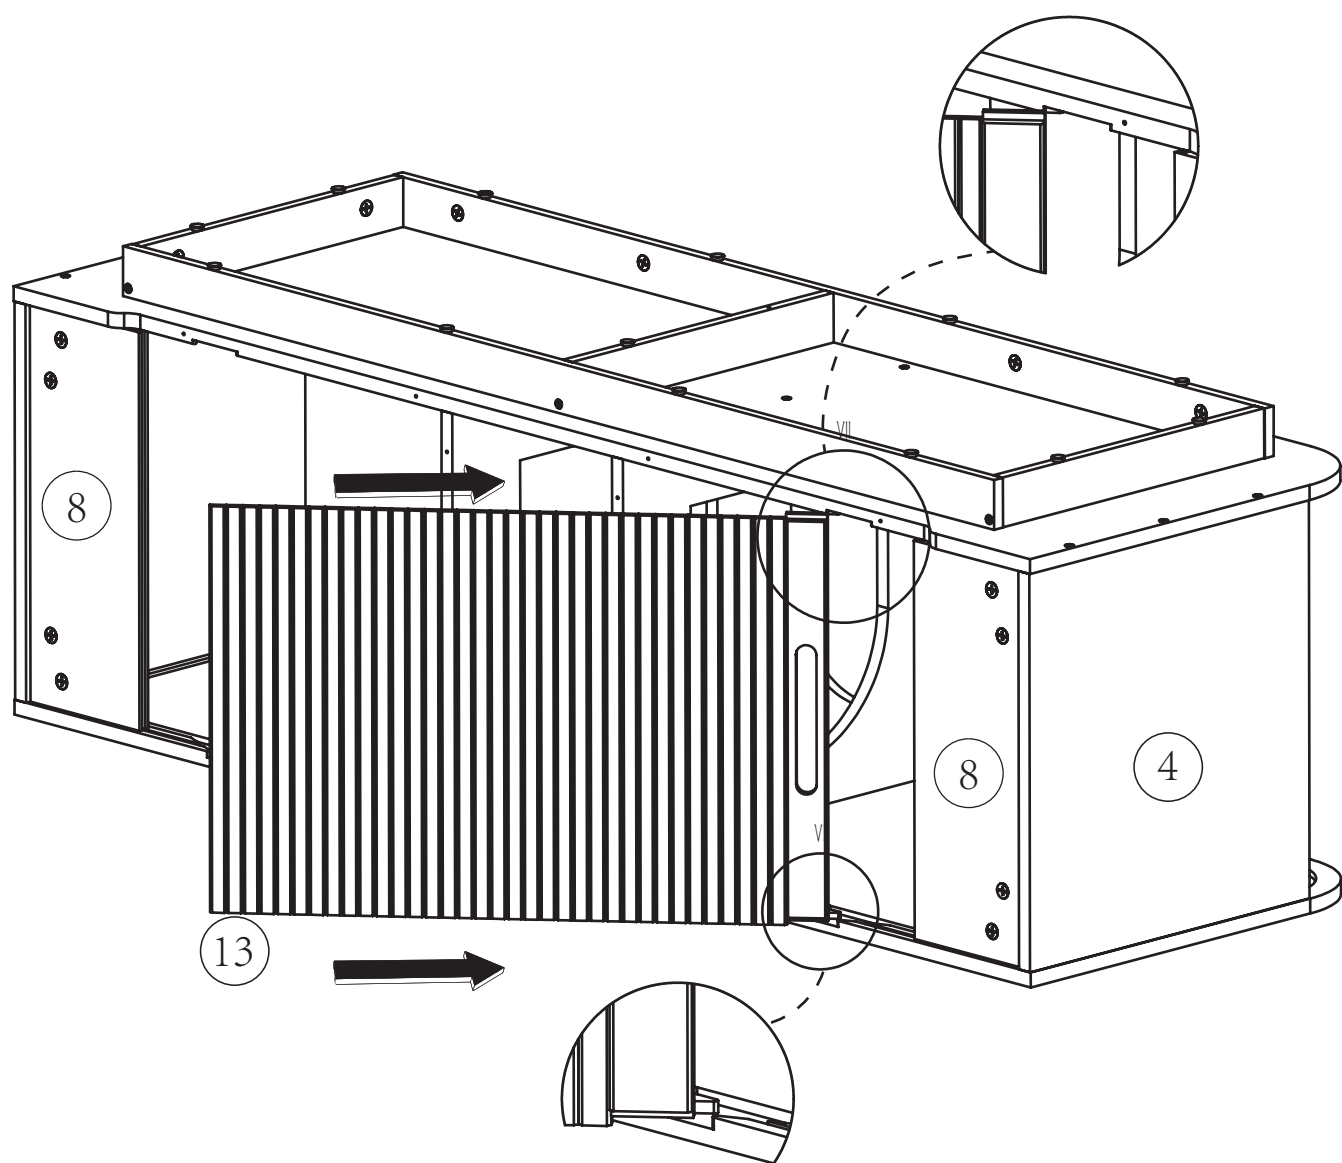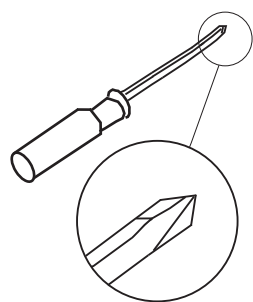





STEP14

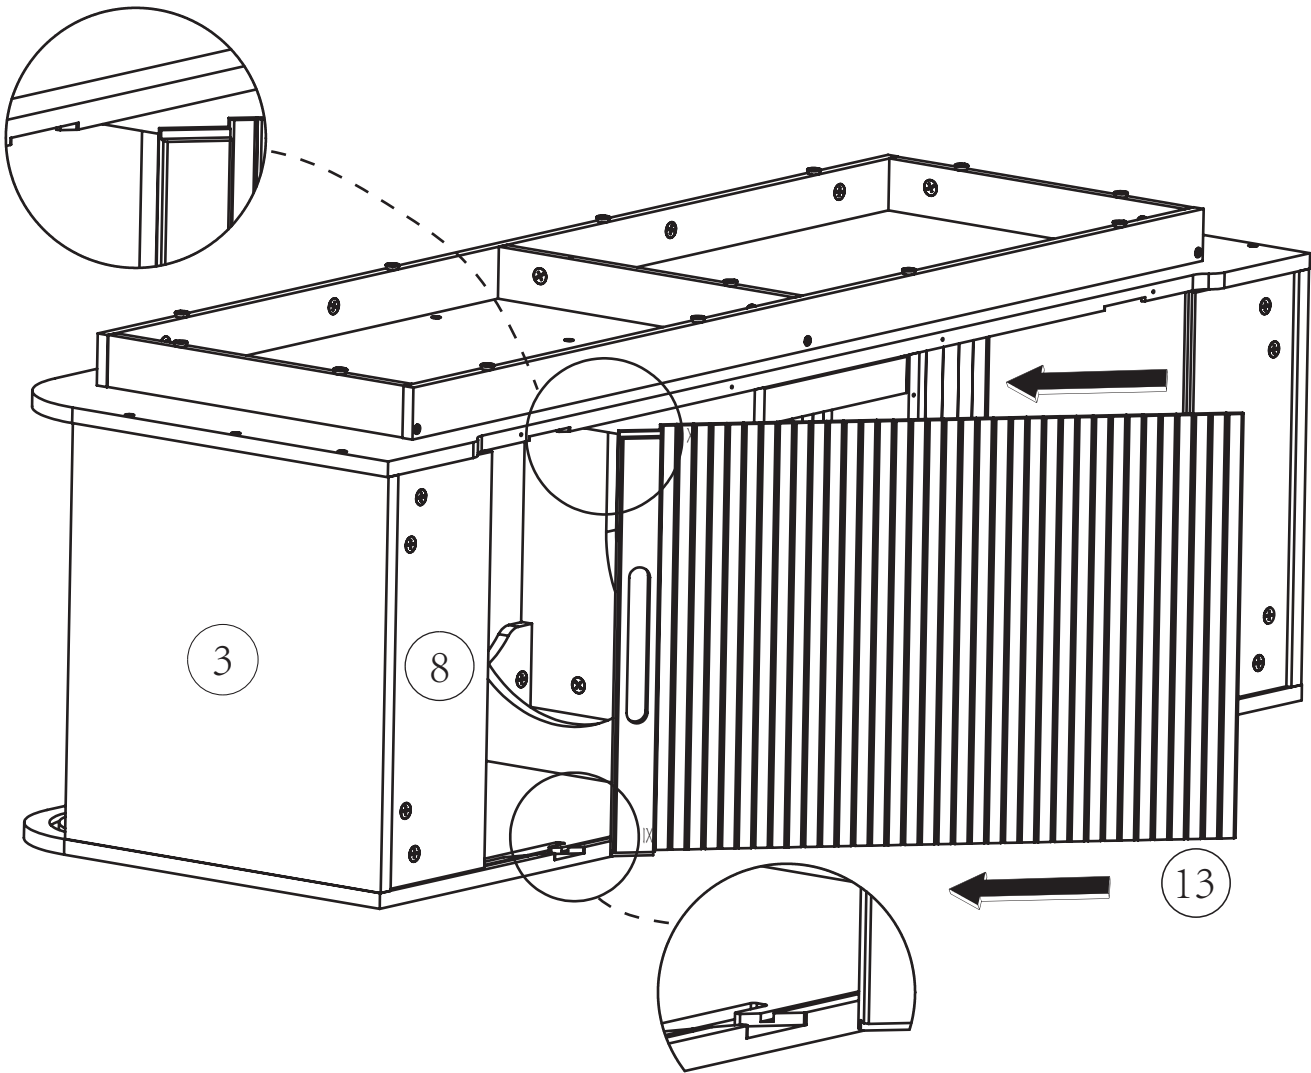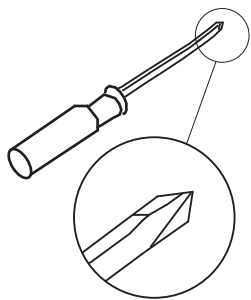





STEP15

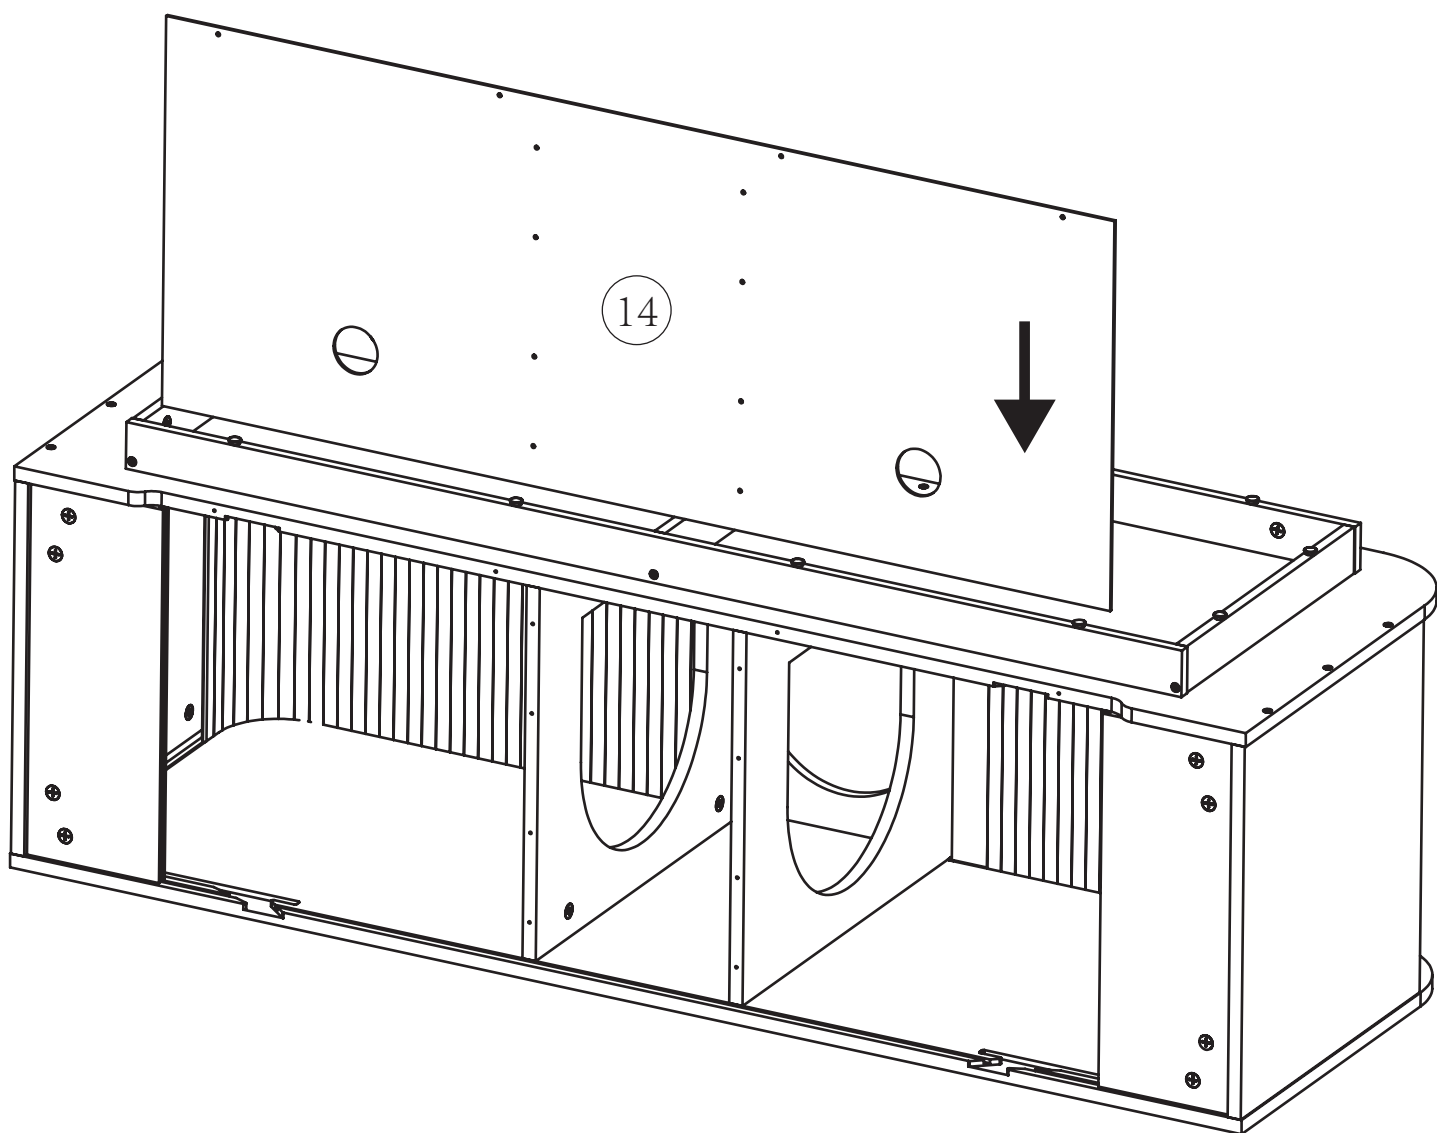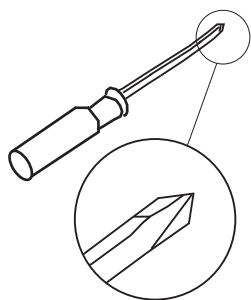







STEP16

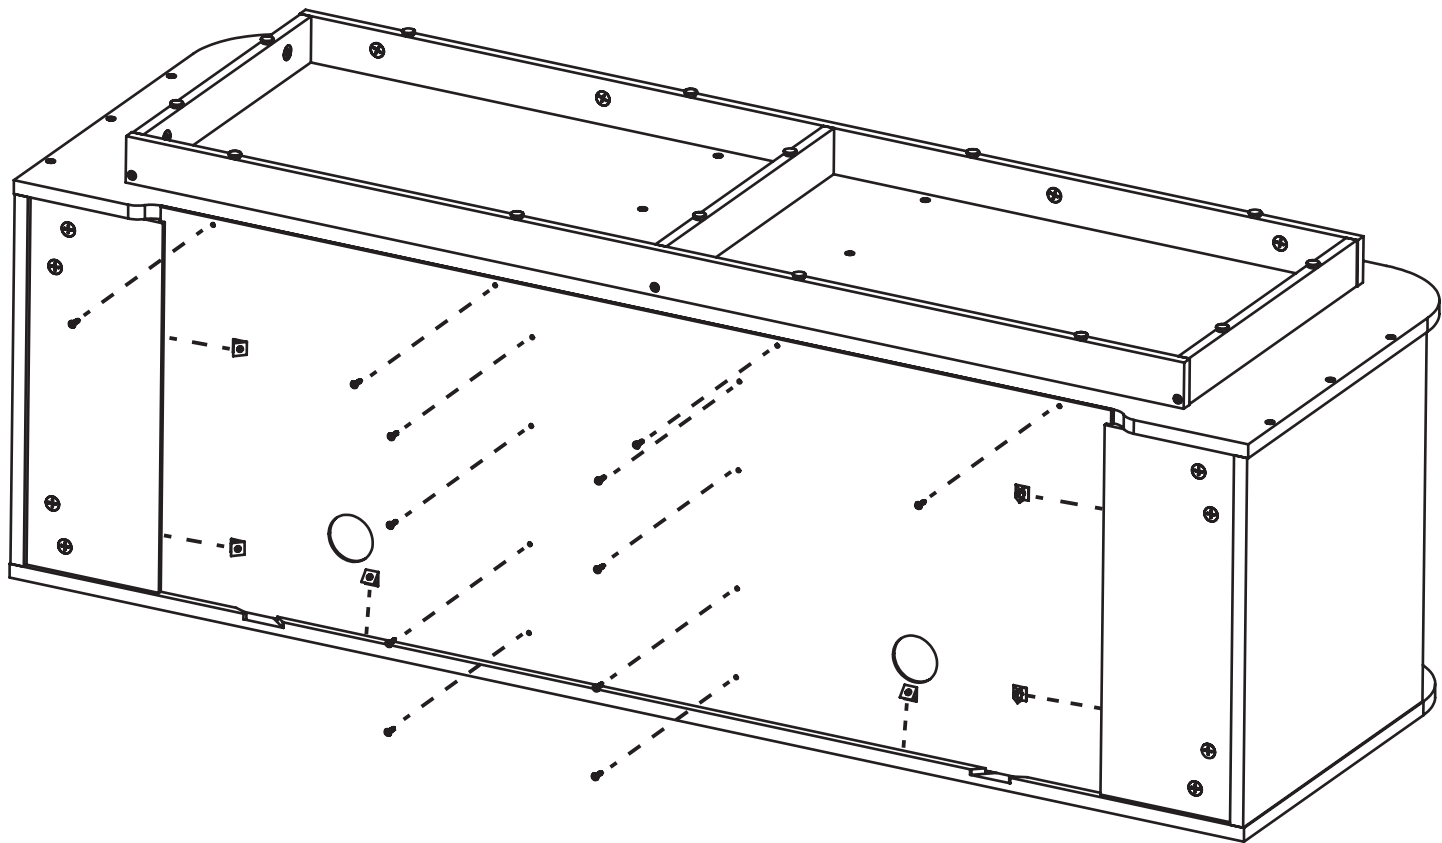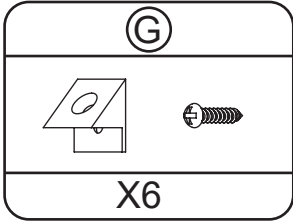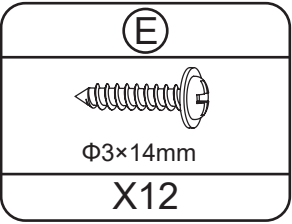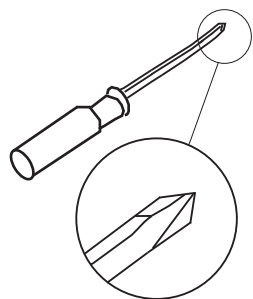




STEP17

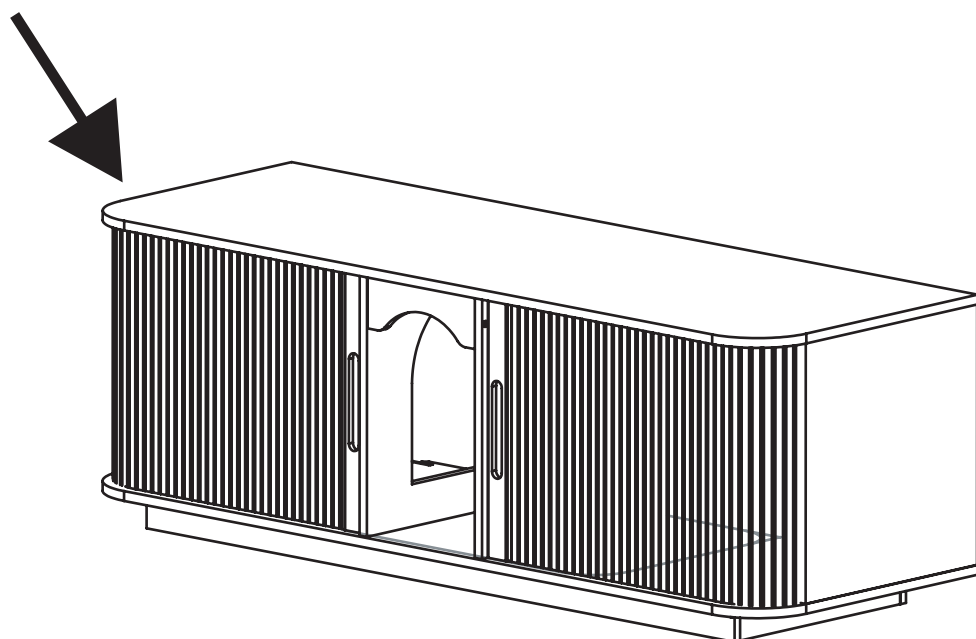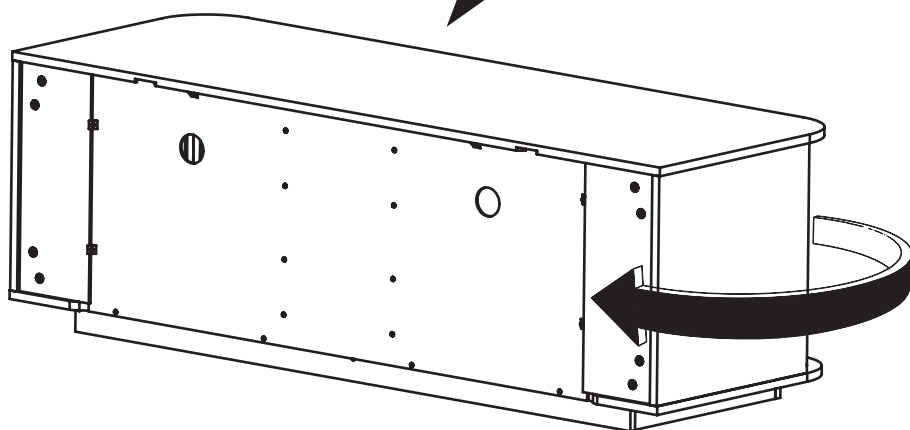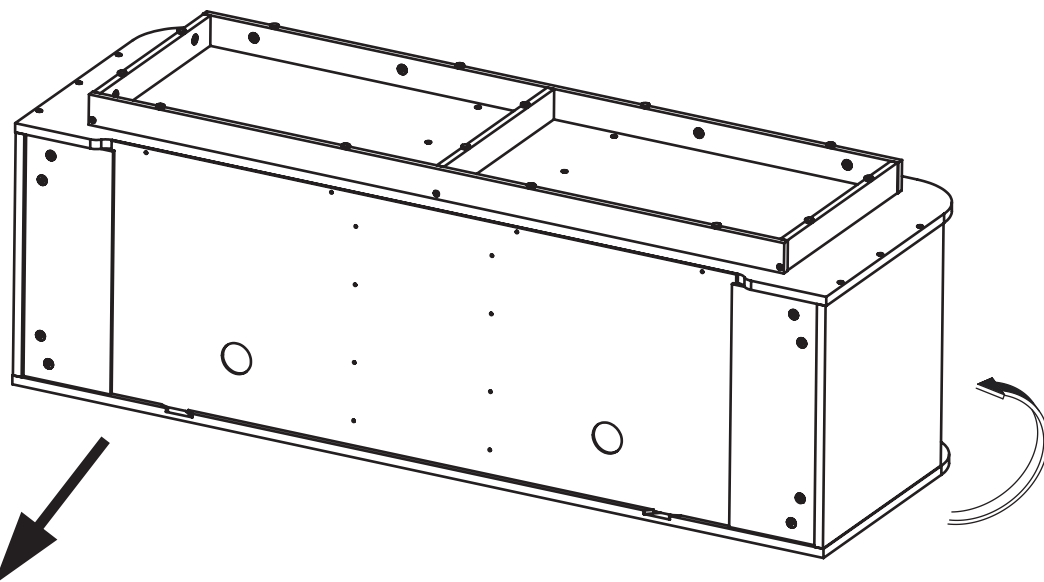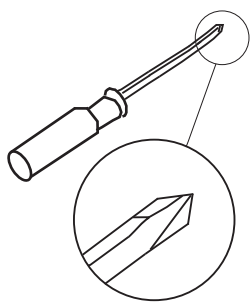

STEP18

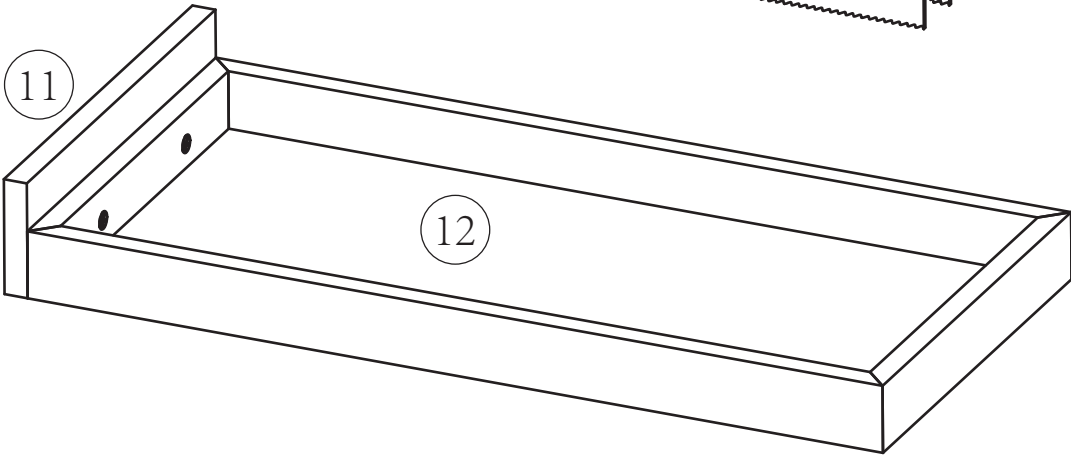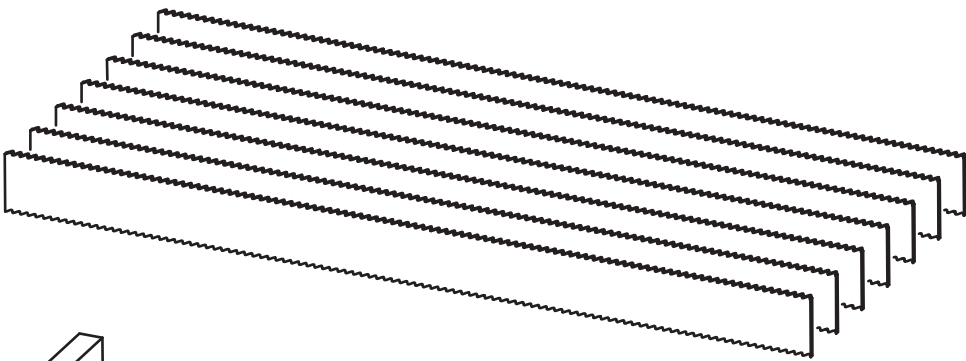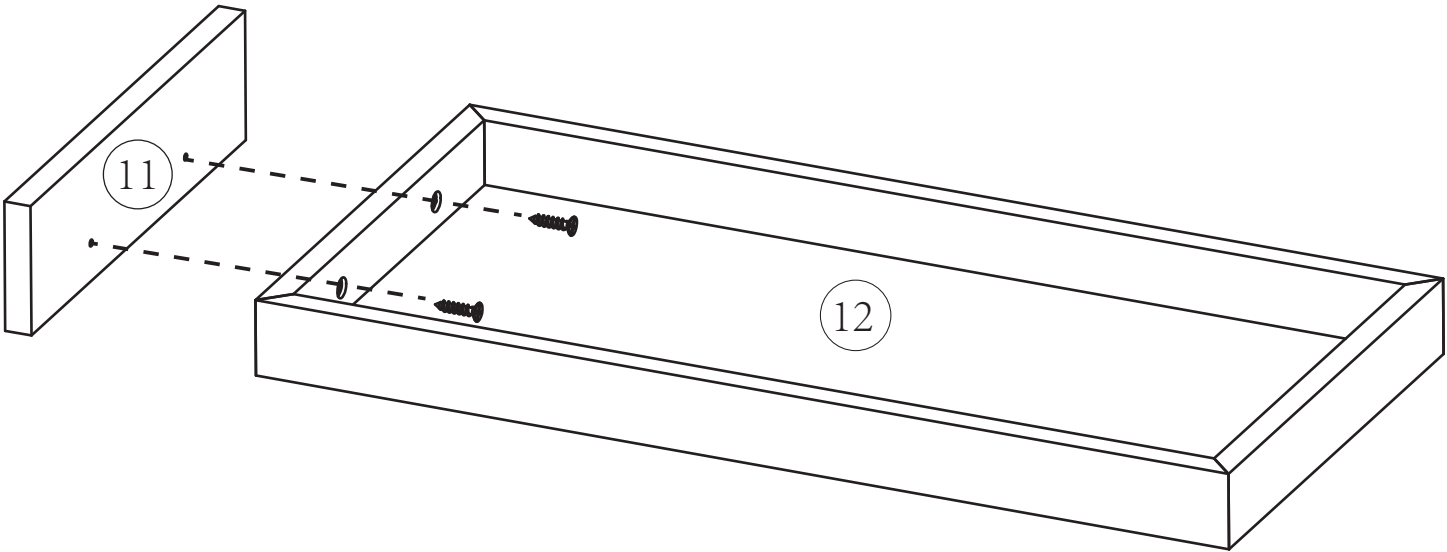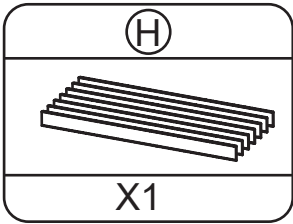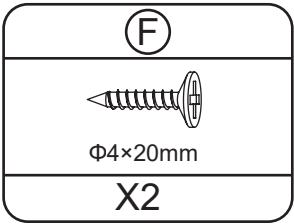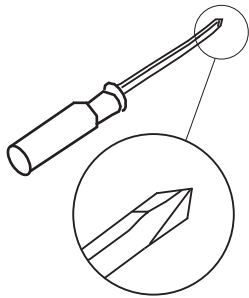

STEP19

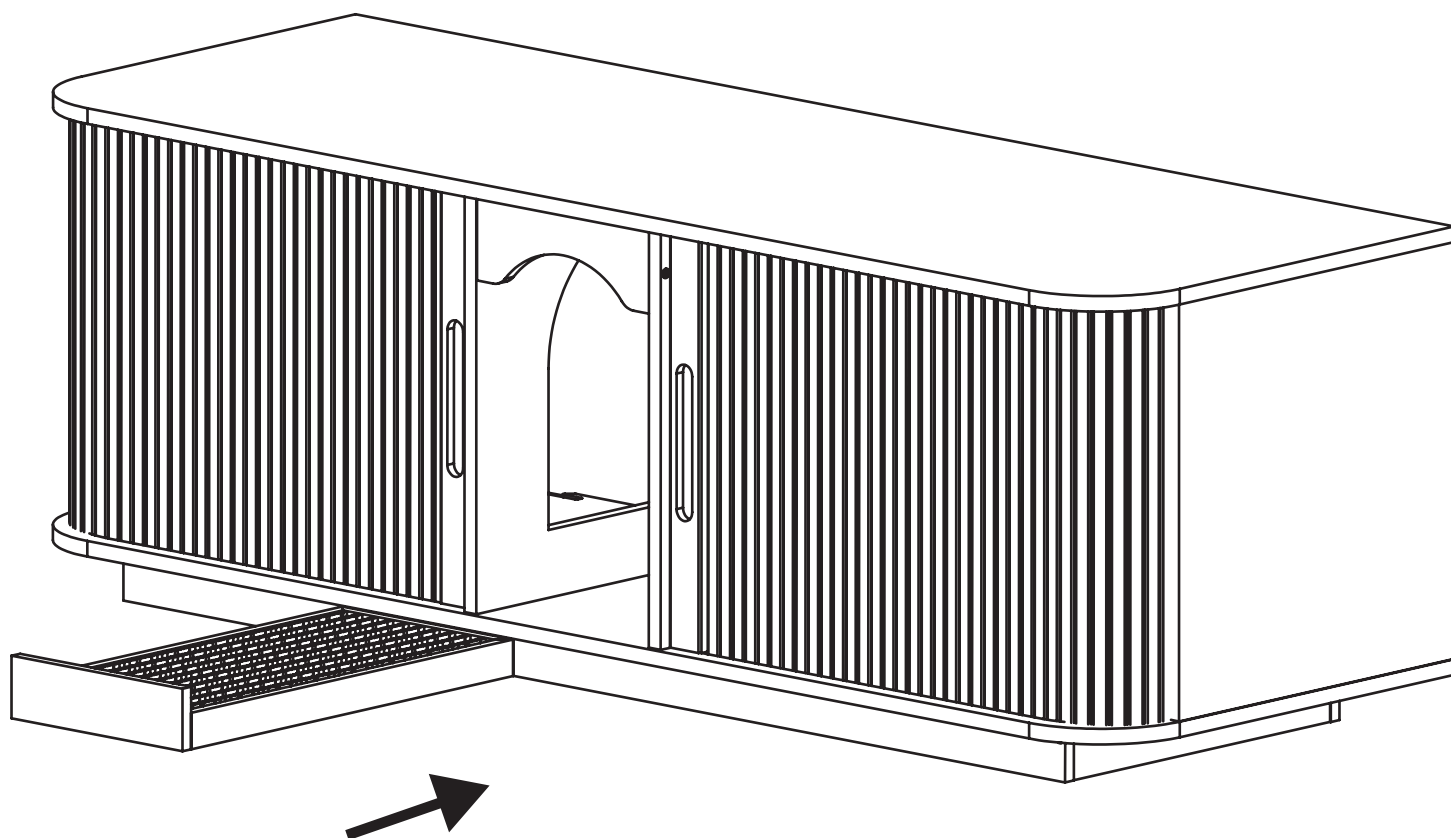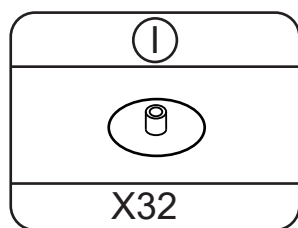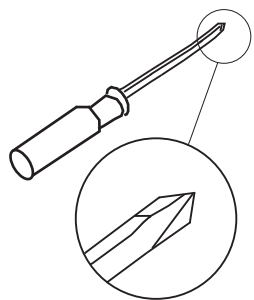

Use plastic hole plugs (I) to cover the exposed parts of the screws.

