








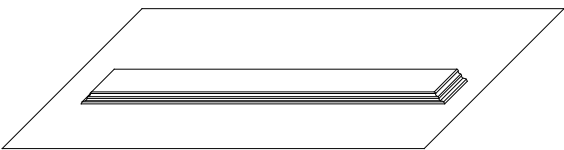
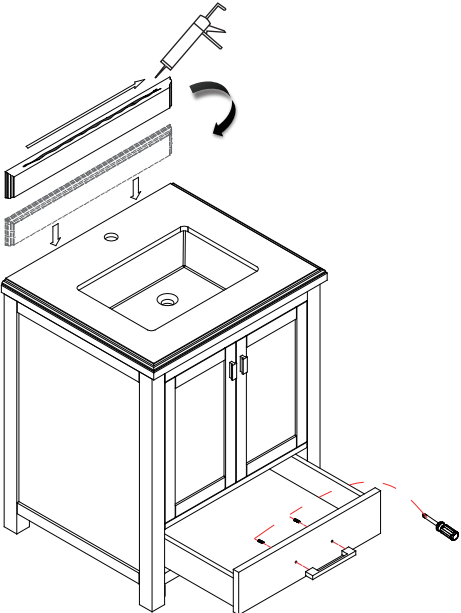
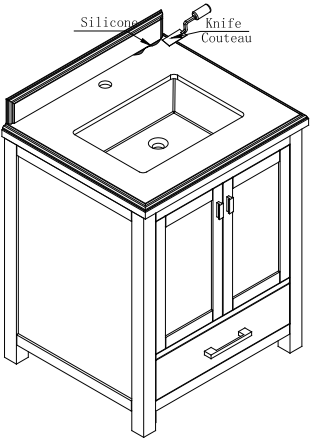
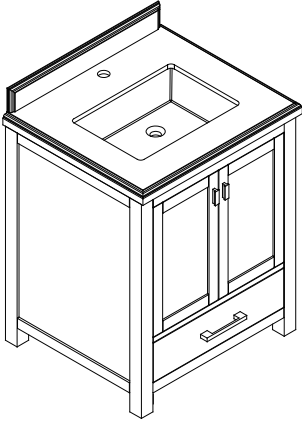



Installation Instructions

Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
 The vanity should be installed by a professional plumber.
 Drainer pipe and trap are not included.
 If you experience any difficulties with this product, do not return to the point of purchase.

Part List	A (cabinet)  x1	B (backsplash)  x1	C (screw)  x6	D (handle)  x2	D (handle)  x1
Tools required	 screwdriver(phillips)	 silicone	 level	 tape measure	
<h3>Step 1</h3> <p>CAUTION Handle the backsplash with extreme care! Stone backsplash are very fragile. Always handle gently and place them flat on a soft surface.</p> 					
<h3>Step 2</h3> 					
<h3>Step 3</h3> 					
<h3>Step 4</h3>  <div style="text-align: right;">  24h </div>					