
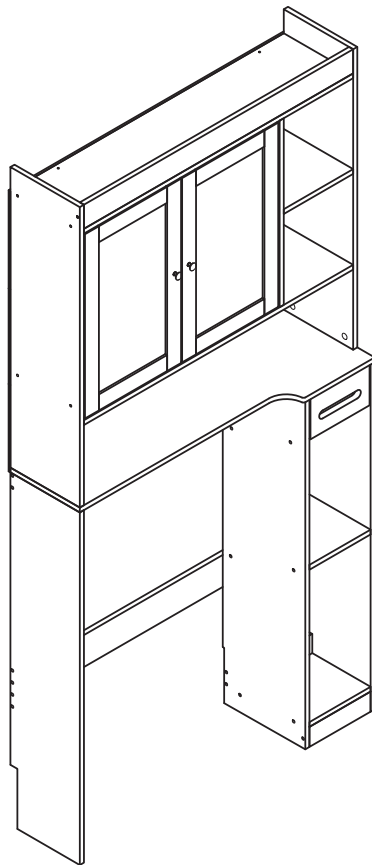


Over Toilet Storage Cabinet

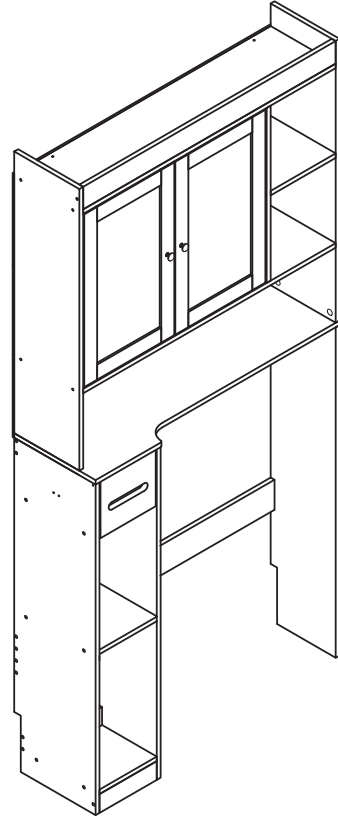

Assembly Instructions

After-Sales Service Card

Dear Customer,

Thank you for choosing! We are committed to providing high-quality furniture and exceptional service.

If you encounter any issues, including but not limited to:

- ✓ Shipping damage
- ✓ Quality issues
- ✓ Installation difficulties
- ✓ Missing accessories

Please feel free to contact us, and we will resolve your issue as soon as possible!

To help us assist you more efficiently, please include your platform order number when contacting us .



Your satisfaction is our top priority! Thank you for your support!





WARNING !

Children have died from furniture tip—over. To reduce the risk of furniture tip—over:


- **ALWAYS** install tip-over restraint provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on drawers, doors, or shelves.
- **NEVER** open more than one drawer at a time.
- **Place heaviest items in the lowest drawer.**

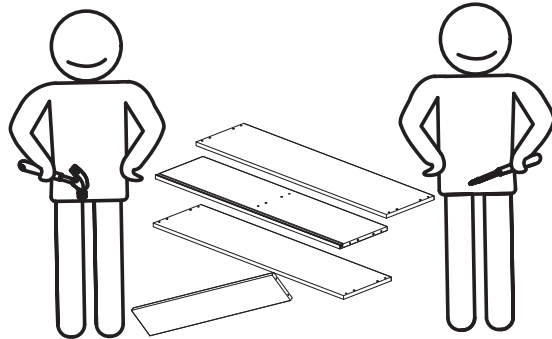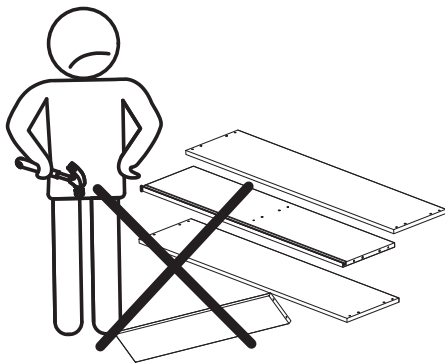

We recommend at least 2 people for the assembly.

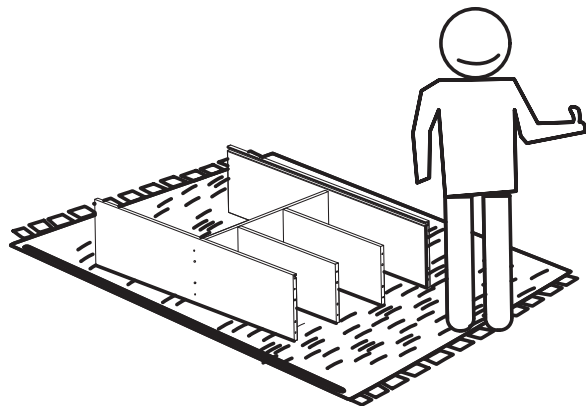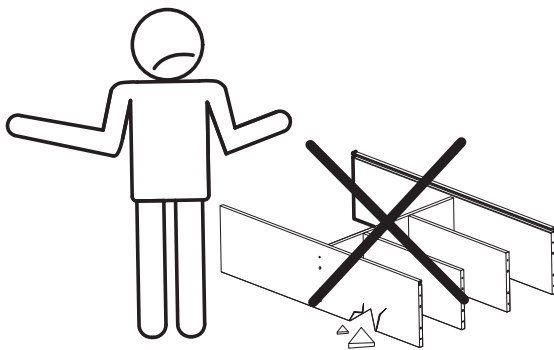


To prevent any damage during assembly,
place a mat under the pieces.

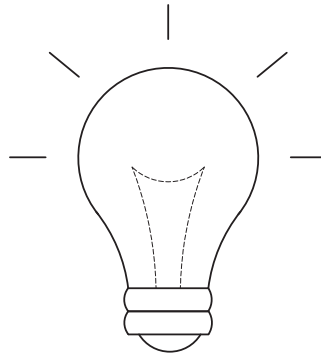


friendly reminder









To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

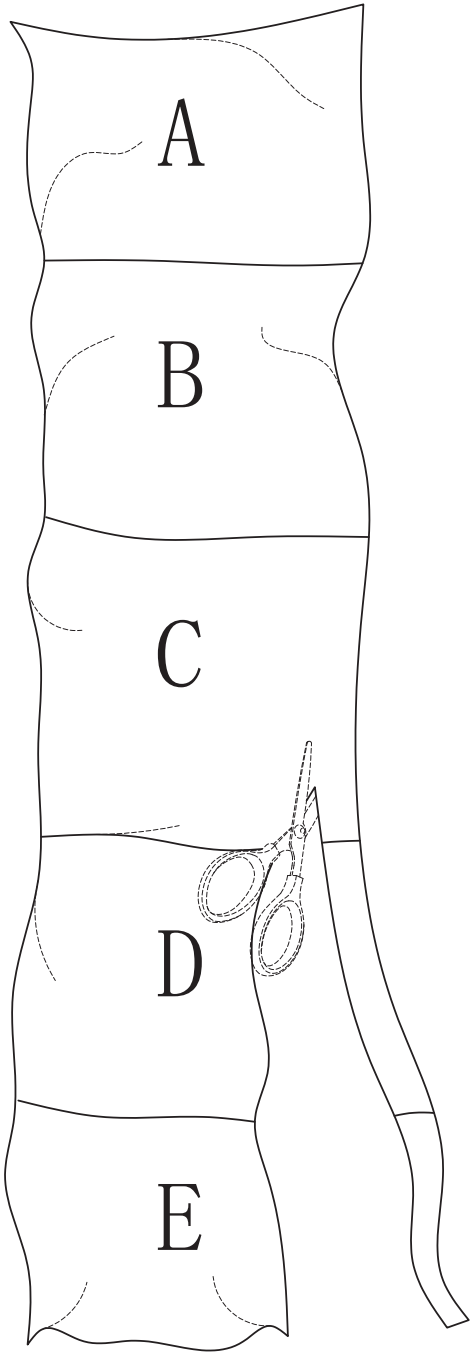


PARTS DIAGRAM

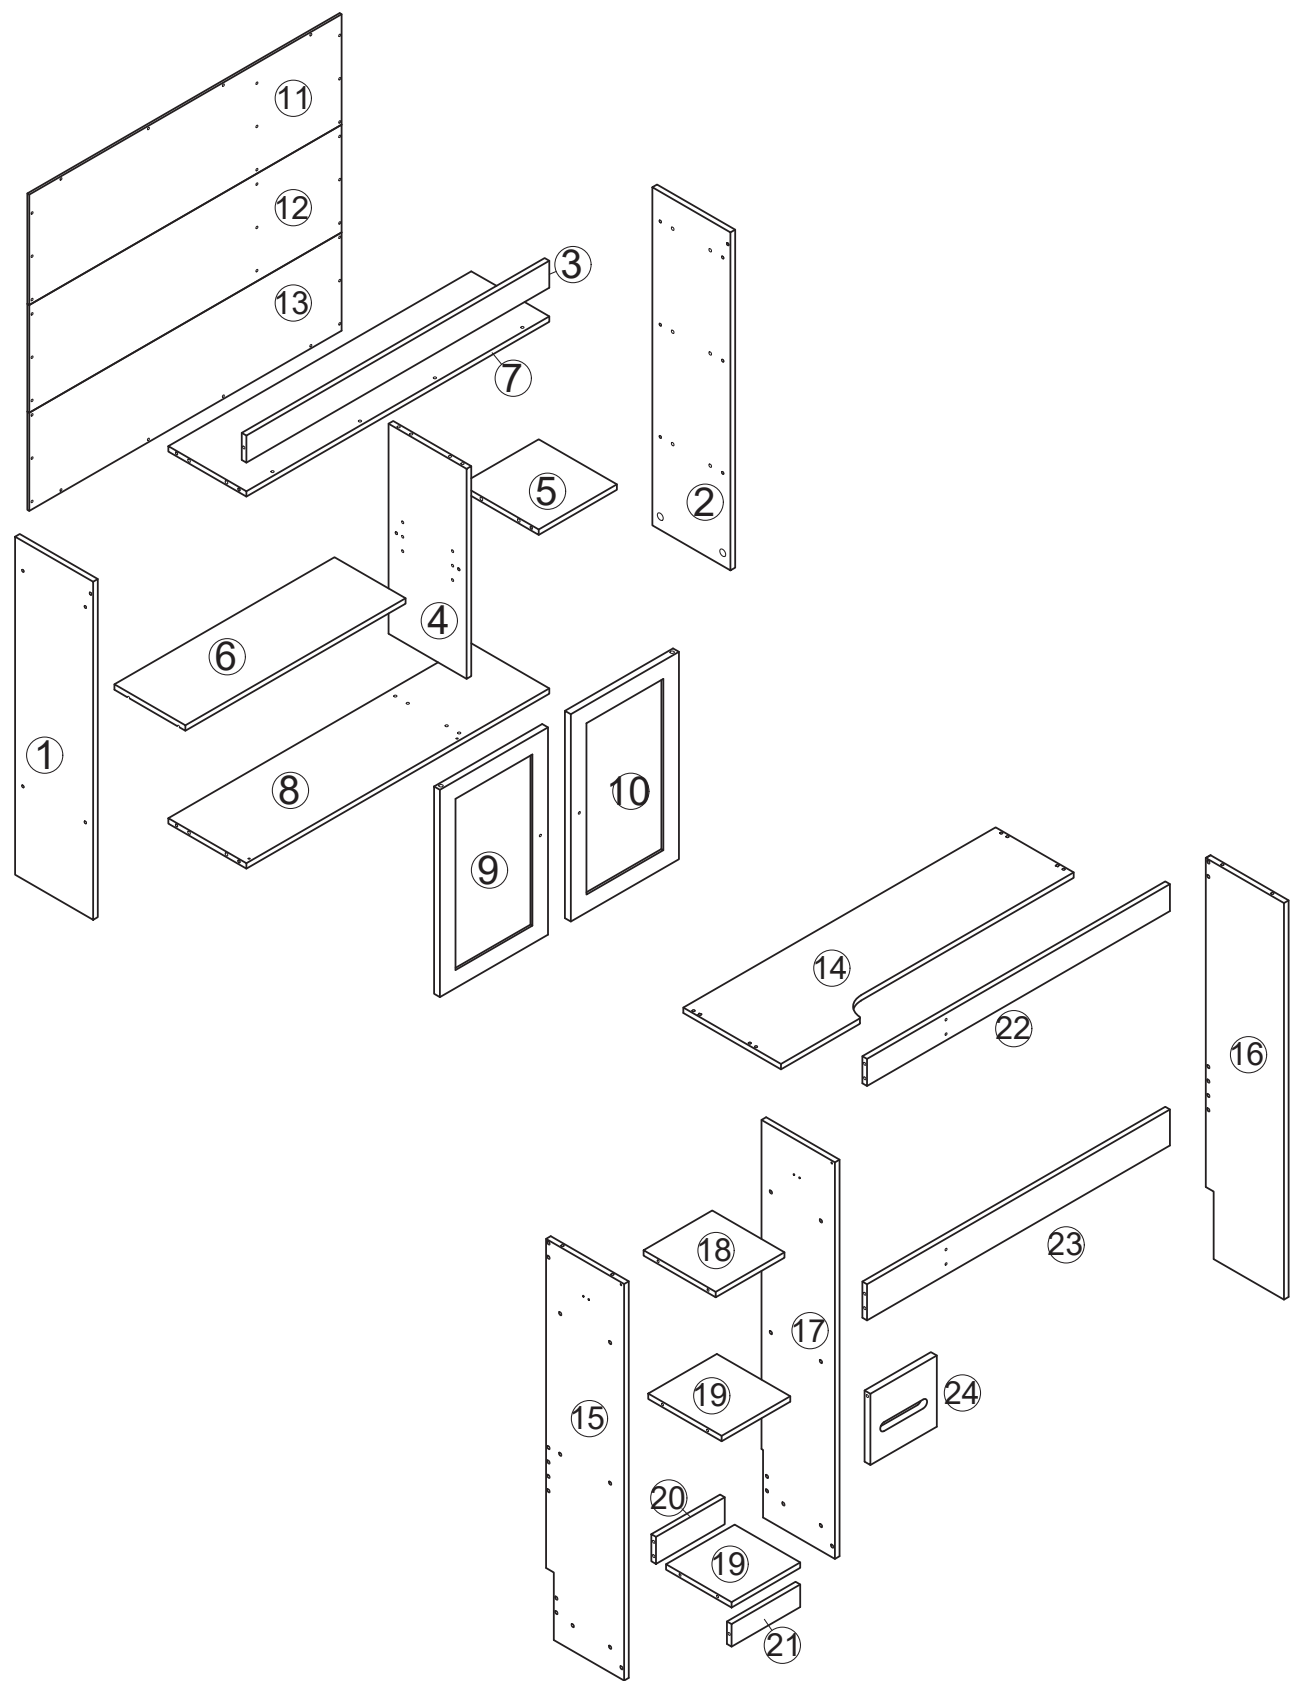

HARDWARE KIT

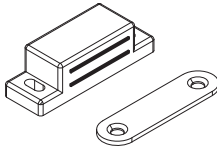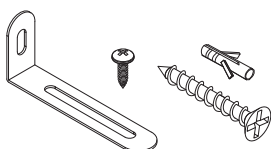
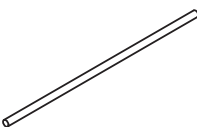
A x 20+1pcs  Ø6*30mm	B x 4+1pcs  Ø15*10mm	C x 4+1pcs 	D x 56+2pcs  Ø5*38mm
E x 28+2pcs  Ø3.5x12mm	F x 3pcs 	G x 6+1pcs 	H x 4+1pcs  Ø5*16mm
I x 2pcs 	J x 2pcs  M4*20mm	K x 12+2pcs  Ø3.0*14mm	L x 2pcs 
M x 2pcs 	N x 1pcs 	O x 2pcs 	P x 1pcs 
Q x 68+4  Ø20			

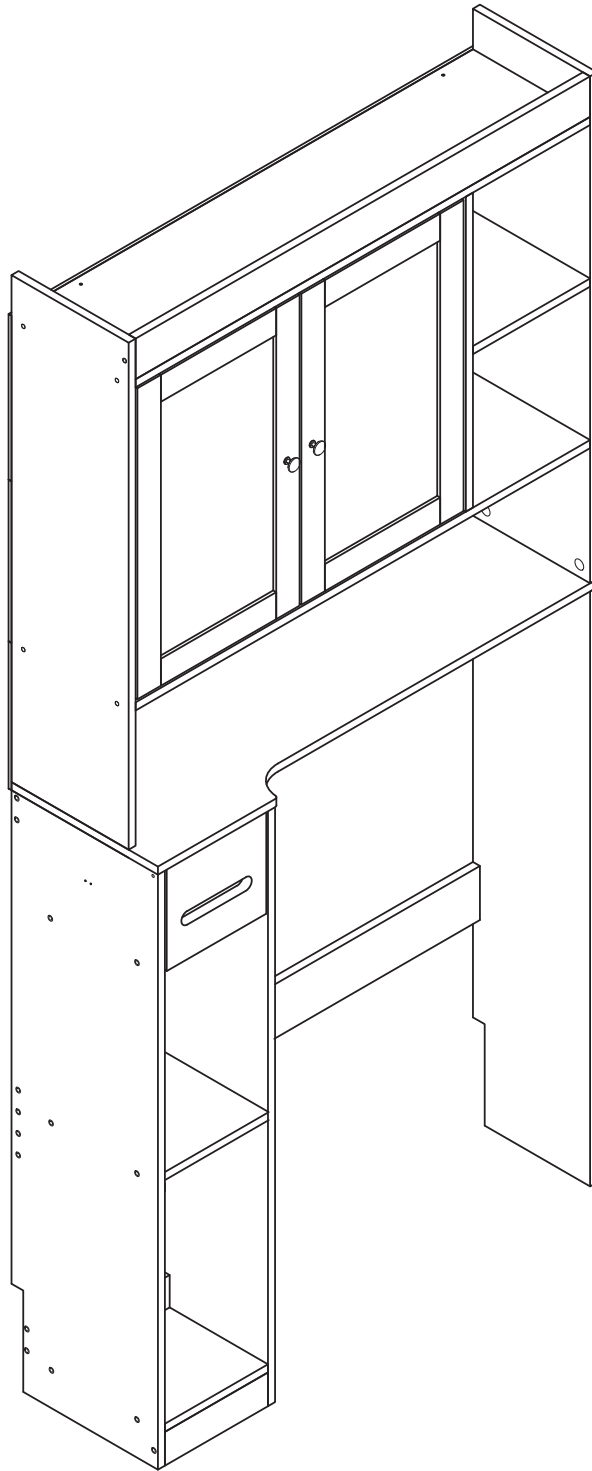


Option 1

ASSEMBLY






01

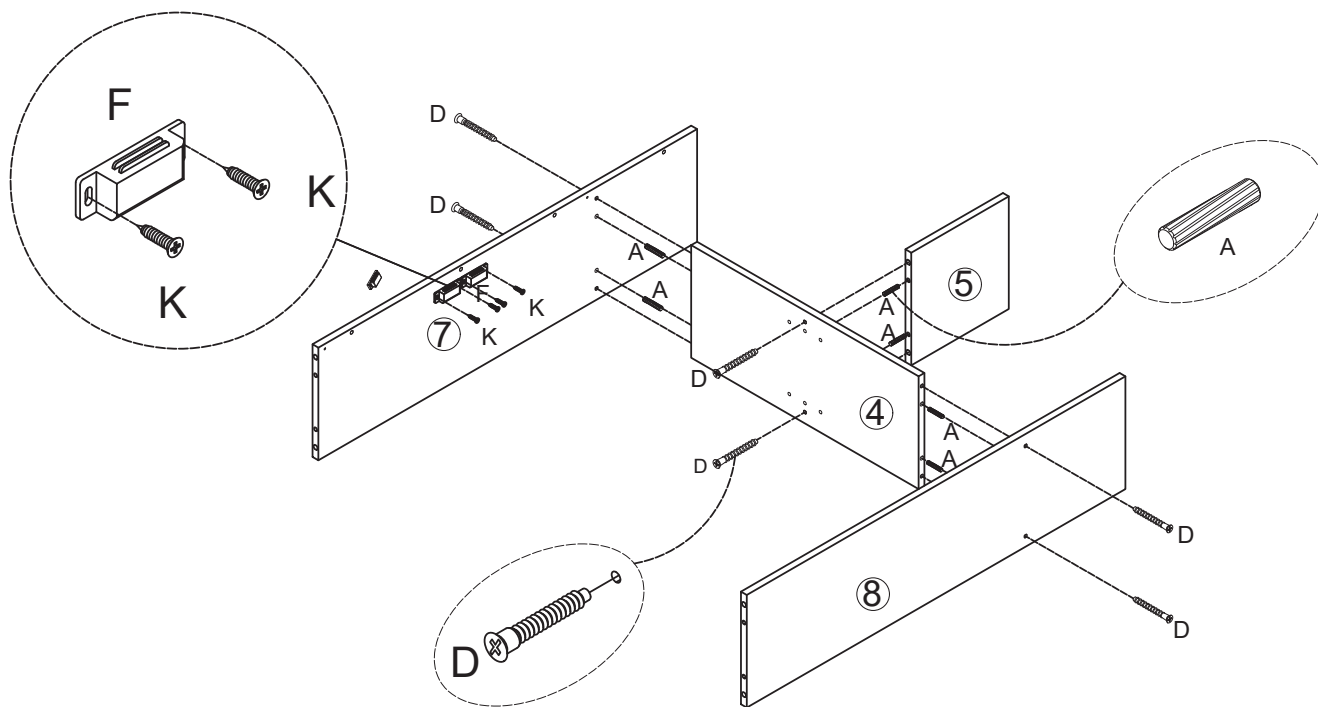






02

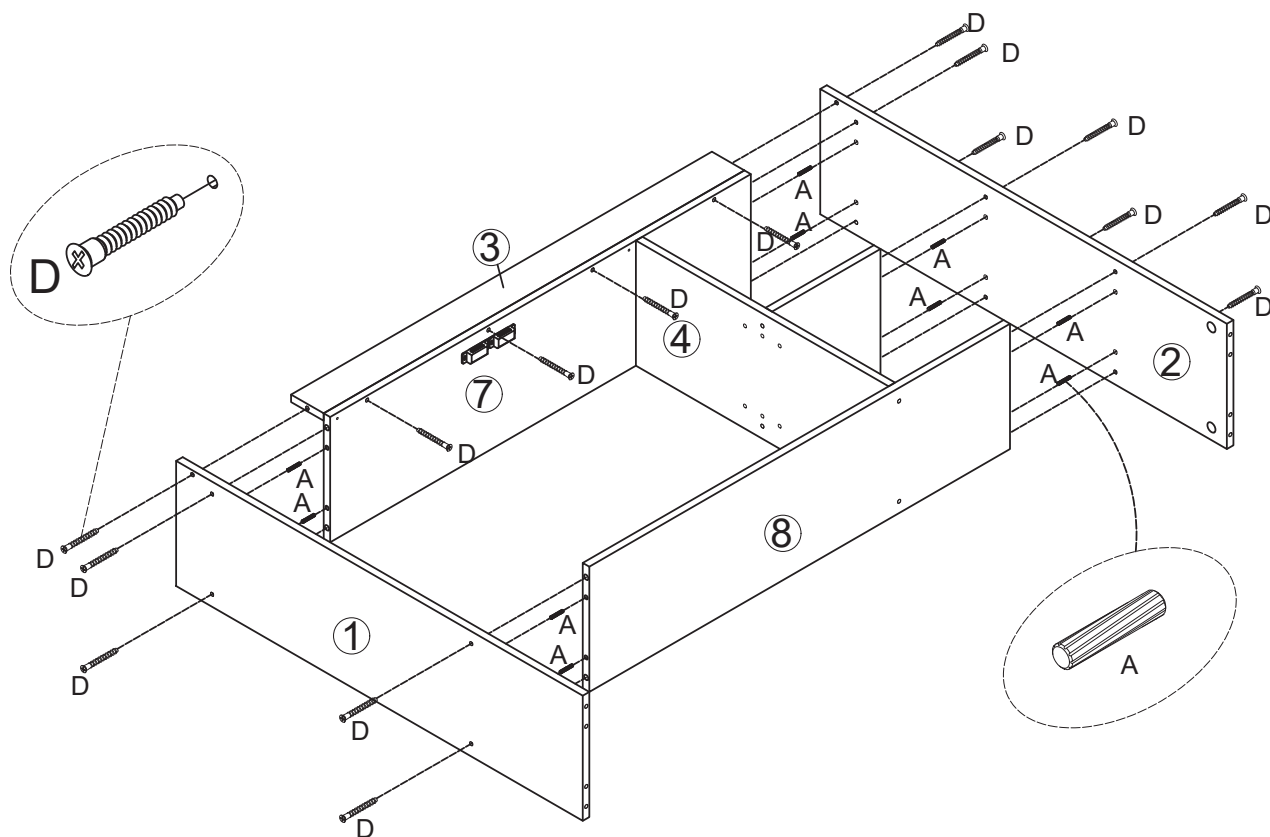



03

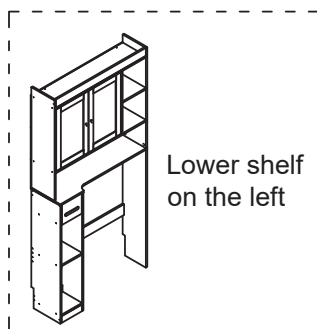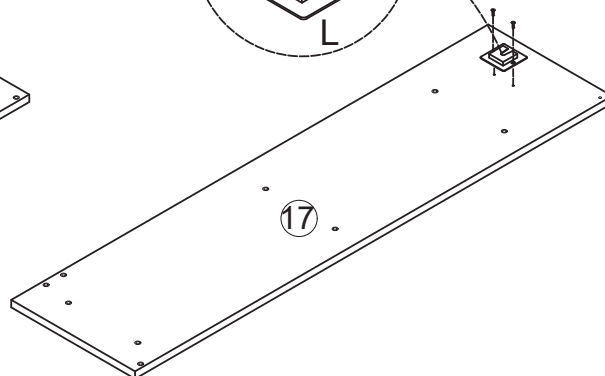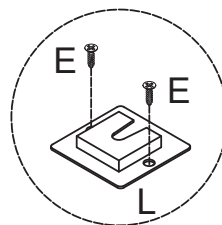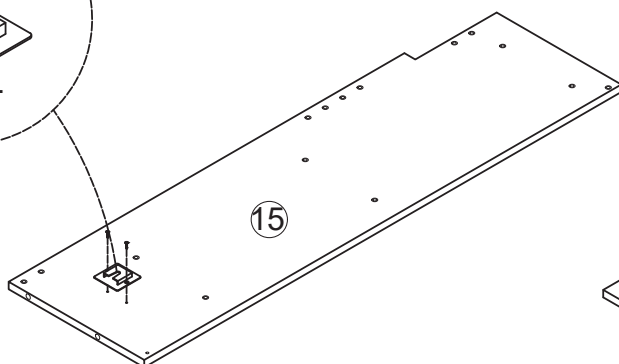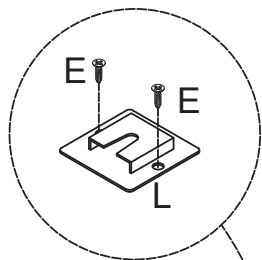


OR

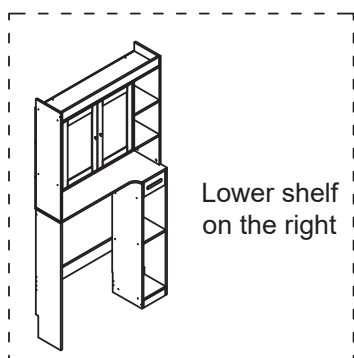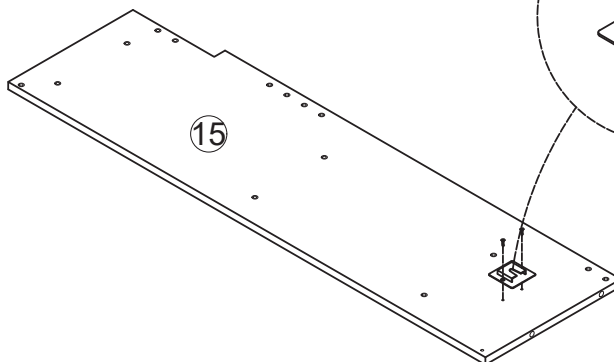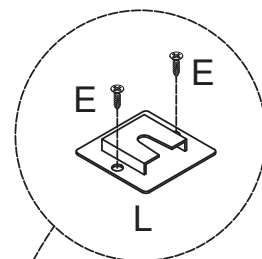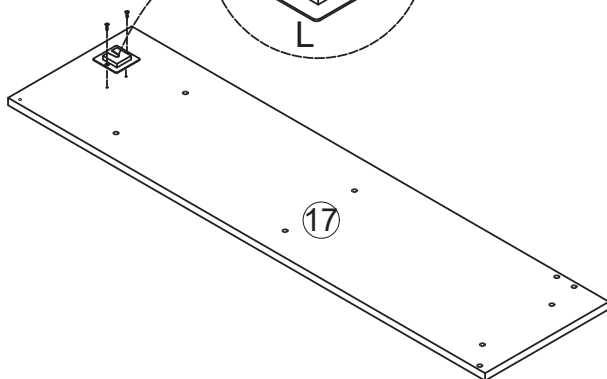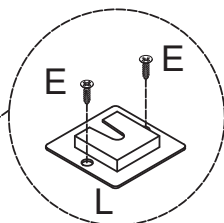

04

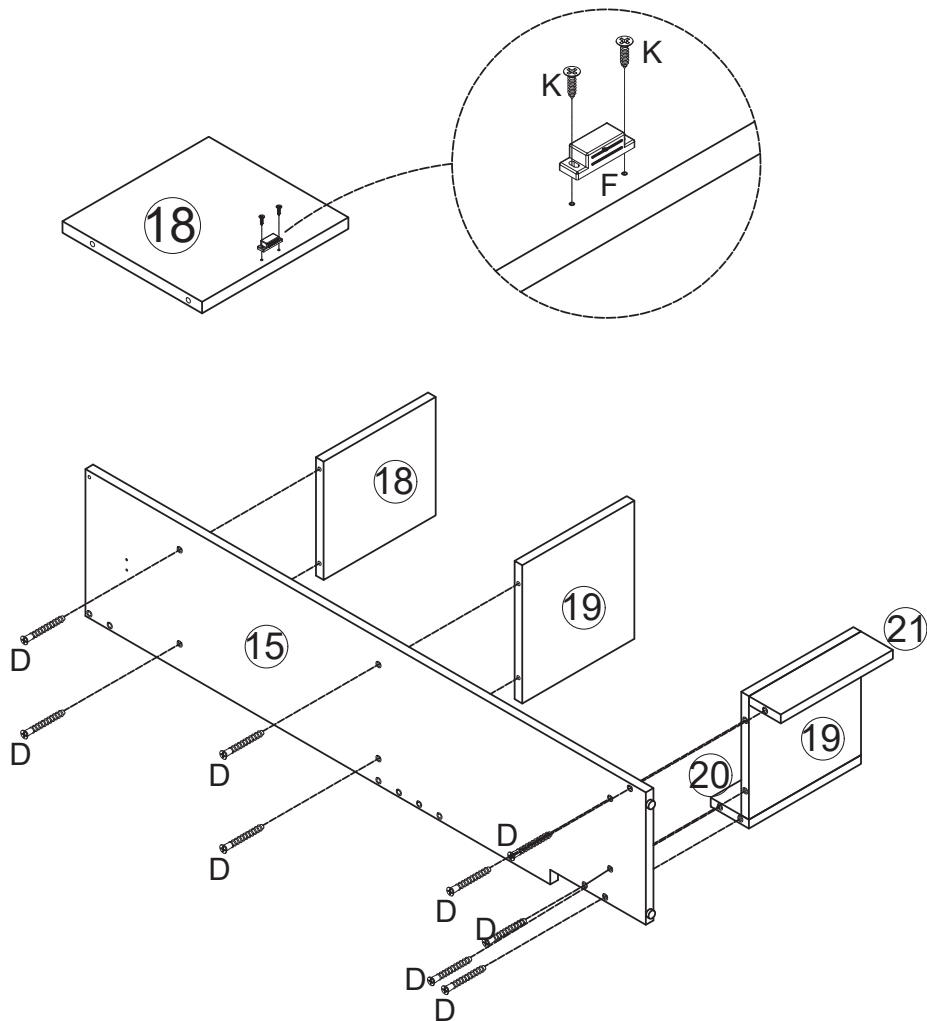

05

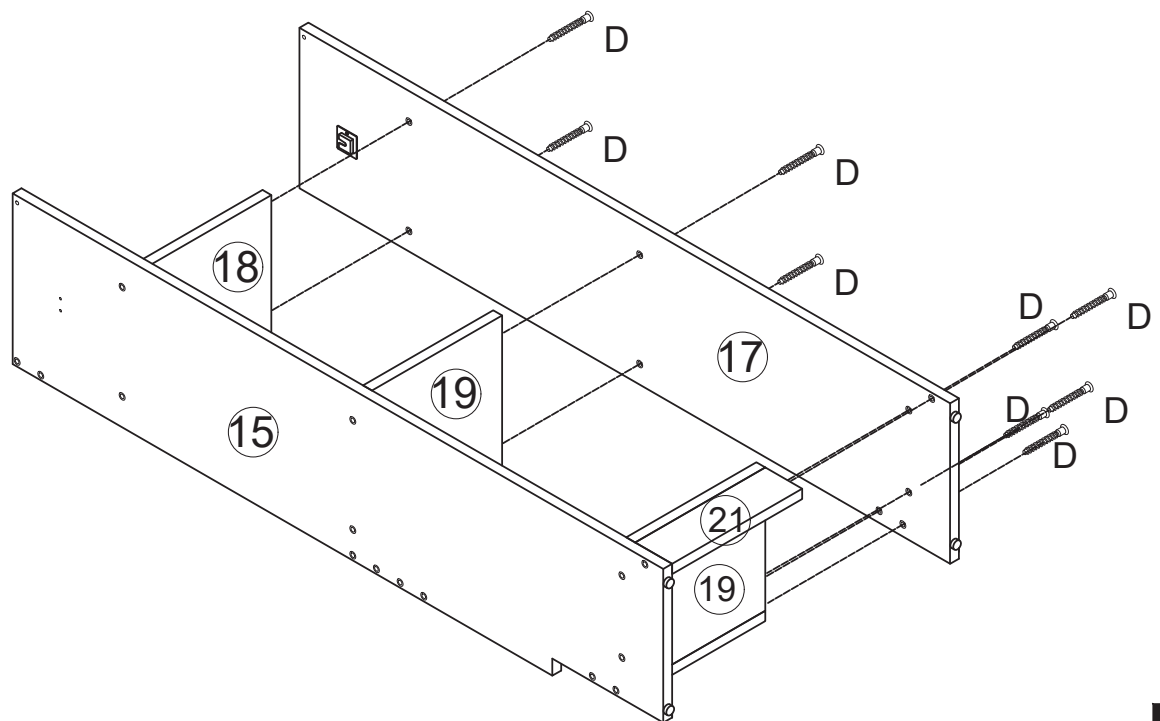


06



D x 8




N

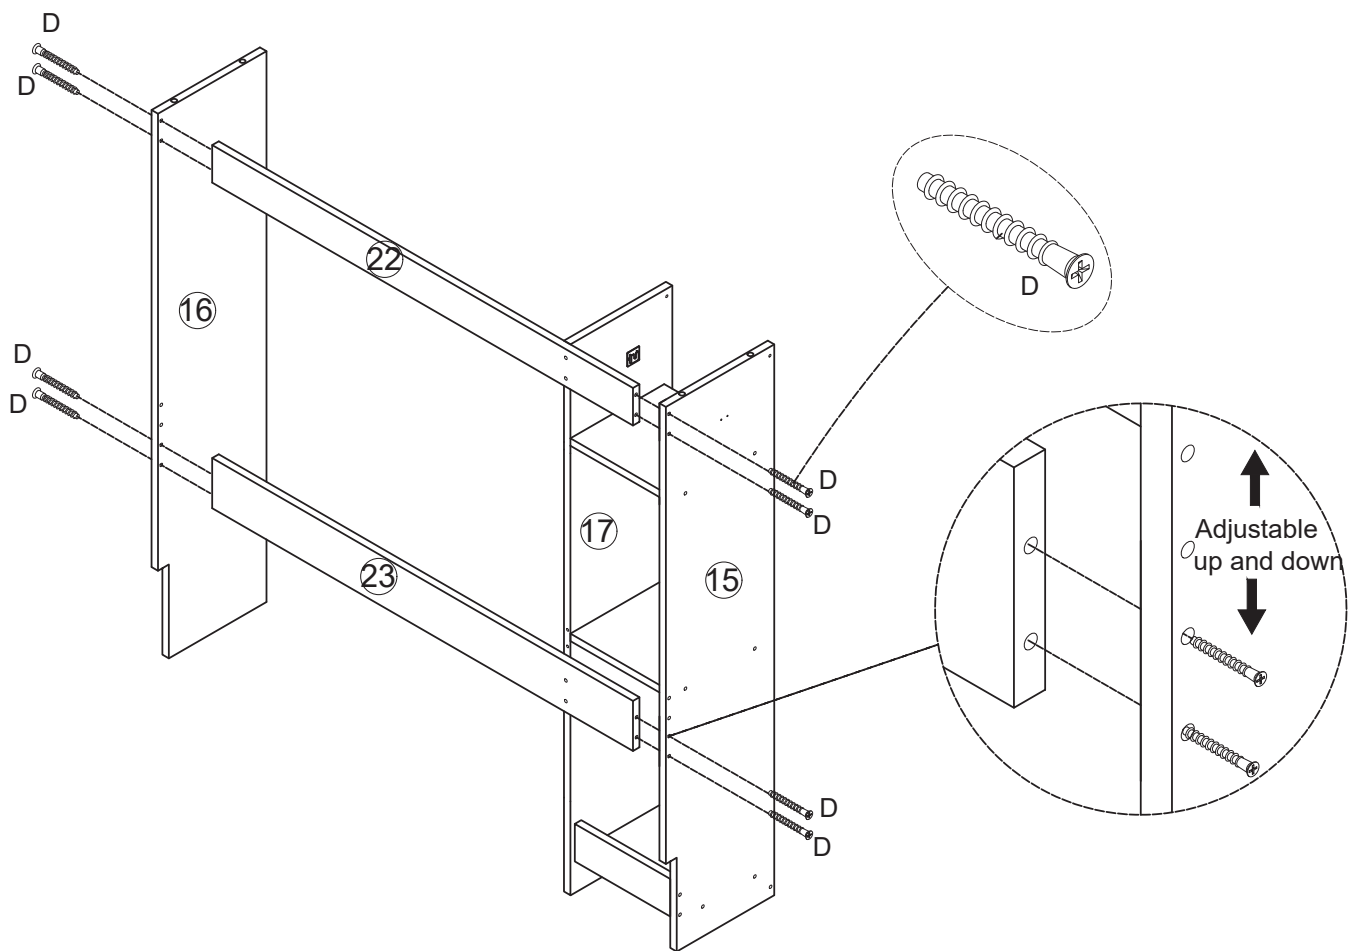


07



D x 4



N

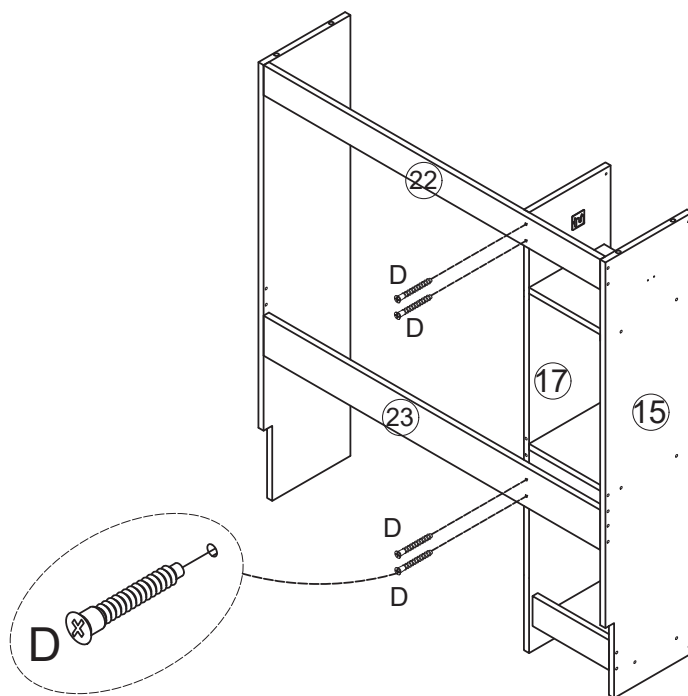


08



C x4




N

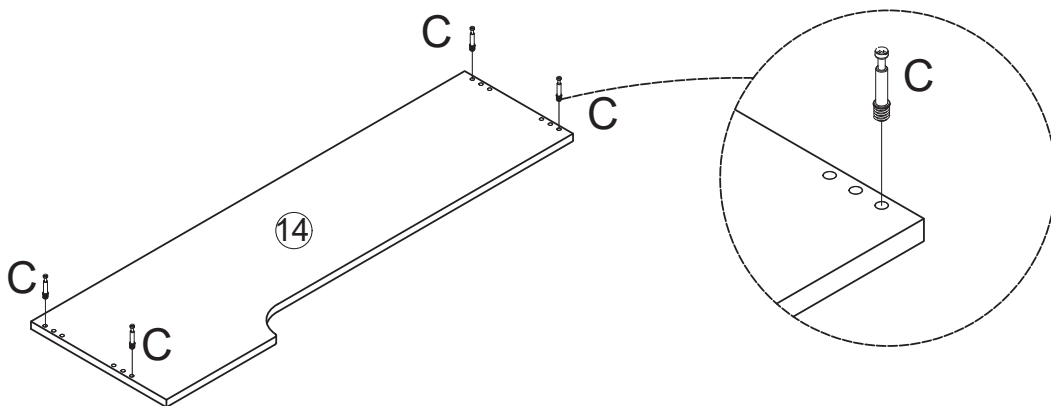


09




D x4



N

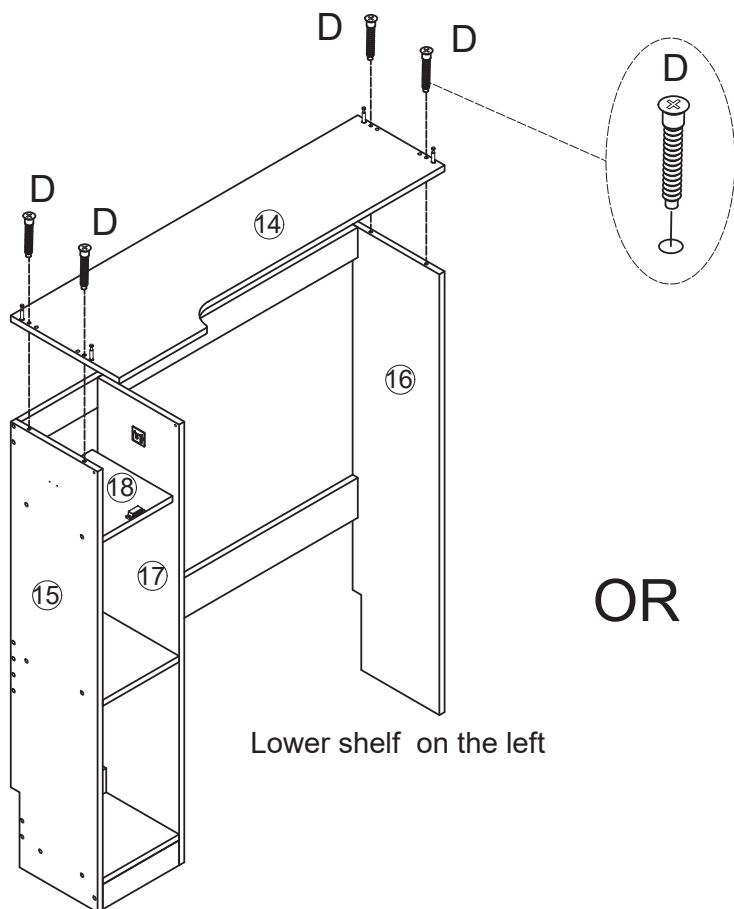


OR

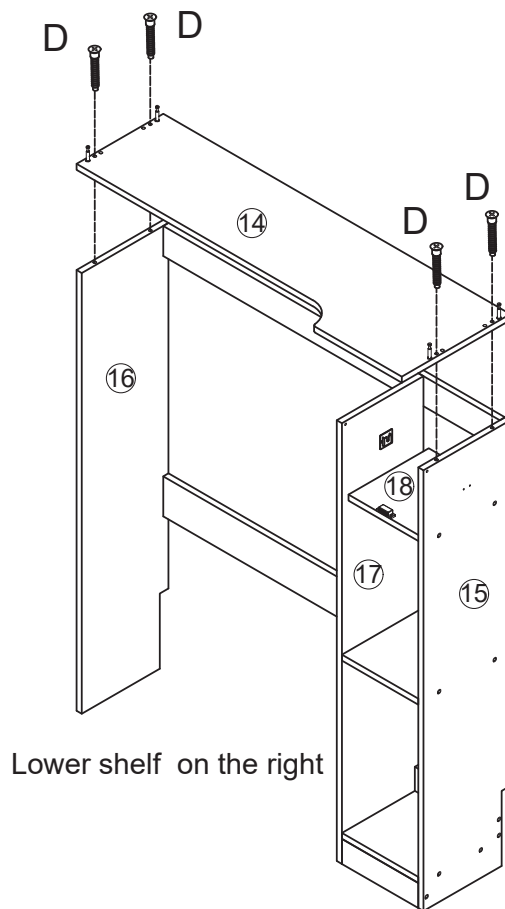


10

 B x4


 N


 A x4

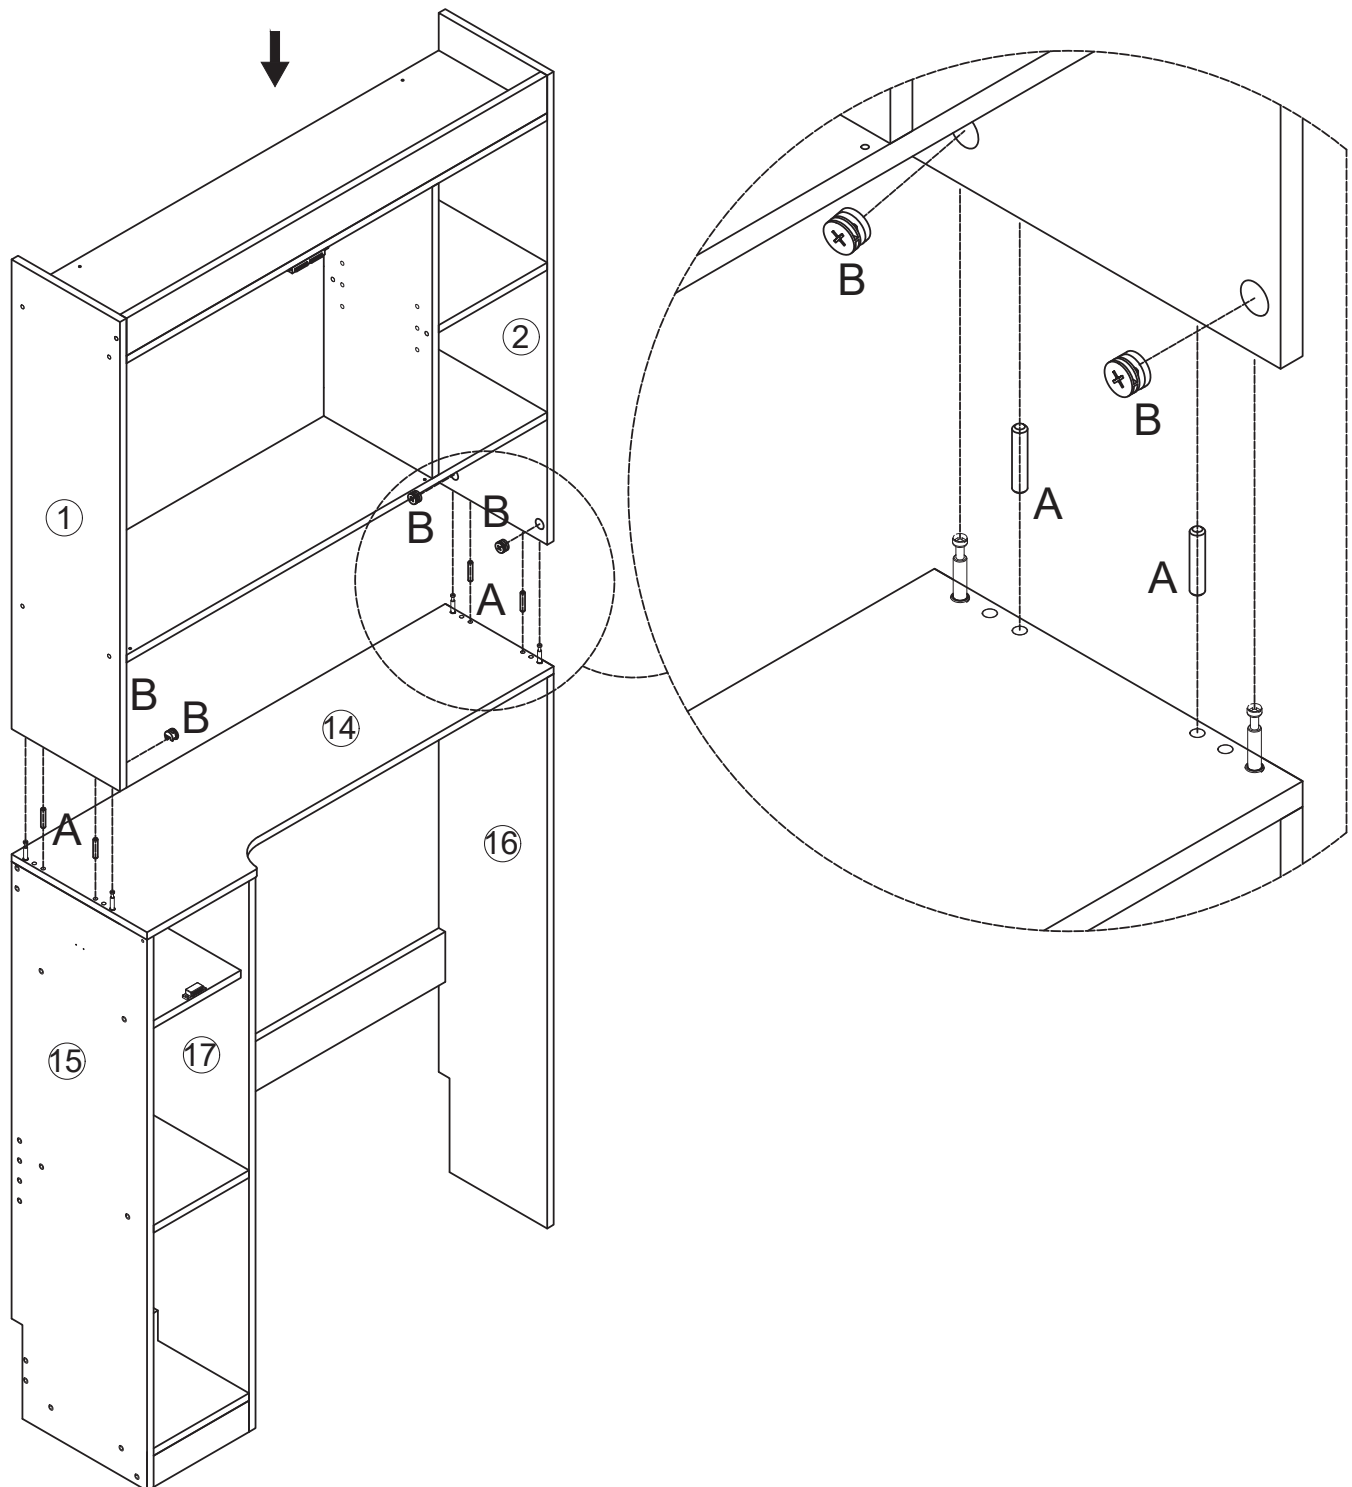

11


 E x12


 N

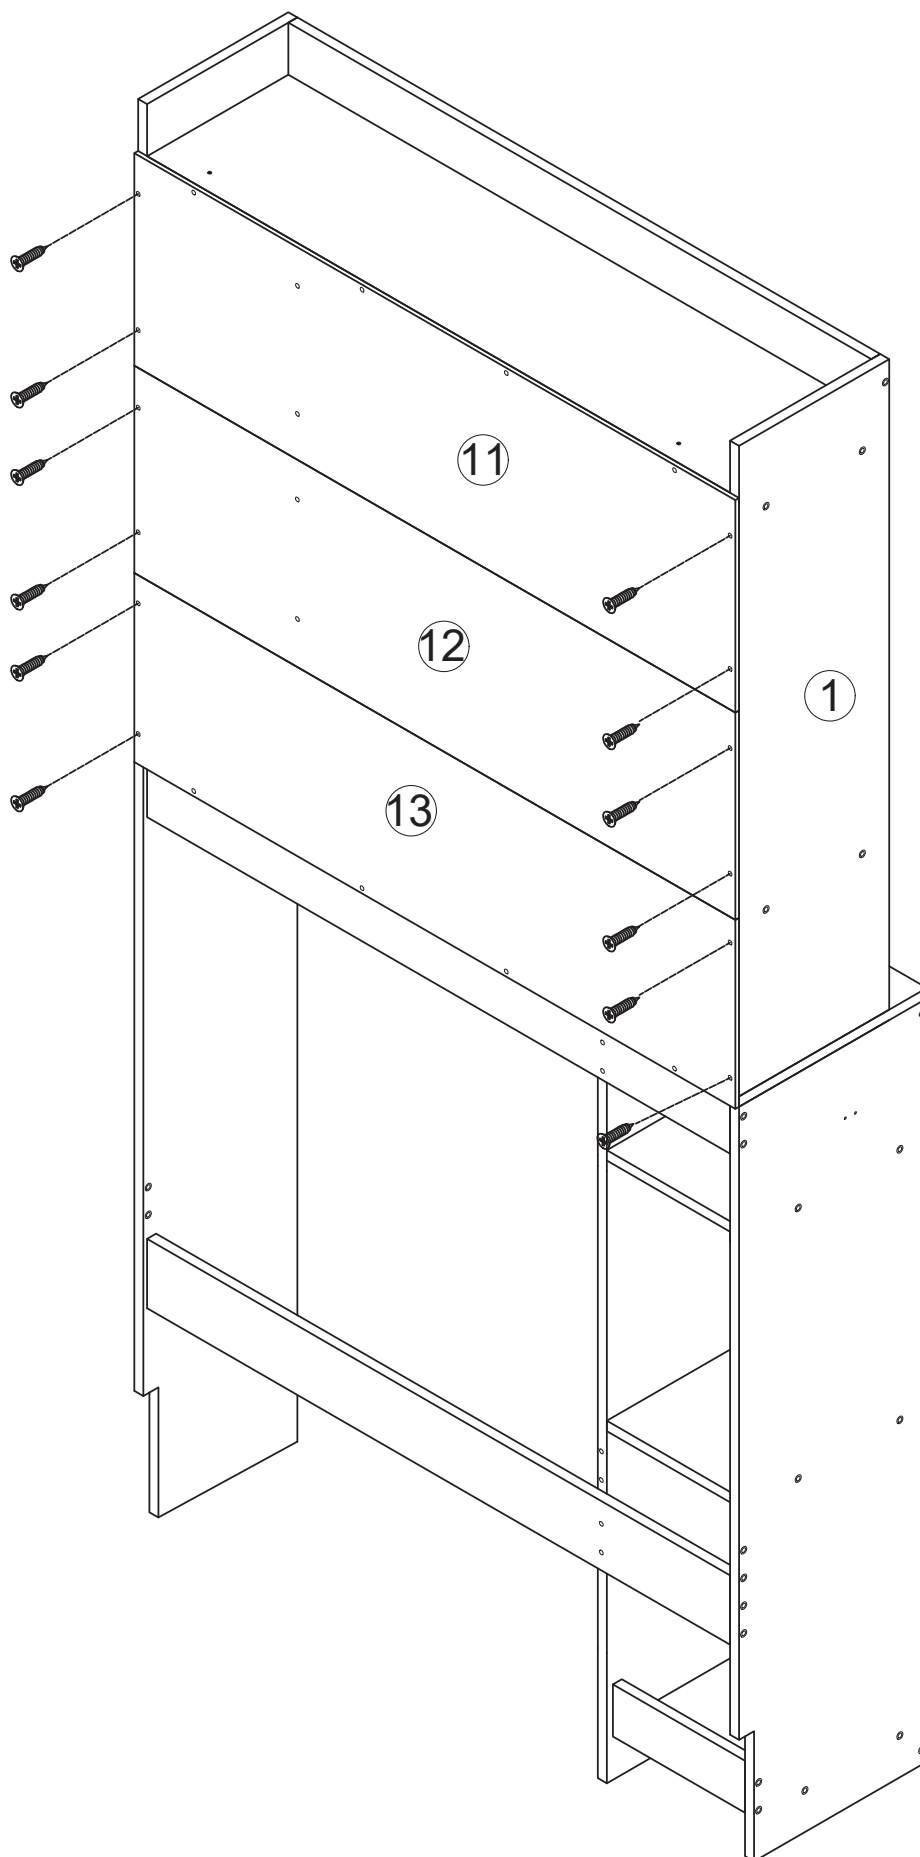

12


 E x12



 N




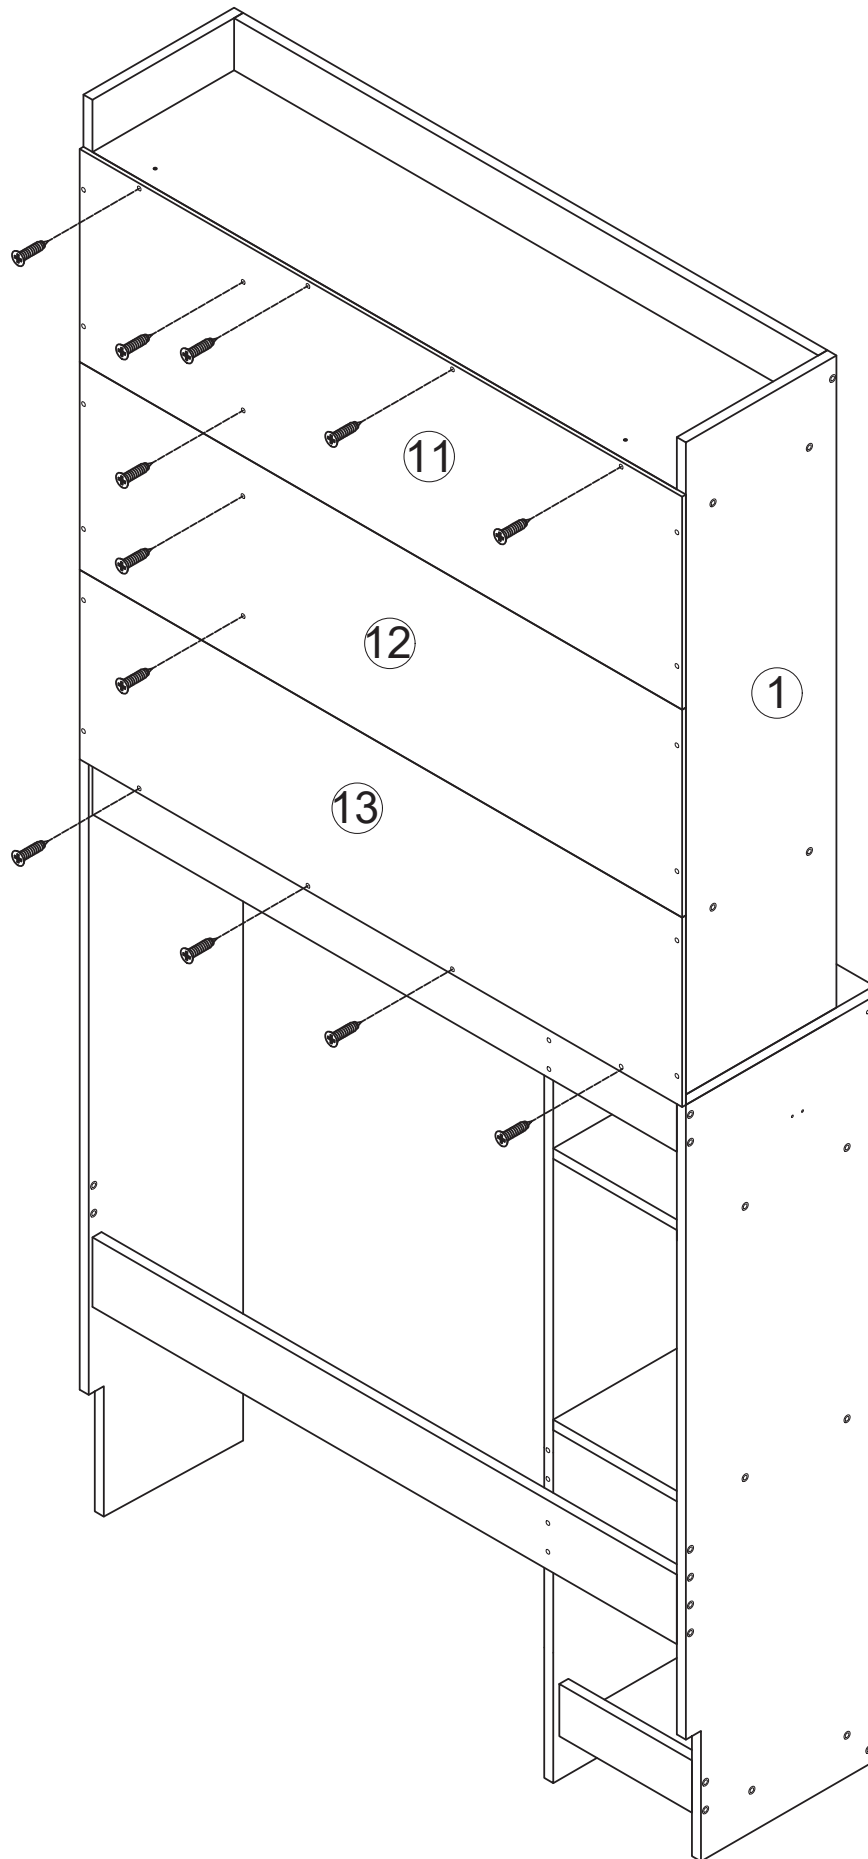


13


 H x 4


 N

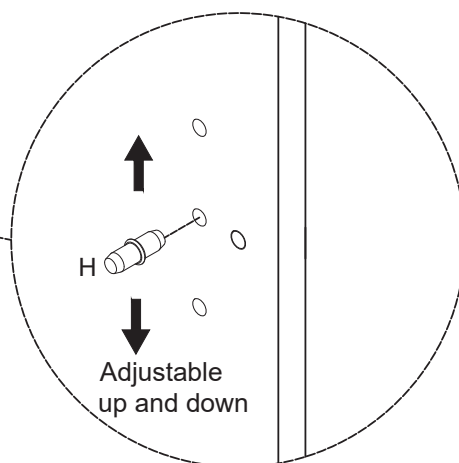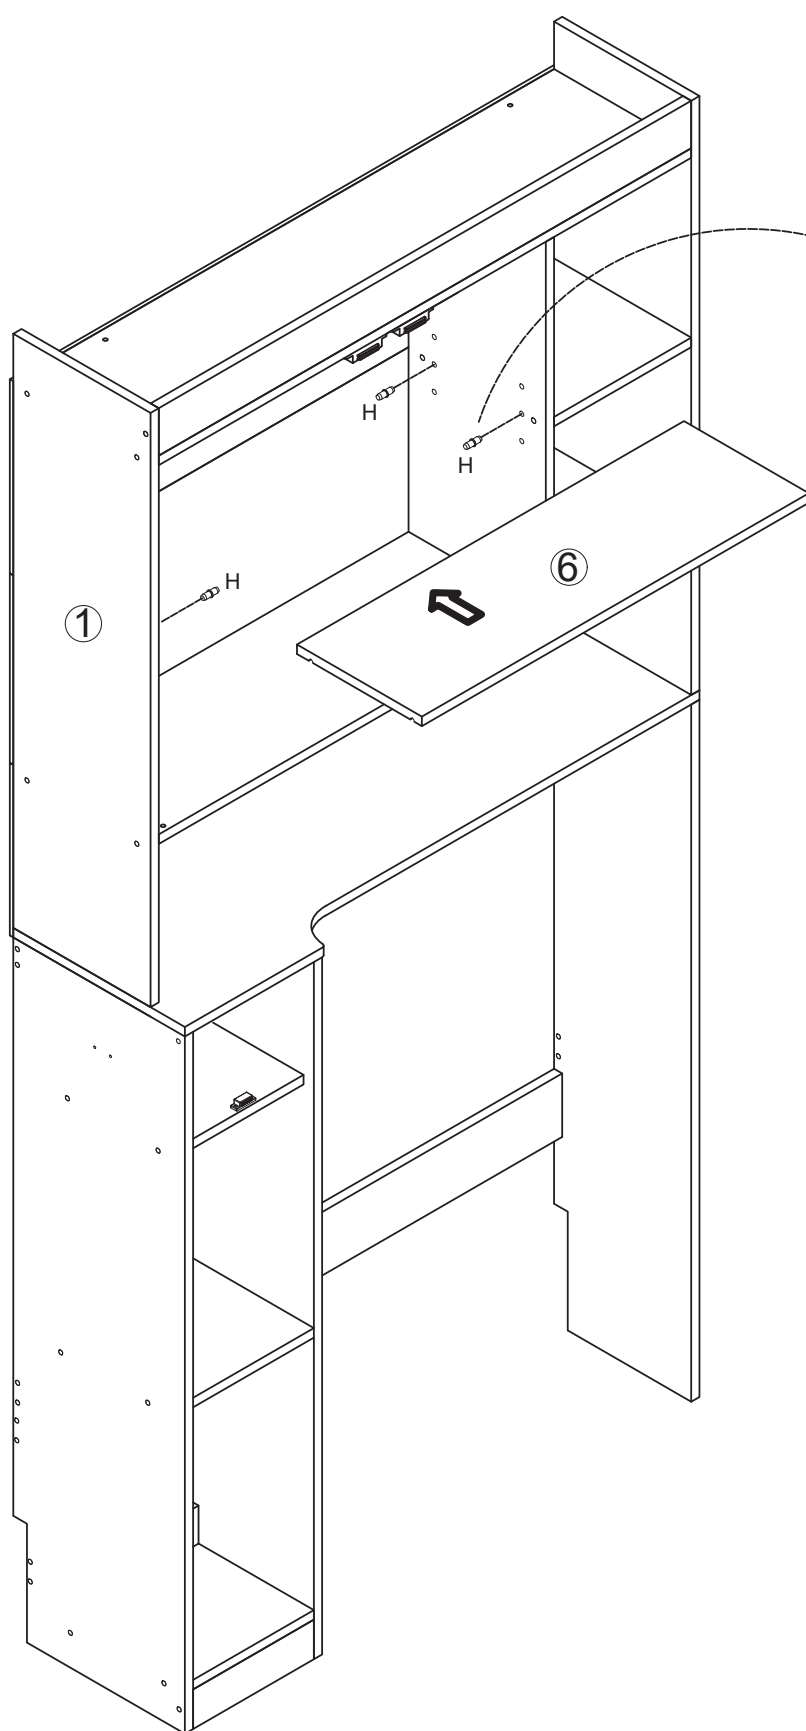

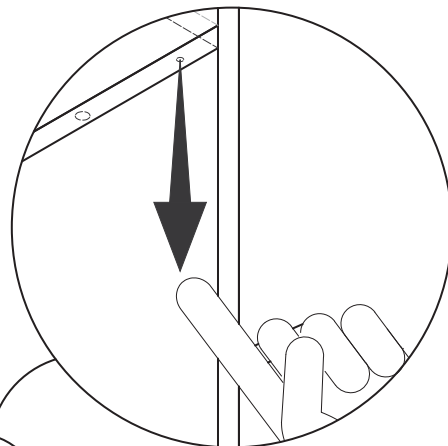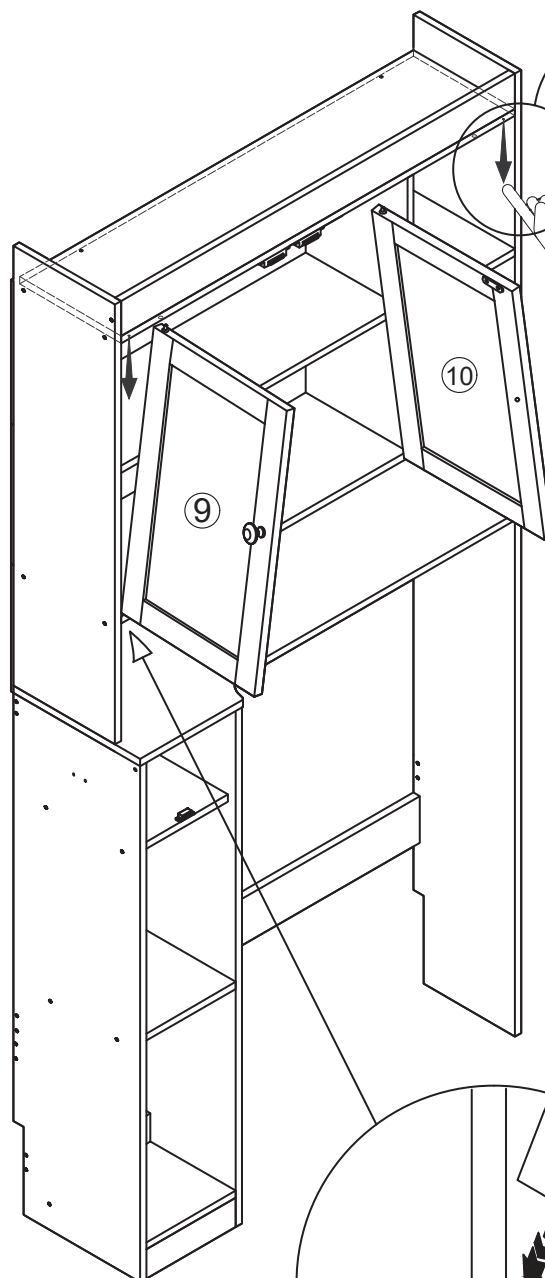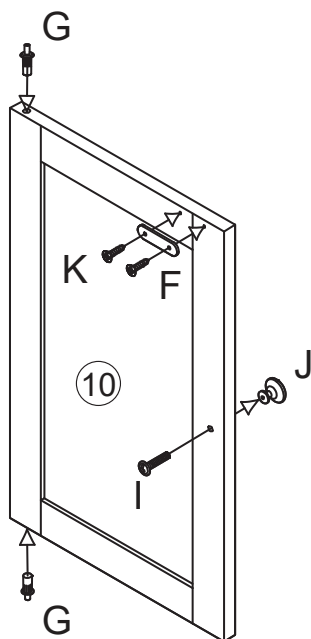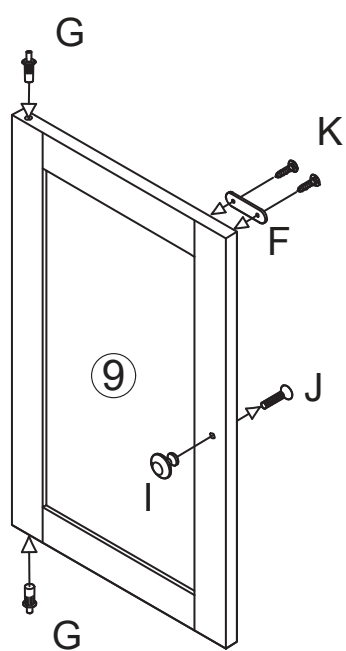


Please note that this is the hole for the proper installation of the door panel

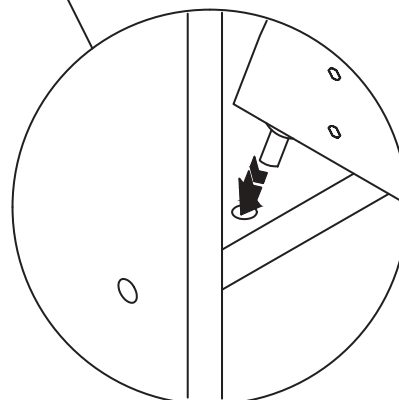

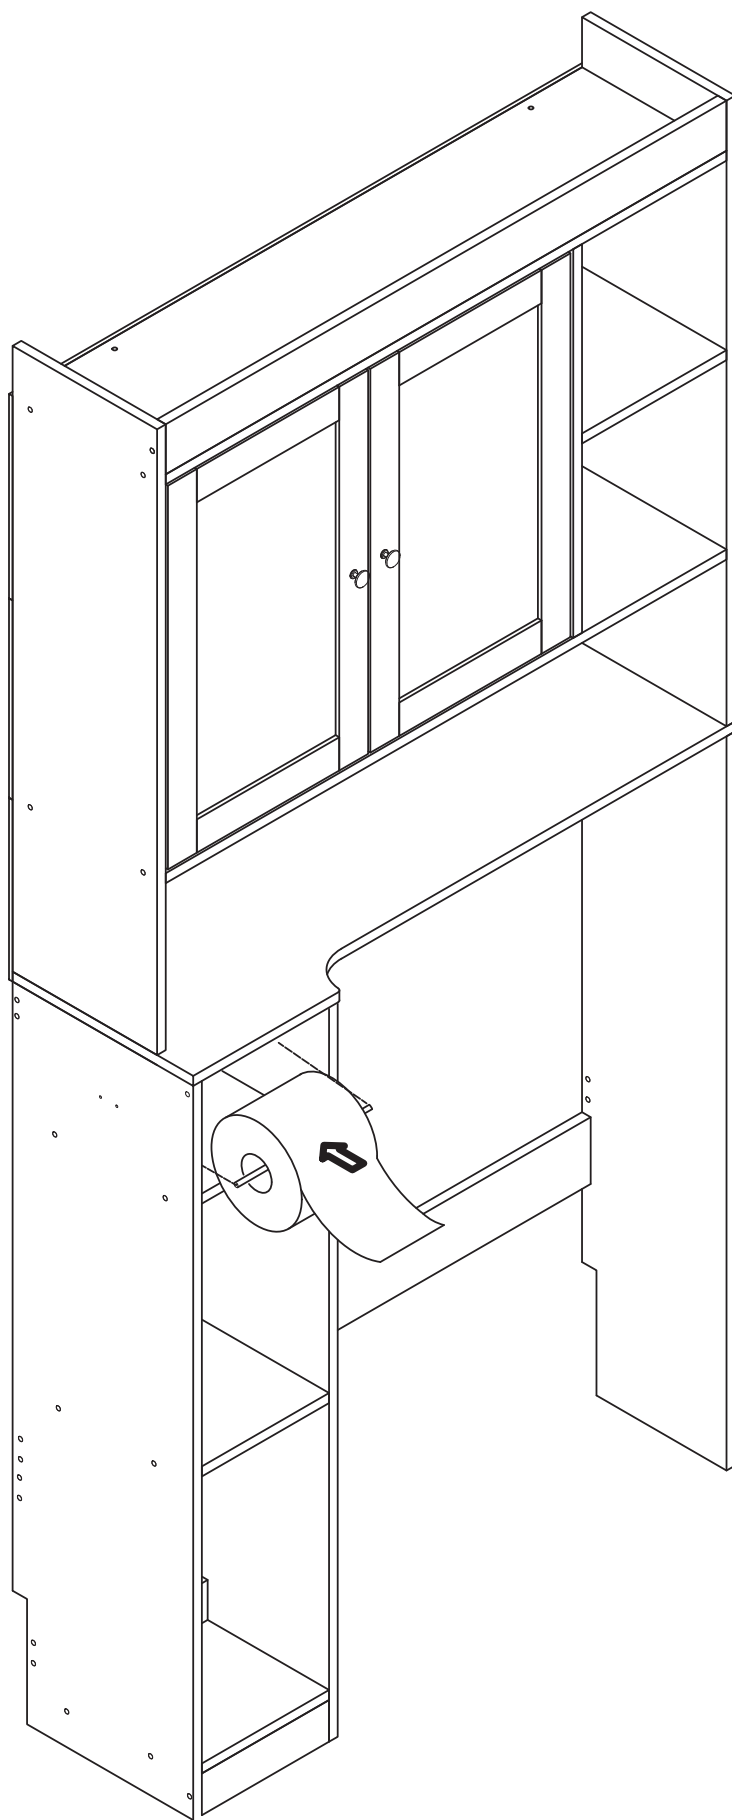

Paper roll
(not included)

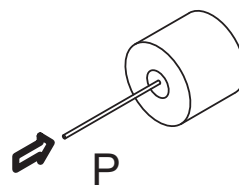




16

 G_{x2}

 F



 K_{x2}


 N

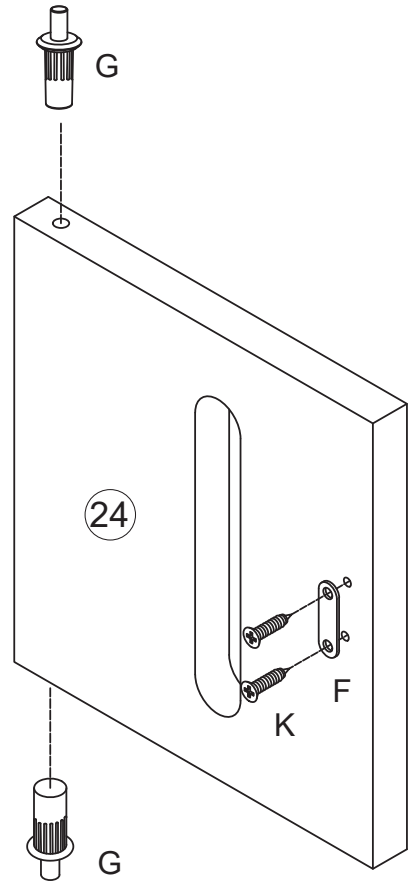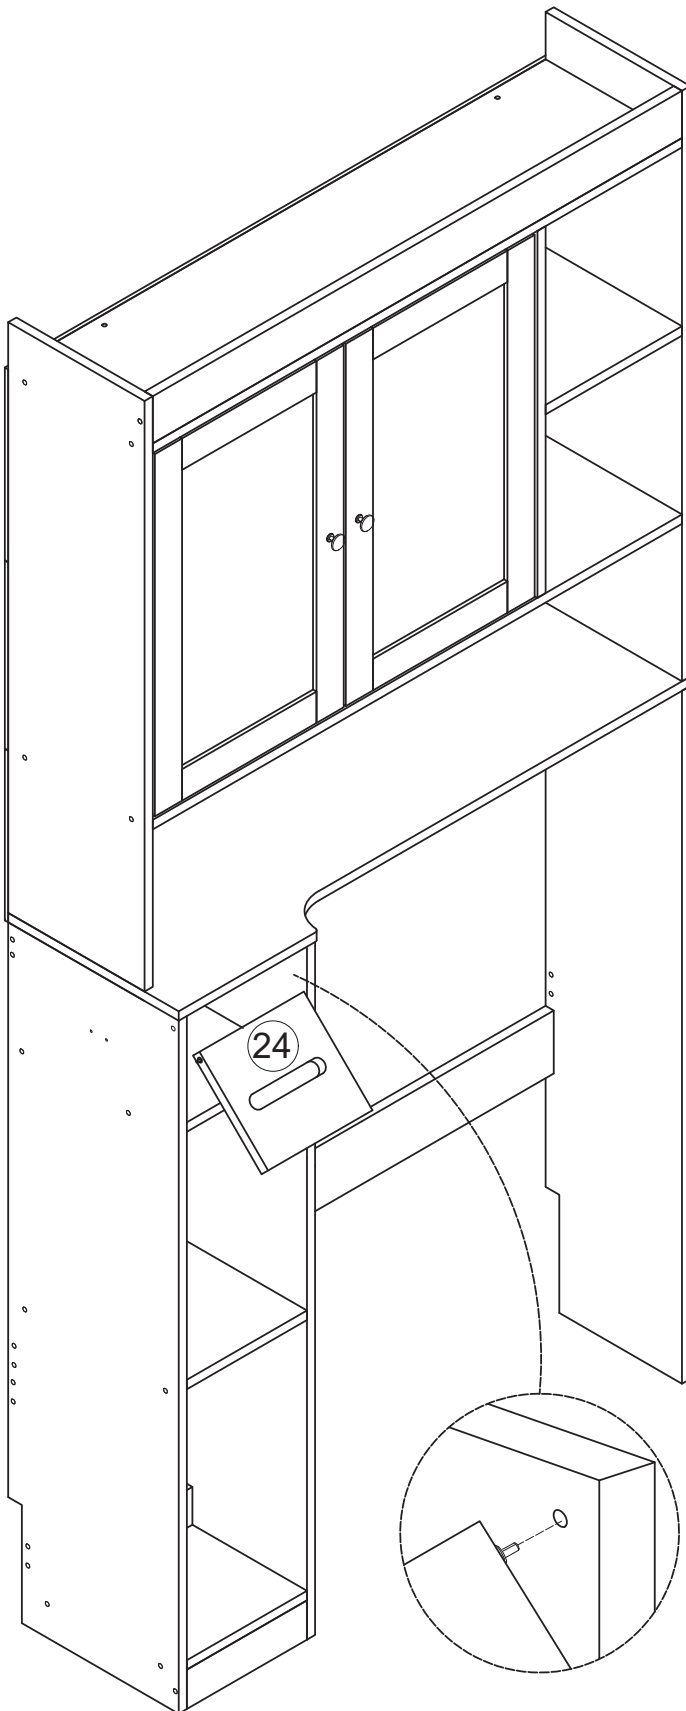


17

 O x2

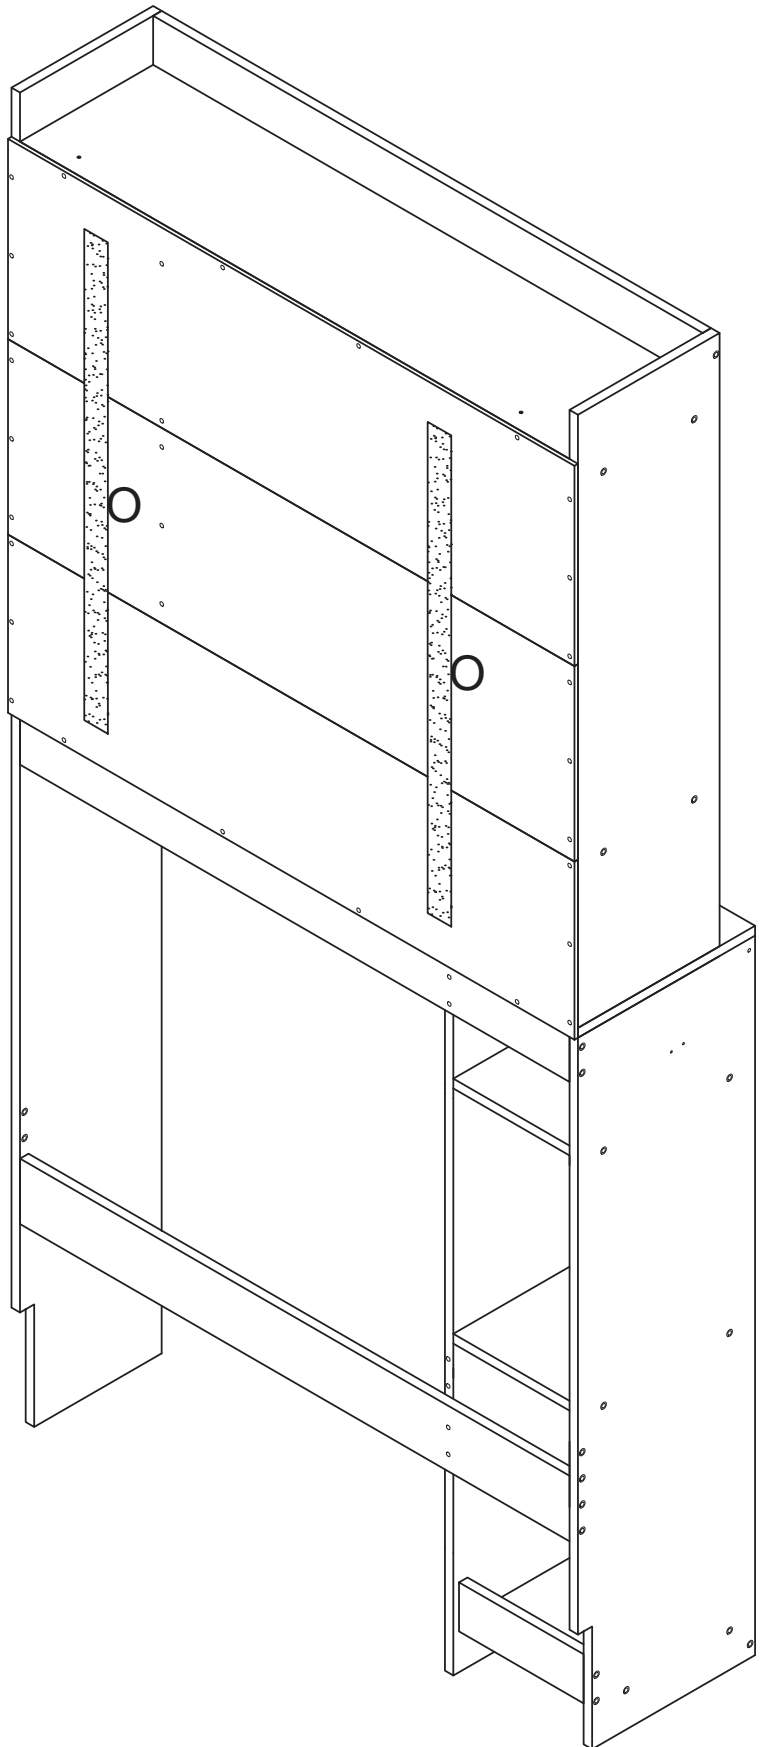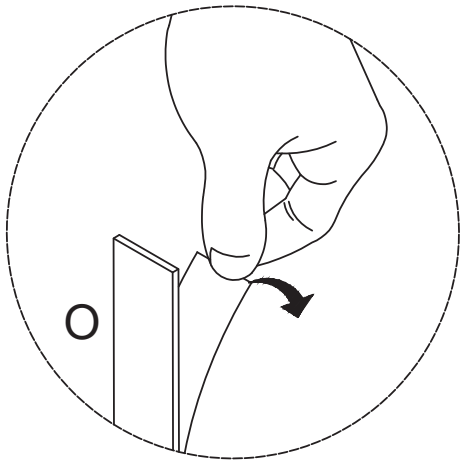


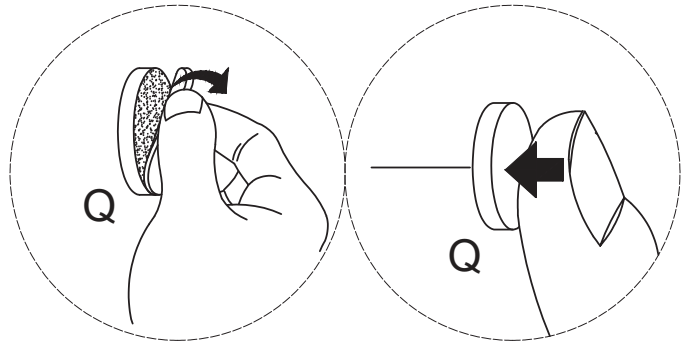


Attach the sticker to your needs.
The sticker easily falls off after
an extended period of time.

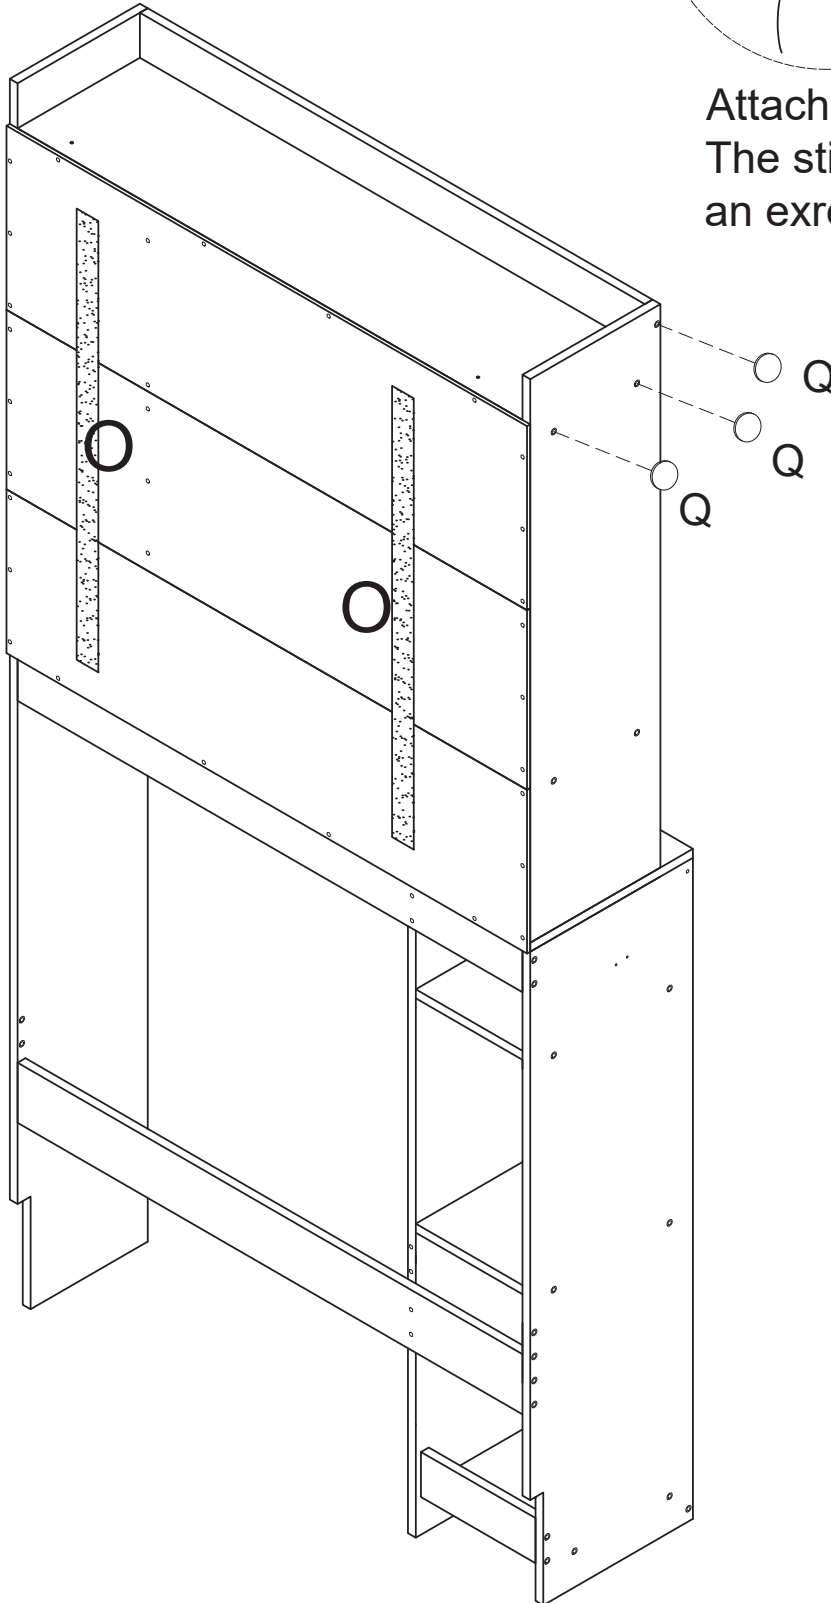




19



M x 2



N

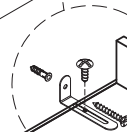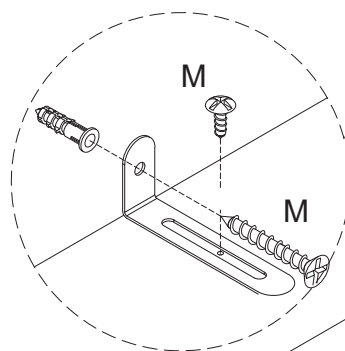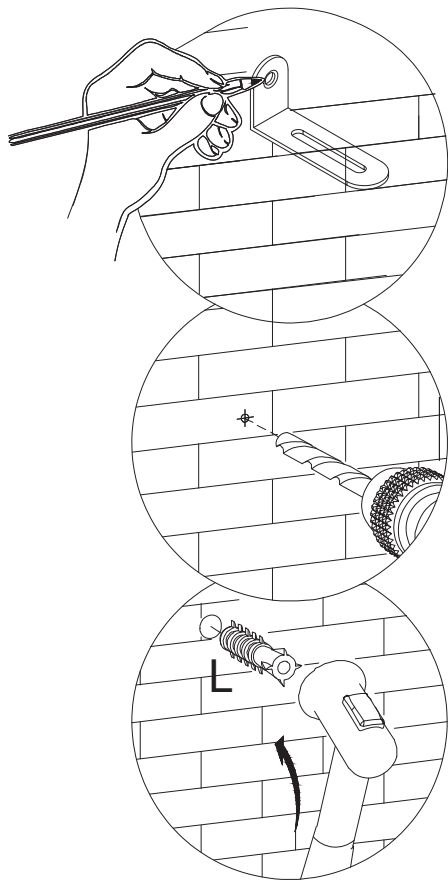

WALL

