

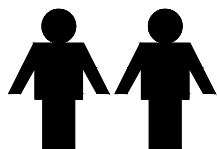
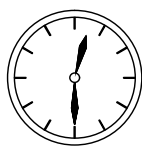



JA26304-CFM



ASSEMBLY INSTRUCTION


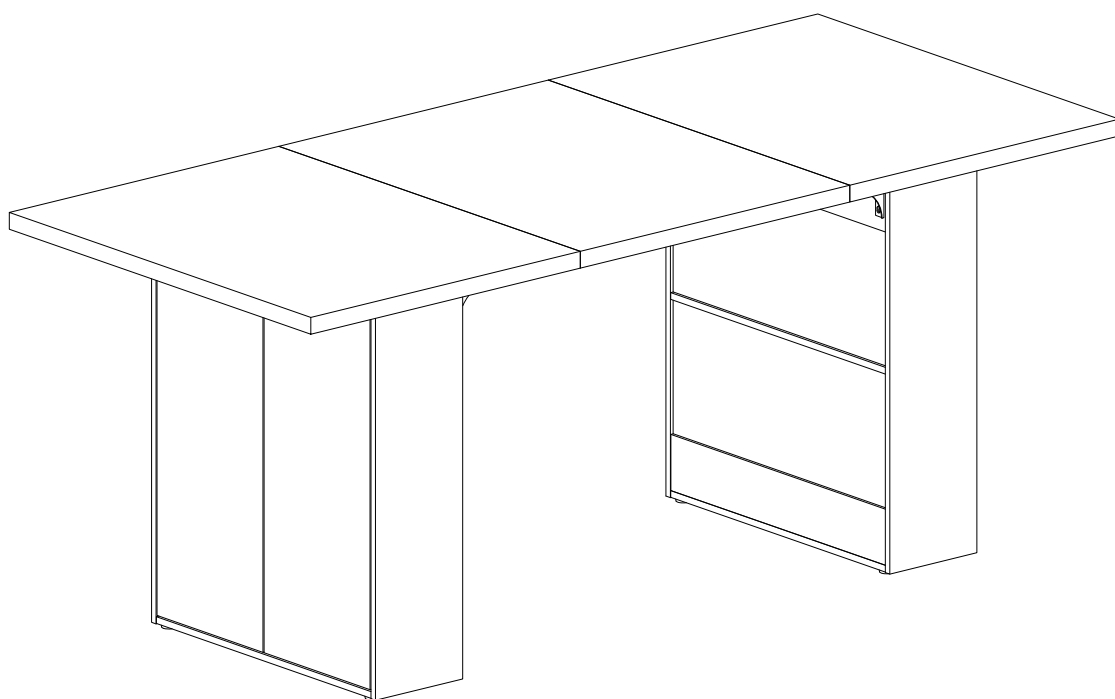


Notes: Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.



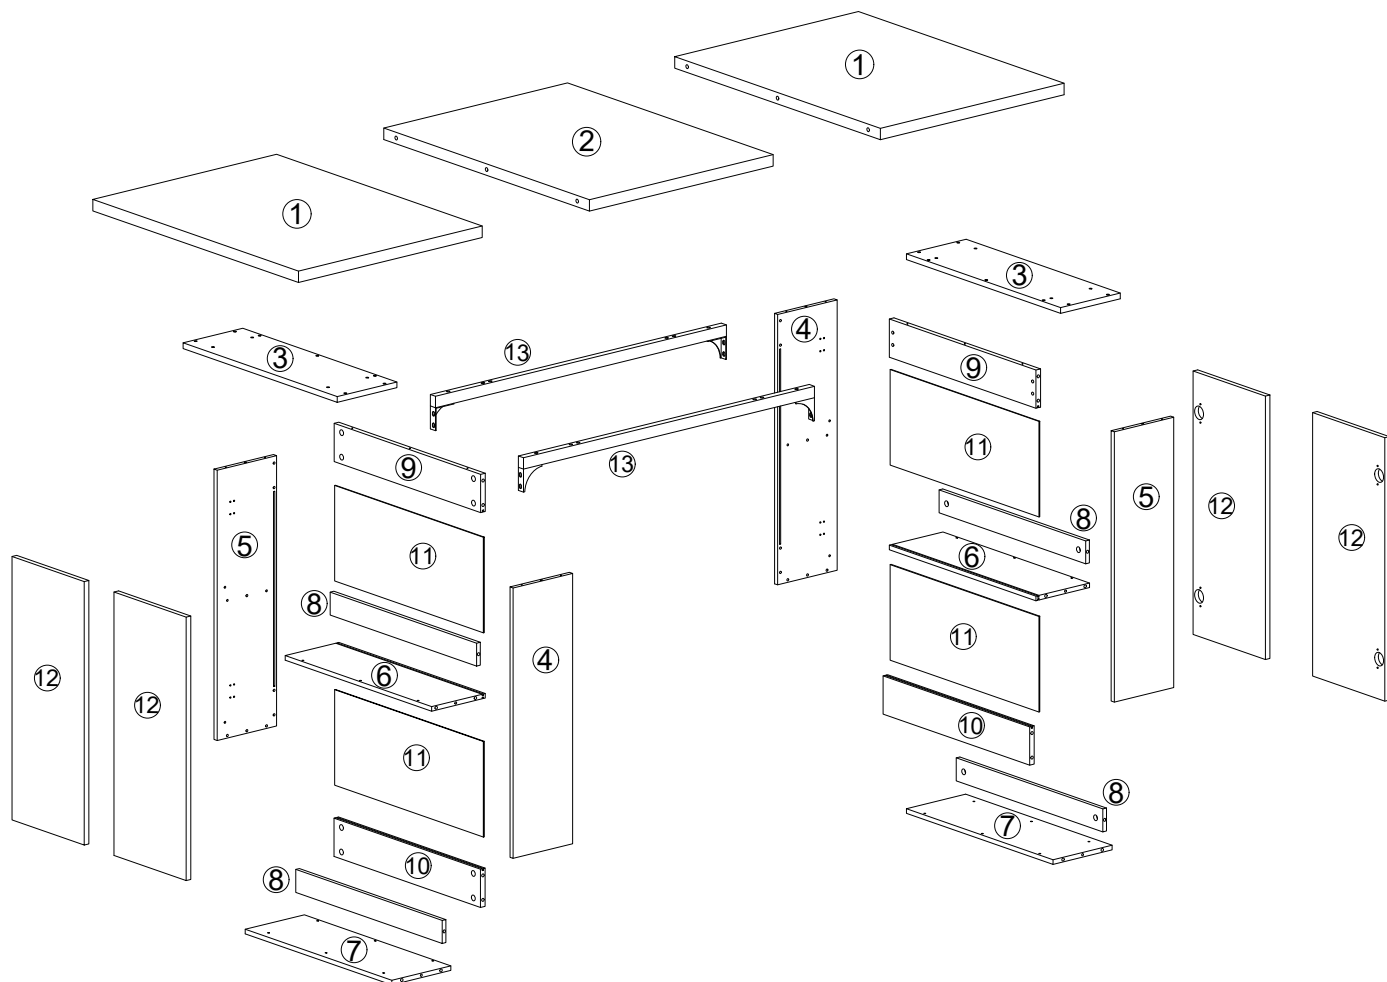


A	X40+1	B	X40+1	C	X12+1	D	X6+1	E	X1	F	X64+1
											
Ø6X35mm		Ø15X10mm		Ø6X30mm		Ø10X50mm		M4X64mm		Ø3.5X14mm	

G	X32+1	H	X8+1	I	X8+1	J	X8+1	K	X12+1	L	X4
											
Ø4X35mm		M6X12mm		M6X15mm		M6X30mm		M6X45mm		40X20mm	




M	X8	N	X8	O	X4	P	X8
							
M6XØ25mm		14X14X9mm		L87mm			

STEP 1

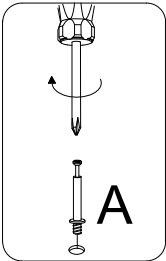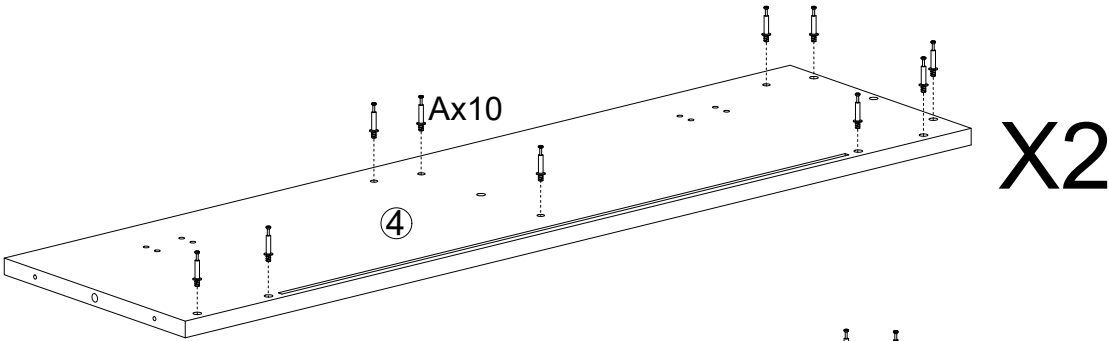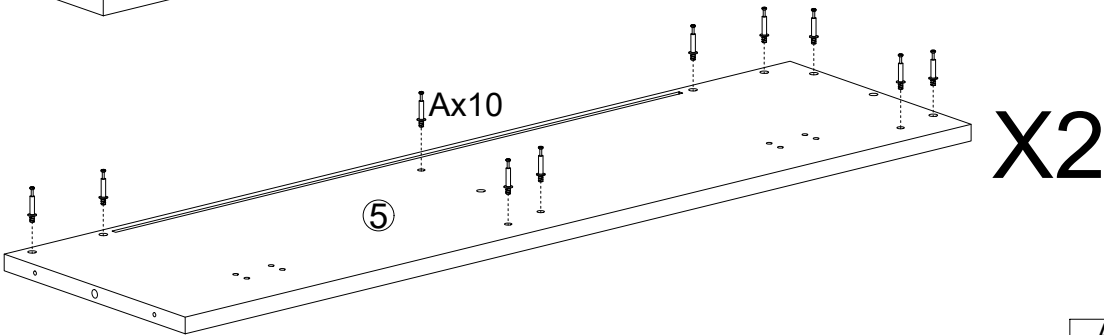

A	X40
Ø6X35mm	


STEP 2

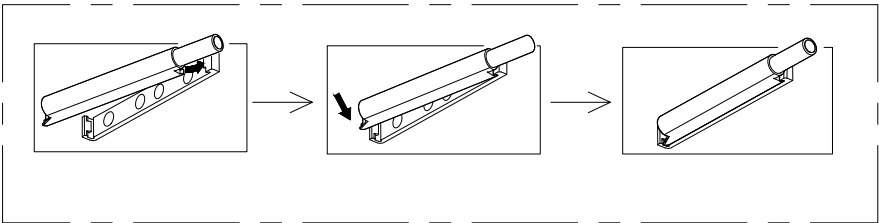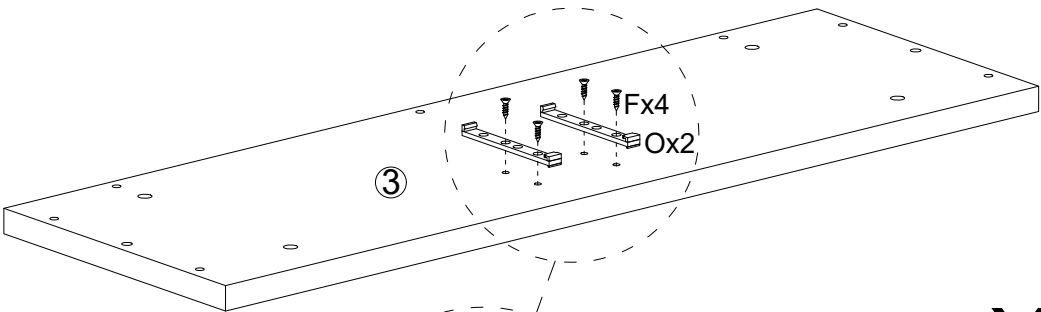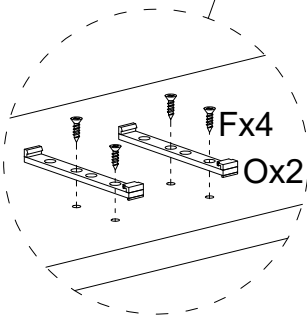

X2

F	X8	O	X4
Ø3.5X14mm		L87mm	


STEP 3

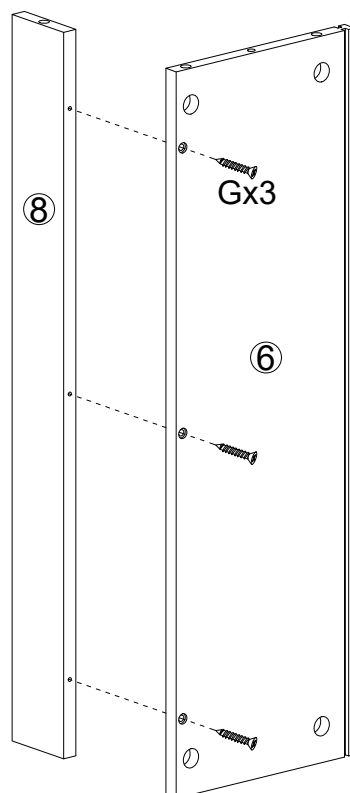

X2

G	X6
	
Ø4X35mm	


STEP 4

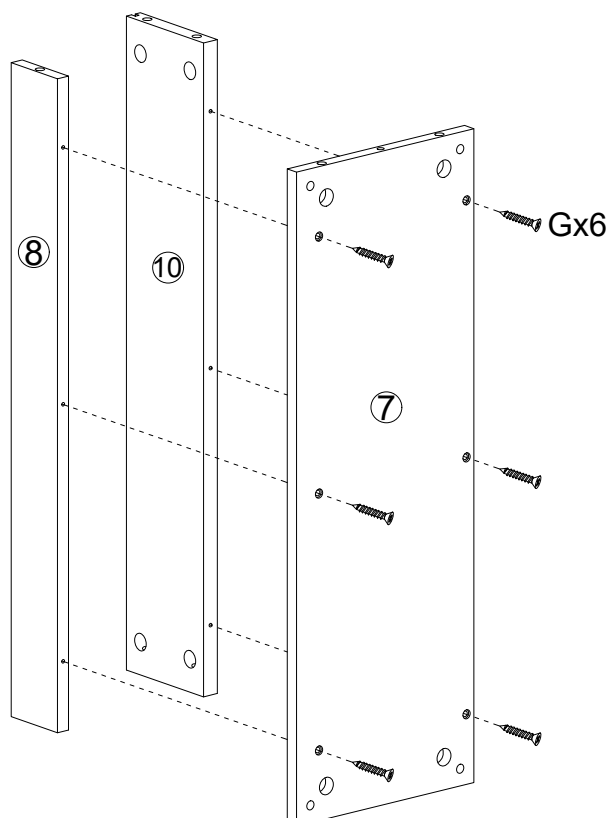


X2


G	X12
	
Ø4X35mm	

STEP 5

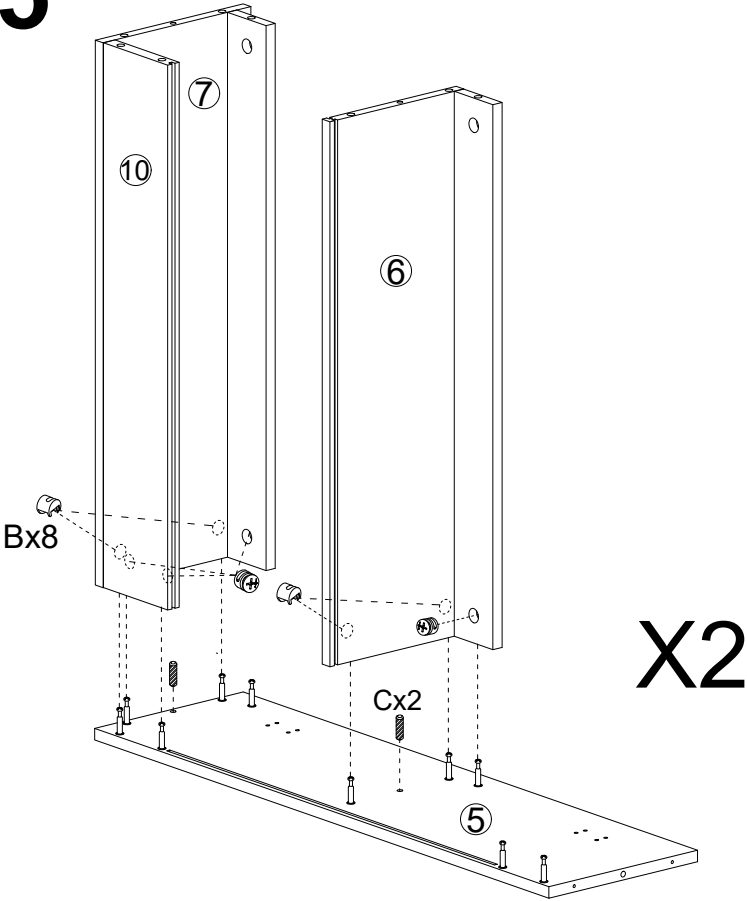


B	X16	C	X4
			
Ø15X10mm		Ø6X30mm	

STEP 6

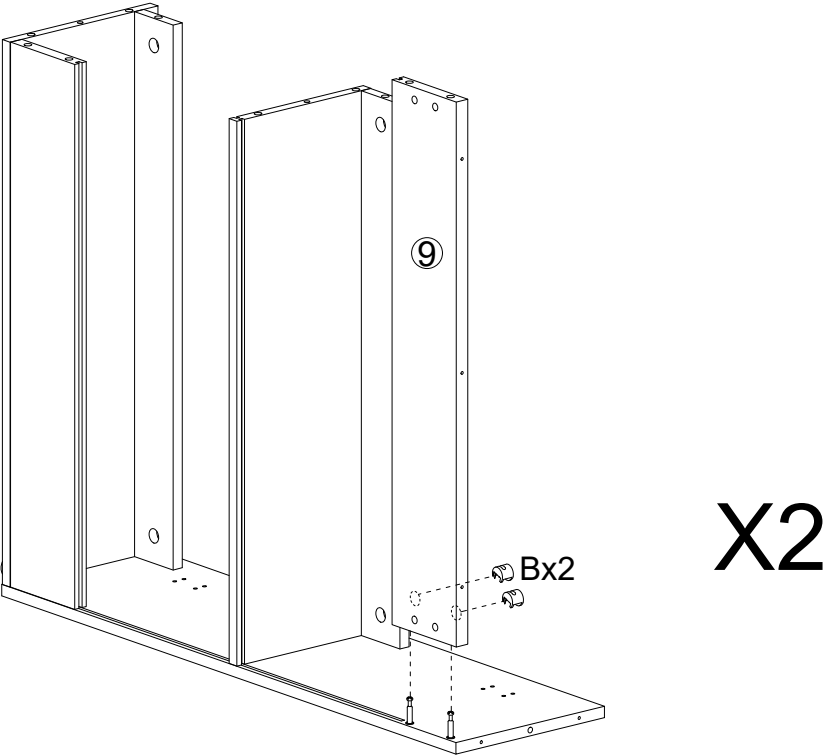


B	X4
	
Ø15X10mm	

STEP 7

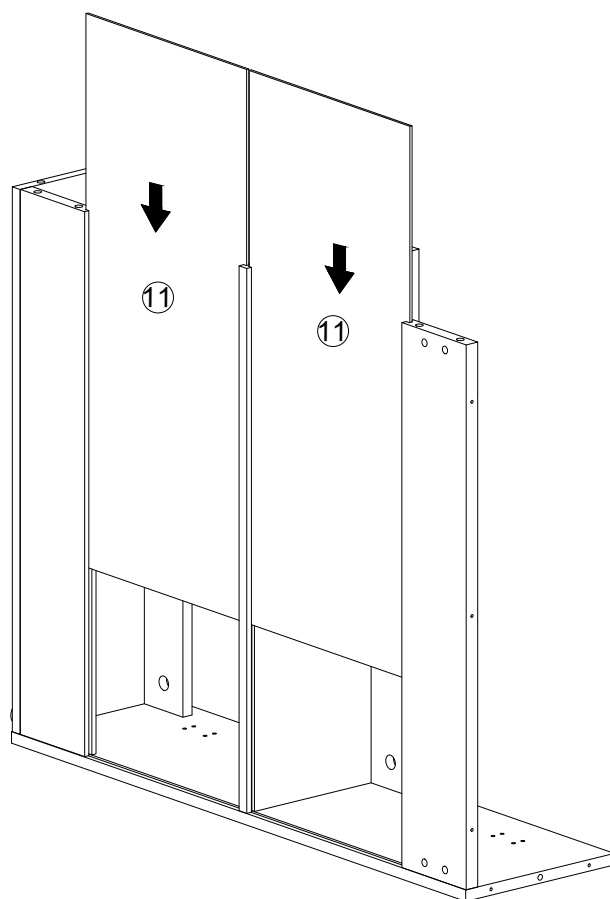


X2


STEP 8

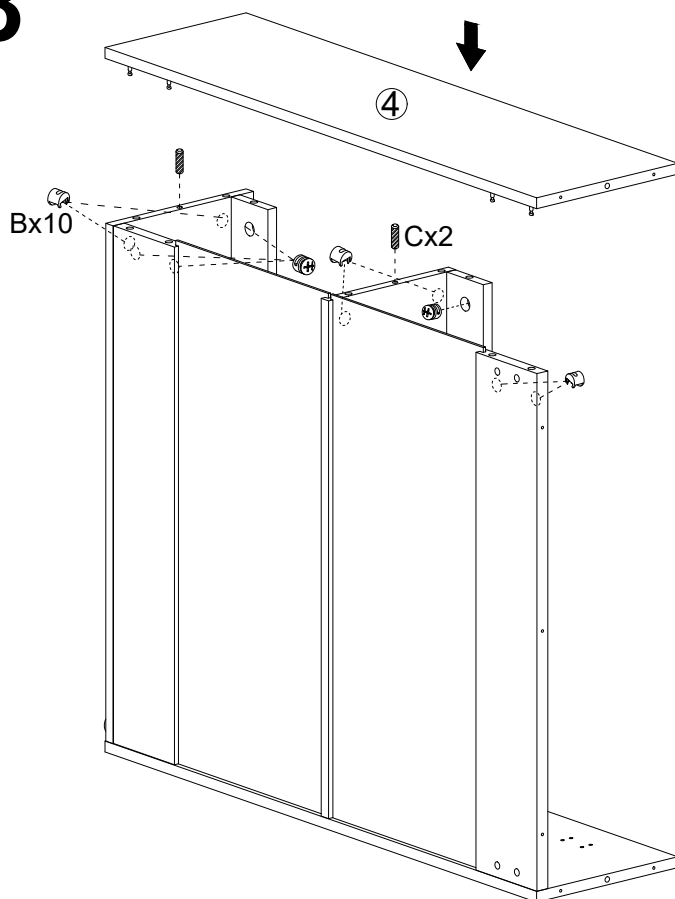

X2

B	X20	C	X4
			
Ø15X10mm		Ø6X30mm	


STEP 9

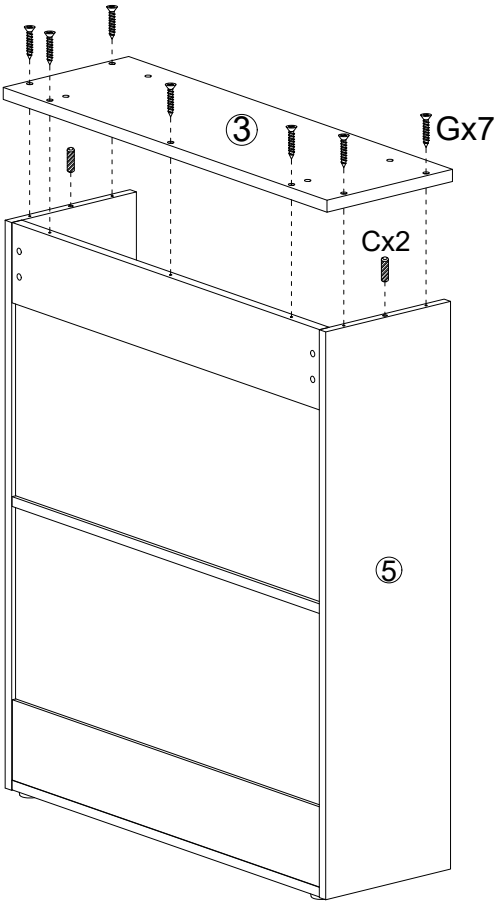

X2

C	X4	G	X14
			
Ø6X30mm		Ø4X35mm	


STEP 10

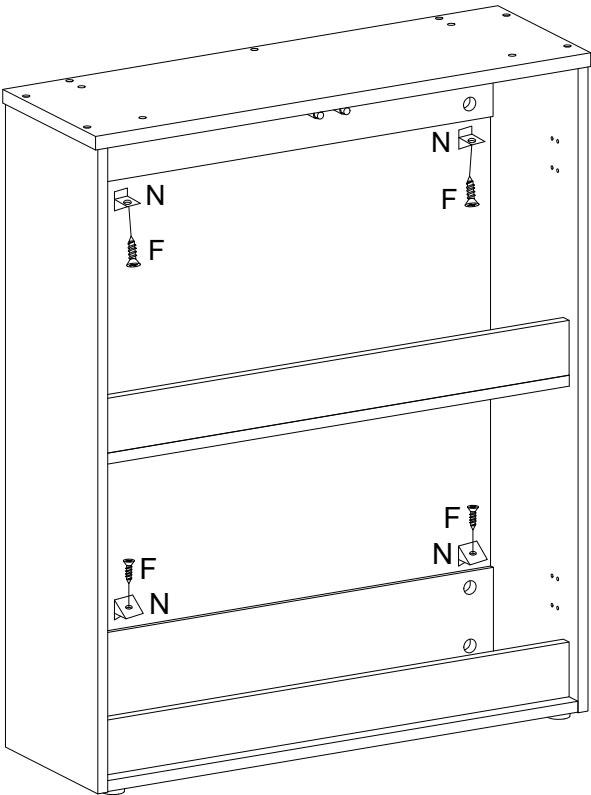



X2

F	X8	N	X8
			
3.5X14mm		14X14X9mm	

STEP 11



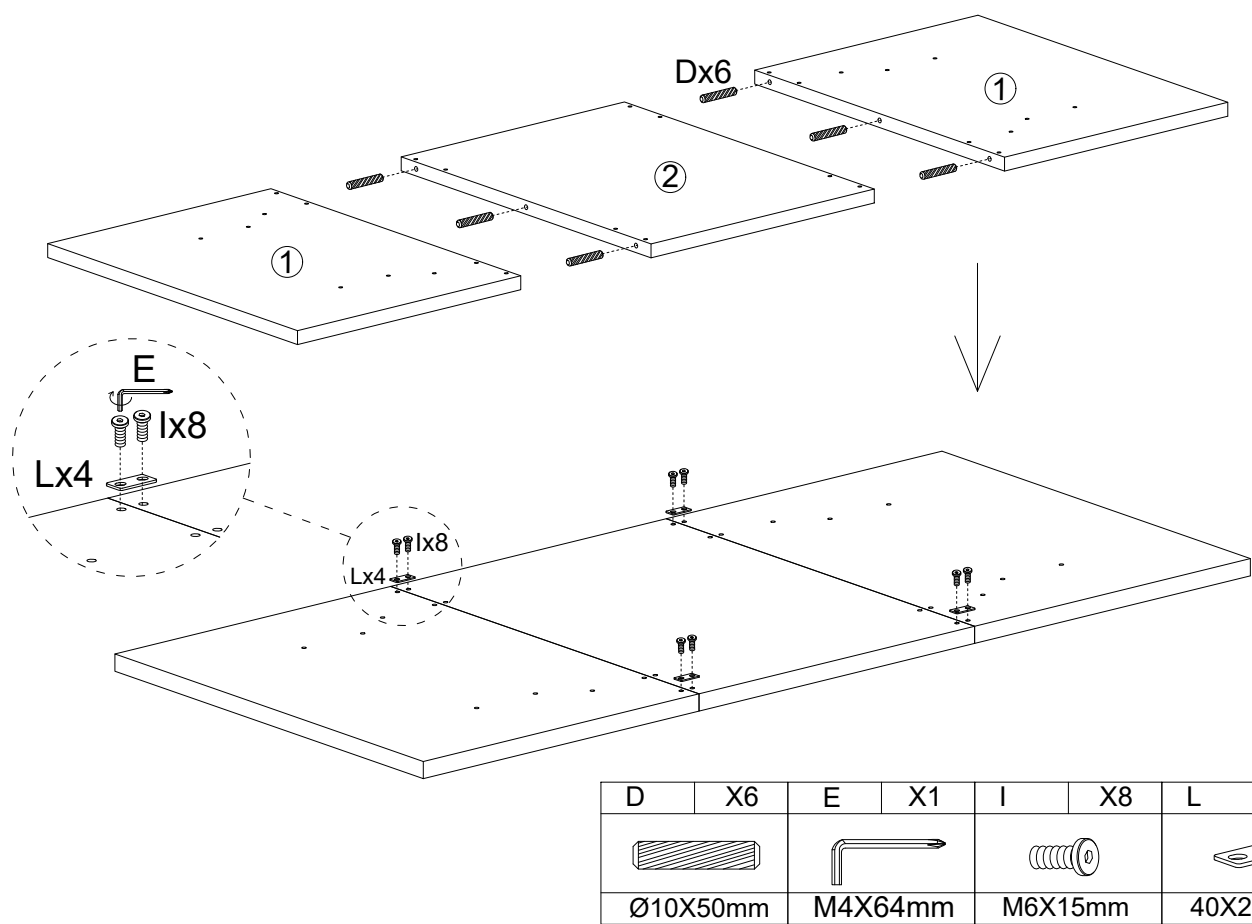


STEP 12

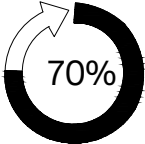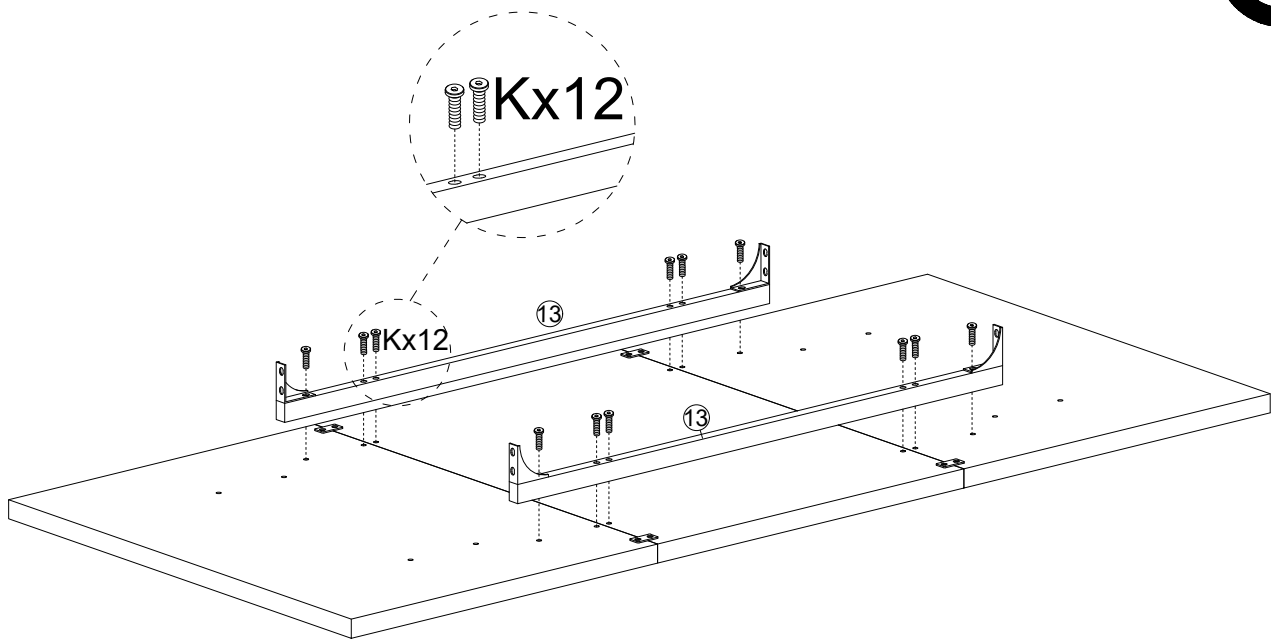




K	X12
M6X45mm	

STEP 13

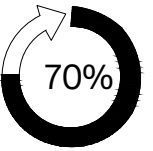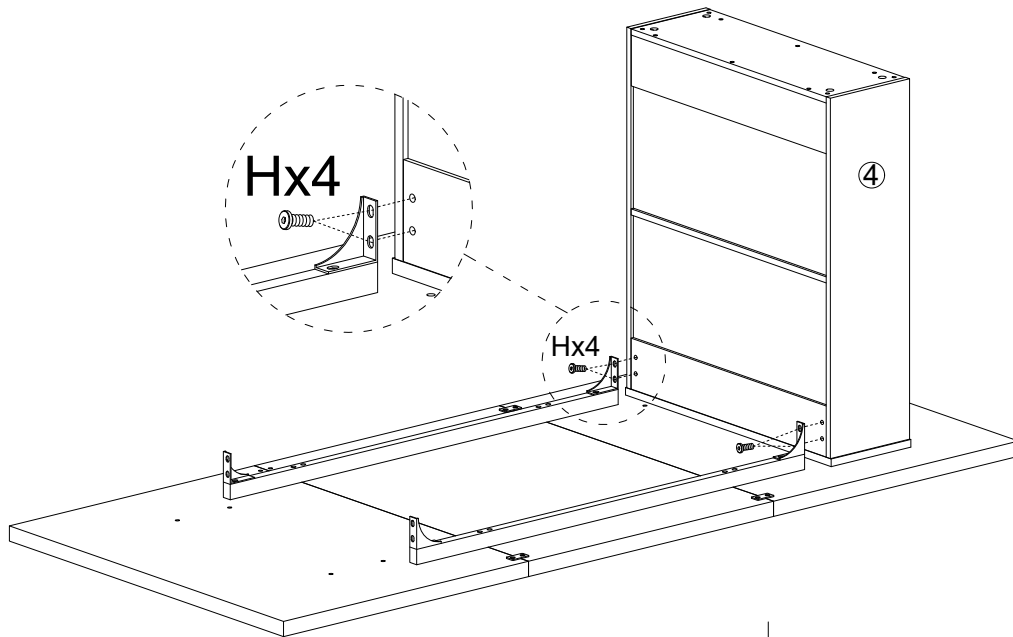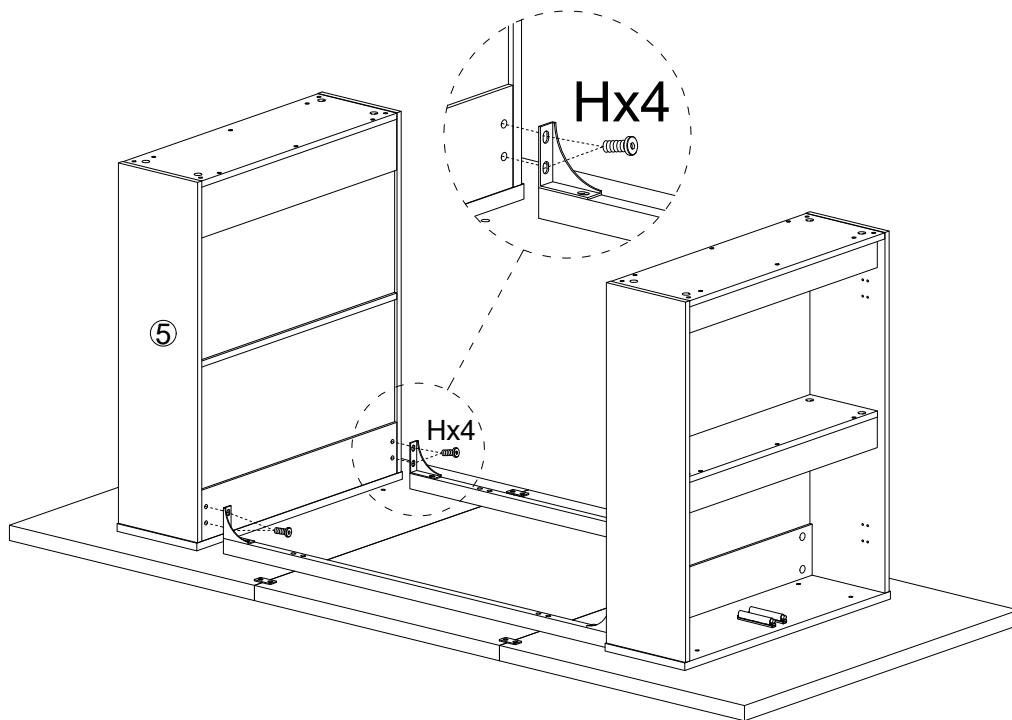


H	X8
	
M6X12mm	

STEP 14

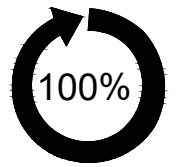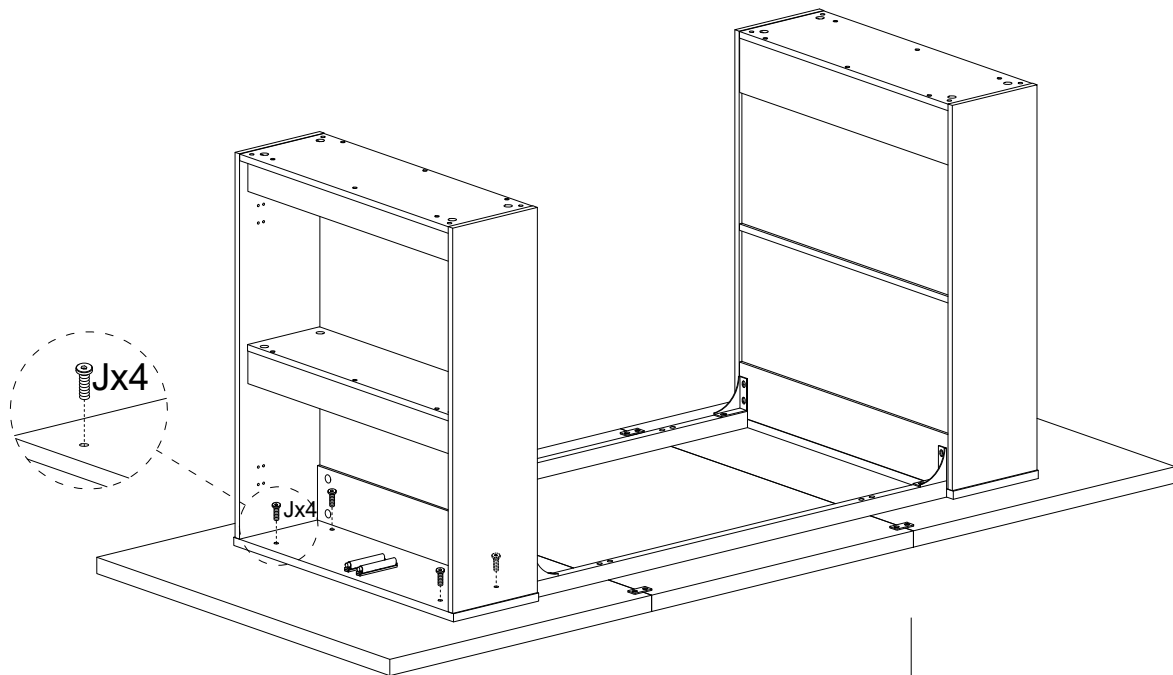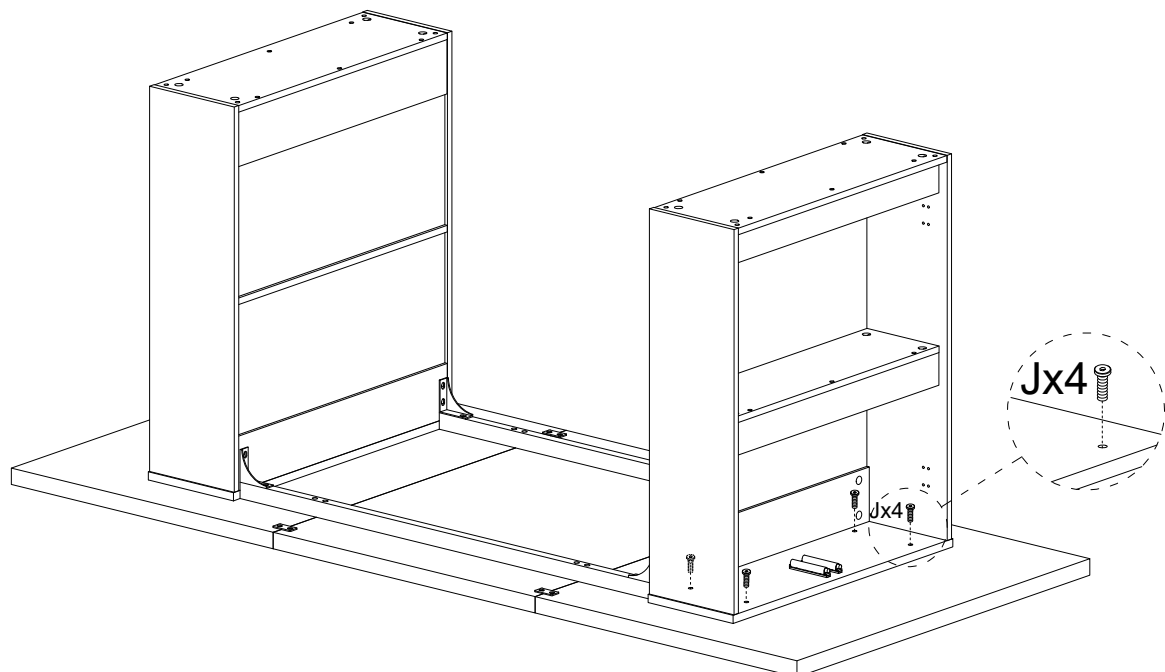


J	X8
A small icon of a screw, showing the head and the threaded part.	
M6X30mm	

STEP 15

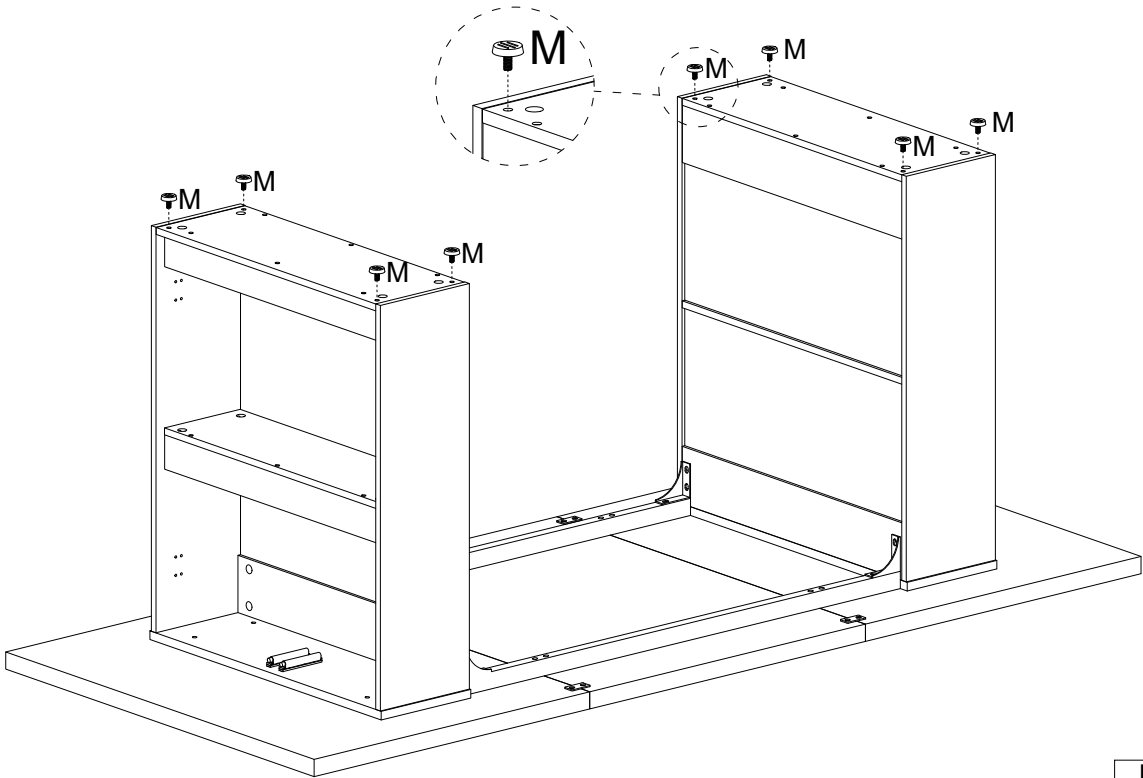

M	X8
	
M6XØ25mm	






STEP 16

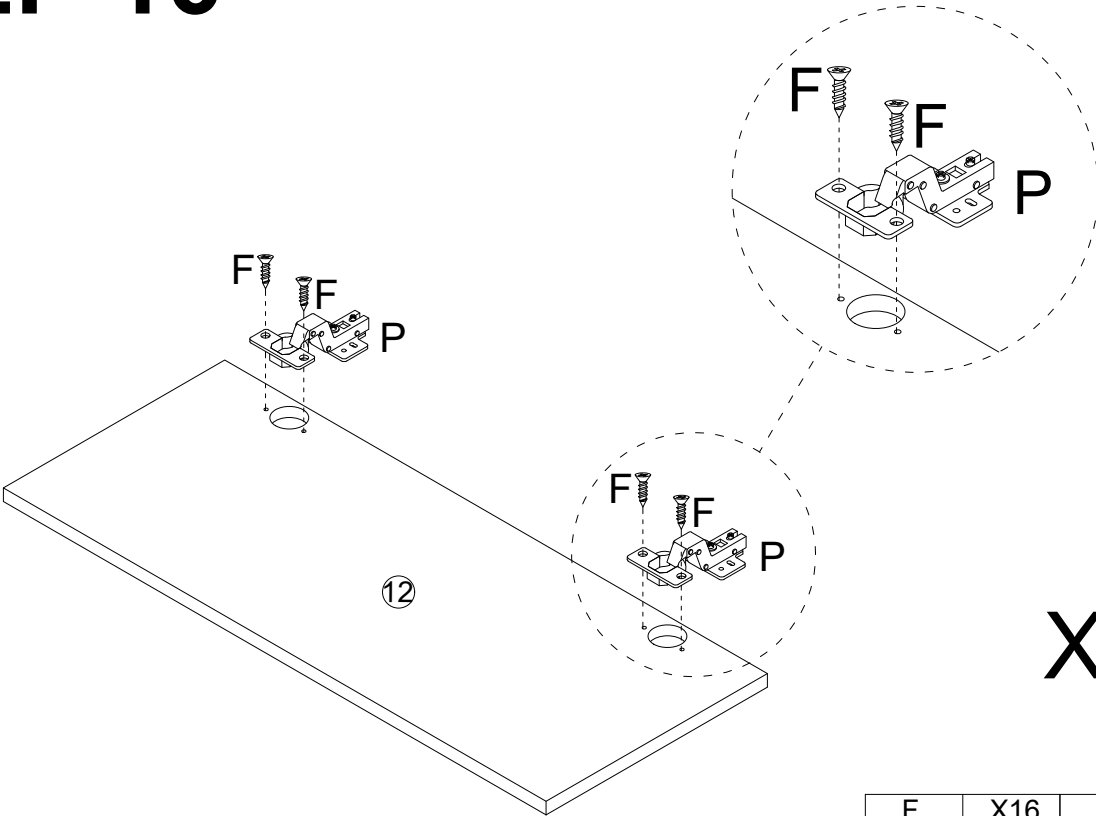

X4







F	X16	P	X8
			
3.5X14mm			

STEP 17

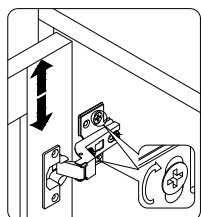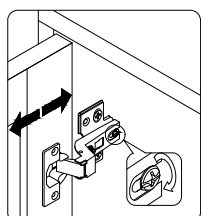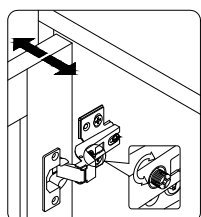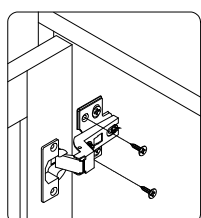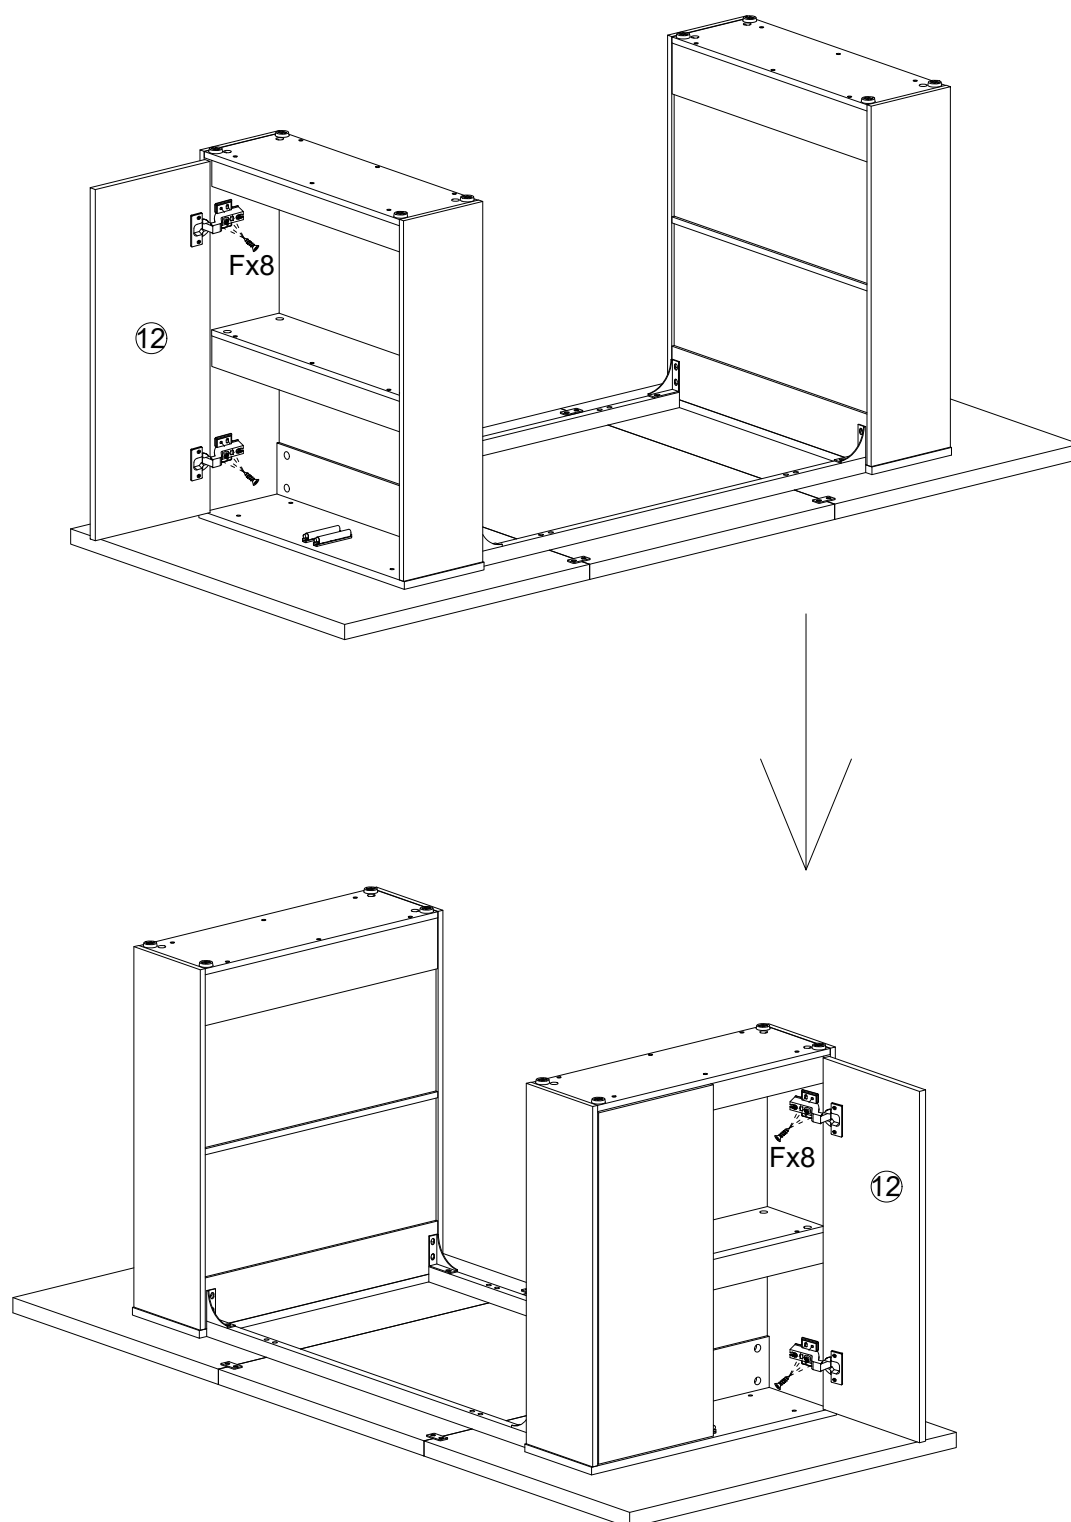

F	X16
3.5X14mm	

STEP 18

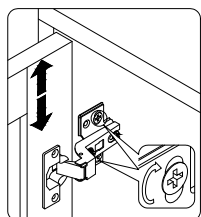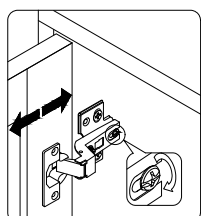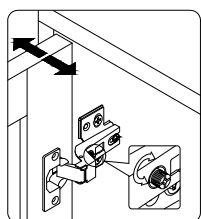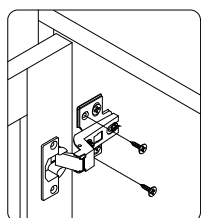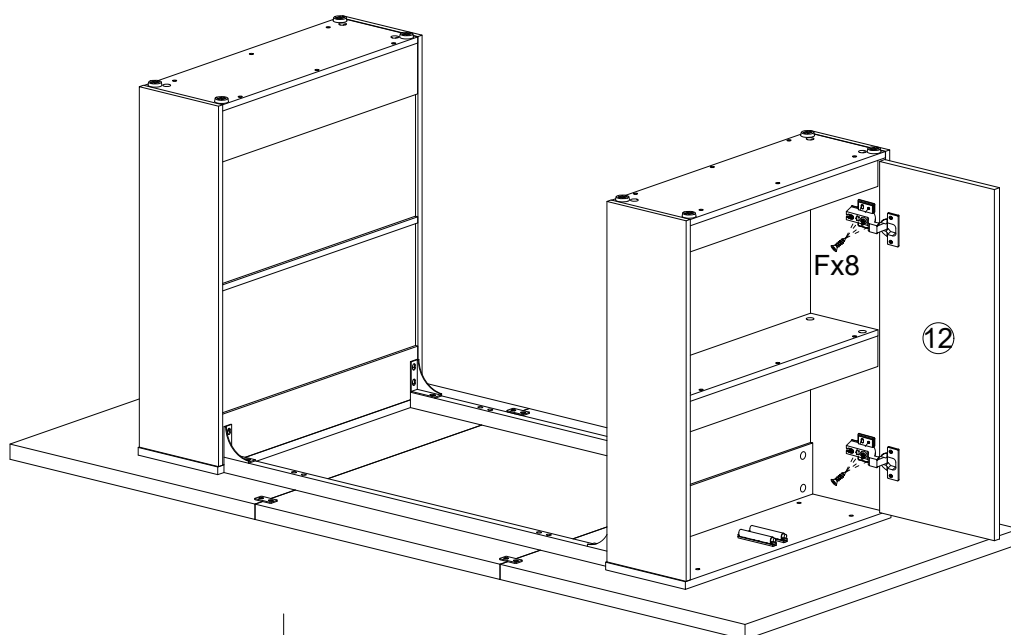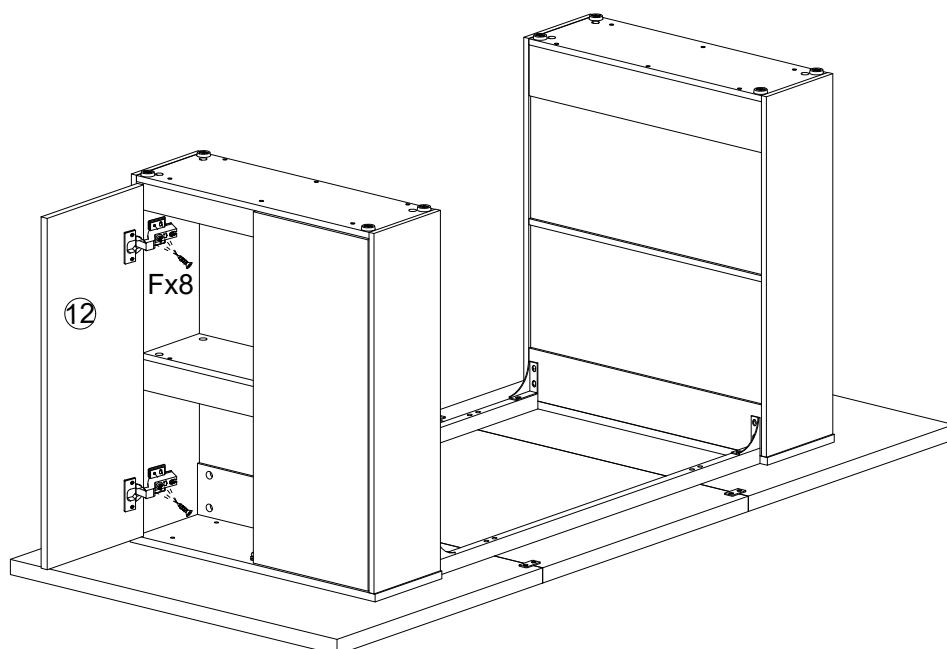

F	X16
3.5X14mm	

STEP 19

