


Hall Tree

Assembly Instructions -Please keep for future reference

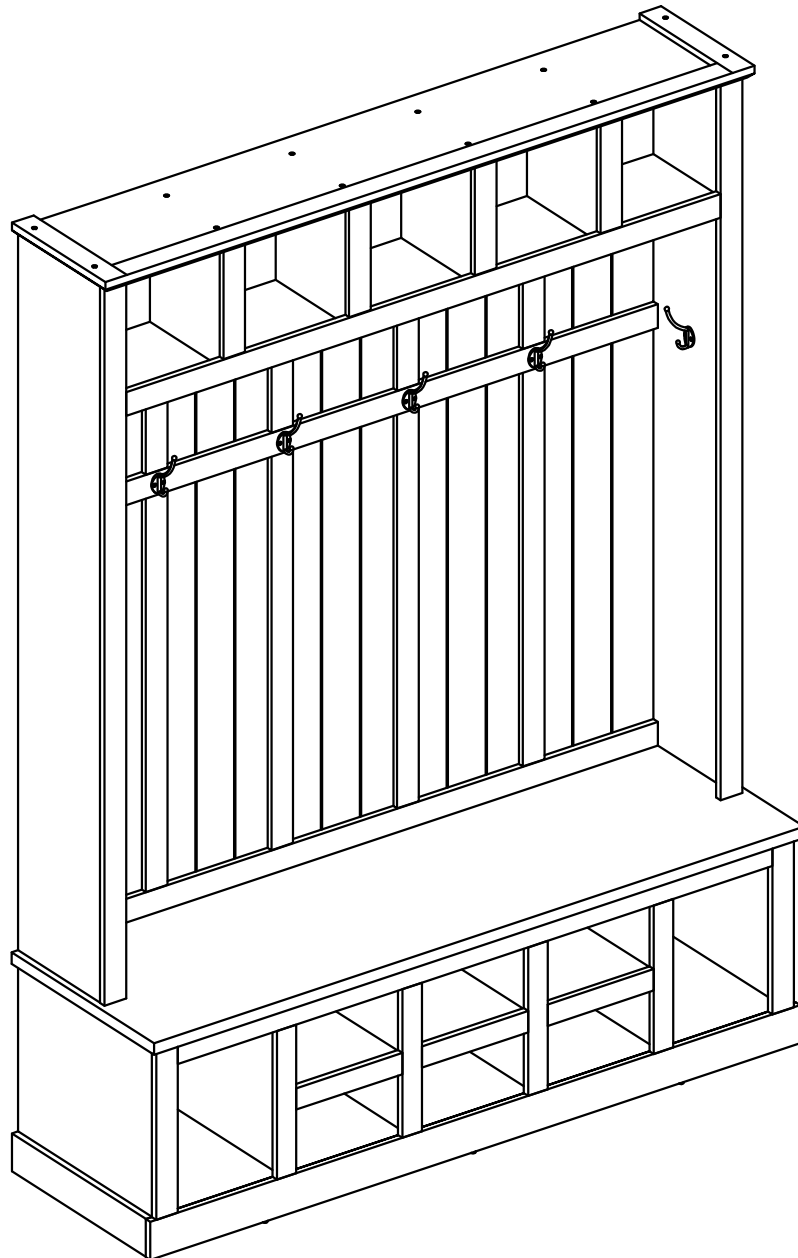

Dimensions

Width-59.1inch

Depth-18.0inch

Height-78.74inch

 WARNING	
	This product is NOT a Clothing Storage Unit (CSU).
	DO NOT use it for clothing storage.
	Improper use may cause furniture tipover.

Important - Please read these Instructions fully before starting assembly



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- . To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- . From time to time check that there are no loose screws on this unit.

- . This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- . Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

- . Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning -
please follow these Instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)

Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose








Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components -Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than are required.

 Cam bolt x 112+3	 Cam lock x 112+3	 M4*40mm Screw x 4+1	 M6*45mm Screw x 28+2	 Ø6*30mm Dowel x 105+5	 M3.5*12mm Screw x 48+5
 M3*14mm Screw x 16+2	 Hook x 6	 Nail x 21+4	 M3*16mm Screw x 21+4	 Nail Leg x 9+2	 L Bracket x 2
 Perfect Sticker x 60	 Allen key M4 x1	 Phillips screwdriver x 1	    P1 P2 P3 P4 L Bracket x 2 M4*14mm Screw x 2 Wall plug x 2 M4*35mm Screw x 2		

Tools required

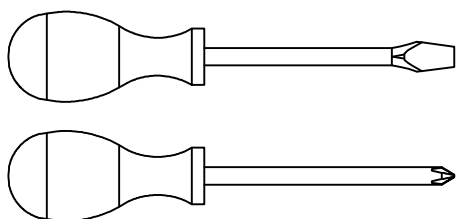


Phillips screwdriver
(medium & large)

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

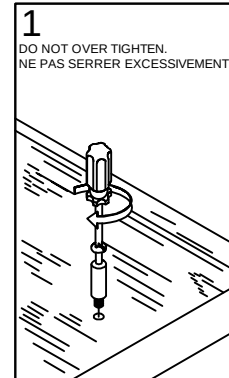

Step 2


Push the male camlock into the entry hole.

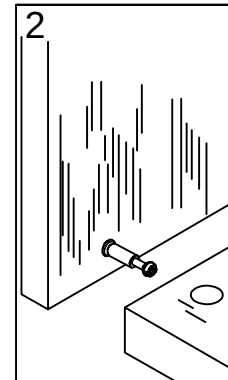

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

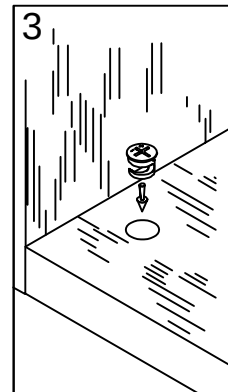


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place












The joint is now secure

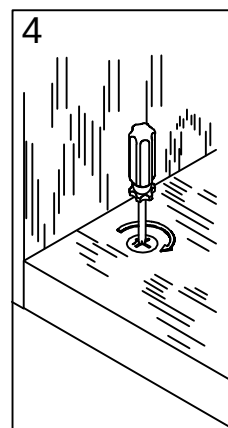

Components - Parts

Please check you have all the panels listed below. Please note that there are 2 boxes of this product.













BoxB N721P457536

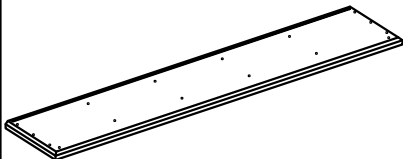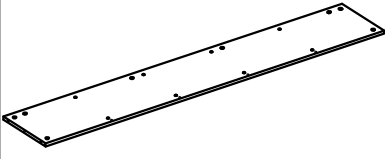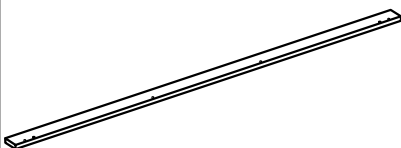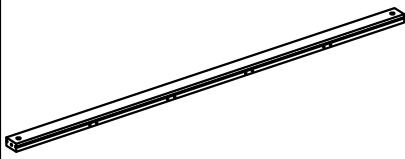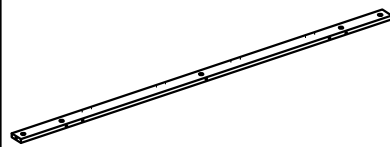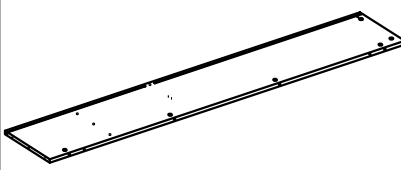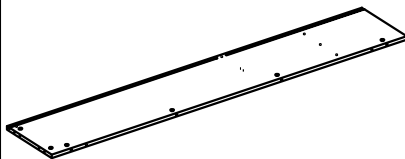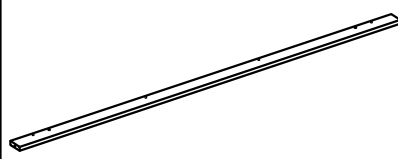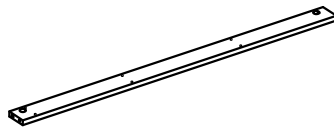① 	② 	③ 
Top Panel (Up) 1498*298*26 (1PC)	Bottom Panel (Up) 1442*249*12 (1PC)	Center Panel (Up) 271*249*12 (1PC)
④ 	⑤ 	⑥ 
Center Bone (Up) 234*50*12 (4PCS)	Front Bone Long (Up) 1372*50*14 (1PC)	Back Bone (Up) 1442*50*28 (1PC)
⑦ 	⑧ 	⑨ 
Back Bone (Down) 1442*50*14 (1PC)	Side Panel (L) 1512*263*14 (1PC)	Side Panel (R) 1512*263*14 (1PC)
⑩ 	⑪ 	⑫ 
Side Bone (L&R) 1512*50*14 (2PCS)	Back Bone Long 830*50*12 (4PCS)	Back Bone Short 299*50*12 (4PCS)

Components - Parts

Please check you have all the panels listed below. Please note that there are 2 boxes of this product.


BoxB N721P457536

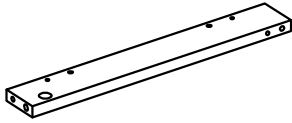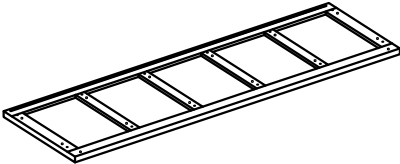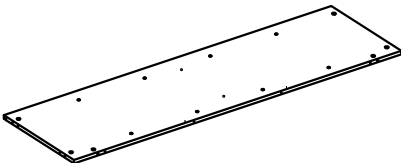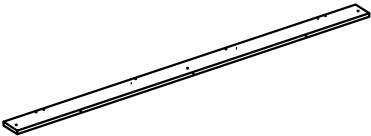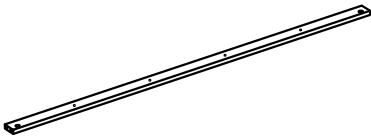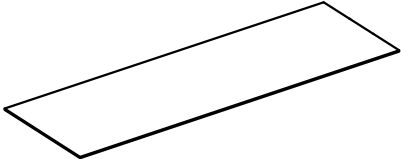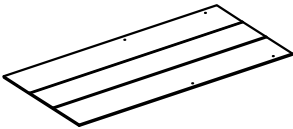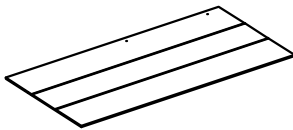①⑨		②⑩		②⑪	
Down Center Bone 313*45*14 (4PCS)		Down Side Bone (L) 358*50*14 (1PC)		Down Side Bone (R) 358*50*14 (1PC)	
②②		②③		②④	
Down Middle Bone 245*45*14 (3PCS)		Top Panel (Center) 1500*455*24 (1PC)		Bottom Panel (Down) 1442*428*14 (1PC)	
②⑤		②⑥		②⑦	
Leg Panel (Center) 1500*80*14 (1PC)		Center Leg 428*64*14 (1PC)		Front Bone Long (Down) 1372*45*14 (1PC)	
②⑧		②⑨		③⑩	
Back Panel (Down) 1451*366*3 (1PC)		Back Panel Center (Up) 590*290*3 (3PCS)		Back Panel Side (L) 590*290*3 (1PC)	









Components - Parts

Please check you have all the panels listed below. Please note that there are 2 boxes of this product.


BoxB N721P457536

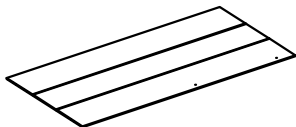		
Back Panel Side (R) 590*290*3 (1PC)		

BoxA N721P457535

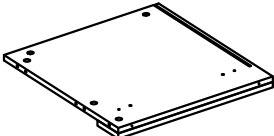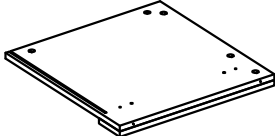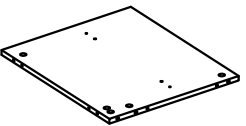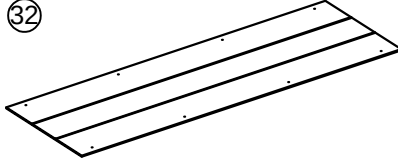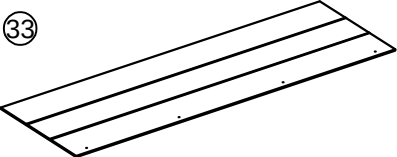
		
Center Panel (Up) 271*249*12 (3PCS)	Down Side Panel (L) 438*428*28 (1PC)	Down Side Panel (R) 438*428*28 (1PC)
		
Down Center Panel 358*414*12 (2PCS)	Middle Panel 278*414*12 (3PCS)	Down Center Panel (R) 358*414*12 (1PC)
		
Down Center Panel (L) 358*414*12 (1PC)	Back Panel (Center) 884*290*3 (3PCS)	Back Panel (Side L&R) 884*290*3 (2PCS)
 Hardware box (1pc)		

Assembly Instructions

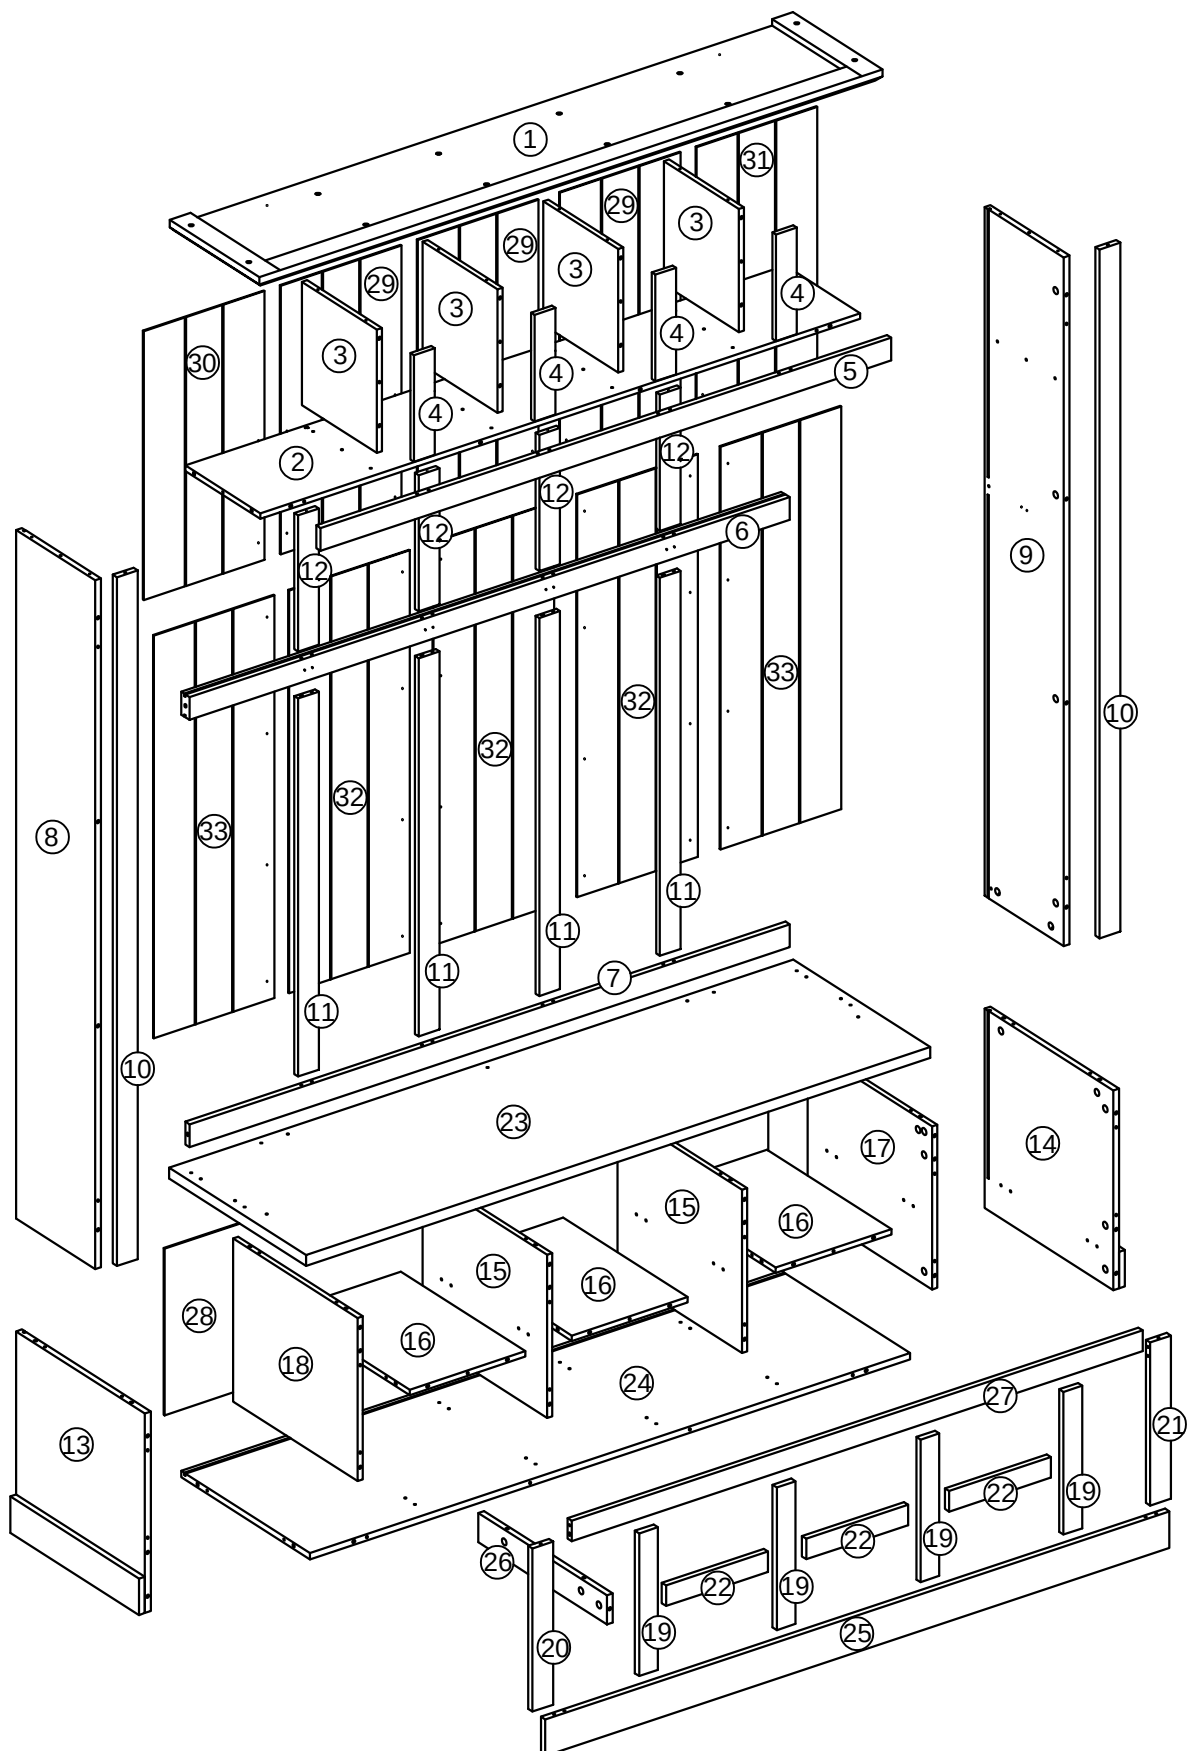

Step 1



X2

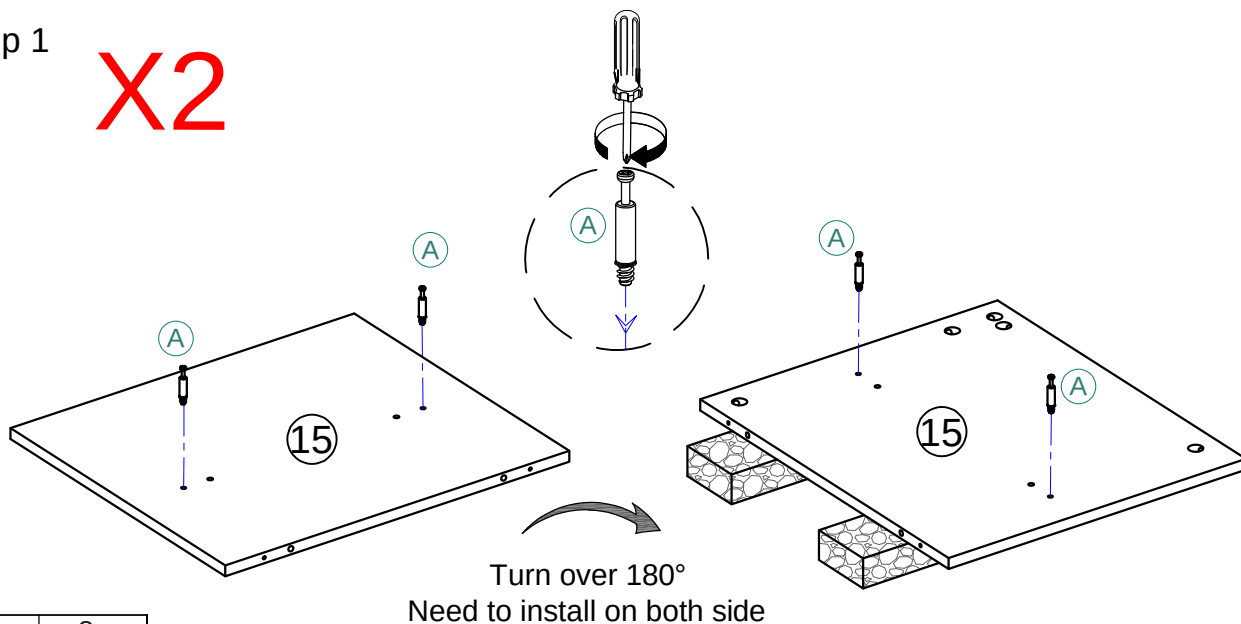


A	x8
	
Cam bolt	

Use the materials provided in the packaging to support the product from below for easier installation.



Step 2

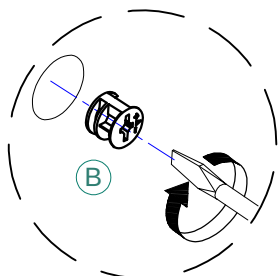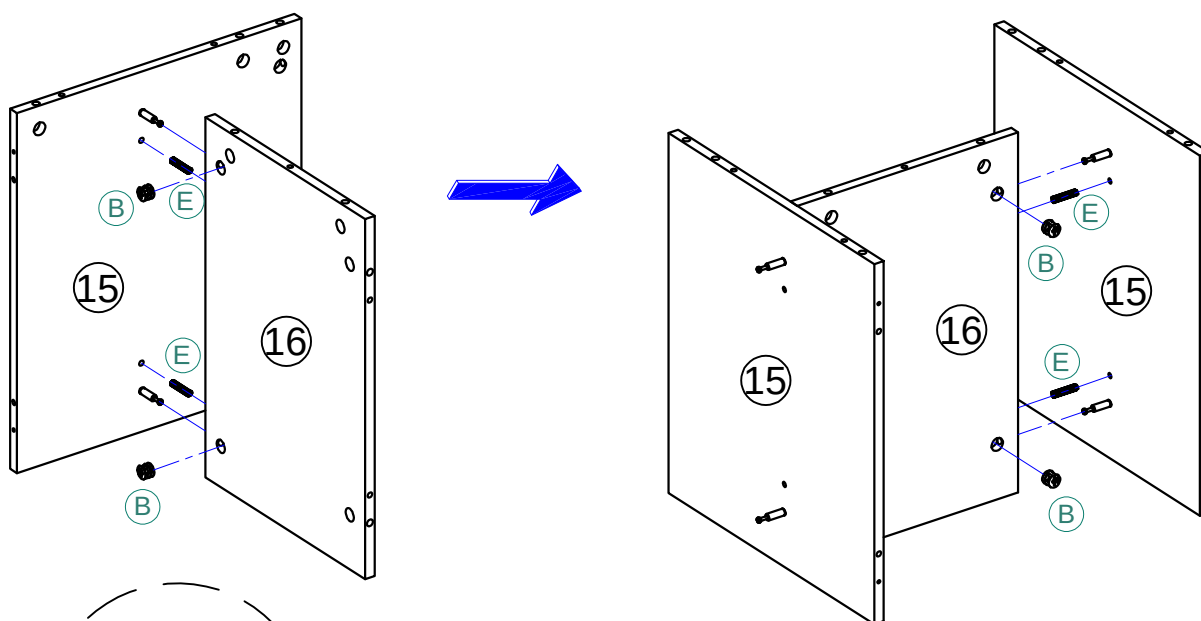


B	x4	E	x4
			
Ø15x9.5mm		Ø6x30mm	

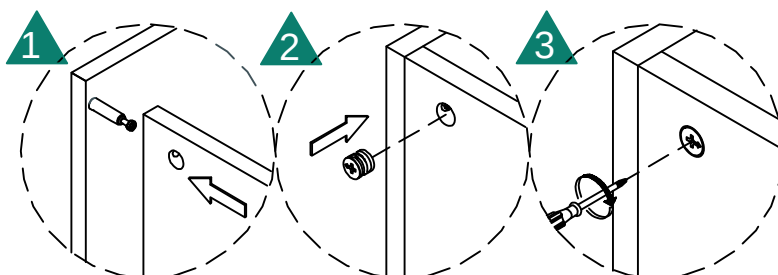



Step 3

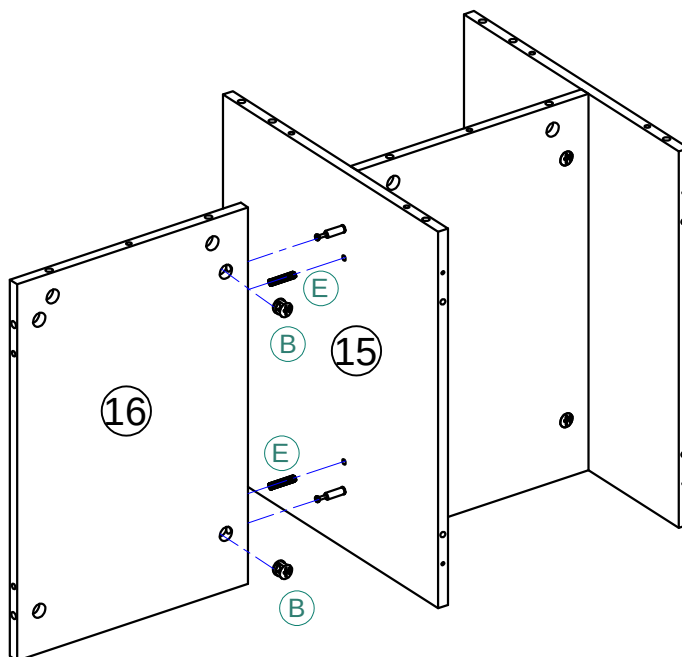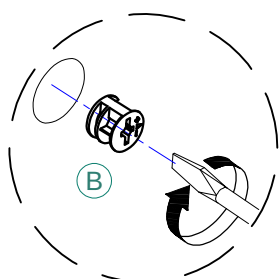

B	x2	E	x2
Ø15x9.5mm		Ø6x30mm	


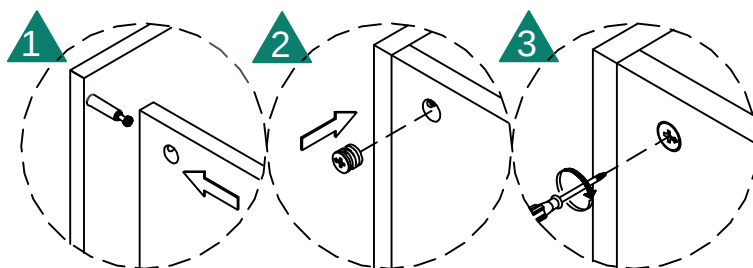



Step 4

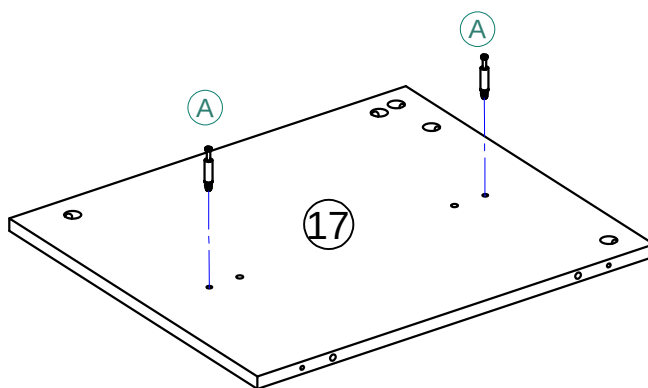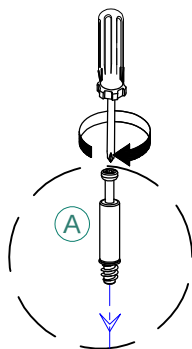




A	x2
Cam bolt	

Step 5

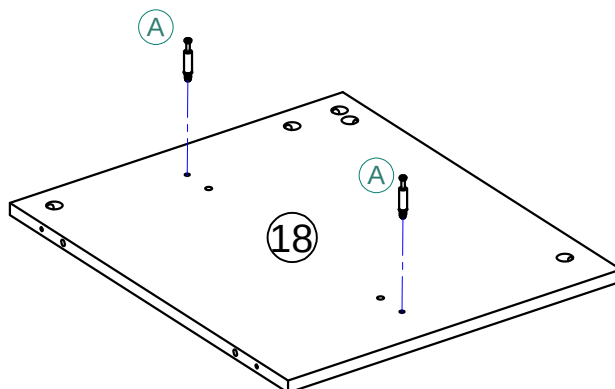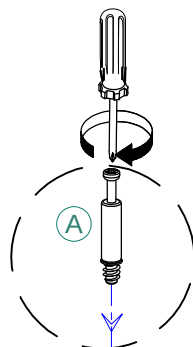


A	x2
	
Cam bolt	

Step 6

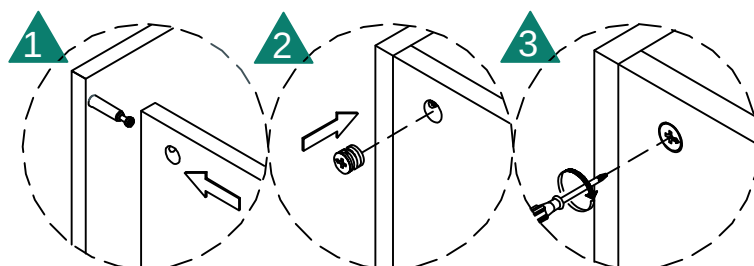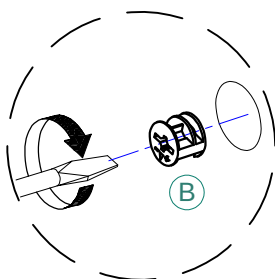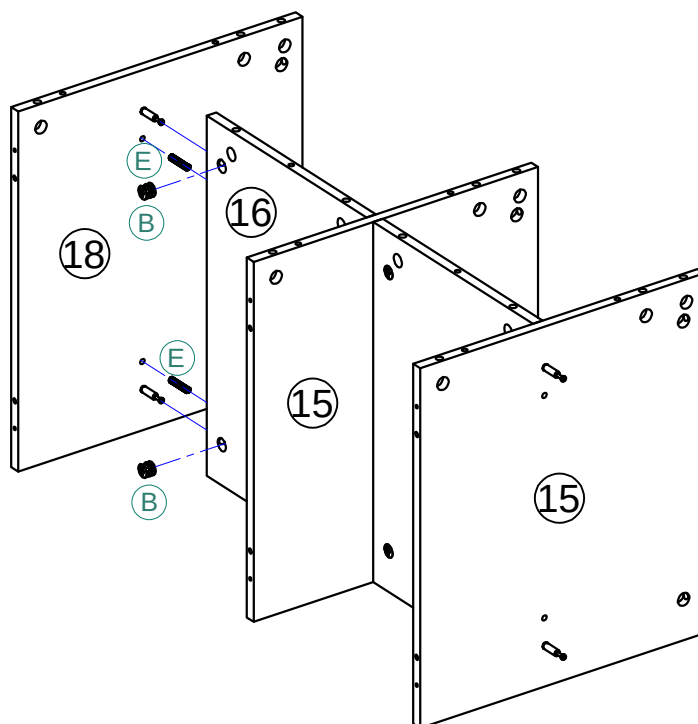


B	x2	E	x2
			
Ø15x9.5mm		Ø6x30mm	

Step 7

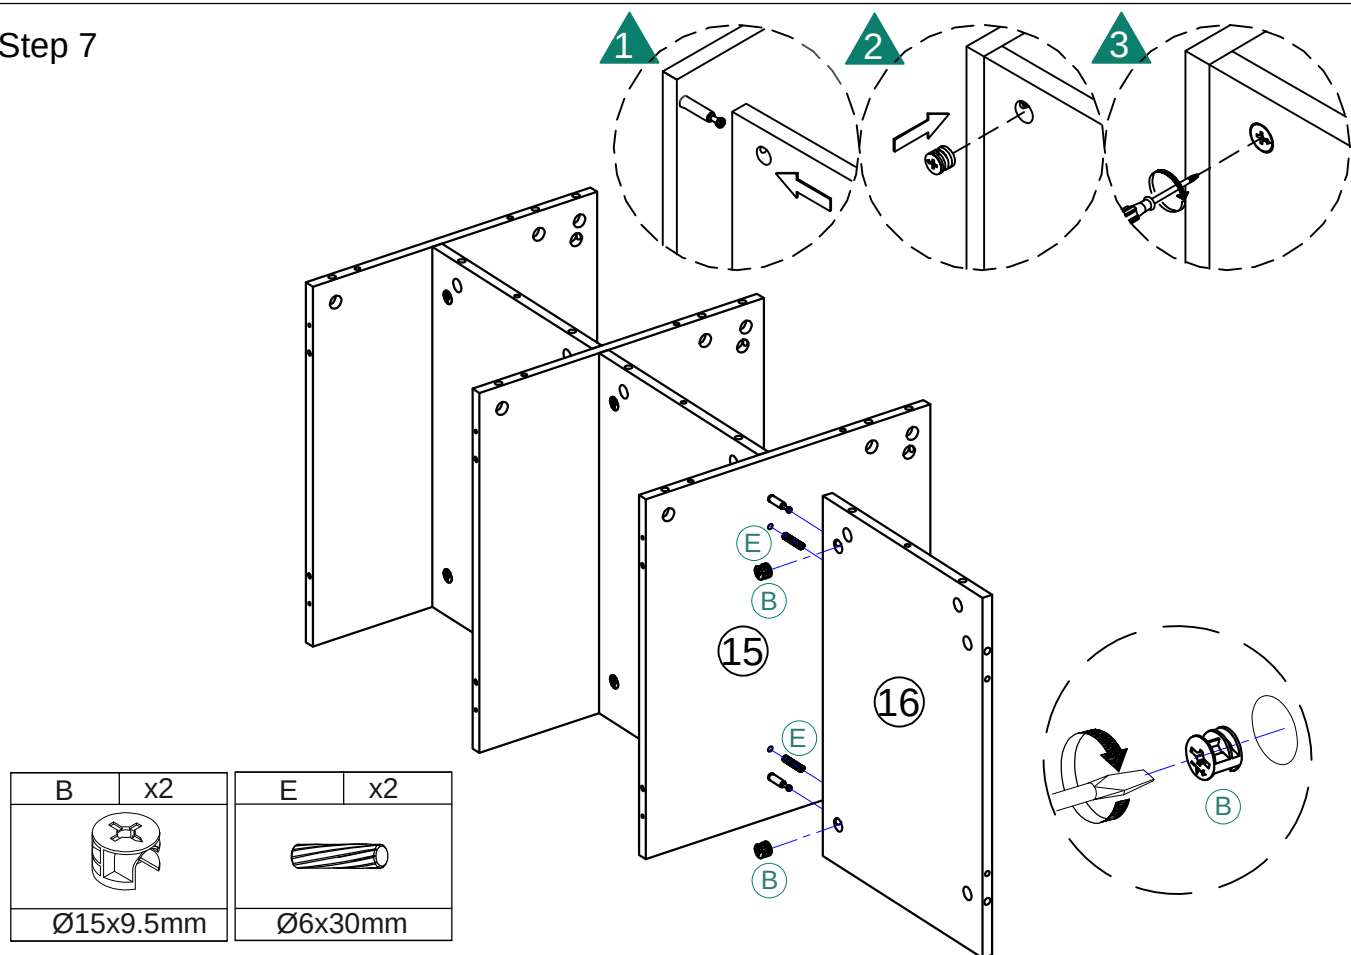



Step 8

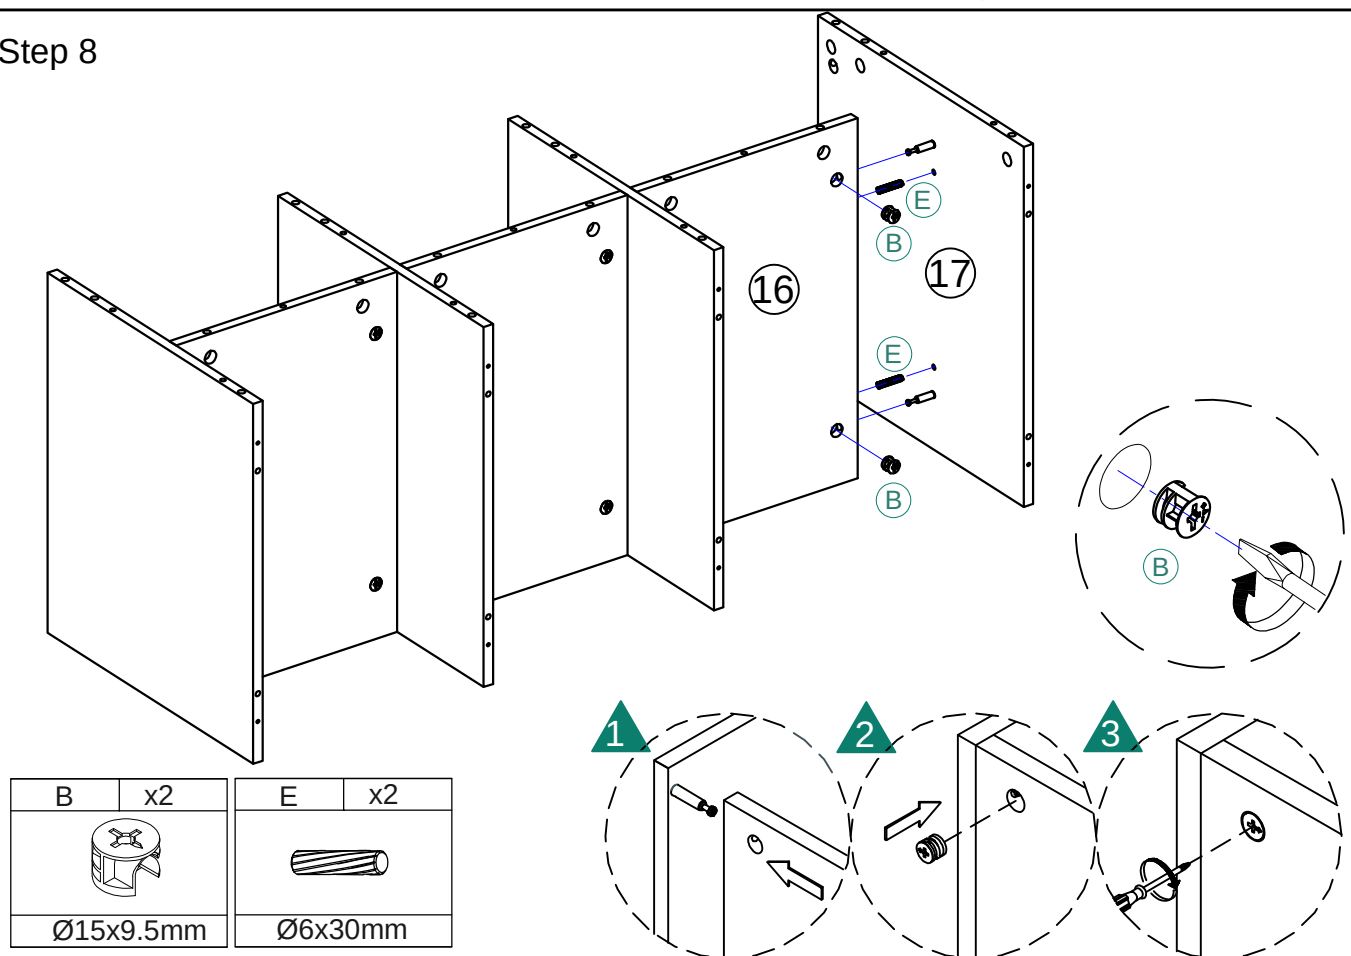




Step 9

X3

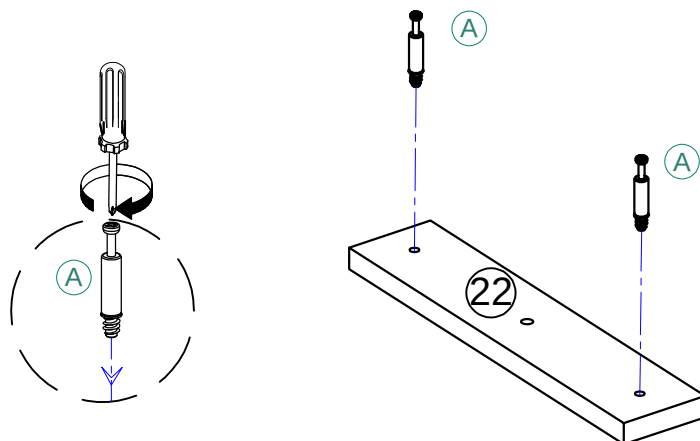

A	x6
	
Cam bolt	


Step 10

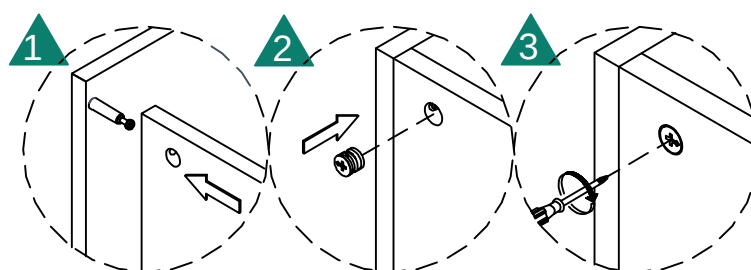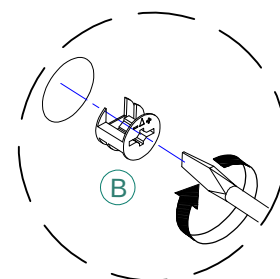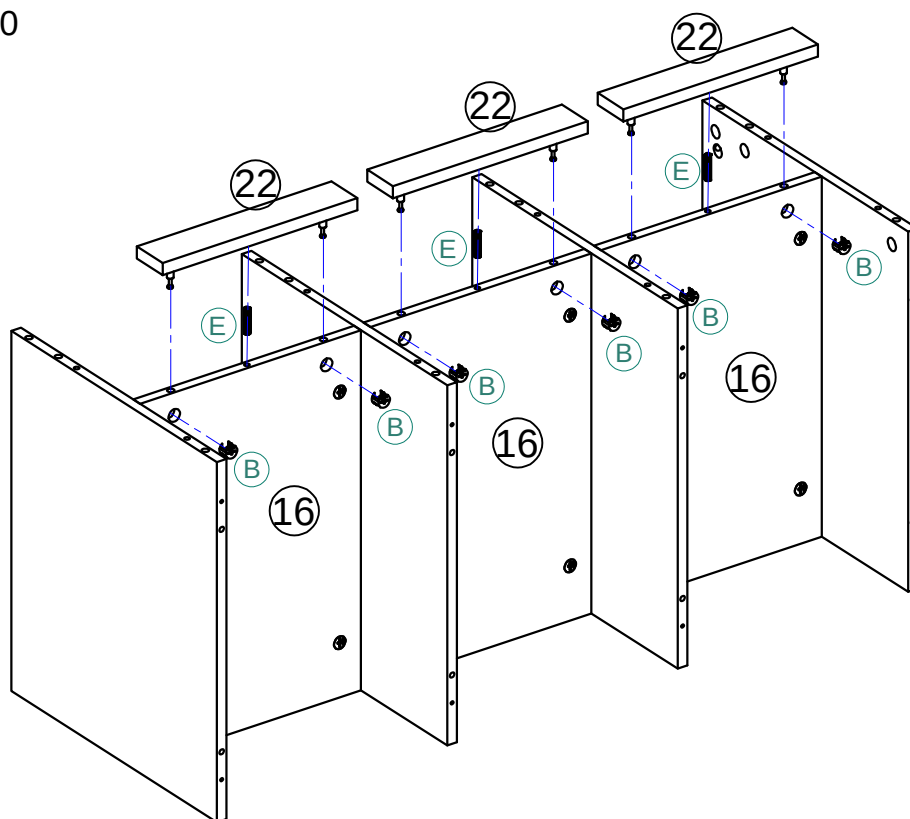


B	x6	E	x3
			
Ø15x9.5mm		Ø6x30mm	




Step 11

X4

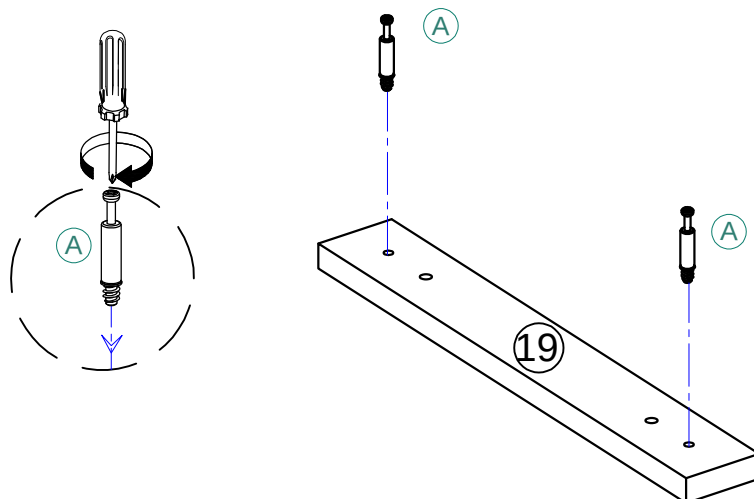


A	x8
	
Cam bolt	

Step 12

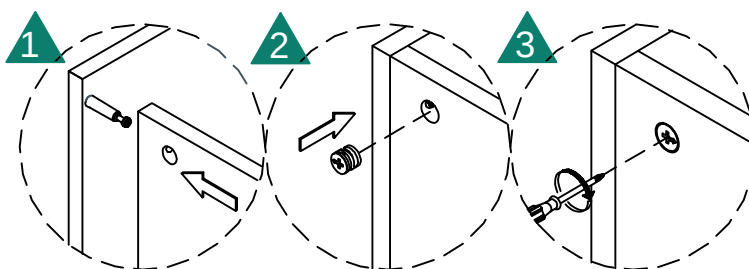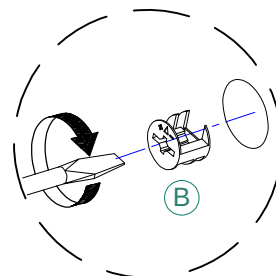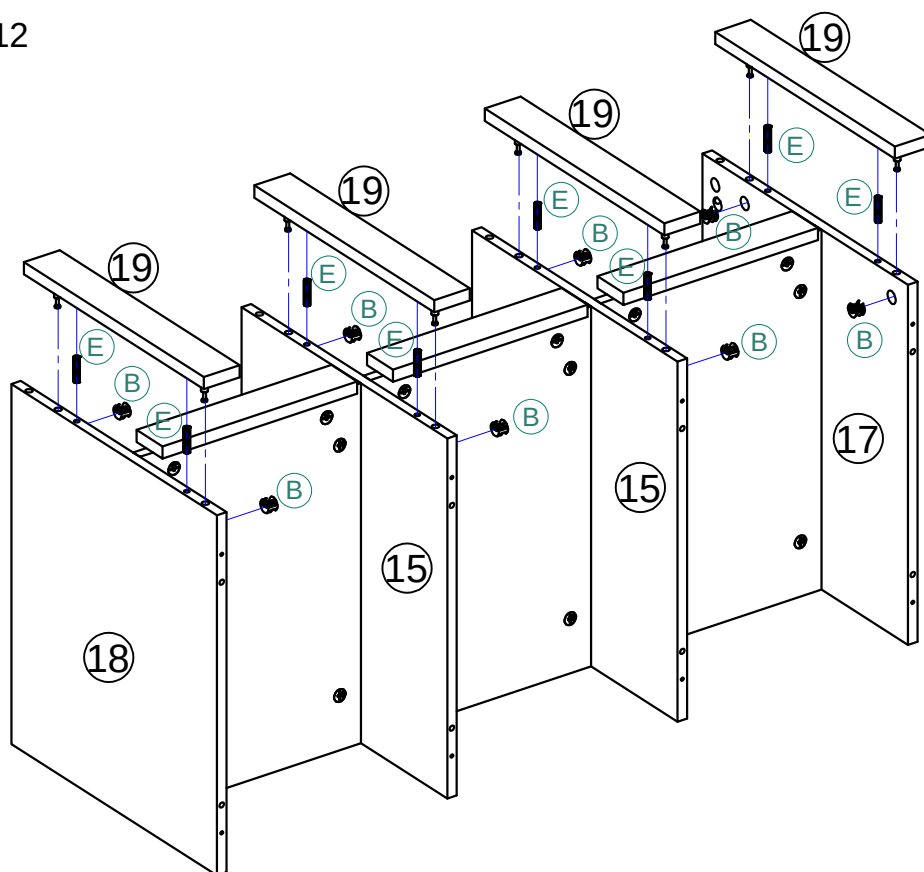


B	x8	E	x8
			
Ø15x9.5mm		Ø6x30mm	

Step 13

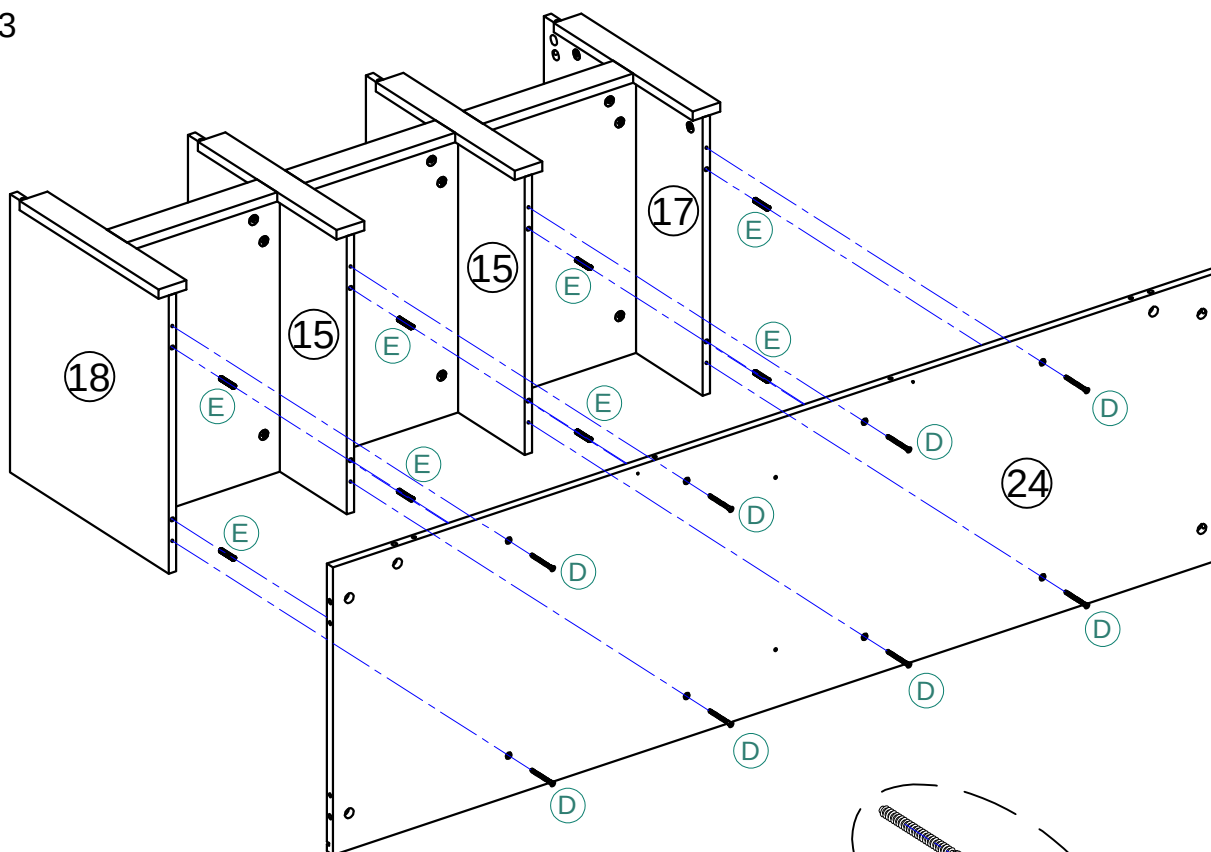


D	x8	E	x8	N
				
Ø9.5xM6x45mm		Ø6x30mm		M4

Step 14

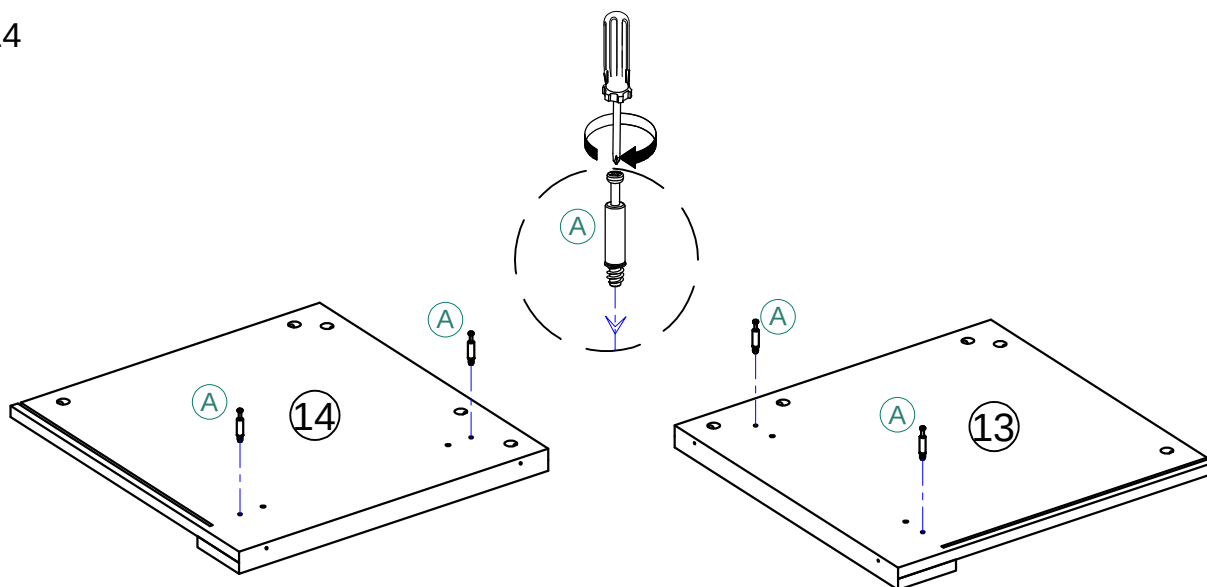


A	x4
	
Cam bolt	


Step 15

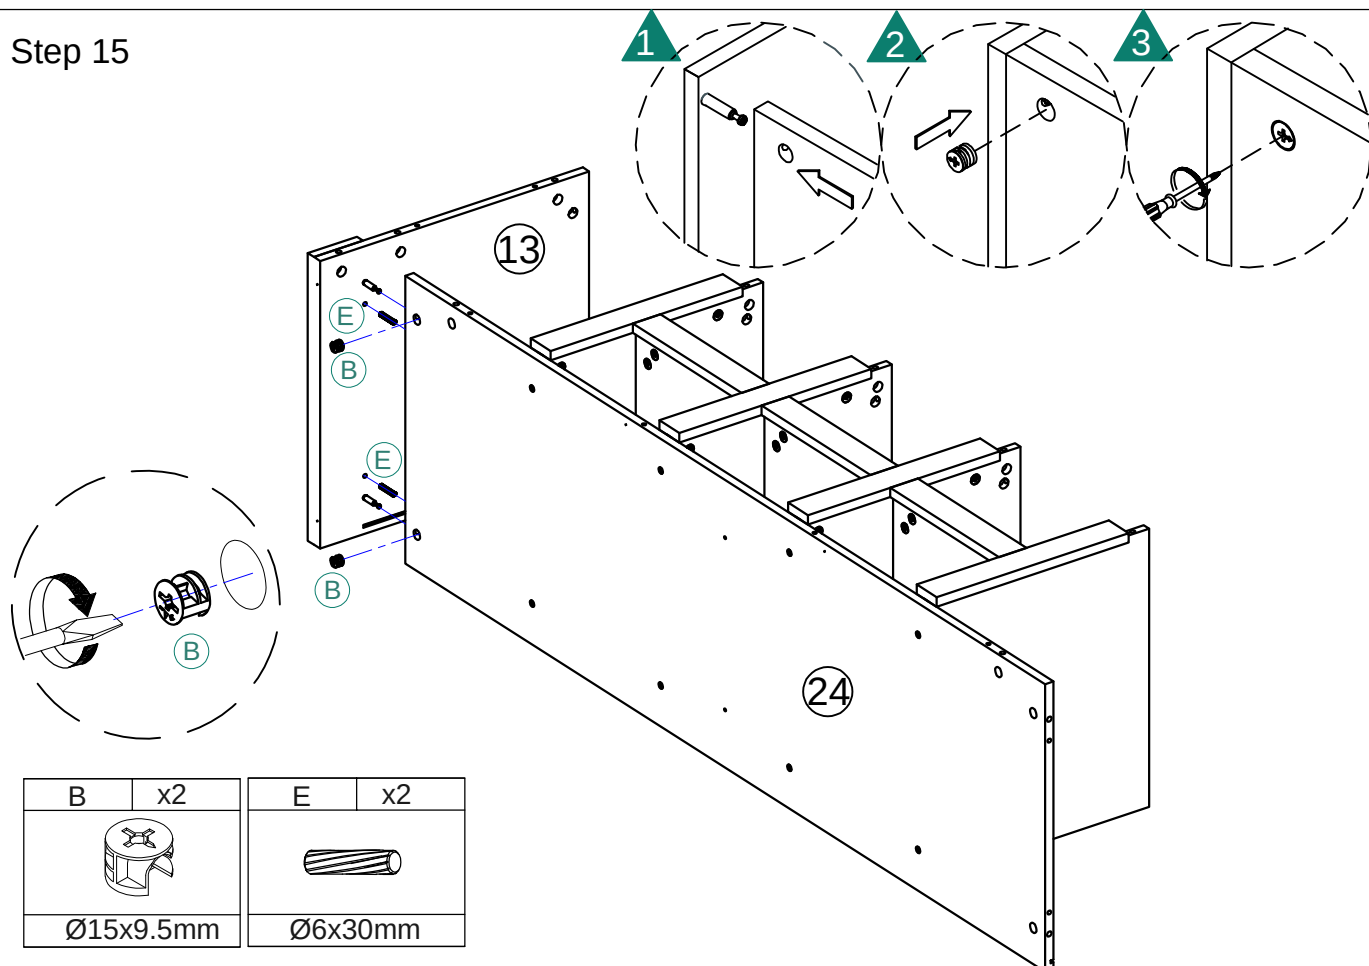


Step 16

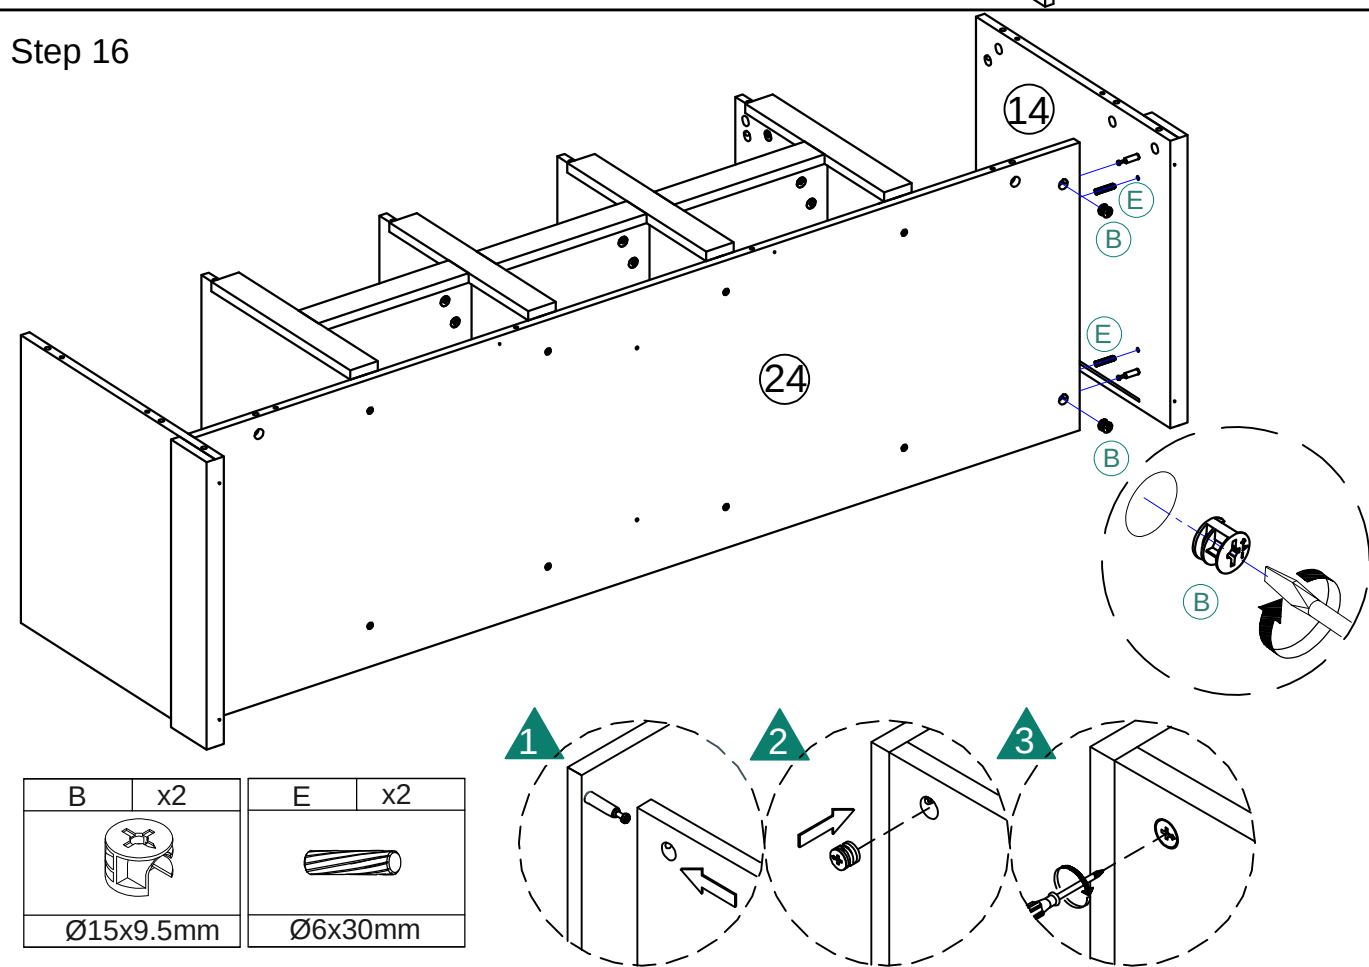


Step 17

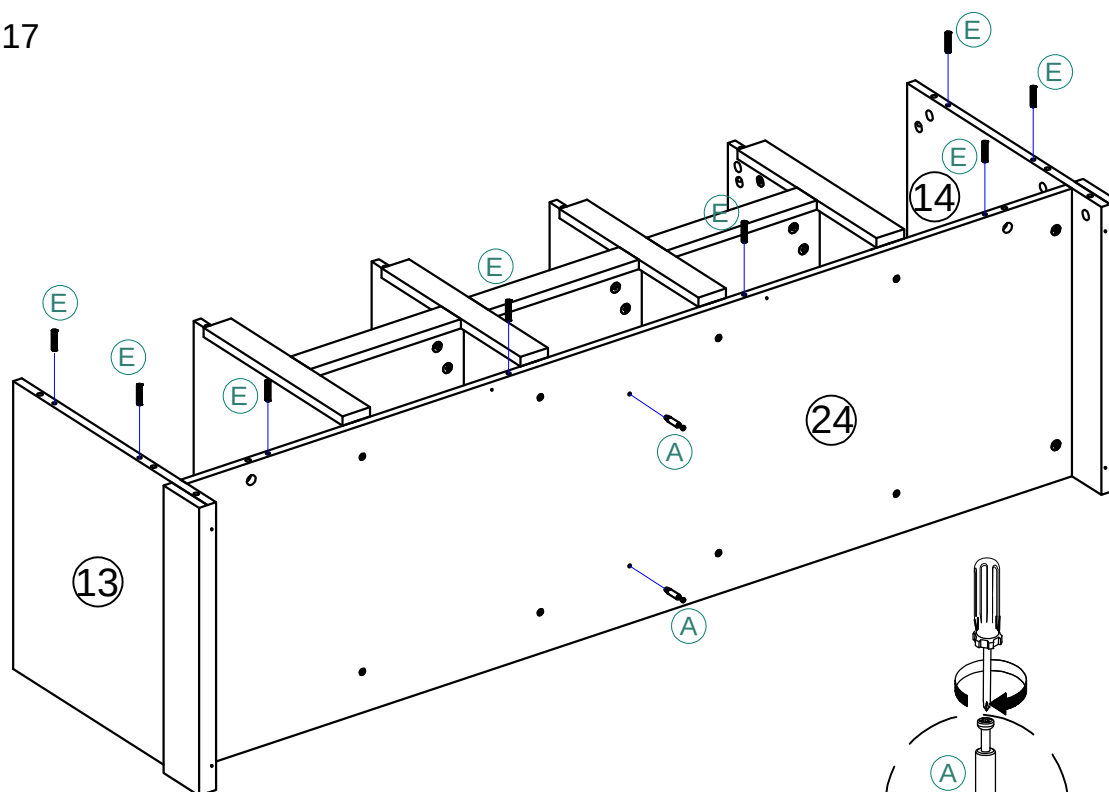


A	x2	E	x8
			
Cam bolt		Ø6x30mm	

Step 18

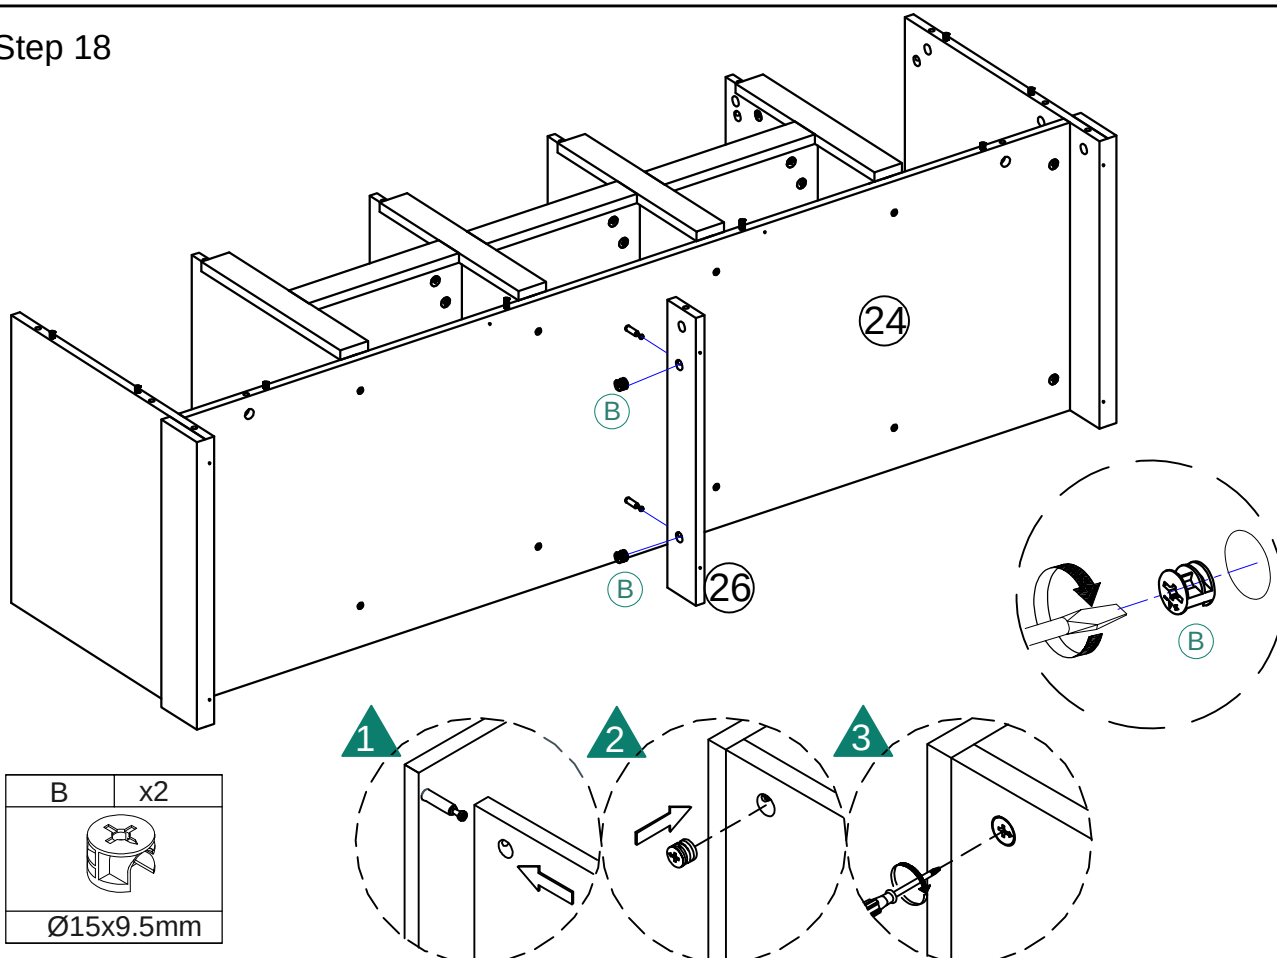

B	x2
	
Ø15x9.5mm	


Step 19

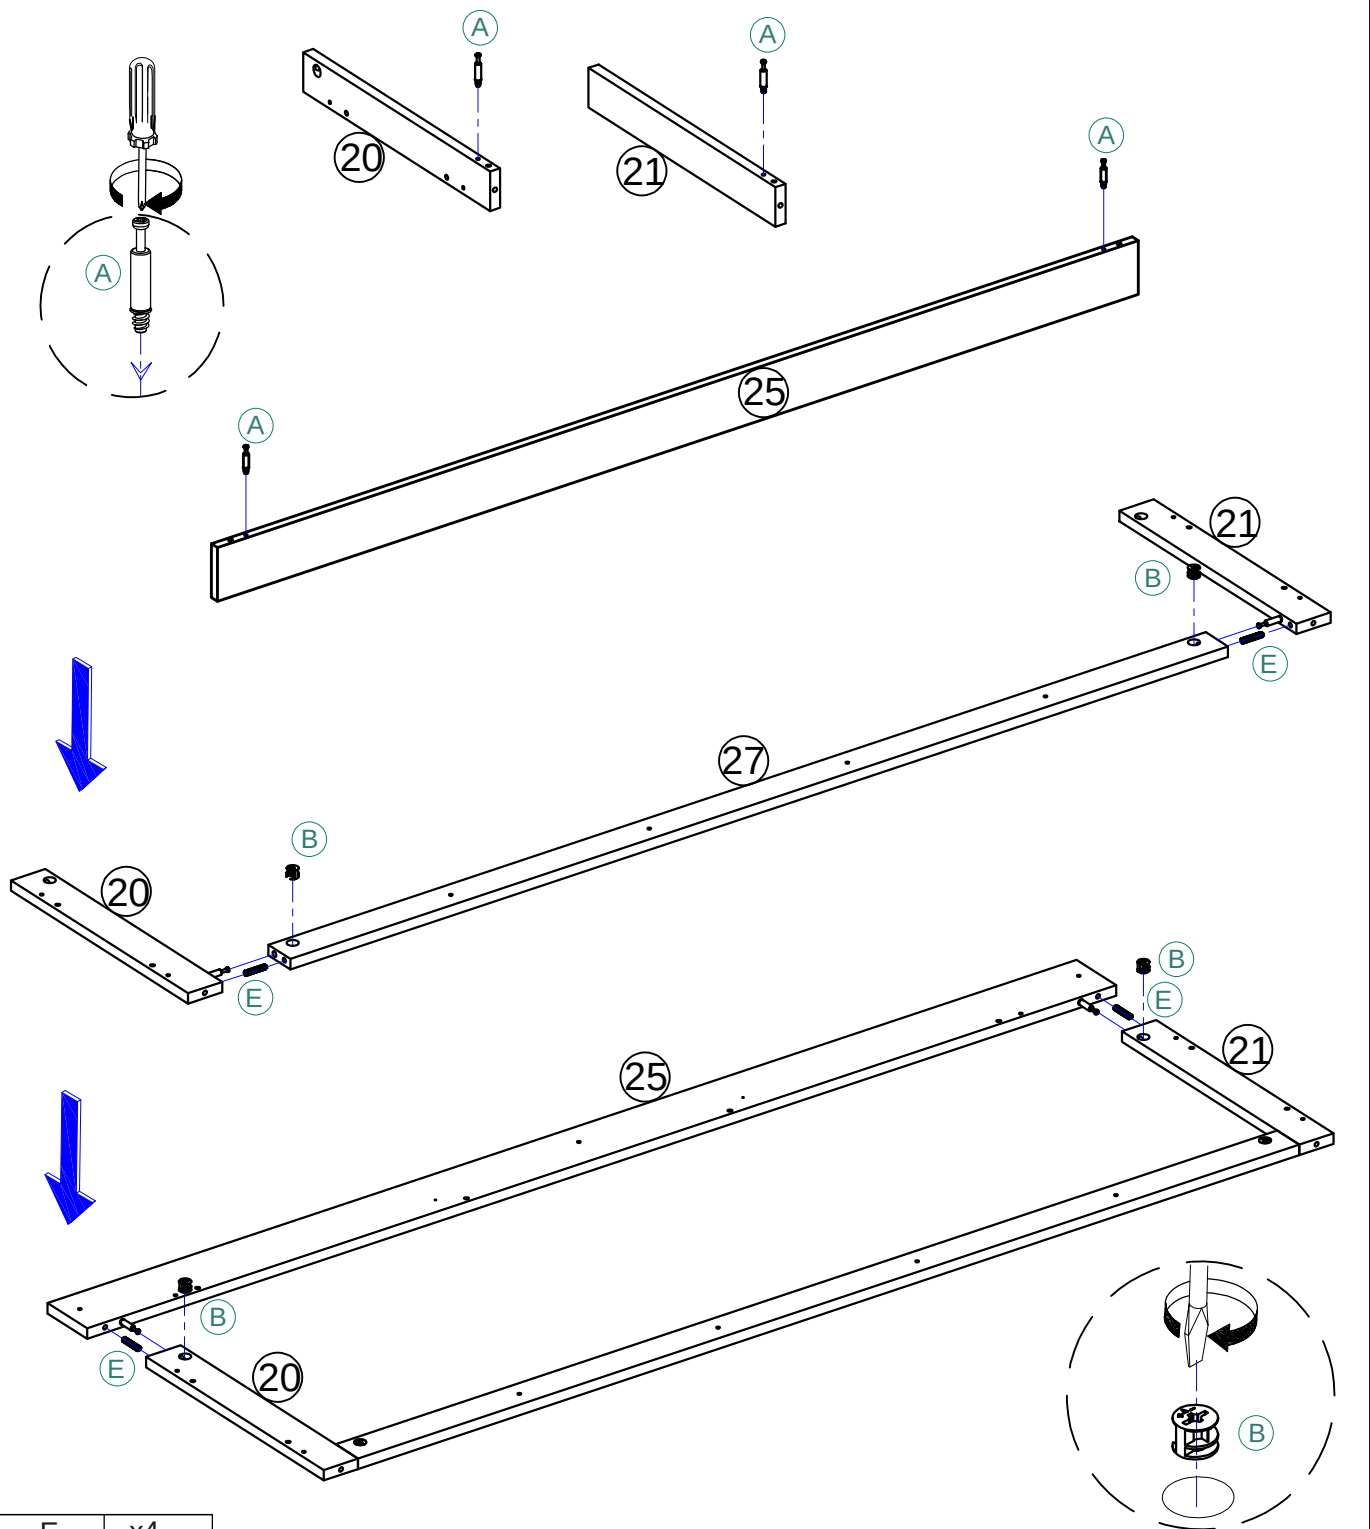


E	x4
	
Ø6x30mm	

A	x4
	
Cam bolt	


B	x4
	
Ø15x9.5mm	

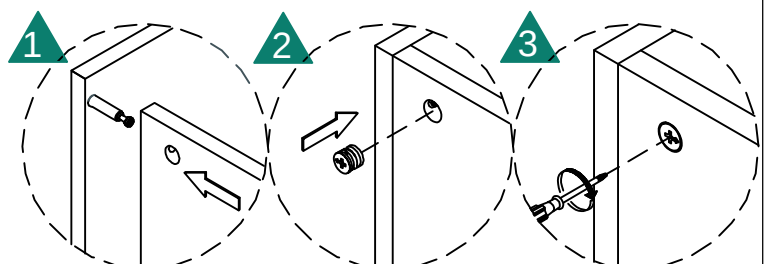



Step 20

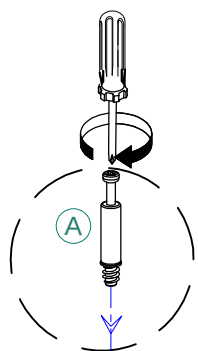


A	x13
Cam bolt	

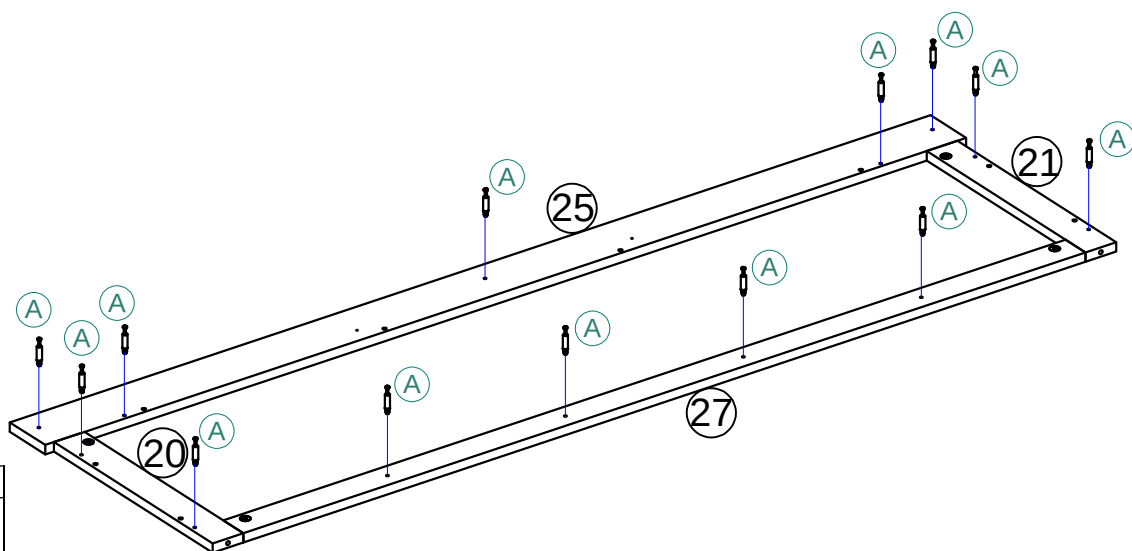


Step 21

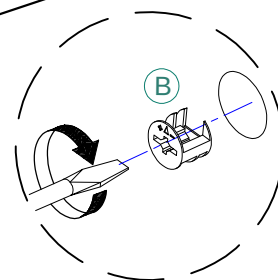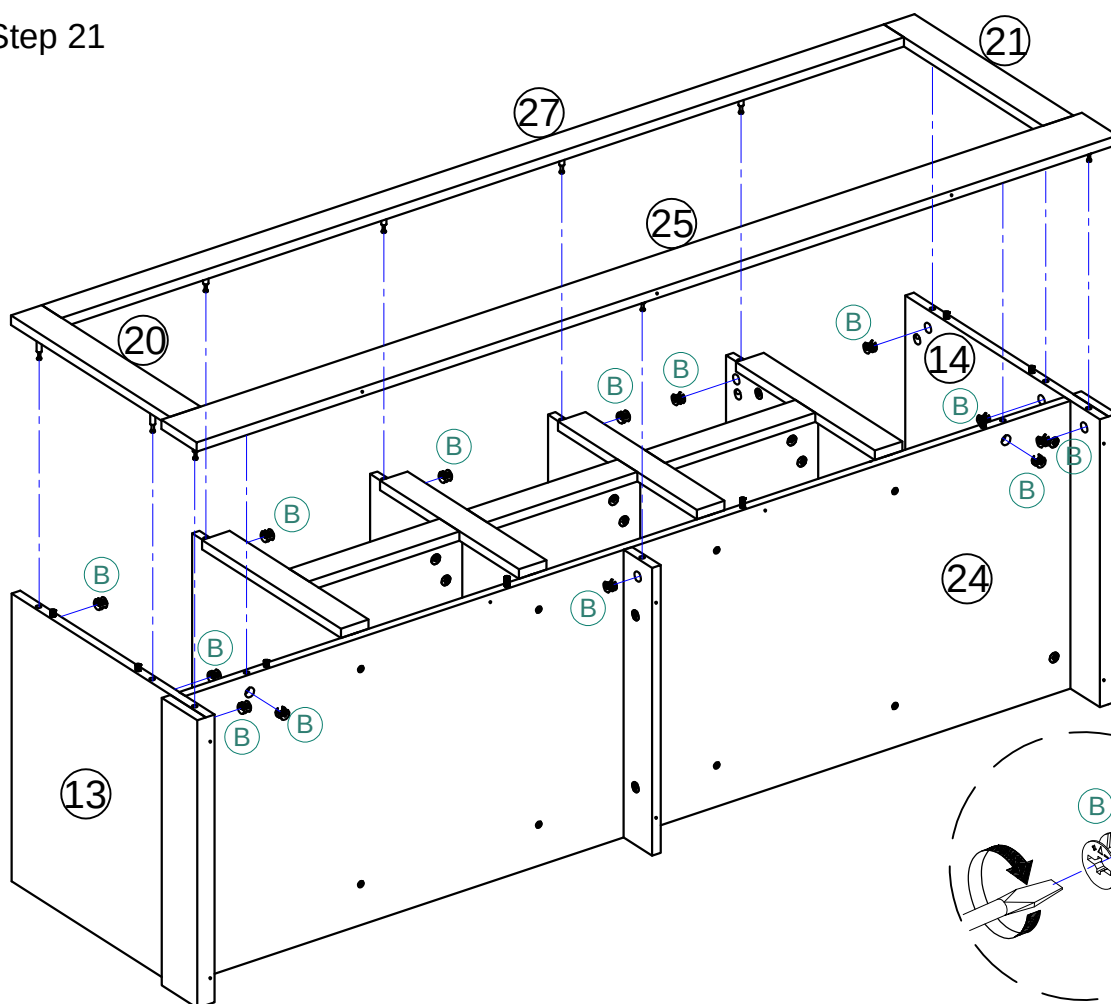


B	x13
Ø15x9.5mm	

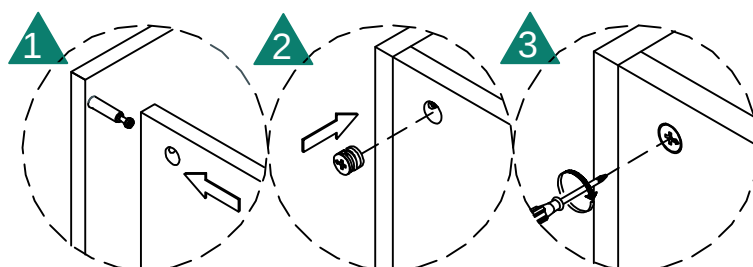


Step 22

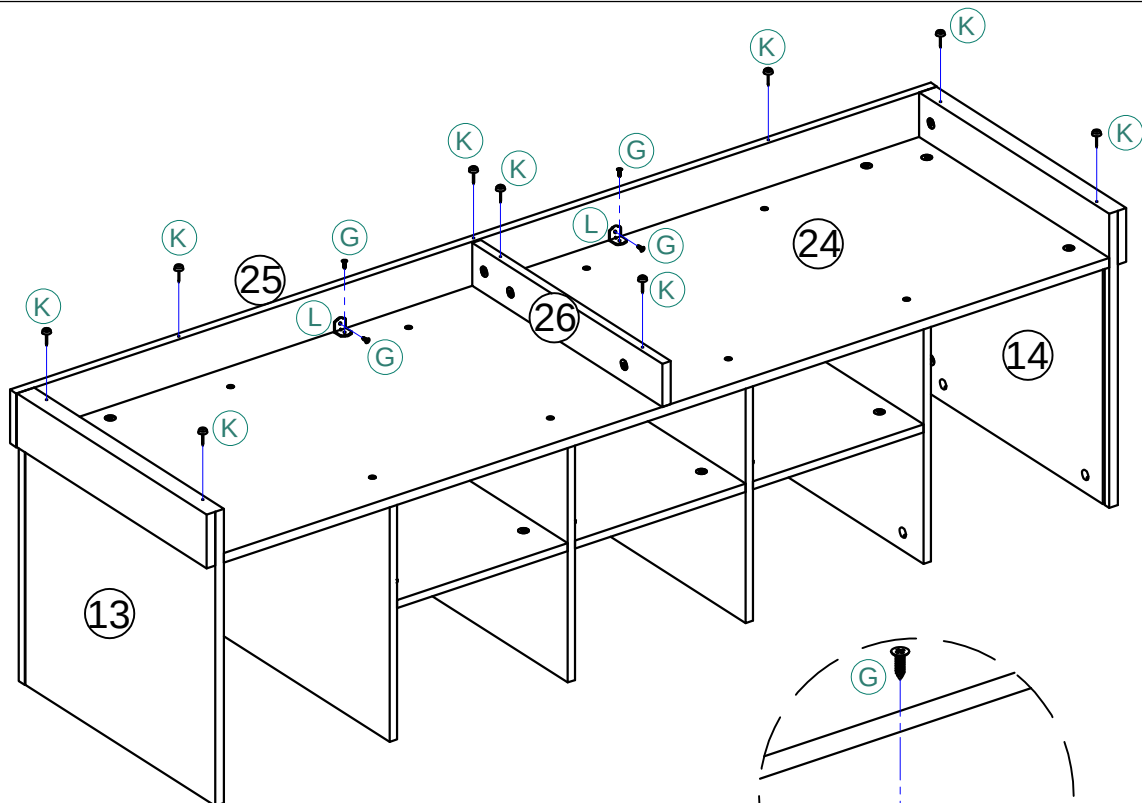


K	x9	L	x2	G	x4
					
				M3x14mm	

Step 23

Note: This assembly step requires two people to perform it simultaneously !

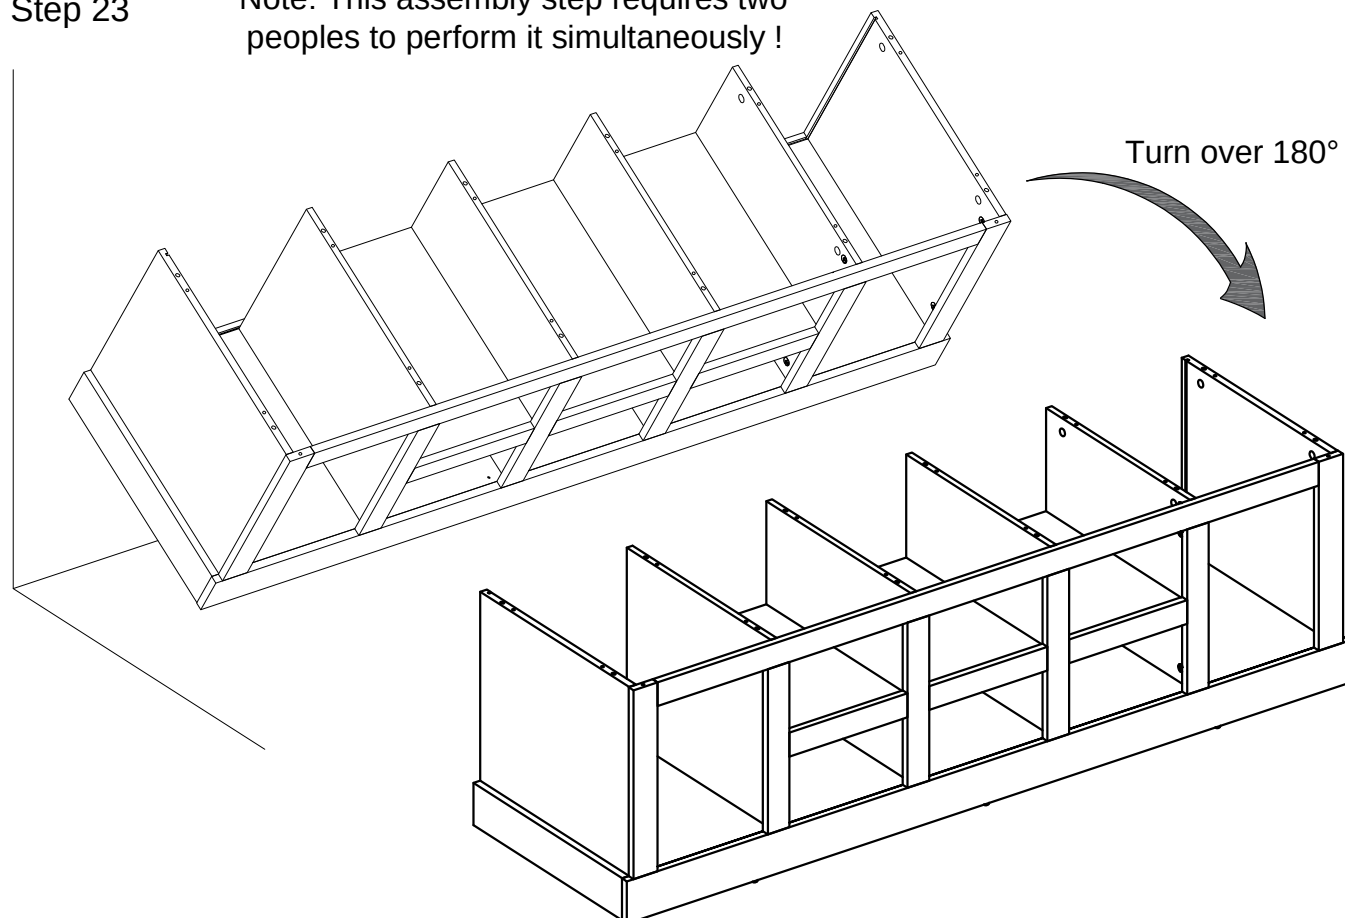


Step 24

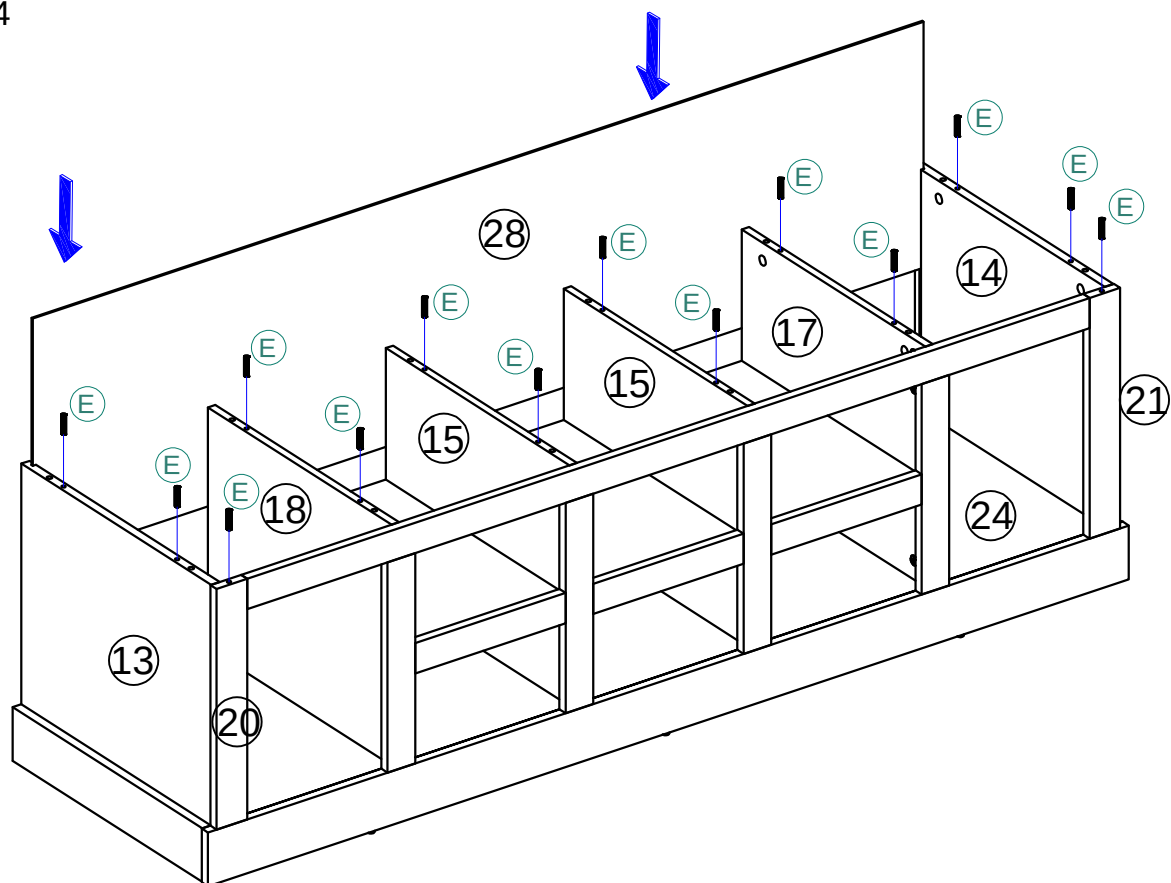



E	x14
	
Ø6x30mm	

Step 25

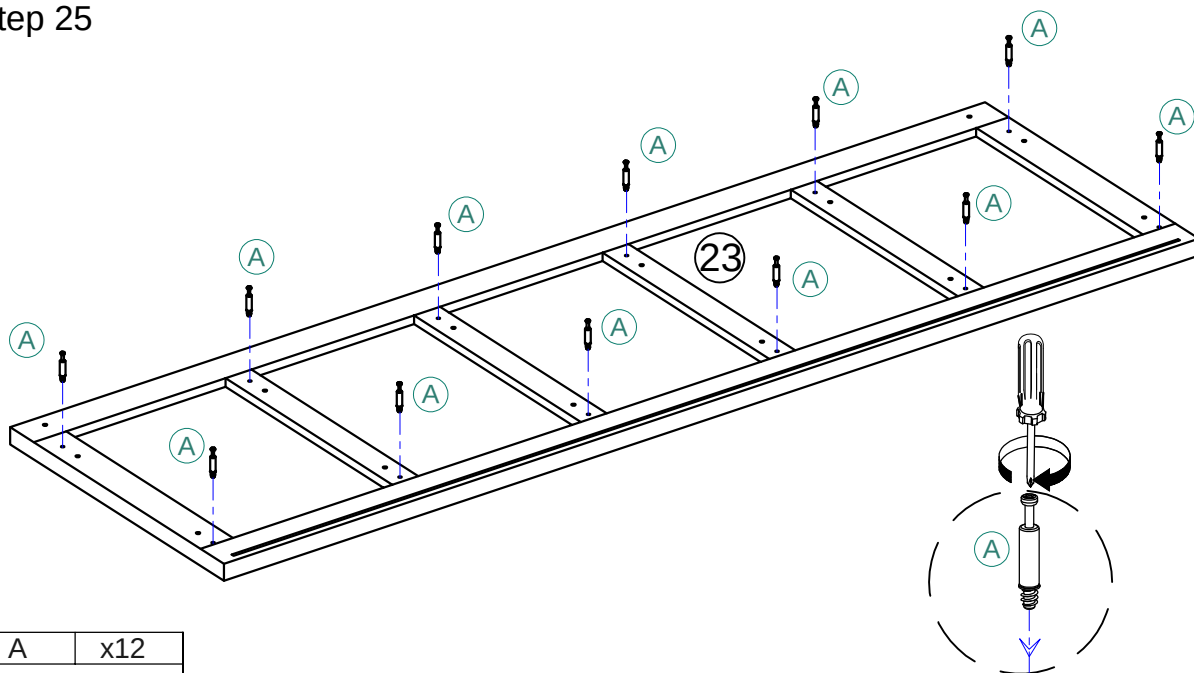


A	x12
	
Cam bolt	



Step 26

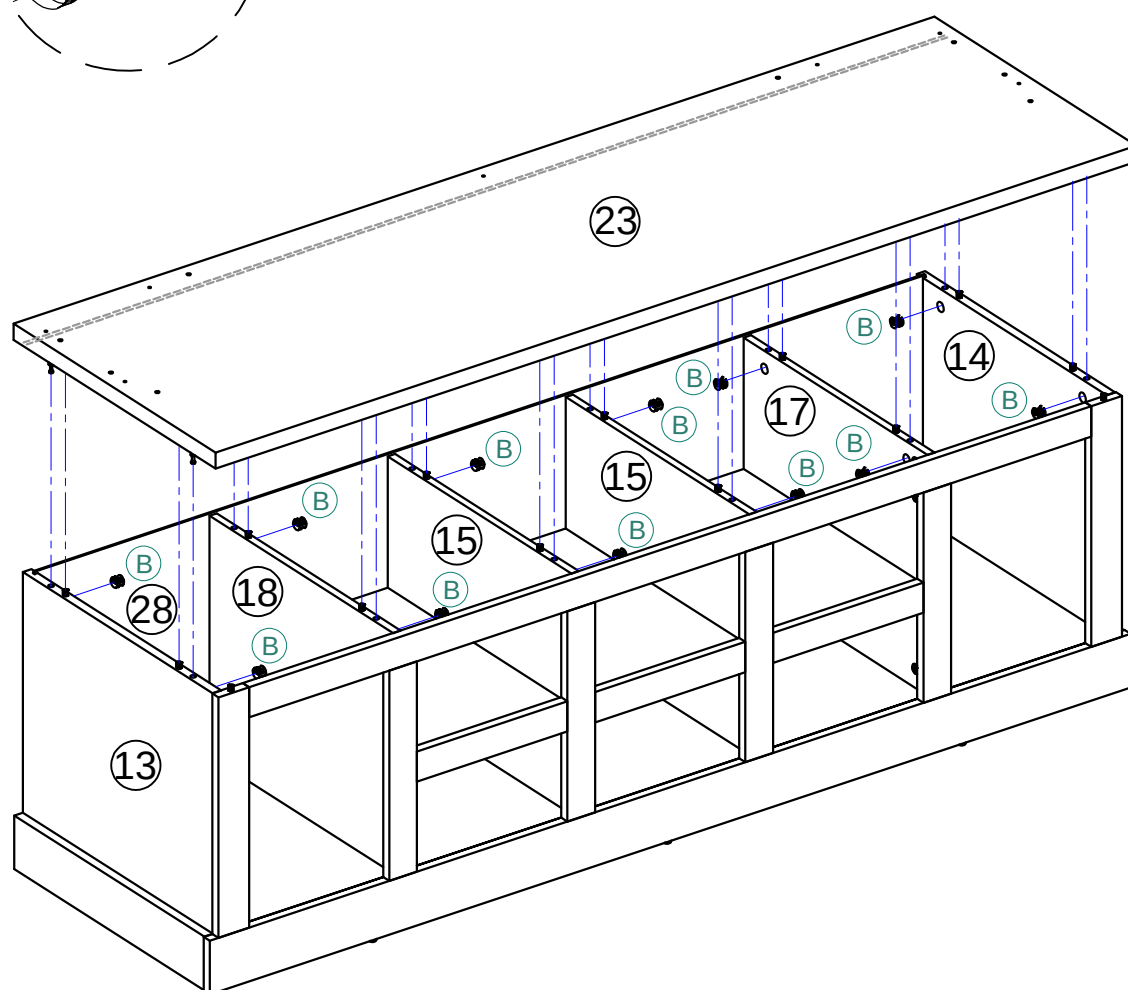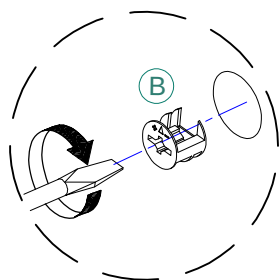

B	x12
Ø15x9.5mm	


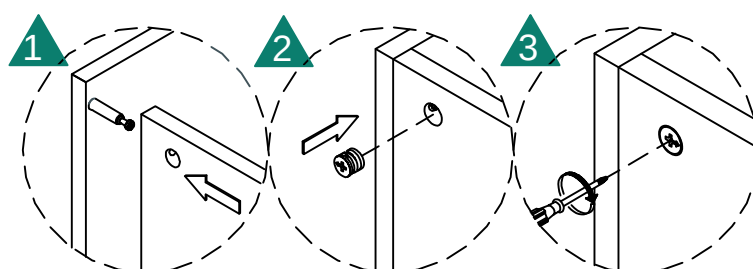


Step 27

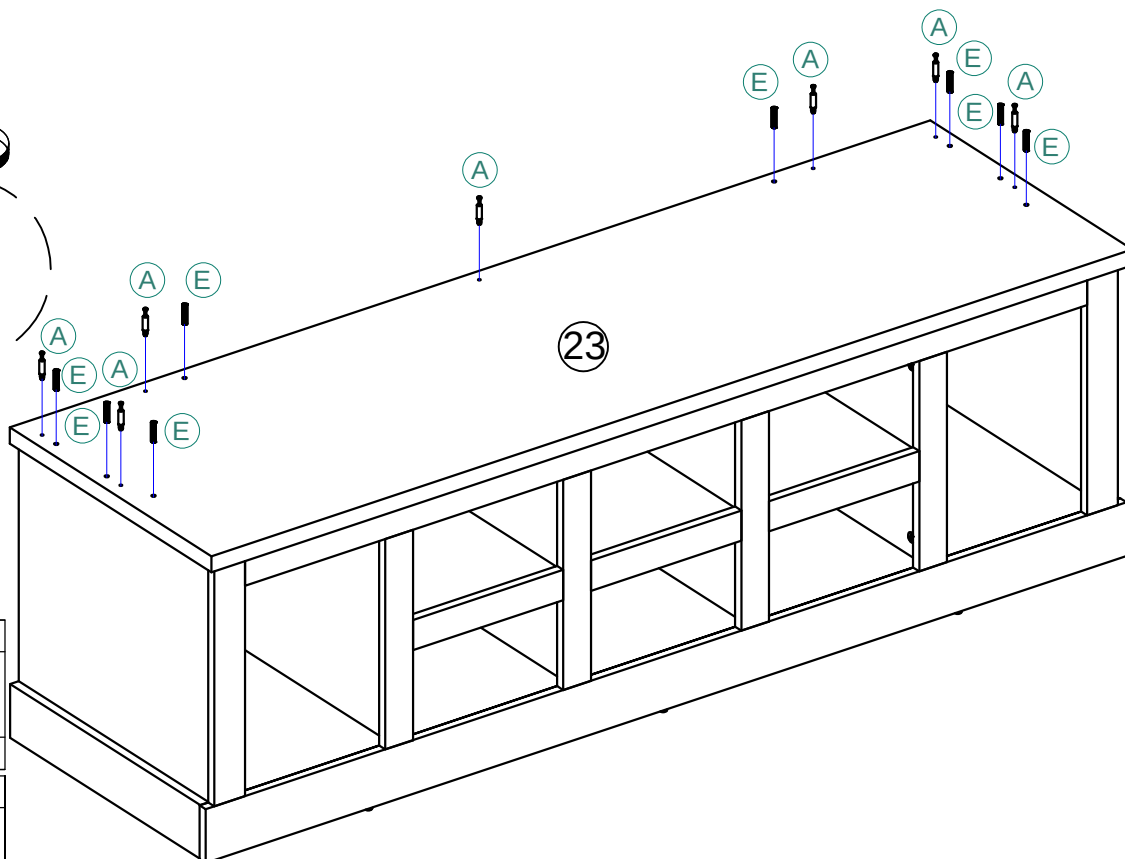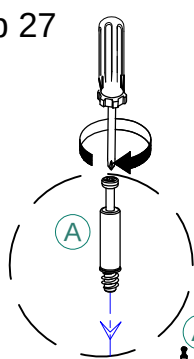


E	x8
Ø6x30mm	
A	x7
Cam bolt	

Step 28

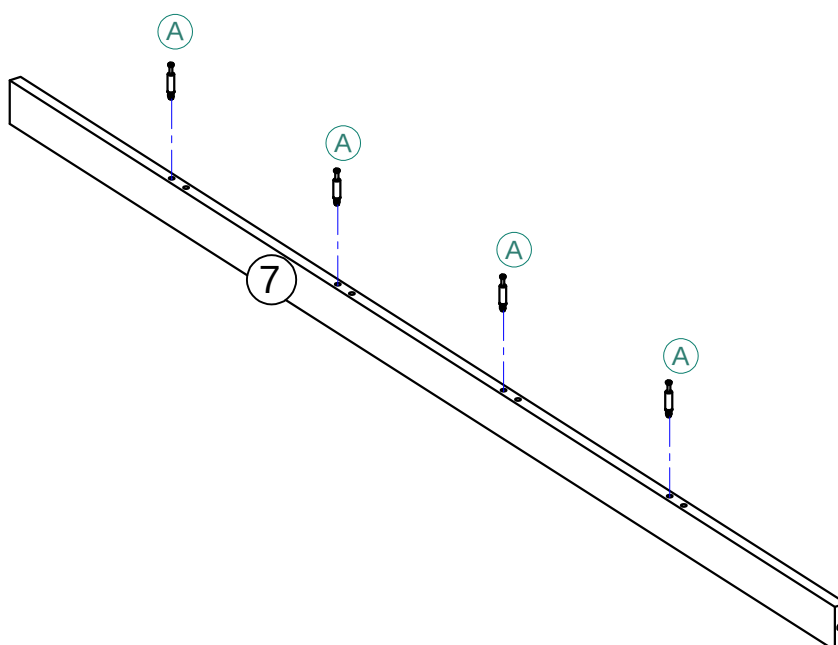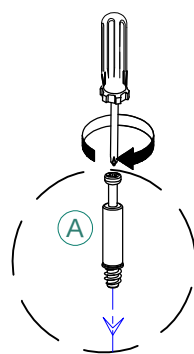


A	x4
Cam bolt	


Step 29

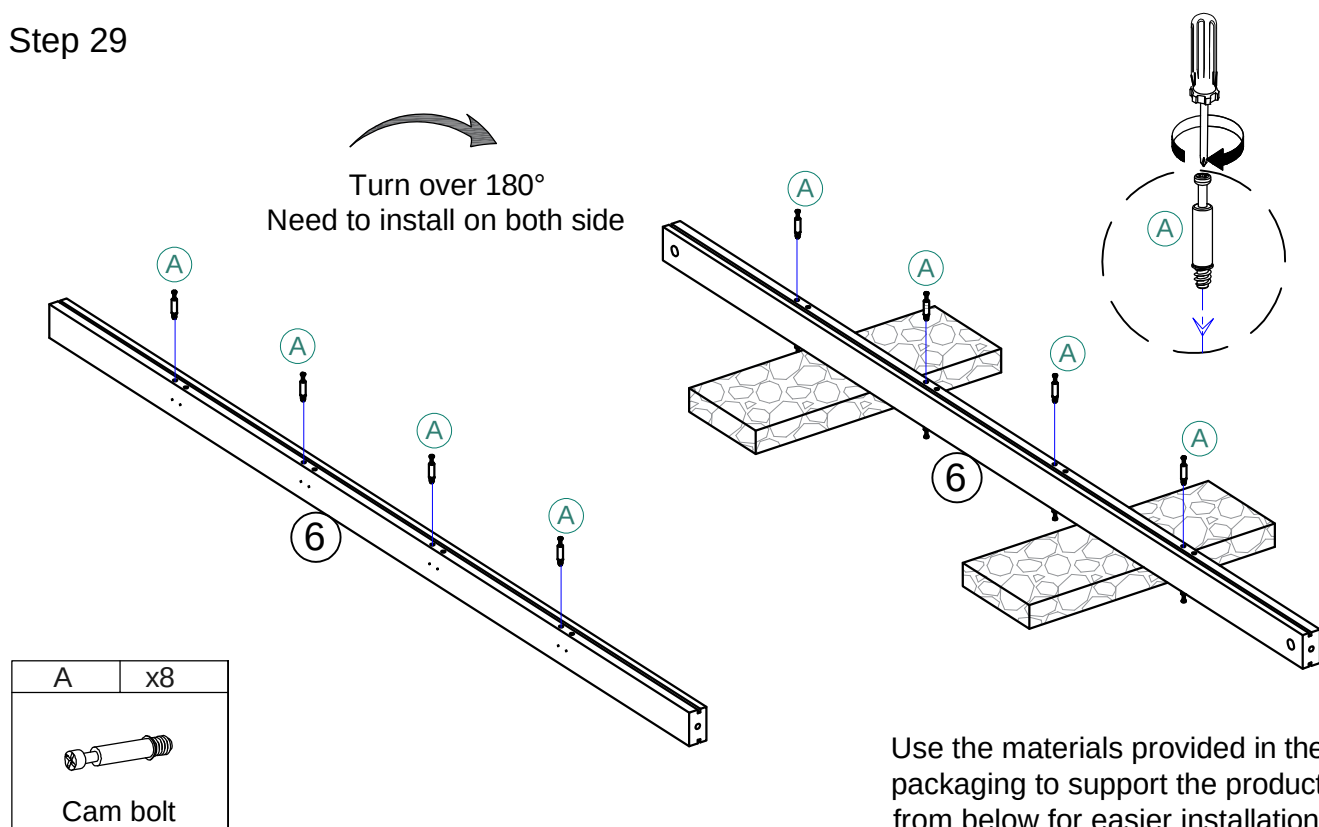


Step 30

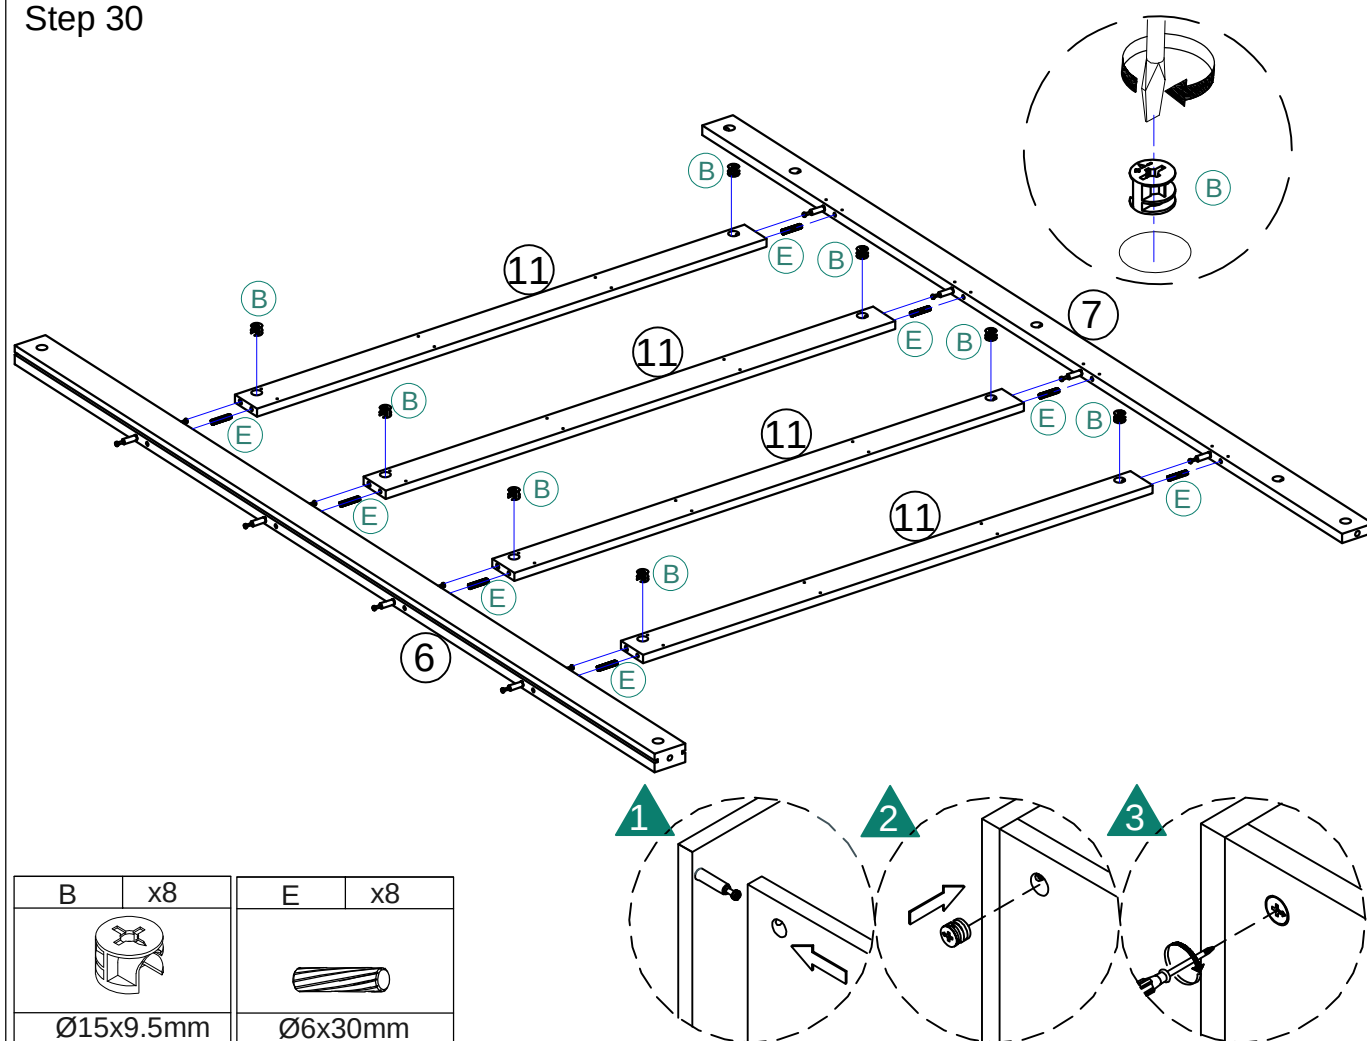


Step 31

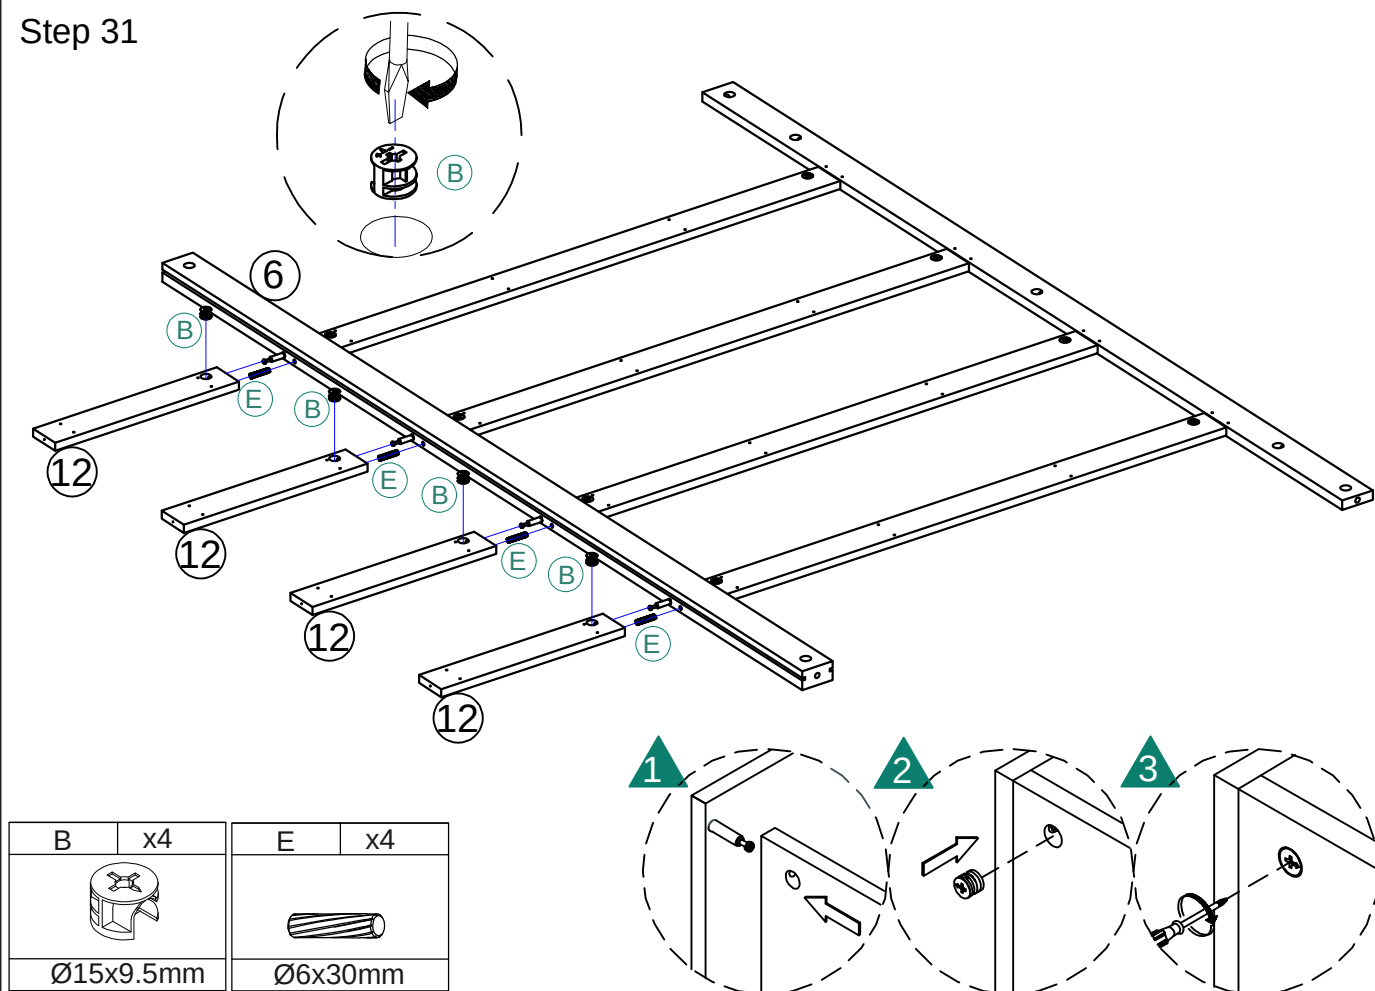

Step 32

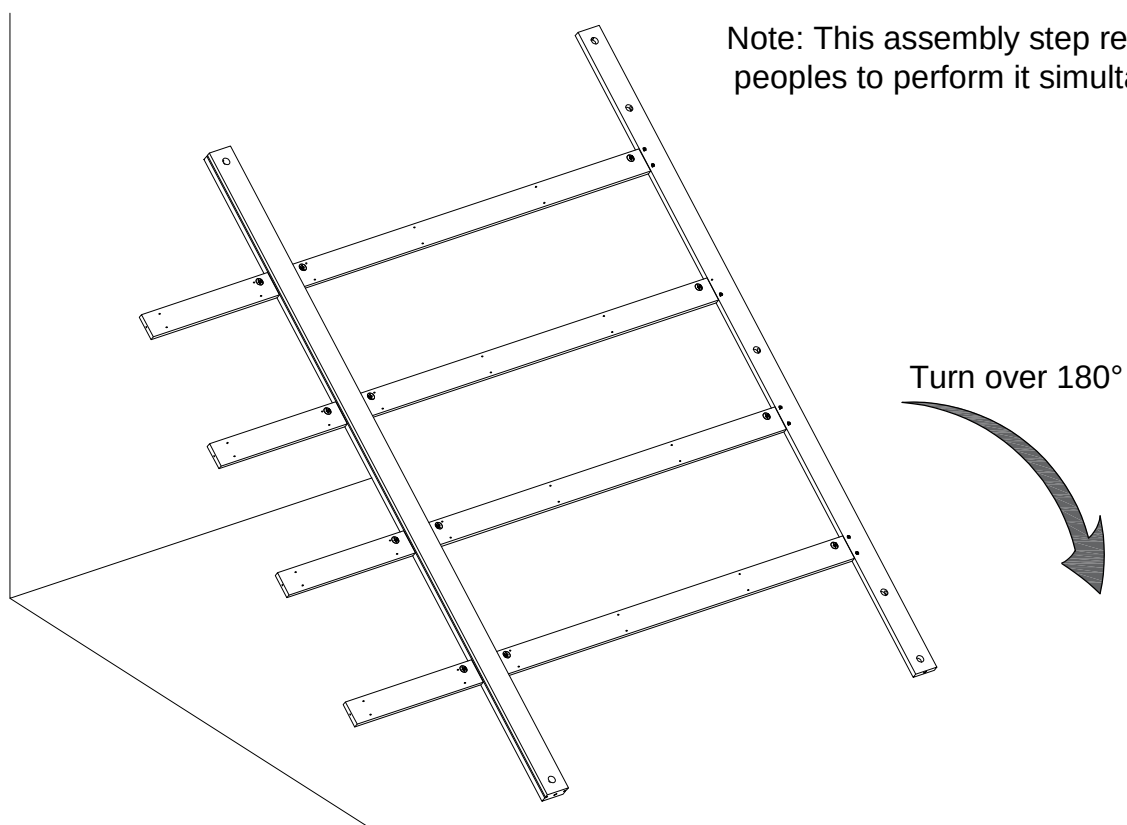



Step 33

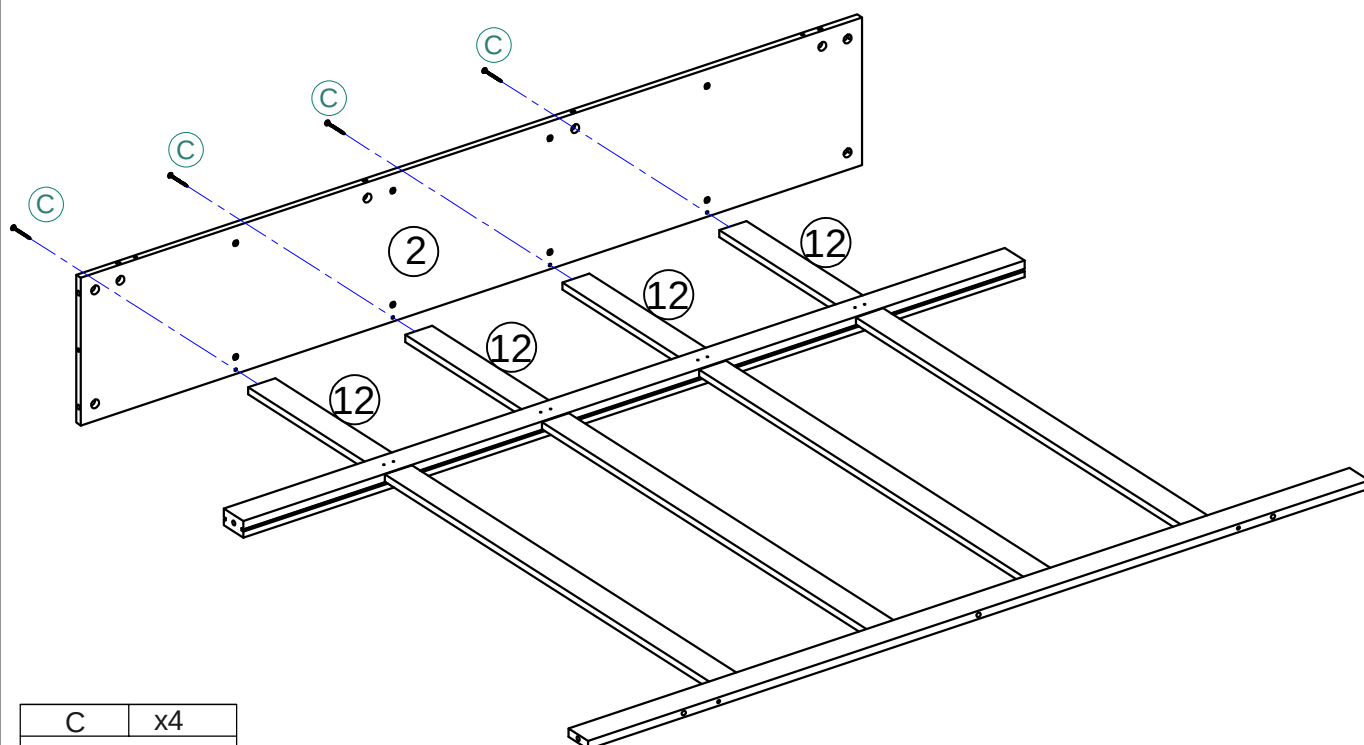


C	x4
	
M4x40mm	

Step 34

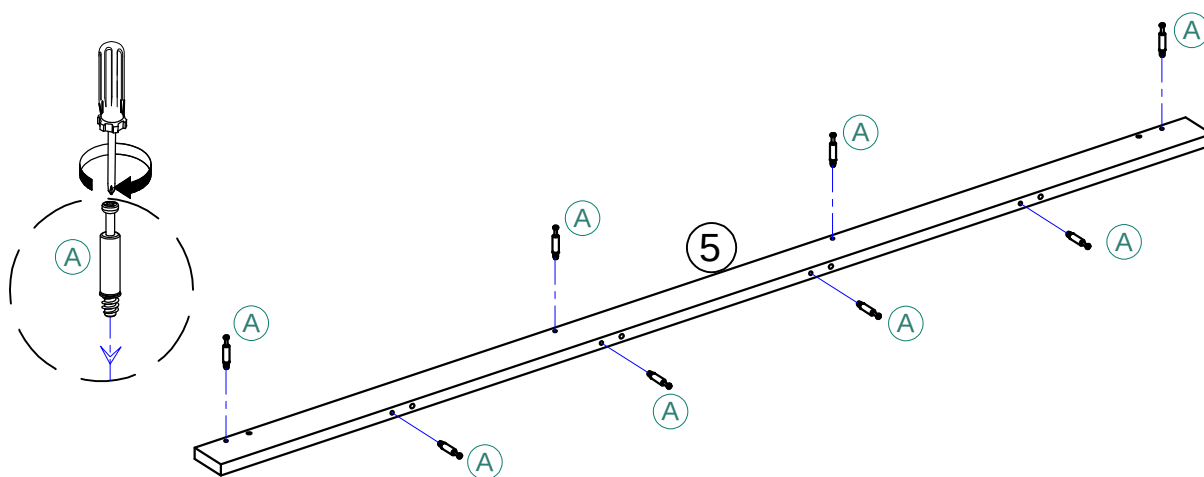


A	x8
	
Cam bolt	

Step 35




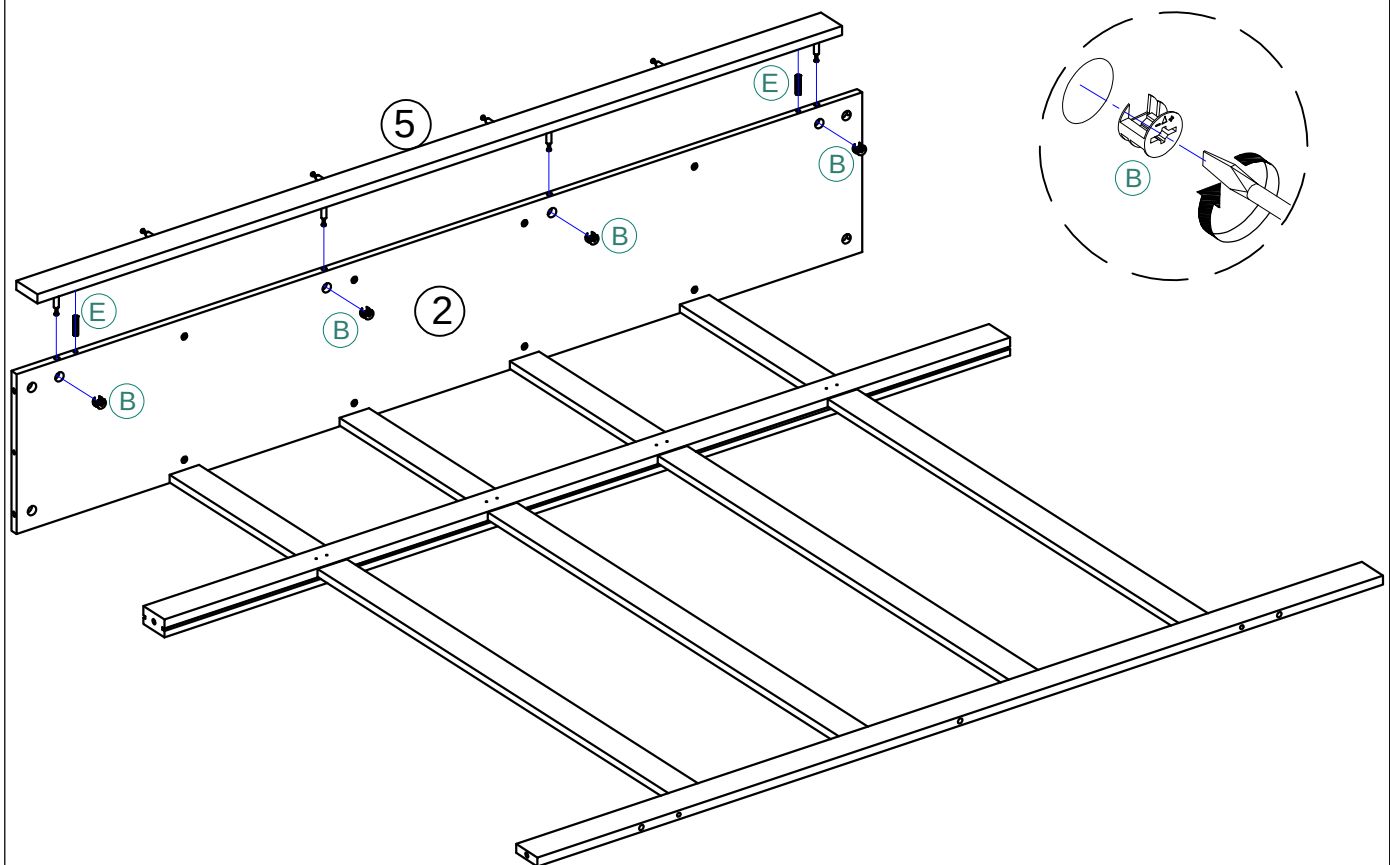



B	x4	E	x2
			
Ø15x9.5mm		Ø6x30mm	

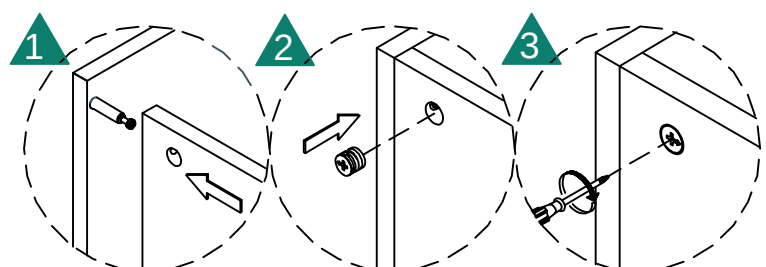


Step 36

X4

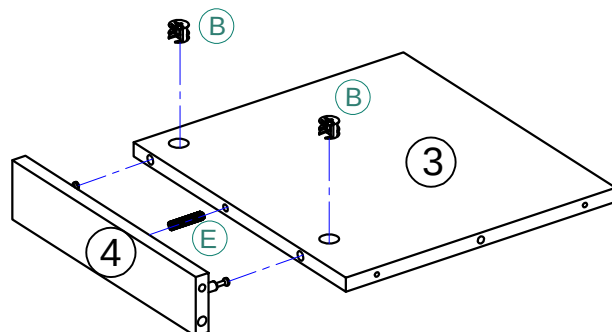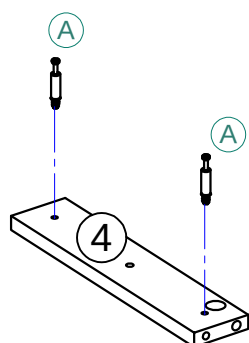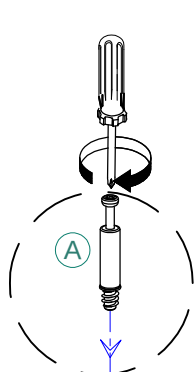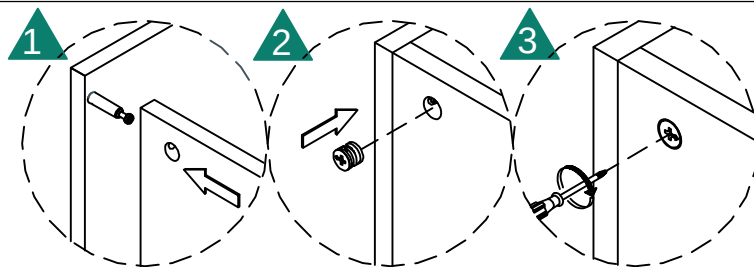


A	x8	B	x8	E	x4
					
Cam bolt		Ø15x9.5mm		Ø6x30mm	


Step 37

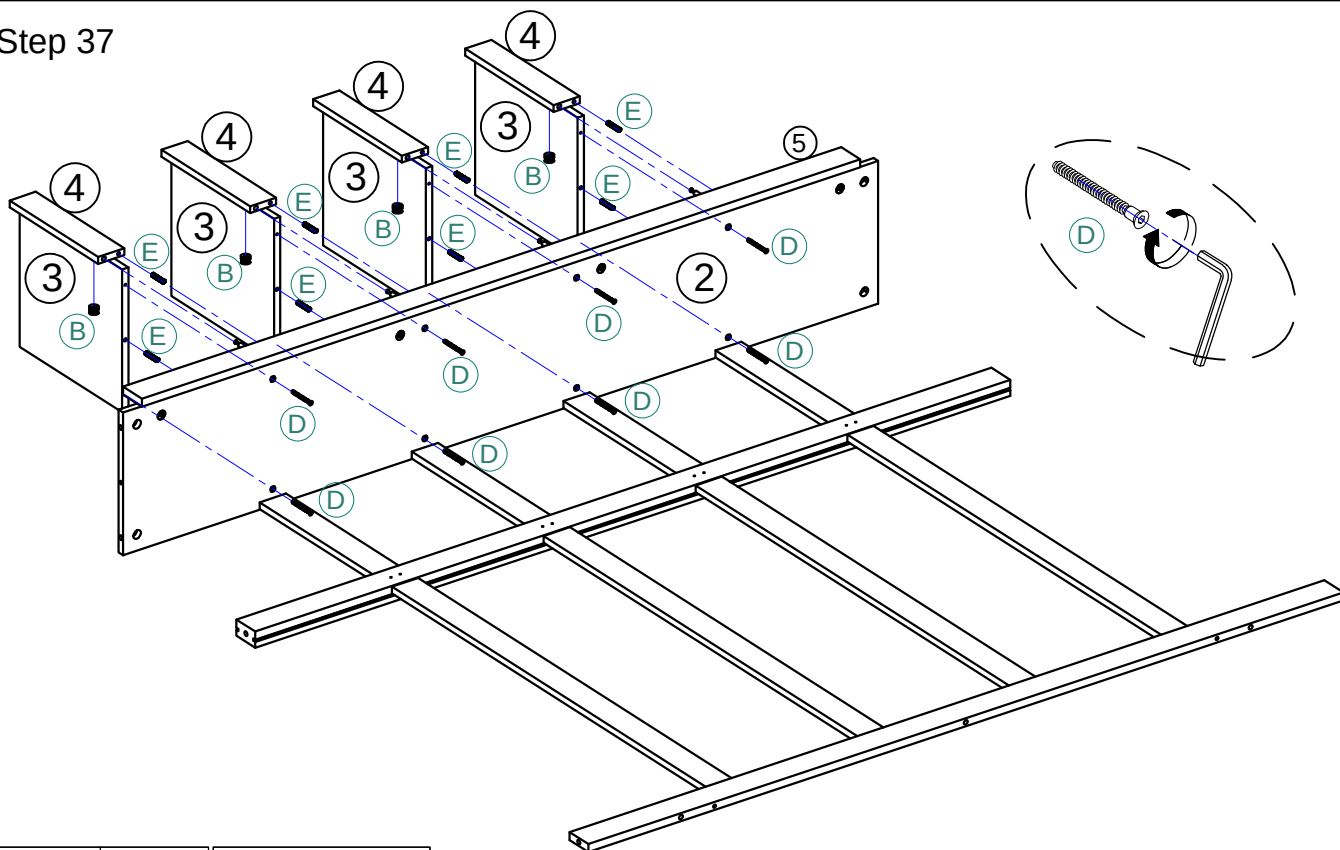


D	x8	N	
			
Ø9.5xM6x45mm		M4	
B	x4	E	x8
			
Ø15x9.5mm		Ø6x30mm	

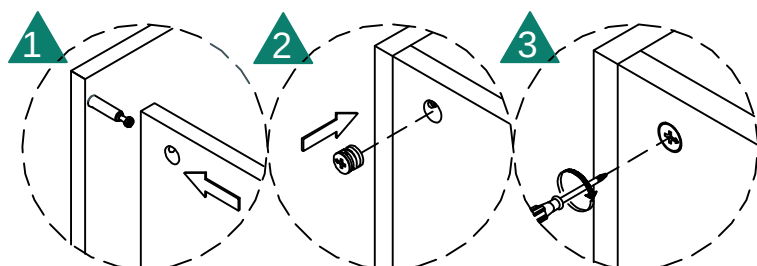



Step 38

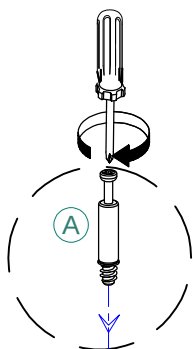


A	x4
	
Cam bolt	

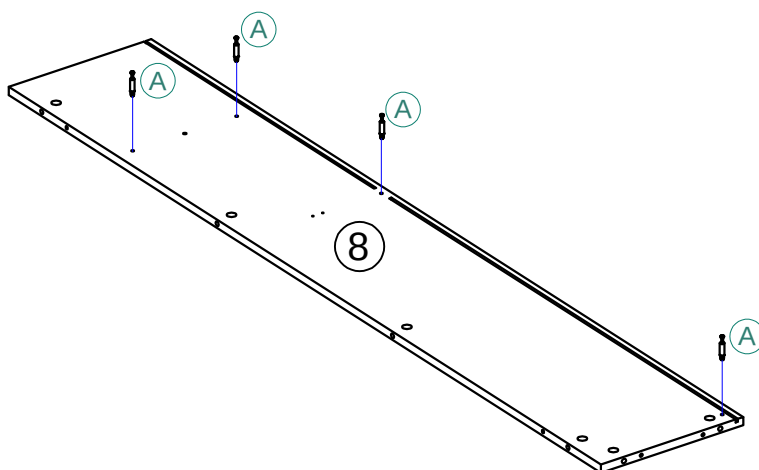



Step 39

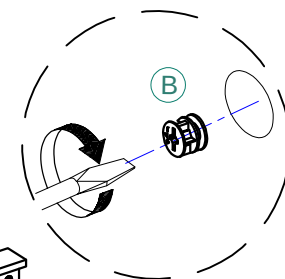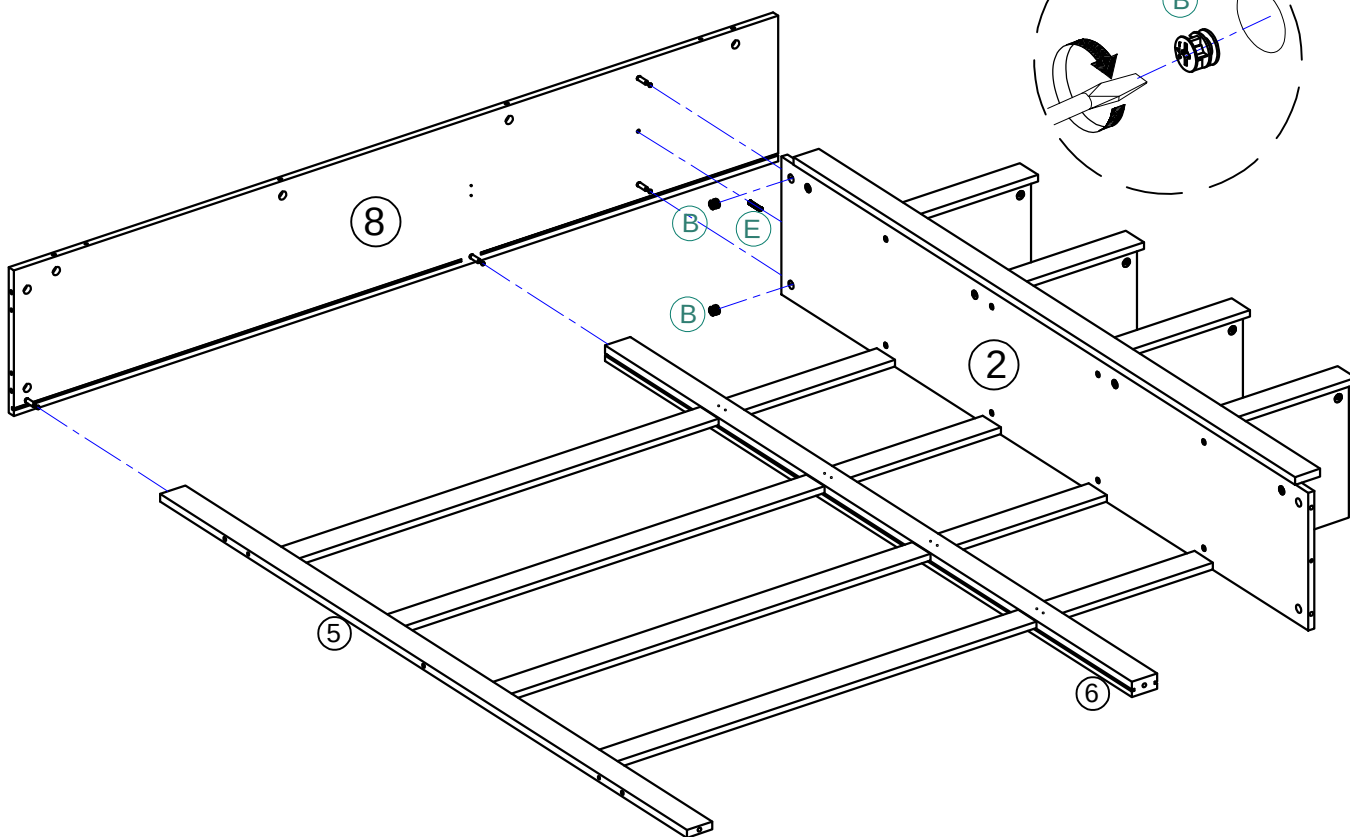

B	x2	E	x1
			
Ø15x9.5mm		Ø6x30mm	

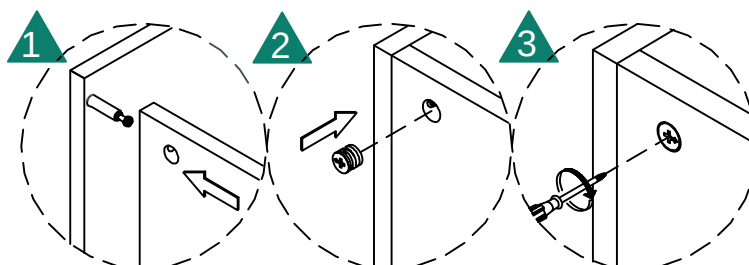


Step 40

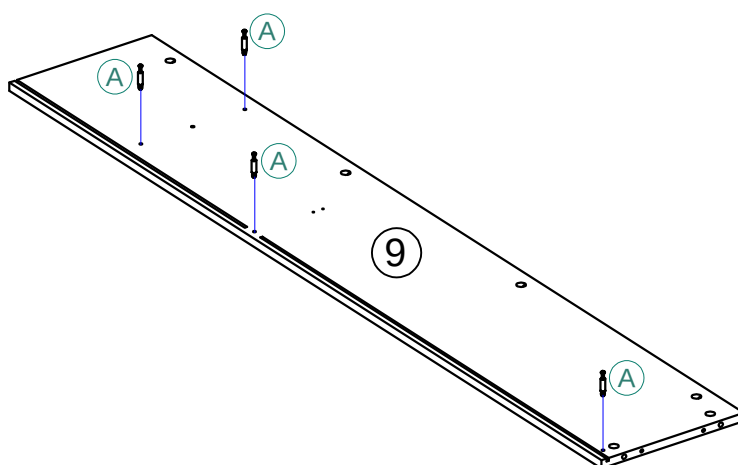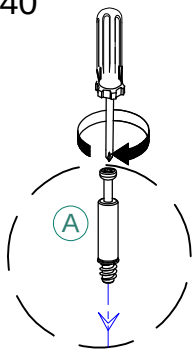


A	x4
Cam bolt	

Step 41

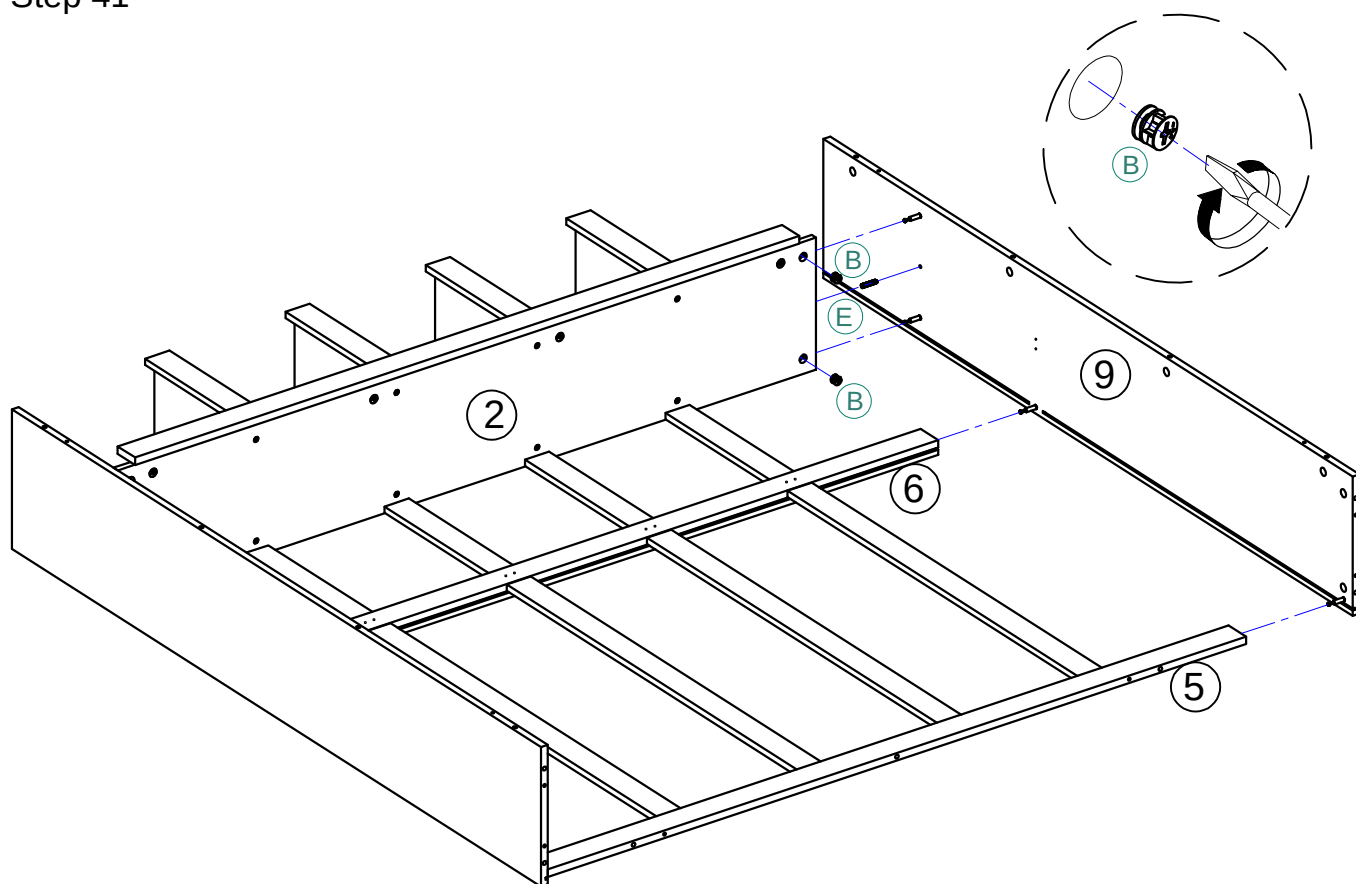


B	x2	E	x1
Ø15x9.5mm		Ø6x30mm	

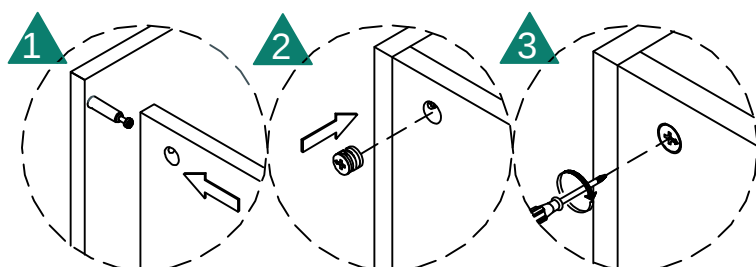


Step 42

X2

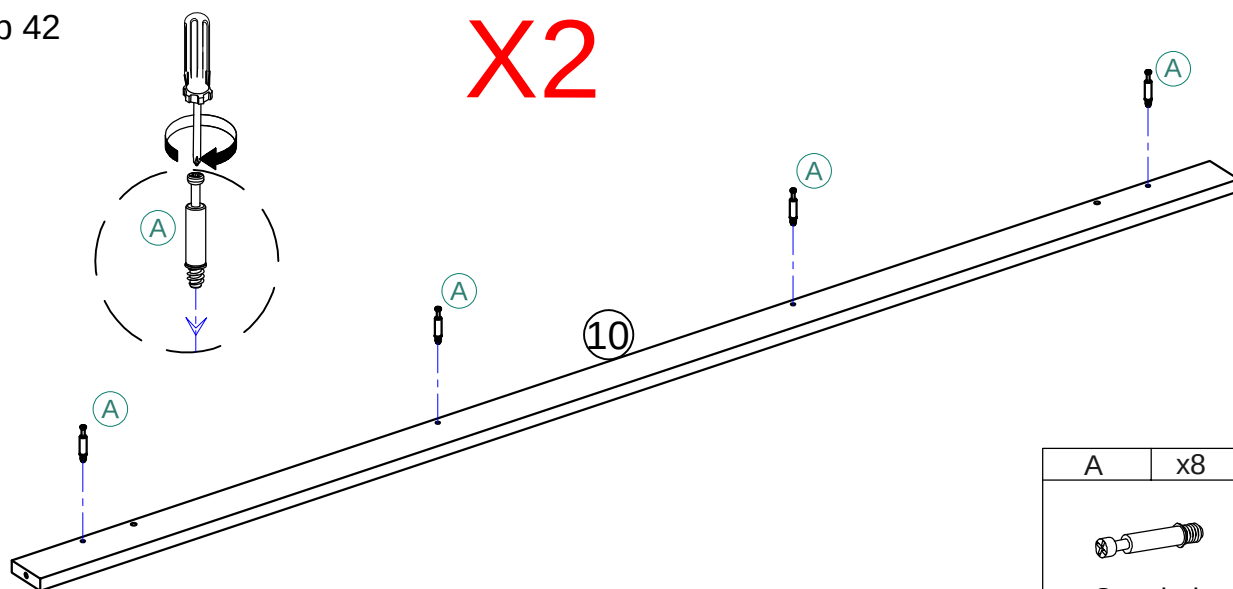


A	x8
	
Cam bolt	

Step 43

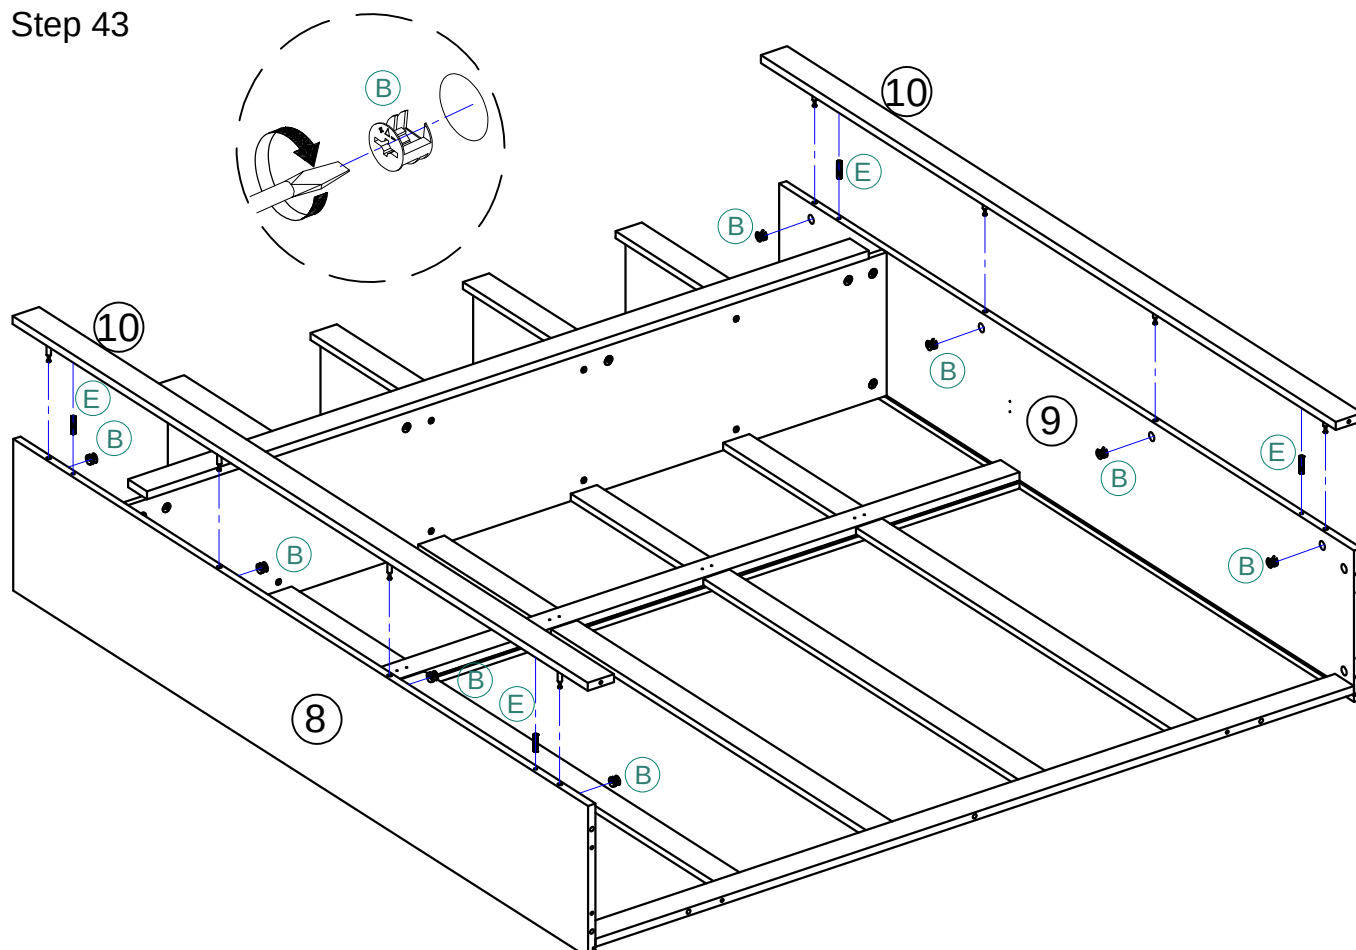


B	x8	E	x4
			
Ø15x9.5mm		Ø6x30mm	

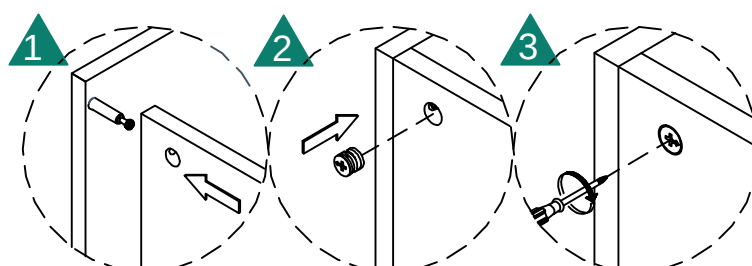


Step 44


Note: This assembly step requires two peoples to perform it simultaneously !

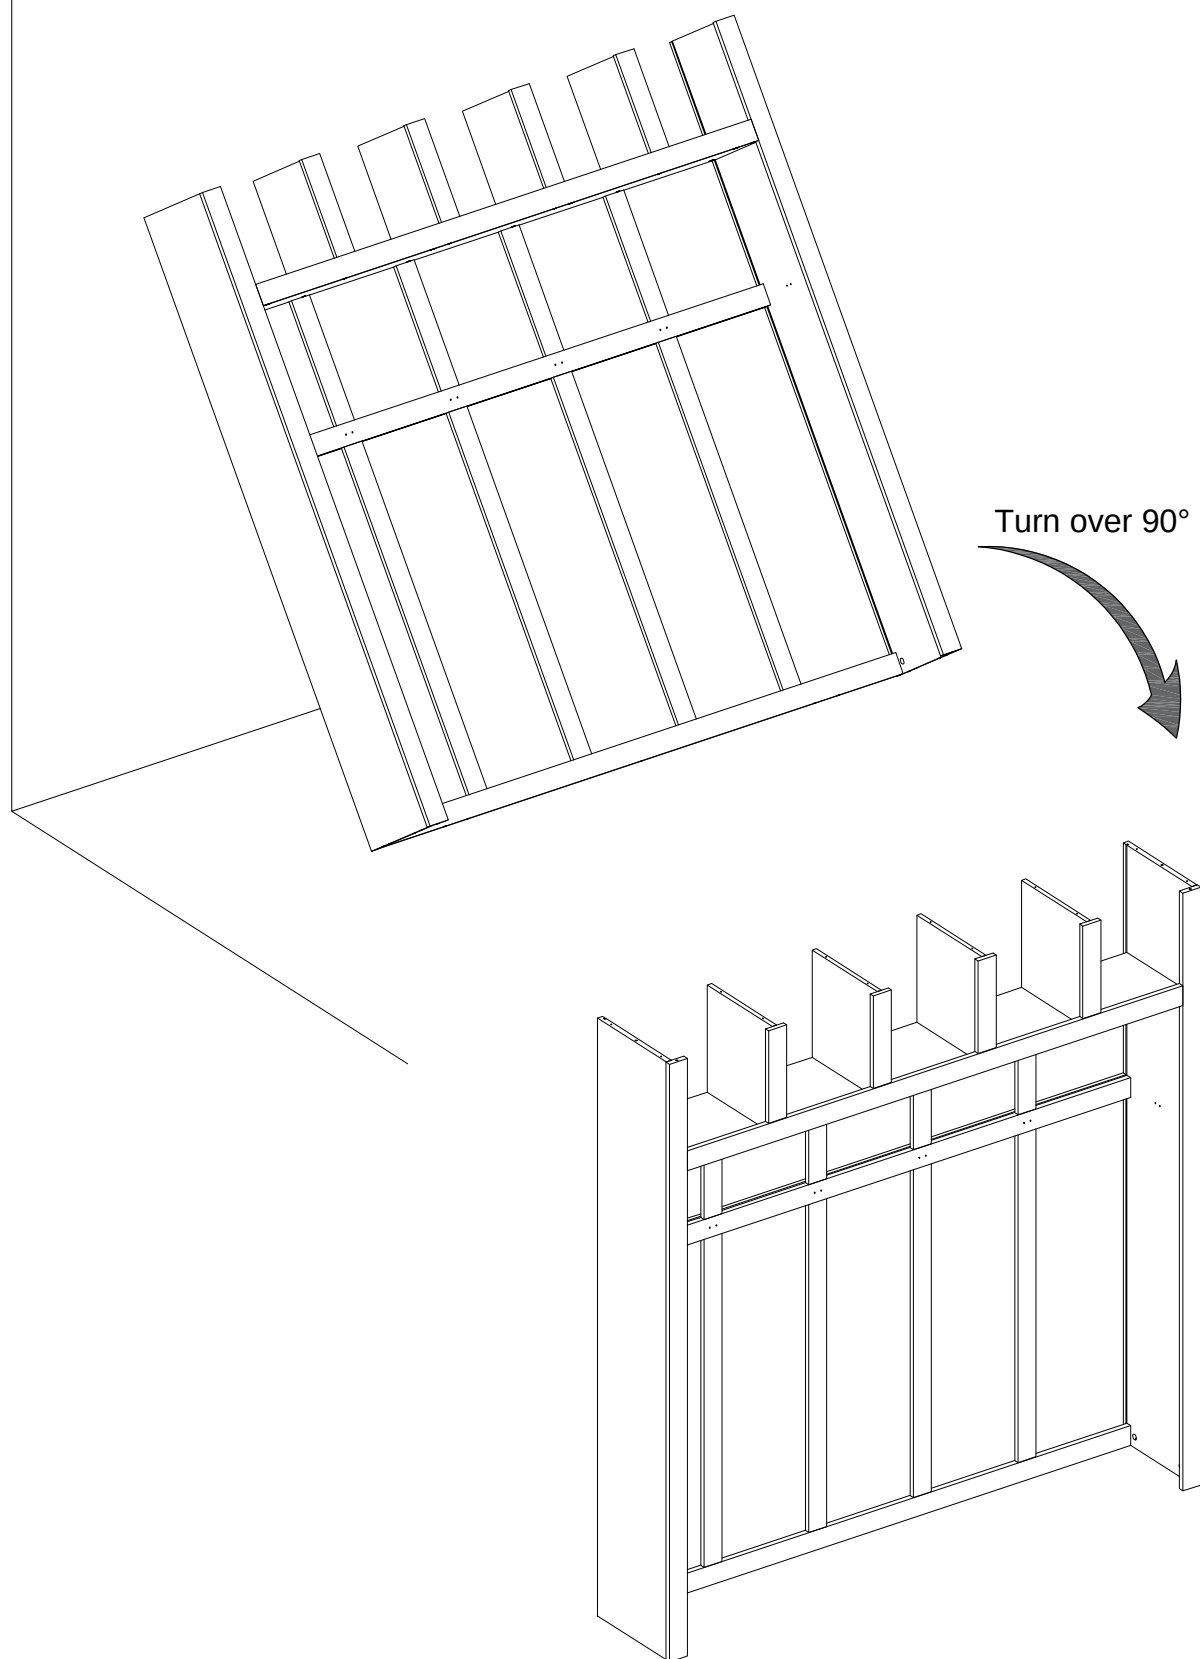



Step 45

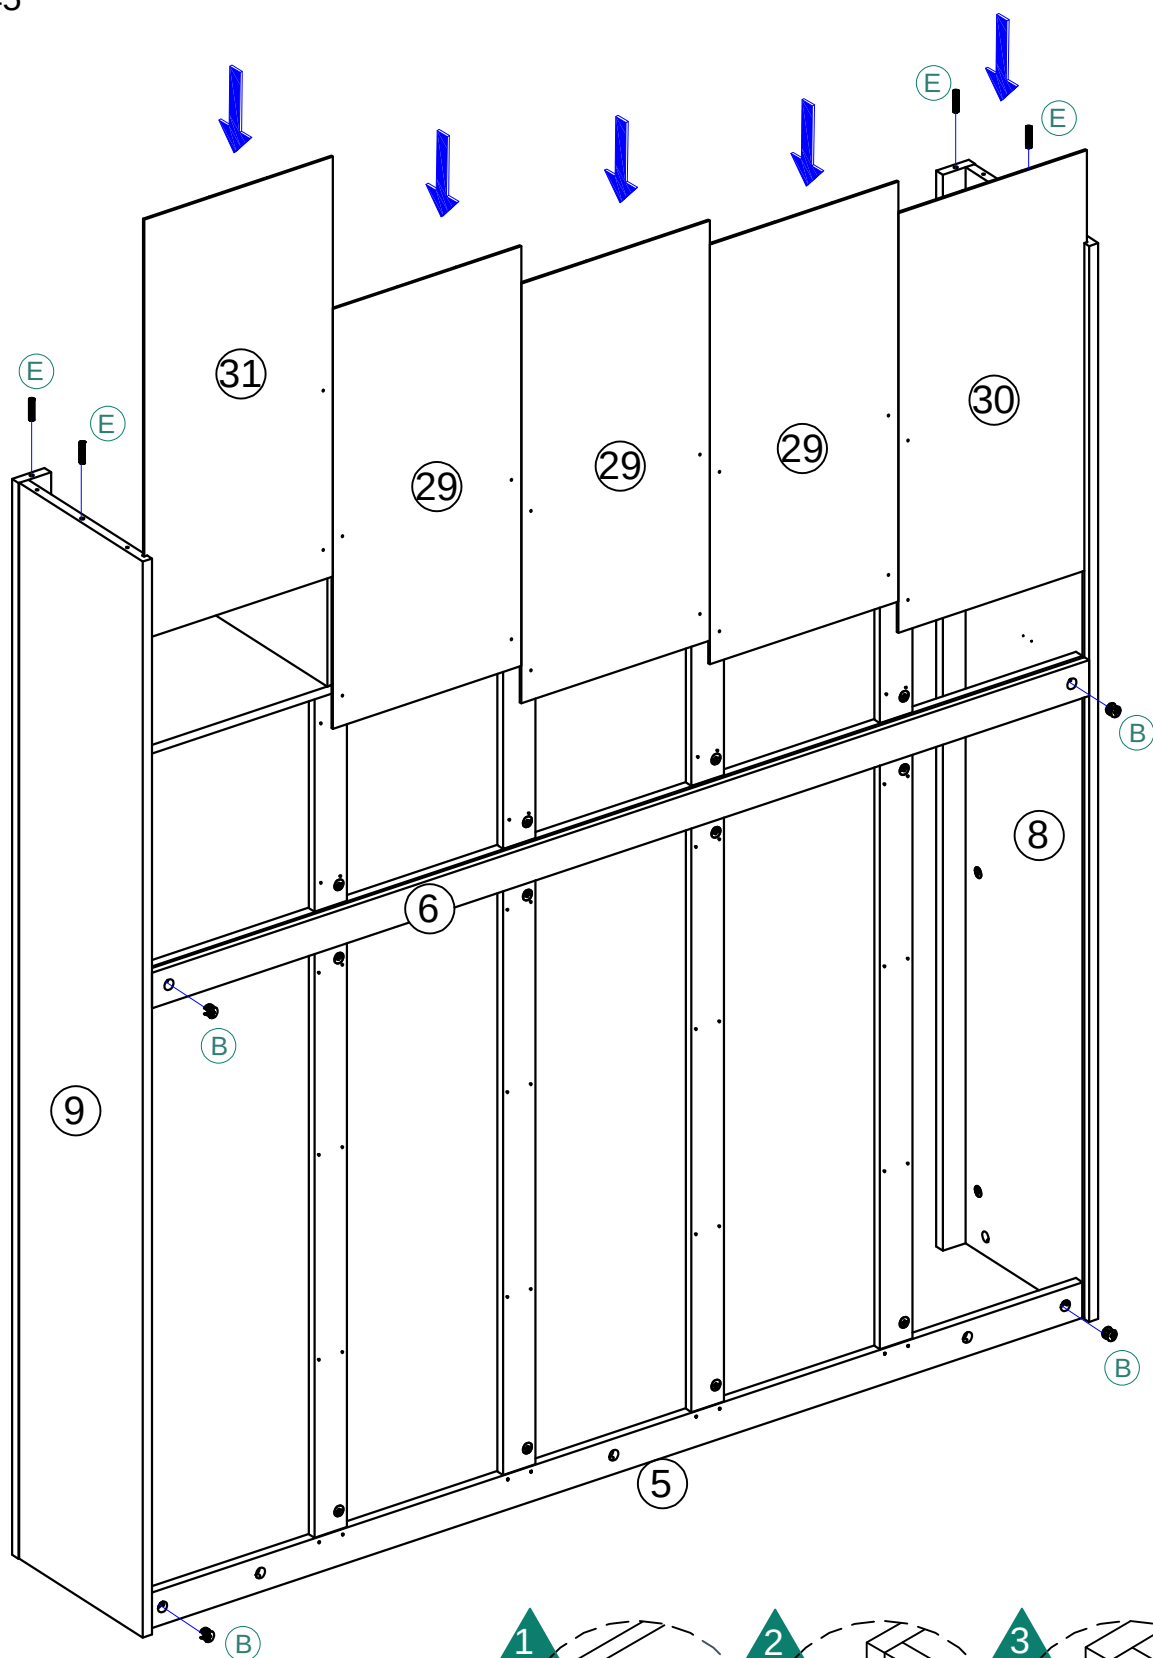

B	x4	E	x4
			
Ø15x9.5mm		Ø6x30mm	

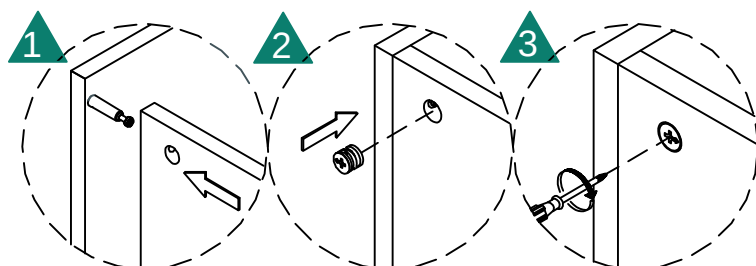


Step 46

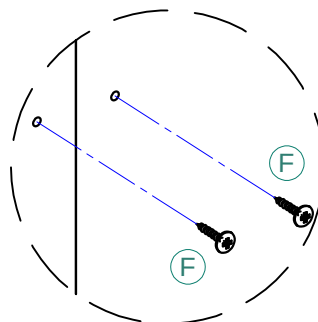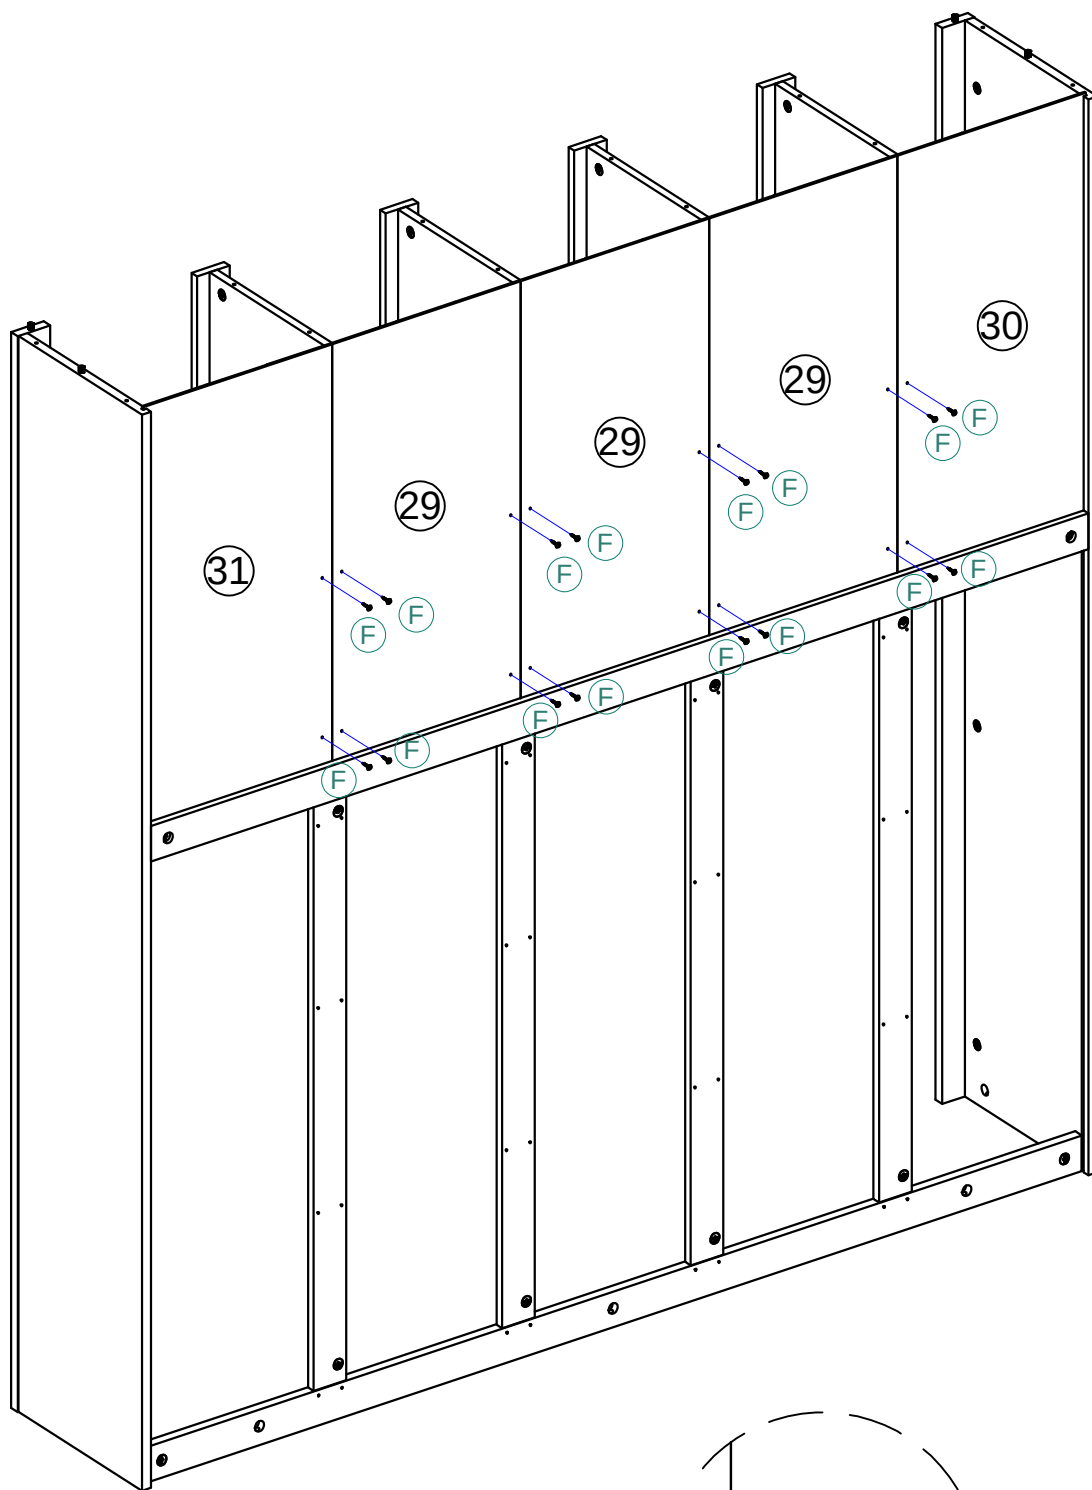

F	x16
	
M3.5x12mm	


Step 47

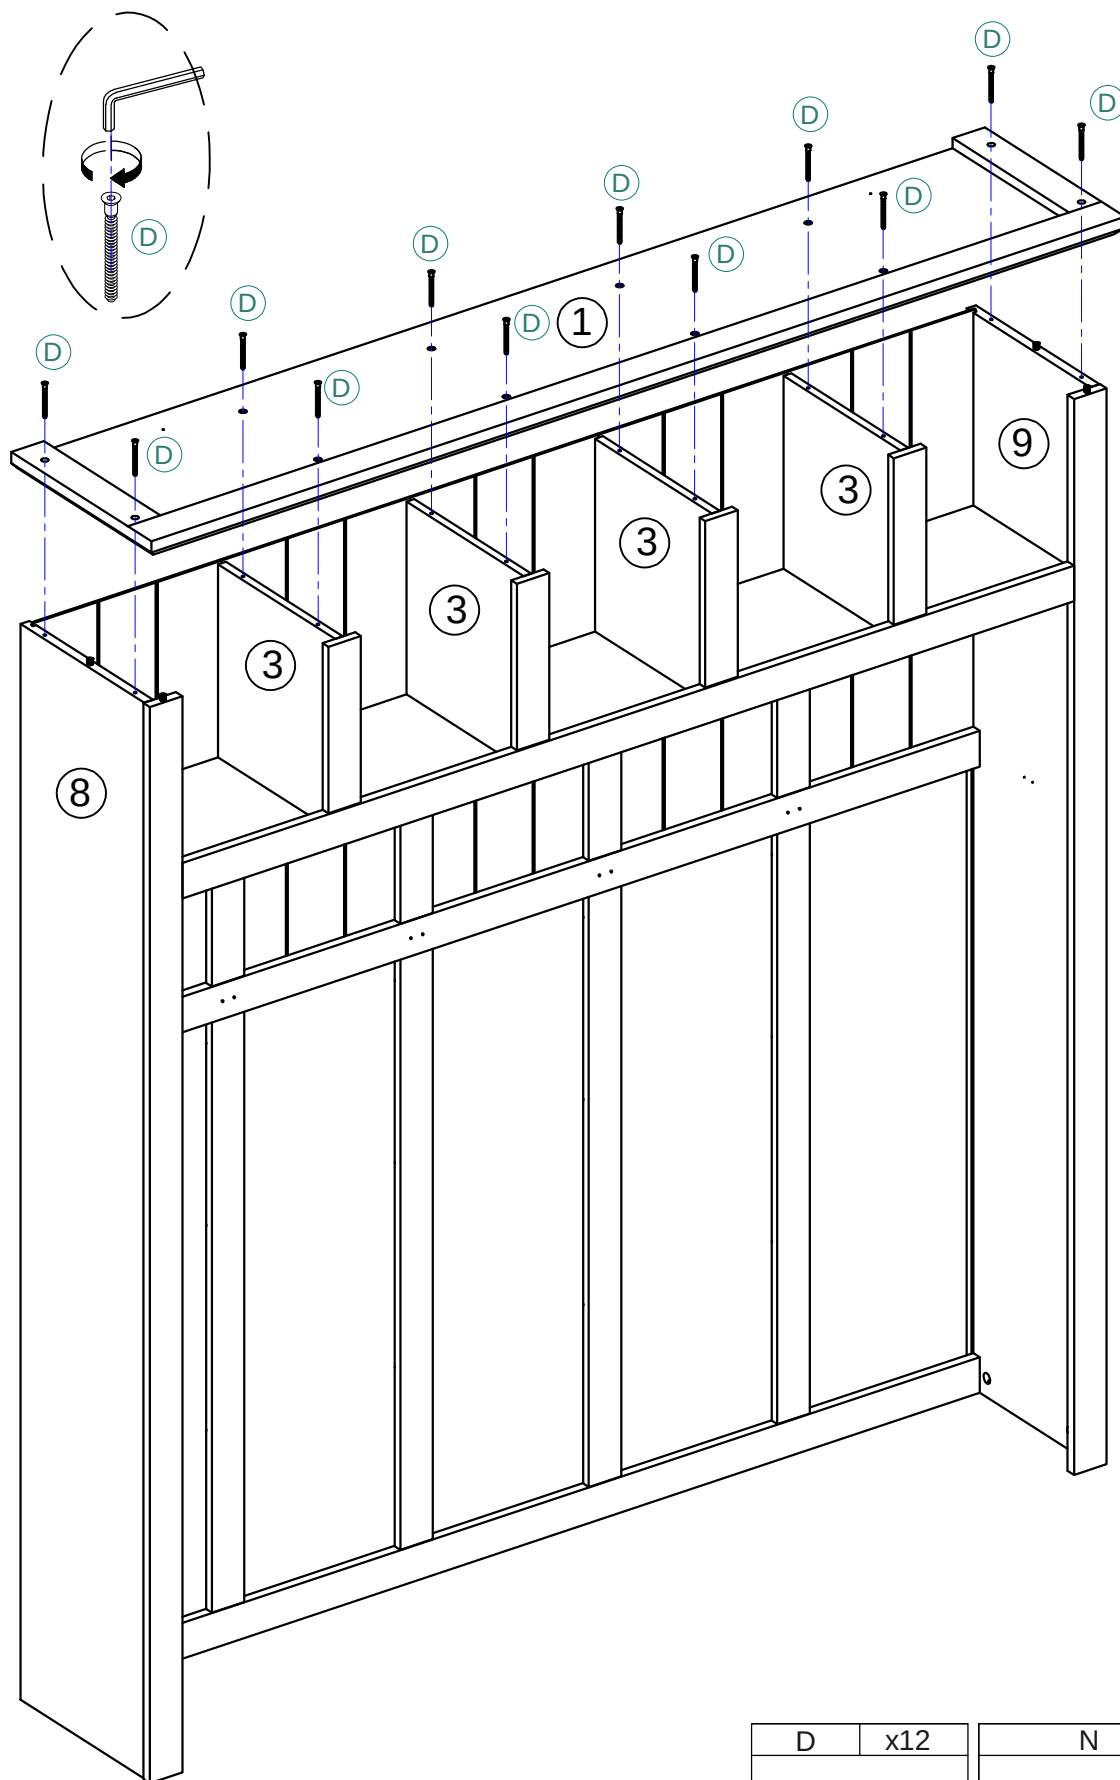


D	x12	N
		
Ø9.5xM6x45mm		M4

Step 48

Note: This assembly step requires two peoples to perform it simultaneously !


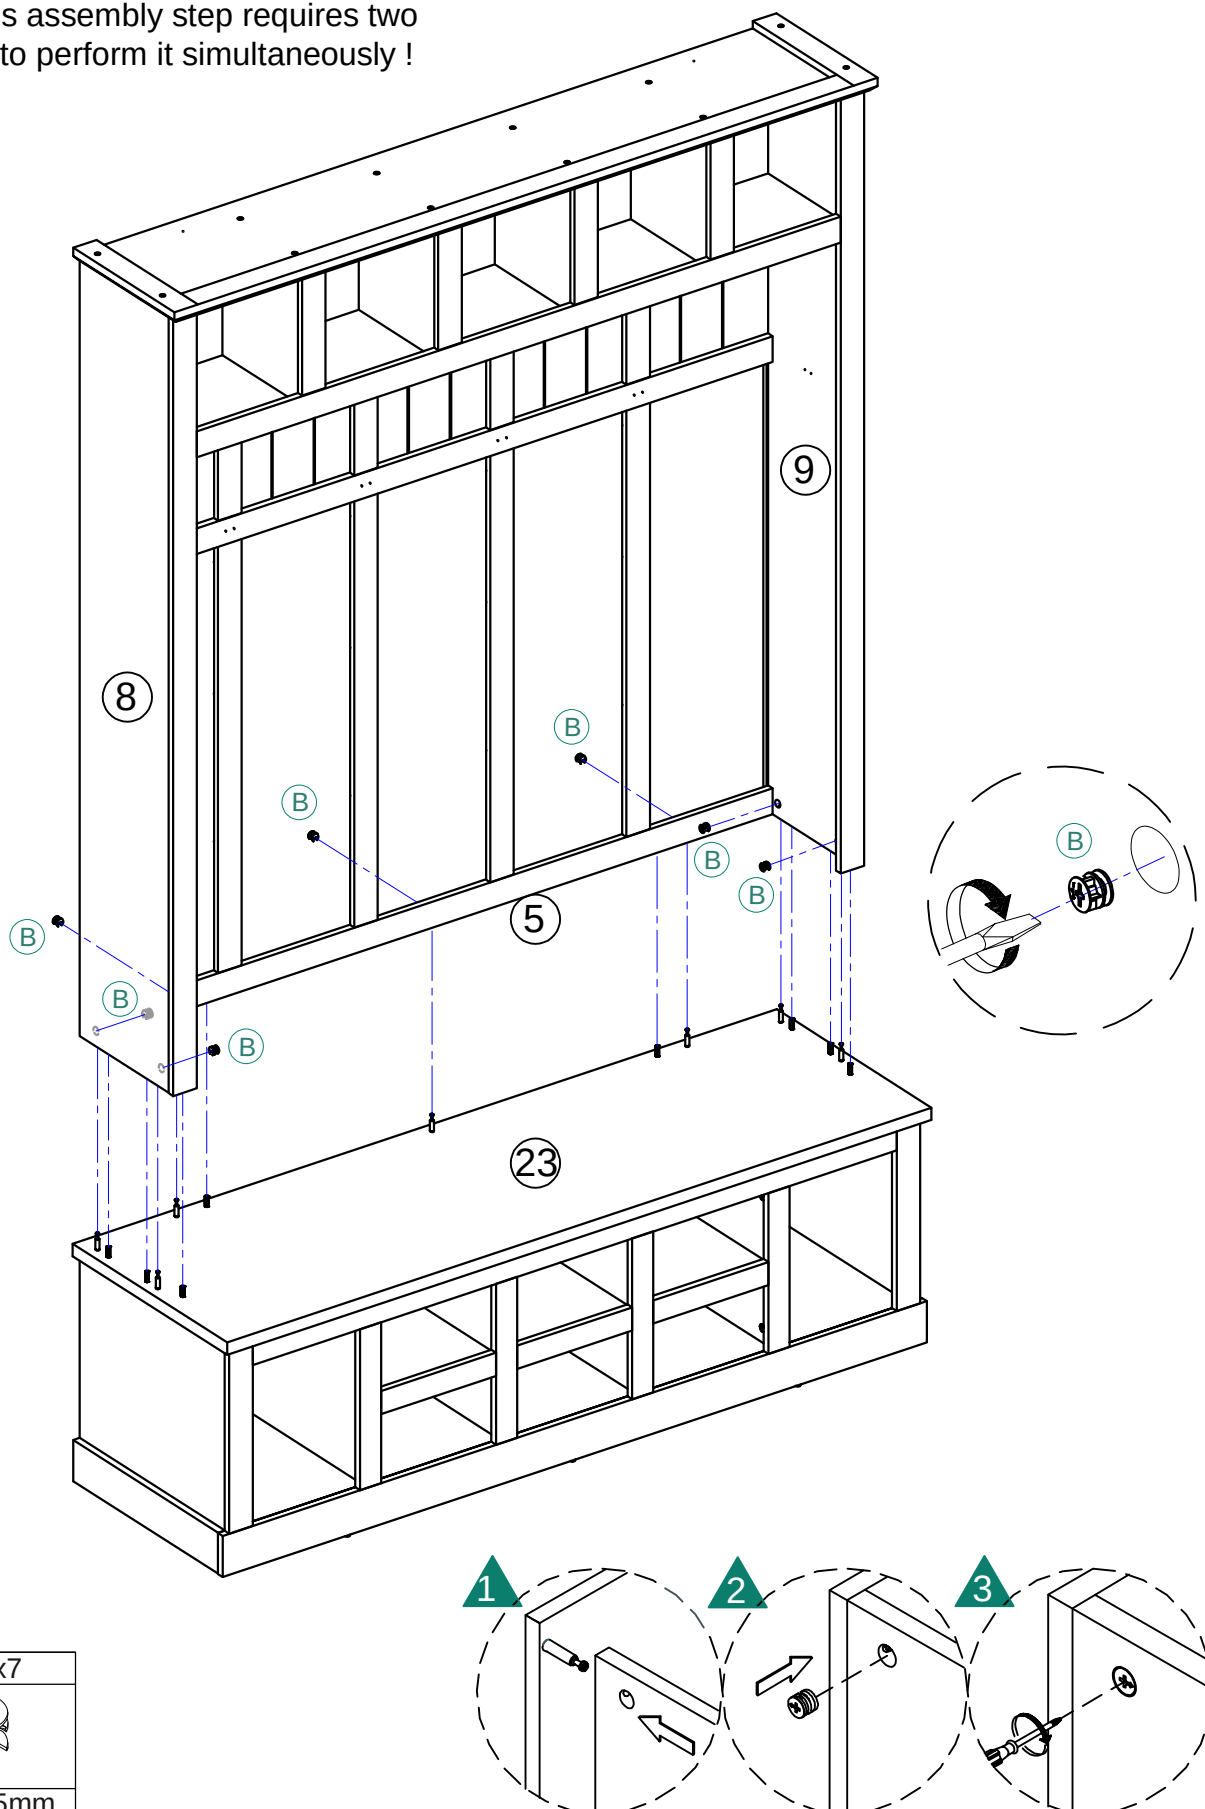


Step 49

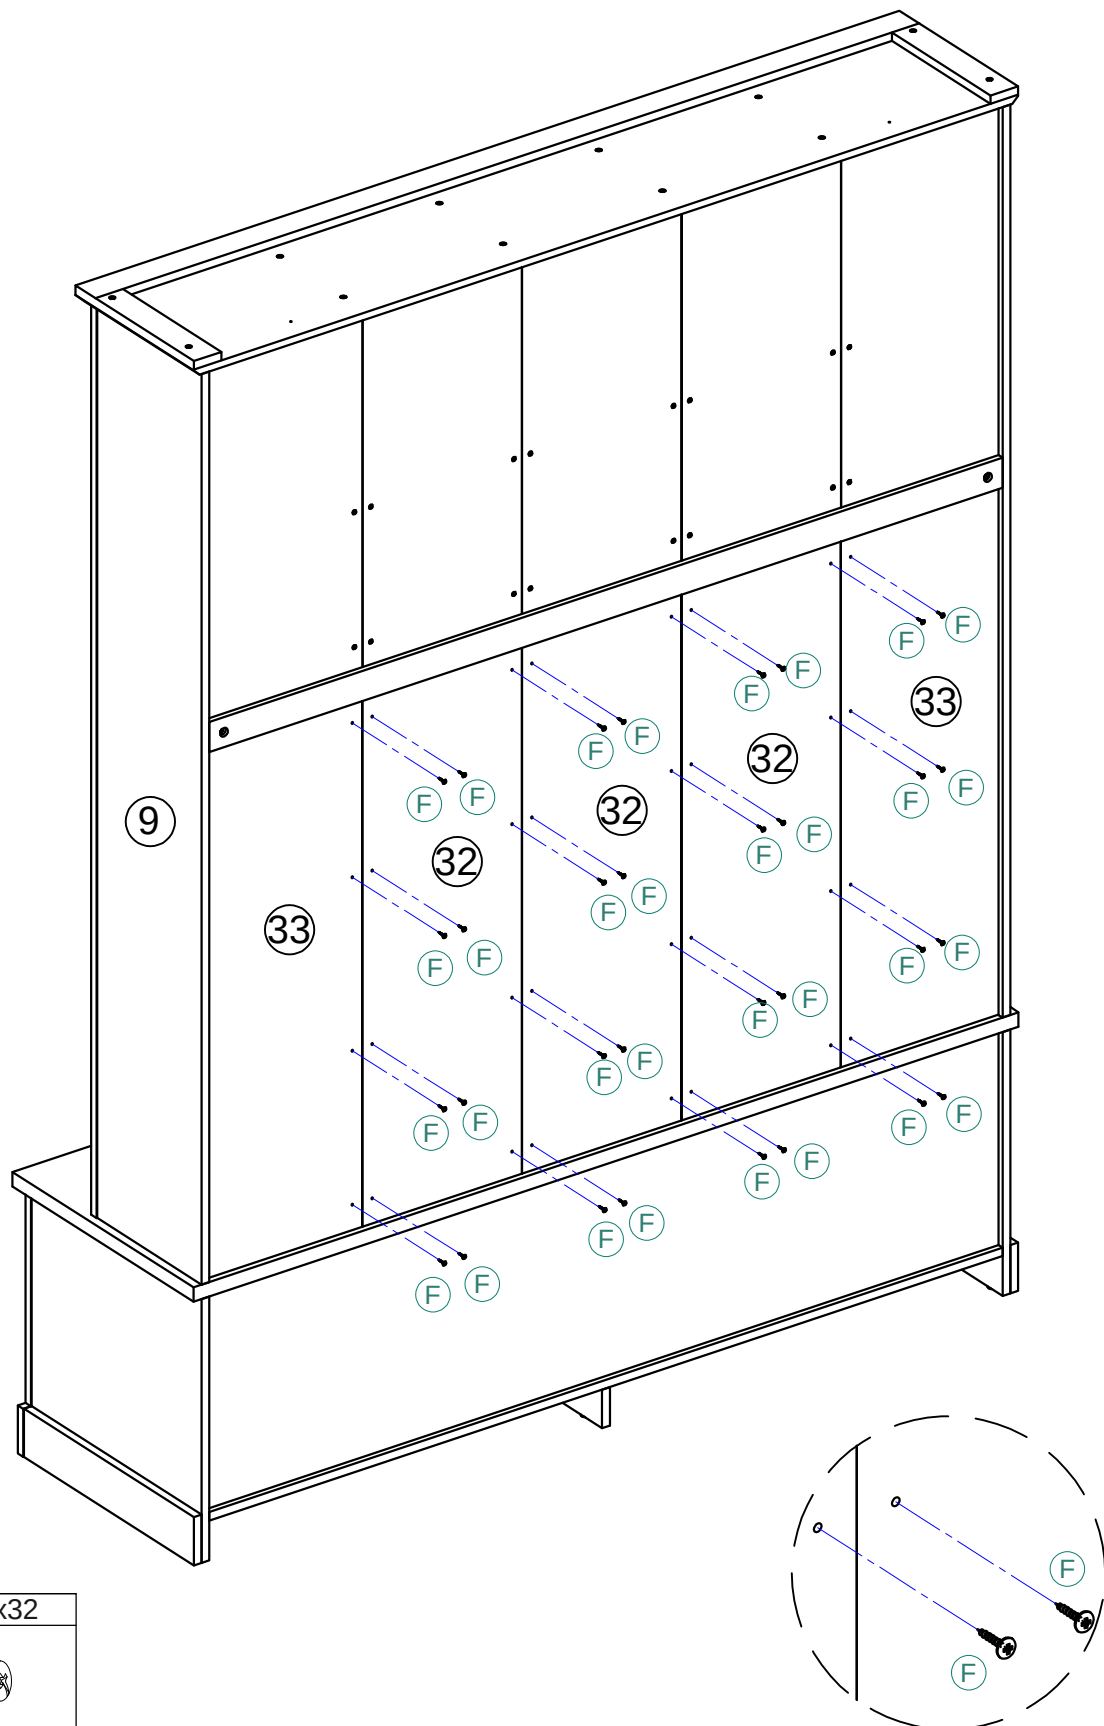



F	x32
	
M3.5x12mm	


Step 50

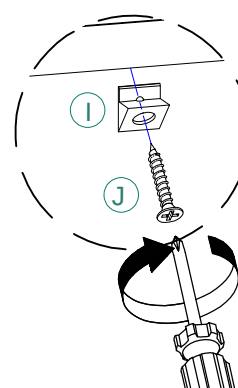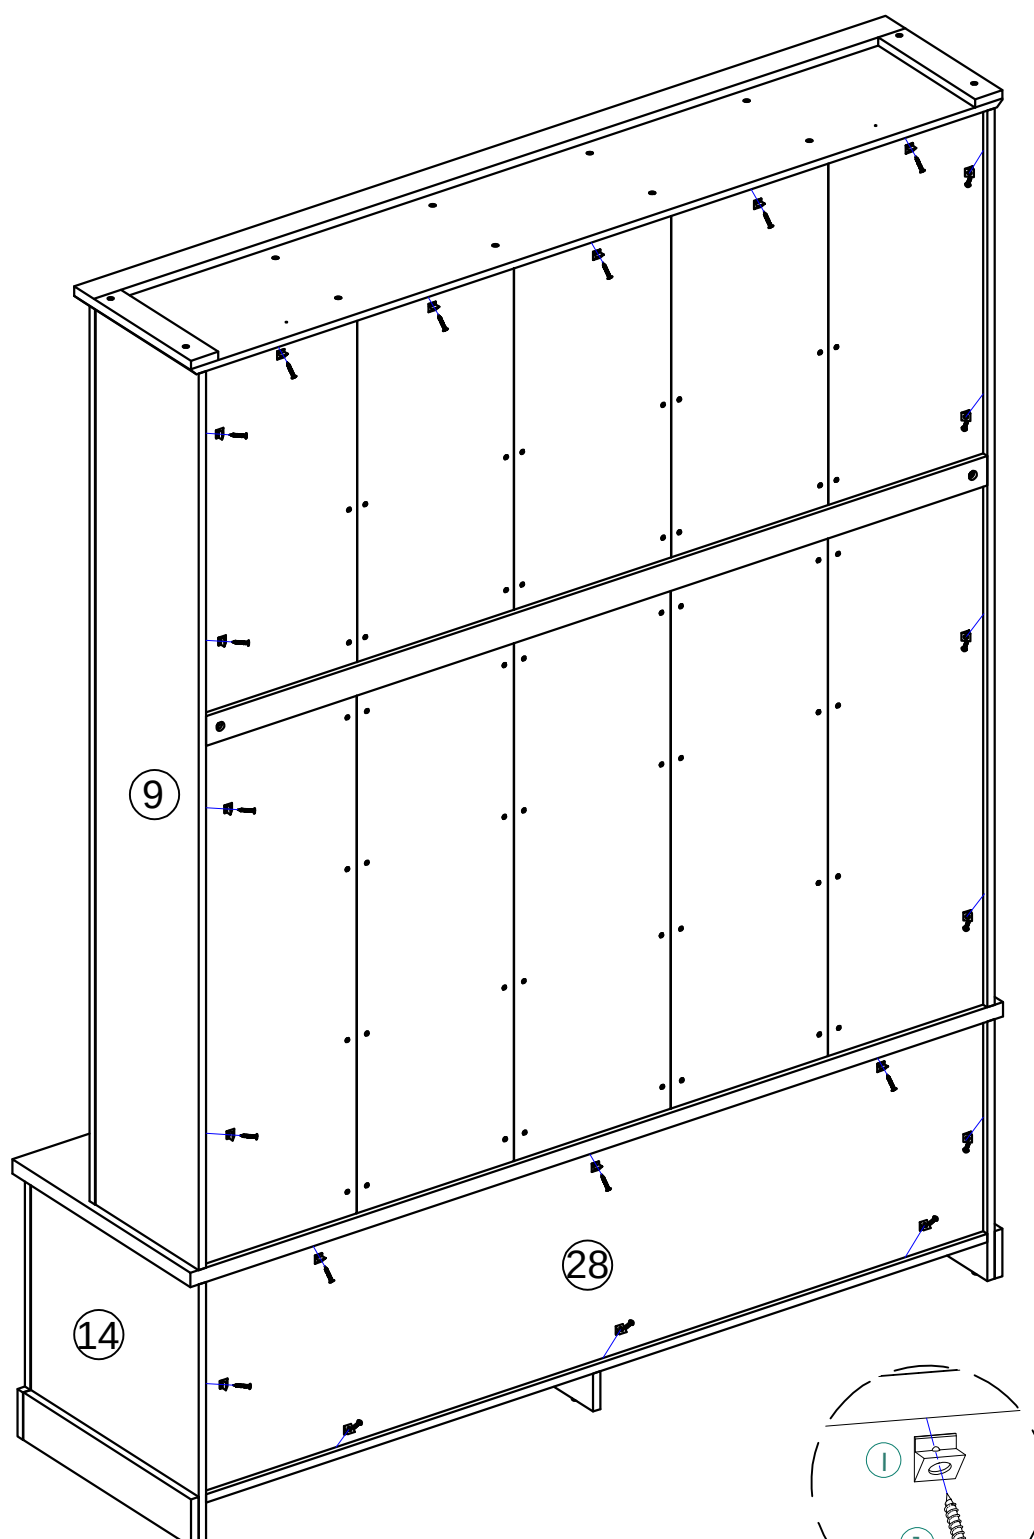



I	x21	J	x21
		M3x16mm	


Step 51

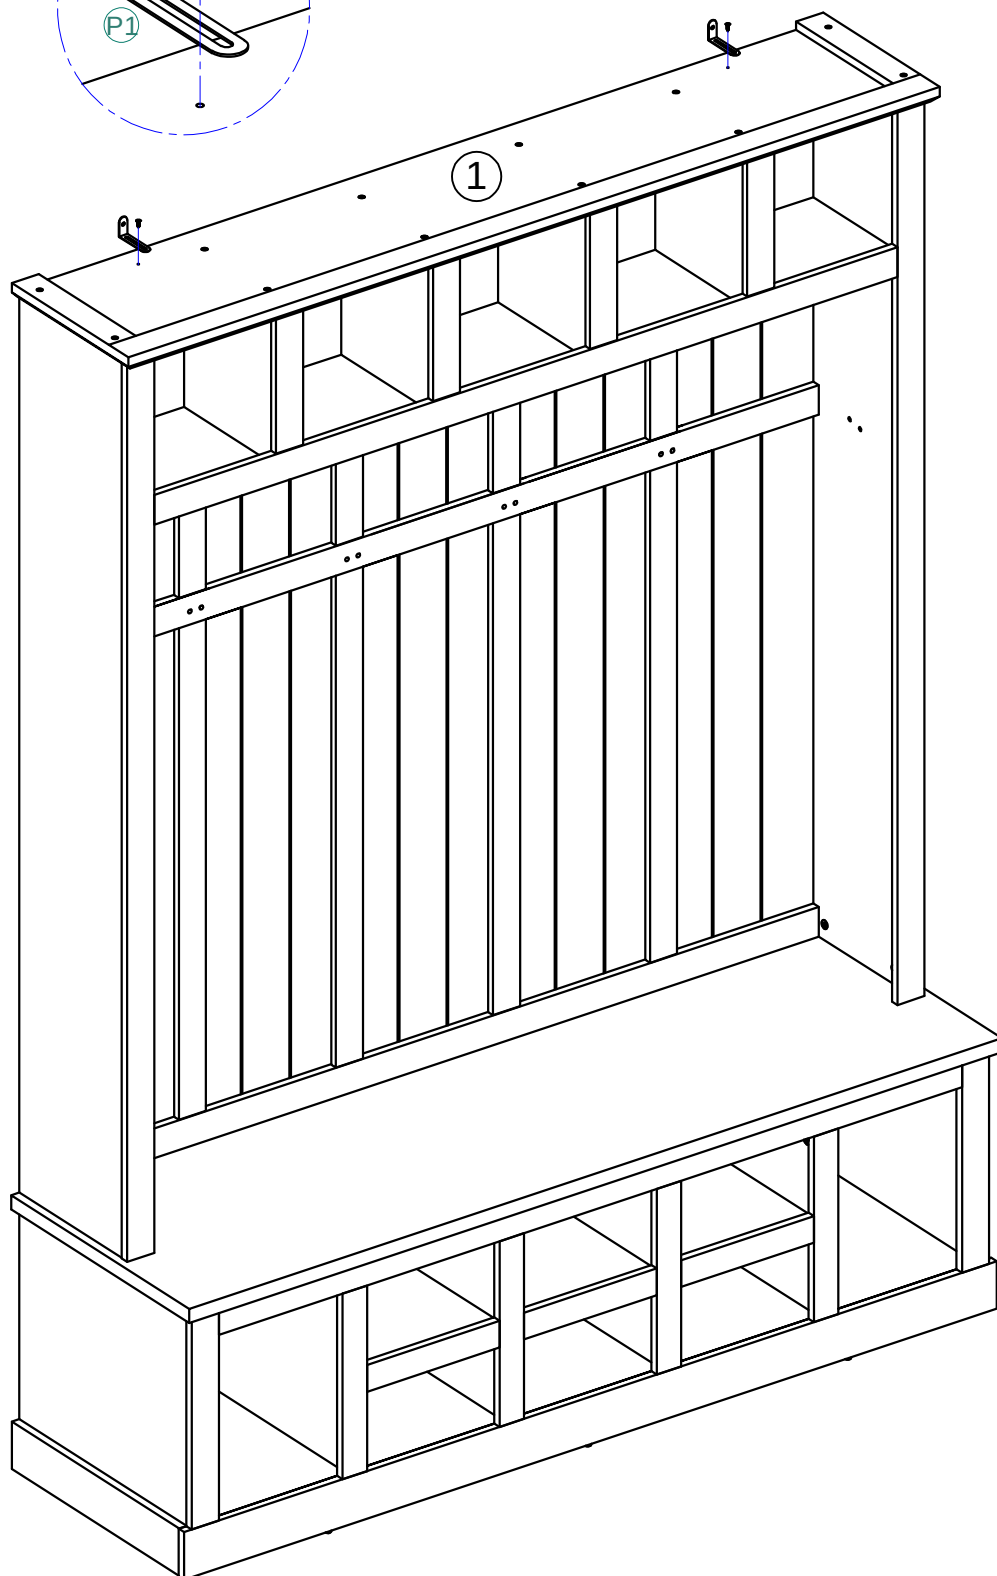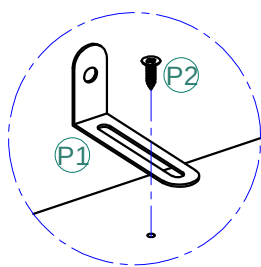




P1	x2	P2	x2
			
		M4x14mm	

Step 52

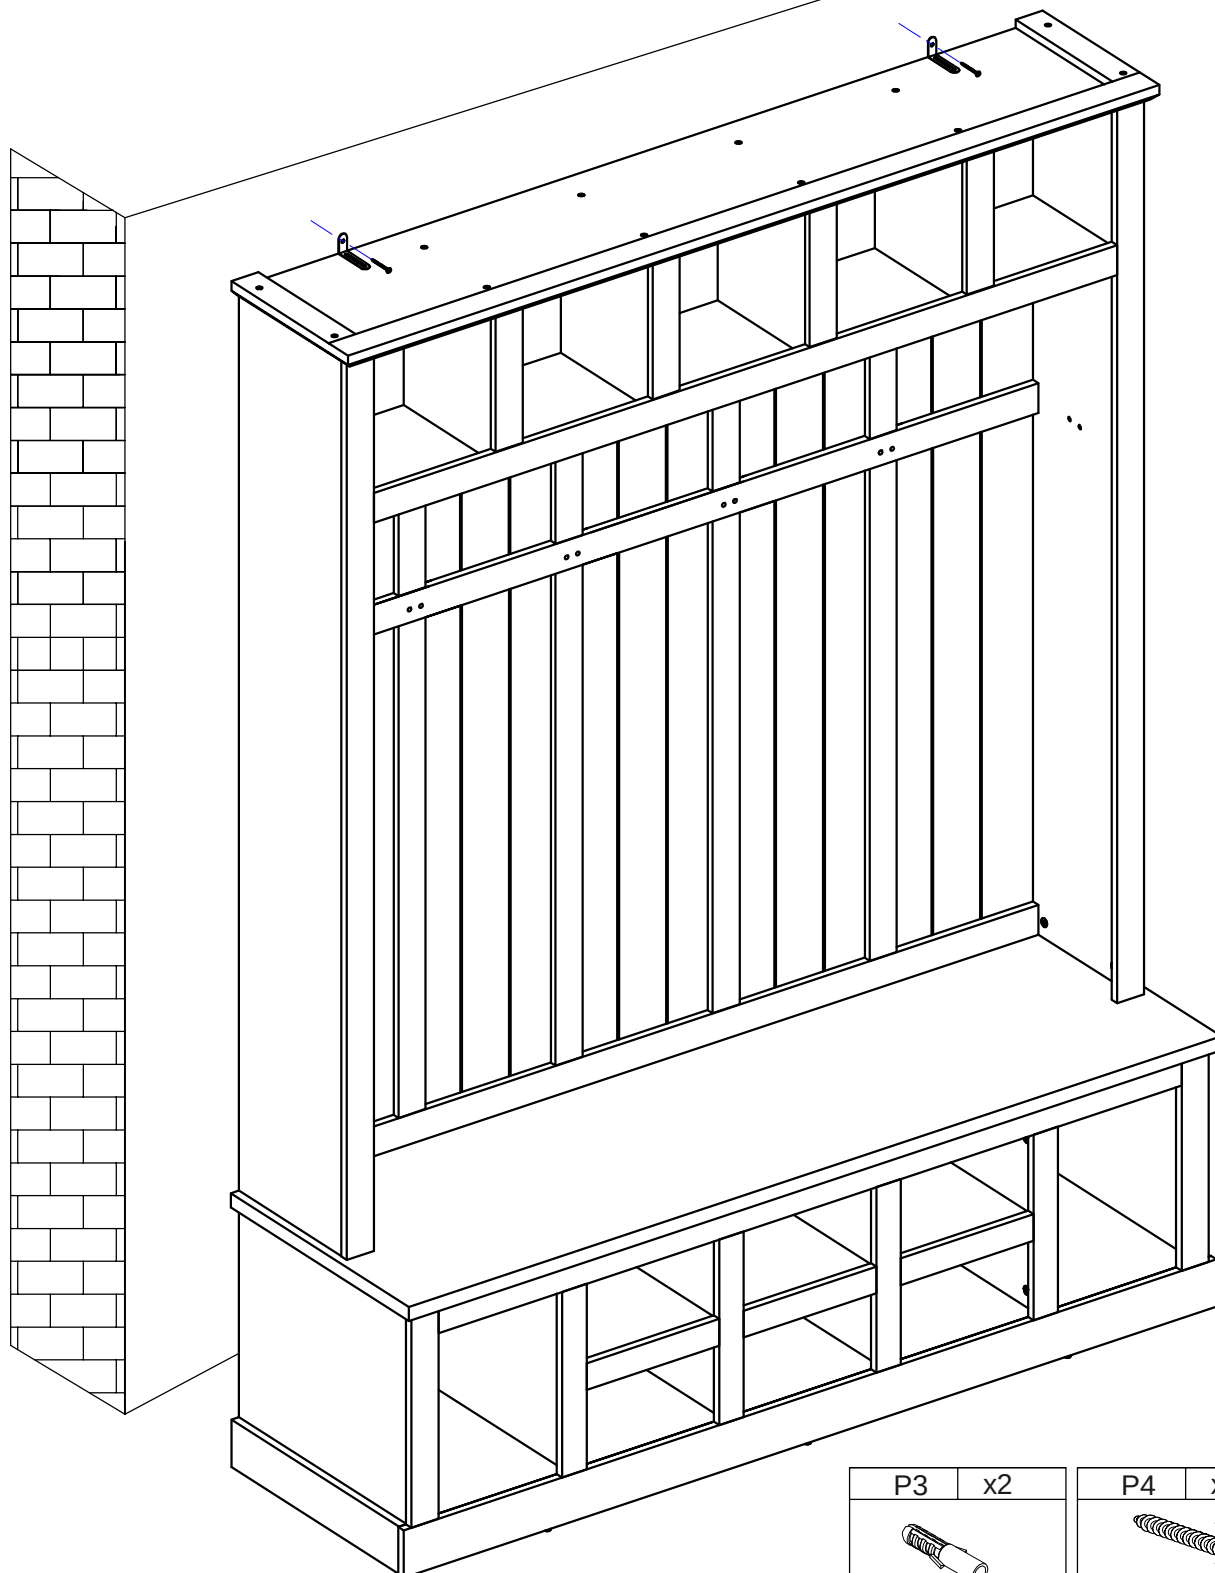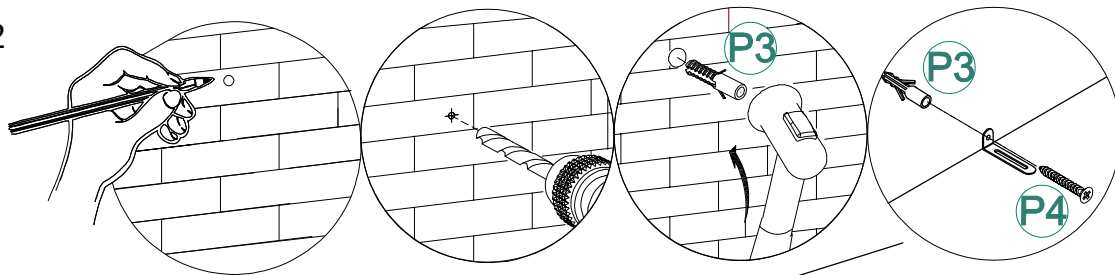


P3	x2	P4	x2
			
		M4x35mm	

Step 53

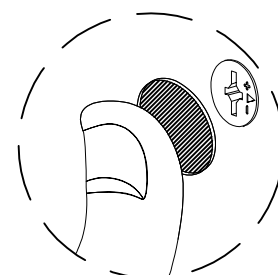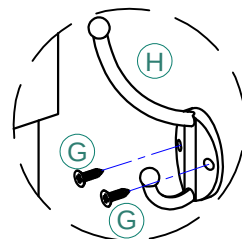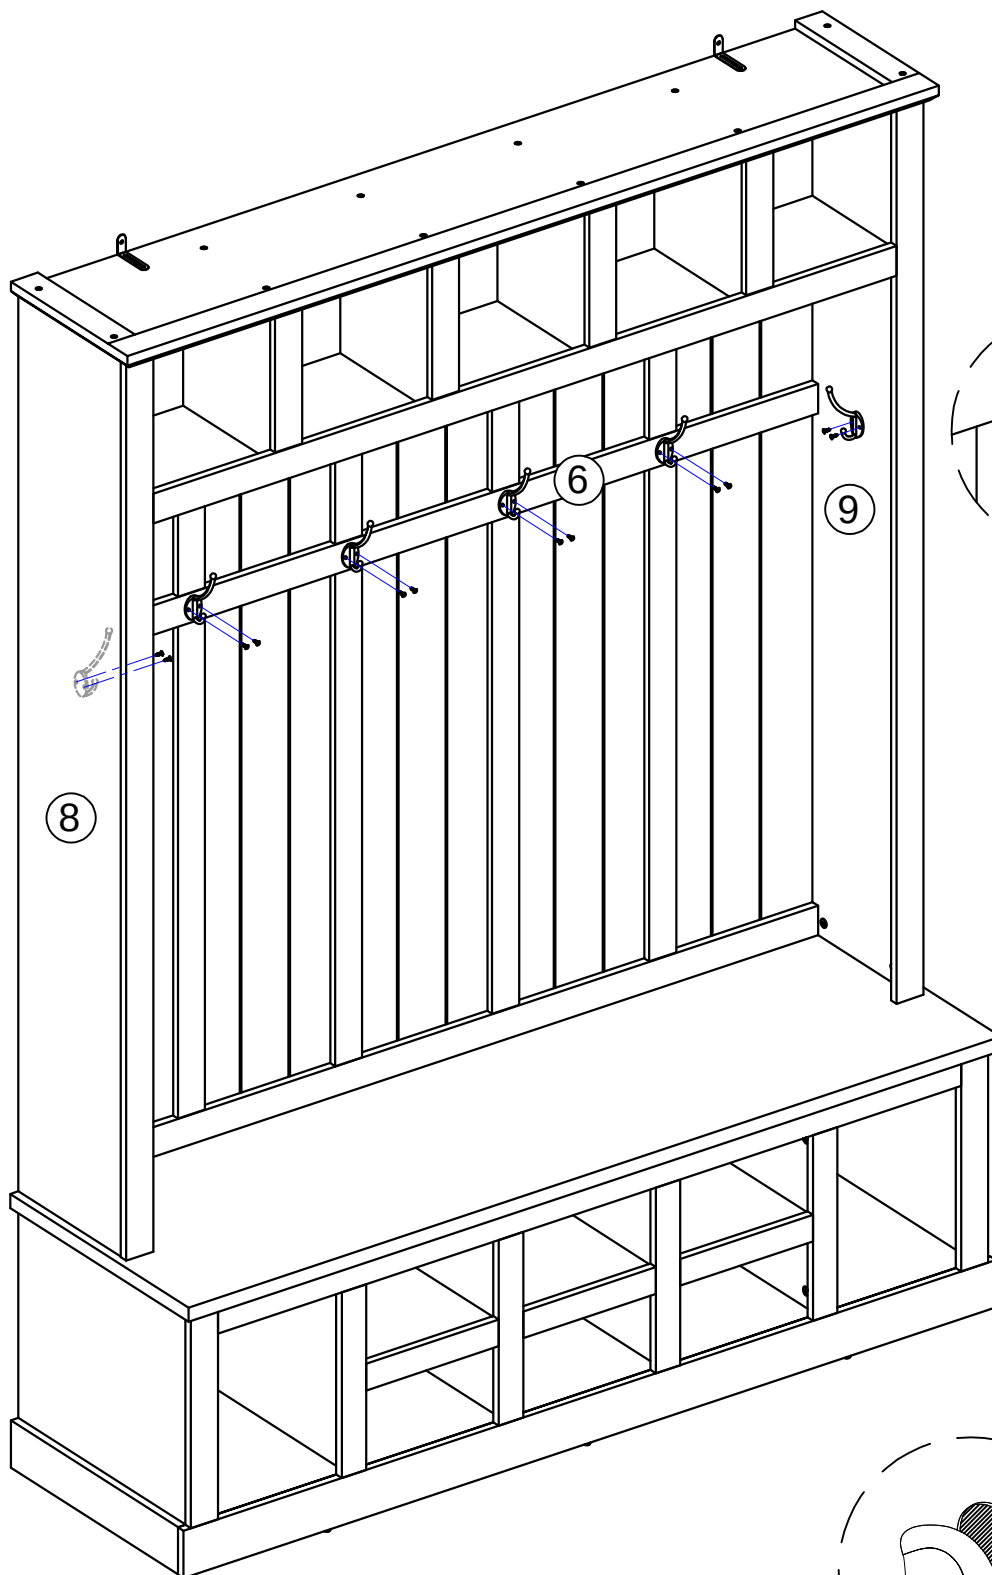

Use Perfect Sticker (M) to cover the Camlock's holes on the all position we can see !

G	x12	H	x6	M	x54
					
M3x14mm					

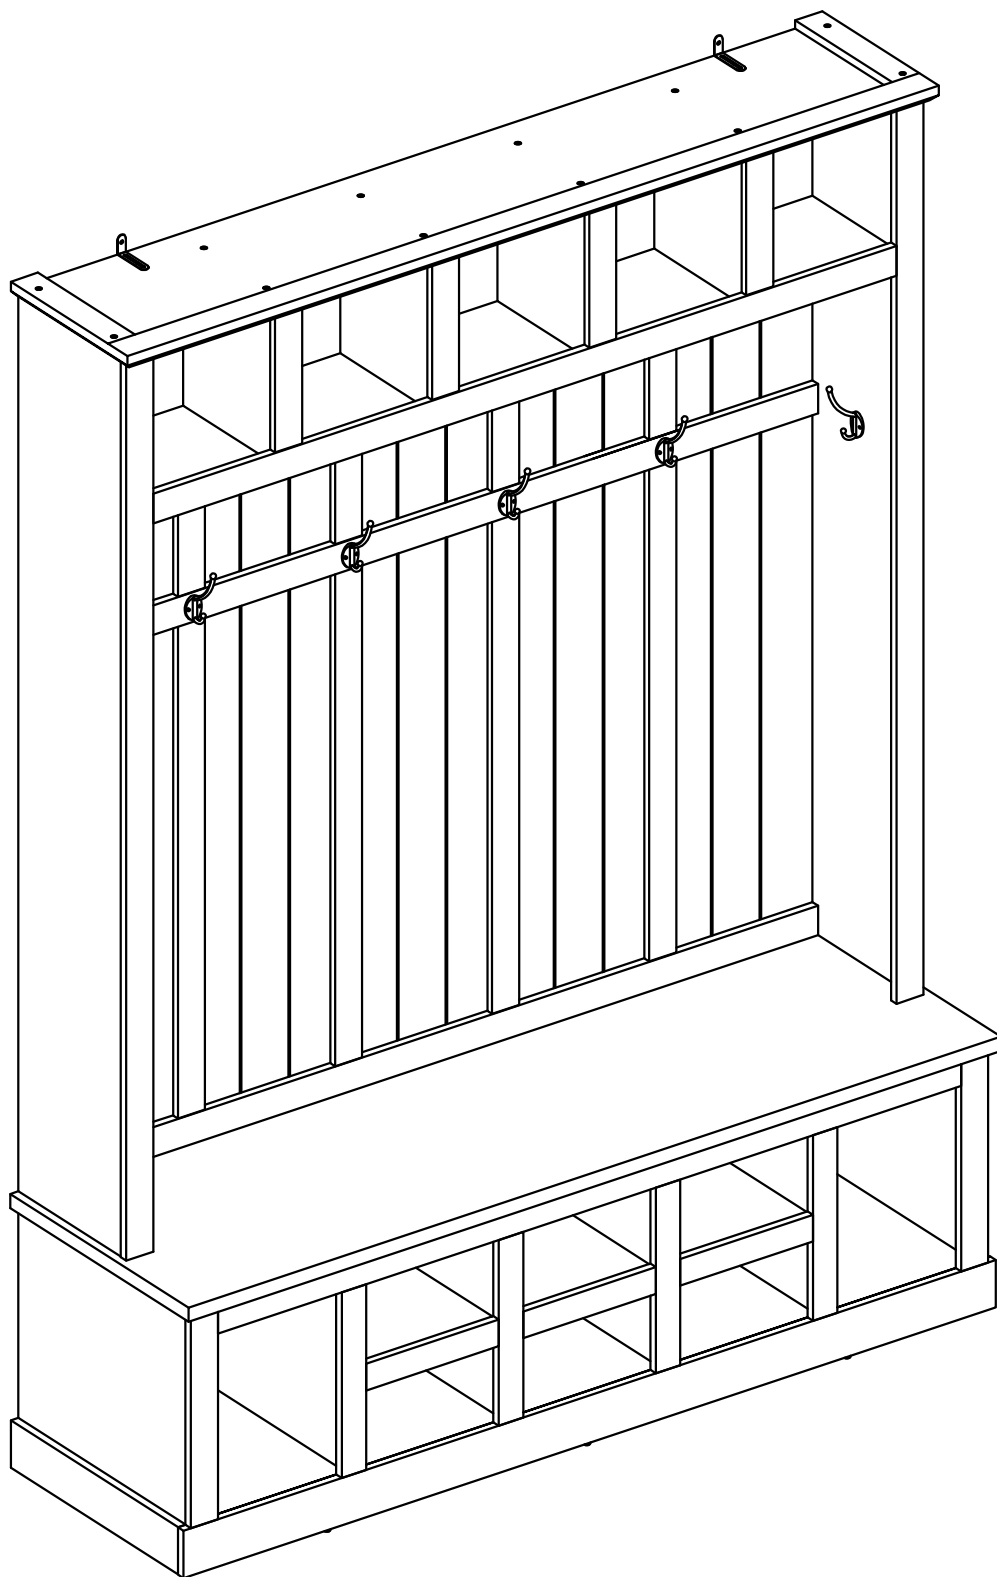

FINISH