


INSTALLATION INSTRUCTIONS

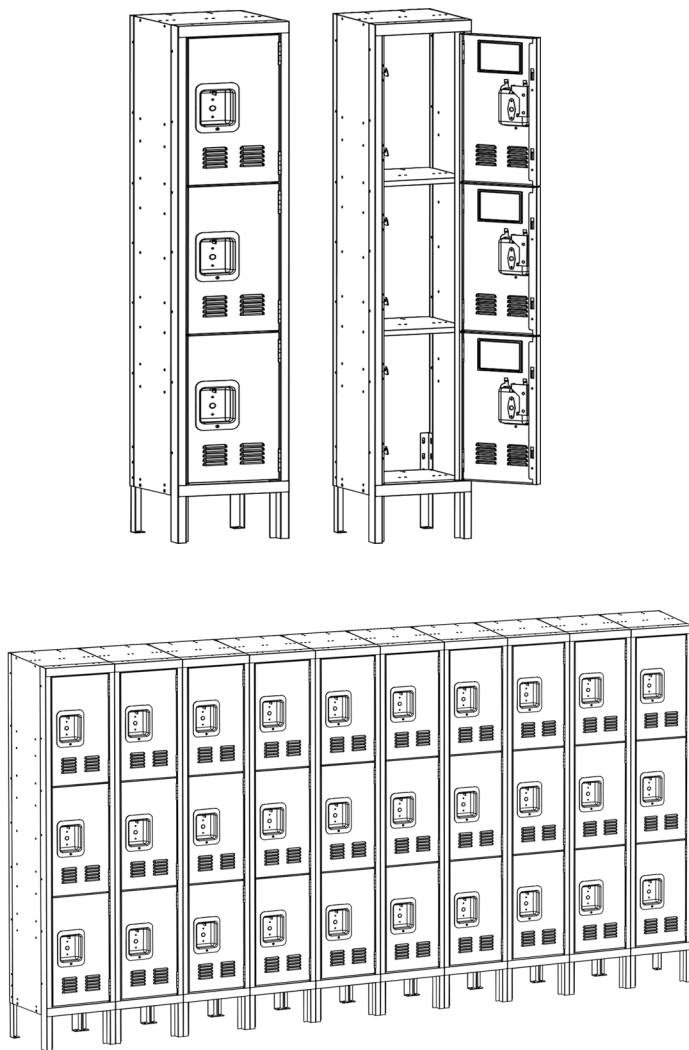

**This 12" Wide Triple Tier Standard Metal Locker
Can Be Used Alone Or With More Lockers To Create A Full Locker System.**


12" Wide Triple Tier Standard Metal Locker Installation Instructions







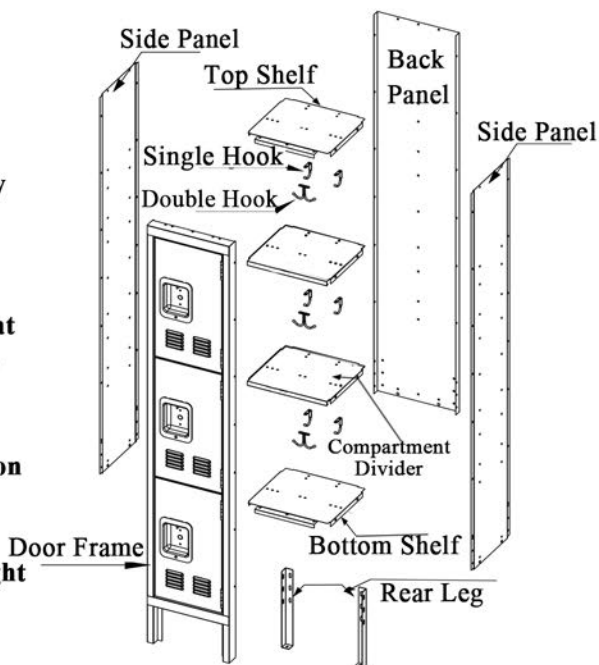


Thank you for selecting 12" wide triple tier standard metal locker. This triple tier metal locker can be used alone or with more lockers to create a full locker system. It is not only ideal for home lockers, but also can be used as employee lockers, gym lockers, school lockers. This is the perfect locker for you!

If there are problems related to product quality such as missing accessories, panel bending, or assembly problems, you can contact us by email, and we will help you solve the problem. (tongyangcabinet@163.com)

NOTE:

- Please read the complete assembly instructions carefully before attempting to assemble the lockers.
- Check the materials to be sure that they are correct for the job and that there is no damage.
- The lockers should be assembled on a flat surface.
- Refer to the illustration on the right to




					
Screws	Nuts	Single Hook	Double Hook	Mirror	Screwdriver
89 PCS	89 PCS	6 PCS	3 PC	3 PCS	1 PC
					
Gloves	Top/Bottom Shelf		Compartment Divider		
1 PAIR	2 PCS		2 PCS		

12" Wide Triple Tier Standard Metal Locker Installation Instructions


Step 1:

Attach back panel with top shelf and bottom shelf.
Insert screws and nuts and tighten them.

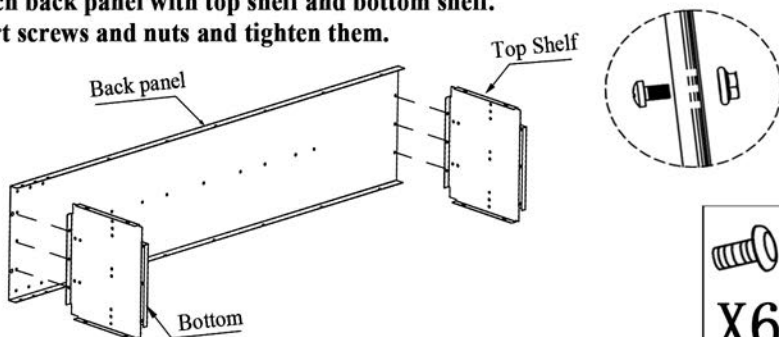


Step 2:

Attach double hook and single hook
to compartment divider and top panel.
Insert screws and nuts and tighten them.

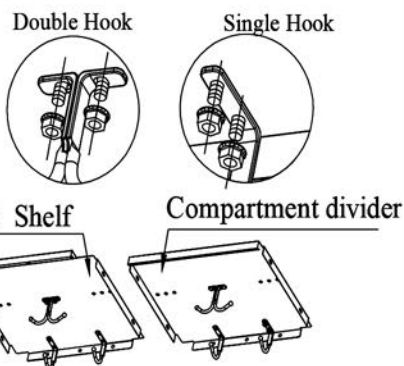

Step 3:

Attach compartment divider to back panel.
Insert screws and nuts and tighten them.

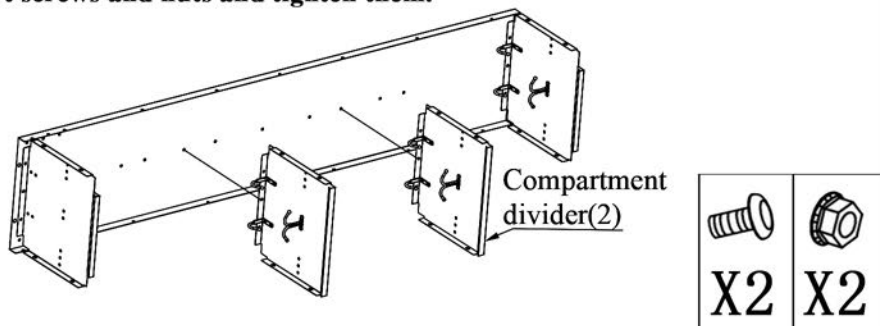

12" Wide Triple Tier Standard Metal Locker Installation Instructions

Step 4 :


Attach the 2 side panel.

Insert screws and nuts and tighten them.



X28

X28

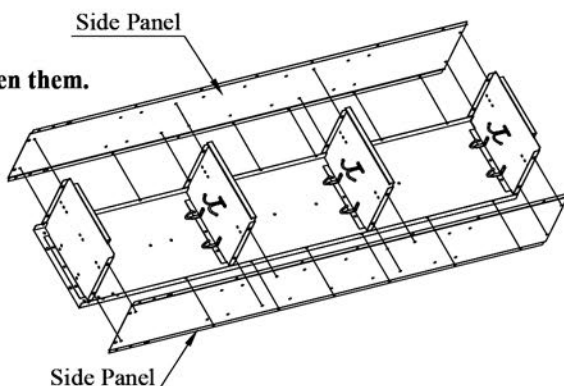

Step 5:



Install the rear leg.

Insert screws and nuts and tighten them.



X12

X12

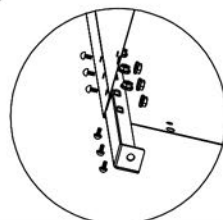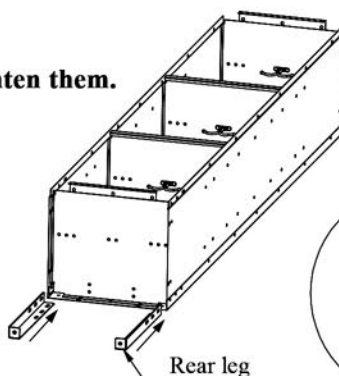

Step 6:

Attach door frame.

Insert screws into left and right side of door frame.



X18

X18

