

Instruction Manual

GD10


1. Use the hole locator to set the screw holes for the pipe sleeves. Ensure the hole locator stays level.



2. Loosen the screws of the pipe sleeves and remove the round blocks. Install the round blocks on the wall according to the hole locator.

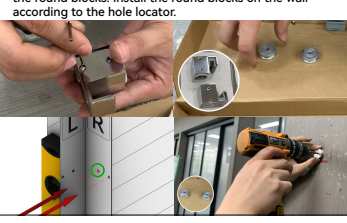


3. Remove the lids from the upper track and place the pipe sleeves onto the upper track.

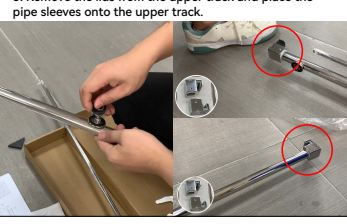

4. Install pipe sleeves onto the round blocks. Tighten the screws onto the pipe sleeves.




5. Install the wall clip and the buffer rubber strip onto the glass.

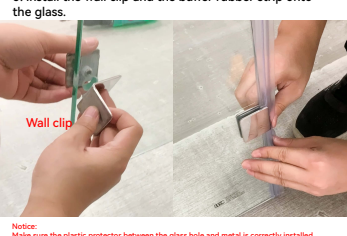


Notice:
Make sure the plastic protector between the glass hole and metal is correctly installed.
Glass shouldn't touch the metal parts at any time.


6. Ensure the fixed glass is vertically level. Install it to the upper track and tighten the lids back. Tighten the screw to the wall clip.

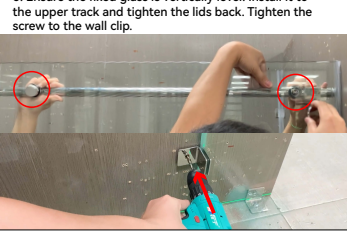

7. Install the lower slider and tighten the screw to the floor. Install the water blocking material horizontally.

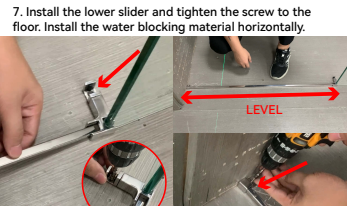

8. Loosen the lids and the screws of the pulleys. Install the pulleys on the glass and tighten the screws.

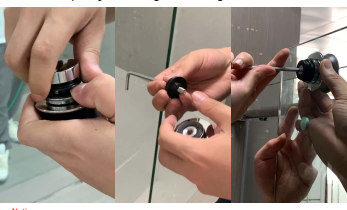

Notice:
Make sure the plastic protector between the glass hole and metal is correctly installed.
Glass shouldn't touch the metal parts at any time.


9. Install the glass on the lower slider and hang the glass on the upper track.




10. Install the pulleys in the lower holes and tighten the lids back.



Use the provided hex key to adjust off-center rollers for out-of-plumb walls, ensuring the best fit in your space.

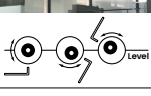


11. Loosen the lids of the pull and install them to the glass. Tighten the lids back to the pull.

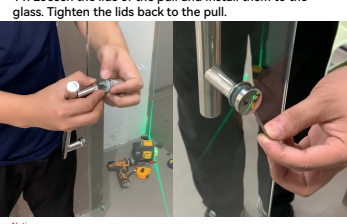

Notice:
Make sure the plastic protector between the glass hole and metal is correctly installed.
Glass shouldn't touch the metal parts at any time.

12. Install the buffer rubber strips on both sides of the movable glass, and assemble the F water blocking to the fixed glass. Remove the excess strip.

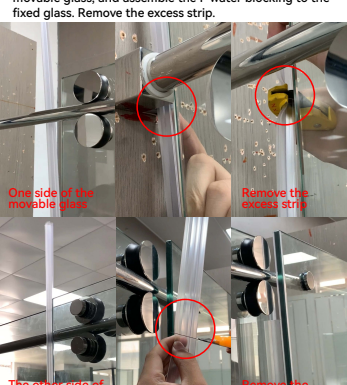

FINISH