

ASSEMBLY INSTRUCTION

MODEL : 4 DOOR WARDROBE
SLATS FAN

Thanks you for purchasing this quality product. Be sure to lay all components on a soft and clean surface before assembly in order to avoid components from being scratched.


CAUTIONS :

1. Check contents against list for quantity.
2. Familiarize yourself with the components and hardware by reviewing the Assembly Instructions.
3. Do not over tightened the screws and bolts as it may damage the threads.

PAGE : 1 OF 12


NO	DESCRIPTION	QTY
A	MINIFIX 16MM	46
B	MINICAM 16MM	46
C	ALLEN KEY	1
D	DOWEL 8 X 30 MM	92
E	CAP WOOD SCREW M6 X 50 MM	12
F	CAP WOOD SCREW M6 X 70 MM	12
G	HANDLE KNOB 317	6
H	SCREW HANDLE M3.5 X 24 MM	6
I	CSK M3.5 X 16 MM	104
J	L-BRACKET PLASTIC	12
K	CROME PIPE 19 MM DIM = 754 MM	1
L	V TOP	2
M	PLASTIC STOPPER 35MM	4
N	PAN HEAD 4 X 20MM	8
O	CSK M3.5 X 25 MM	4

P	DRAWER SLIDE CI DS 0912 - WH - AZUM - 300 MM	2 SET
Q	CSK M3.5 X 12 MM	6
R	CSK M3 X 12 MM	24
S	DOOR MAGNET 5KG	4 SET
T	DRAWER STOPPER	2
U	NAIL LEG 5/8	8
V	NAIL	50
W	PVC-H = 3MM (1550MM)	1
X	PAN HEAD M3.5 X 16 MM	8
Y	HINGES	12
Z	CSK M4 X 38 MM	8
A1	CSK M4 X 25 MM	6

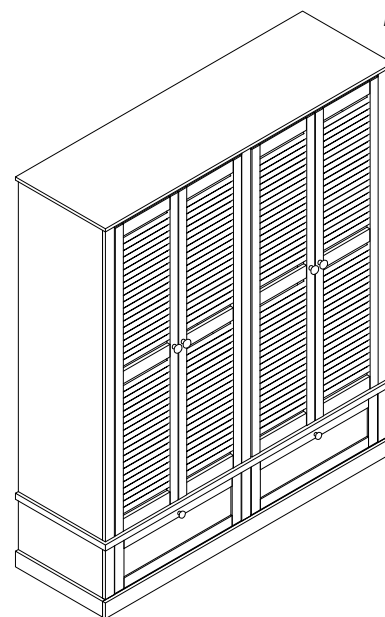


FULL SETUP

PARTLIST

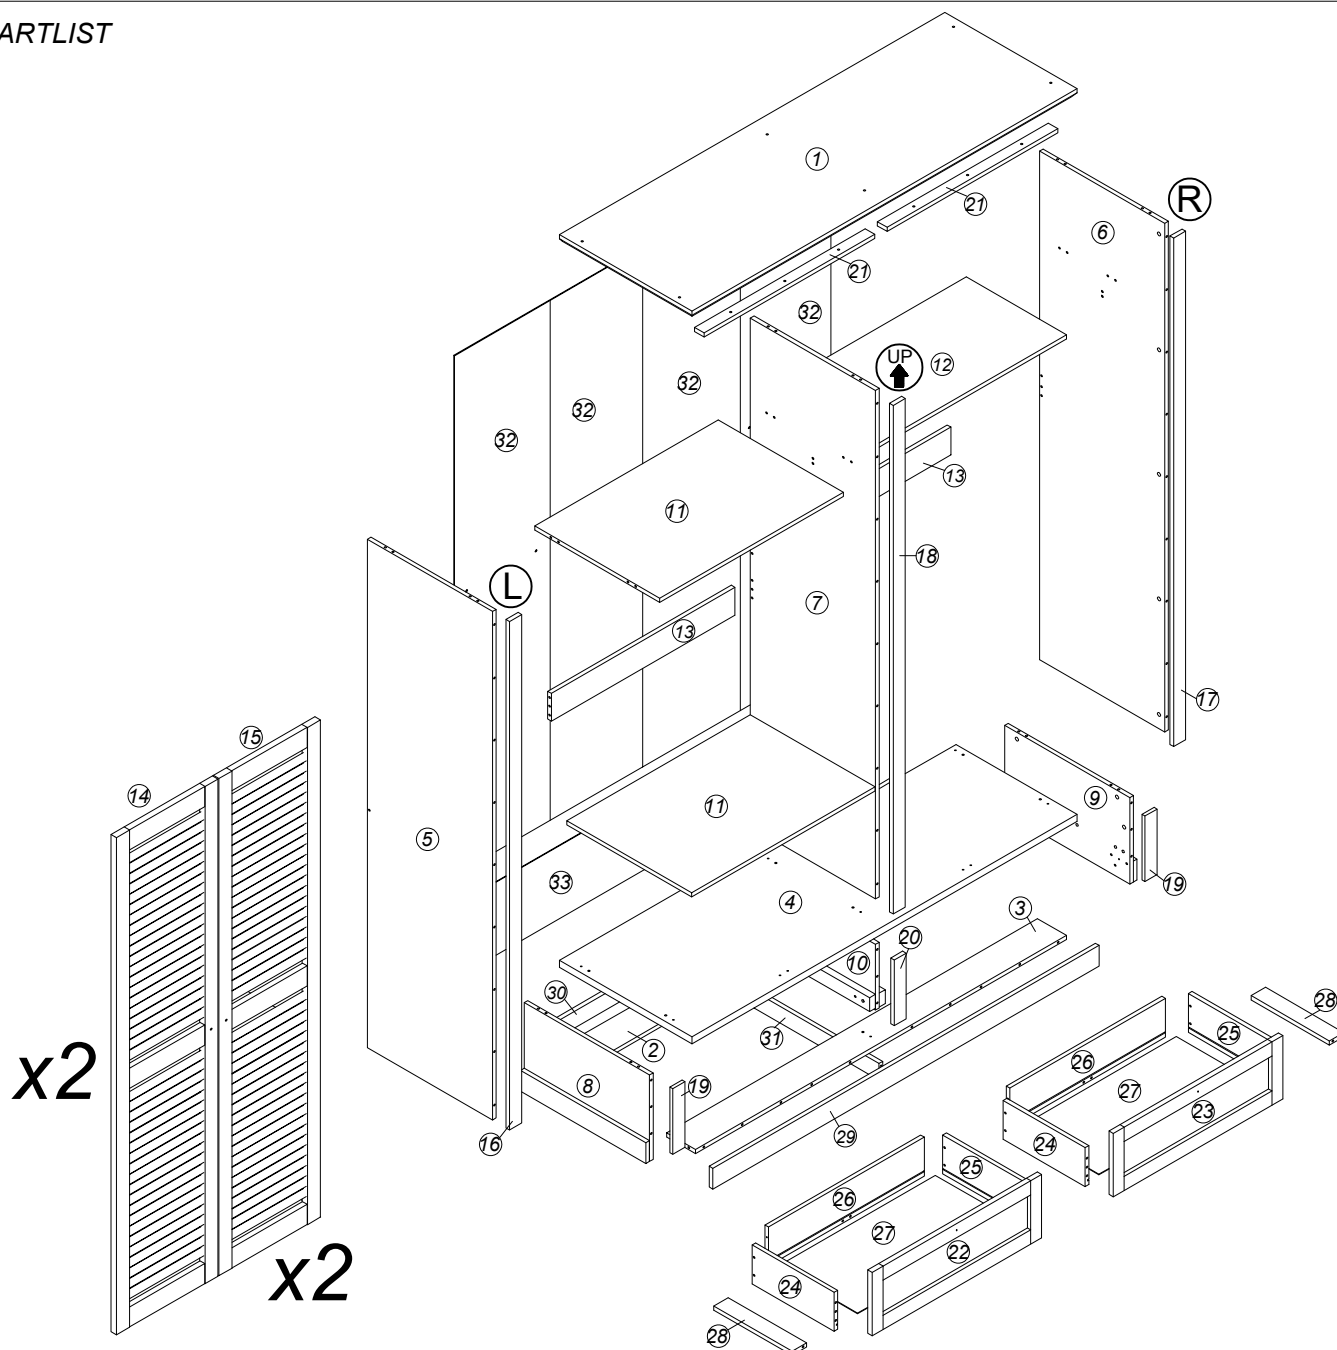


ASSEMBLY INSTRUCTION


STEP 1

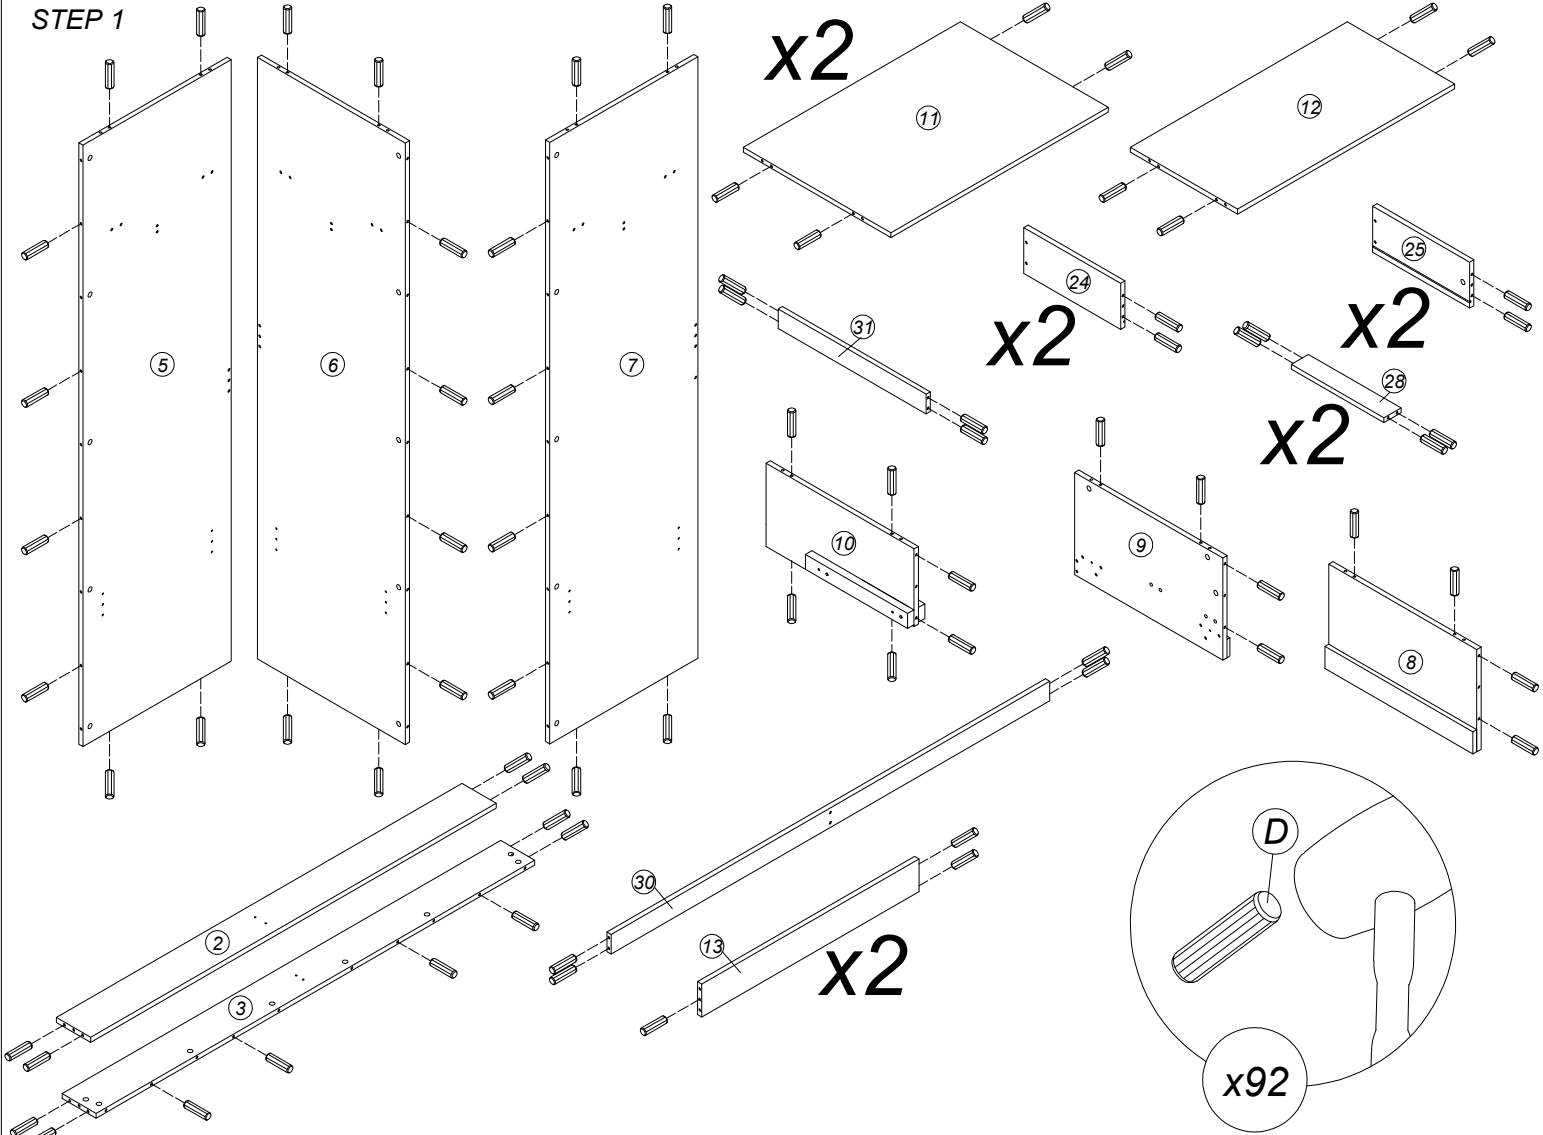

STEP 2

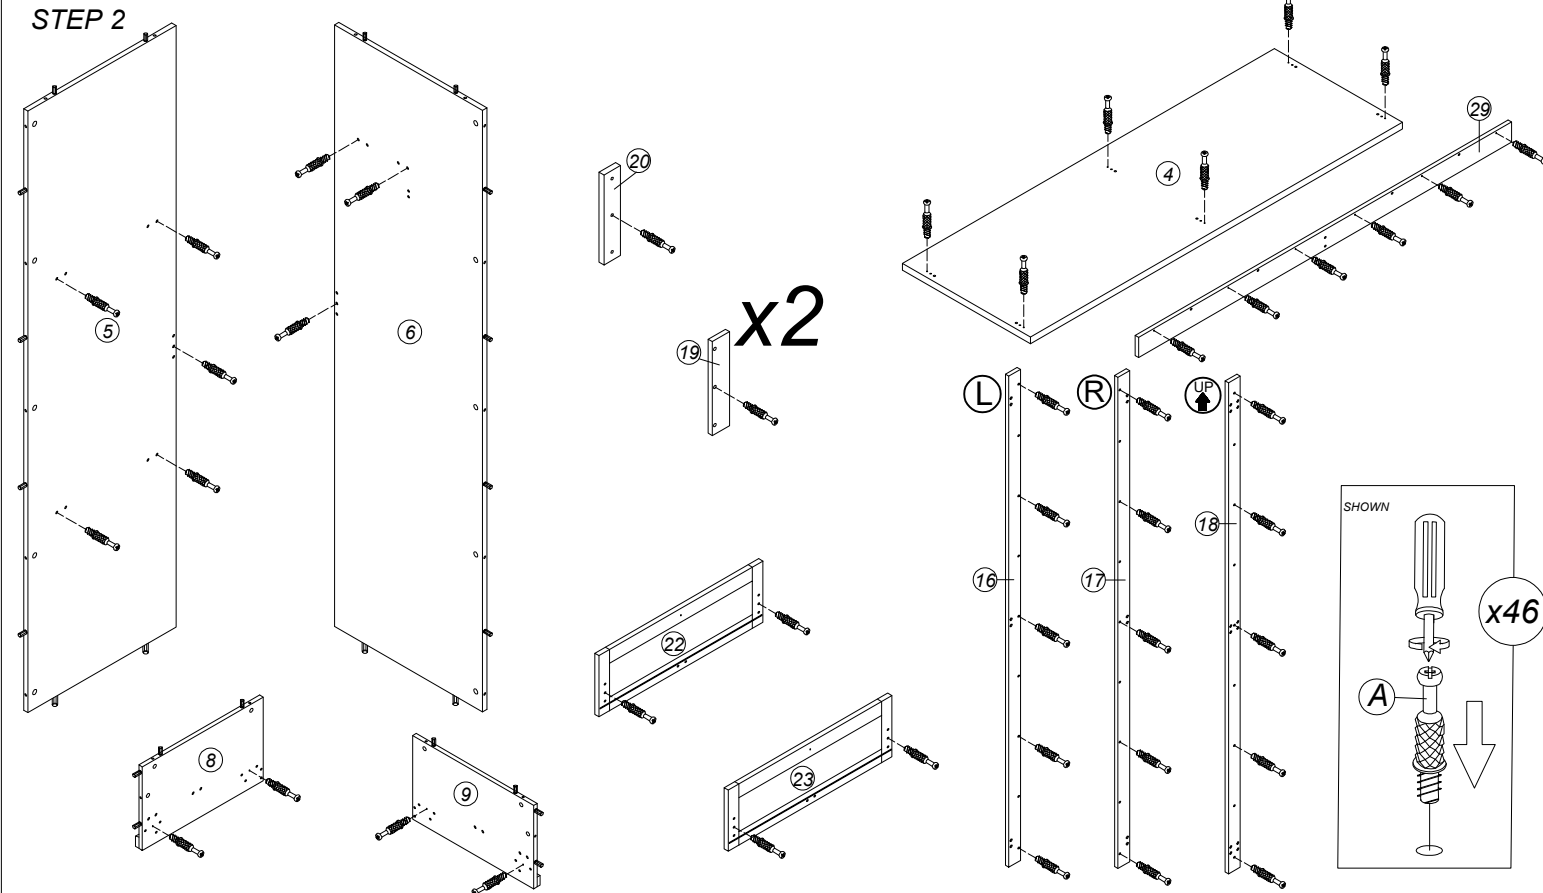


STEP 3

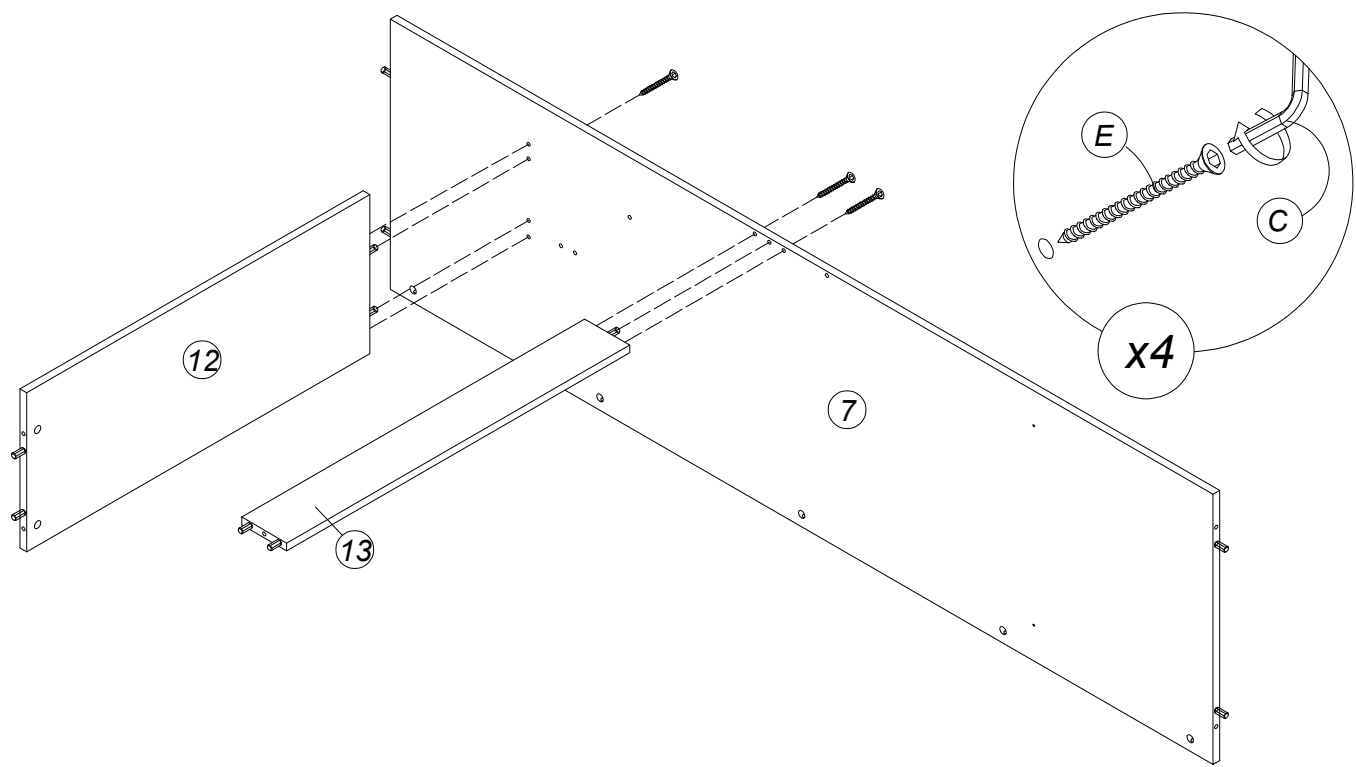


BACK VIEW

STEP 4

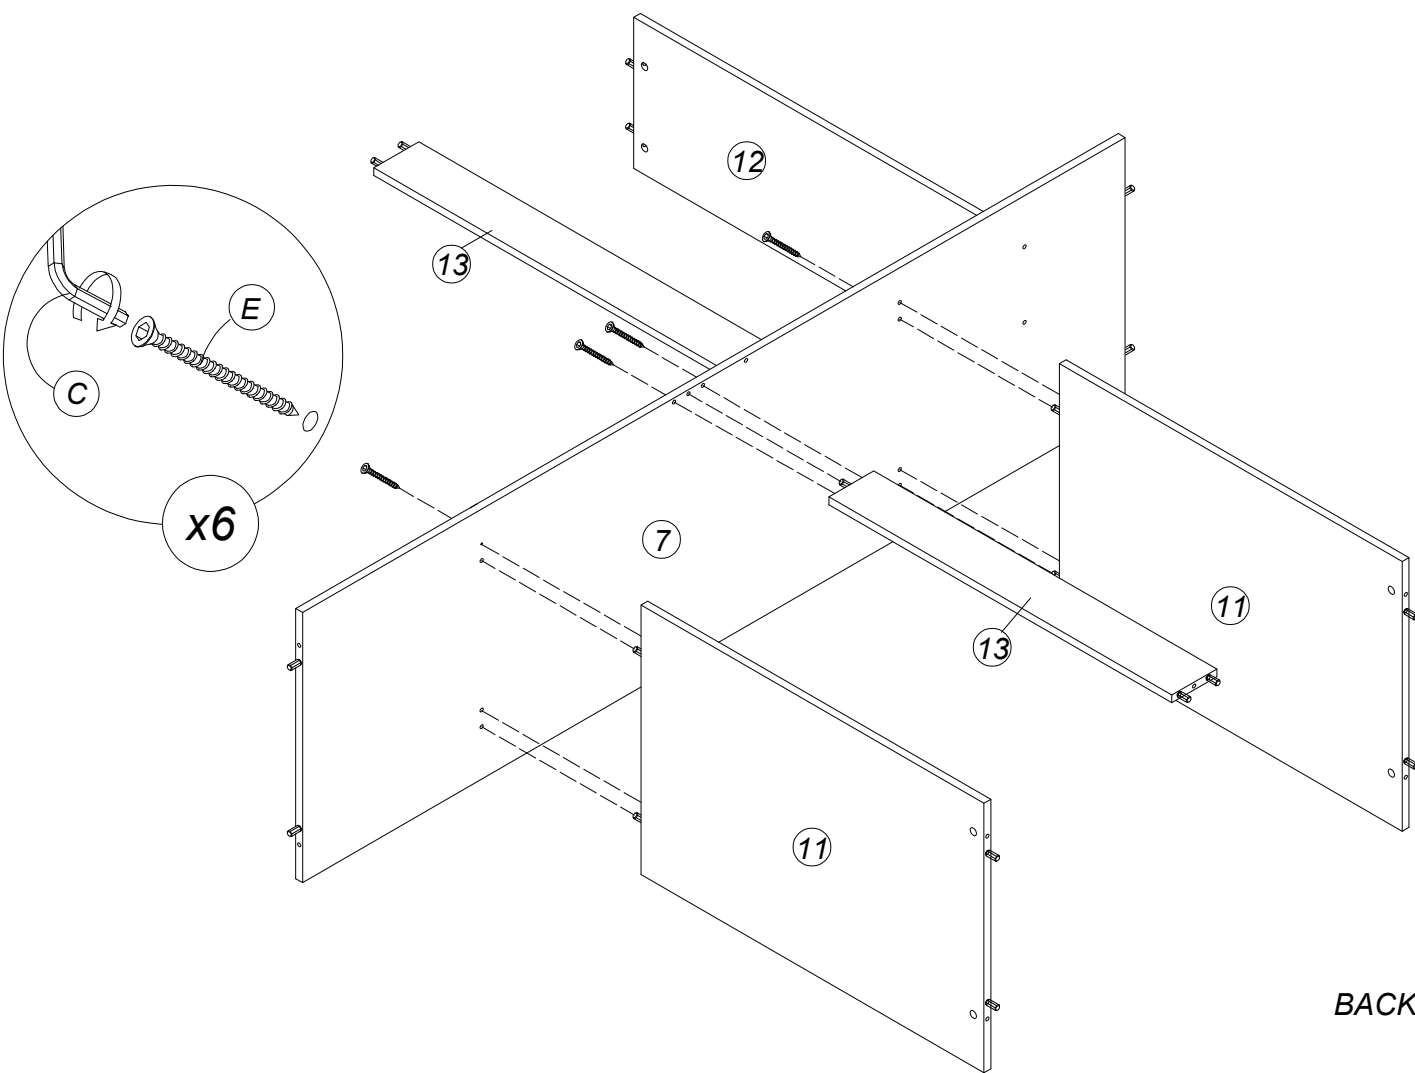


BACK VIEW


STEP 5

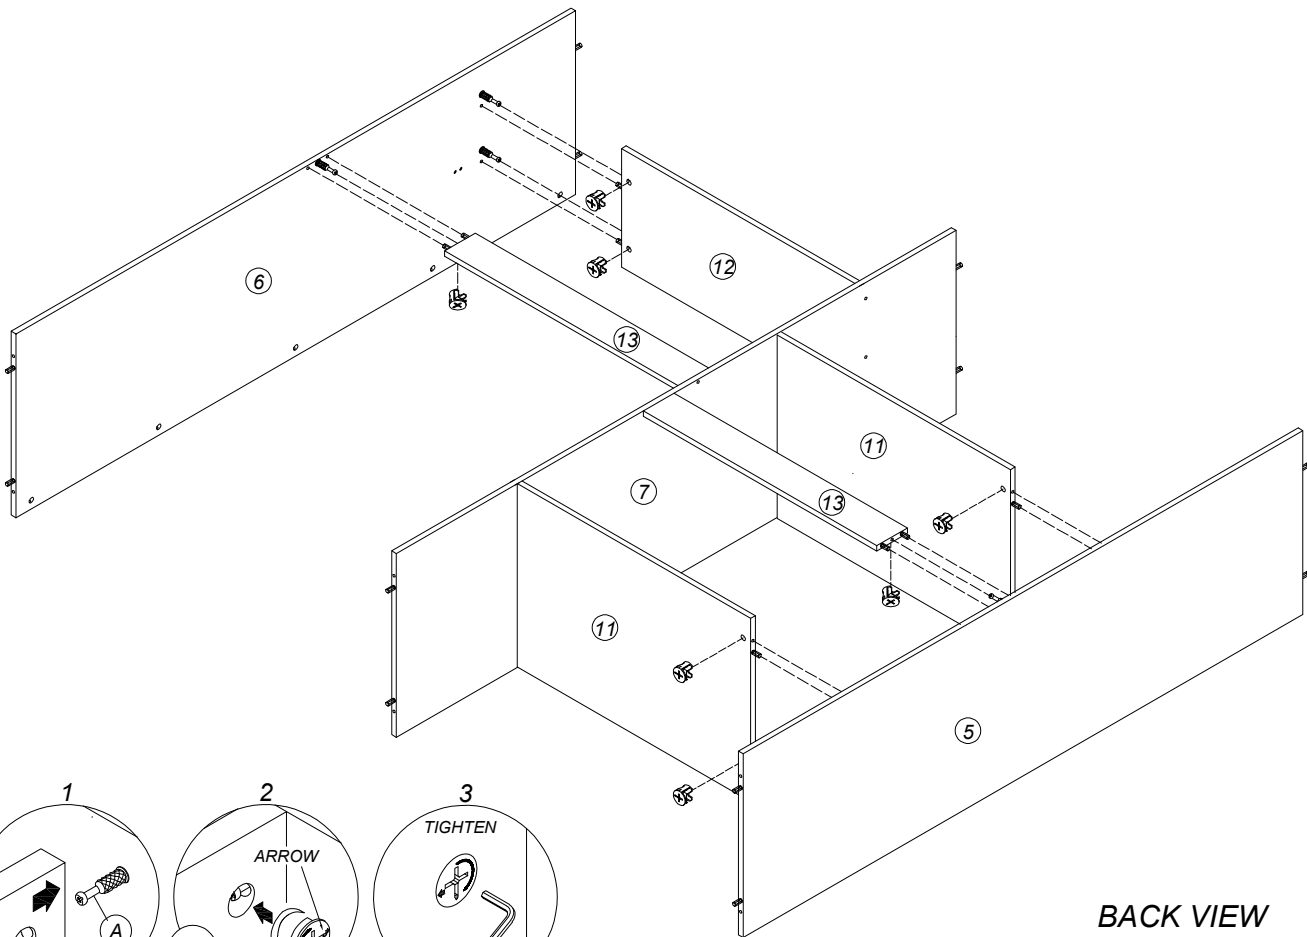


STEP 6

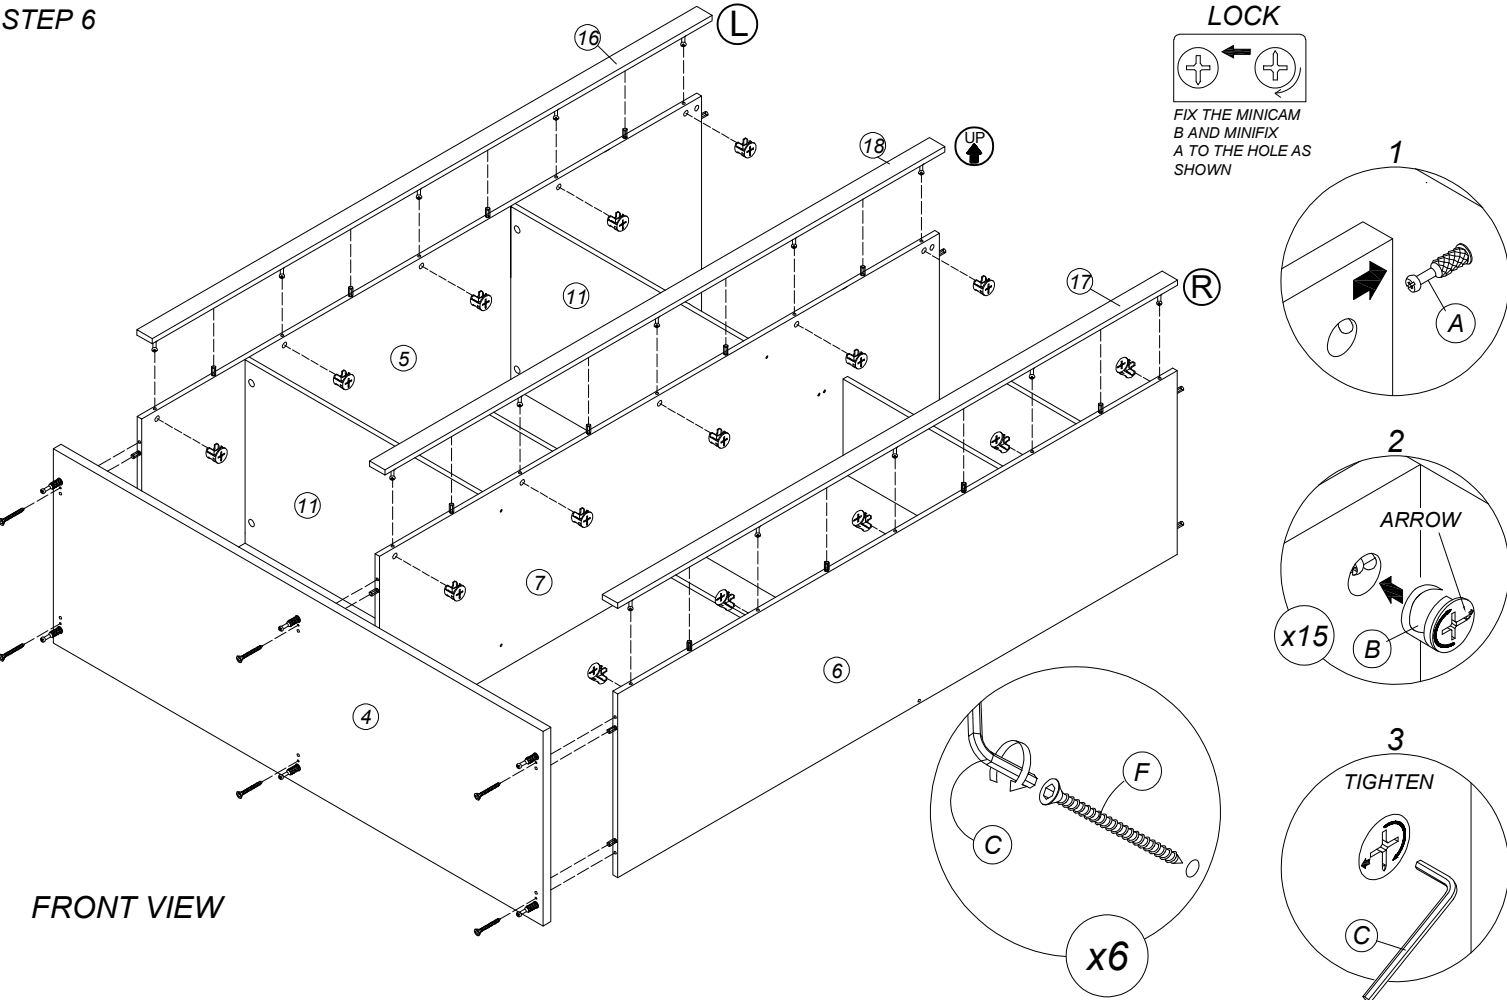


STEP 7

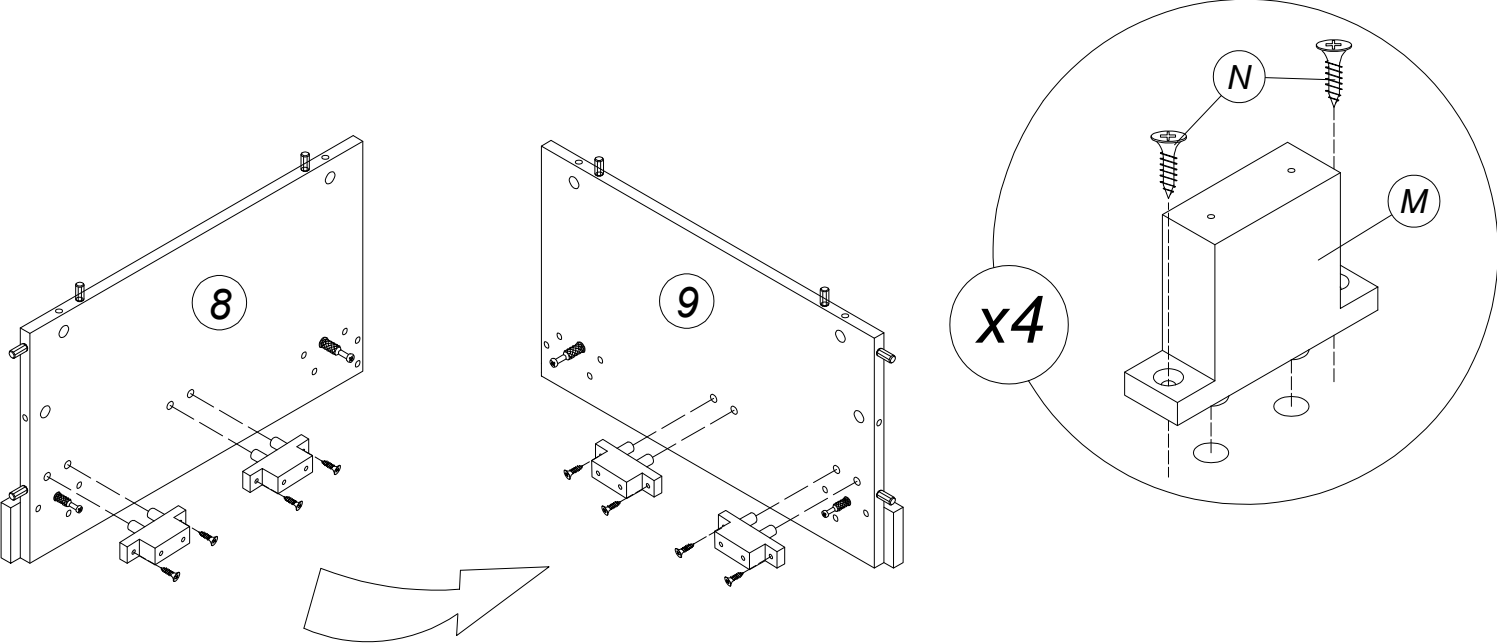


STEP 8

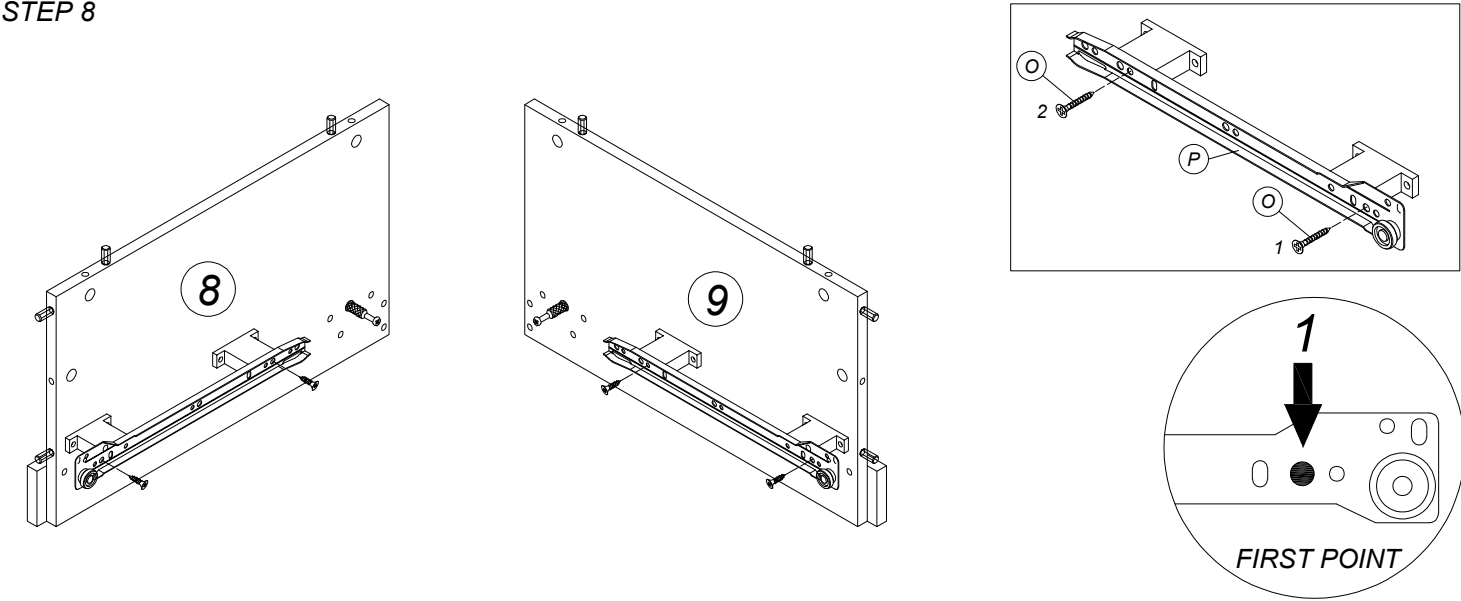


STEP 9

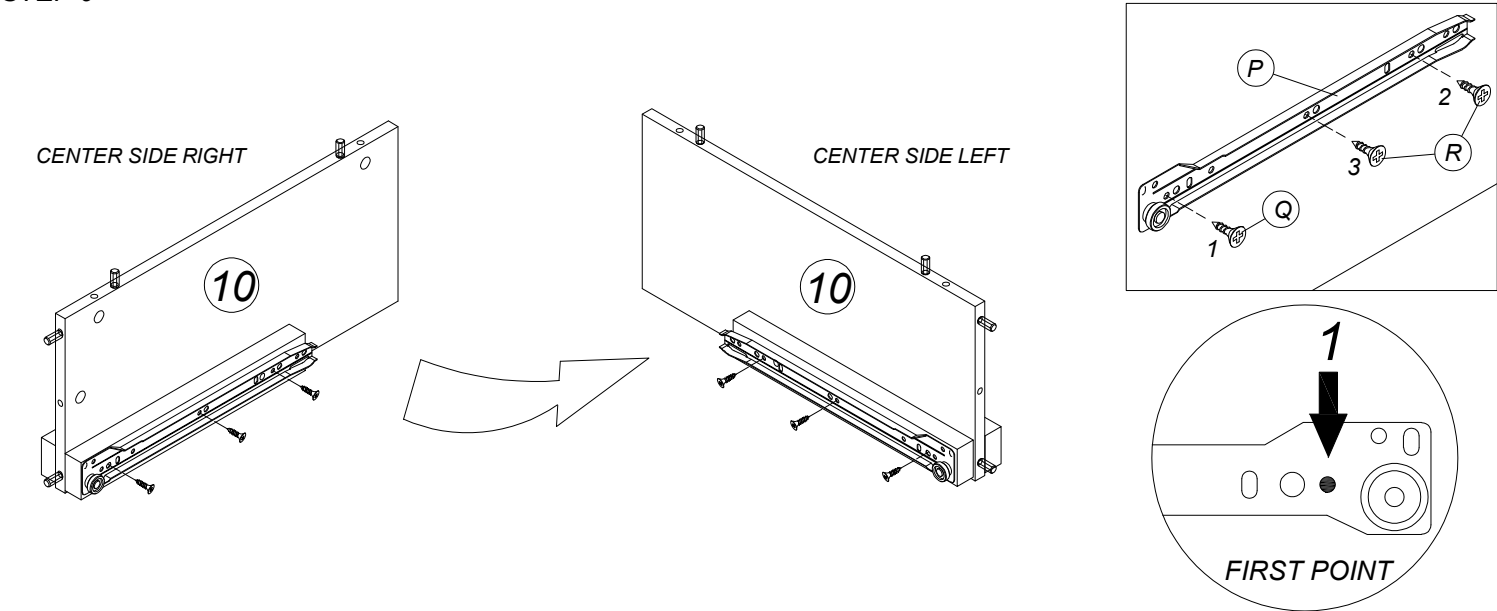

STEP 10

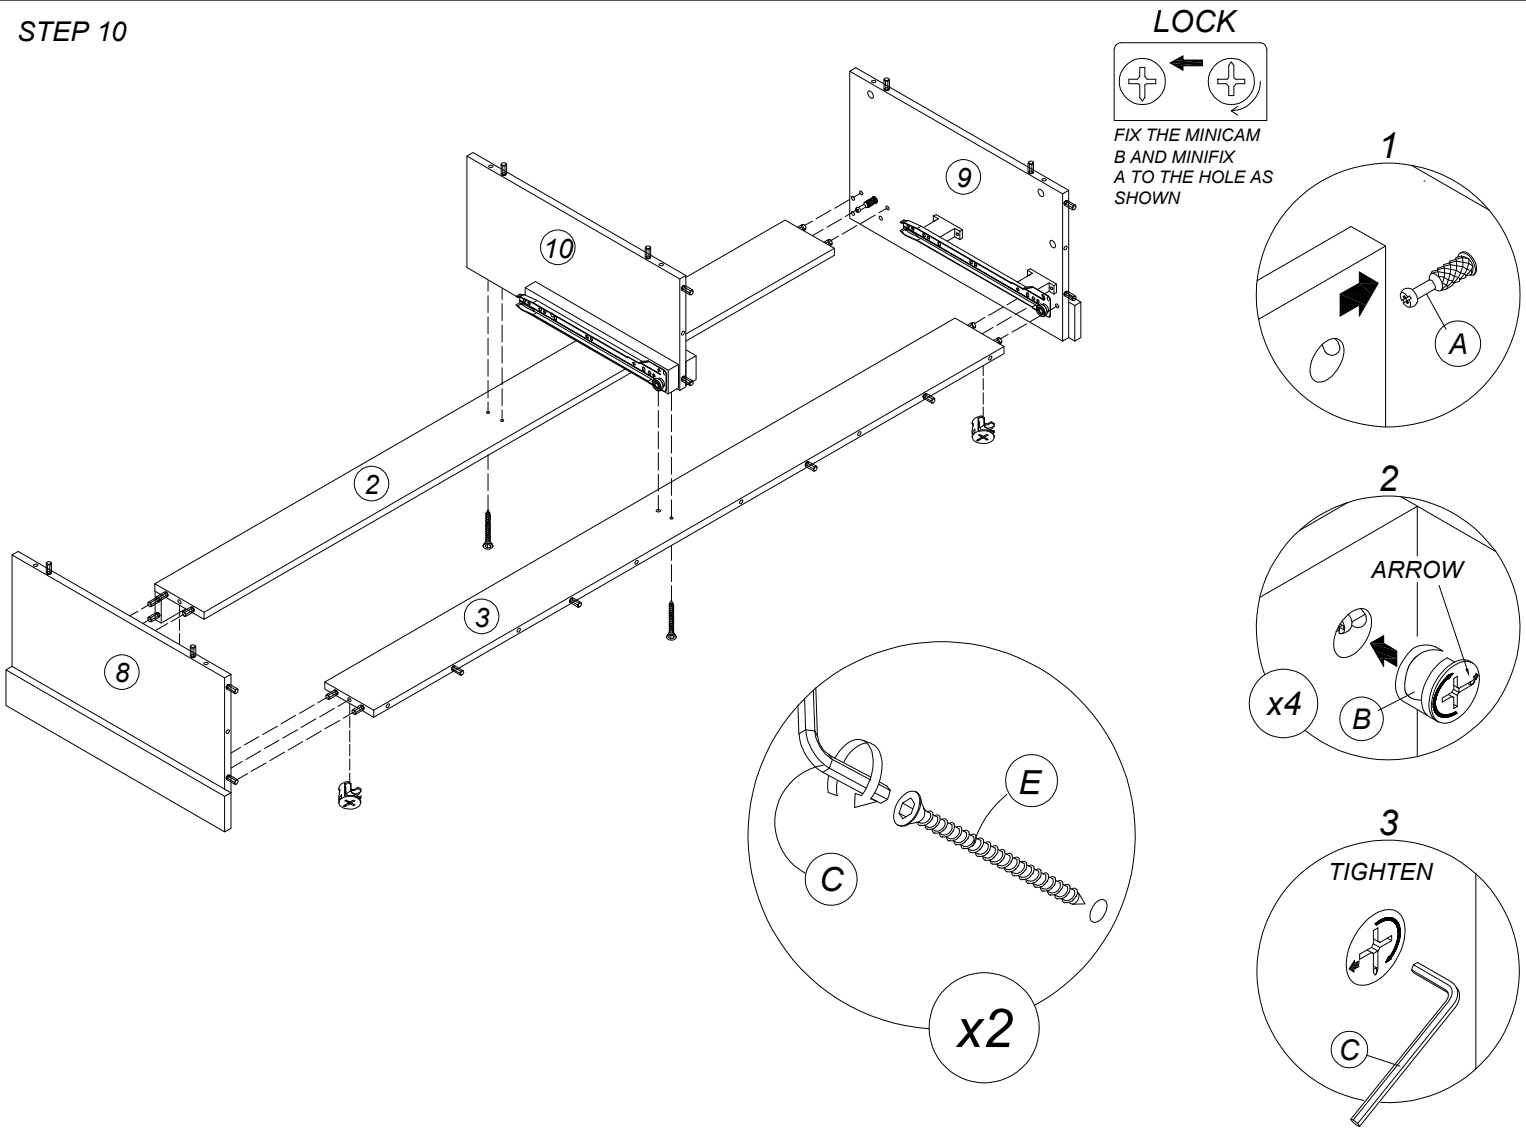


STEP 11

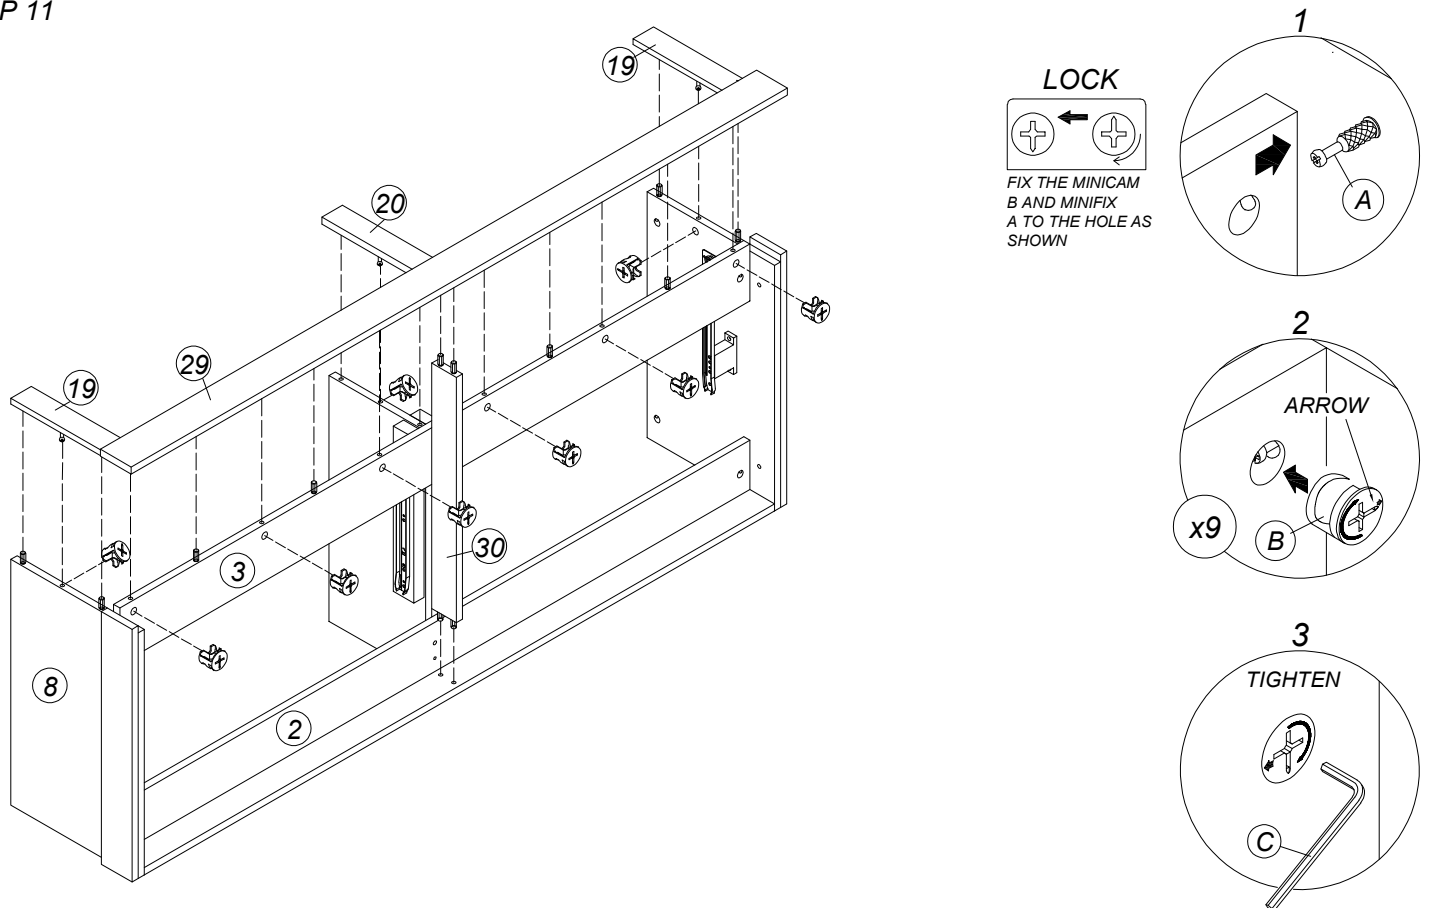


MODEL : 4 DOOR WARDROBE
SLATS FAN
PAGE : 7 OF 12

PAGE : 7 OF 12

STEP 12


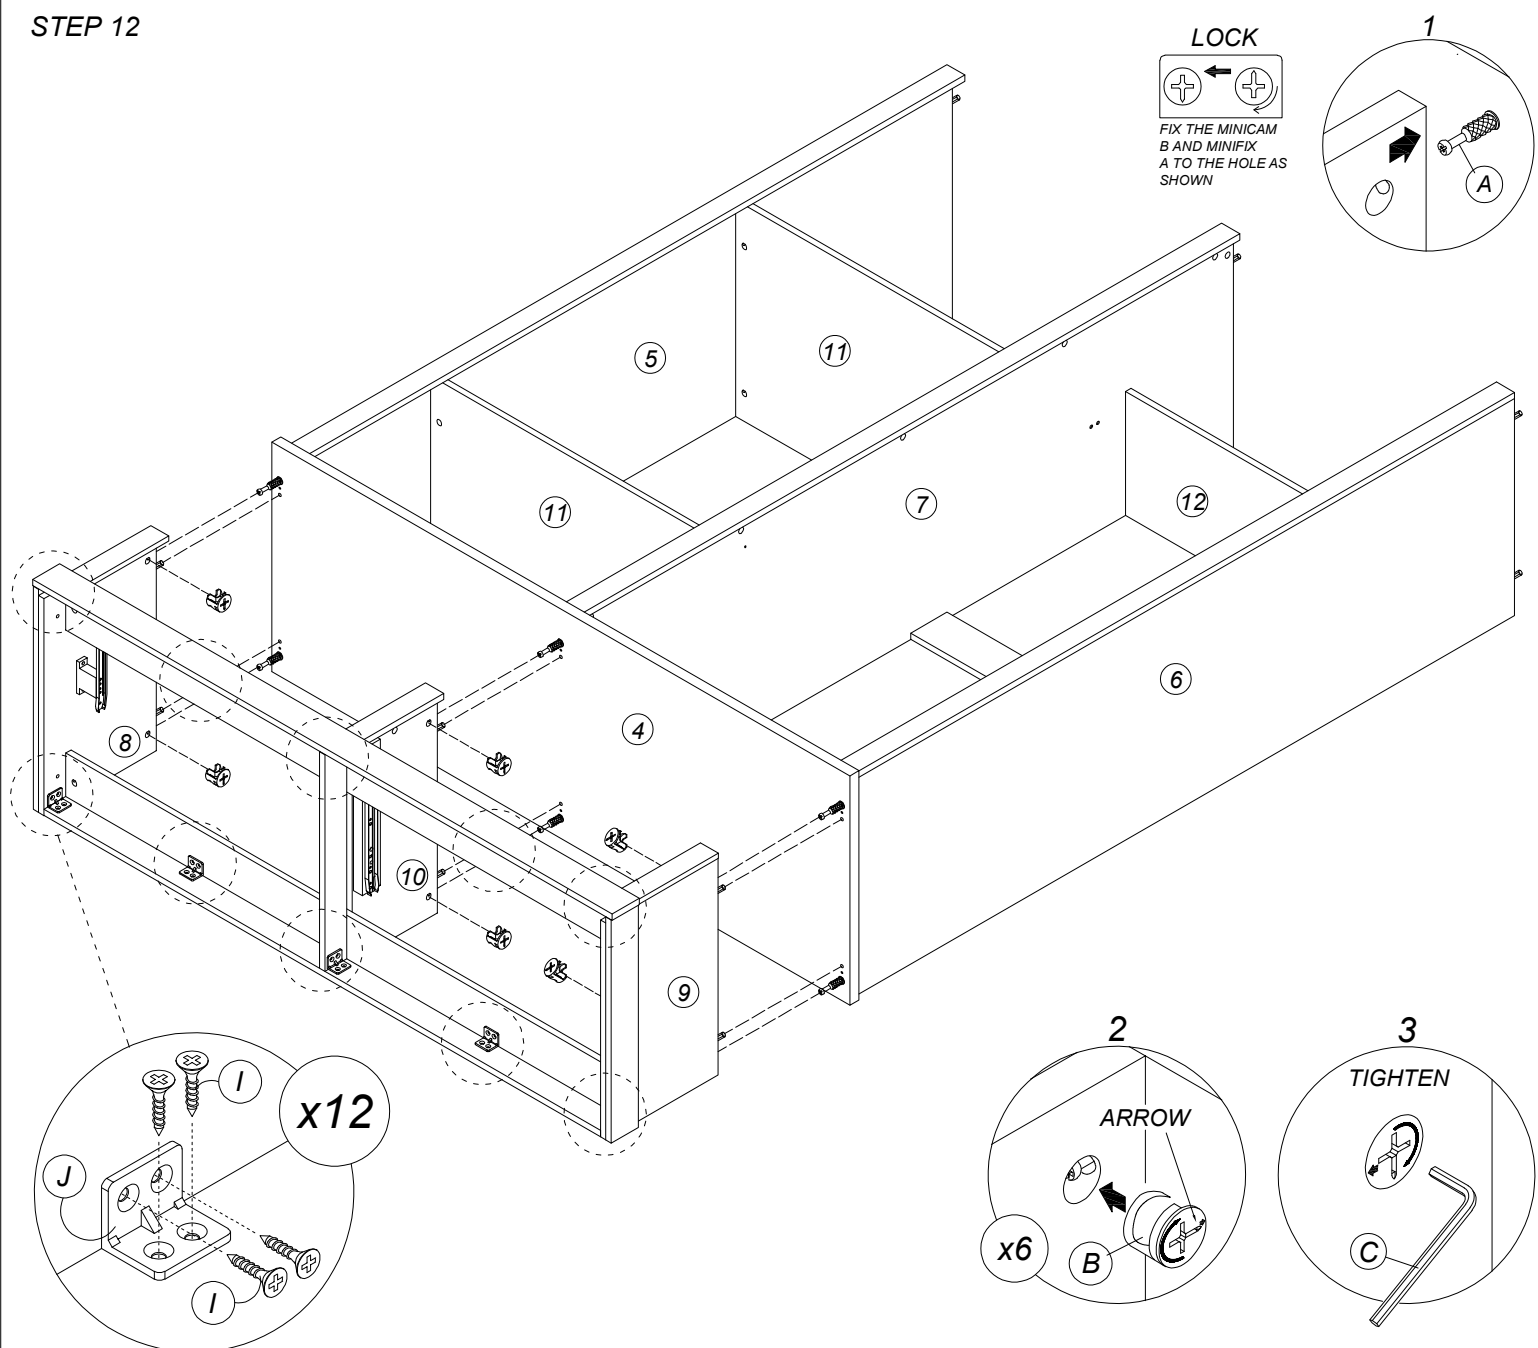


STEP 13

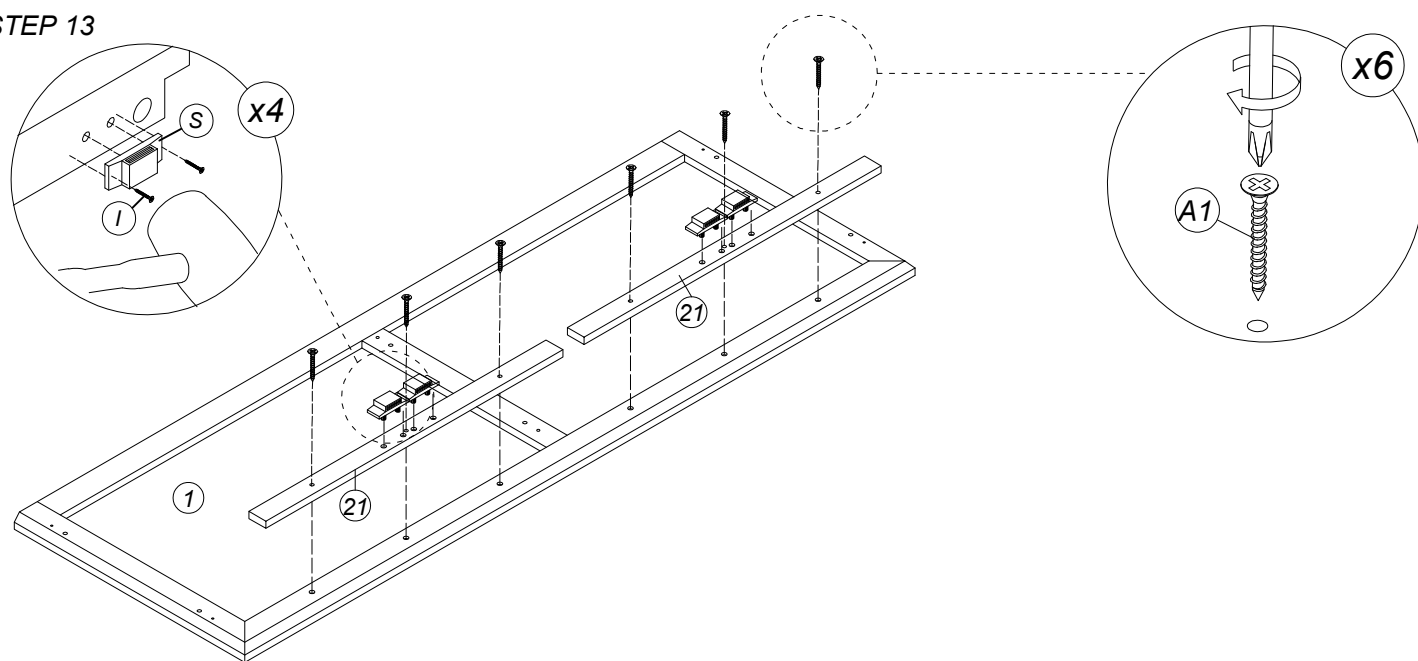


ASSEMBLY INSTRUCTION

STEP 14

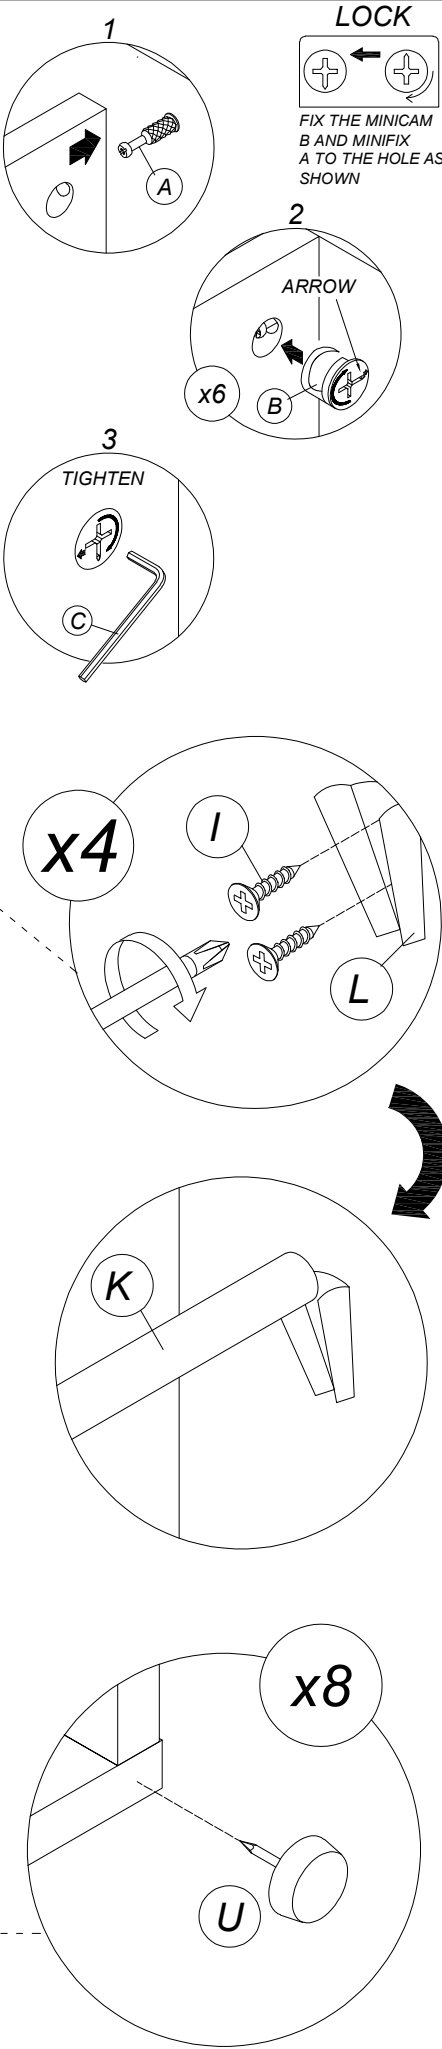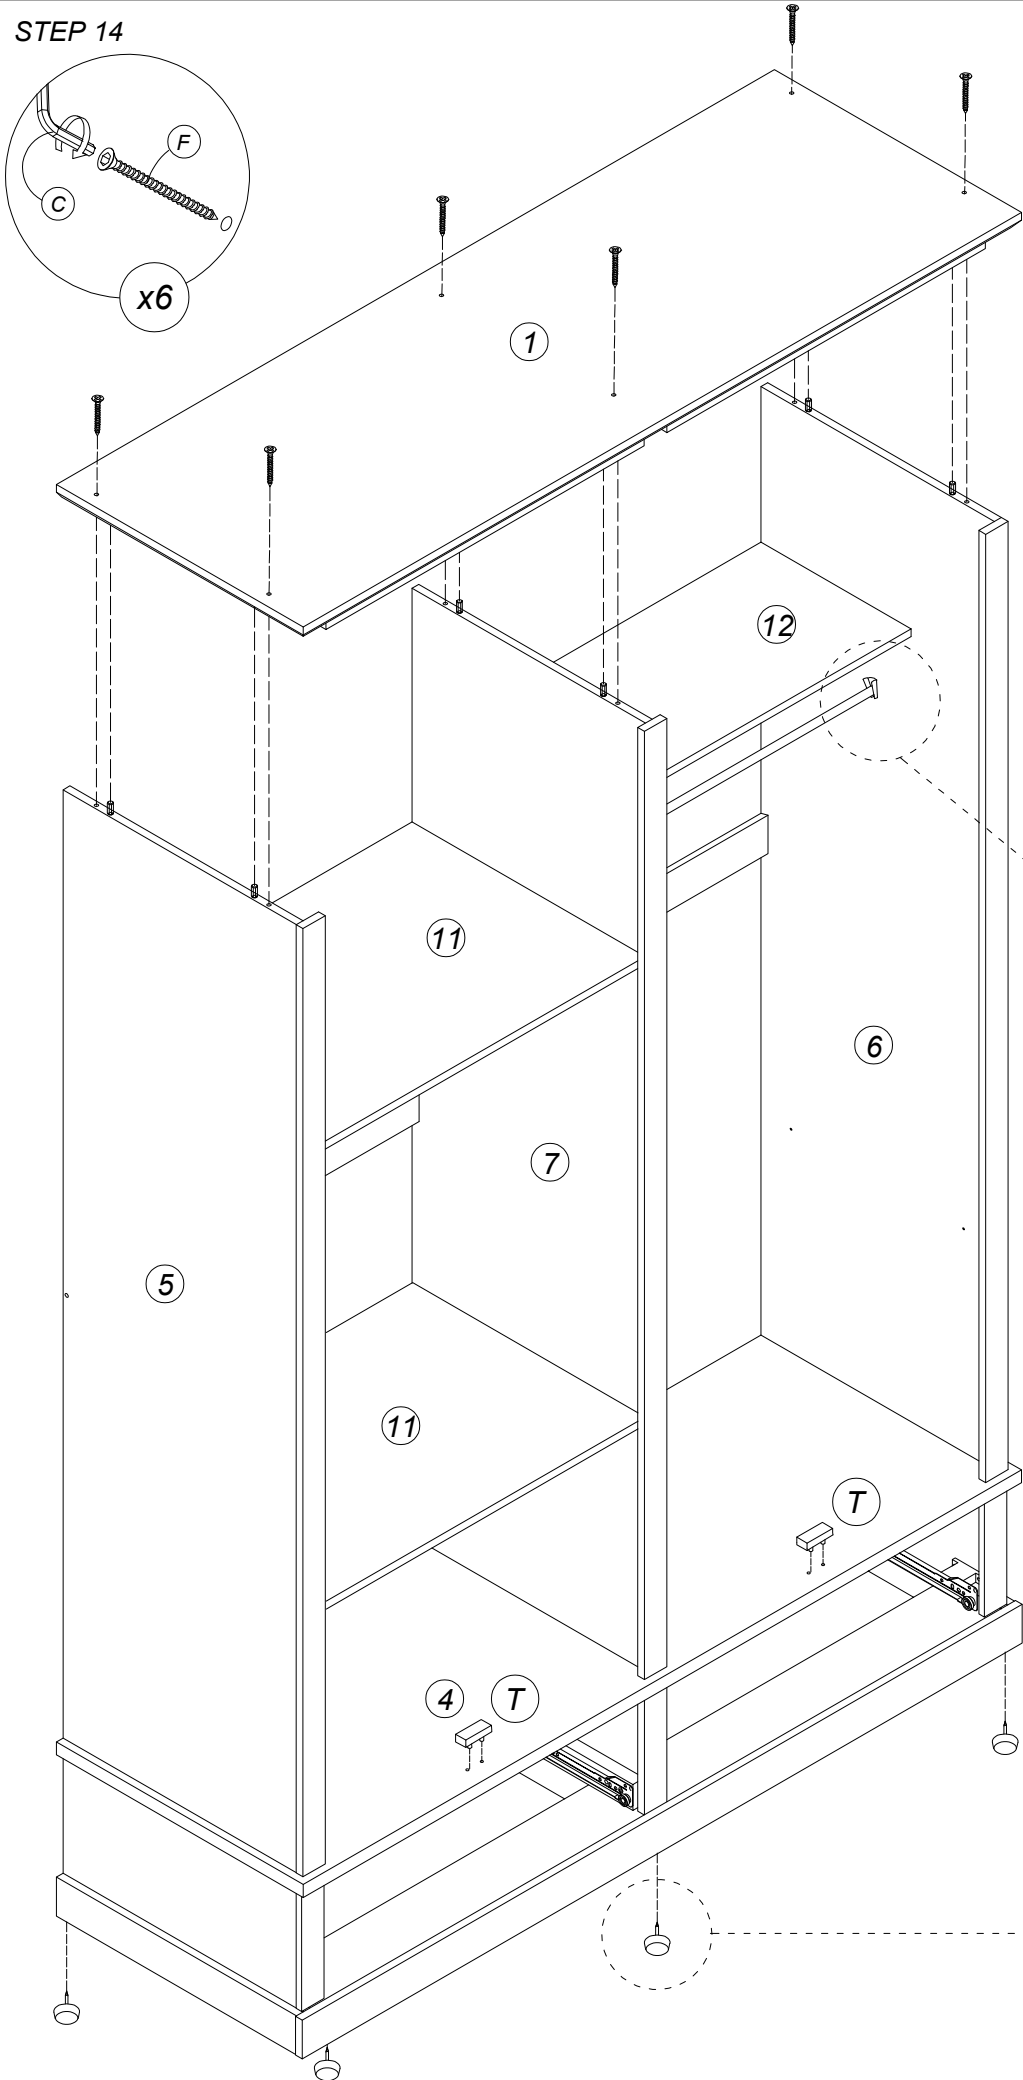


ASSEMBLY INSTRUCTION


STEP 15

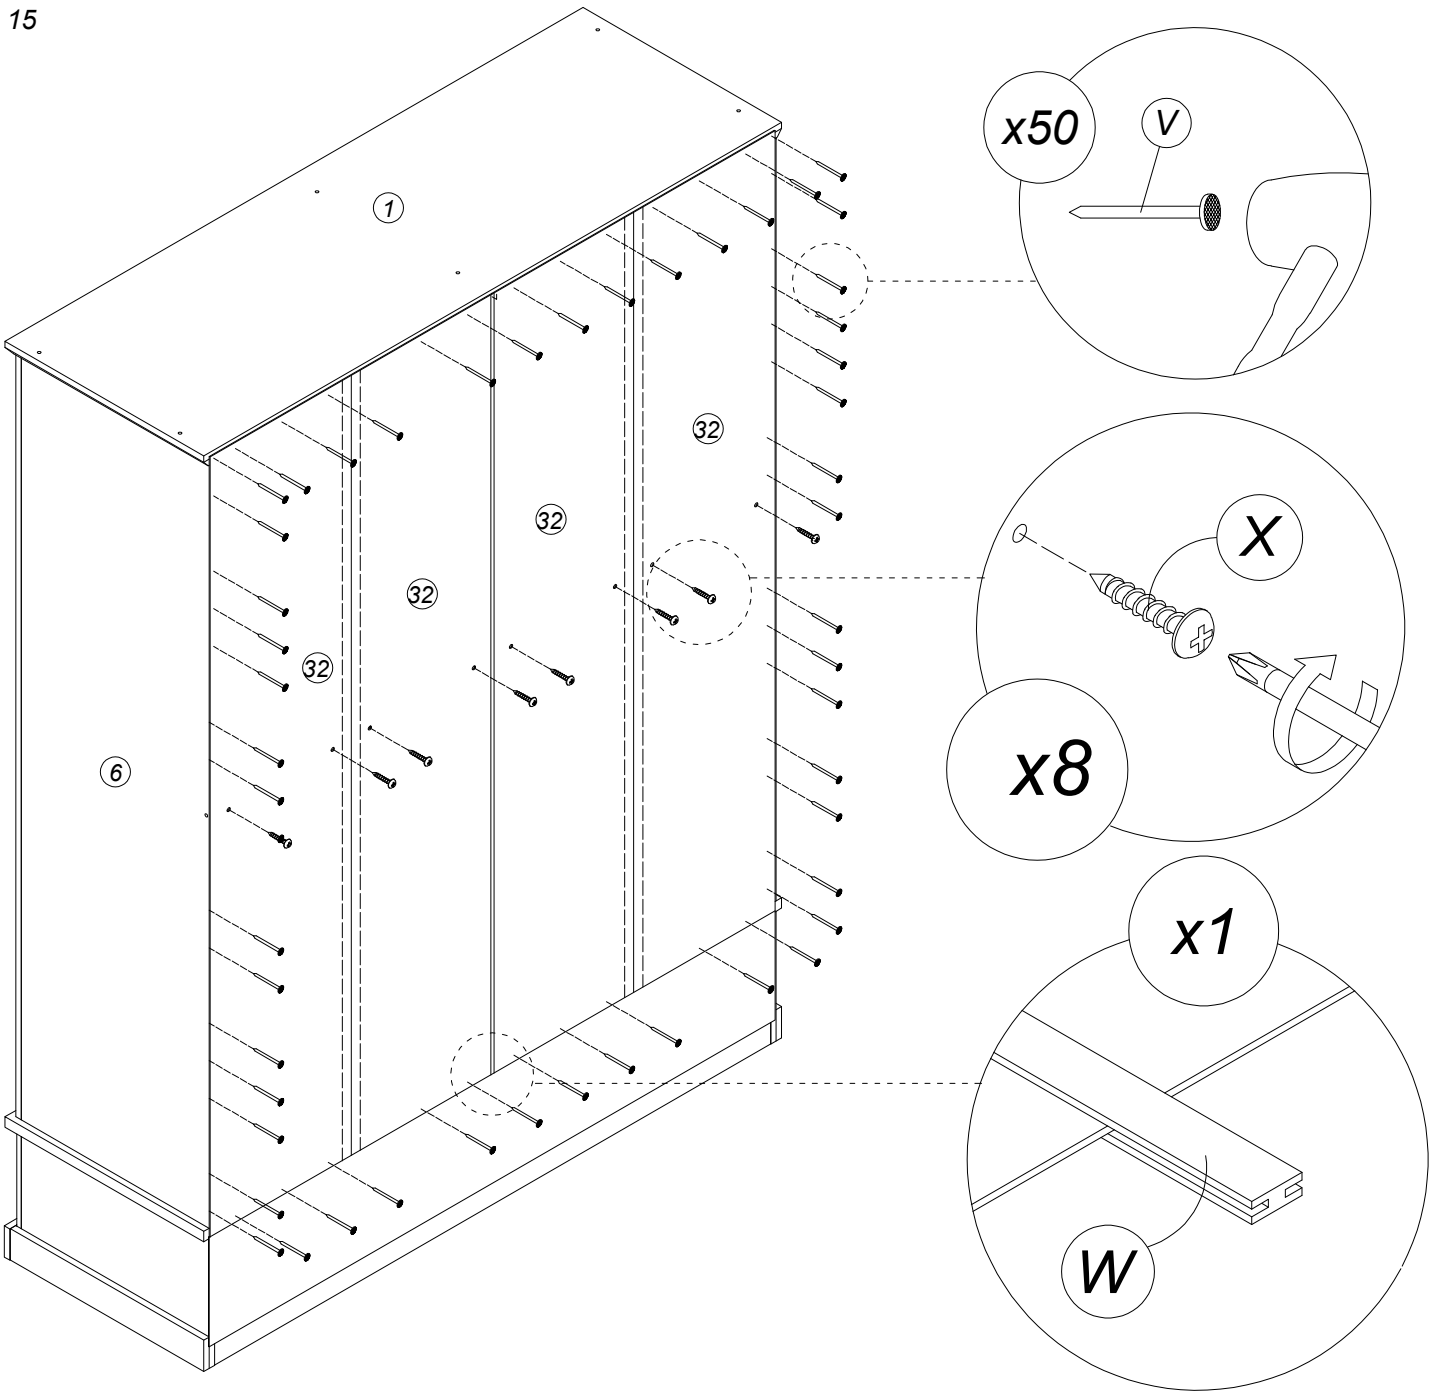


STEP 16

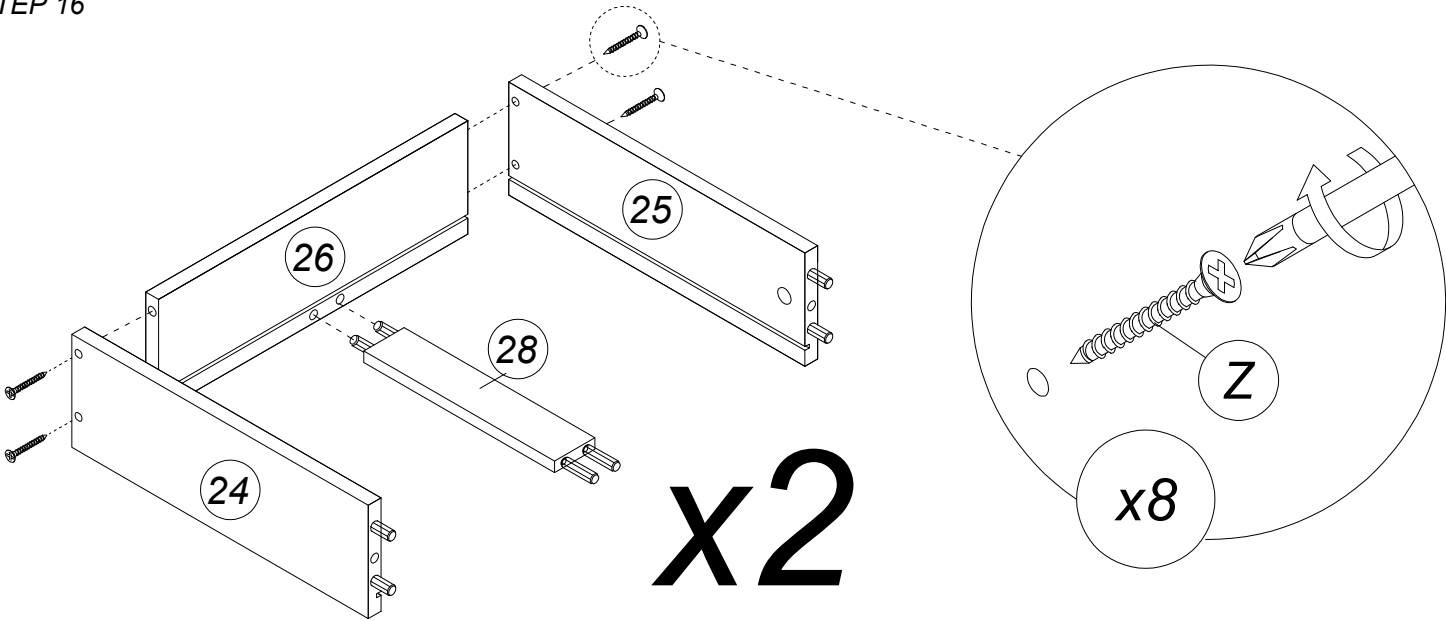


STEP 17

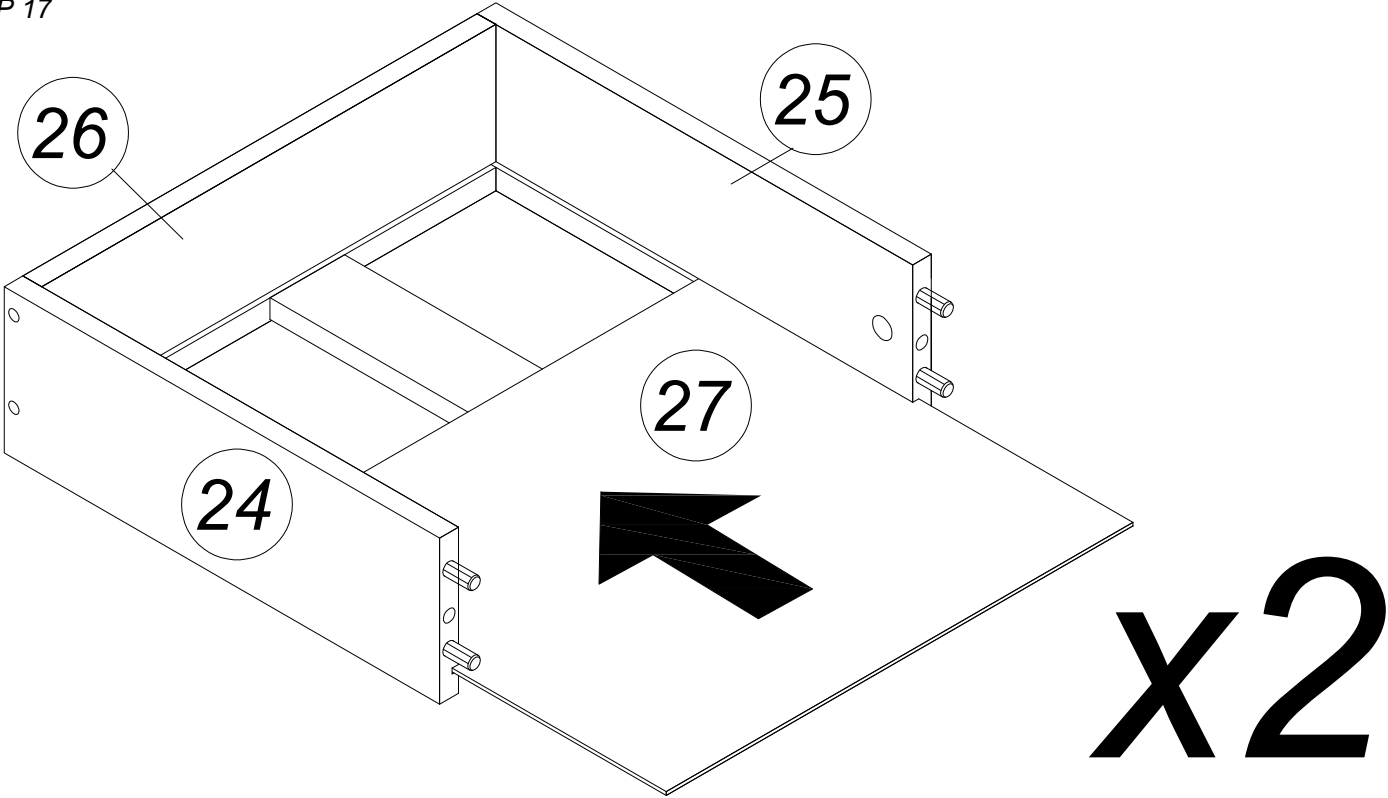


STEP 18 LOCK

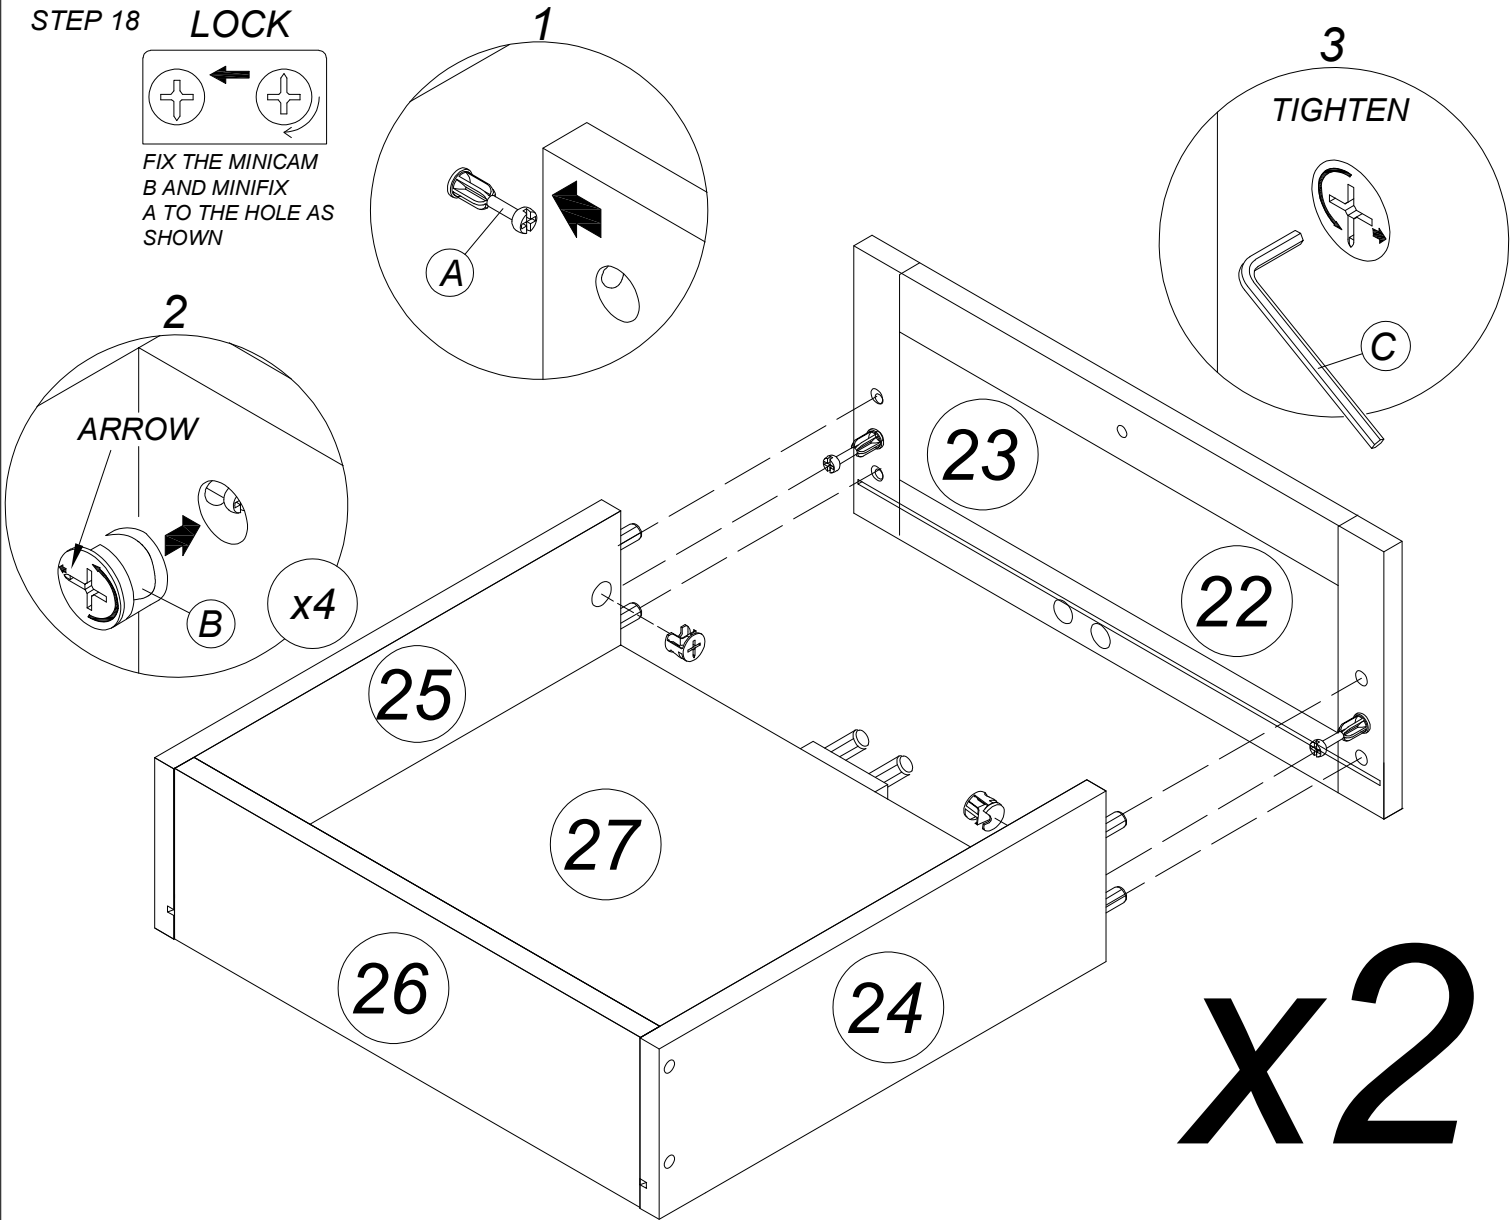

STEP 19

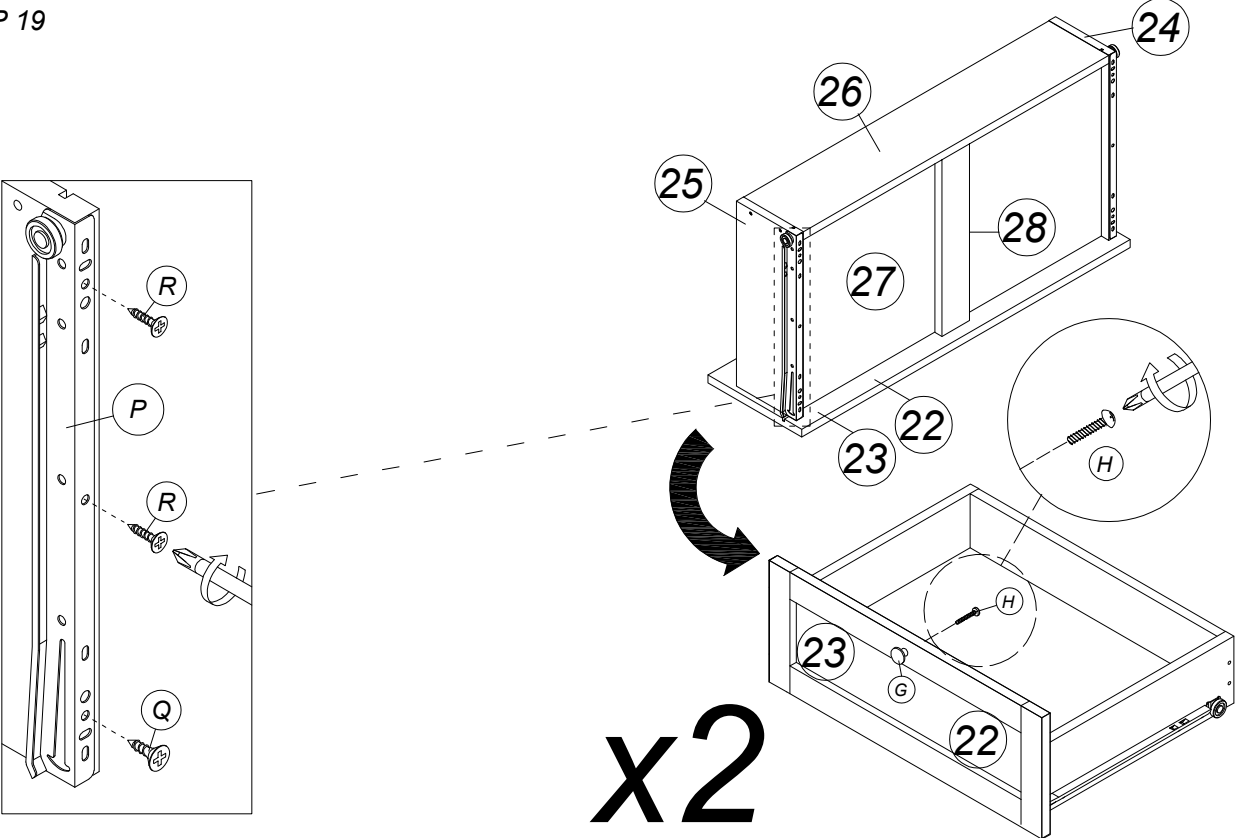

STEP 20

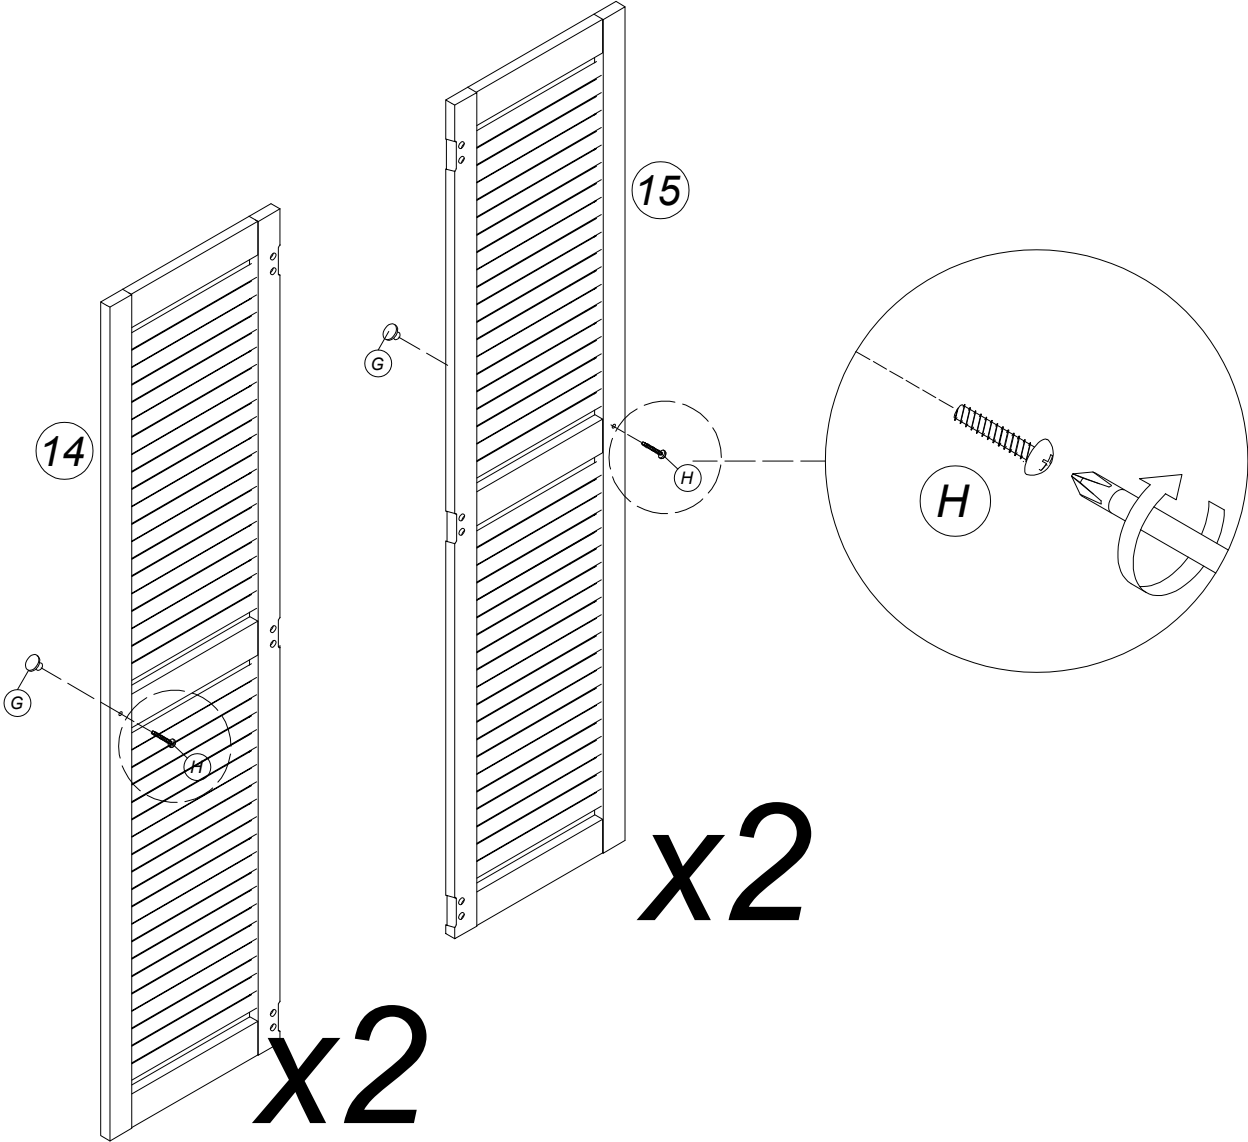

ASSEMBLY INSTRUCTION

STEP 21

