Assembly Instructions

Caution : You must read this before you proceed

- Not for commercial use. For residential use only.

- Furniture may scratch floors. We recommend using furniture pads to protect your floors.

- Do not put hot items directly on furniture surface.

- Do not clean furniture with harsh cleansers or polish.

- Do not place furniture under direct sunlight.

- Do not place furniture near heating or cooling vents.

- Do not write on furniture without a padded barrier to protect the surface.

- Do not place furniture outside . For indoor use only.

- Stains may be removed with mild soap solution and damp cloth.

- Children should not climb or jump on the furniture.

- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in CABINET SINK for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

CABINET SINK : N765P434910 + S24003-37W(37")

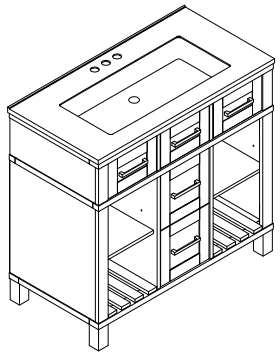

Parts List

Label	Picture	Description	QTY
S24003-37W(37")			
A	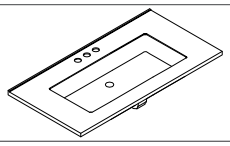	Sink	1

Parts List

Label	Picture	Description	QTY
N765P434910			
B	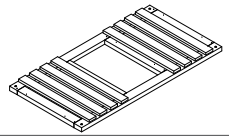	Lower Base Frame	1
C	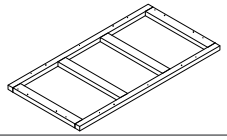	Middle Frame	1
D		Upper Left Front Rail	1
E		Upper Right Front Rail	1
F		Middle Left Vertical Panel	1
G	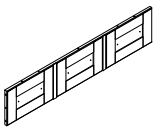	Upper Front Baffle	1

Parts List

Label	Picture	Description	QTY
N765P434910			
H	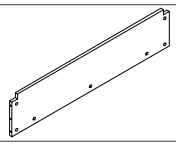	Upper Back Panel	1
I		Lower Back Panel	2
J	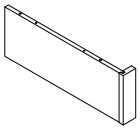	Upper Side Panel	2
K		Cabinet Leg	4
L		Lower Left Side Panel	1
M		Lower Right Side Panel	1
N	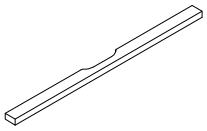	Upper Front Rail	1
O		Drawer Front Panel	2
P		Drawer Left Side Panel	2
Q		Drawer Right Side Panel	2
R		Drawer Back Panel	2
S		Drawer Bottom Panel	2

Parts List

Label	Picture	Description	QTY
N765P434910			
T	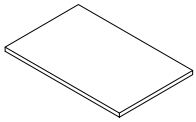	Adjustable Shelf	2
U		Middle Right Vertical Panel	1

Hardware

Label	Picture	Description	QTY
N765P434910			
①		Cam bolt (Ø6 x 33mm)	43 Extra 2
②		Cam lock (Ø15 x 10mm)	43 Extra 2
③		Wooden dowel (Ø6 x 30mm)	44 Extra 2
④		Wooden dowel (Ø10 x 40mm)	4
⑤		Screw (Ø3 x 12mm)	28 Extra 2
⑥		Screw (Ø3 x 12mm)	8 Extra 1
⑦		Screw (Ø3.5 x 12mm)	16 Extra 2
⑧		Screw (Ø4 x 38mm)	8 Extra 1

Hardware			
Label	Picture	Description	QTY
N765P434910			
⑨		Screw (Ø4 x 50mm)	8 Extra 1
⑩	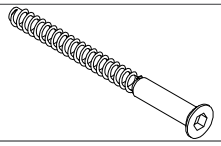	Hex Head Screw (Ø7 x 84mm)	4 Extra 1
⑪	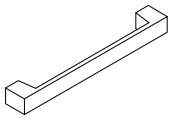	Handle	5
⑫		Bolt (Ø5/32" x 12mm)	4 Extra 1
⑬		Bolt (Ø5/32" x 21mm)	6 Extra 1
⑭		Shelf Pin	8
⑯		Anti-Tip	2set
⑰		Allen key (M4 x 57mm)	1
⑱		Iron (8")	2set
		Destornillador Phillips	1

Assembly Preparation

Before Beginning Assembly:

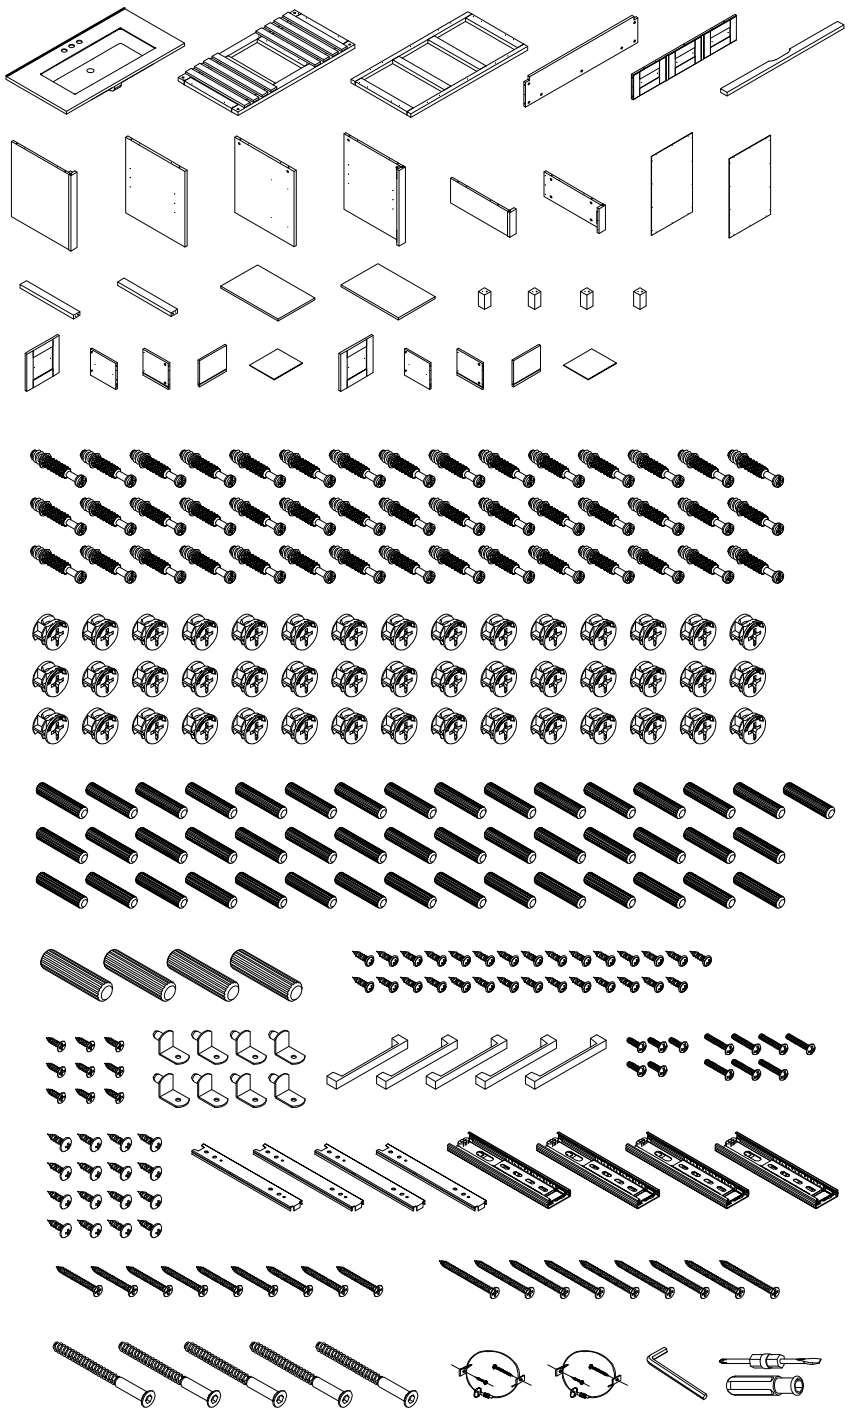

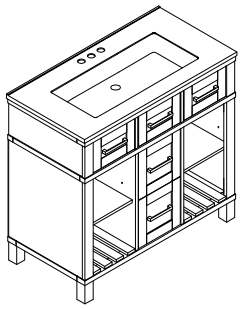

AssemblySteps

Overview

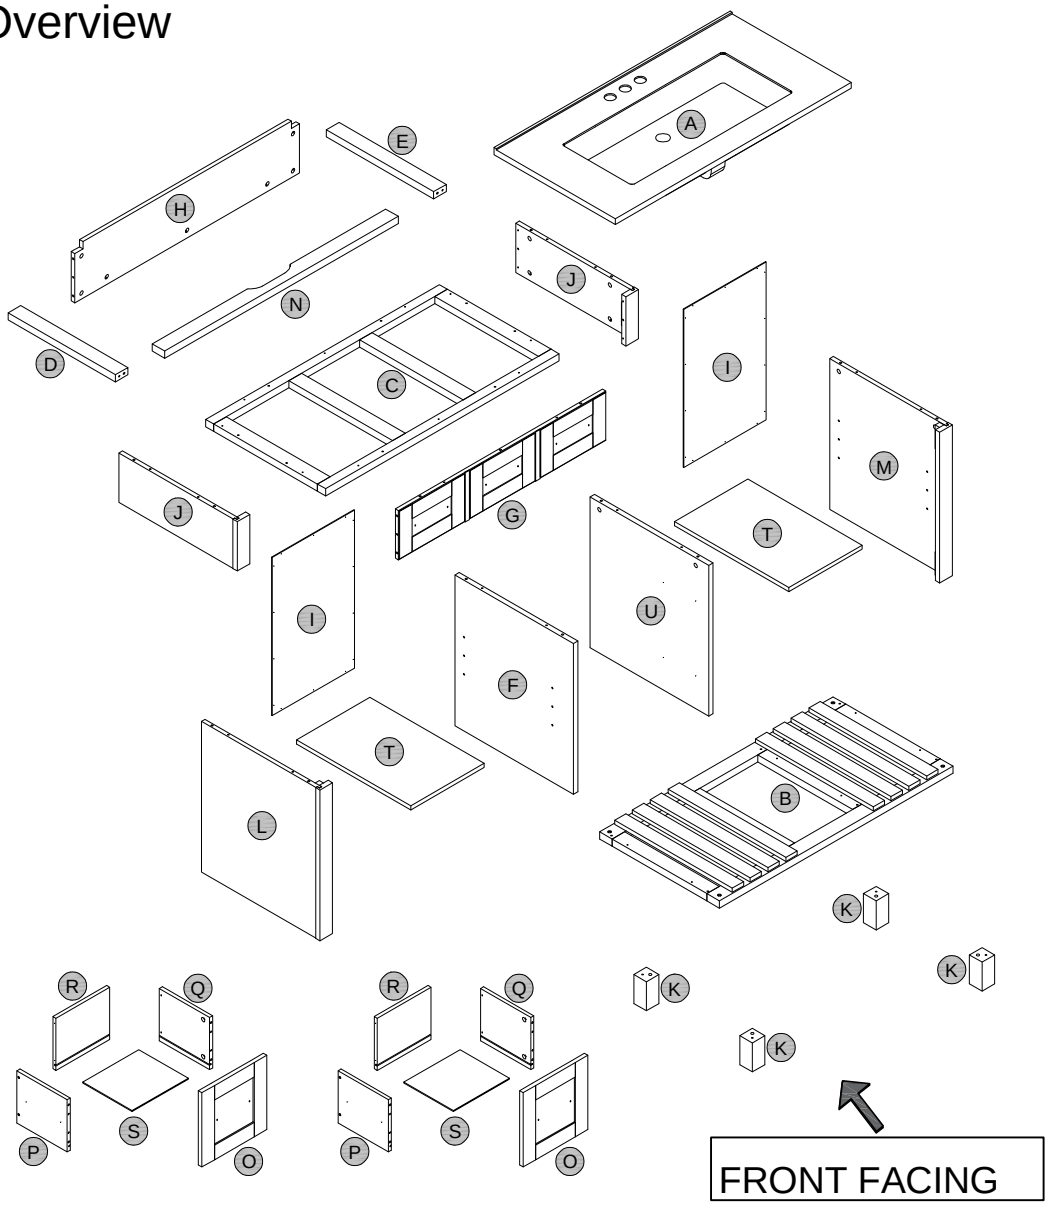

This CABINET SINK has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Lavabo 1 part, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Completed	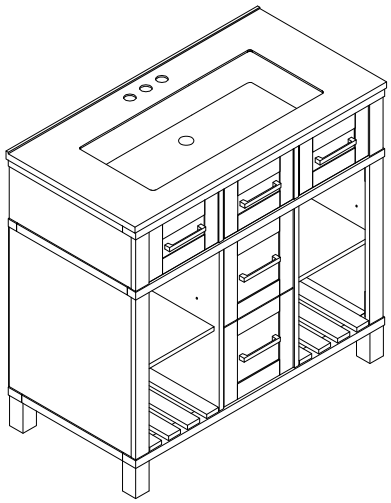

Turn the CABINET SINK right side up.

Place the CABINET SINK on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.
Gently and gracefully, sit into to the CABINET SINK.
This would help to align all the parts at all the joint areas.

Then get off the CABINET SINK, and in a sequential manner, proceed to tighten all screws.
To tighten the Screws at the base of the Backrest, do secure assistance from your adult partner(s).
You may be required to turn the CABINET SINK, to gain easy access to the secure points.
Turn the CABINET SINK in a synchronised manner.

CAUTION 1: When tightening these screws, tighten sequentially.
DO NOT tighten any screw fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the screws and execute this same process.
WARNING!! IF CABINET SINK IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.
Ensure all screws are fully locked into position.
The CABINET SINK is ready to be used.
Caution 2: This CABINET SINK can only be used on a flat, level surface.

Step 1

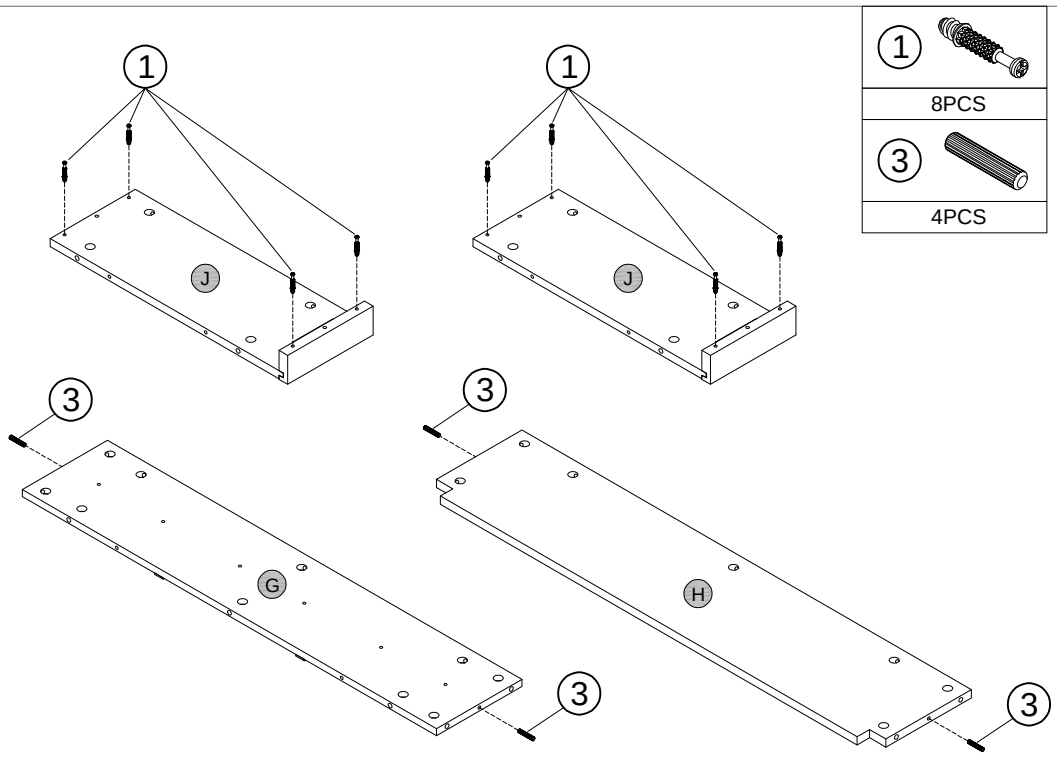

Step 2

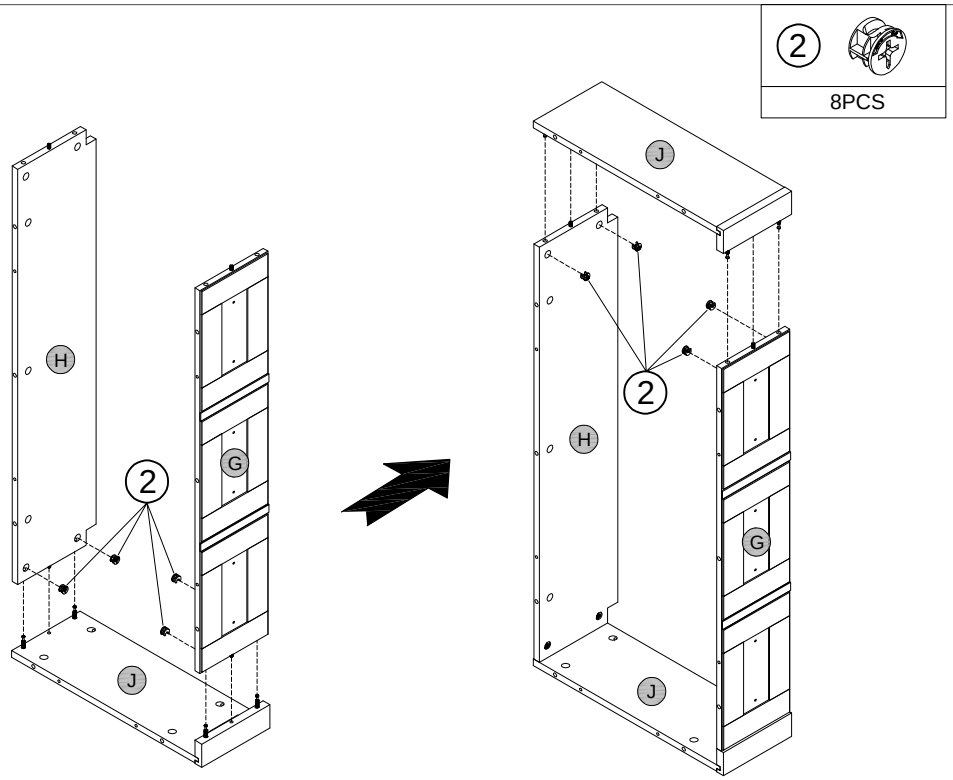

Step 3

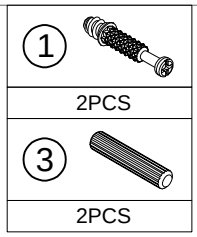

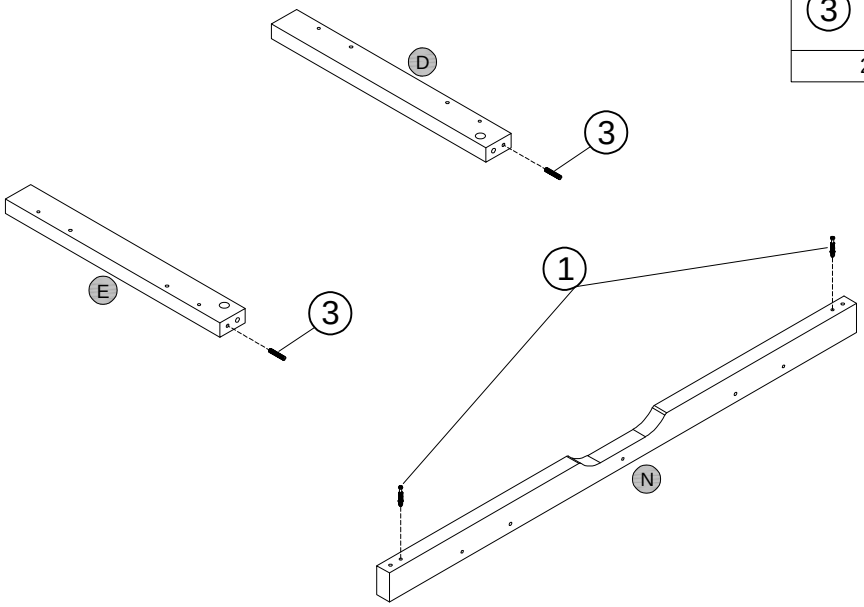

Step 4

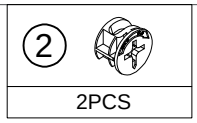

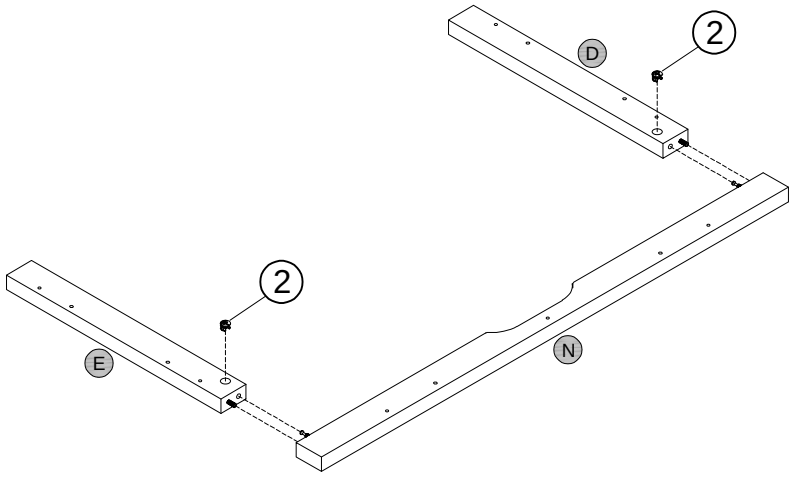

Step 5

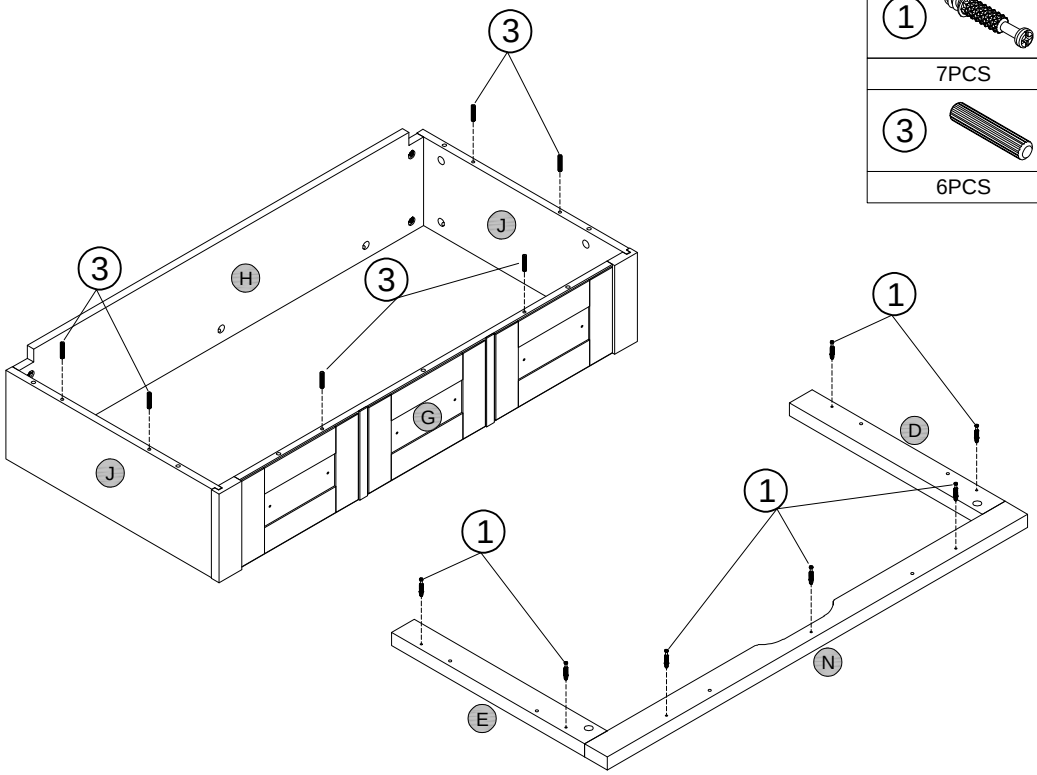

1	7PCS
3	6PCS

Step 6

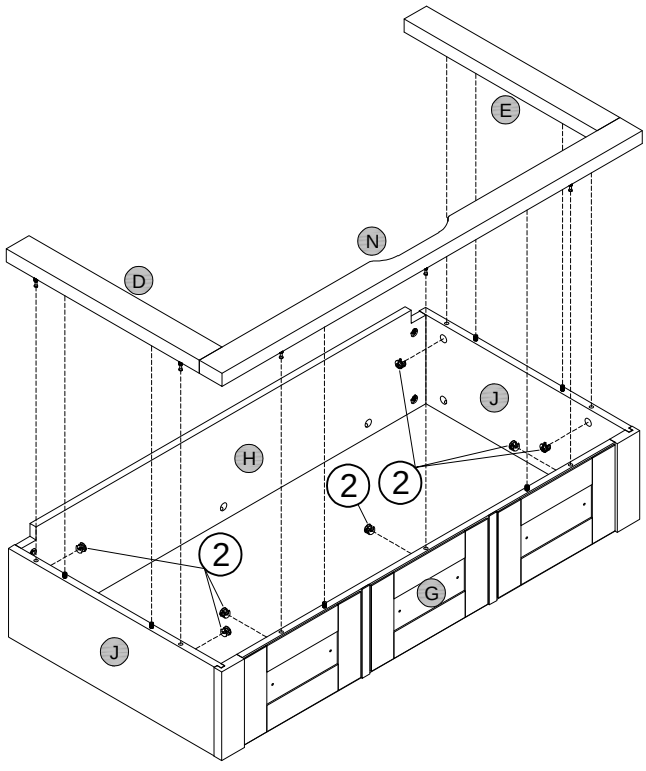

2	7PCS

Step 7

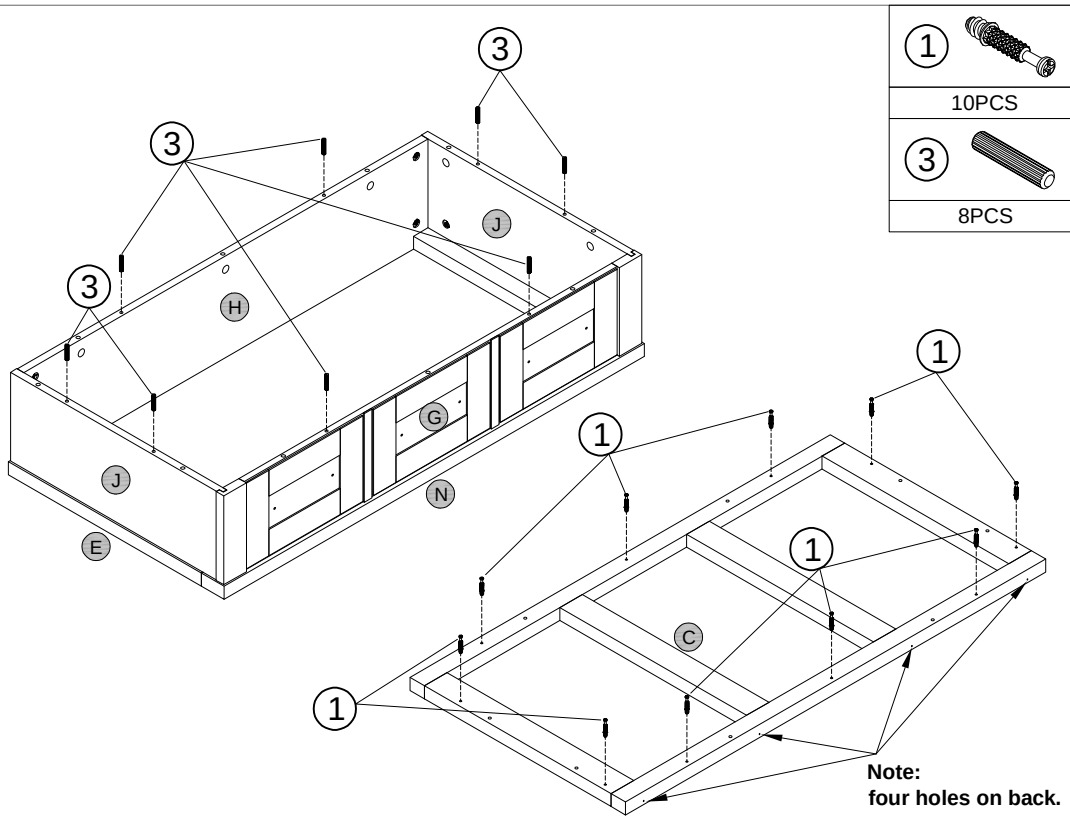
1
10PCS
3
8PCS
3
3
3
J
H
G
J
N
E
1
1
1
C
1
Note:
four holes on back.

Step 8

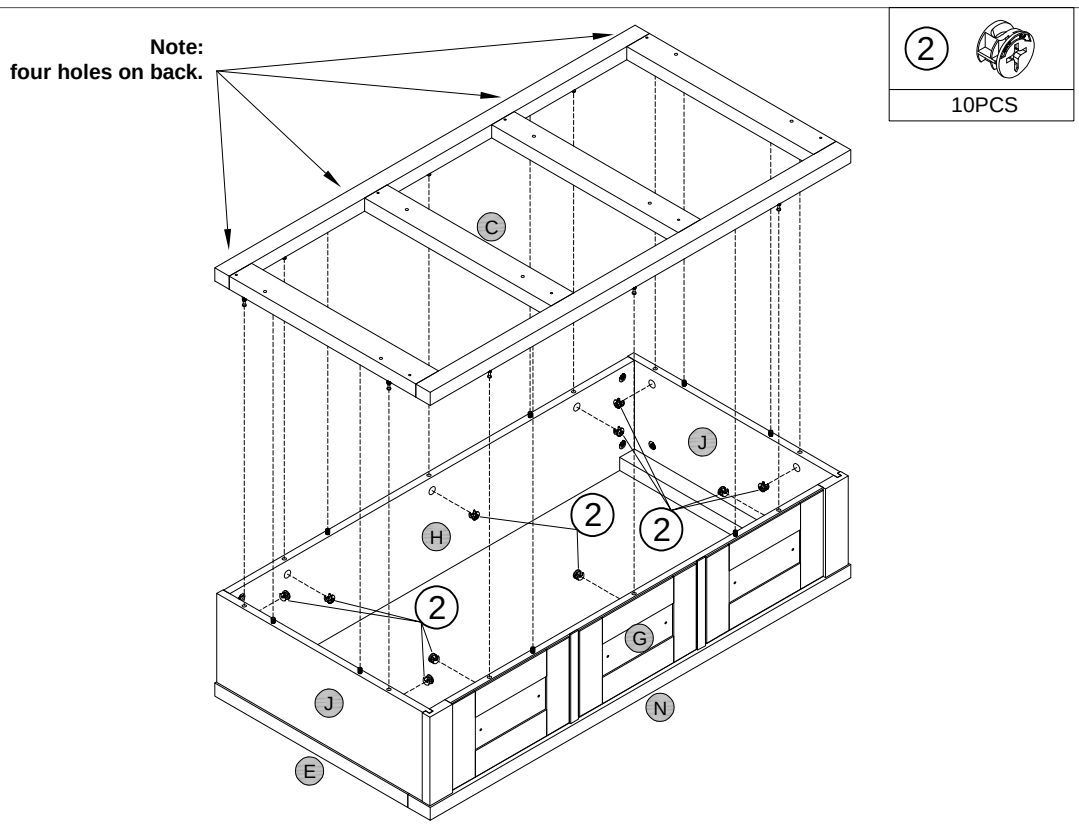
Note:
four holes on back.
2
10PCS
C
J
2
2
H
2
G
J
N
E

Step 9

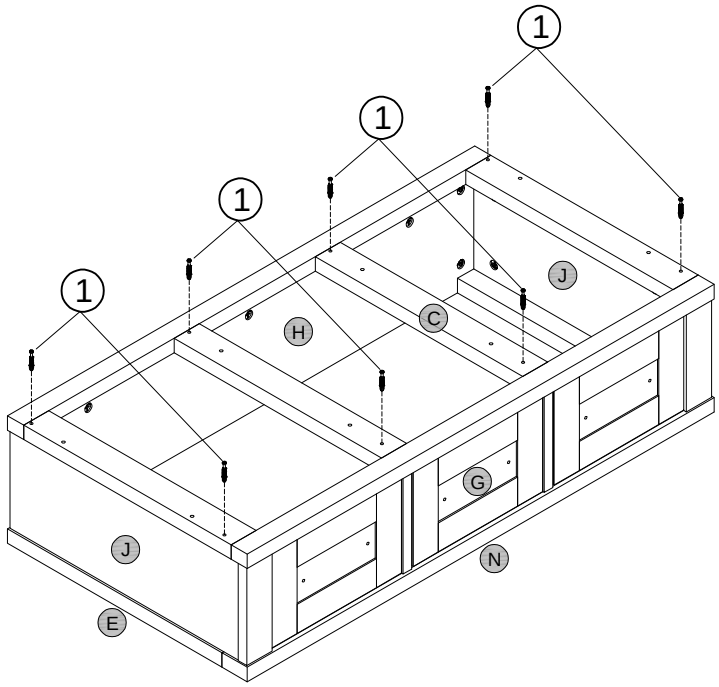

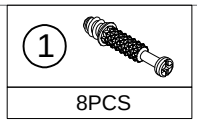

Step 10

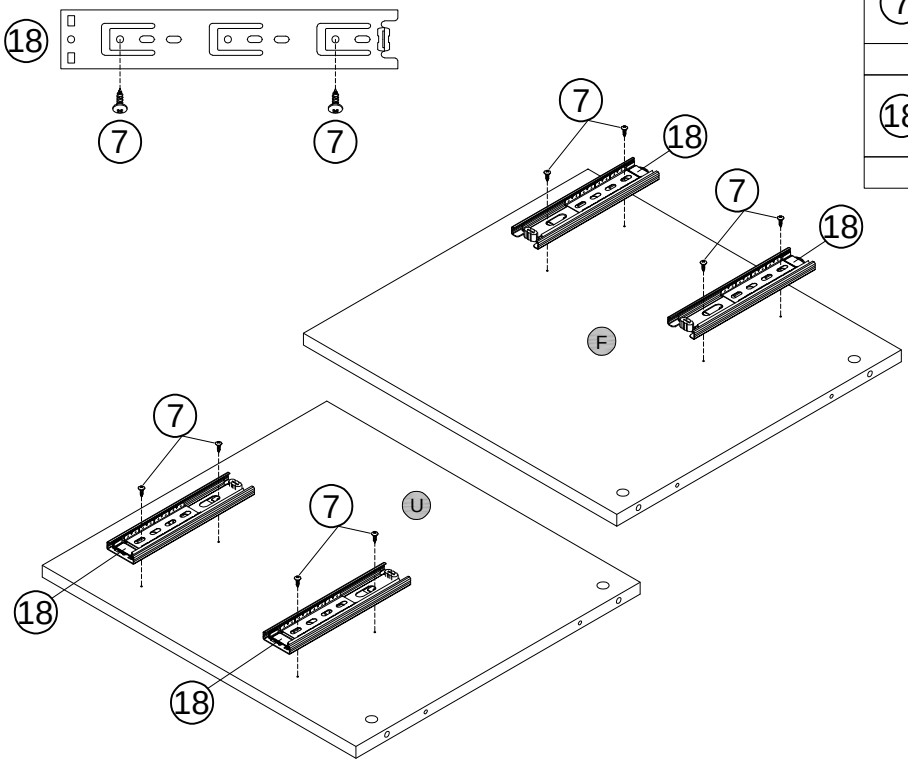

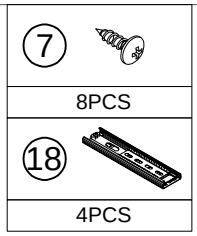

Step 11

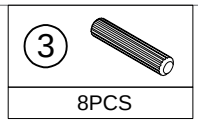

8PCS

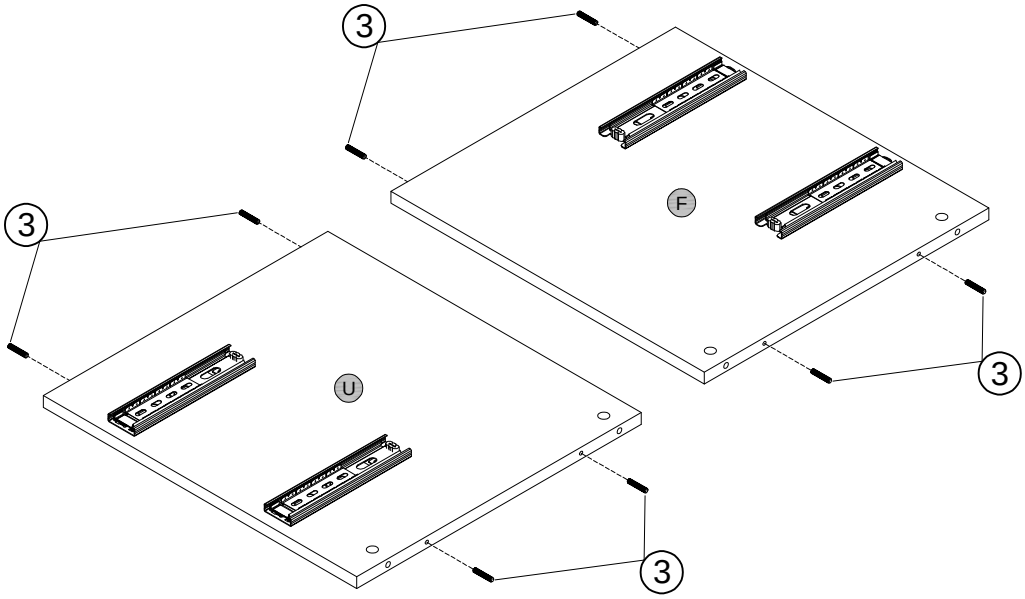

Step 12

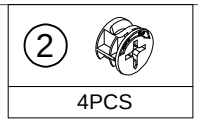

4PCS

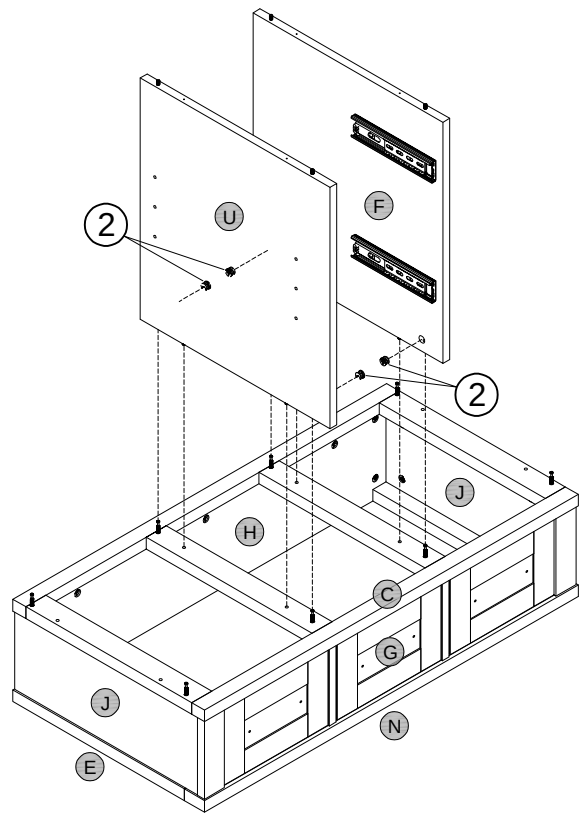

Step 13

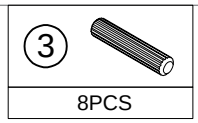

8PCS

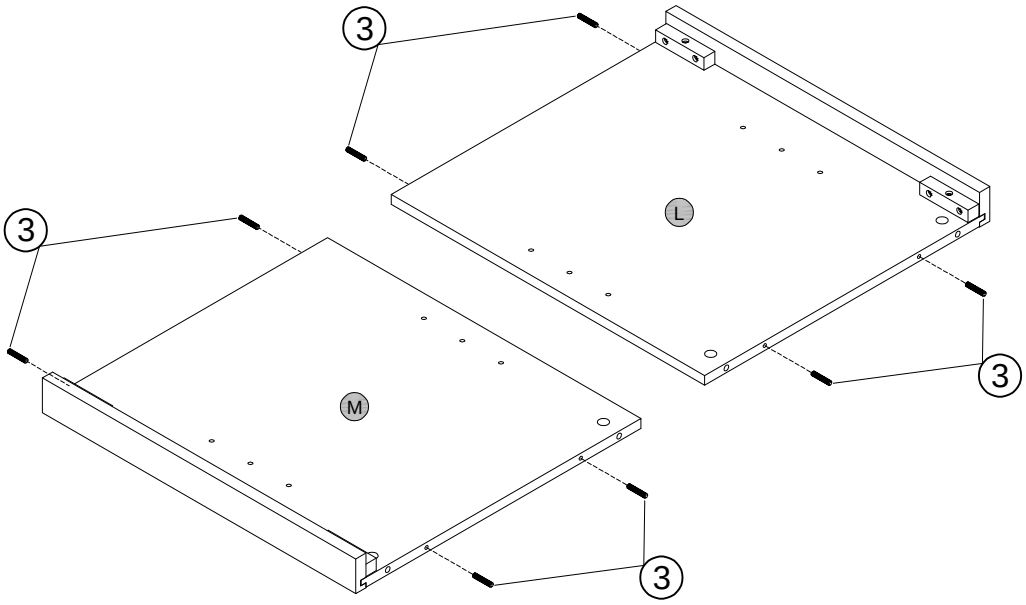

Step 14

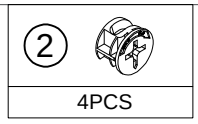

4PCS

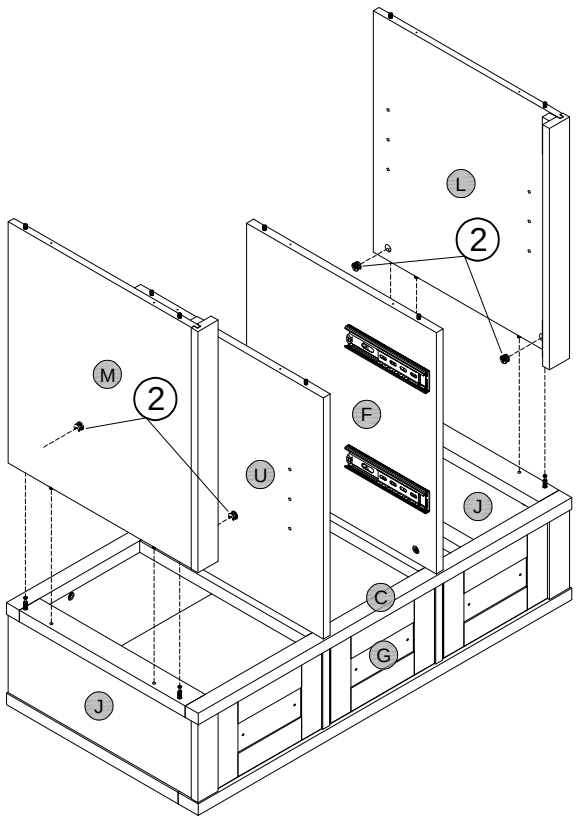

Step 15

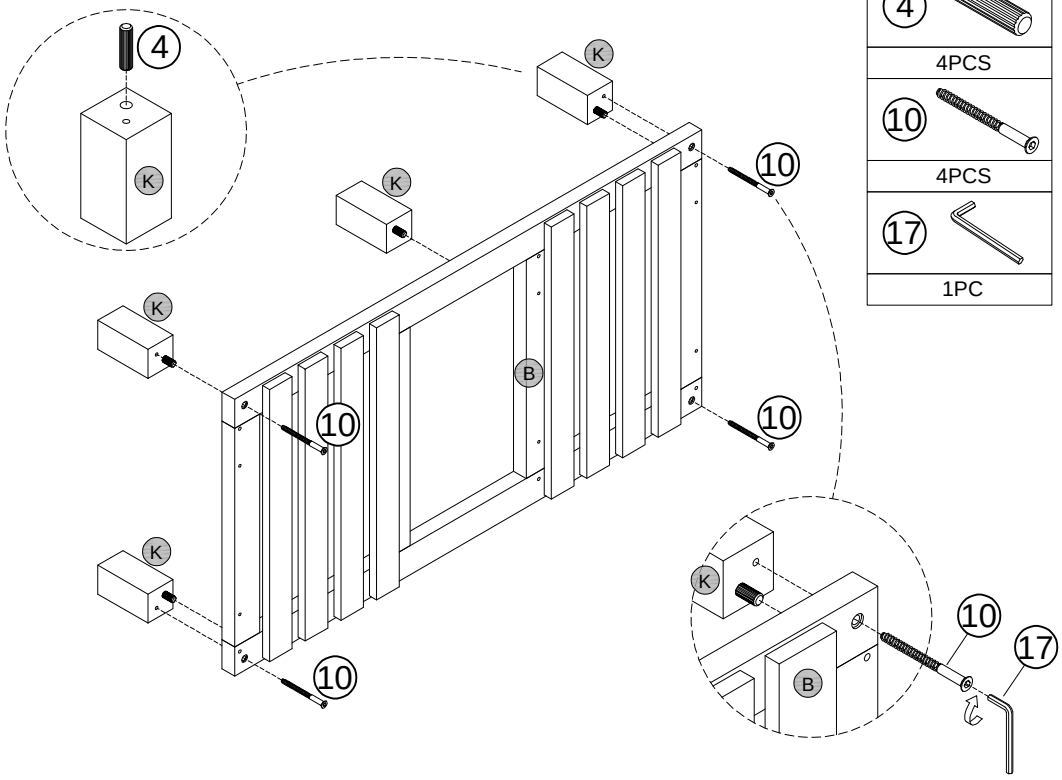

4	4PCS
10	4PCS
17	1PC

Step 16

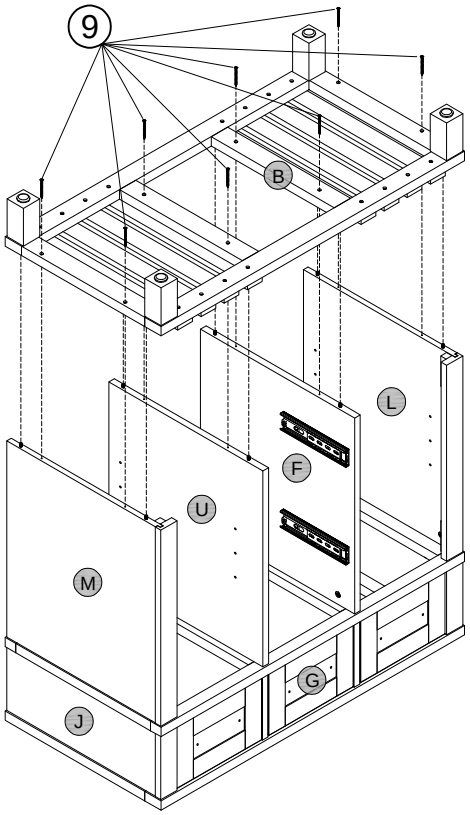

9	8PCS

Step 17

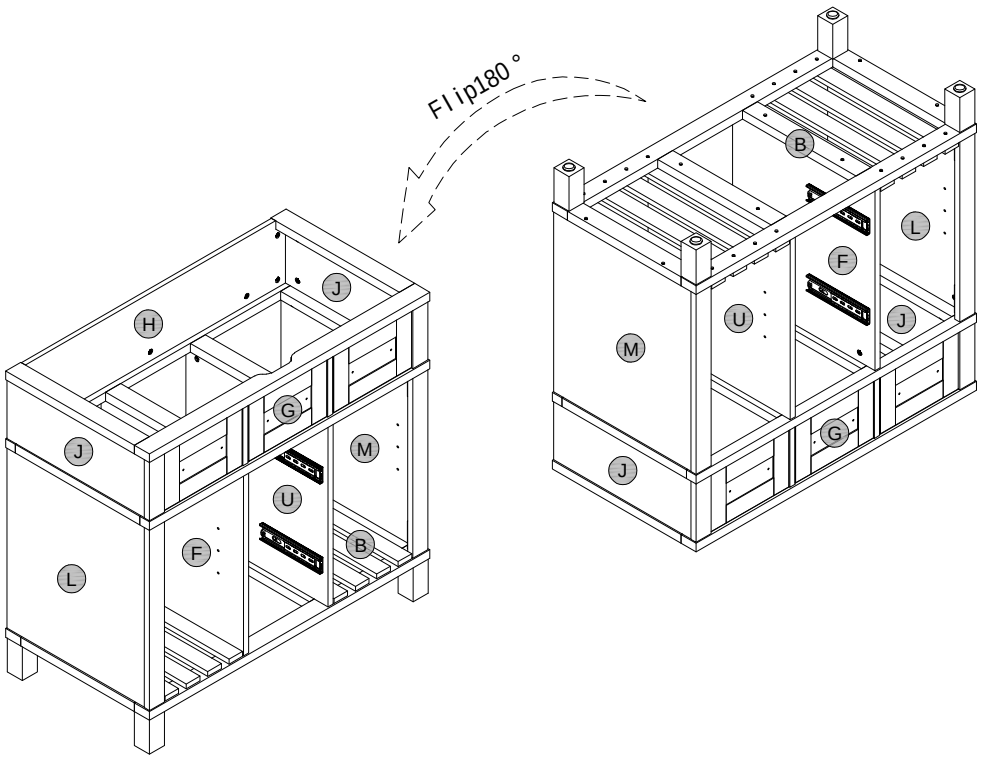

Step 18

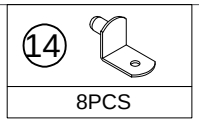

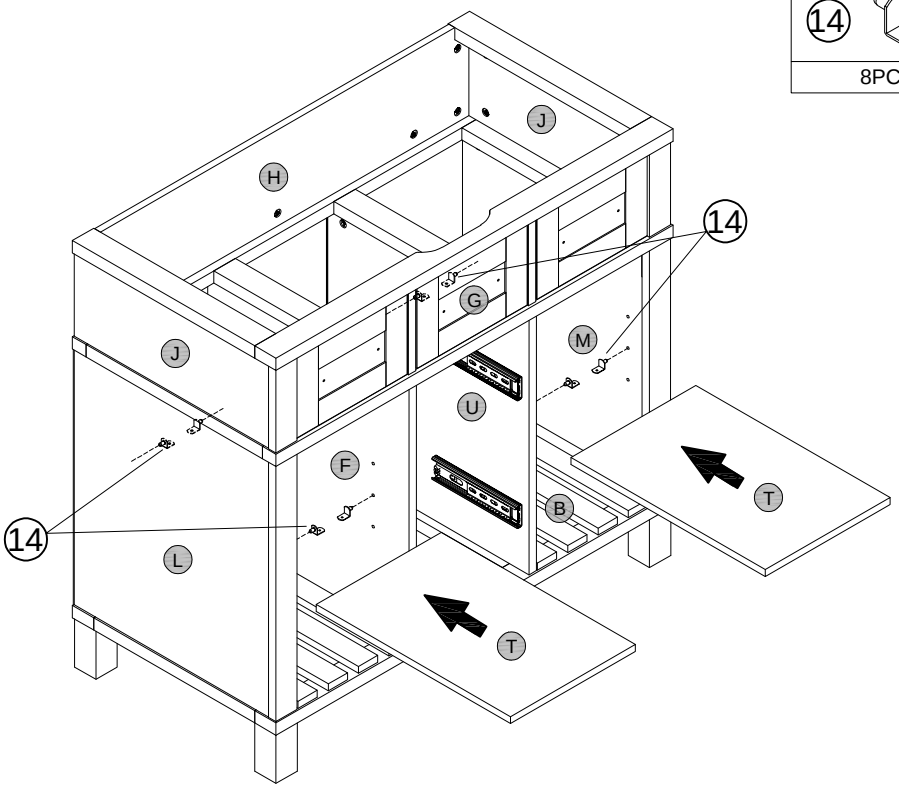

Step 19

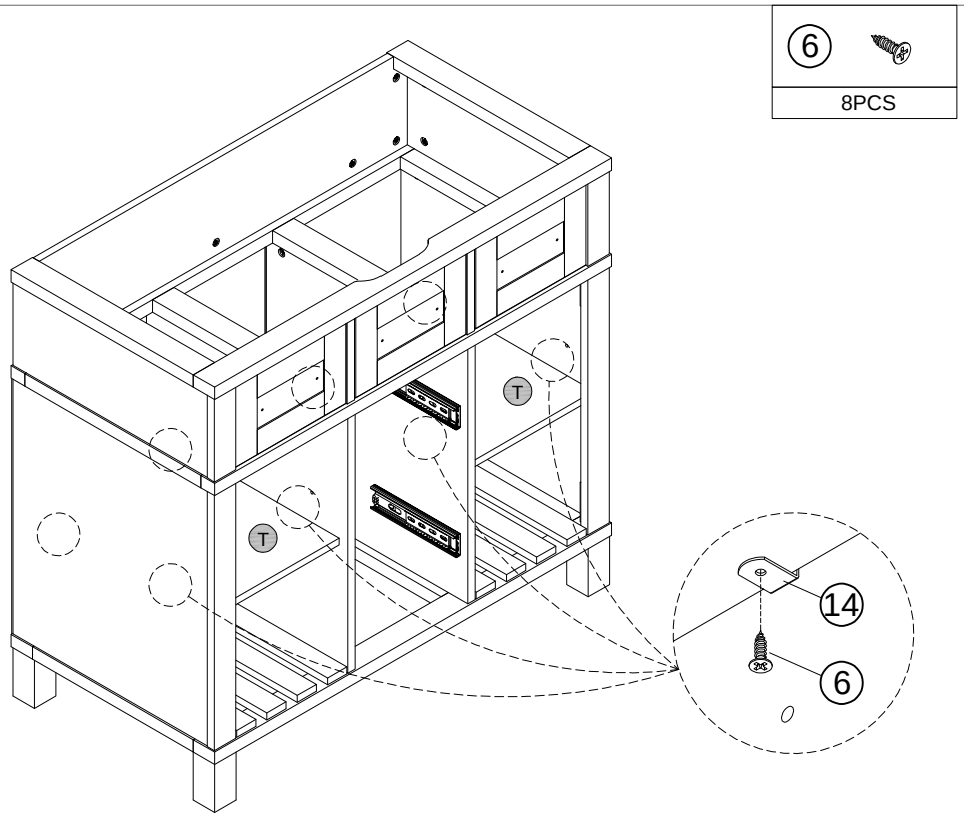

Step 20

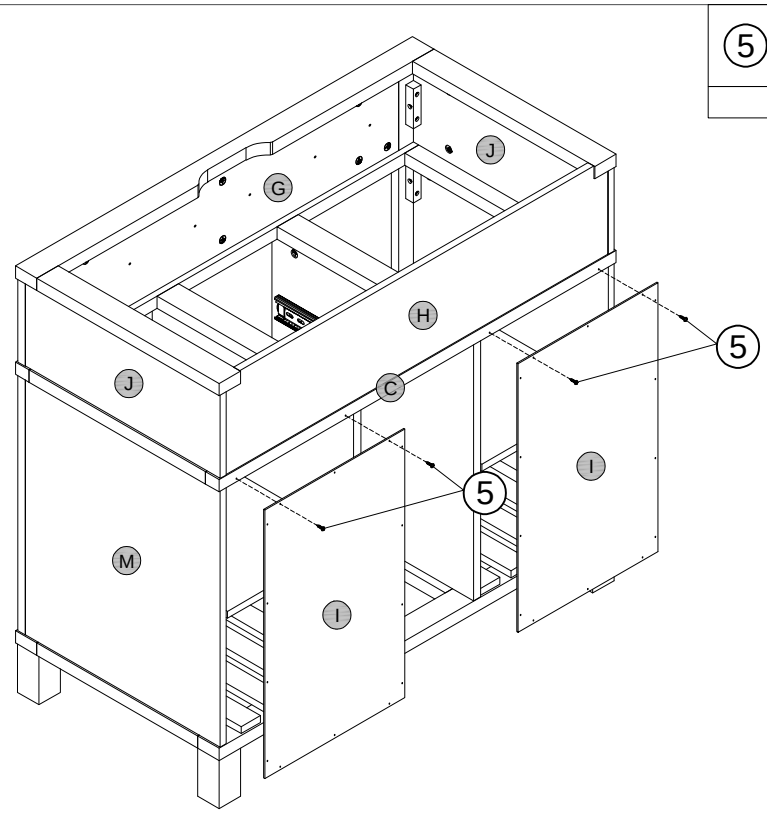

Step 21

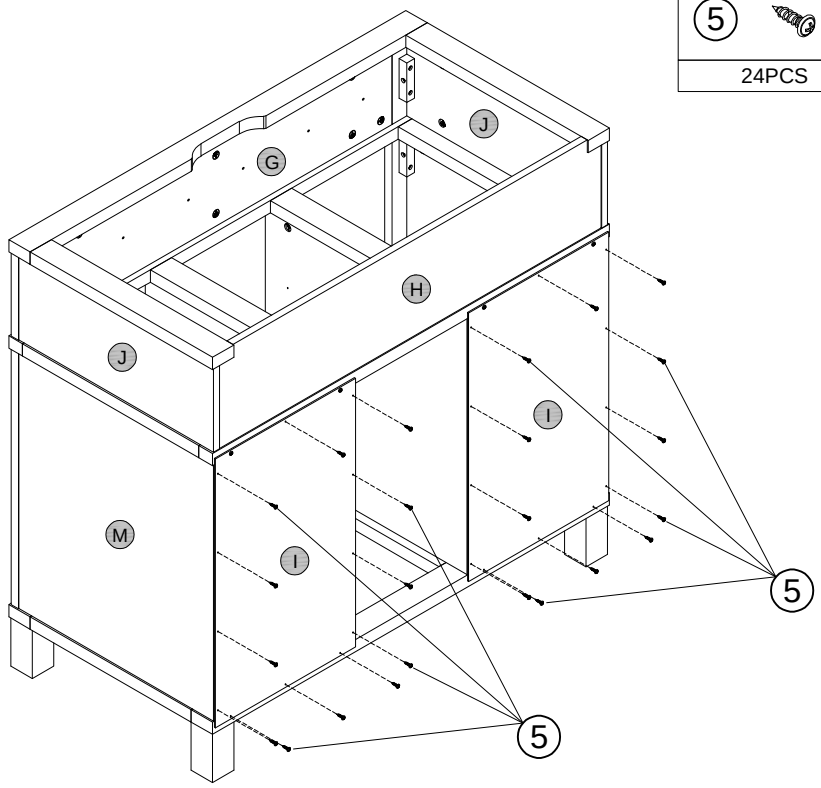

Step 22

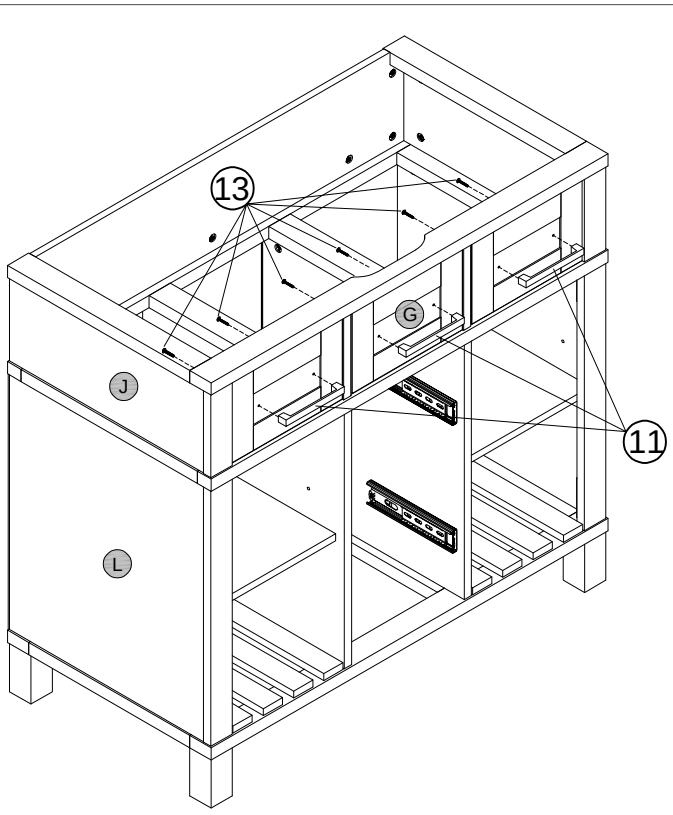

Step 23

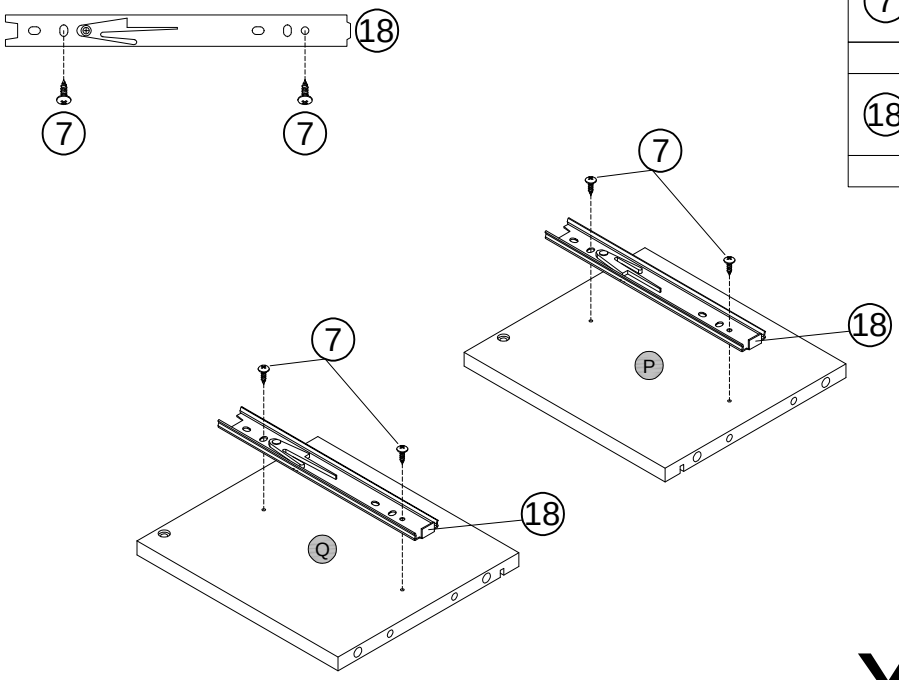

7
8PCS
18
4PCS

x2

Step 24

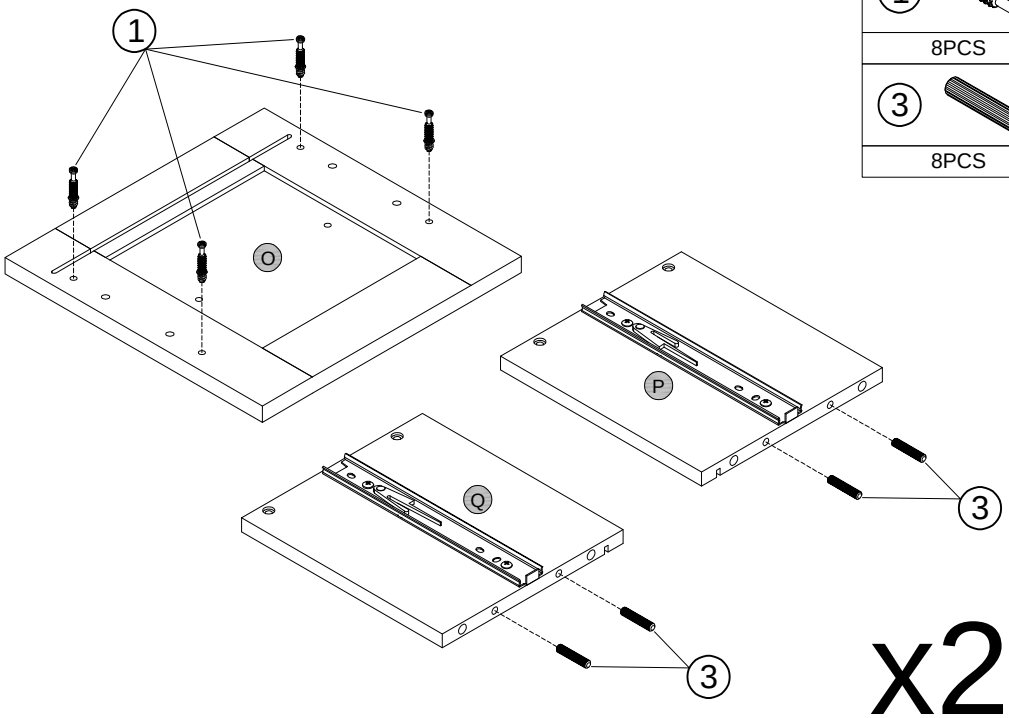

1
8PCS
3
8PCS

x2

Step 25

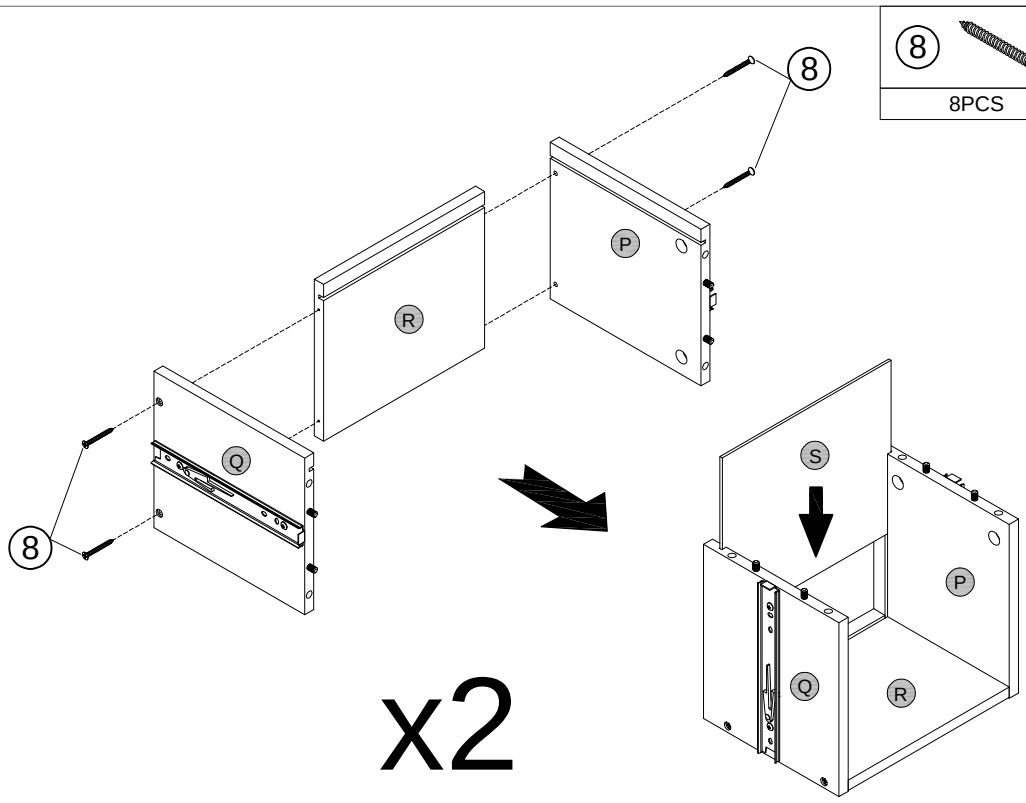

8

8PCS

Step 26

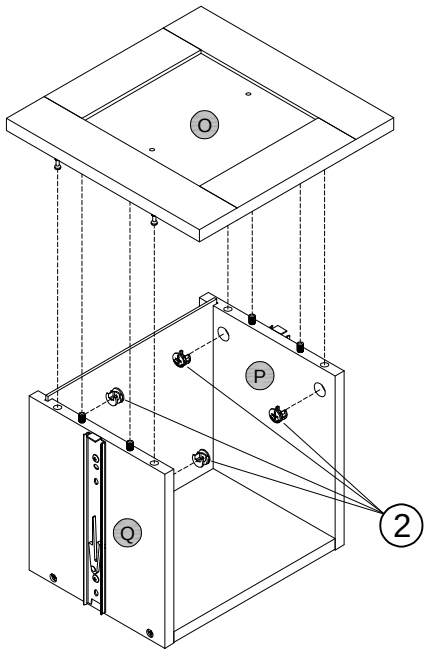

x2

2

8PCS

Step 27

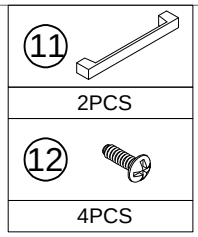

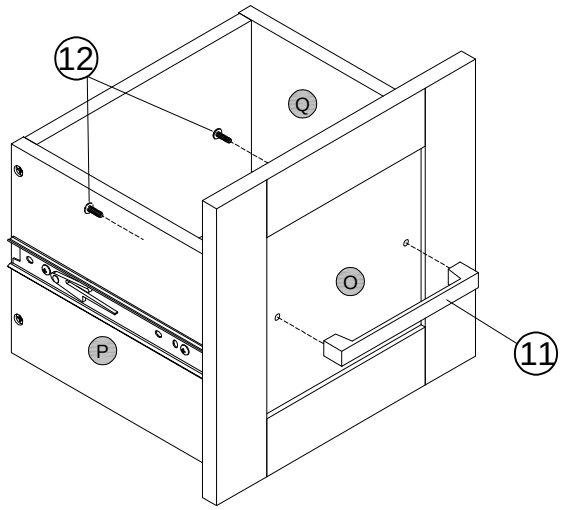

x2

Step 28

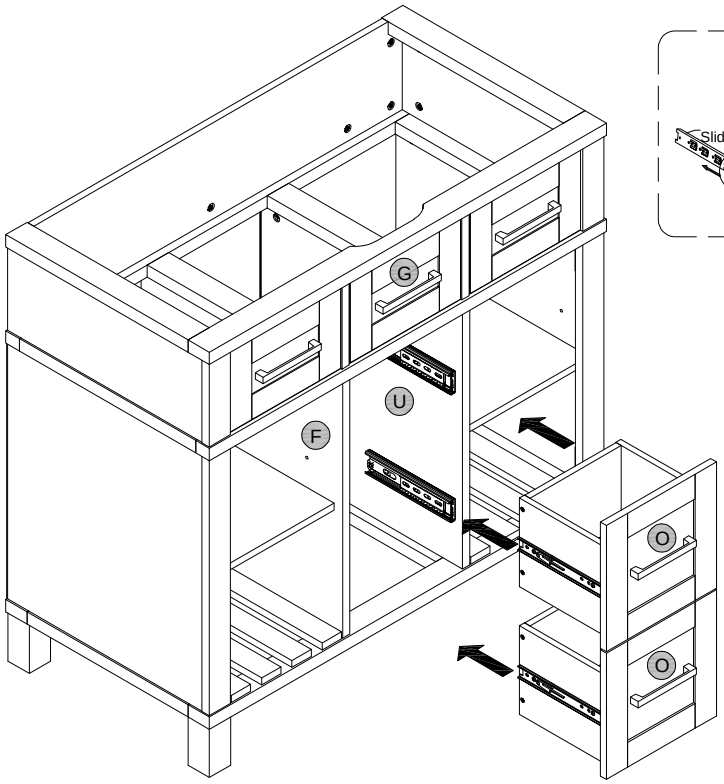

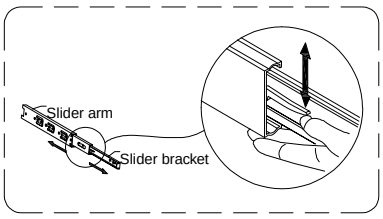

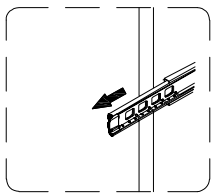

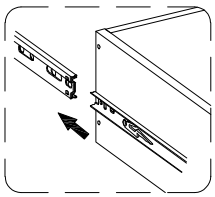

Step 29

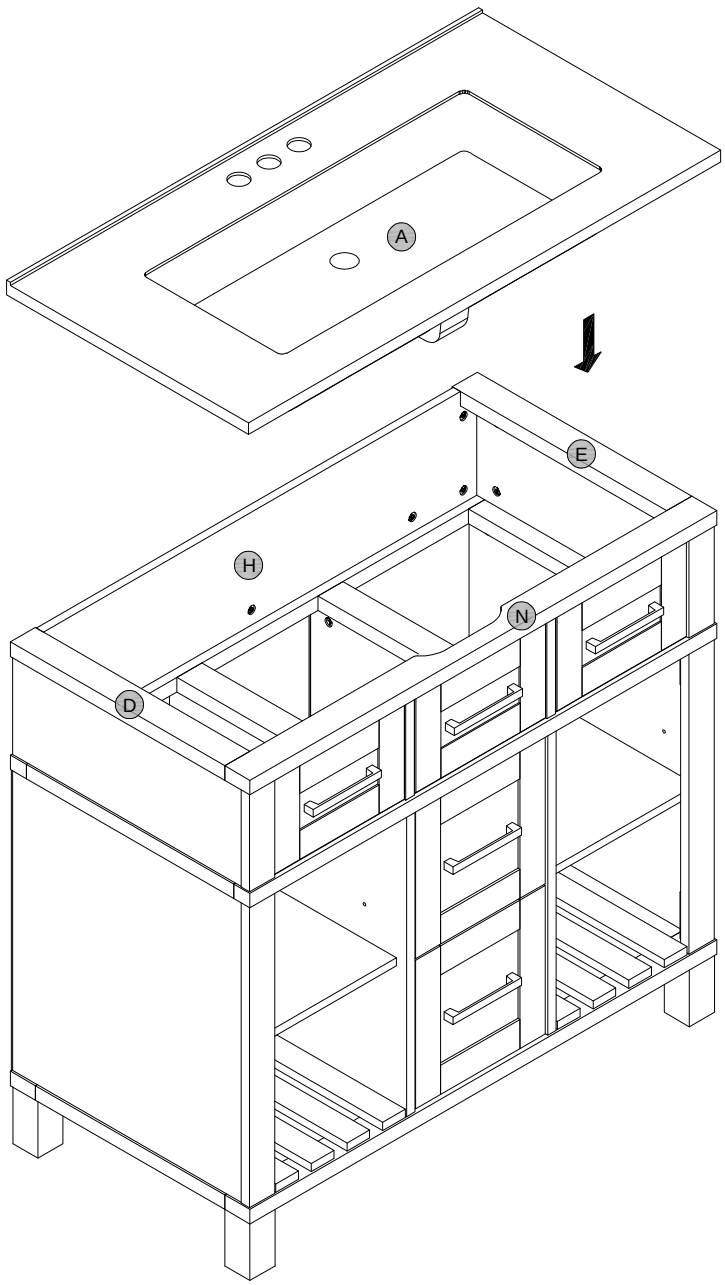

Step 30

16

2SET

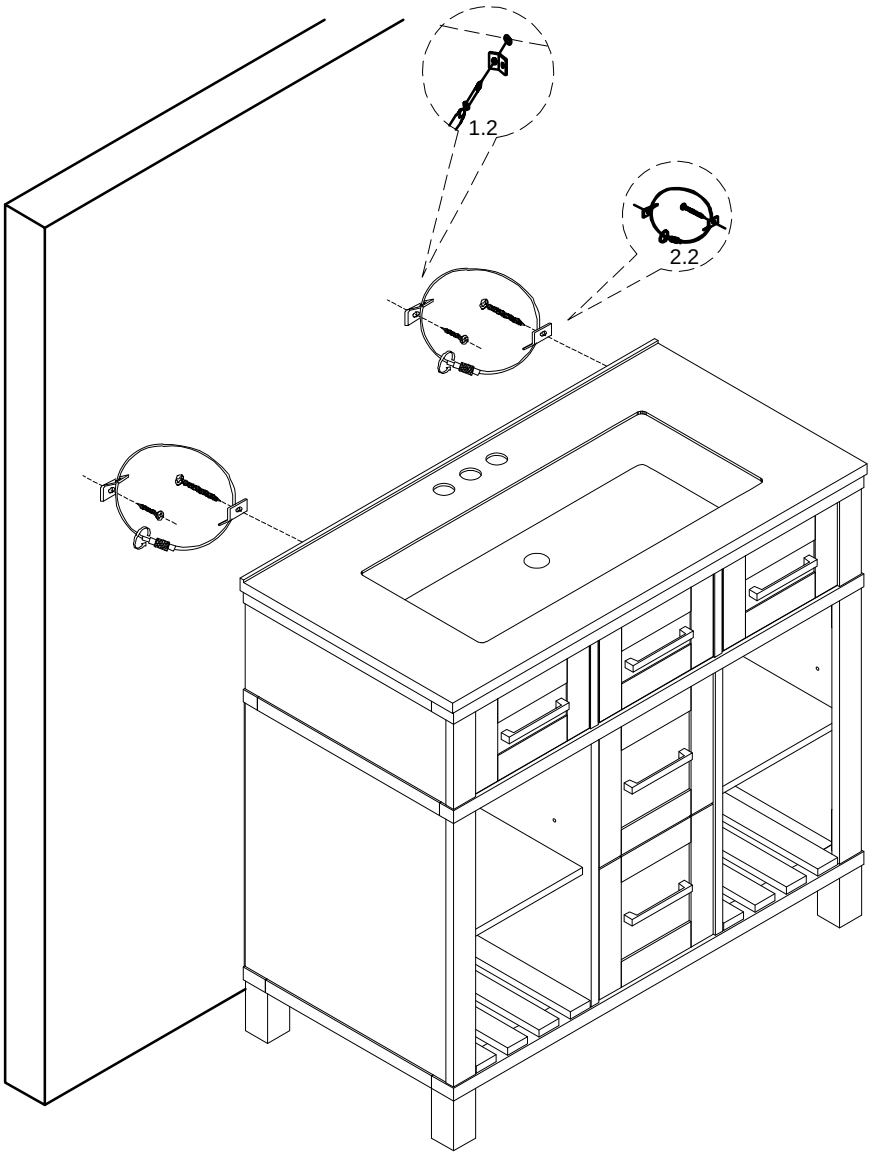

1.2 Attach the Metal Brackets,to the Wall Plugs,using Pan Head Screws and a Screwdriver
2.2 Move the Cabinet Sink against the wall. Pull the anti-tip, through the Metal Bracket, on the wall and Cabinet Sink Base respectively and tighten the lock on the anti-dumping strap