



ASSEMBLY INSTRUCTION 3 DOOR WARDROBE


A = 1pc

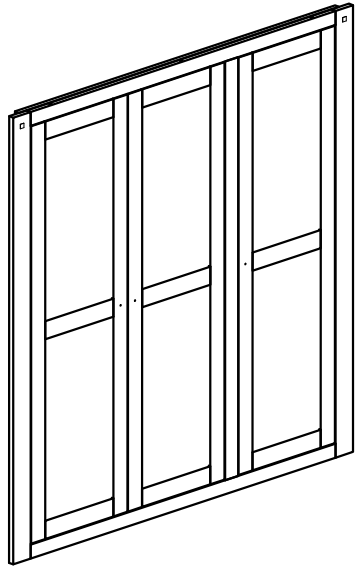


B = 02pcs

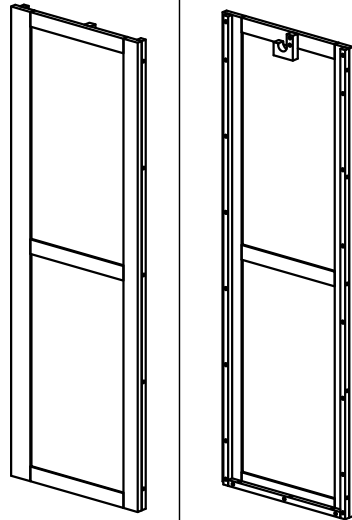


C = 01pc

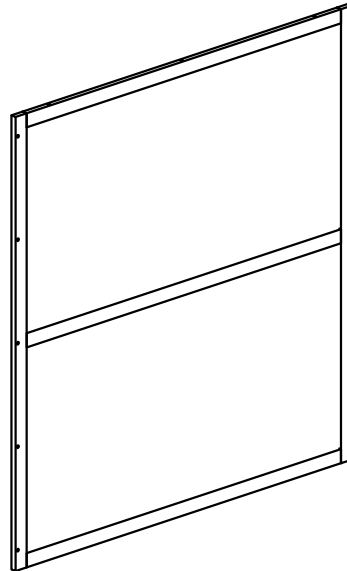


Step 1

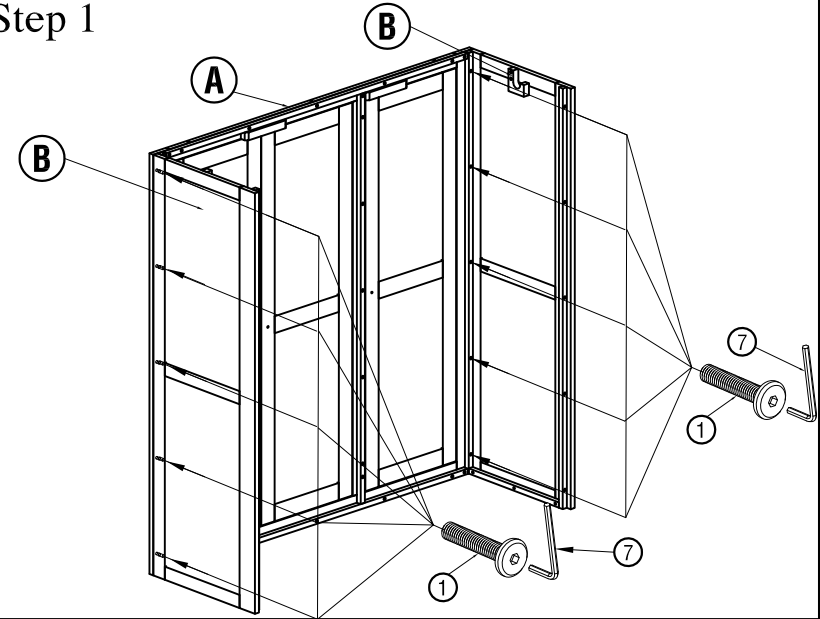


D = 01pc

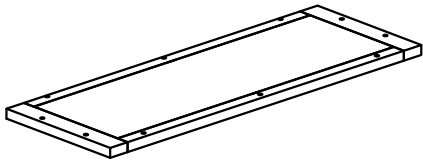


E = 01pc

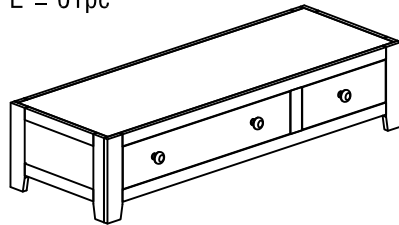


F = 01pc



G = 01pc



Step 2


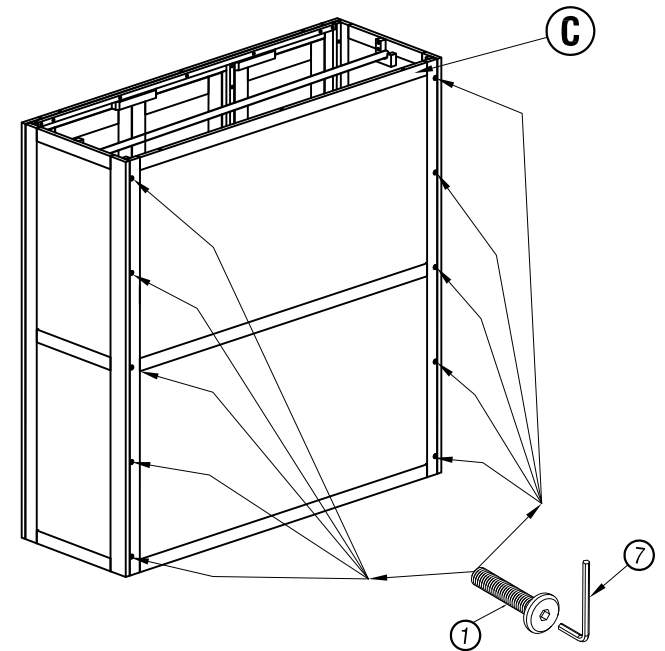


HARDWARE


①	②	③	④	⑤	⑥	⑦	⑧
M6x30=20pcs	M4x30=3pcs	M4x30=5pcs	M4x15=12pcs	2x40x50=3pcs	Ø30xØ30x25=3pcs	4x30x60=1pc	M6x40=10pcs
⑨	⑩	⑪	⑫	⑬			
Bracket =4PCS	Nylon strip=2PC	M4 x 20 = 4PCS	M4 x 35 = 4PCS	Wall plug Ø4 x L40 4PCS			

ASSEMBLY INSTRUCTION 3 DOOR WARDROBE


Step 3

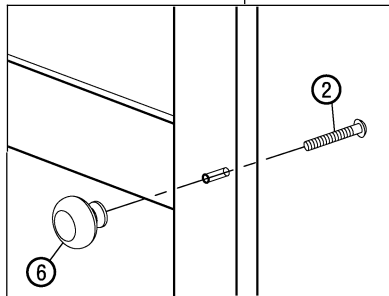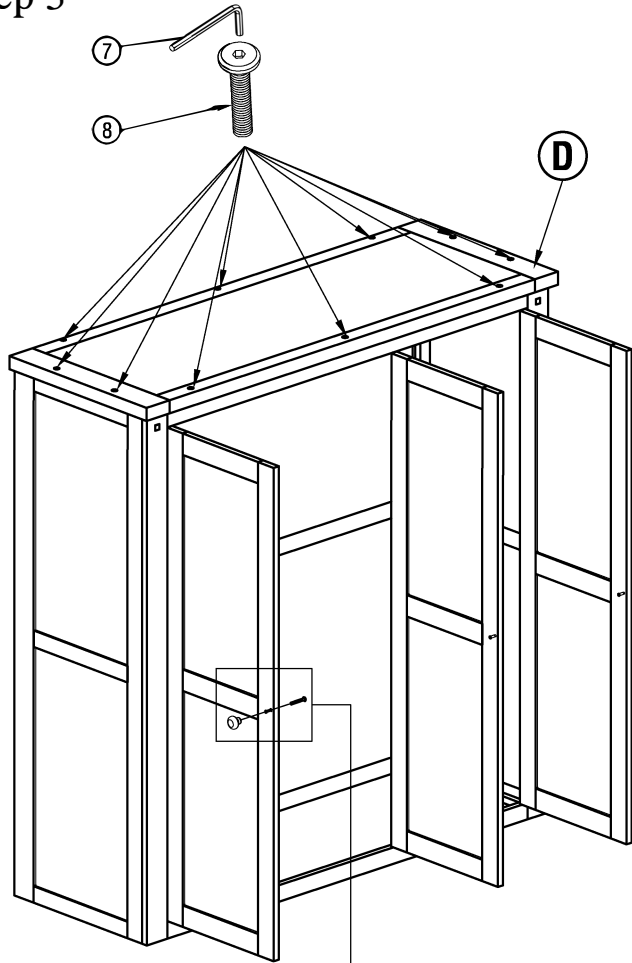

Step 4

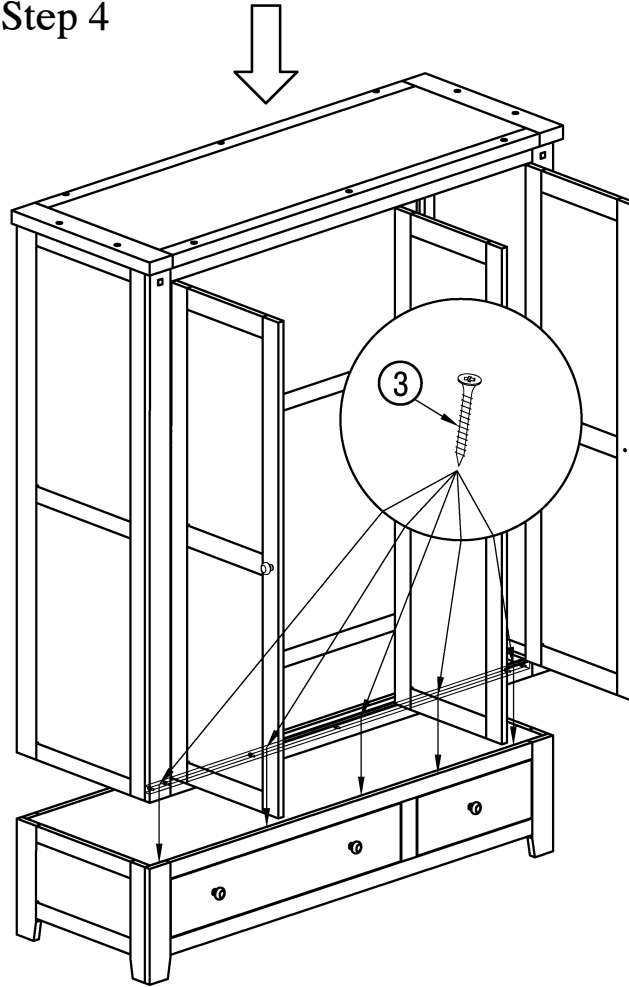

Step 5

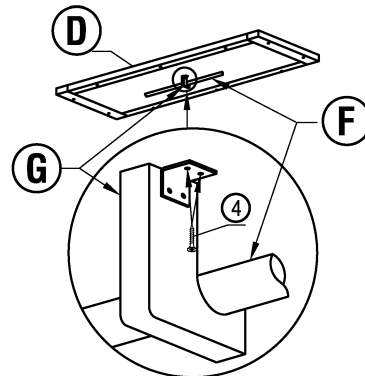

Step 6

