



GG260603-409-4AM-LW

ASSEMBLY INTRODUCTION


Needed for Assembly:

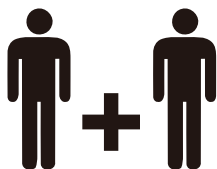



2 People

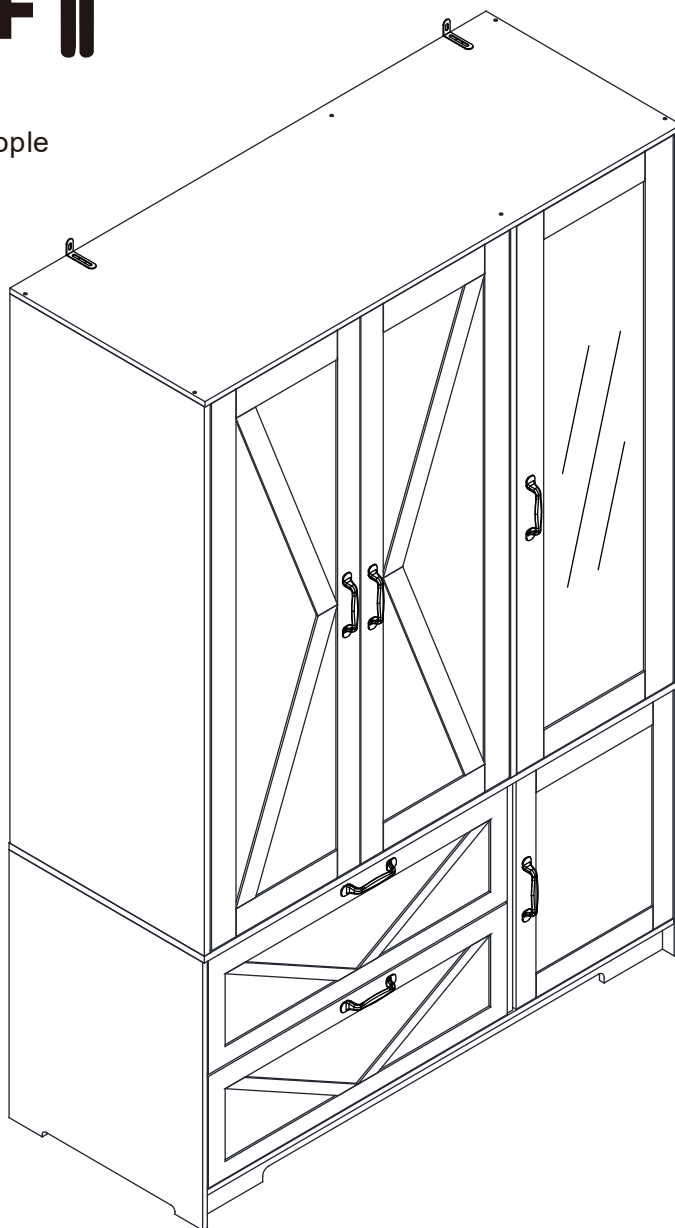

Exploded View

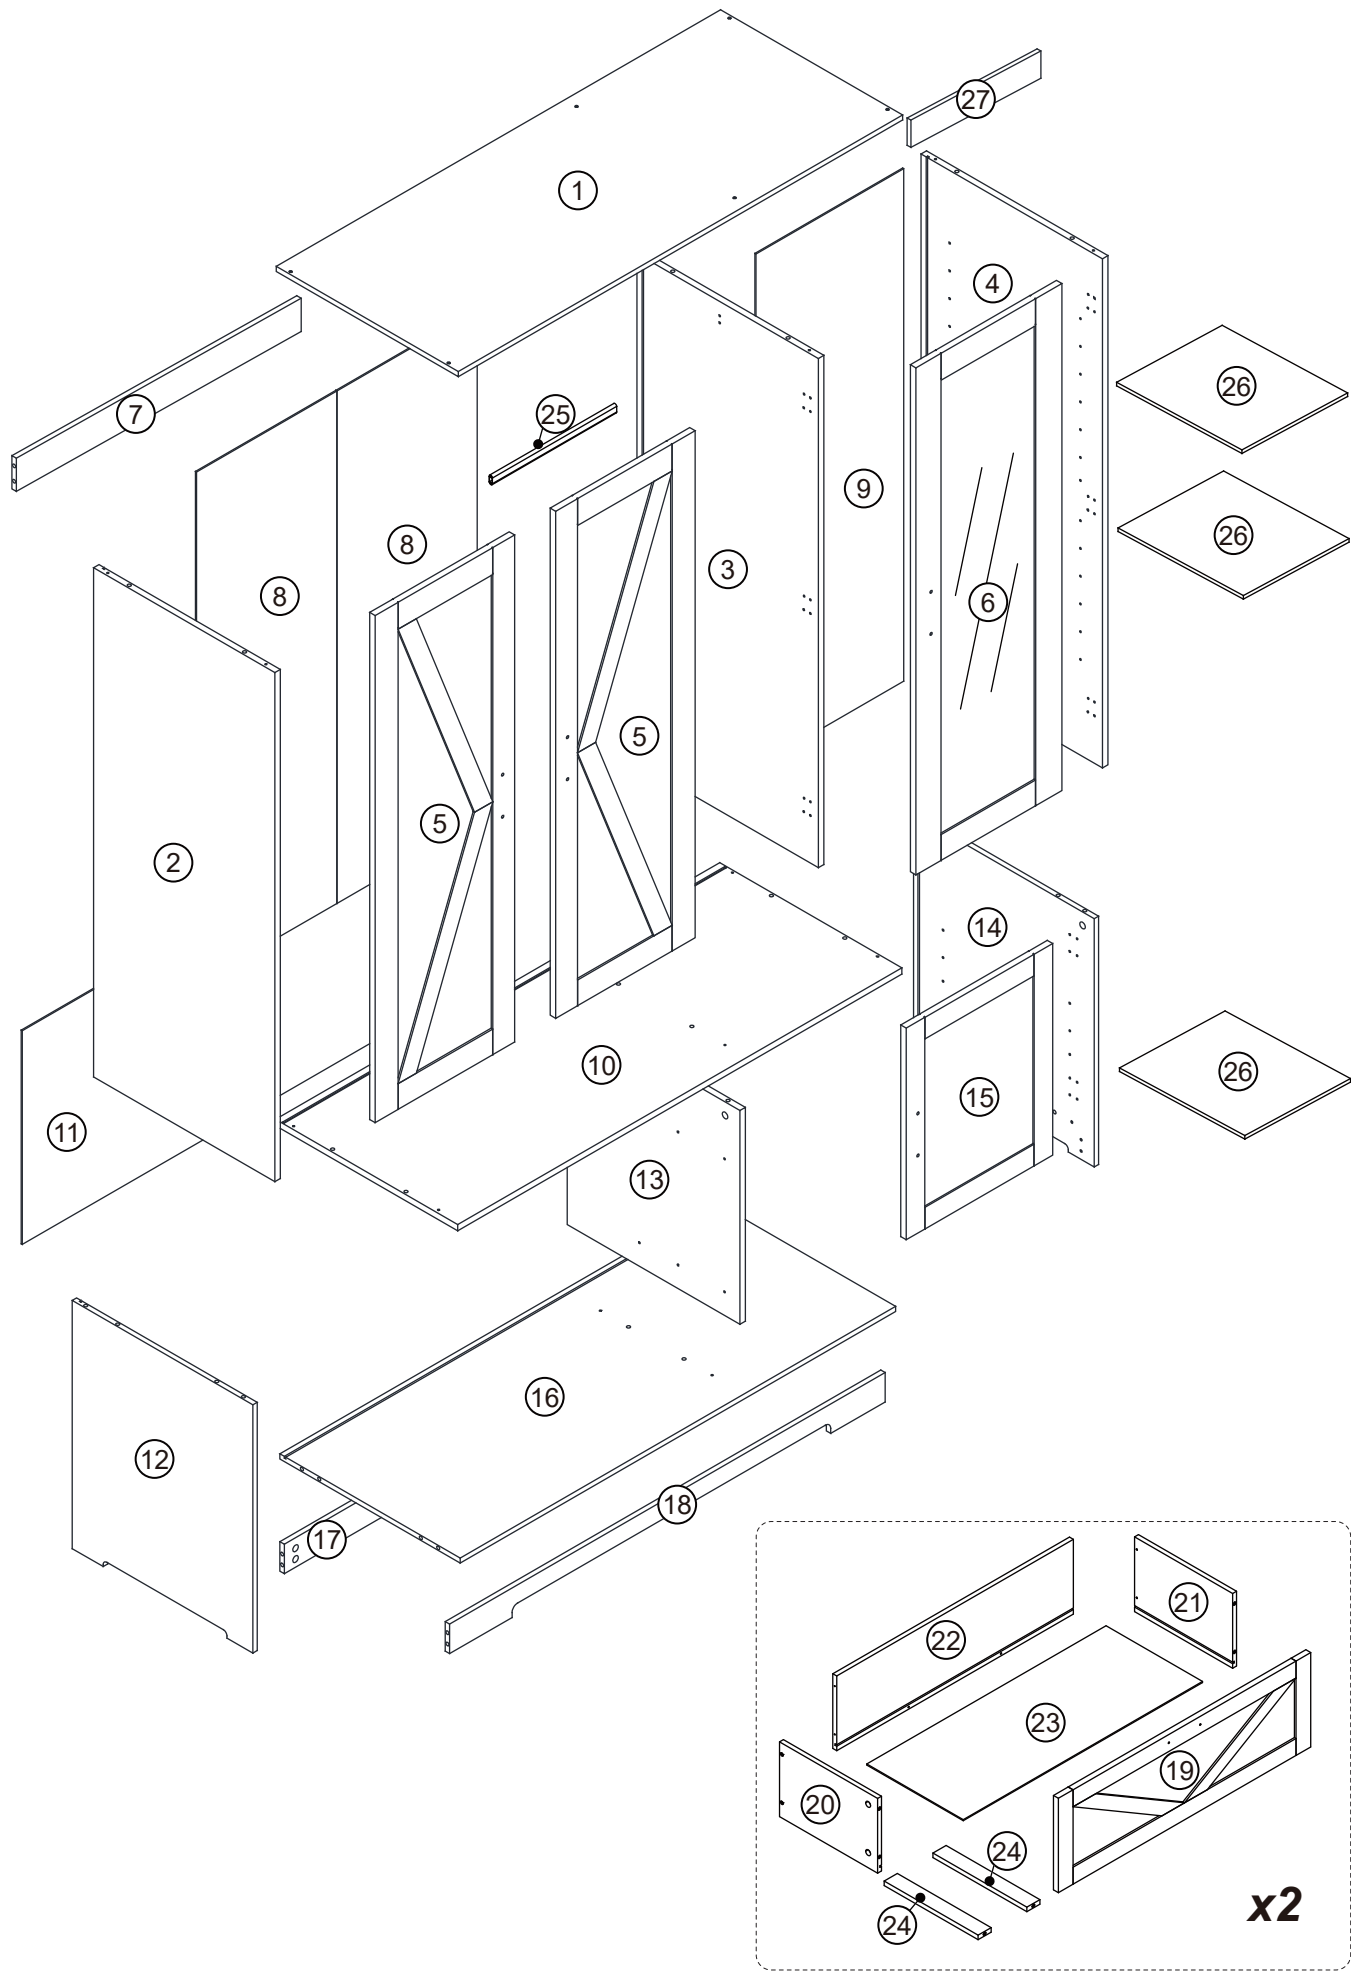



Fittings

 A x 38+2 M6 x 35 mm	 B x 38+2 φ15 x 9.5 mm	 C x 24+1 φ6 x 30 mm	 D x 26+1 φ5 x 45 mm	 E x 32 φ3 x 12mm
 F x 6 132 x 13 x 20 mm	 G x 12 φ4 x 20 mm	 H x 2 φ4 x 17 mm	 I x 1 4 mm	 J x 3
 K x 2 75 x 15 x 30 mm	 L x 11 φ35 mm	 M x 68 φ4 x 12 mm	 N x 1 190 x 30 x 15 mm	 O x 12 φ5 x 19 mm
 P x 4 φ4 x 12 mm	 Q x 12	 R x 2 φ6 x 30 mm	 S x 2 φ4 x 35 mm	 T x 2
 CL x 2 300 mm	 CR x 2 300 mm	 DL x 2 300 mm	 DR x 2 300 mm	 U x 1

CAM-LOCK




**WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE**

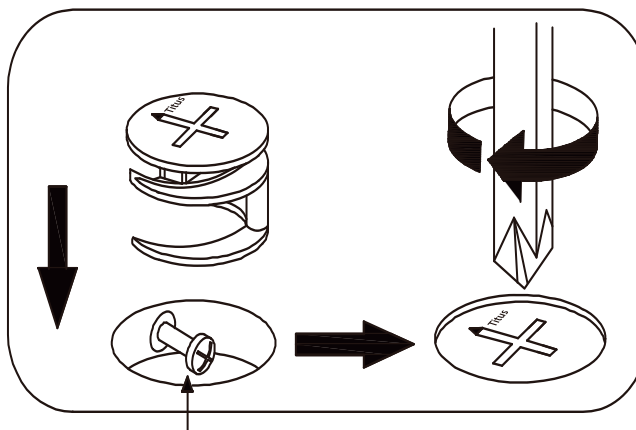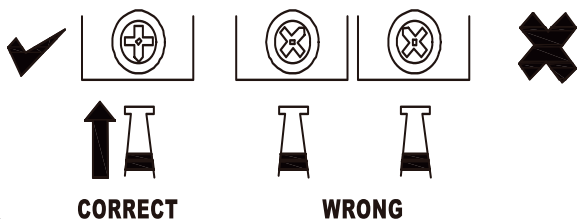


Quickfit head needs to be in centre

QUICKFIT



**Tighten until shoulder is flush
with panel. DO not overtighten
or undertighten (see example
below)**

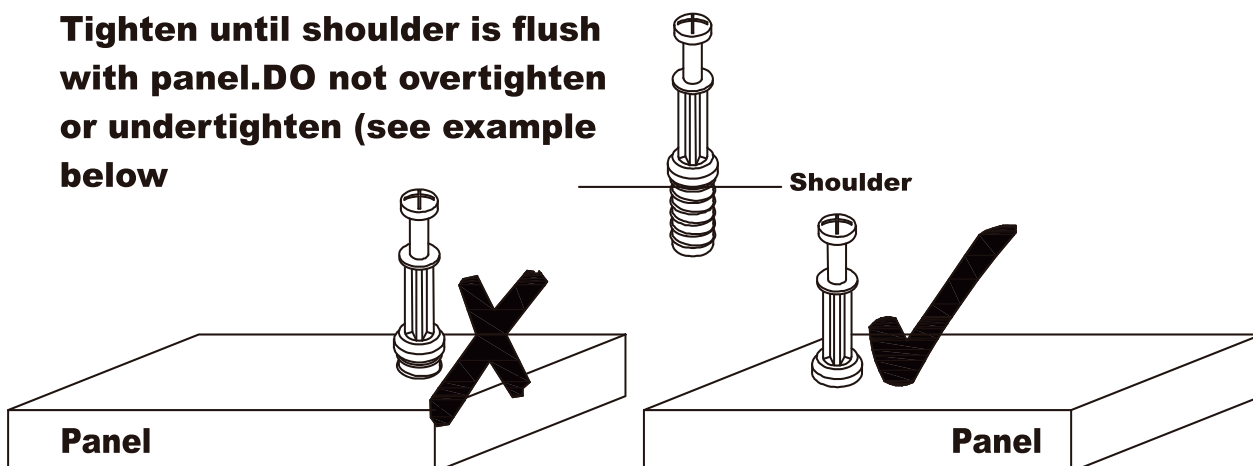


Step 1

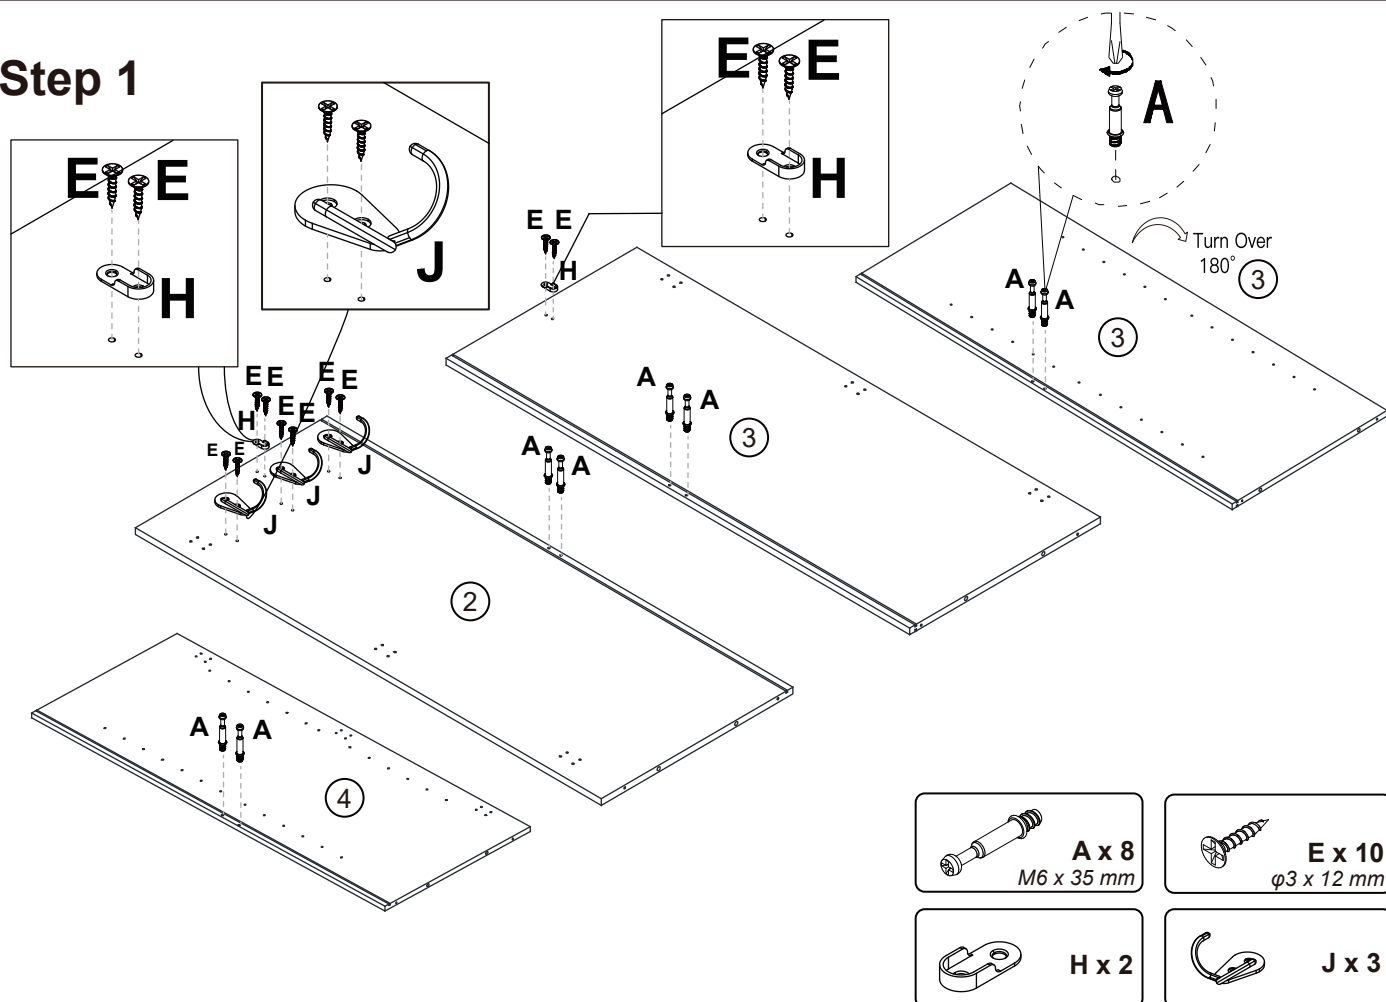


Step 2

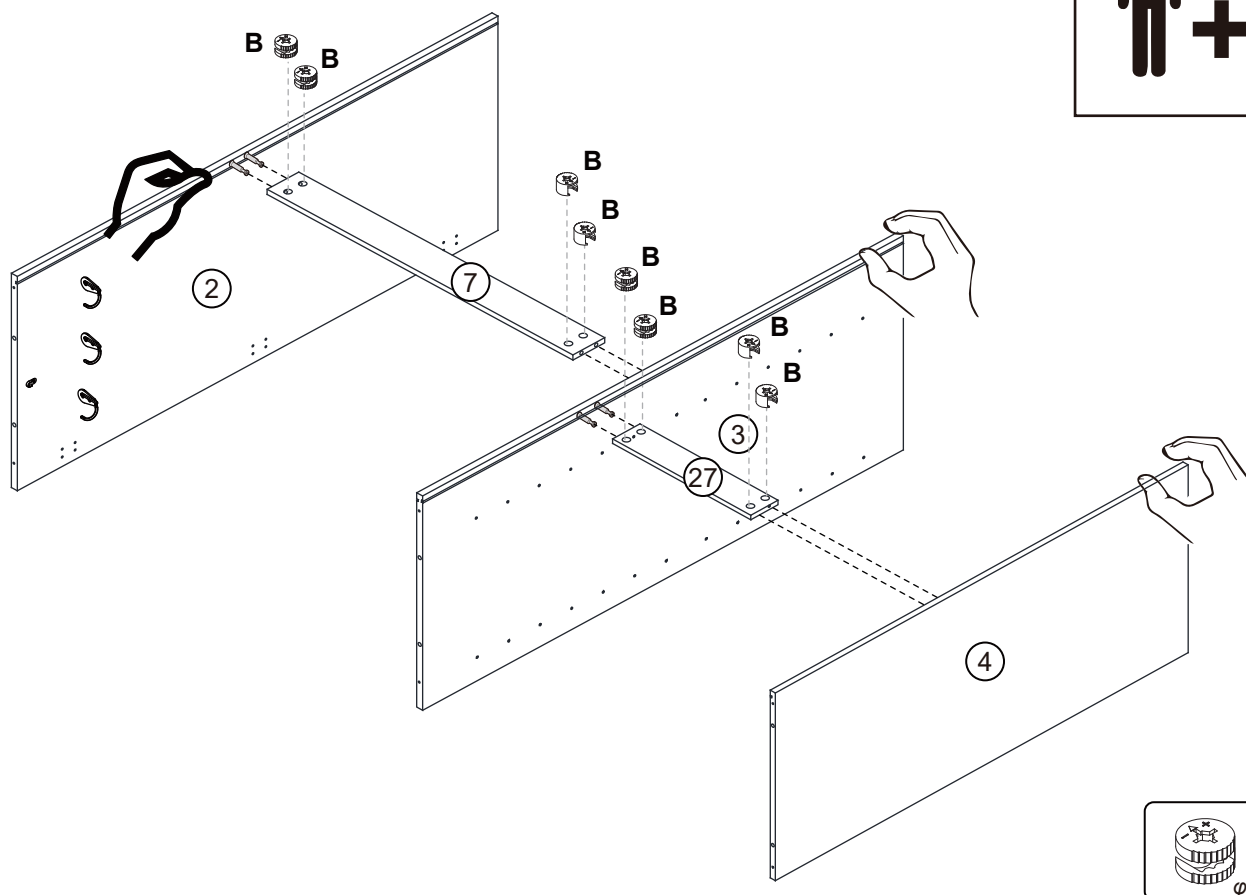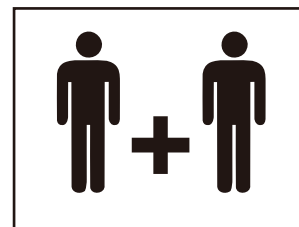


Step 3

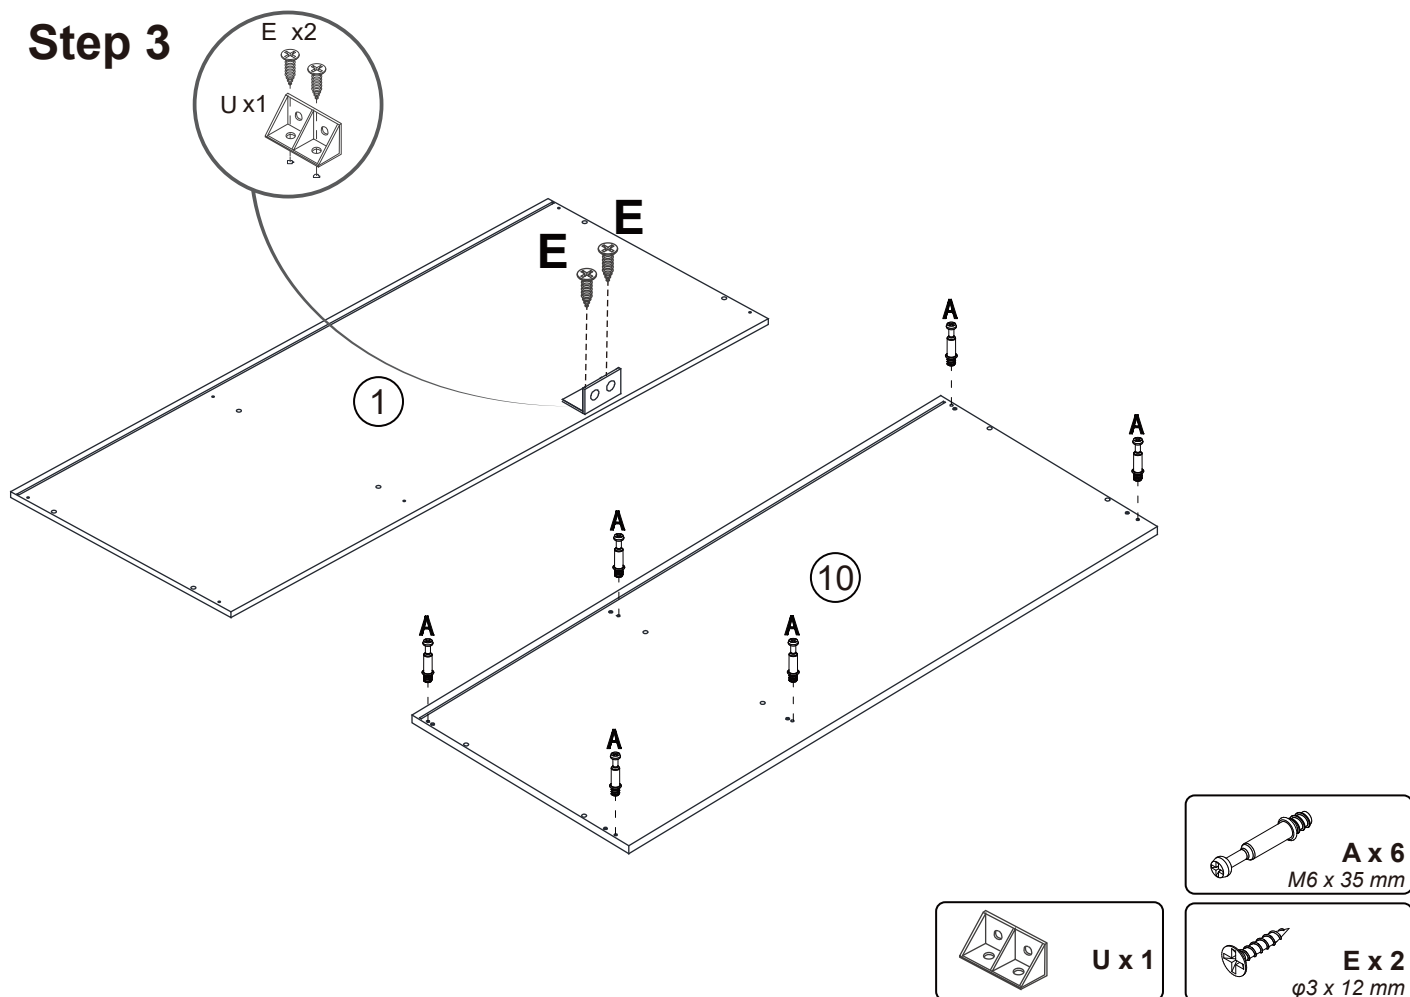






Step 4

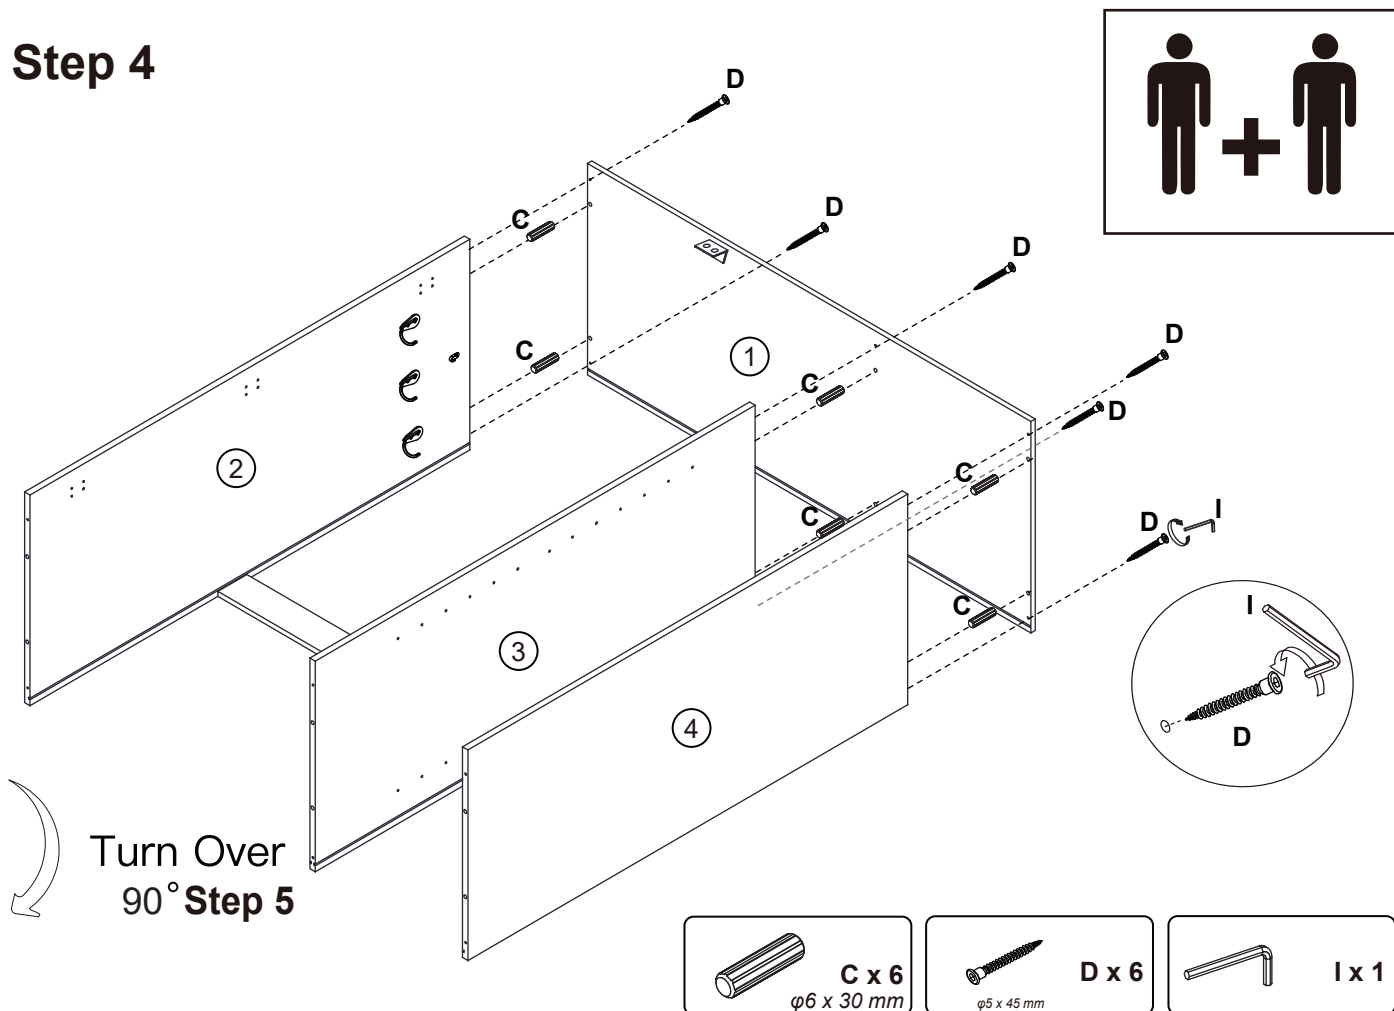


Step 5

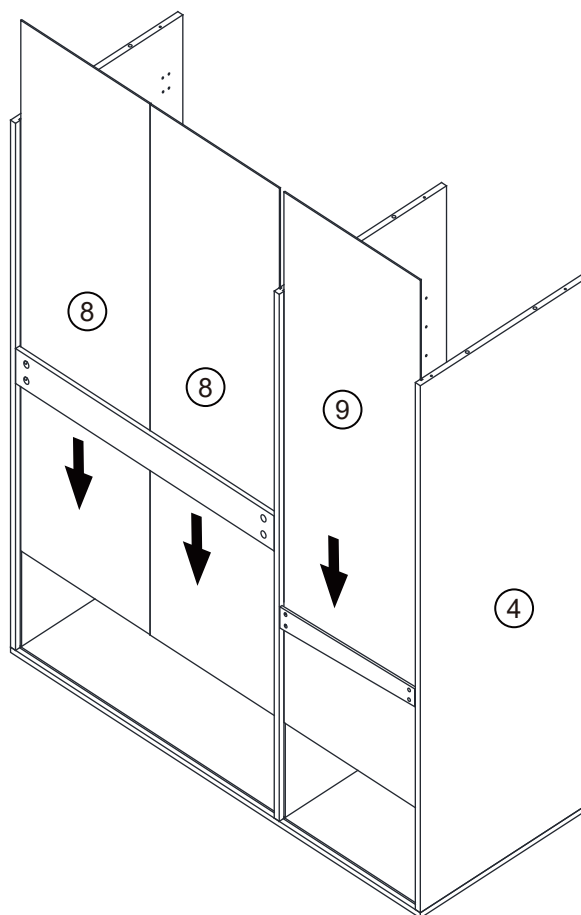


Step 6

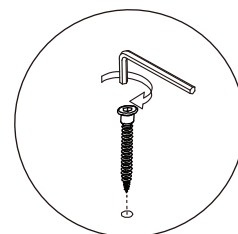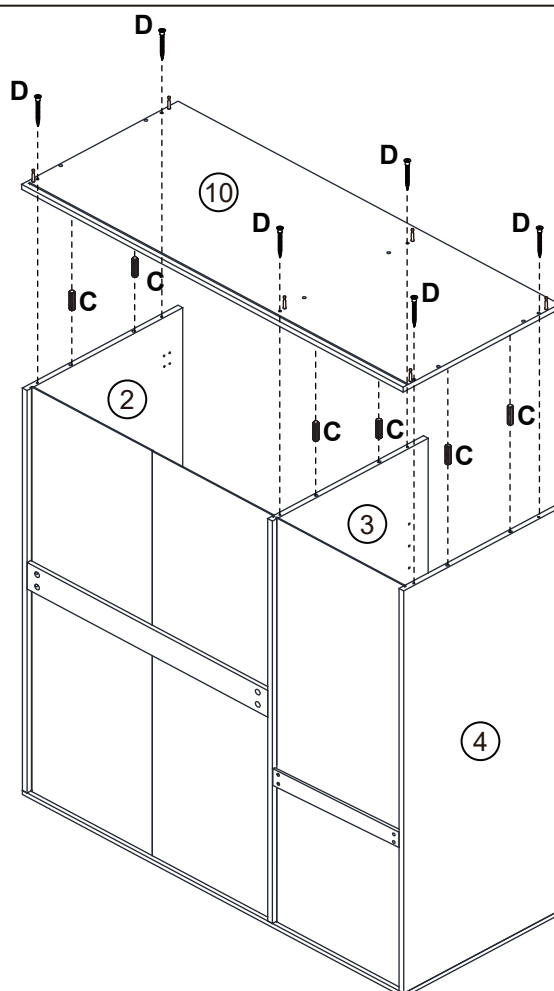




Step 7

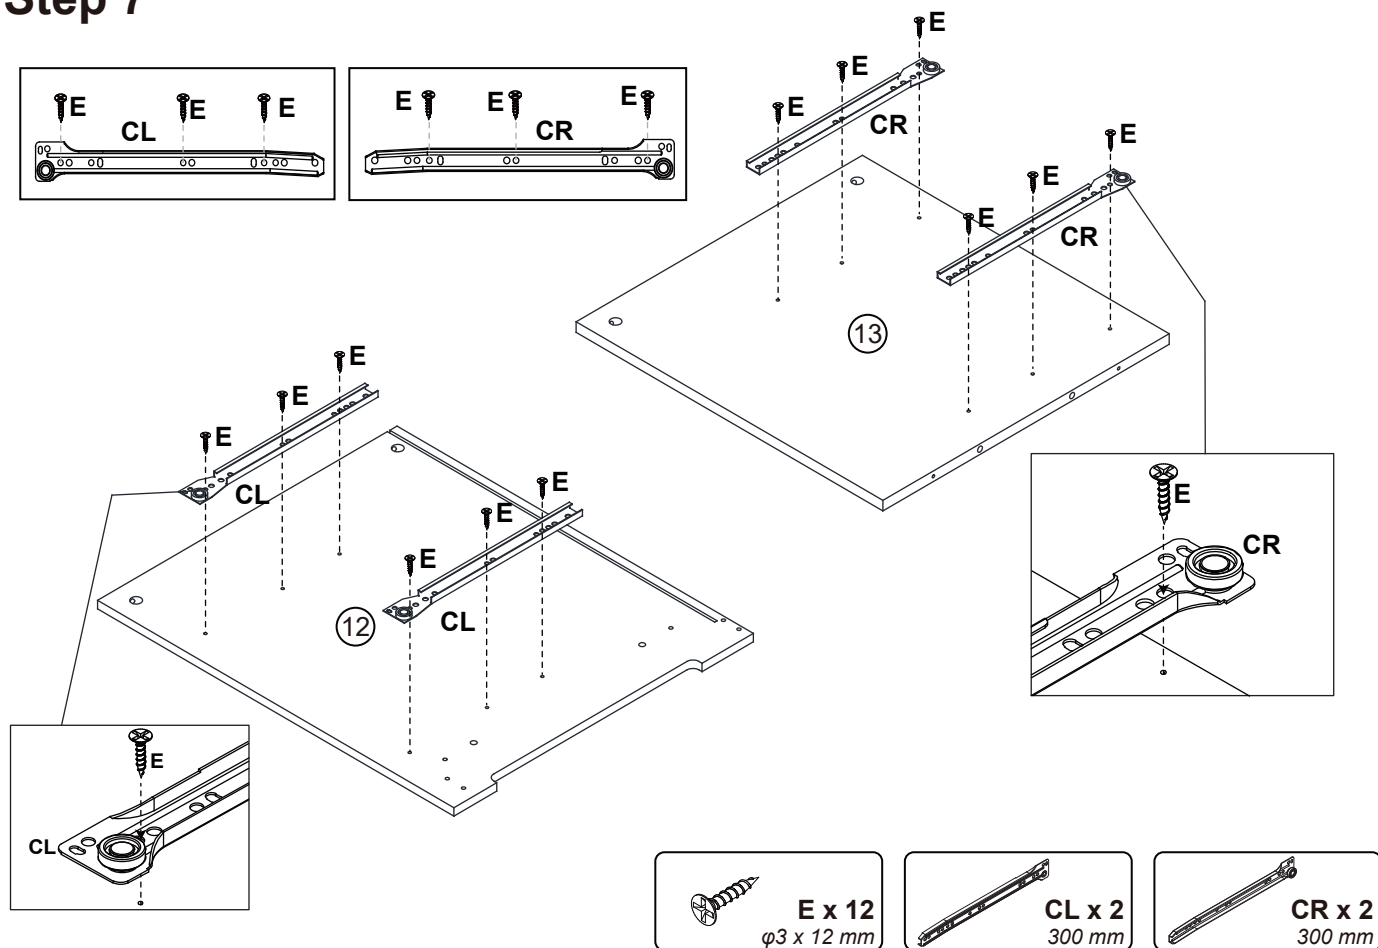




Step 8

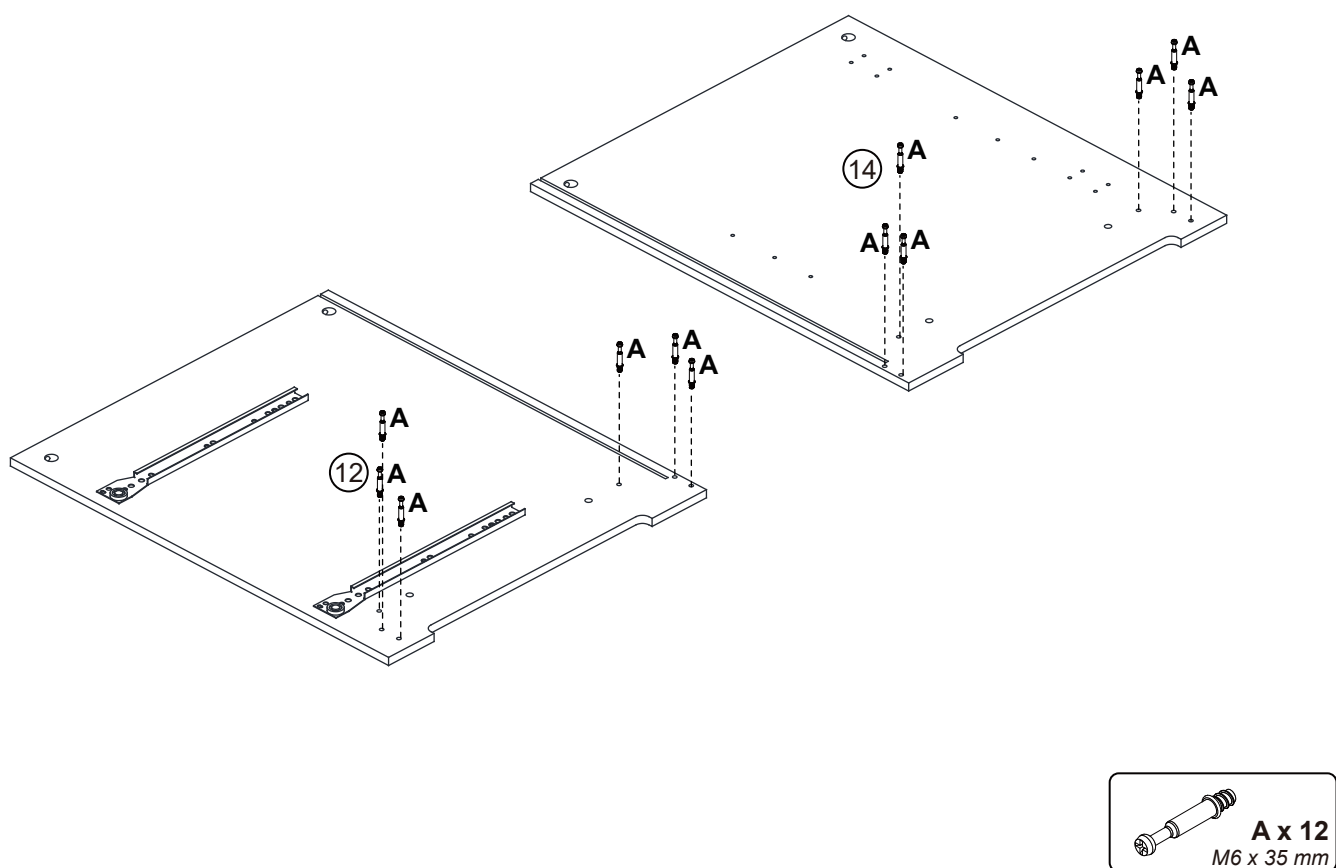




Step 9

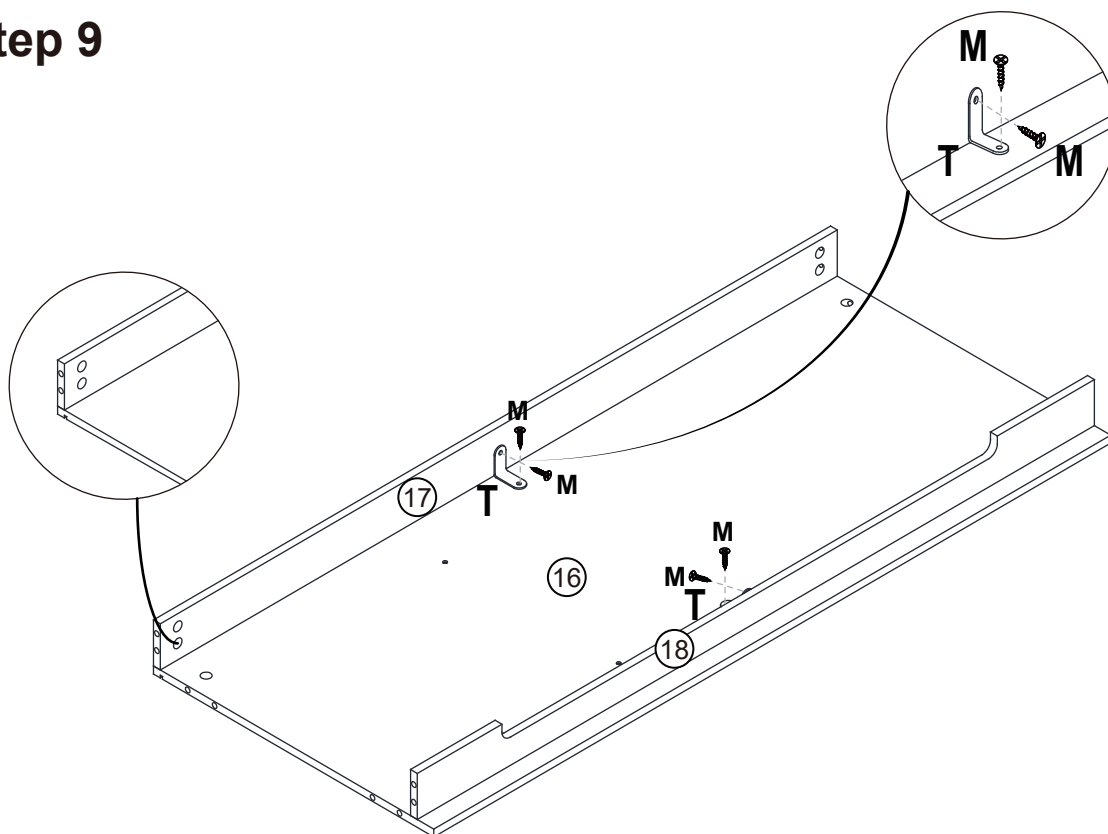




Step 10

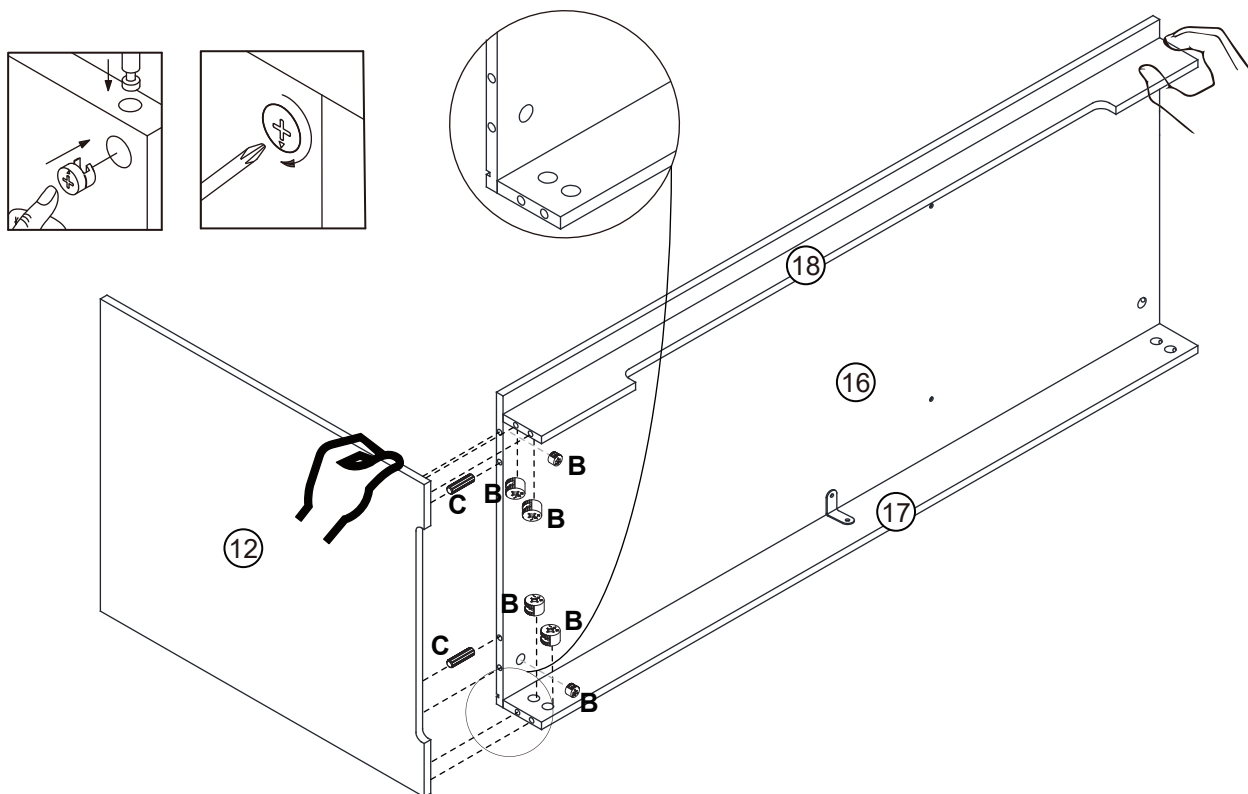


Step 11

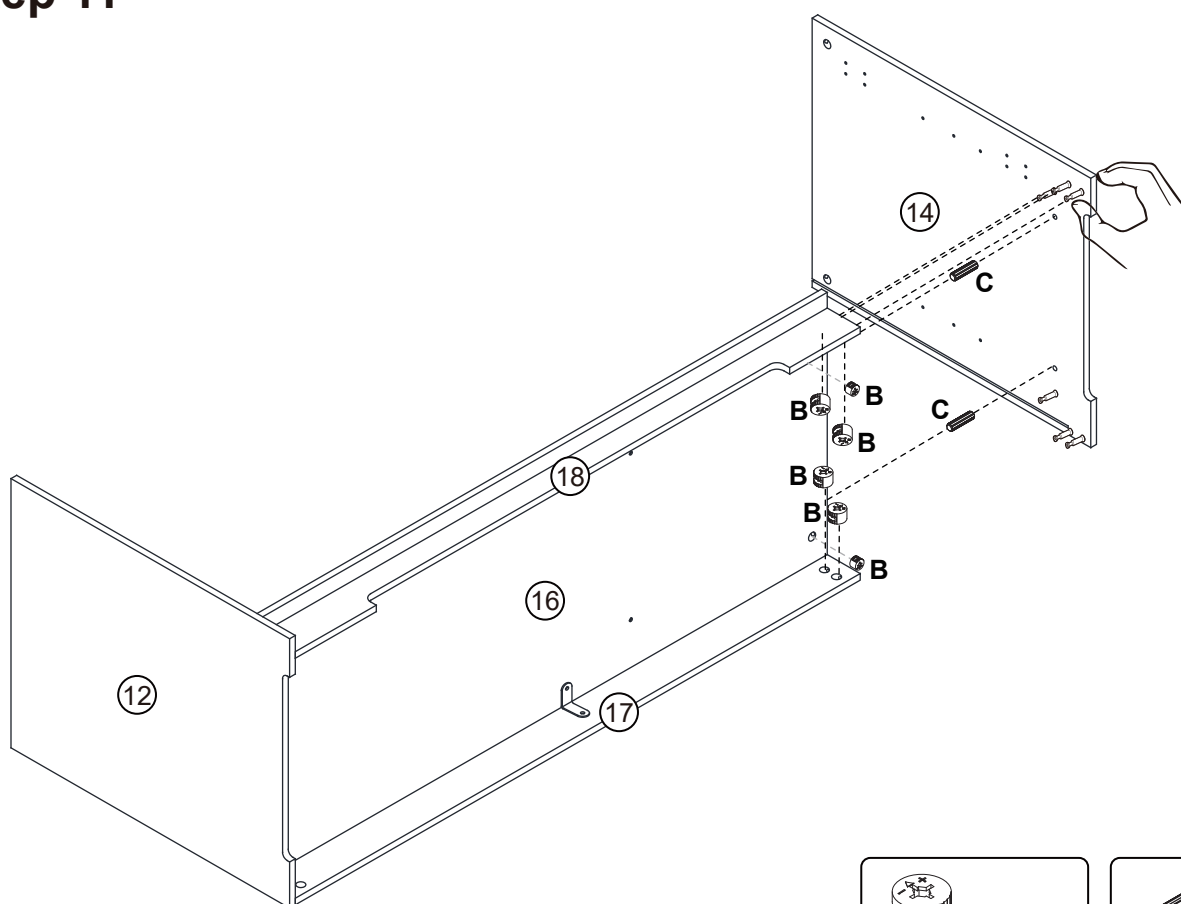





Step 12

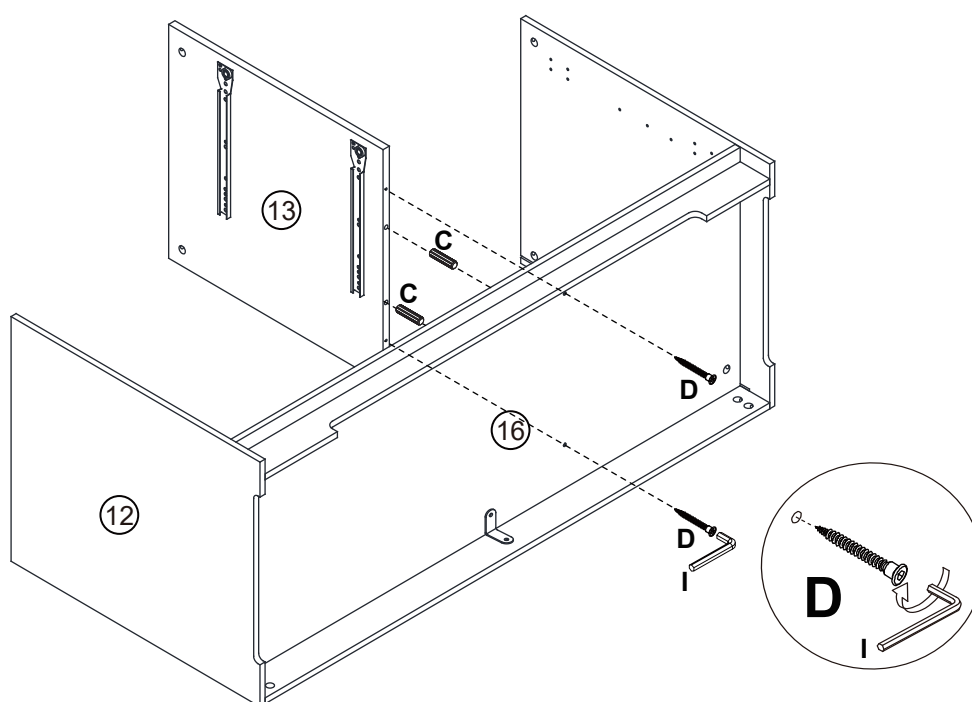


Step 13

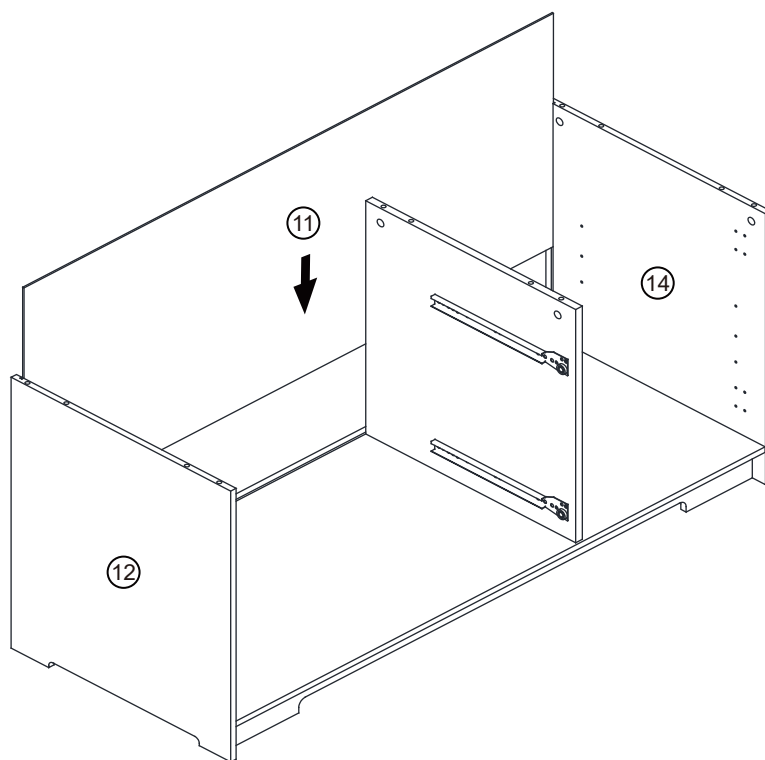



Step 14

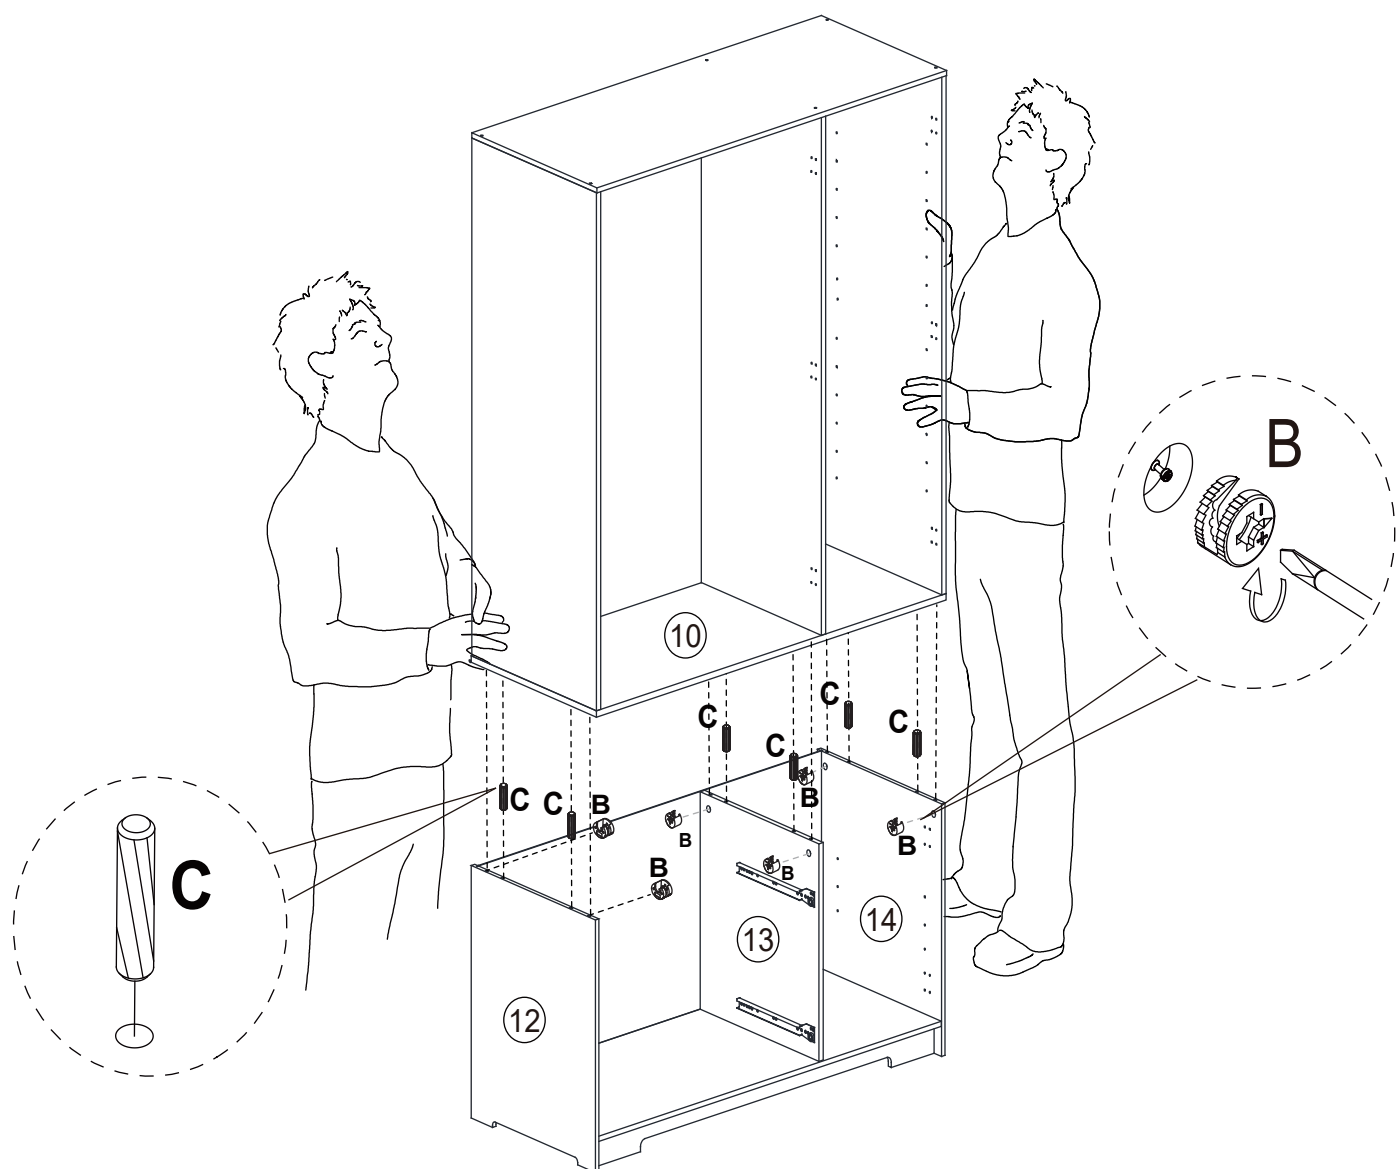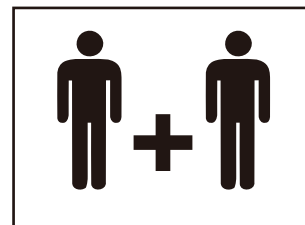



Step 15

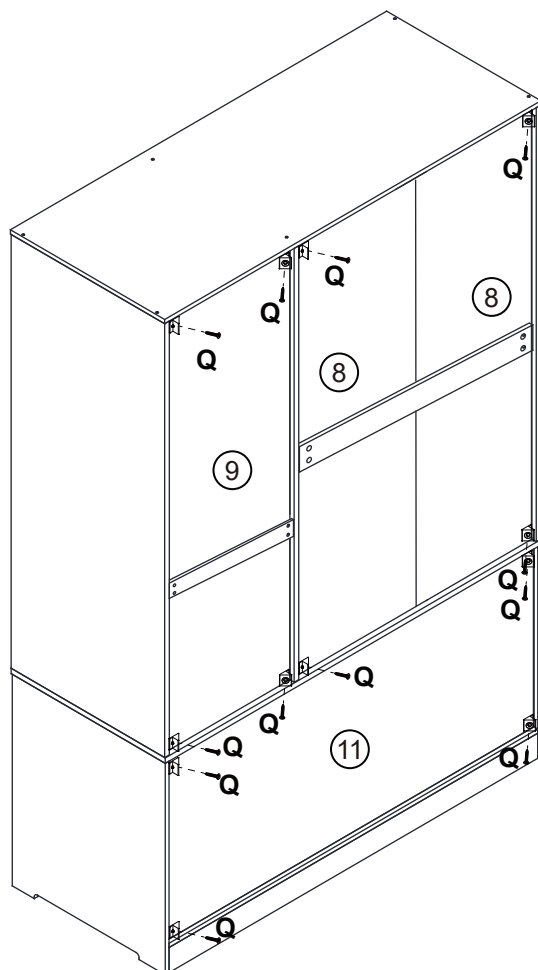


Step 16

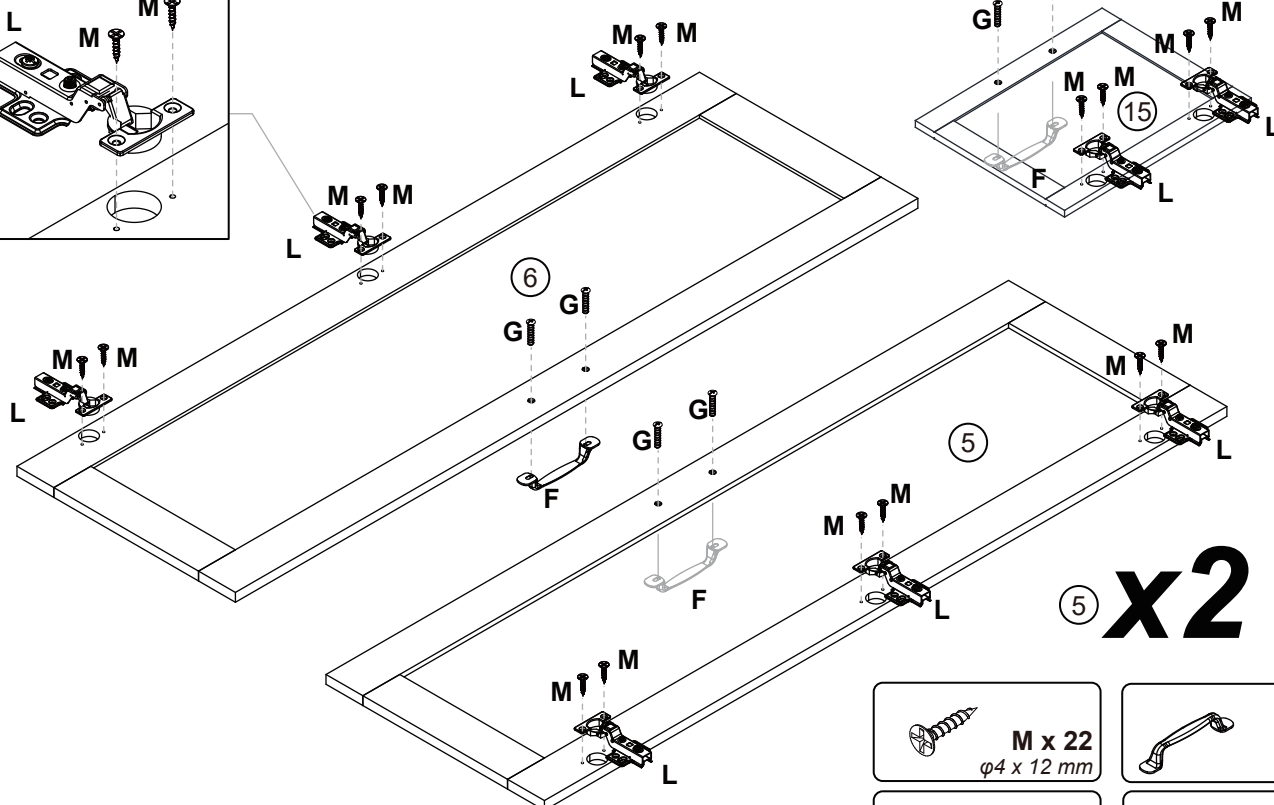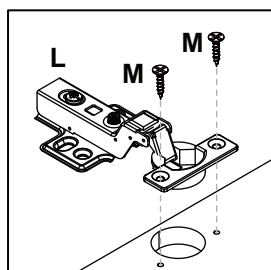


⑤ **x2**




Step 17

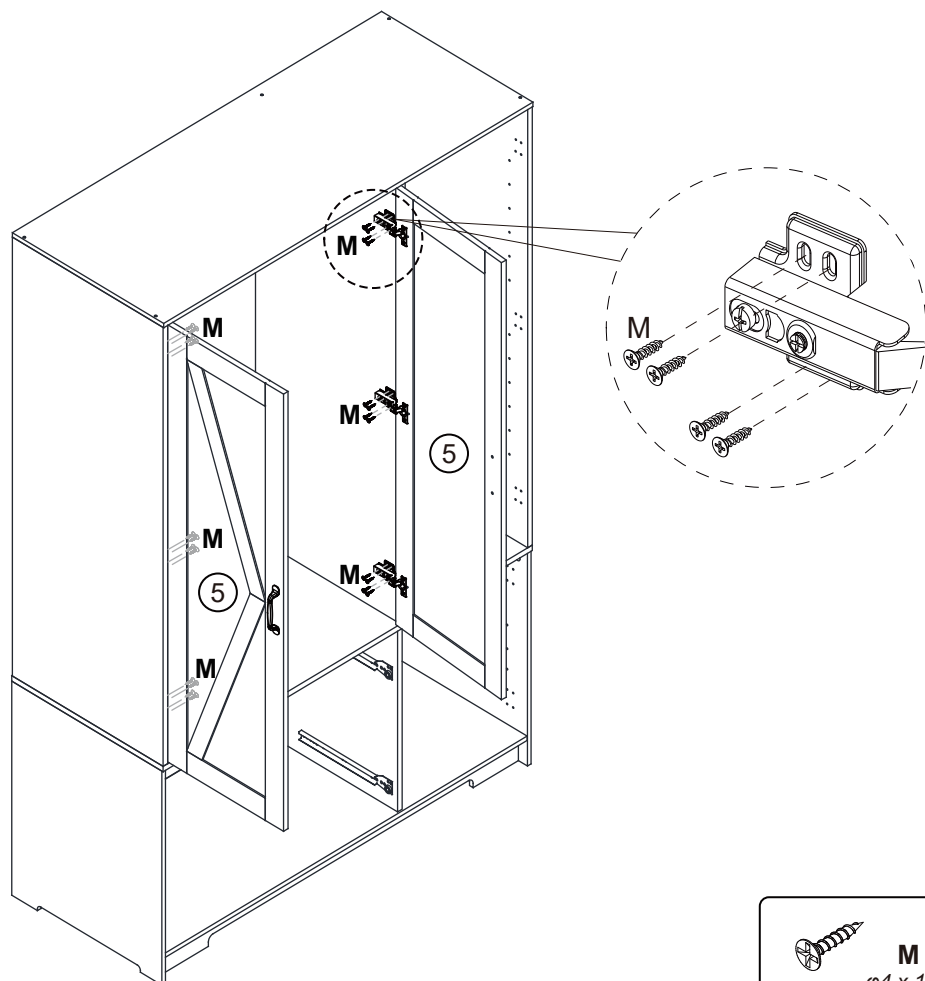


Step 18

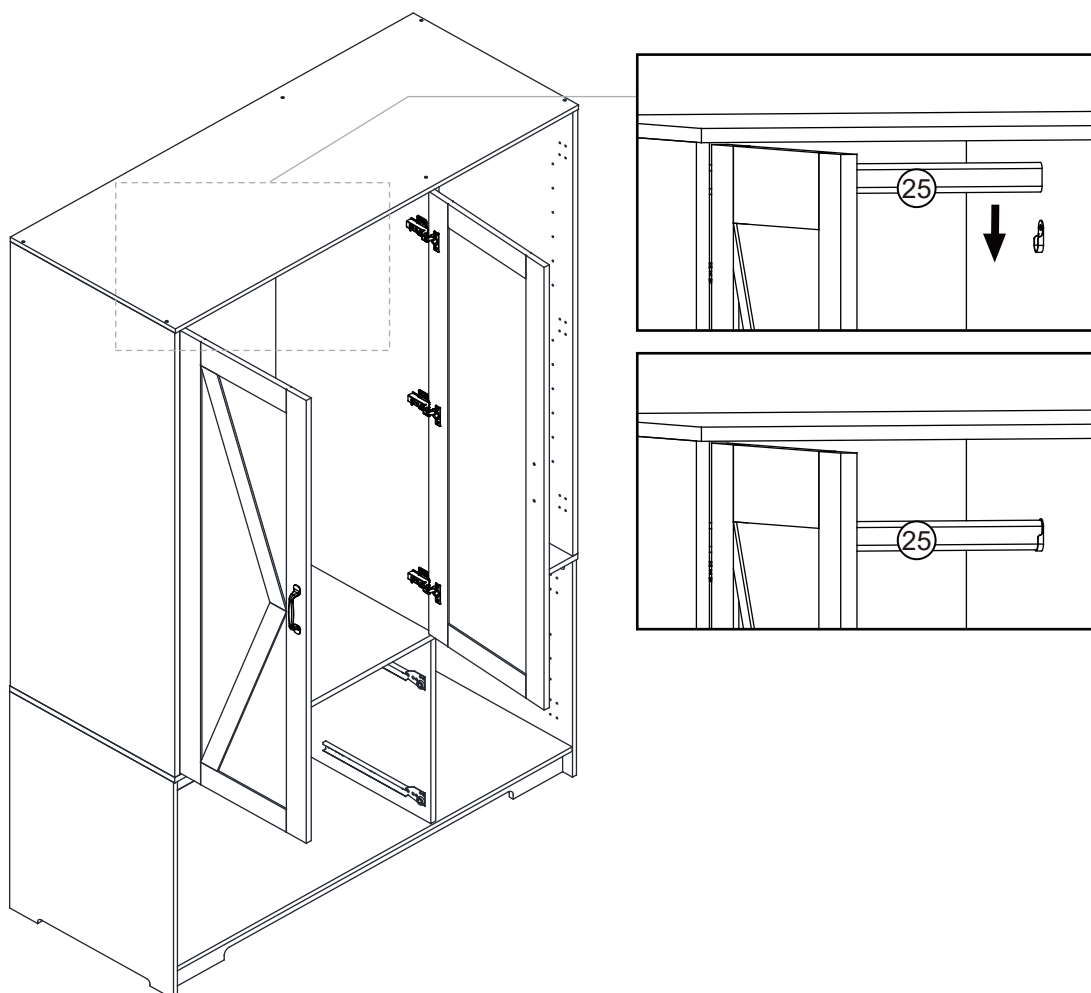

Step 19

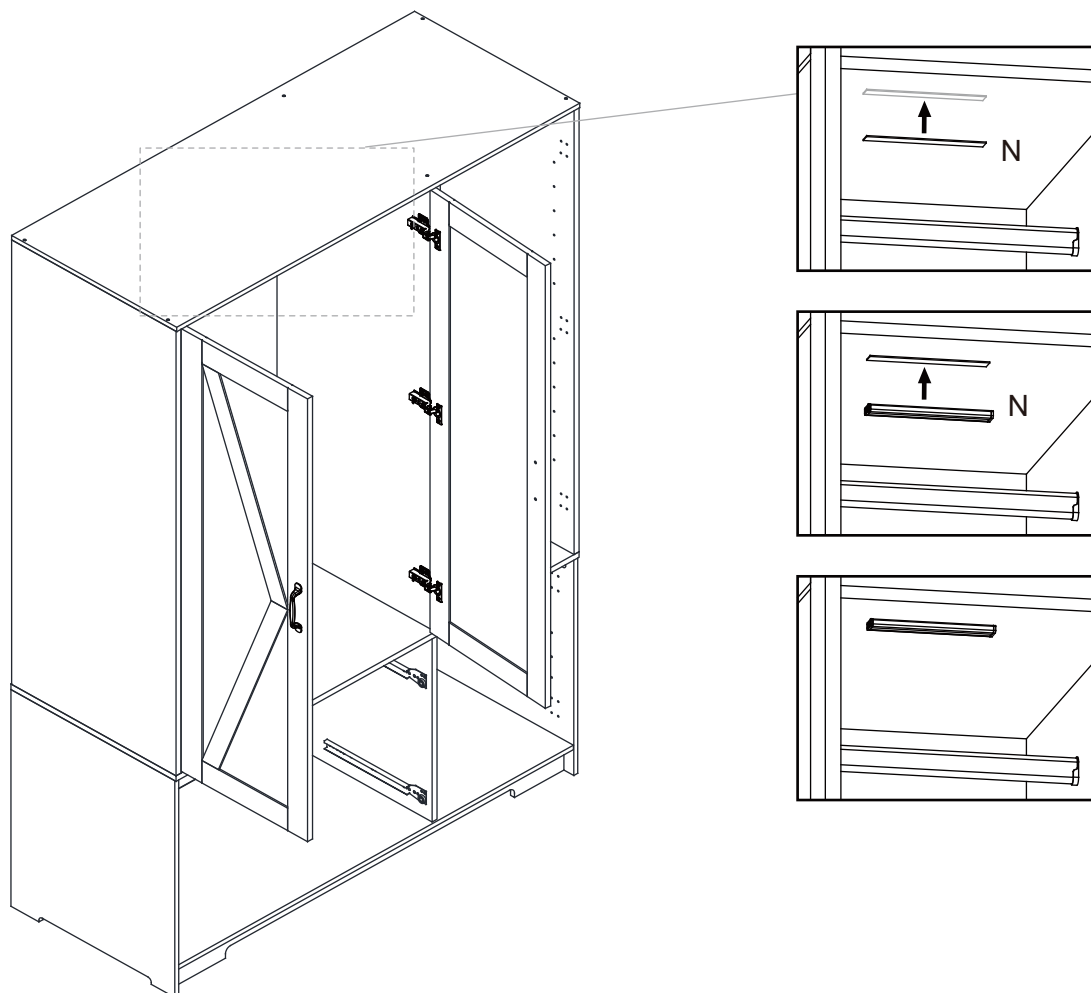


Step 20

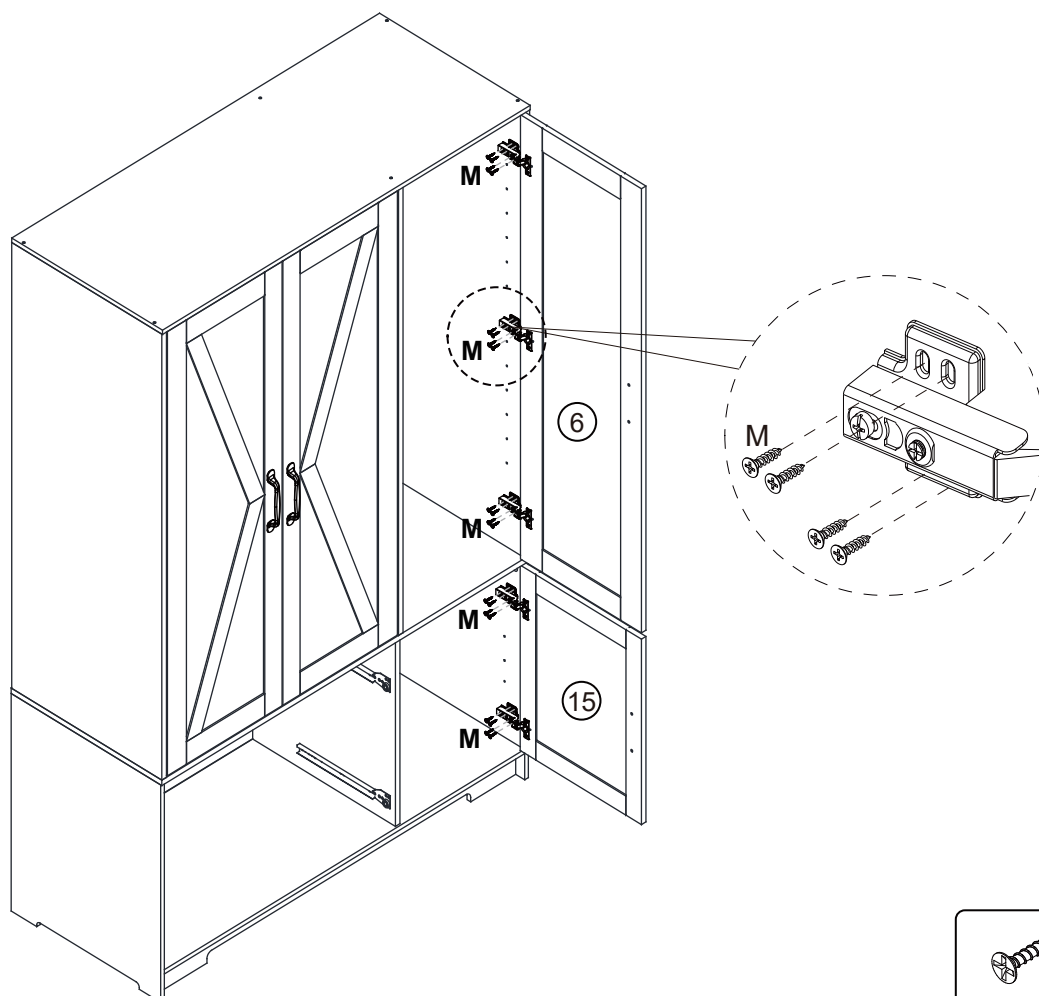



M x 20
 $\varnothing 4 \times 12 \text{ mm}$

Step 21

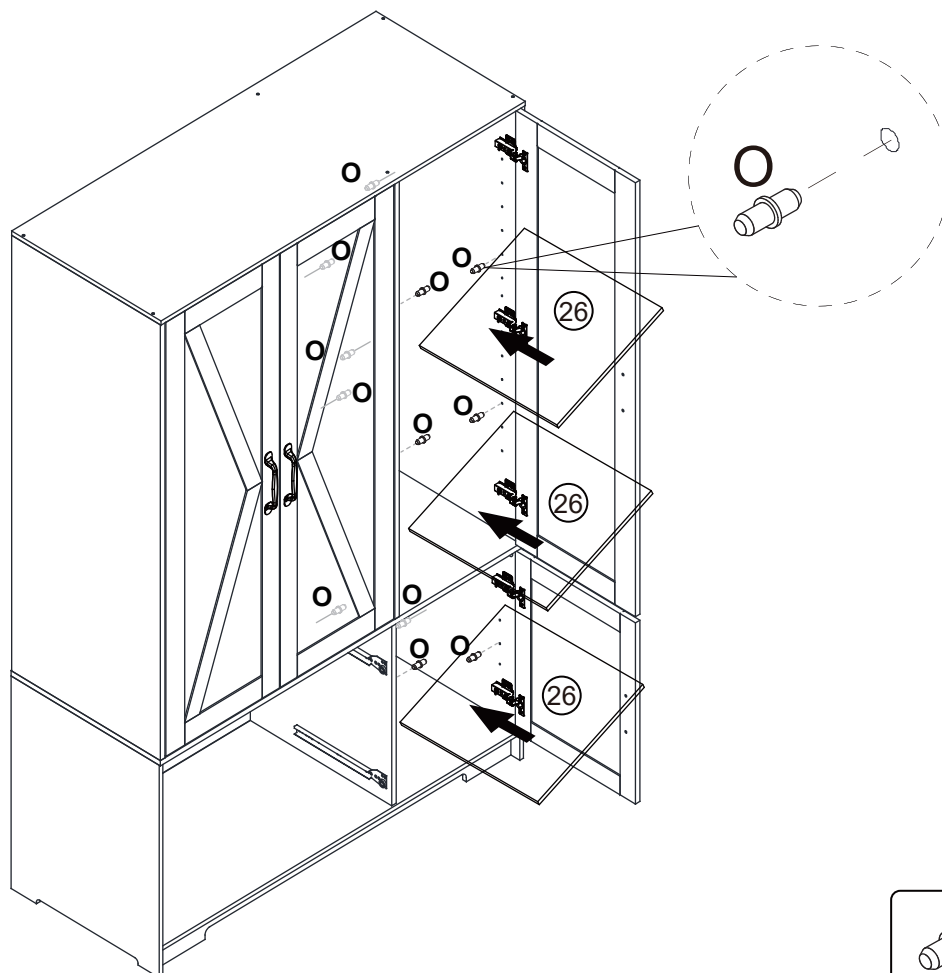



O x 12

Step 22

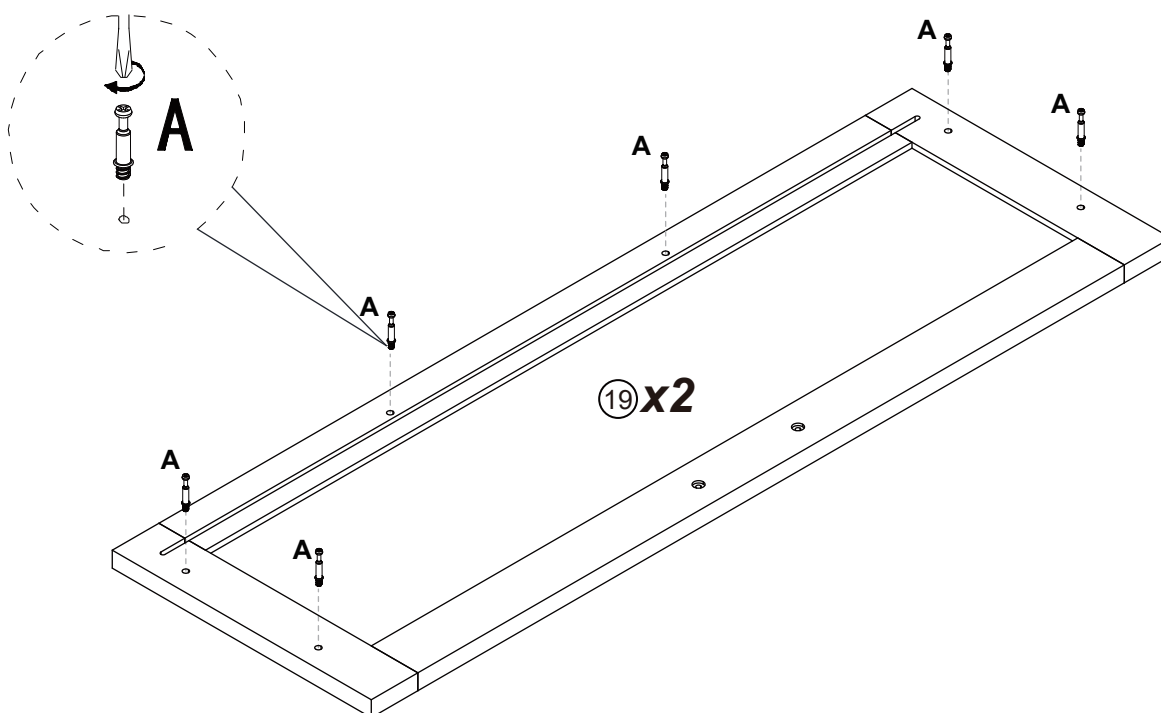


A x 12
M6 x 35 mm





Step 23

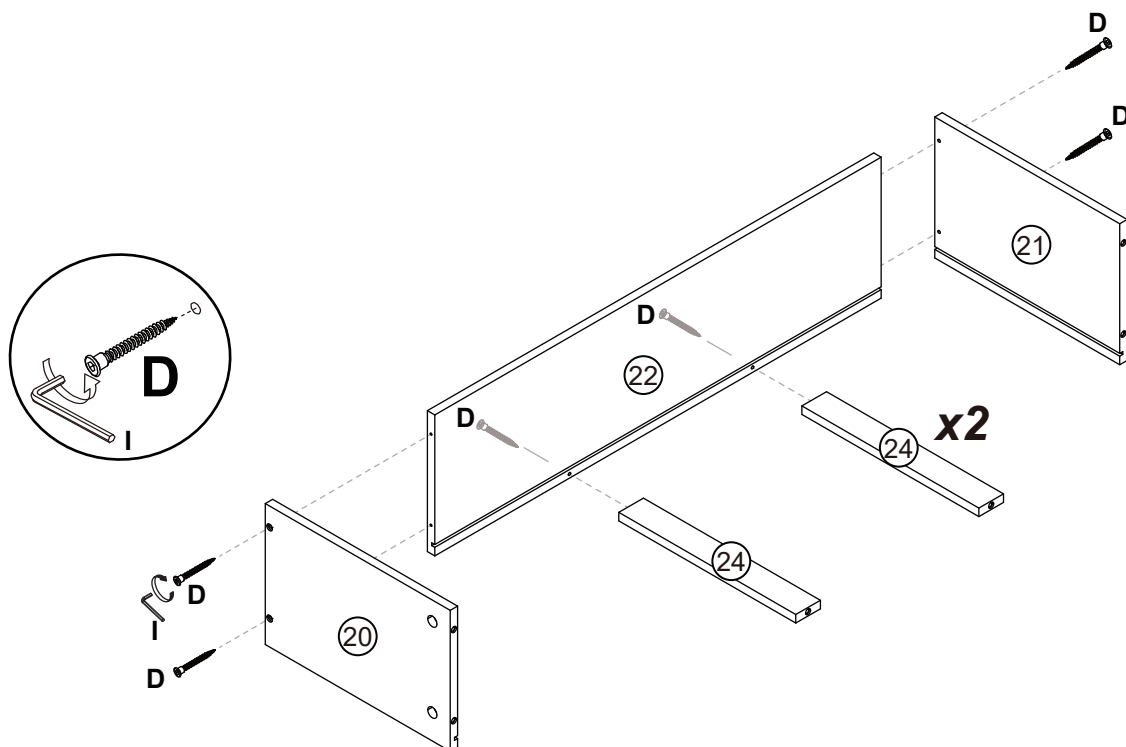





Step 24

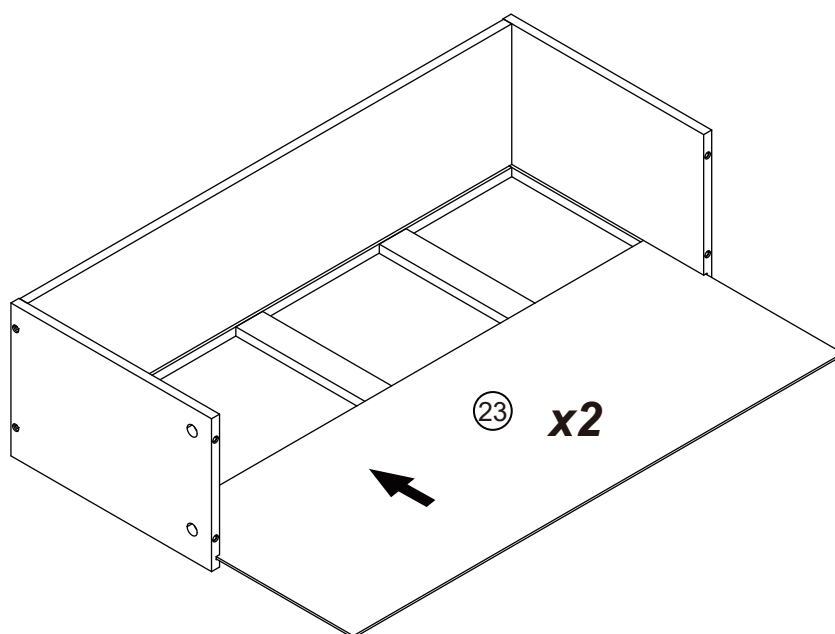


Step 25

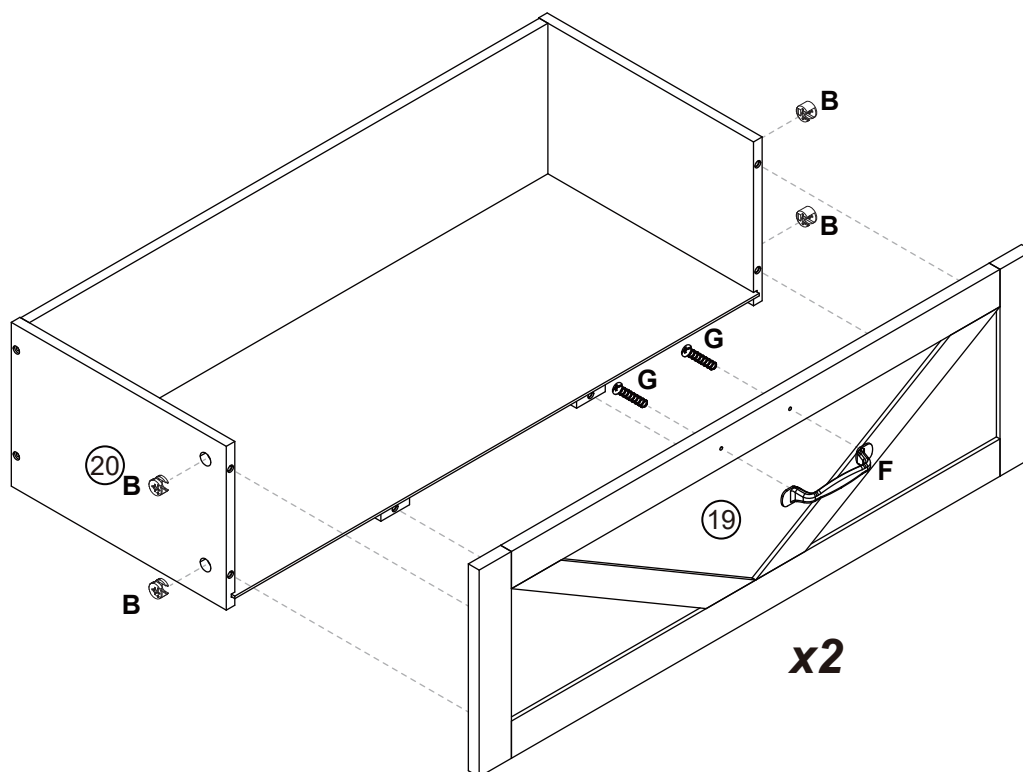


Step 26

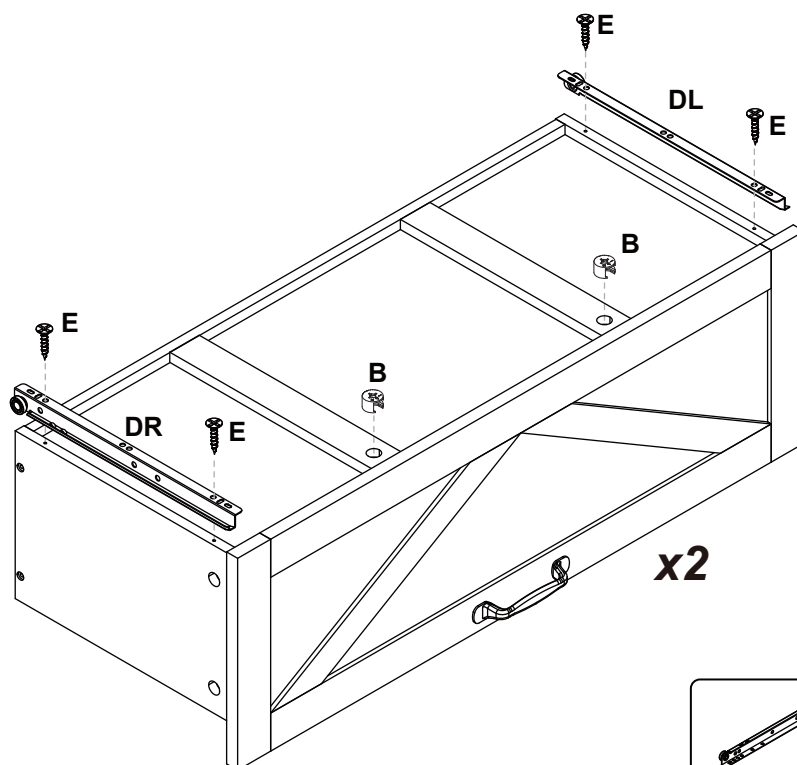

Step 27

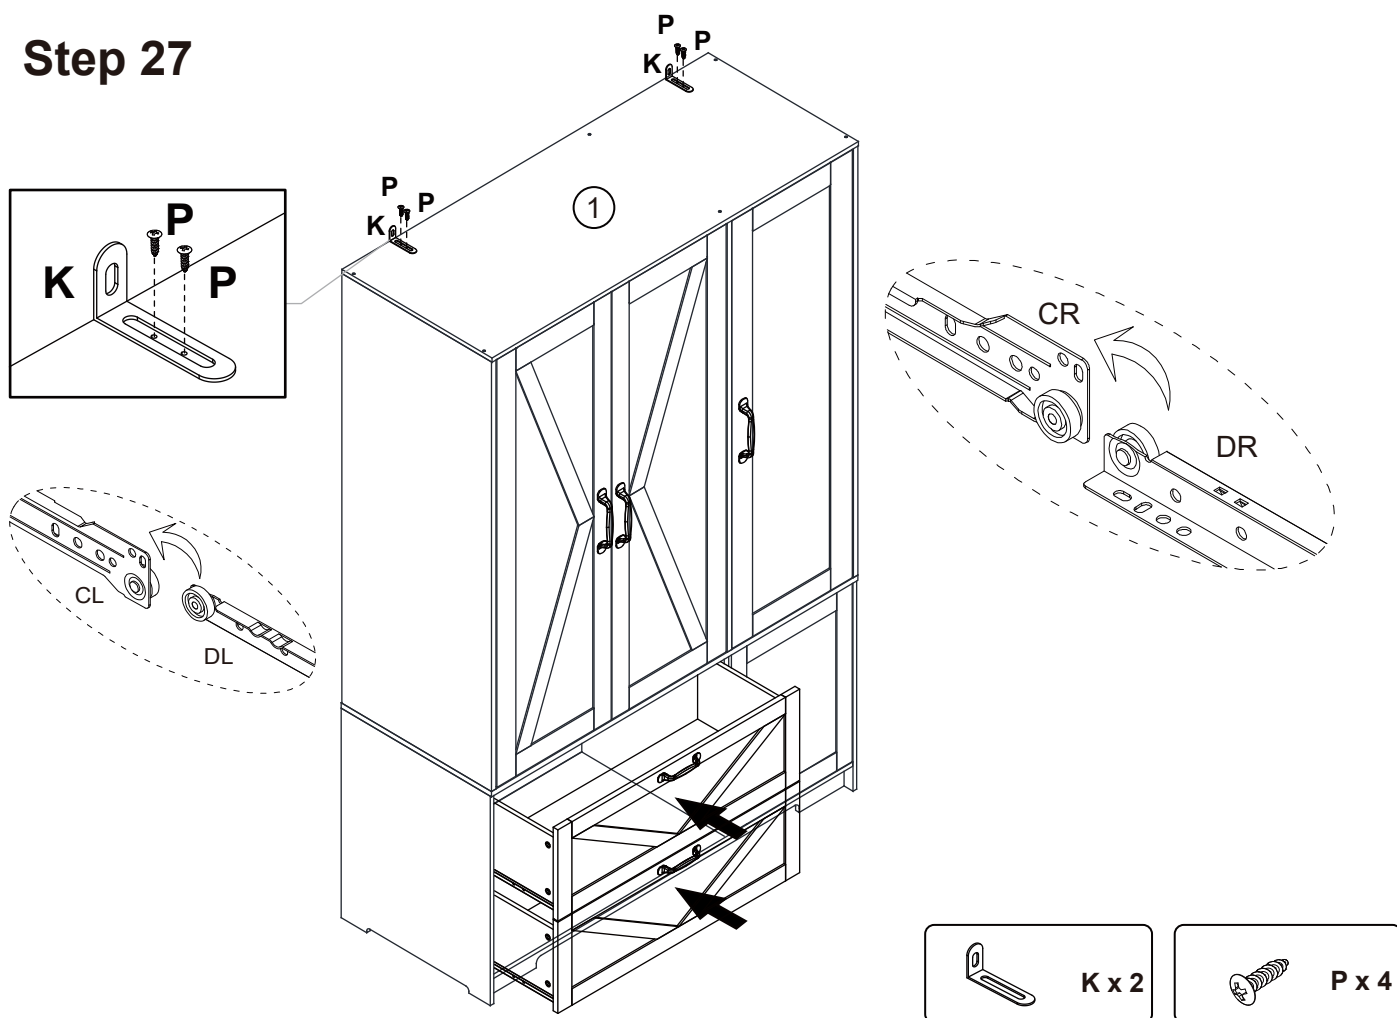

Step 28


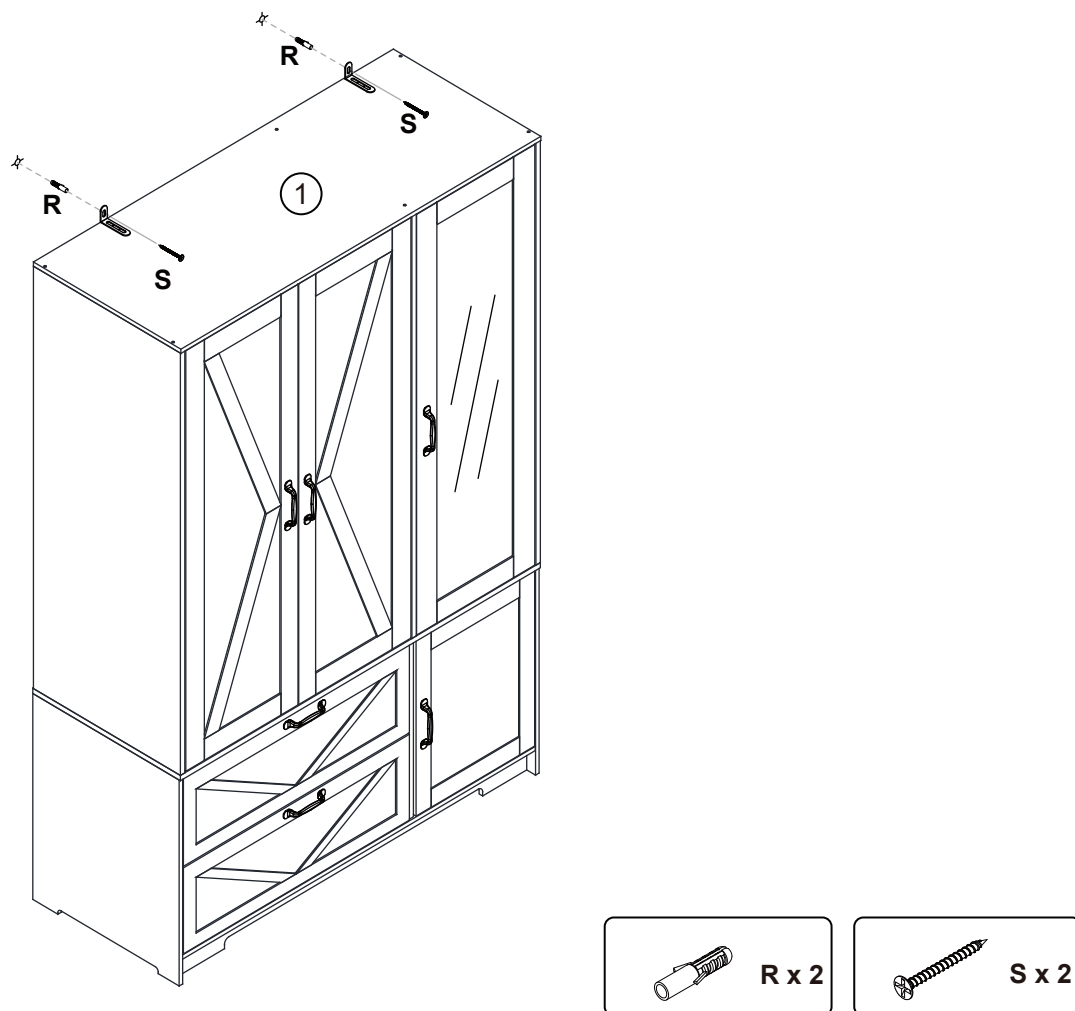


Step 29





Customer Attention:

To align doors and control gap in between doors. Product doors may need adjusting during and after assembly. This can be done by adjusting appropriate screws. See below illustration.

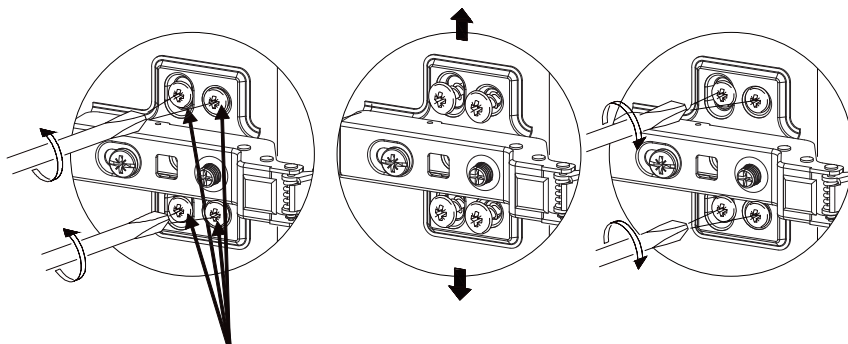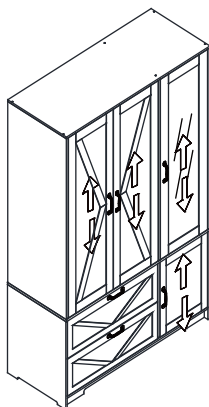



Vertical Door Adjustment:

Loosen both screws on all hinges and lift the door to the desired height. This allows an even space at the top and bottom between the door and frame.

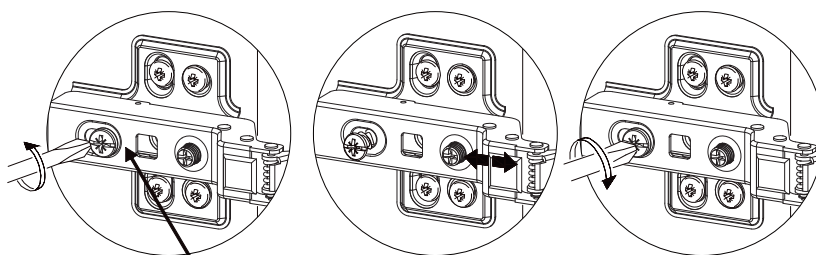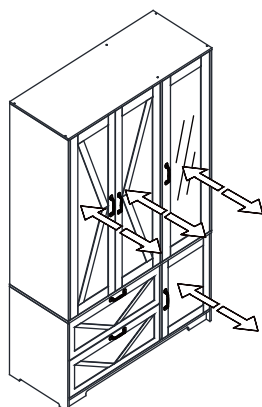

Lateral Door Adjustment:

If door is hinge bound, (rubbing on frame as you close or open door) loosening screw shown and move the door in appropriate direction. (In or out)

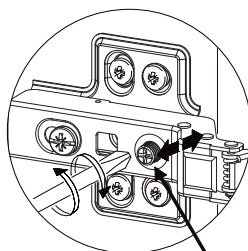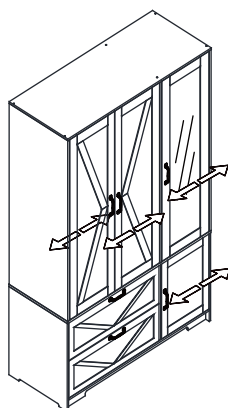

Horizontal Door Adjustment:

Rotate Screw clockwise or anticlockwise. This will produce an even gap between doors and frame.