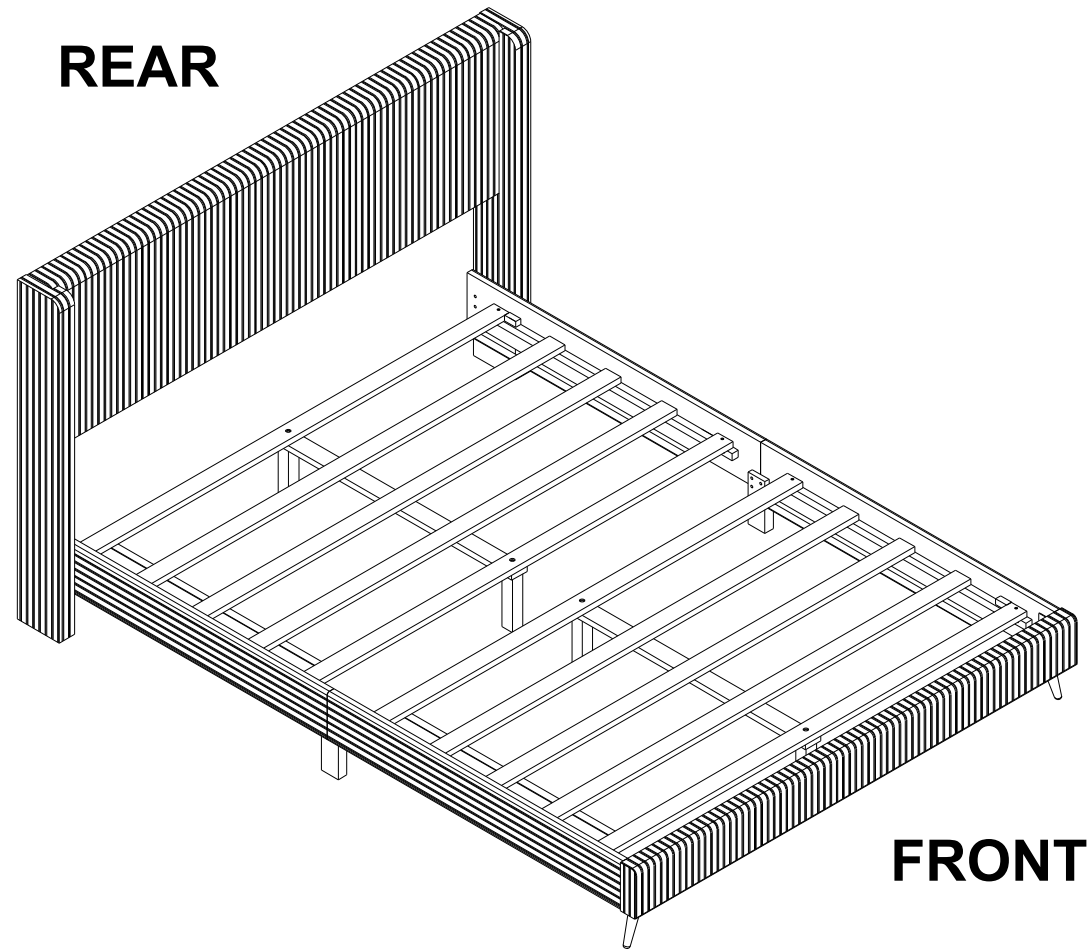
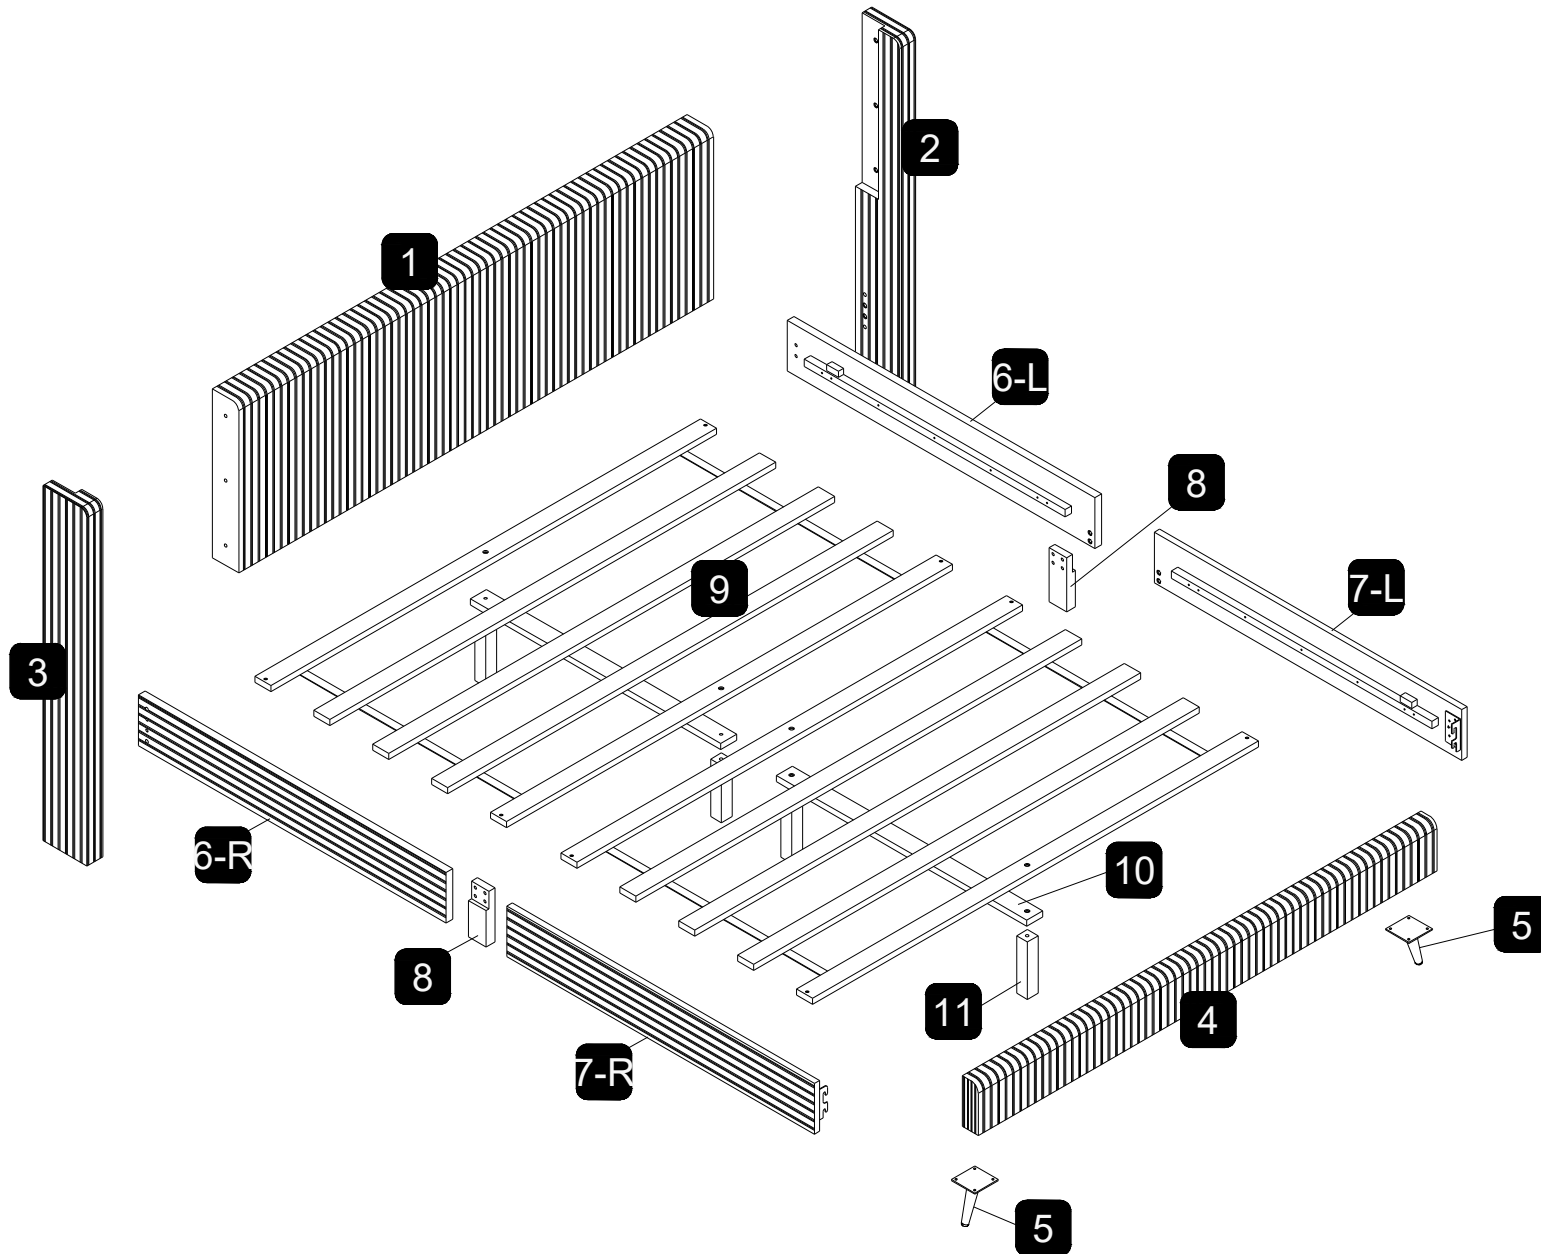















# ASSEMBLY INSTRUCTION





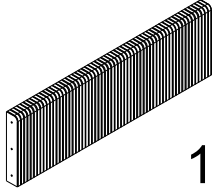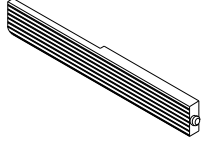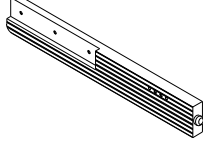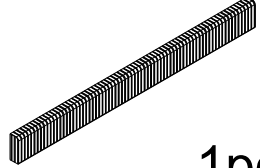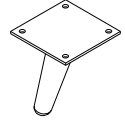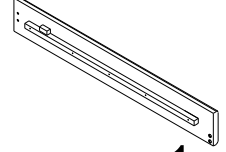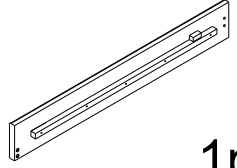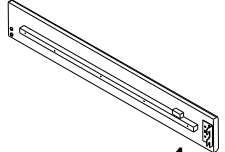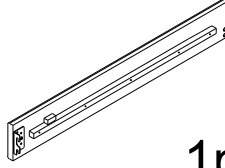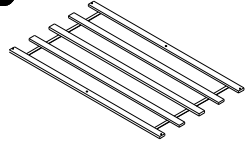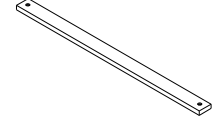








# DETAILS VIEW




# PART LIST

<b>1</b> Headboard  1pc	<b>2</b> Headboard Post (Left)  1pc	<b>3</b> Headboard Post (Right)  1pc	<b>4</b> Footboard  1pc	<b>5</b> Footboard Leg  2pcs	<b>6-L</b> Side Rail Left (Rear)  1pc
<b>6-R</b> Side Rail Right (Rear)  1pc	<b>7-L</b> Side Rail Left (Front)  1pc	<b>7-R</b> Side Rail Right (Front)  1pc	<b>8</b> Side Rail Leg  2pcs	<b>9</b> Slat  10pcs	<b>10</b> Center Support  2pcs
<b>11</b> Support Leg  4pcs					


# HARDWARE LIST

<b>A</b> M8*50MM JCBB  4pcs	<b>B</b> M8*20MM JCBB  4pcs	<b>C</b> M6*50MM JCBC  4pcs	<b>D</b> M6*40MM JCBC  6pcs	<b>E</b> M6*30MM JCBC  8pcs	<b>F</b> WOOD DOWEL M10*30MM  4pcs
<b>G</b> FLAT WASHER 22 5/6  10pcs	<b>H</b> ALLEN KEY M4  1pc	<b>I</b> ALLEN KEY M5  1pc	<b>J</b> SCREW M4*25MM  14pcs	<b>K</b> ADJUSTER  6pcs	

# STEP 1

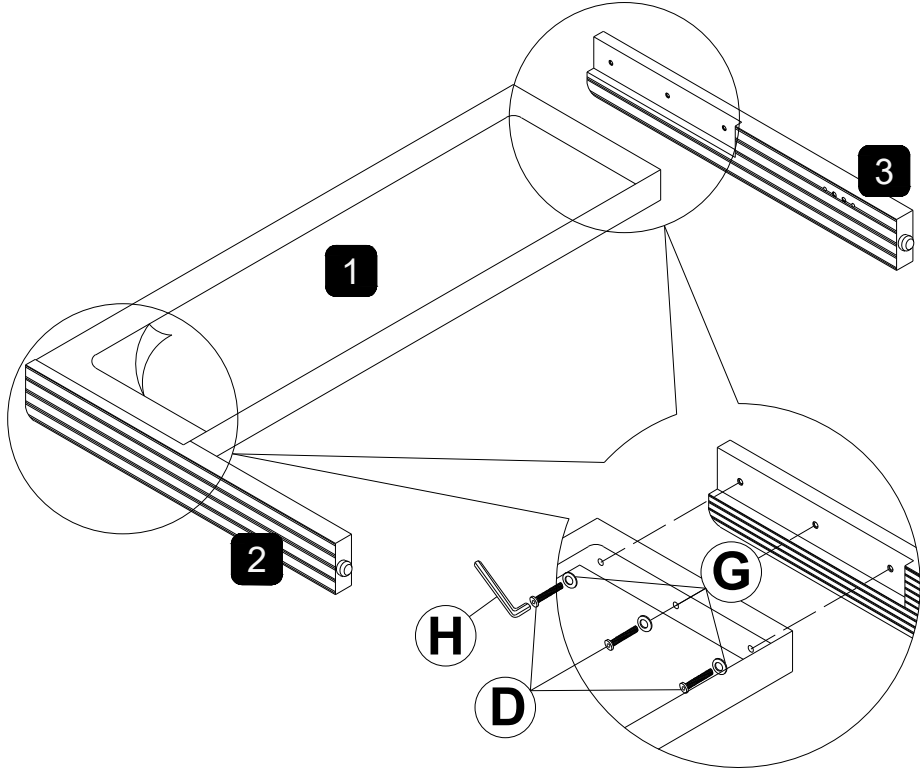

# STEP 2

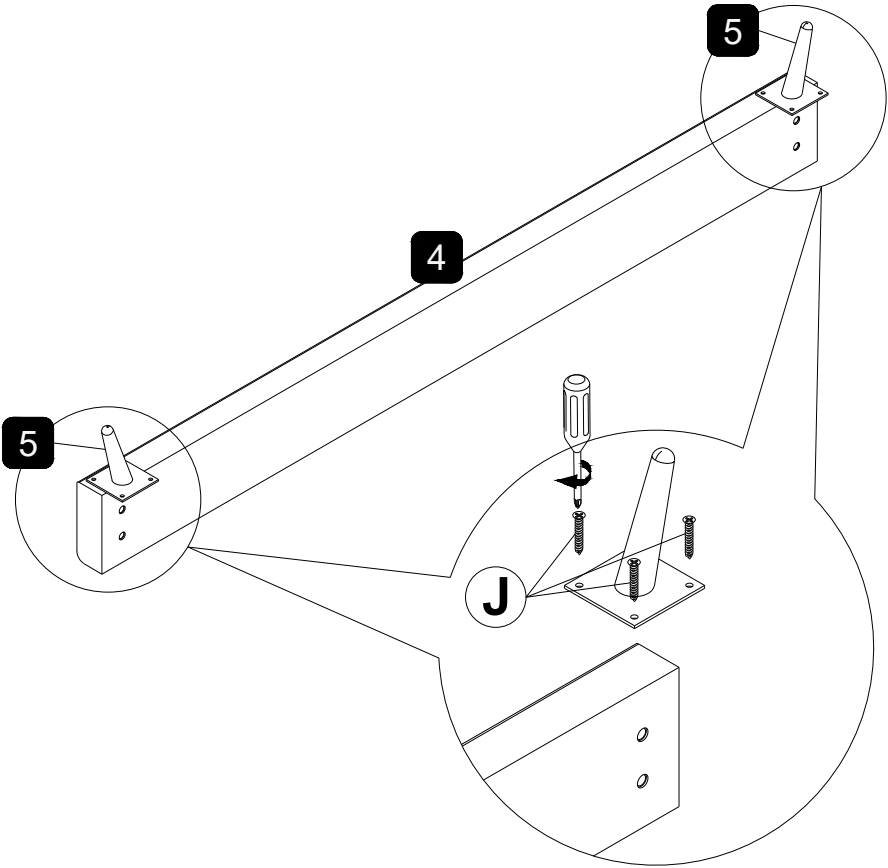


D X 6pcs




G X 6pcs




H X 1pc




J X 6pcs



# STEP 3

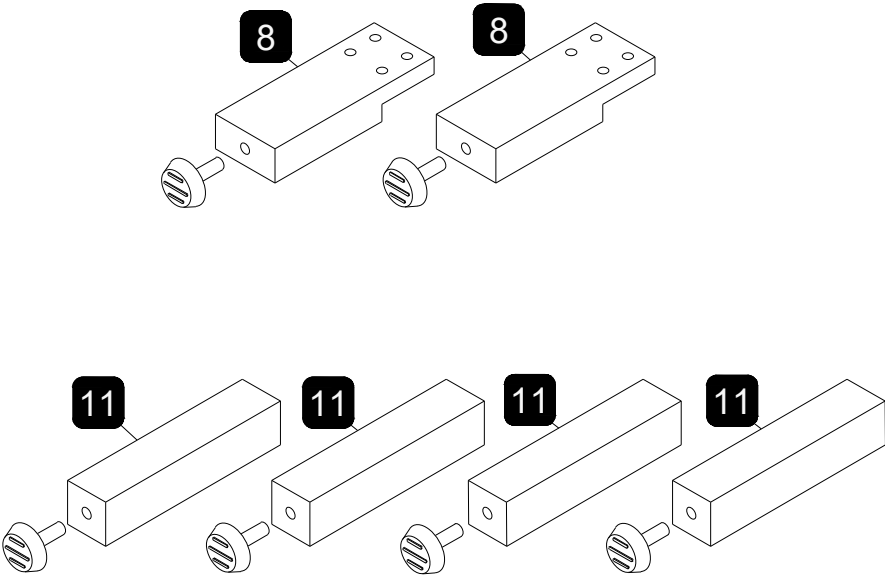


# STEP 4

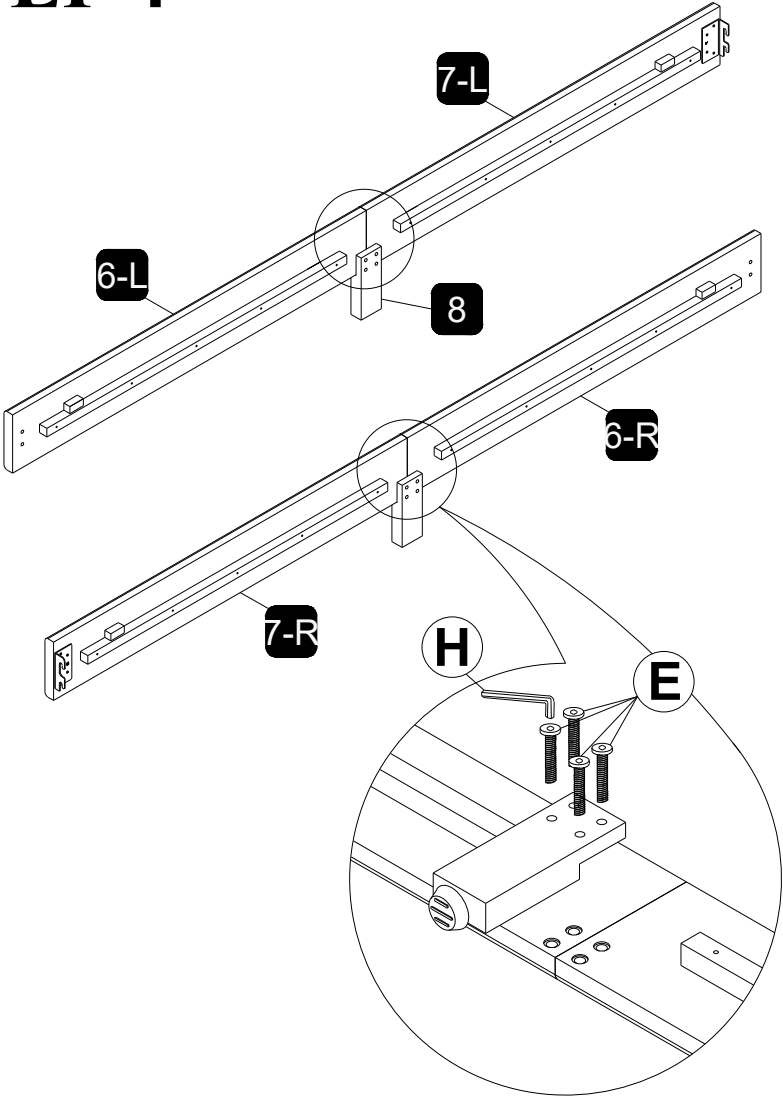

							
K X 6pcs				E X 8pcs	H X 1pc		

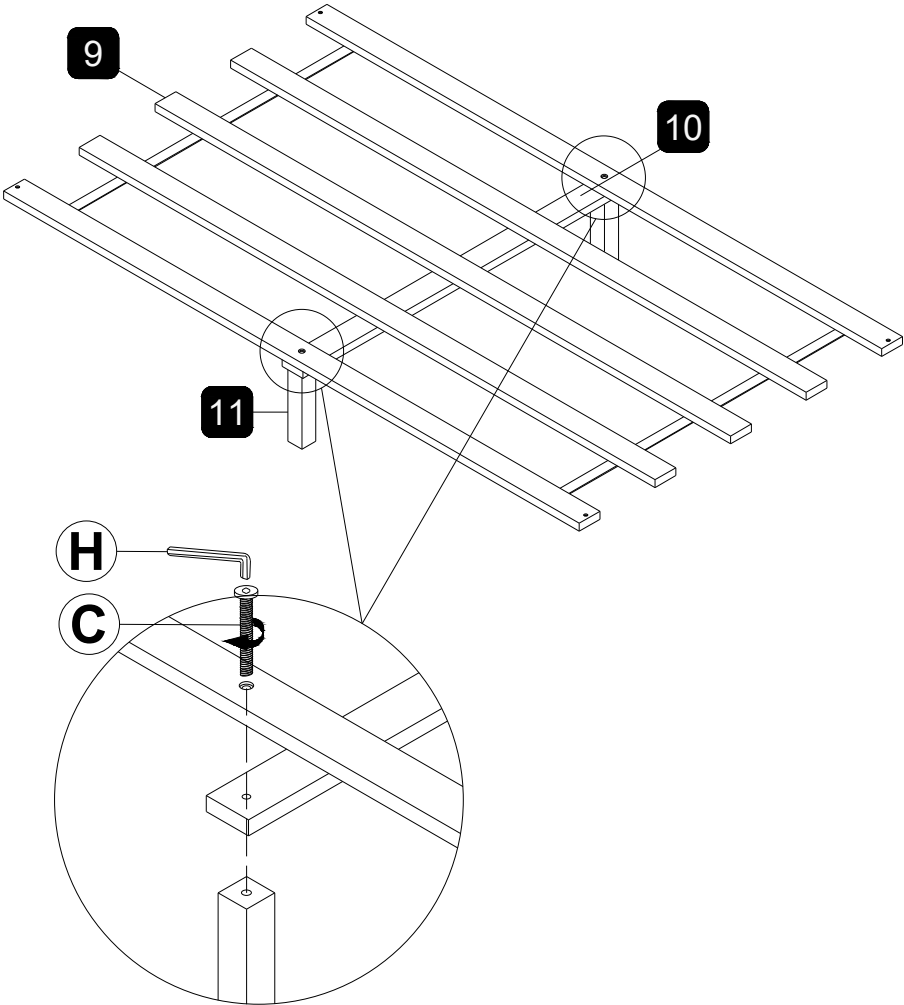STEP 5




C X 4pcs



H X 1pc

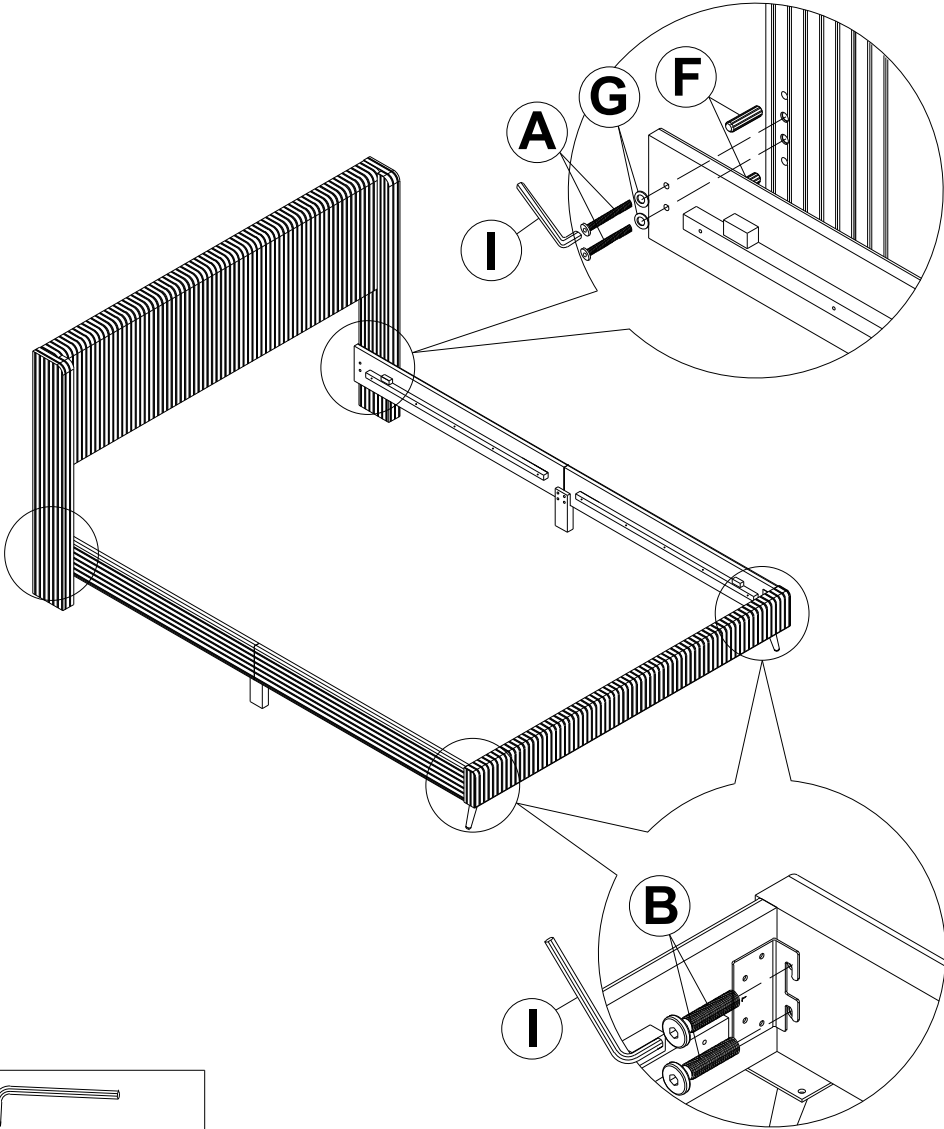STEP 6



I X 1pc



A X 4pcs



B X 4pcs




F X 4pcs





G X 4pcs

# STEP 7

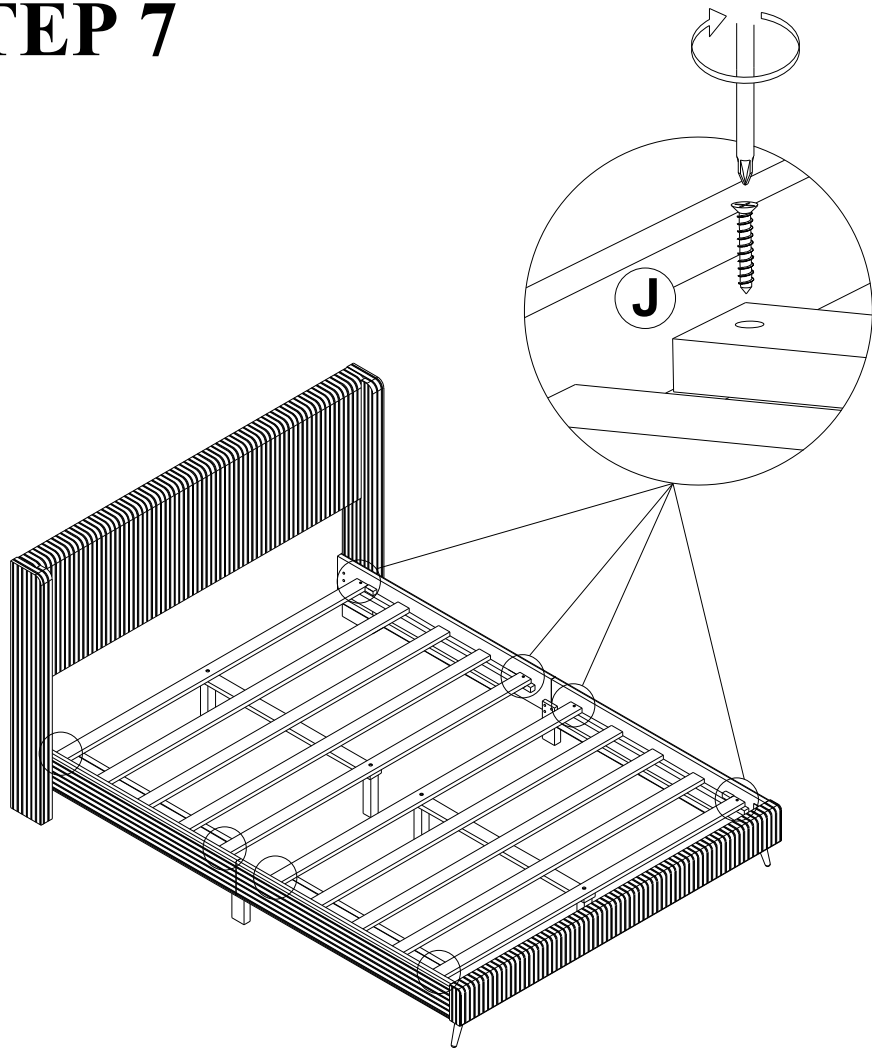

# COMPLETED ASSEMBLY

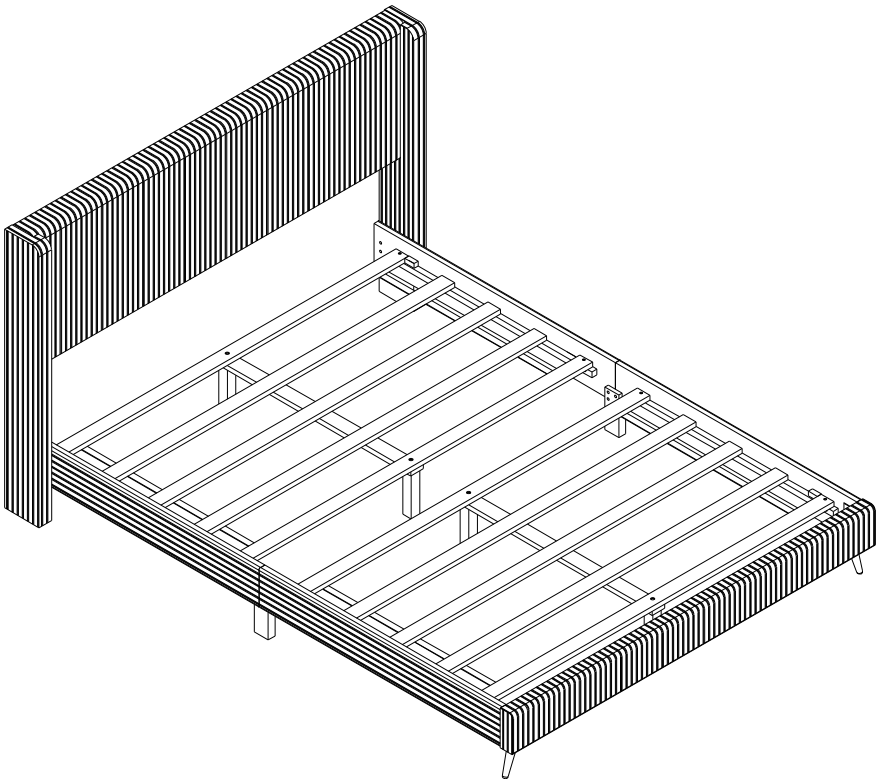

  
J X 8pcs



--	--	--	--	--	--	--	--