Assembly Instructions

View installation videos on TikTok











TYL1288M-KD








Your recliner comes packaged in **one box**.Carefully remove all of components from the packaging and set aside for assembly.

CAUTION

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

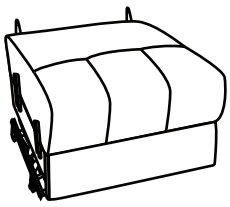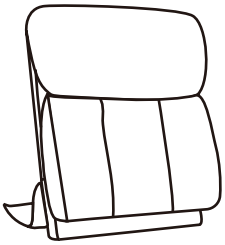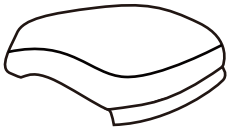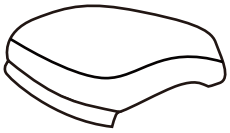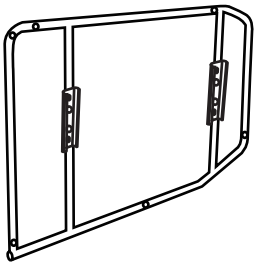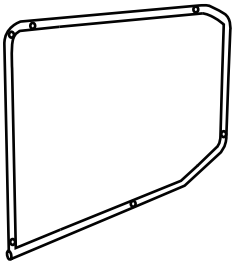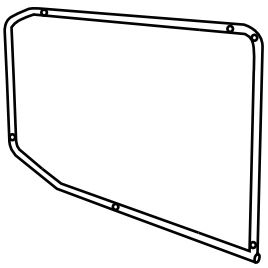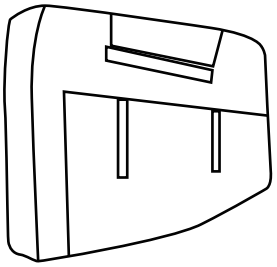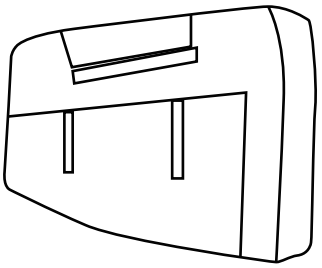Package Contents


A*1 	B*1 	C*1 	D*1 
E*1 	F*1 	G*1(L) 	H*1(R) 
I*1(L) 	J*1(R) 	K*1 Armrest cover（L） 	L*1 Armrest cover（R） 

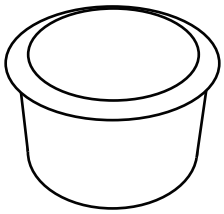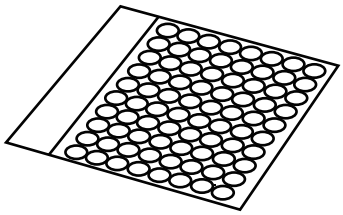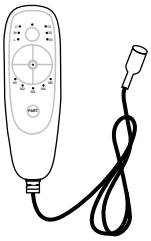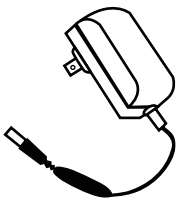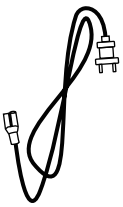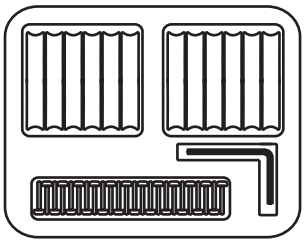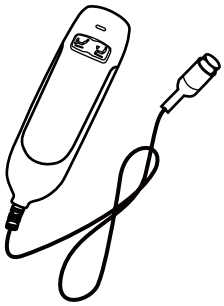N*2 	M*1(Spring bag) 	O*1(Massage Remote) 	P*1(Power Plug) 
U*1(power supply) 	V*1(power cord) 	T*1(Screw package) 	W*1(Motor switch) 

Step 1:

Secure the armrest iron frame with screws.

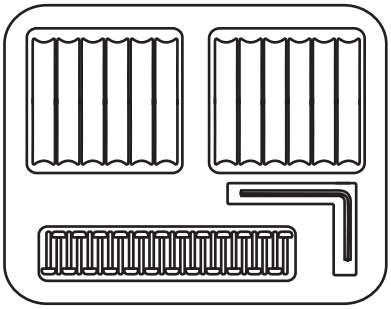
Screw package




Q*24 (M6 * 25 screws)

R*12 (connecting rods)

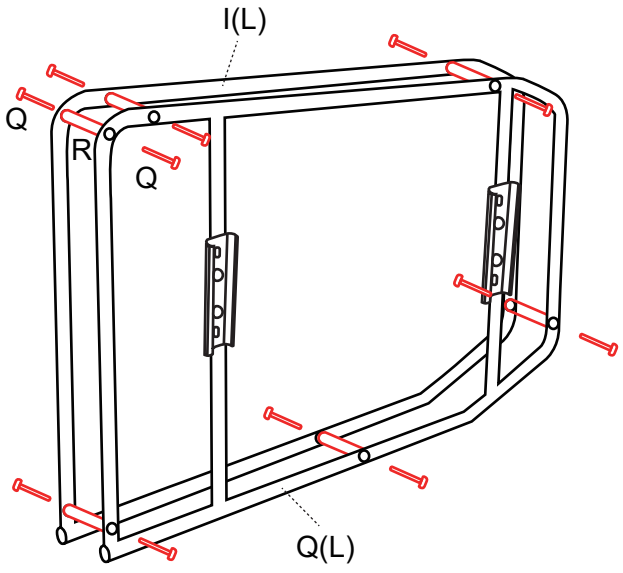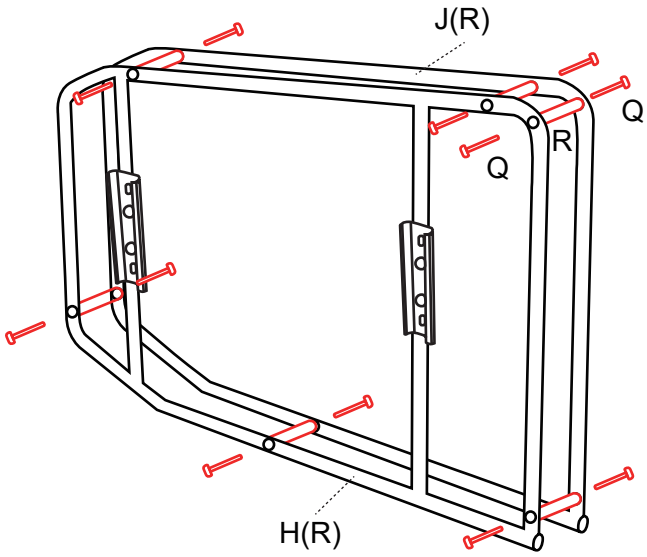S*1 (wrench)






Armrest iron frame(L)	
G*1(L)	I*1(L)
Q*12	R*6

Armrest iron frame(R)	
H*1(R)	J*1(R)
Q*12	R*6


Step 2:

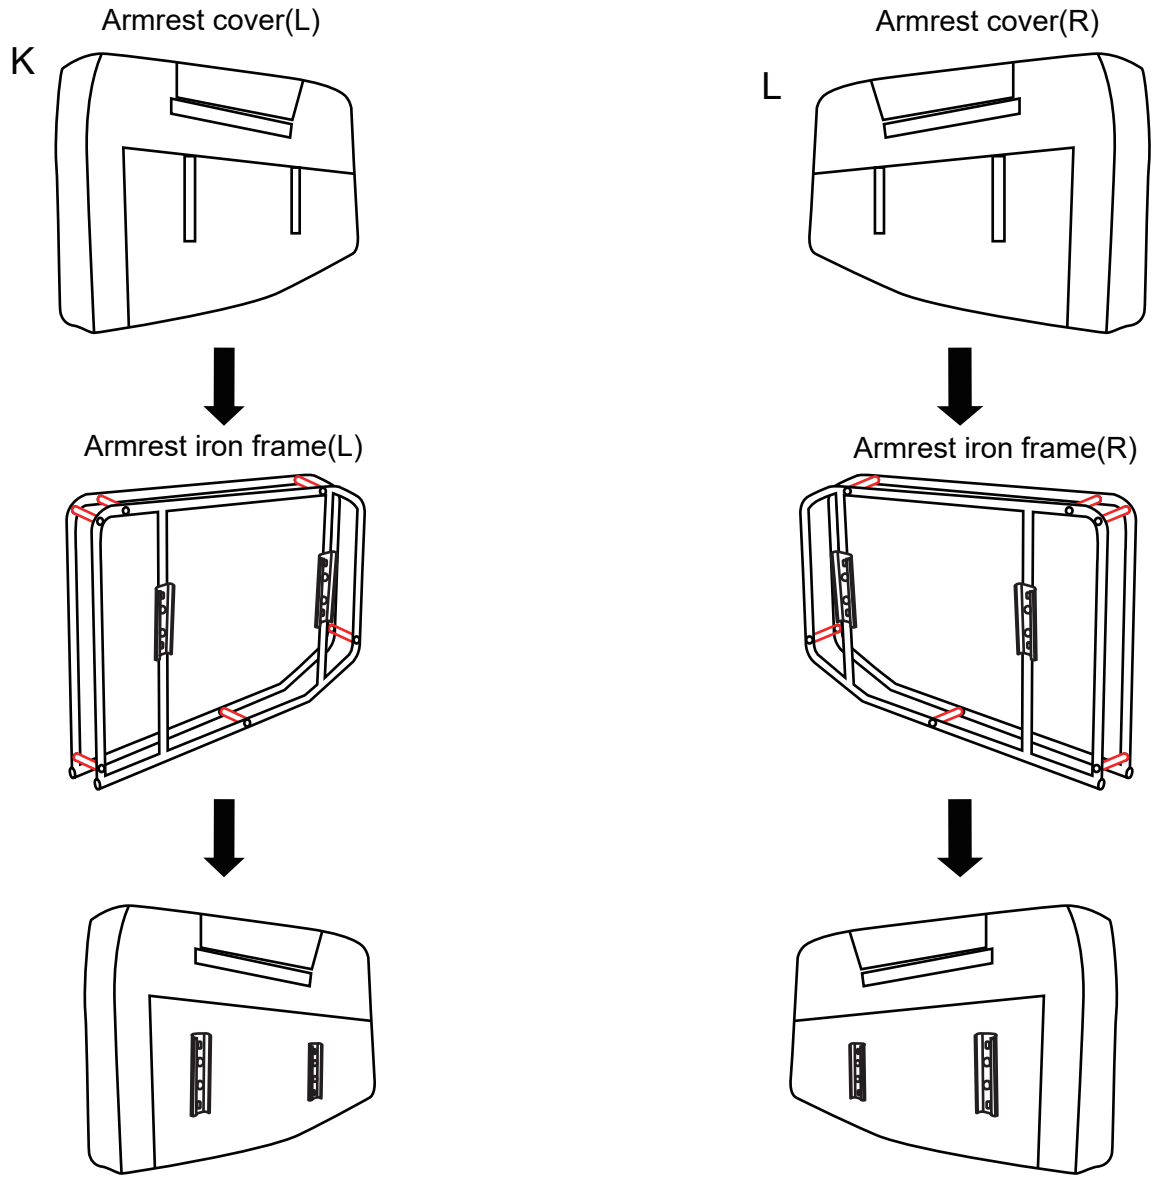Place the armrest iron frame into the armrest cover.




Step 3:

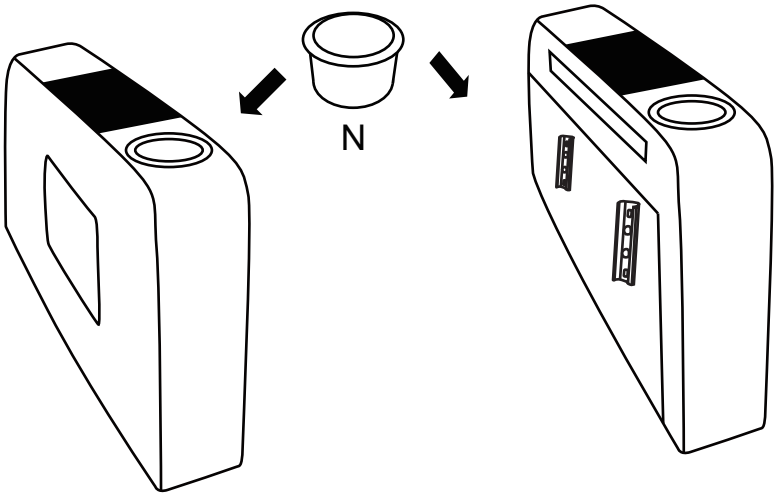Insert the cup holder into the armrest.





Step 4:

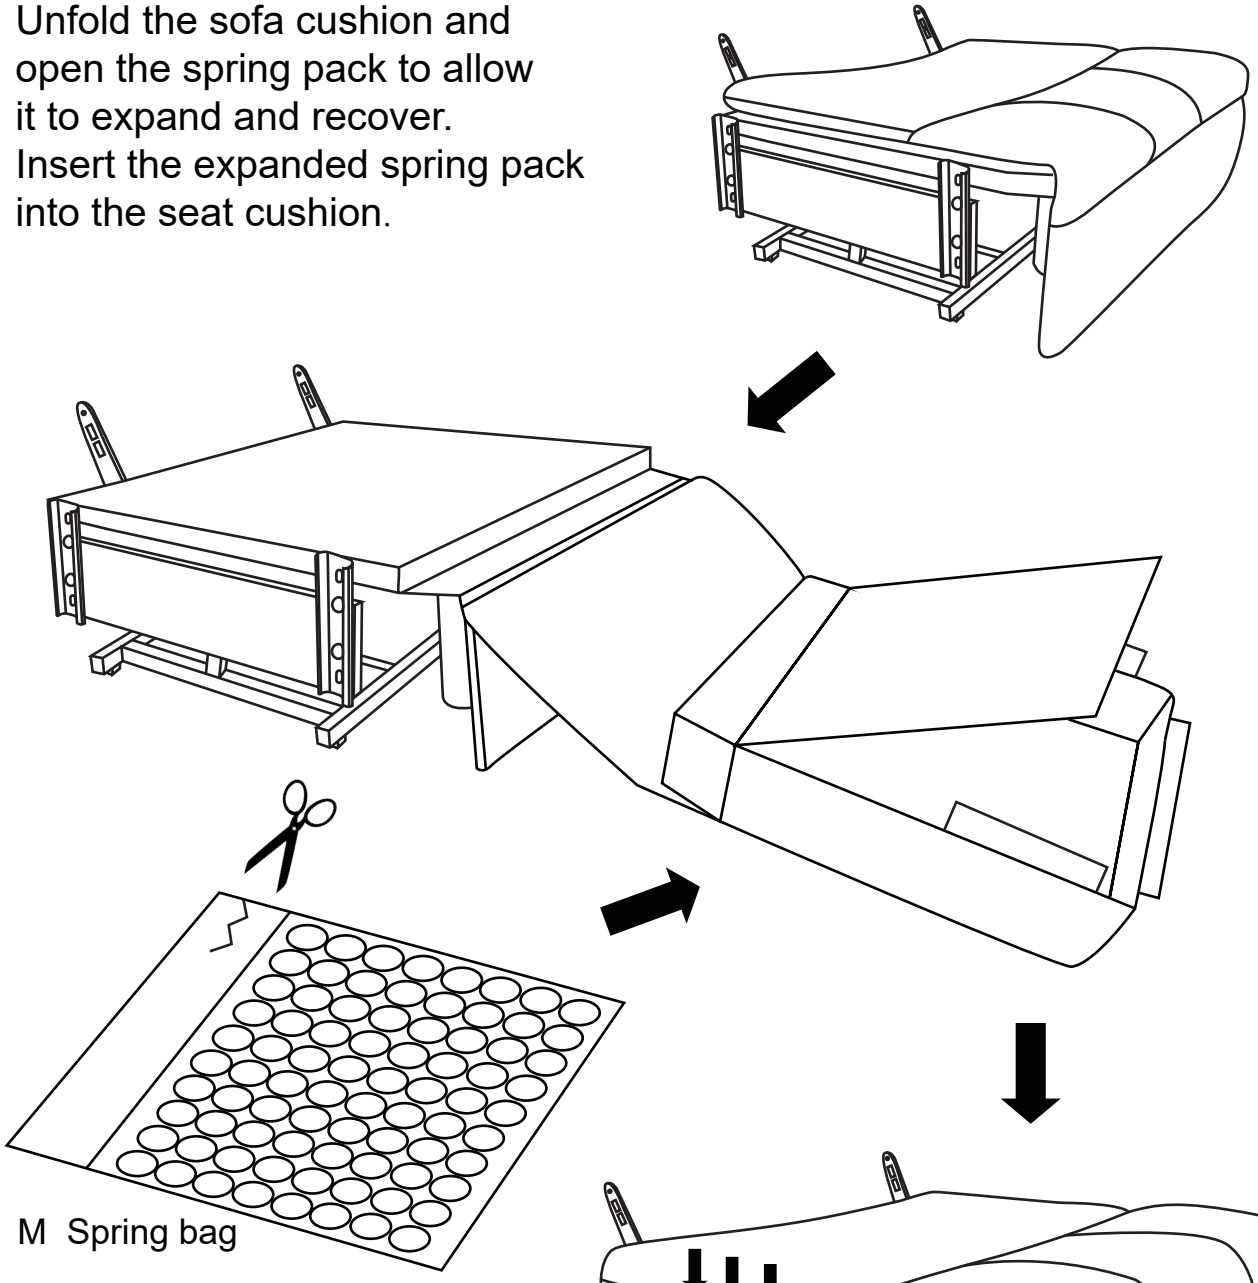Unfold the sofa cushion and open the spring pack to allow it to expand and recover. Insert the expanded spring pack into the seat cushion.



M Spring bag

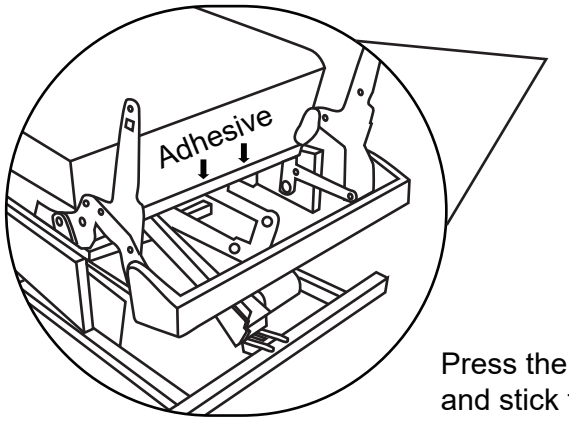

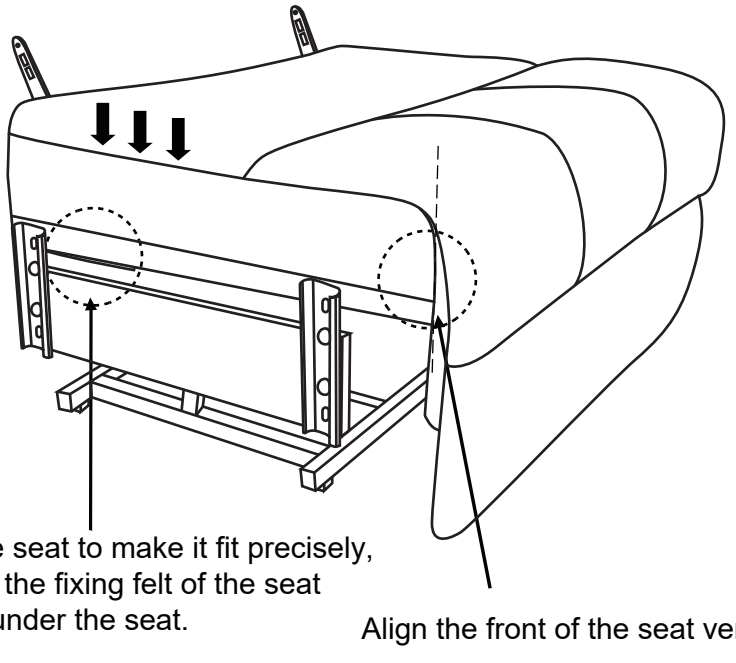


Press the seat to make it fit precisely, and stick the fixing felt of the seat cushion under the seat.

Align the front of the seat vertically


Step 5:

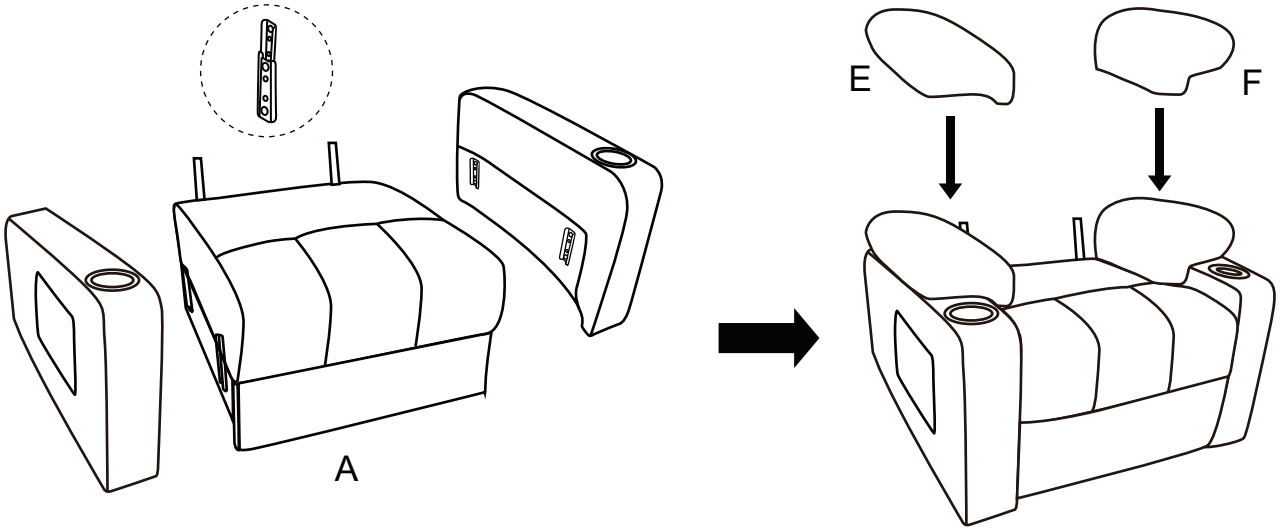Insert both the left armrest and right armrest into the chair seat by aligning the metal grooves and sliding down to the bottom.
Fix the armrest pad onto the armrest.




Step 6:

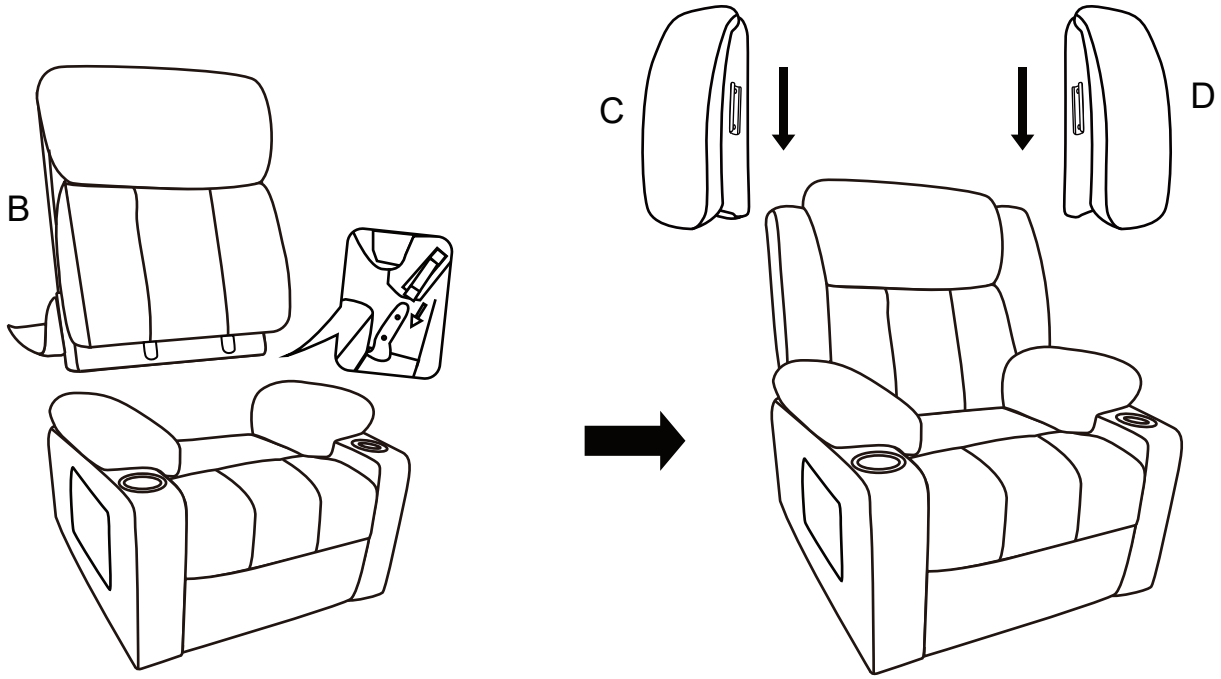Insert the chair back into the chair seat by aligning the metal grooves and sliding down to the bottom;Inset both the left ear and right ear into the chair Back.



ATTENTION!!
Ensure the slots of armrests and backrest are fully assembled to the bottom to avoid tilting or moving.And please not sit on the armrests for the user's safety.

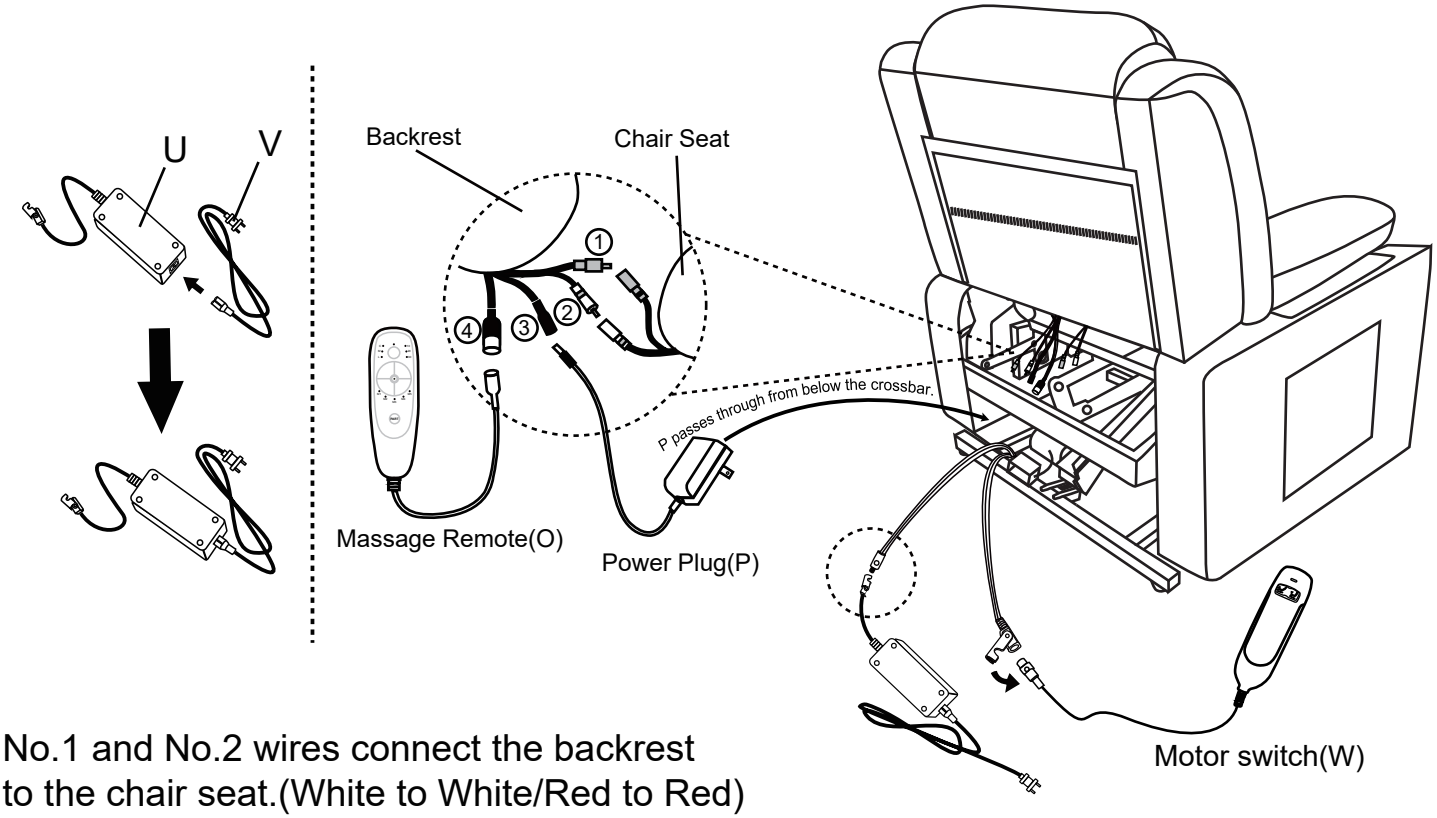Tips of Connecting Power Cords:



No.1 and No.2 wires connect the backrest
to the chair seat.(White to White/Red to Red)
No.3 wire connects the backrest to the powerplug (P).
No.4 wire connects up the backrest and massage remote(O).
Plug the power source (P)into outlet to get the massaging and heating function working.
No.5 Connect the circuit of Motor Switch (W) to the circuit on the base to activate it side-flat function

Remote Operation Instruction

