


ASSEMBLY INSTRUCTIONS

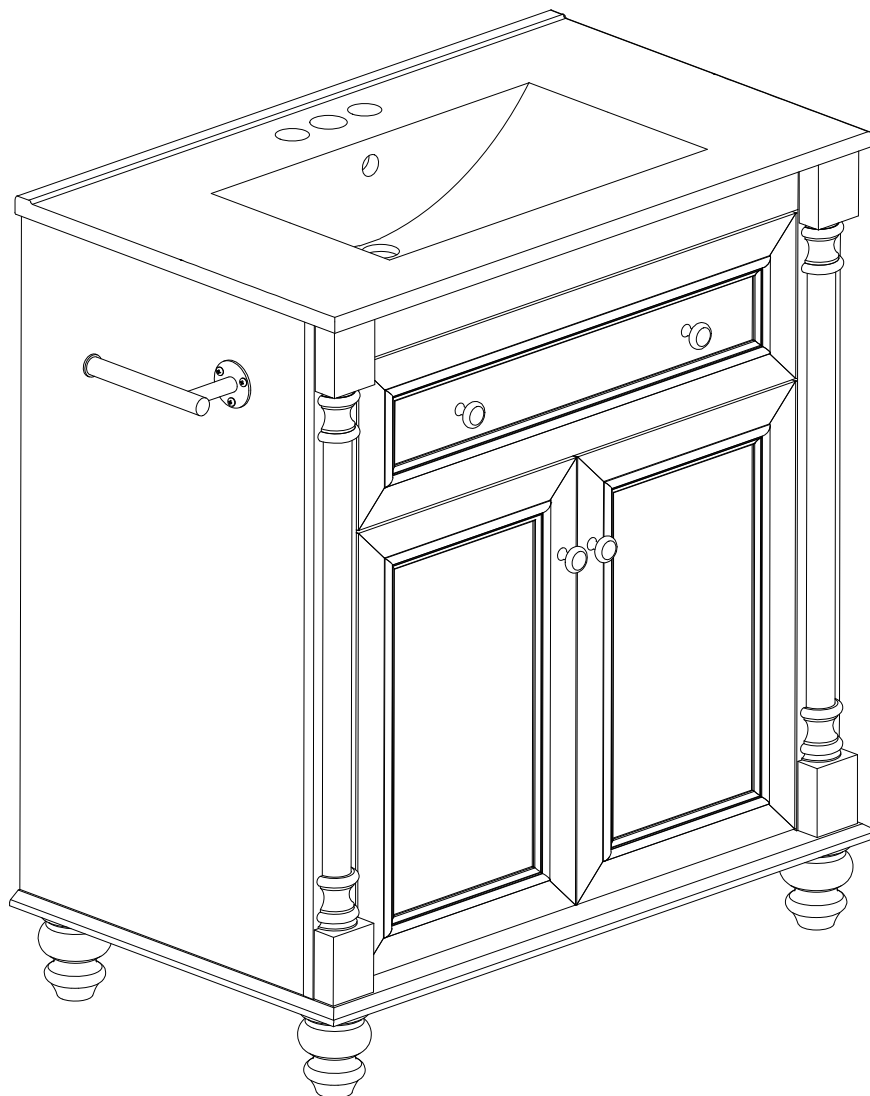




WARNING !

MAXIMUM LOAD
220 lb/ 100kg




Estimated Time for Assembly

60 mins

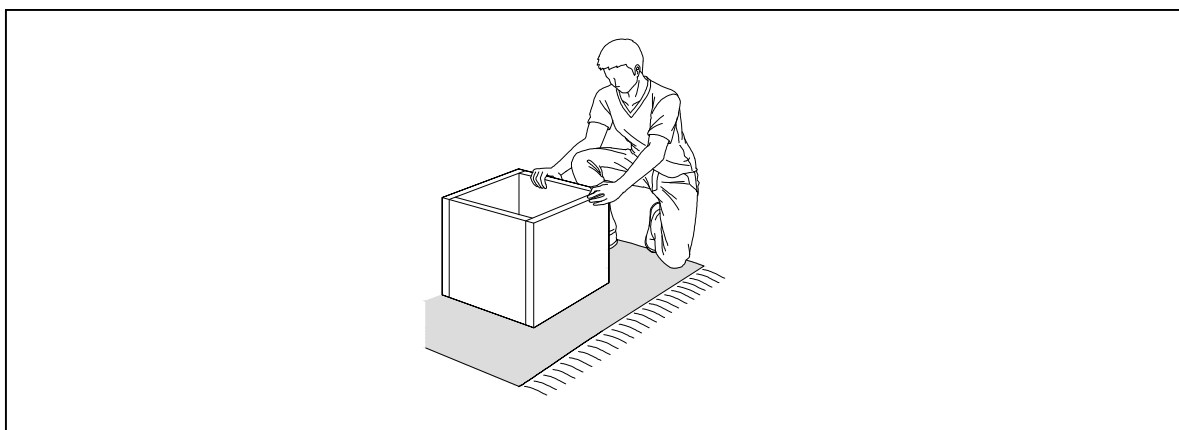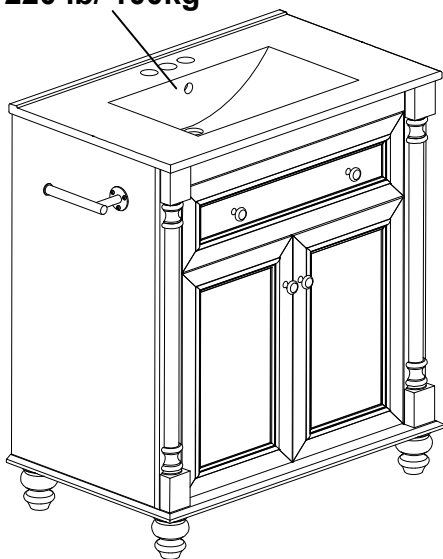

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

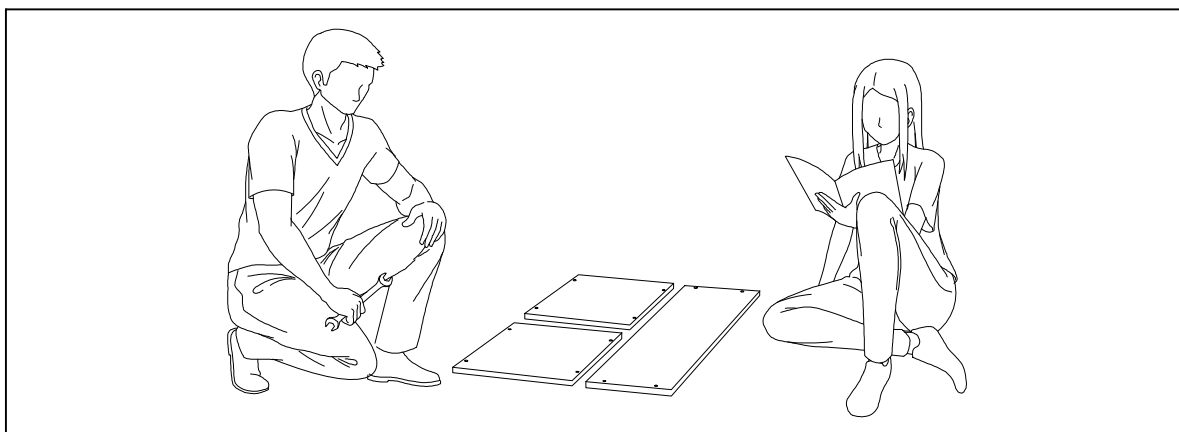


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

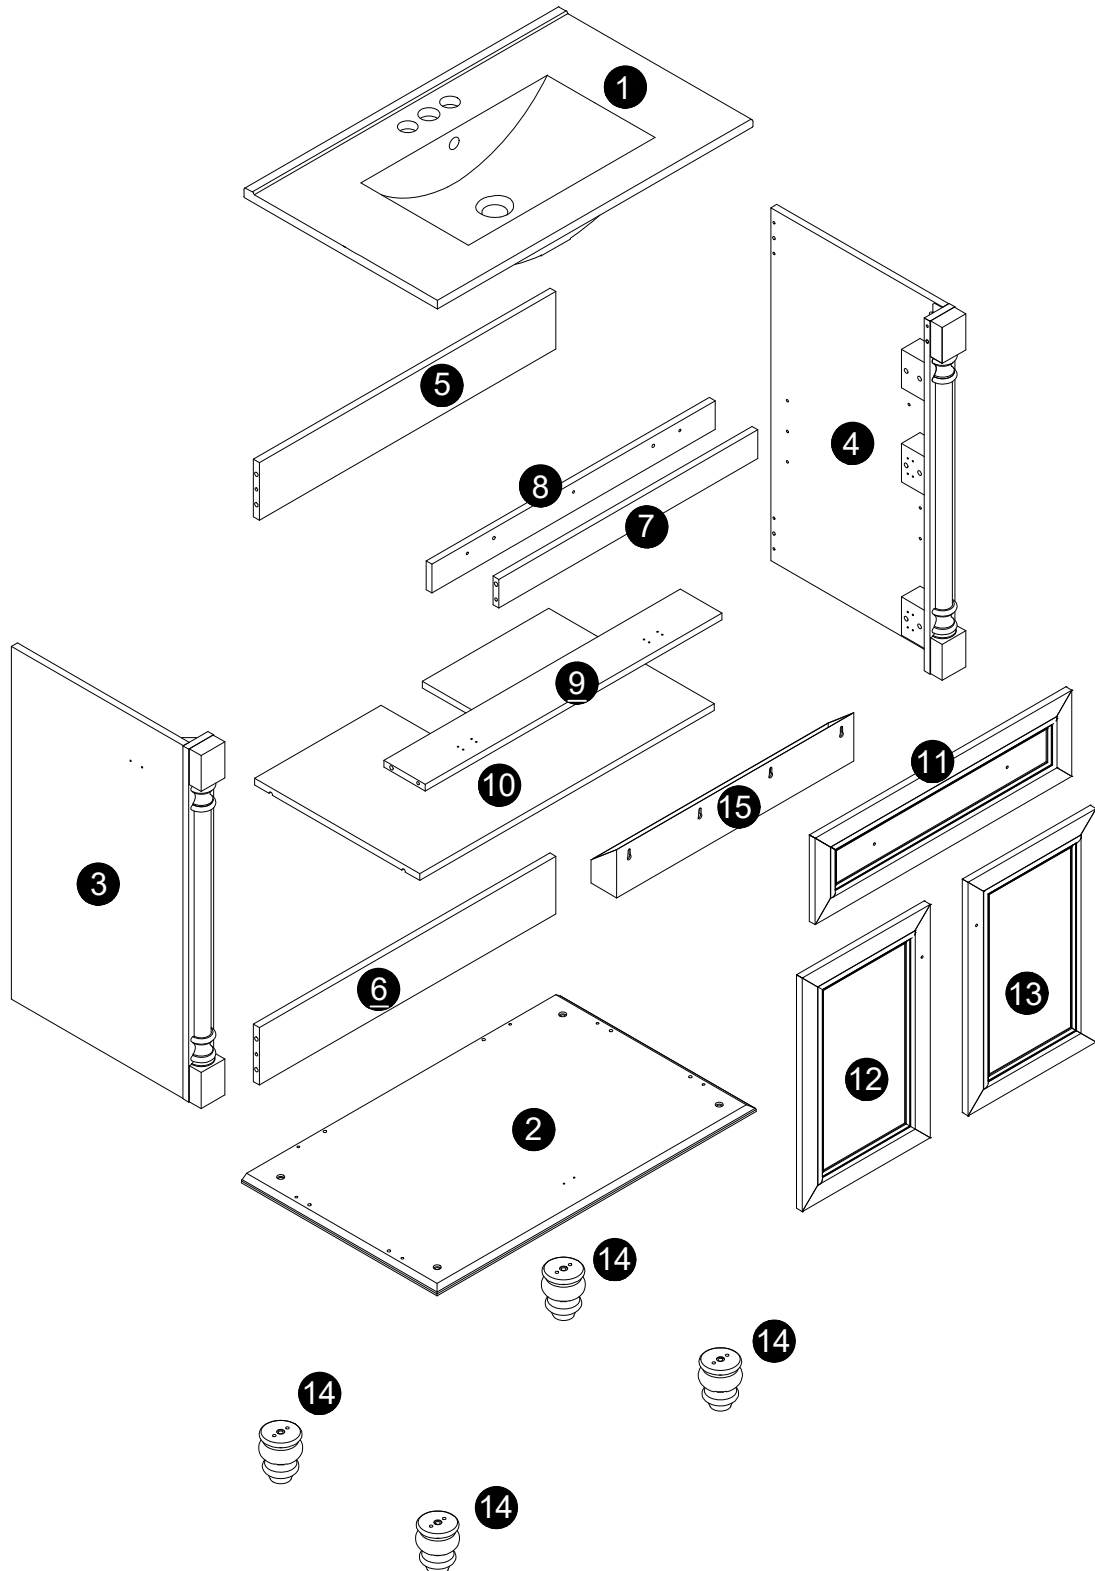


BOARD IDENTIFICATION


Not actual size

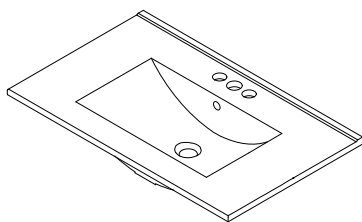


① x1

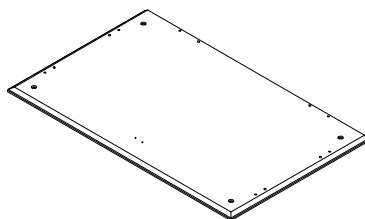


② x1

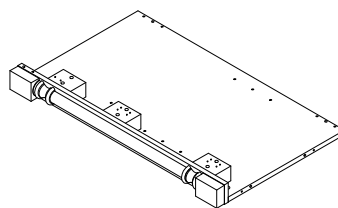


③ x1

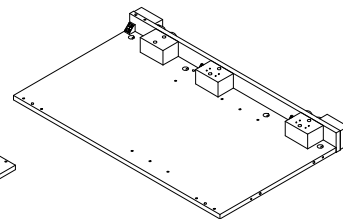


④ x1

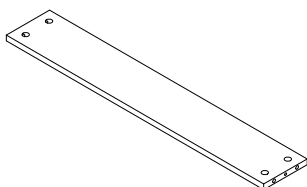


⑤ x1

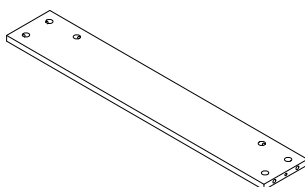


⑥ x1

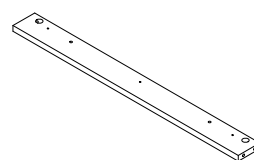


⑦ x1

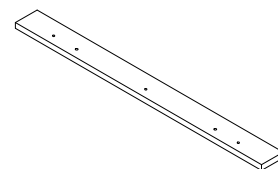


⑧ x1

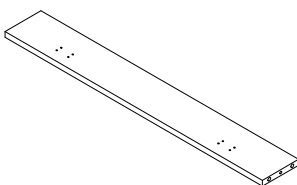


⑨ x1

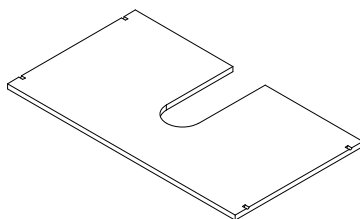


⑩ x1

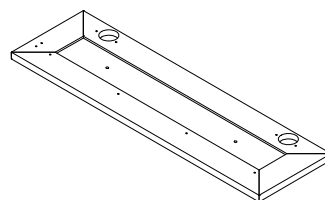


⑪ x1

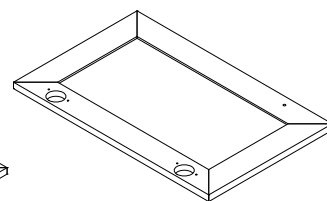

⑫ x1













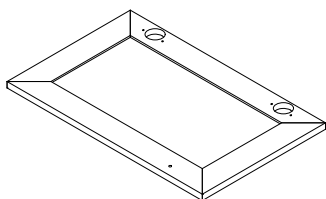


⑬ x1

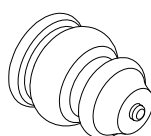


⑭ x4

HARDWARE LIST


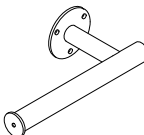
			
A	B	C	D
x14+1	x14+1	x22+2	x2
			
Ø4x16	Ø3.5x15	Ø5x40	Ø3.5x12
E	F	G	H
x3	x36+3	x4	x7
			
I	J	K	L
x1	x4	x2	x2
			
M	N	O	P
x2	x4	x1	x4
			
Q	R	S	T
x4	x4	x1	x1
			
#5*9/16"	Ø6*30mm	#8*45mm	
U	V	W	
x2	x2	x2	

Cam Lock Fastening System





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

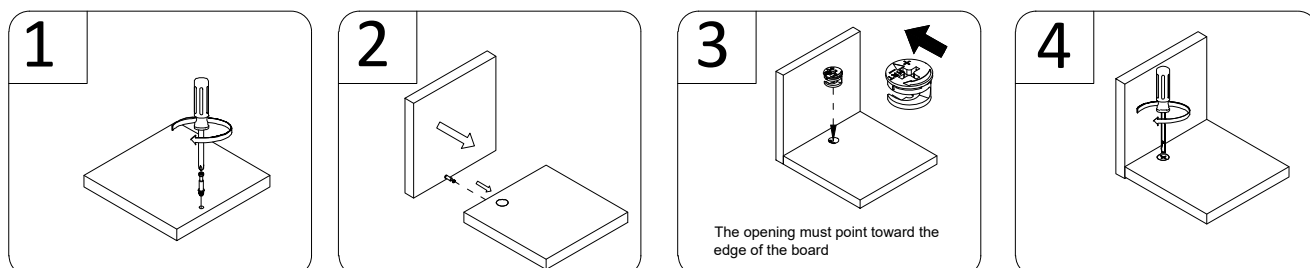


STEP 1

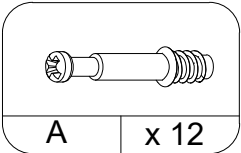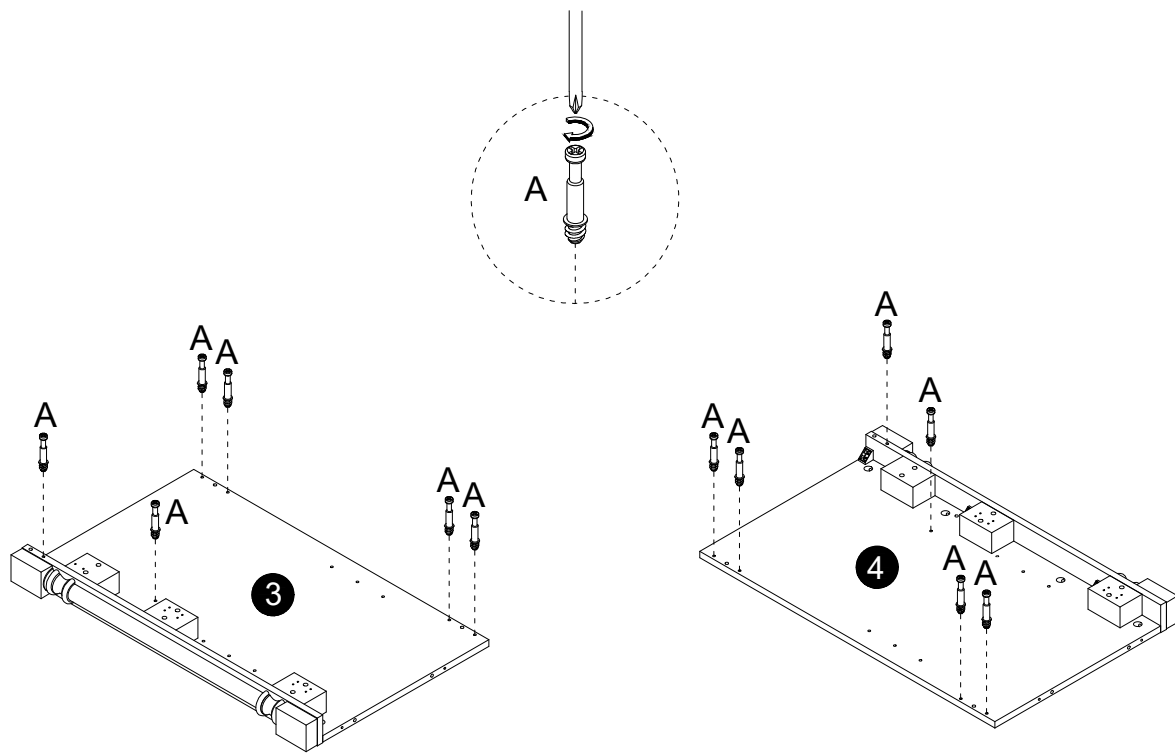


STEP 2

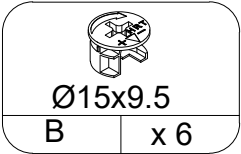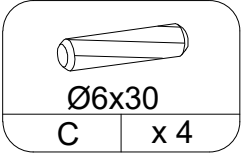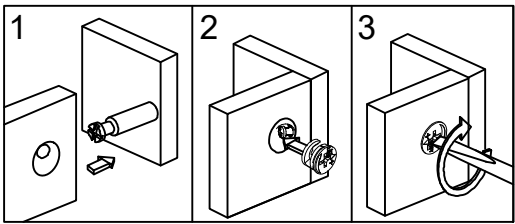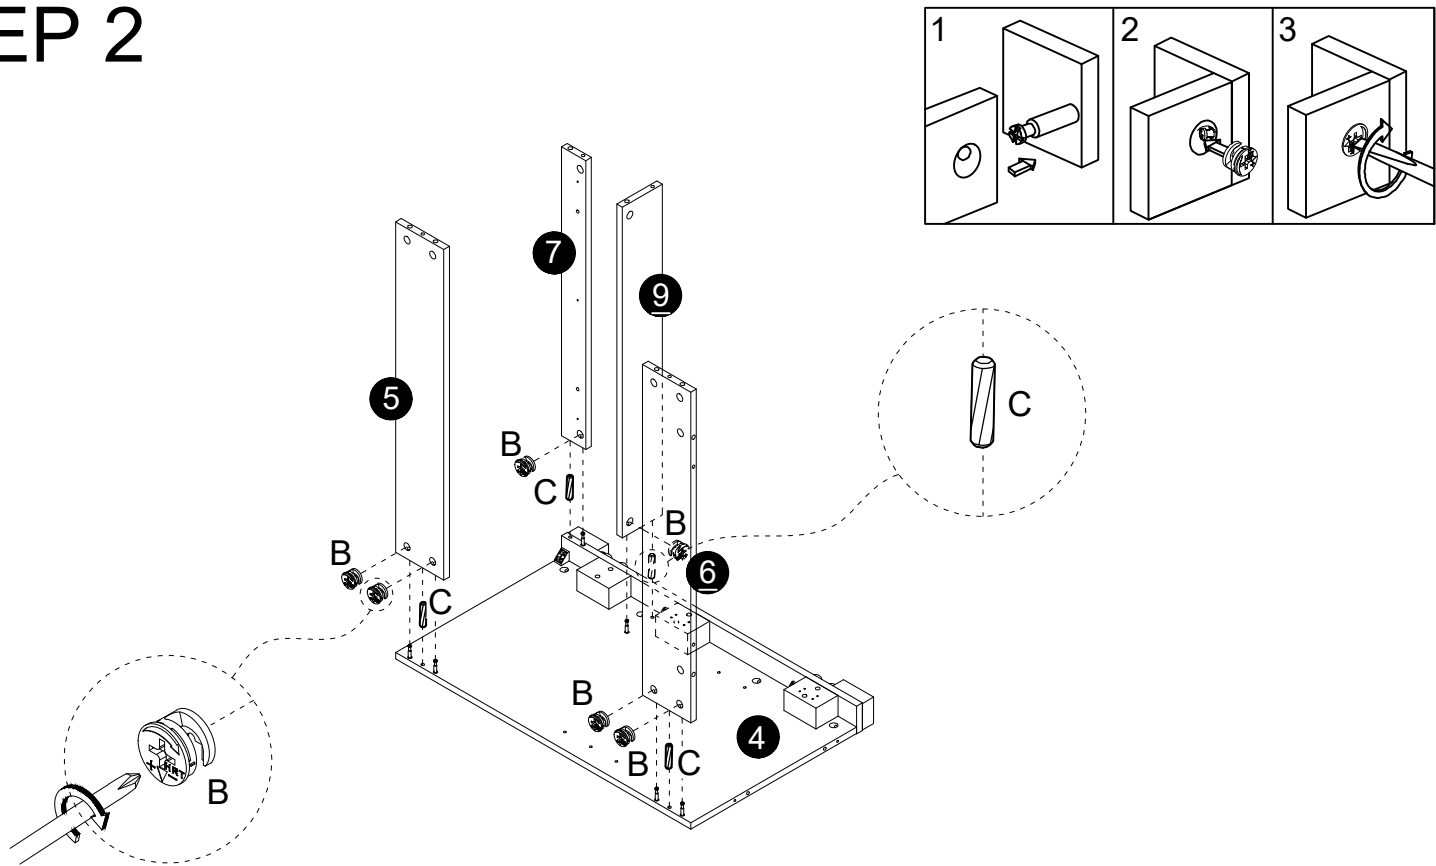


STEP 3

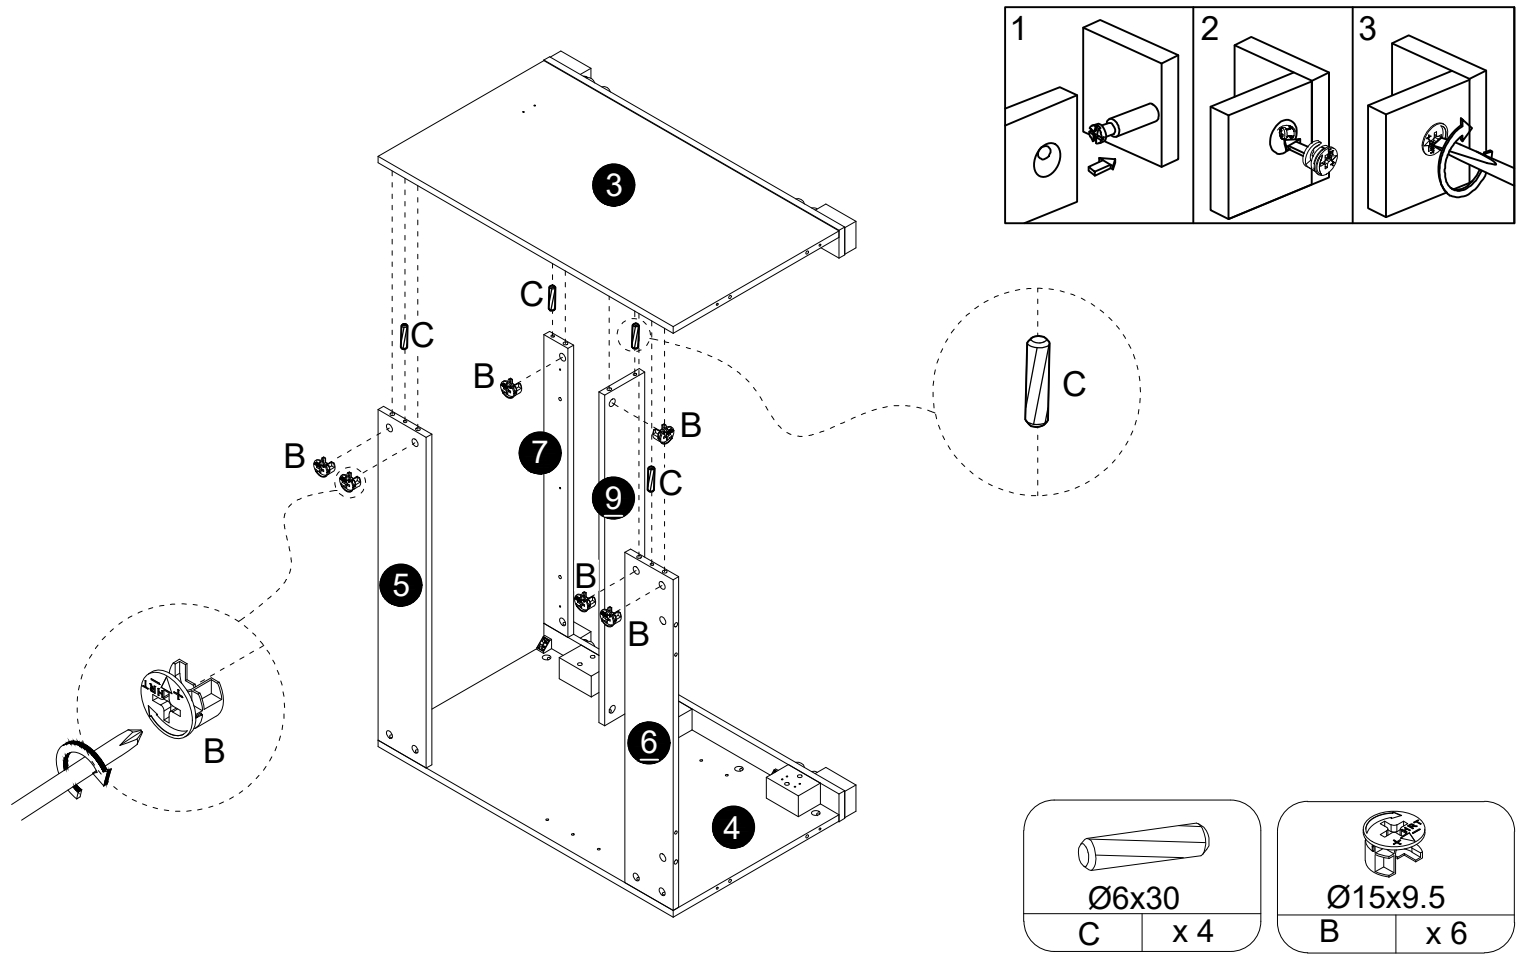


STEP 4

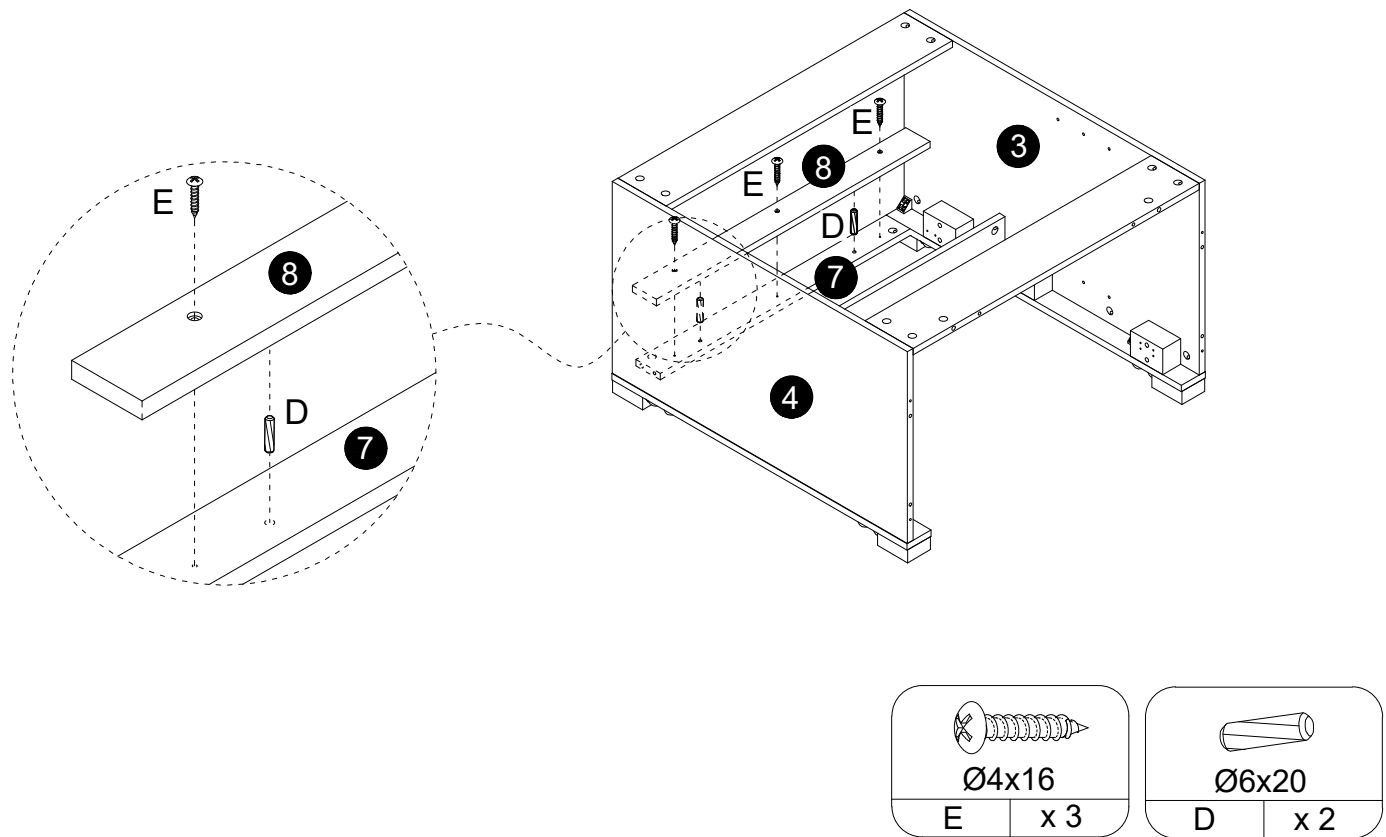


STEP 5

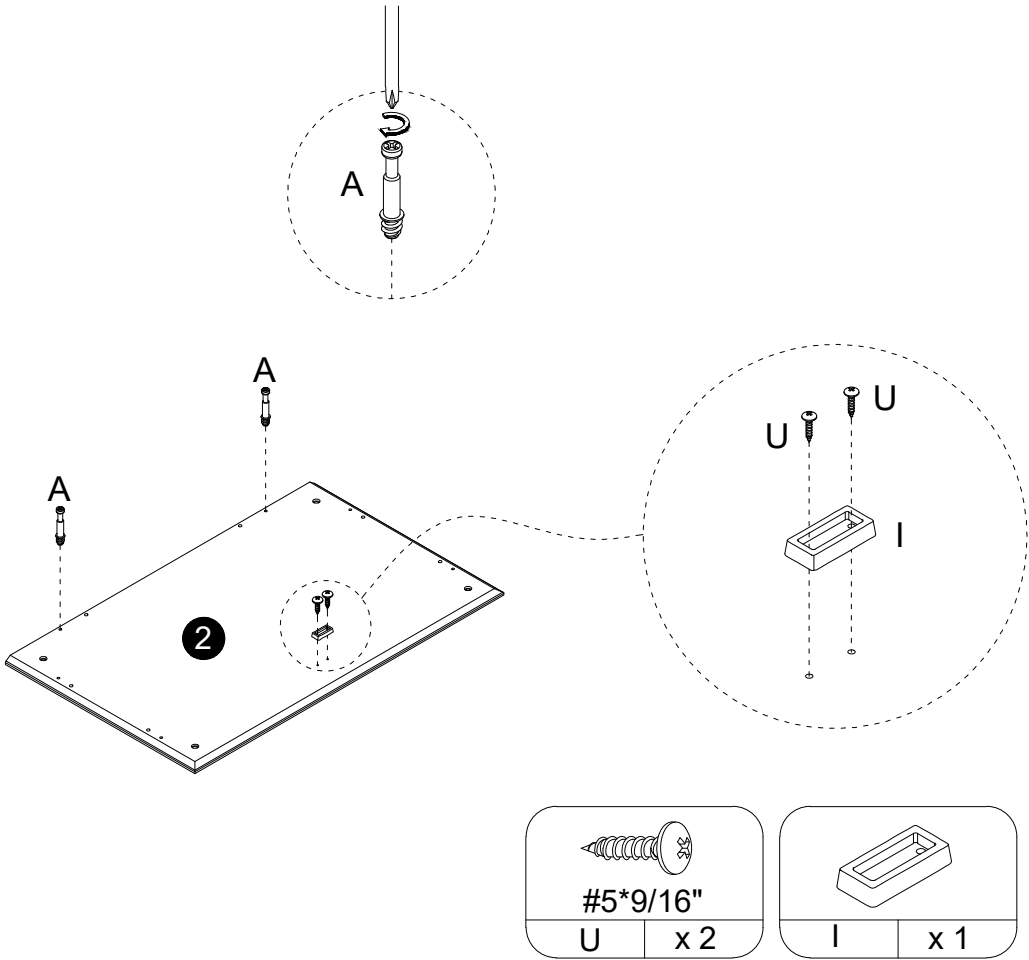


STEP 6

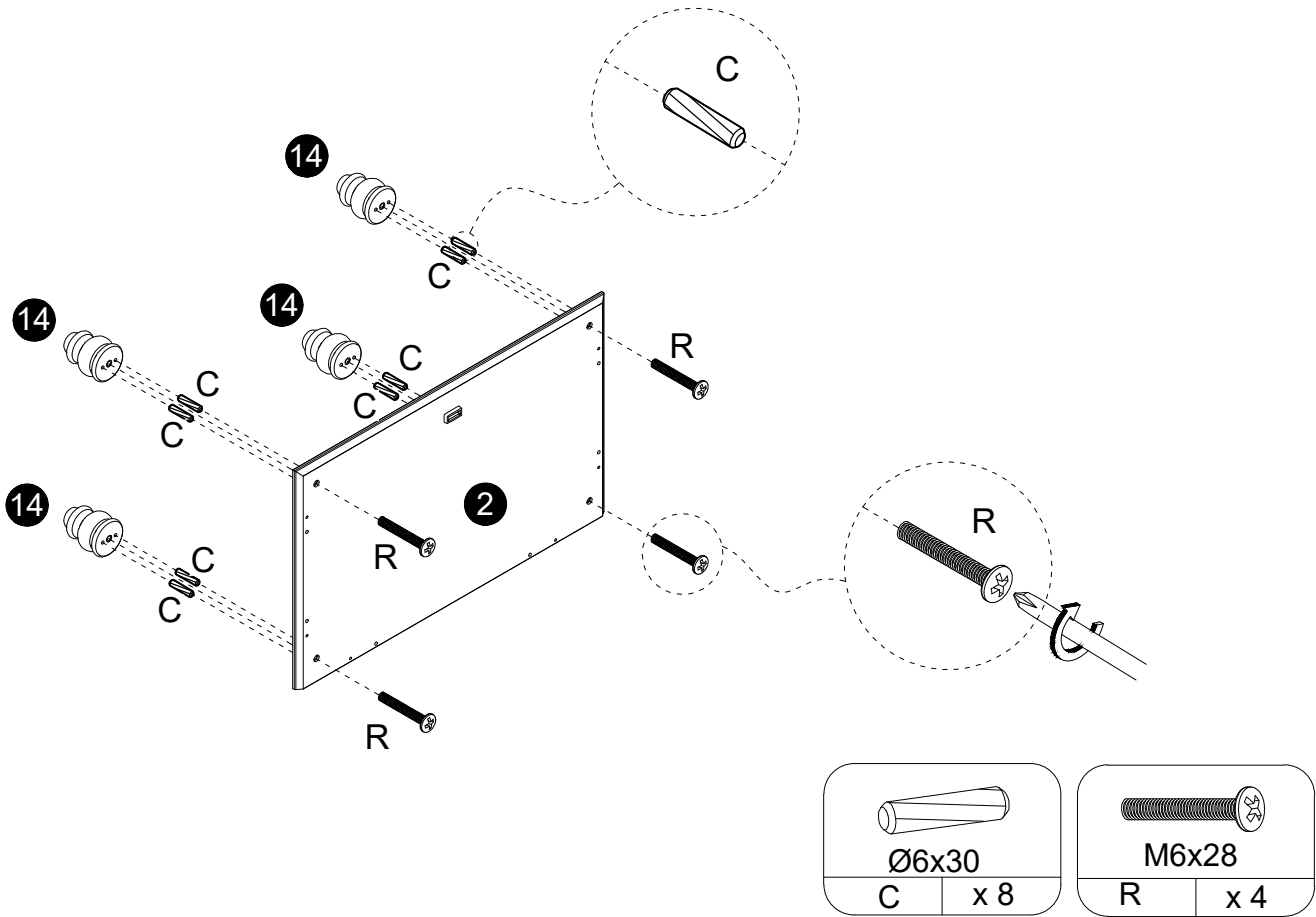


STEP 7

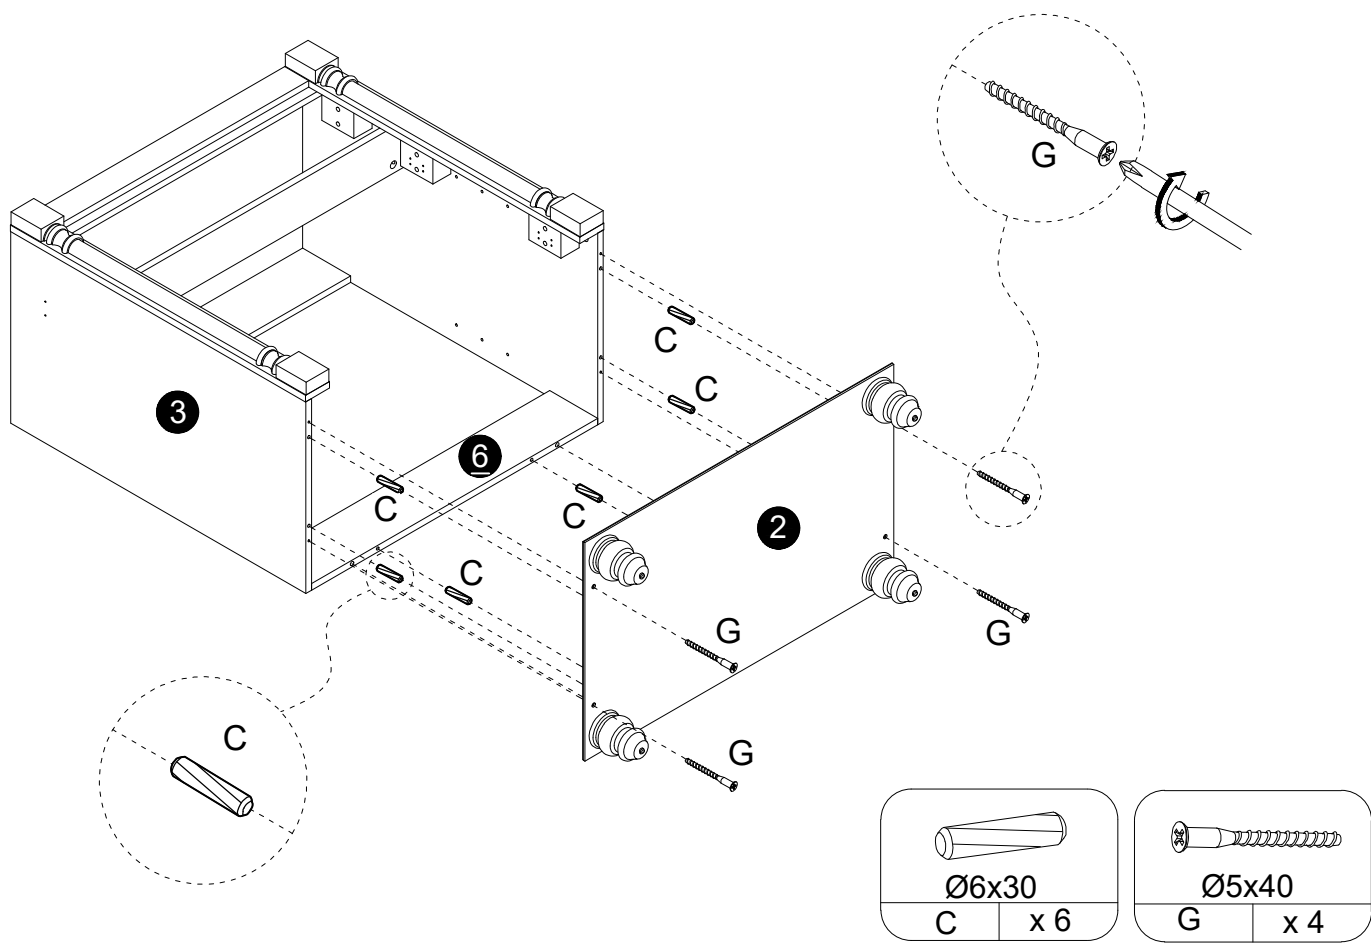

STEP 8

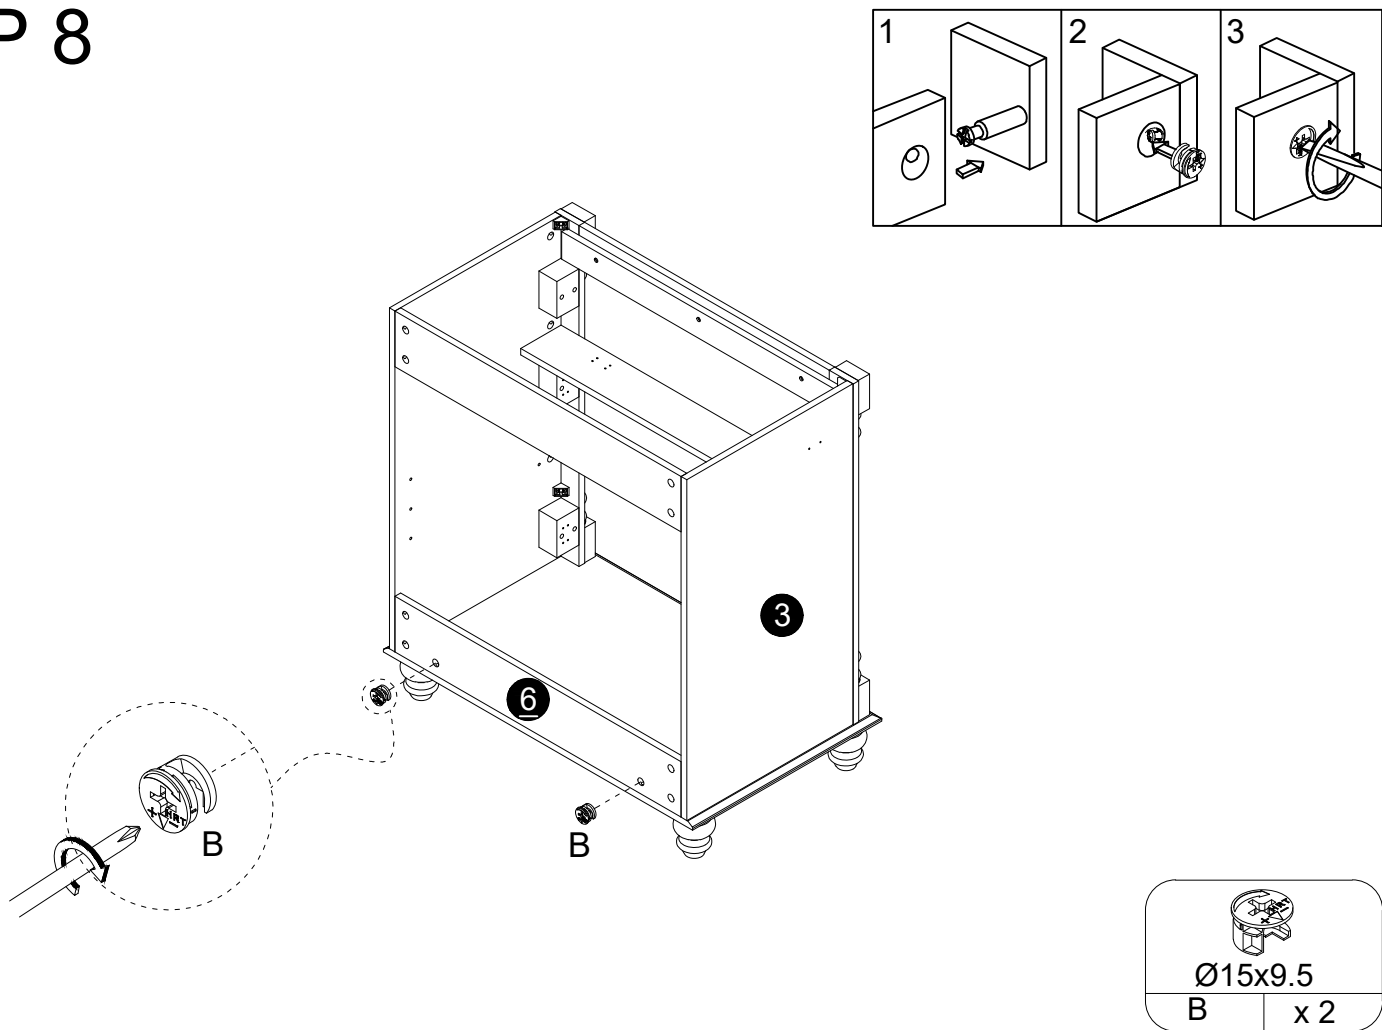



STEP 9

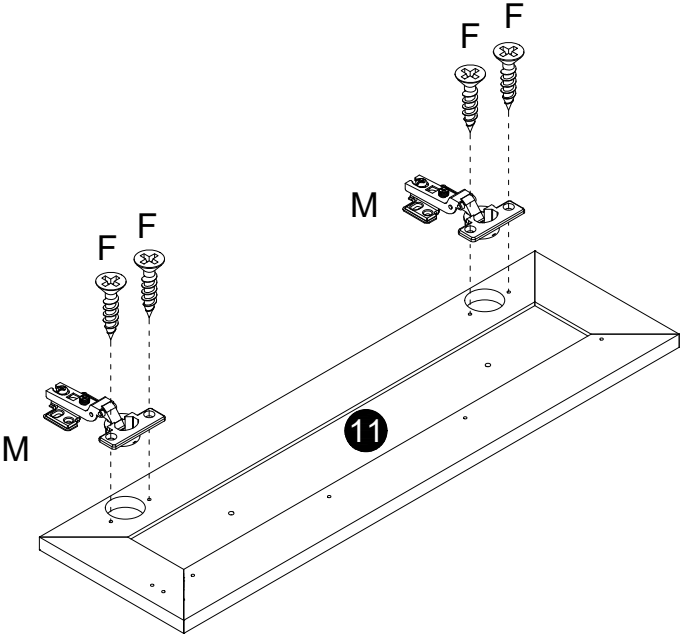



			
M		Ø3.5x15	
x 2		x 4	

STEP 10


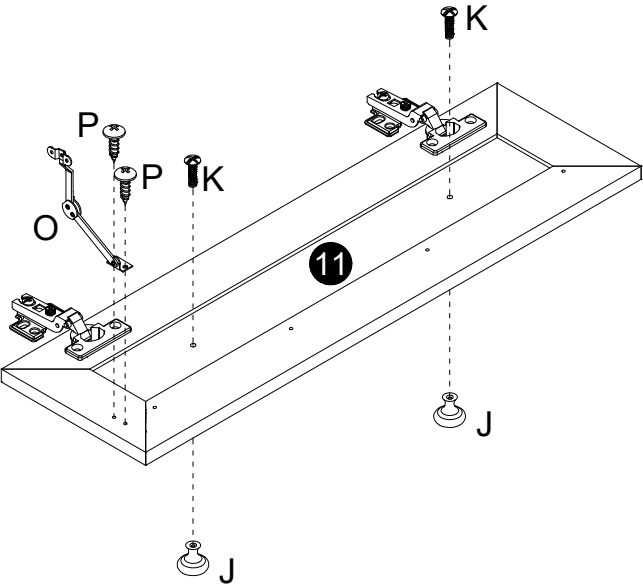


							
M4x12						Ø3.5x12	
K		J		O		P	
x 2		x 2		x 1		x 2	






STEP 11

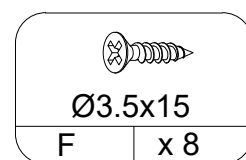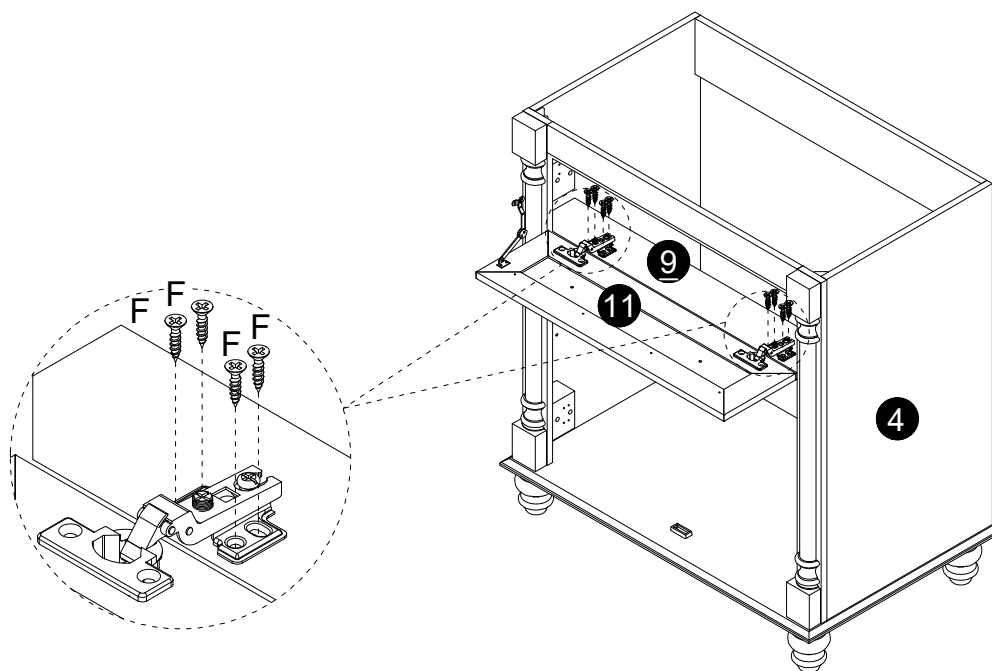



STEP 12

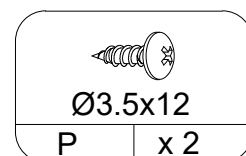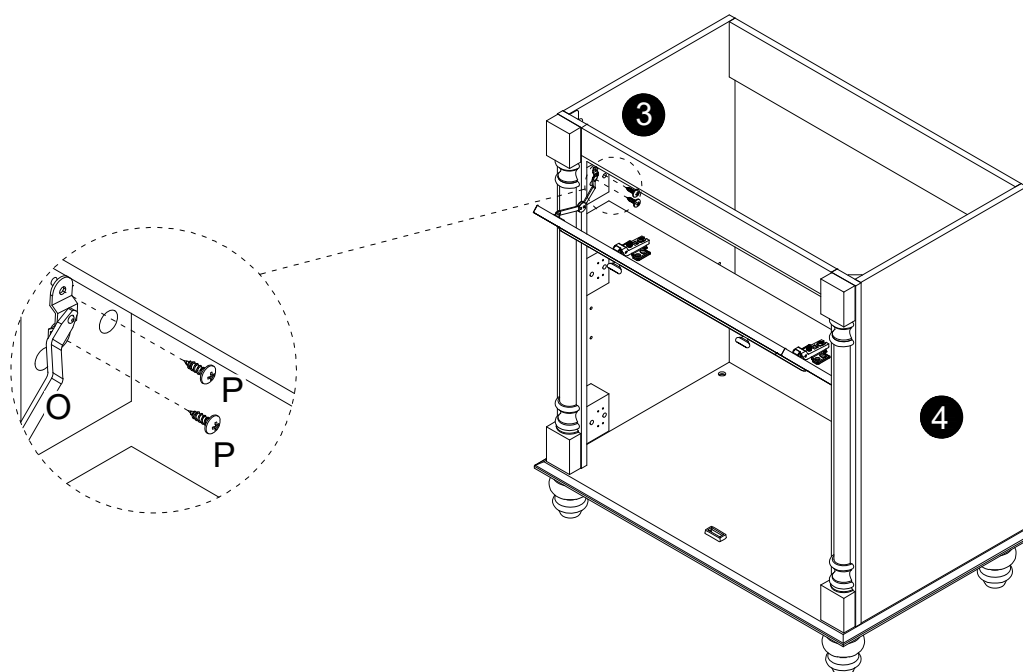


STEP 13

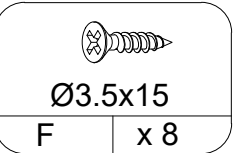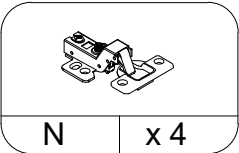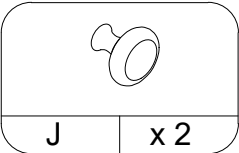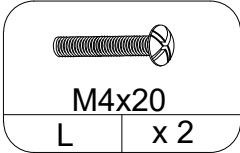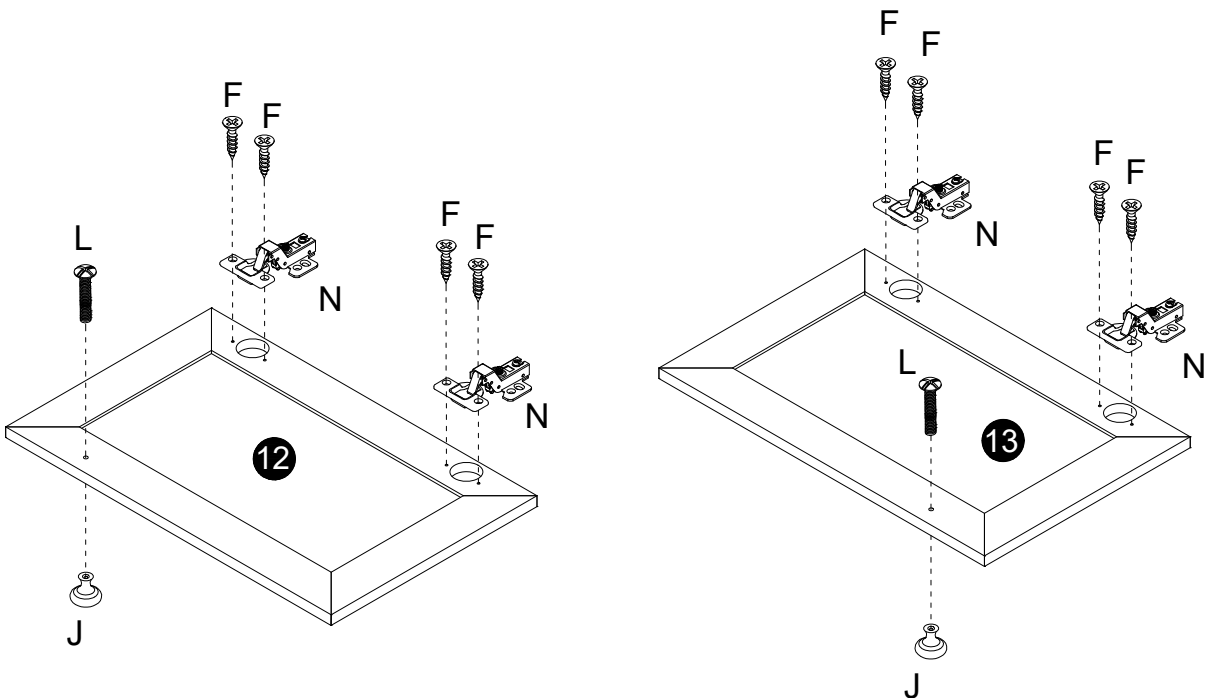

STEP 14

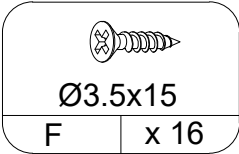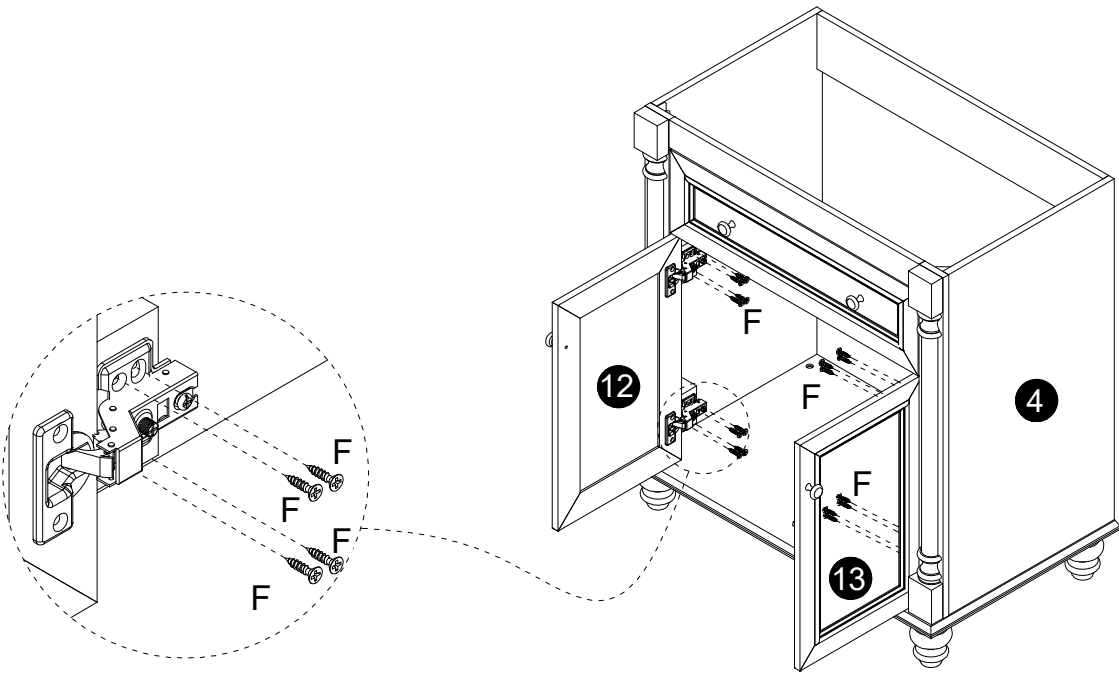


STEP 15

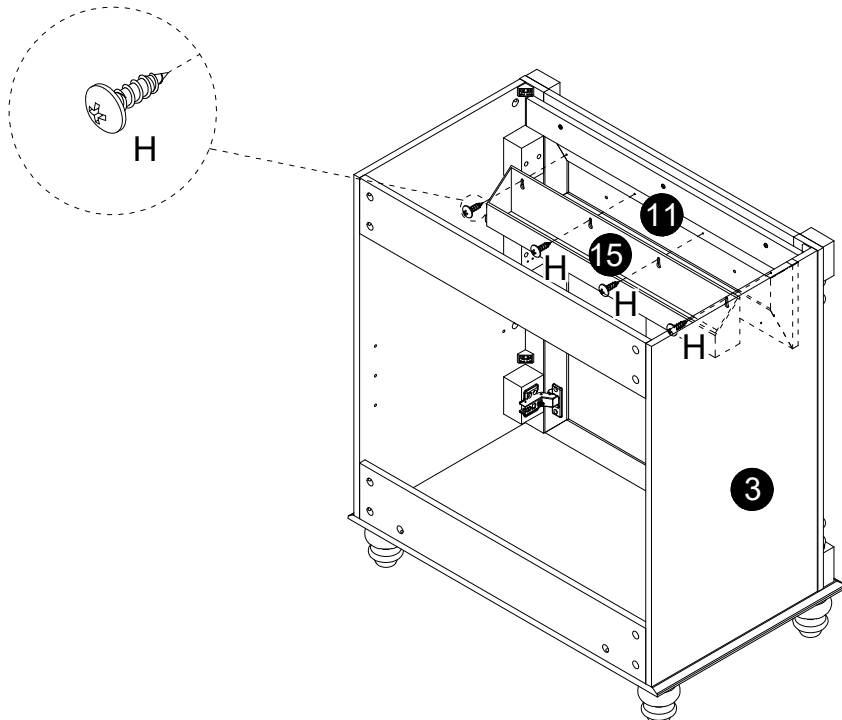

	
Ø3.5x12	
H	x 4



STEP 16

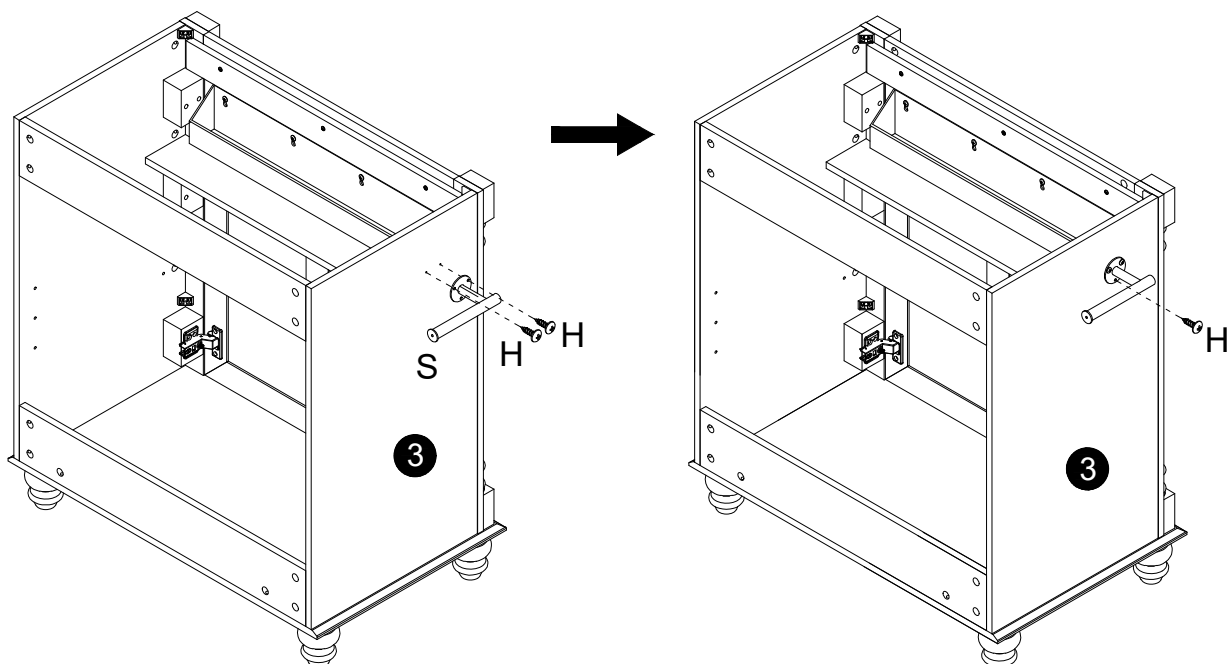


	
S	
S	x 1

	
Ø3.5x12	
H	x 3

STEP 17

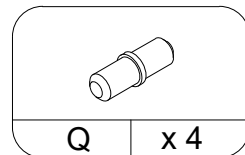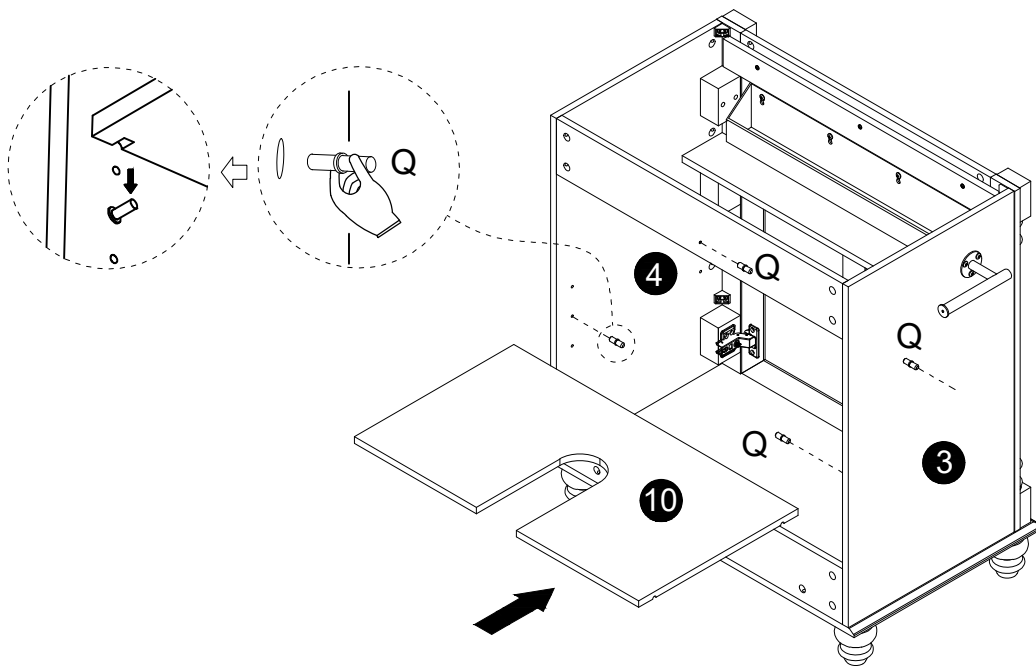

STEP 18

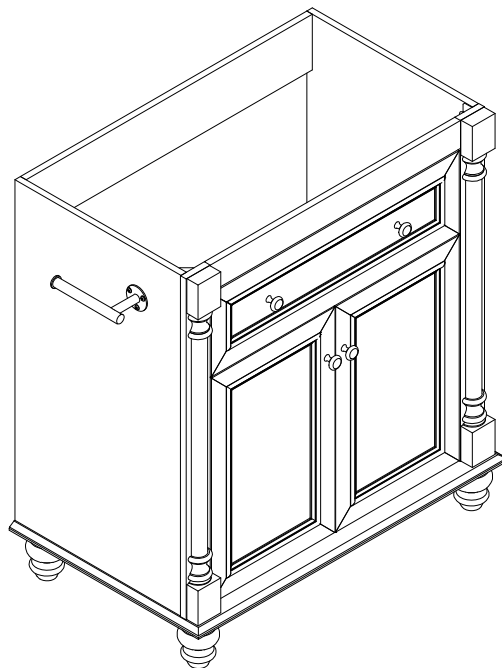


STEP 19

***Note:** Clean area where the vanity will be permanently located prior to beginning installation, ensuring the vanity will not interfere with any water supply and drain lines once mounted.

* With the help of another adult, carefully place vanity against the wall in its final location. From inside vanity, drill hole through vanity mounting area and into wall studs.

Using mounting hardware (V) appropriate for your installation site, secure vanity to wall studs.


*** WARNING**
Vanity **MUST** be secured to wall

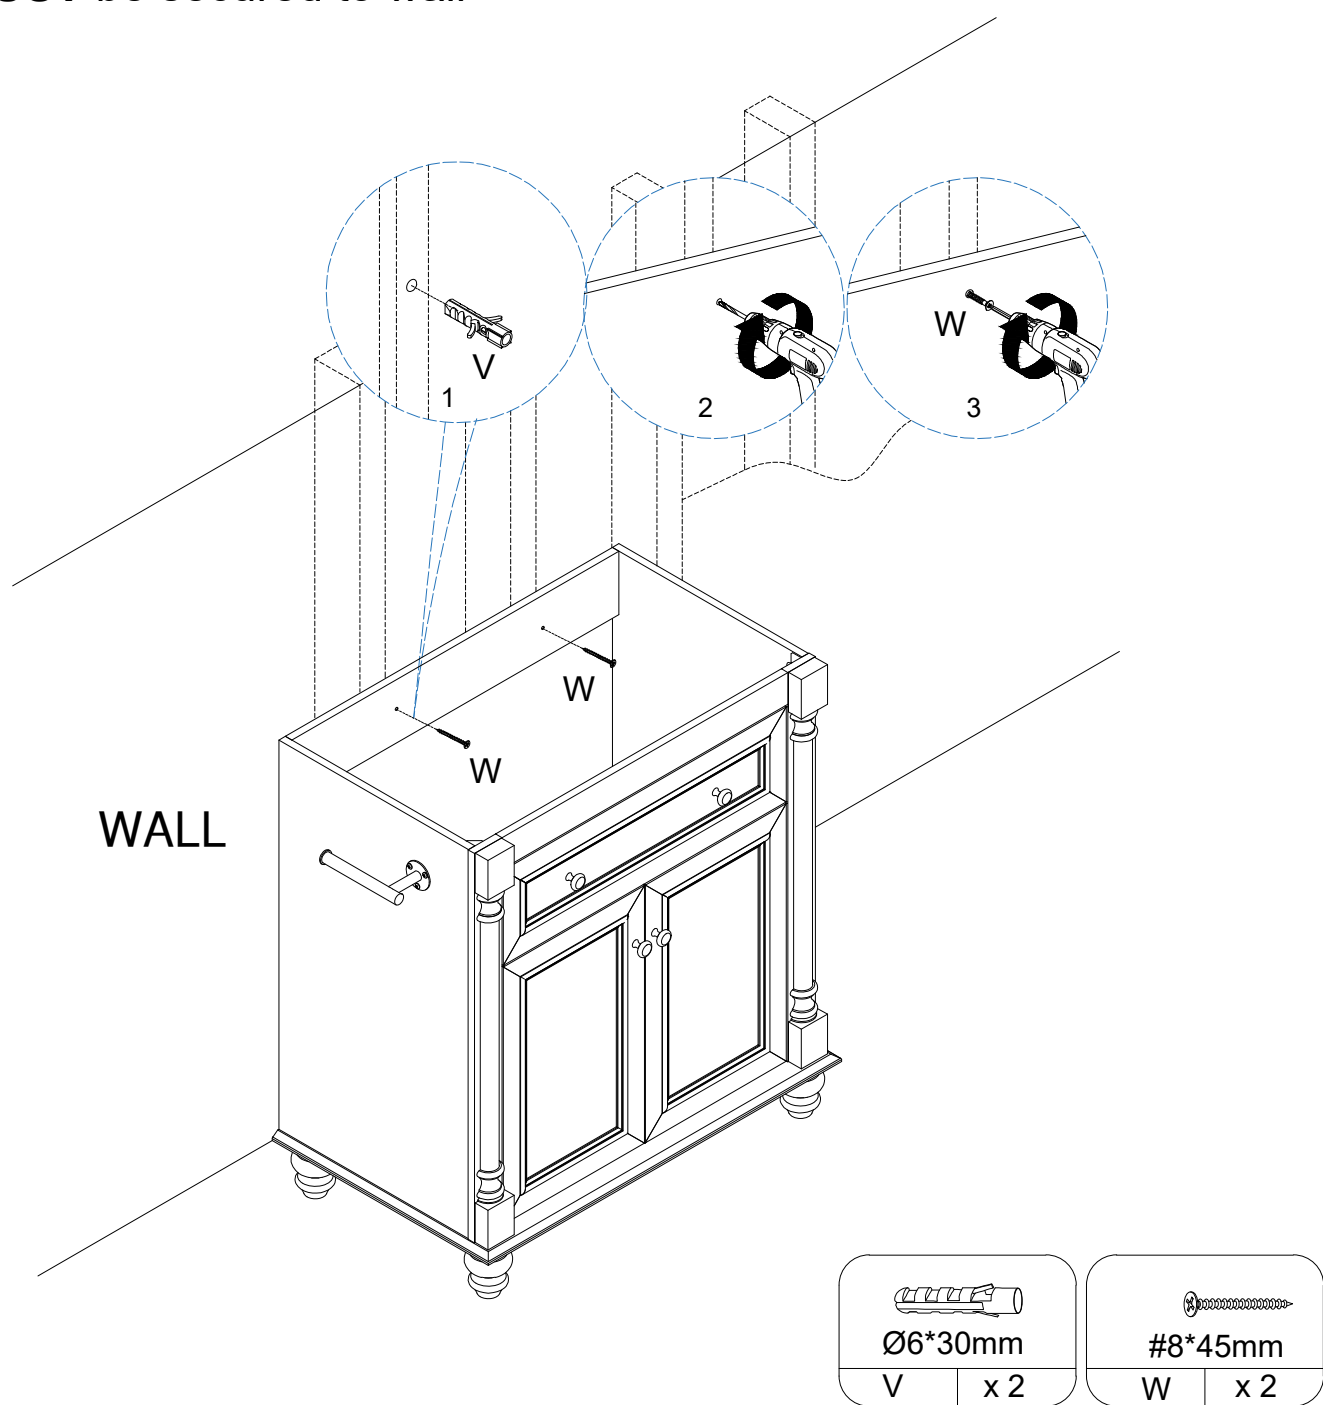

STEP 20

Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (1) per the manufacturer's instructions.

* Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity. With the help of another adult, gently lower top (1) onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

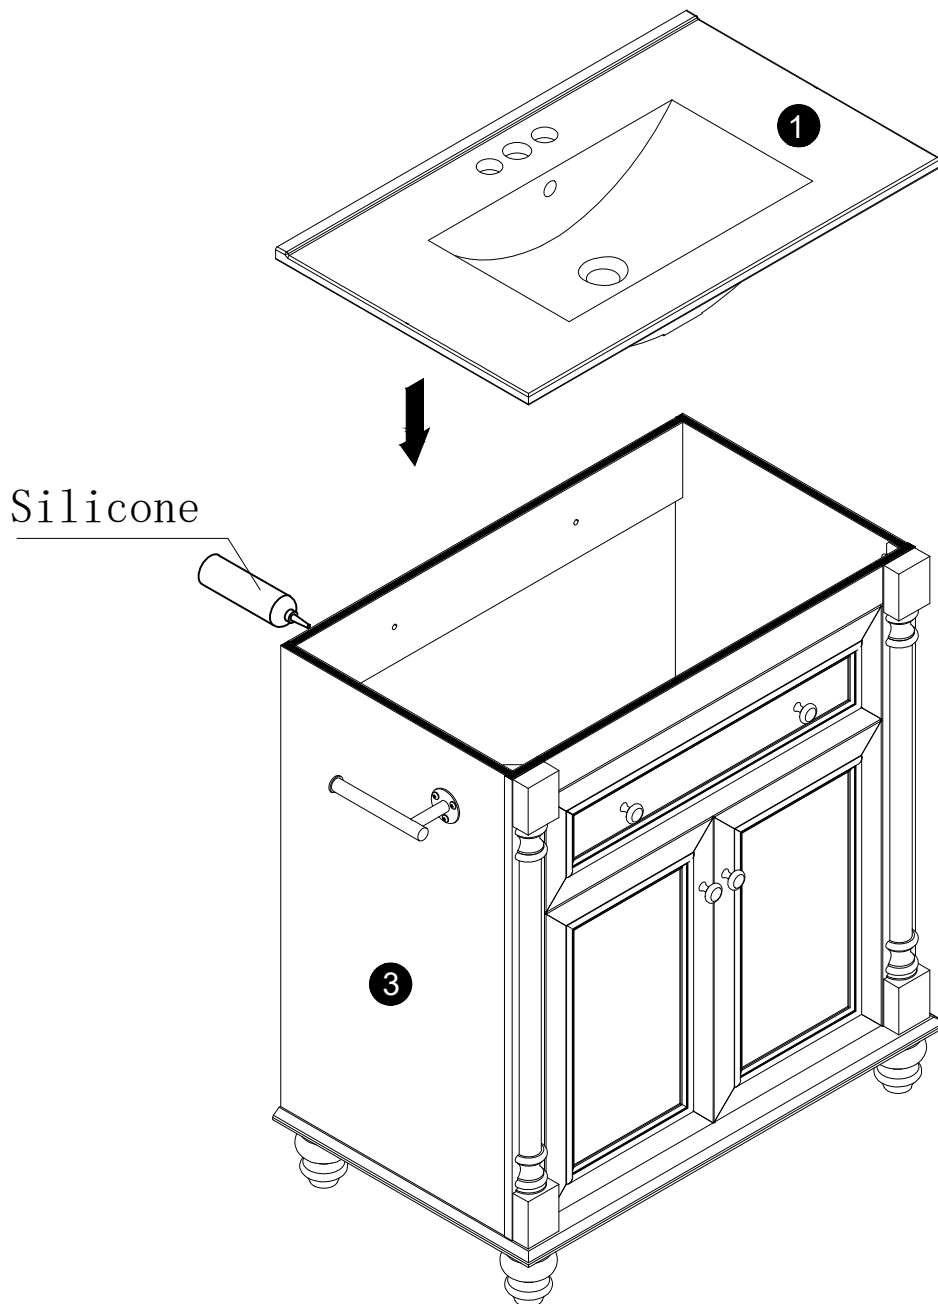

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning