


YB810-914#

Bathroom cabinet

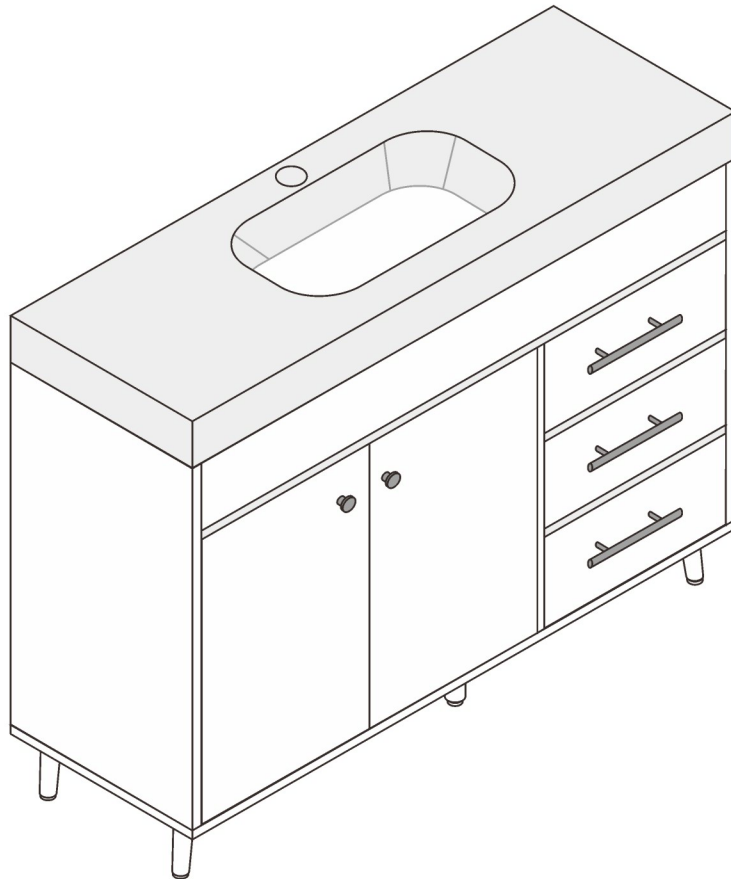


2 Persons


L906*W455*H593MM

Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.








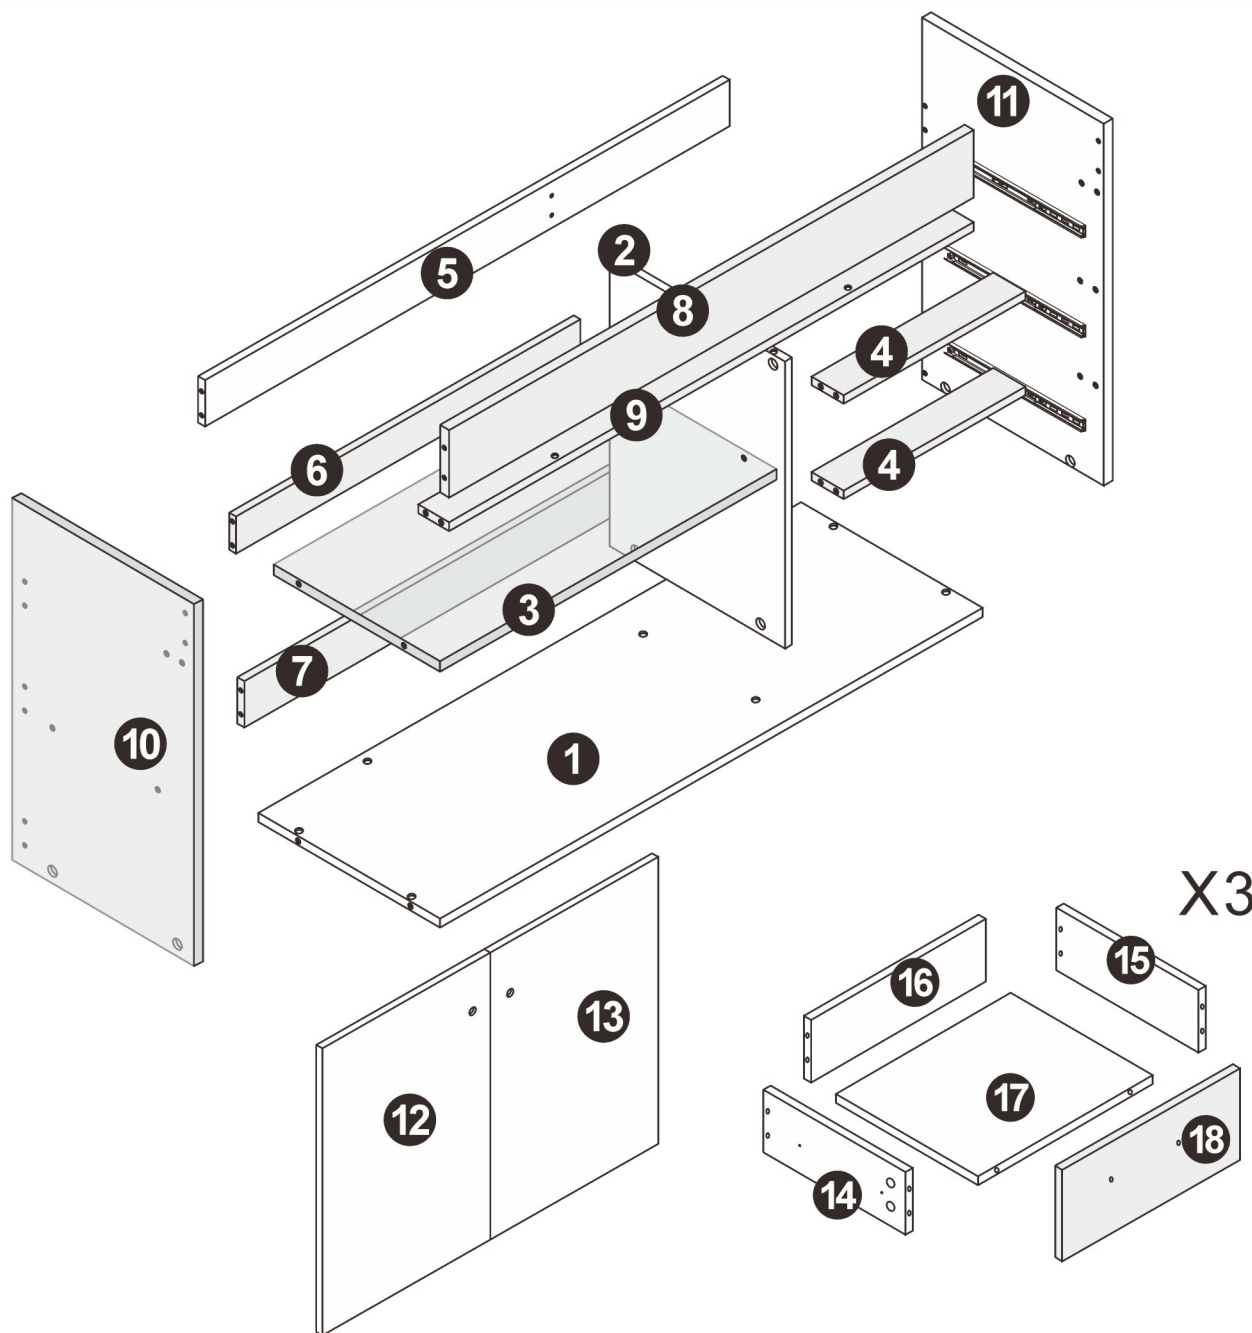


Disassembly and installation of accessories







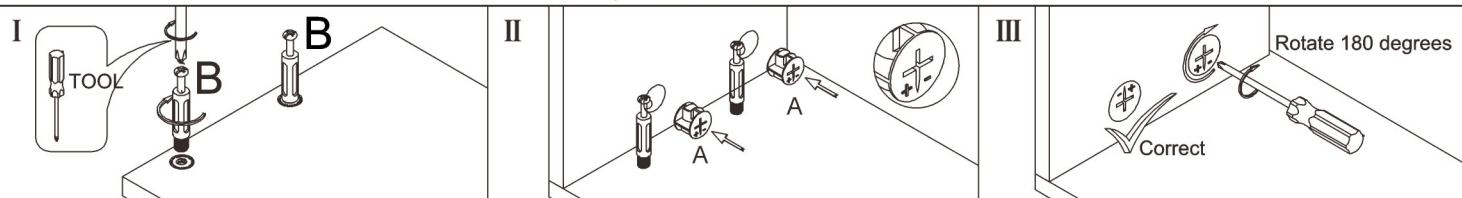


A 64PCS  15*10mm	B 64PCS  6*28mm	C 84PCS  3.5*14mm	D 30PCS  3.5*35mm	E 8PCS  4*20	F 2PCS  Handles	G 4PCS  Sponge Mat	H 3PCS  128 Handles
I 2PCS  Expansion screw	J 2PCS  Corner code	K 3PCS  Three-section Rail	L 4PCS  Hardware Feet	M 1PCS  Hardware Feet	N 4PCS  Mid bend		

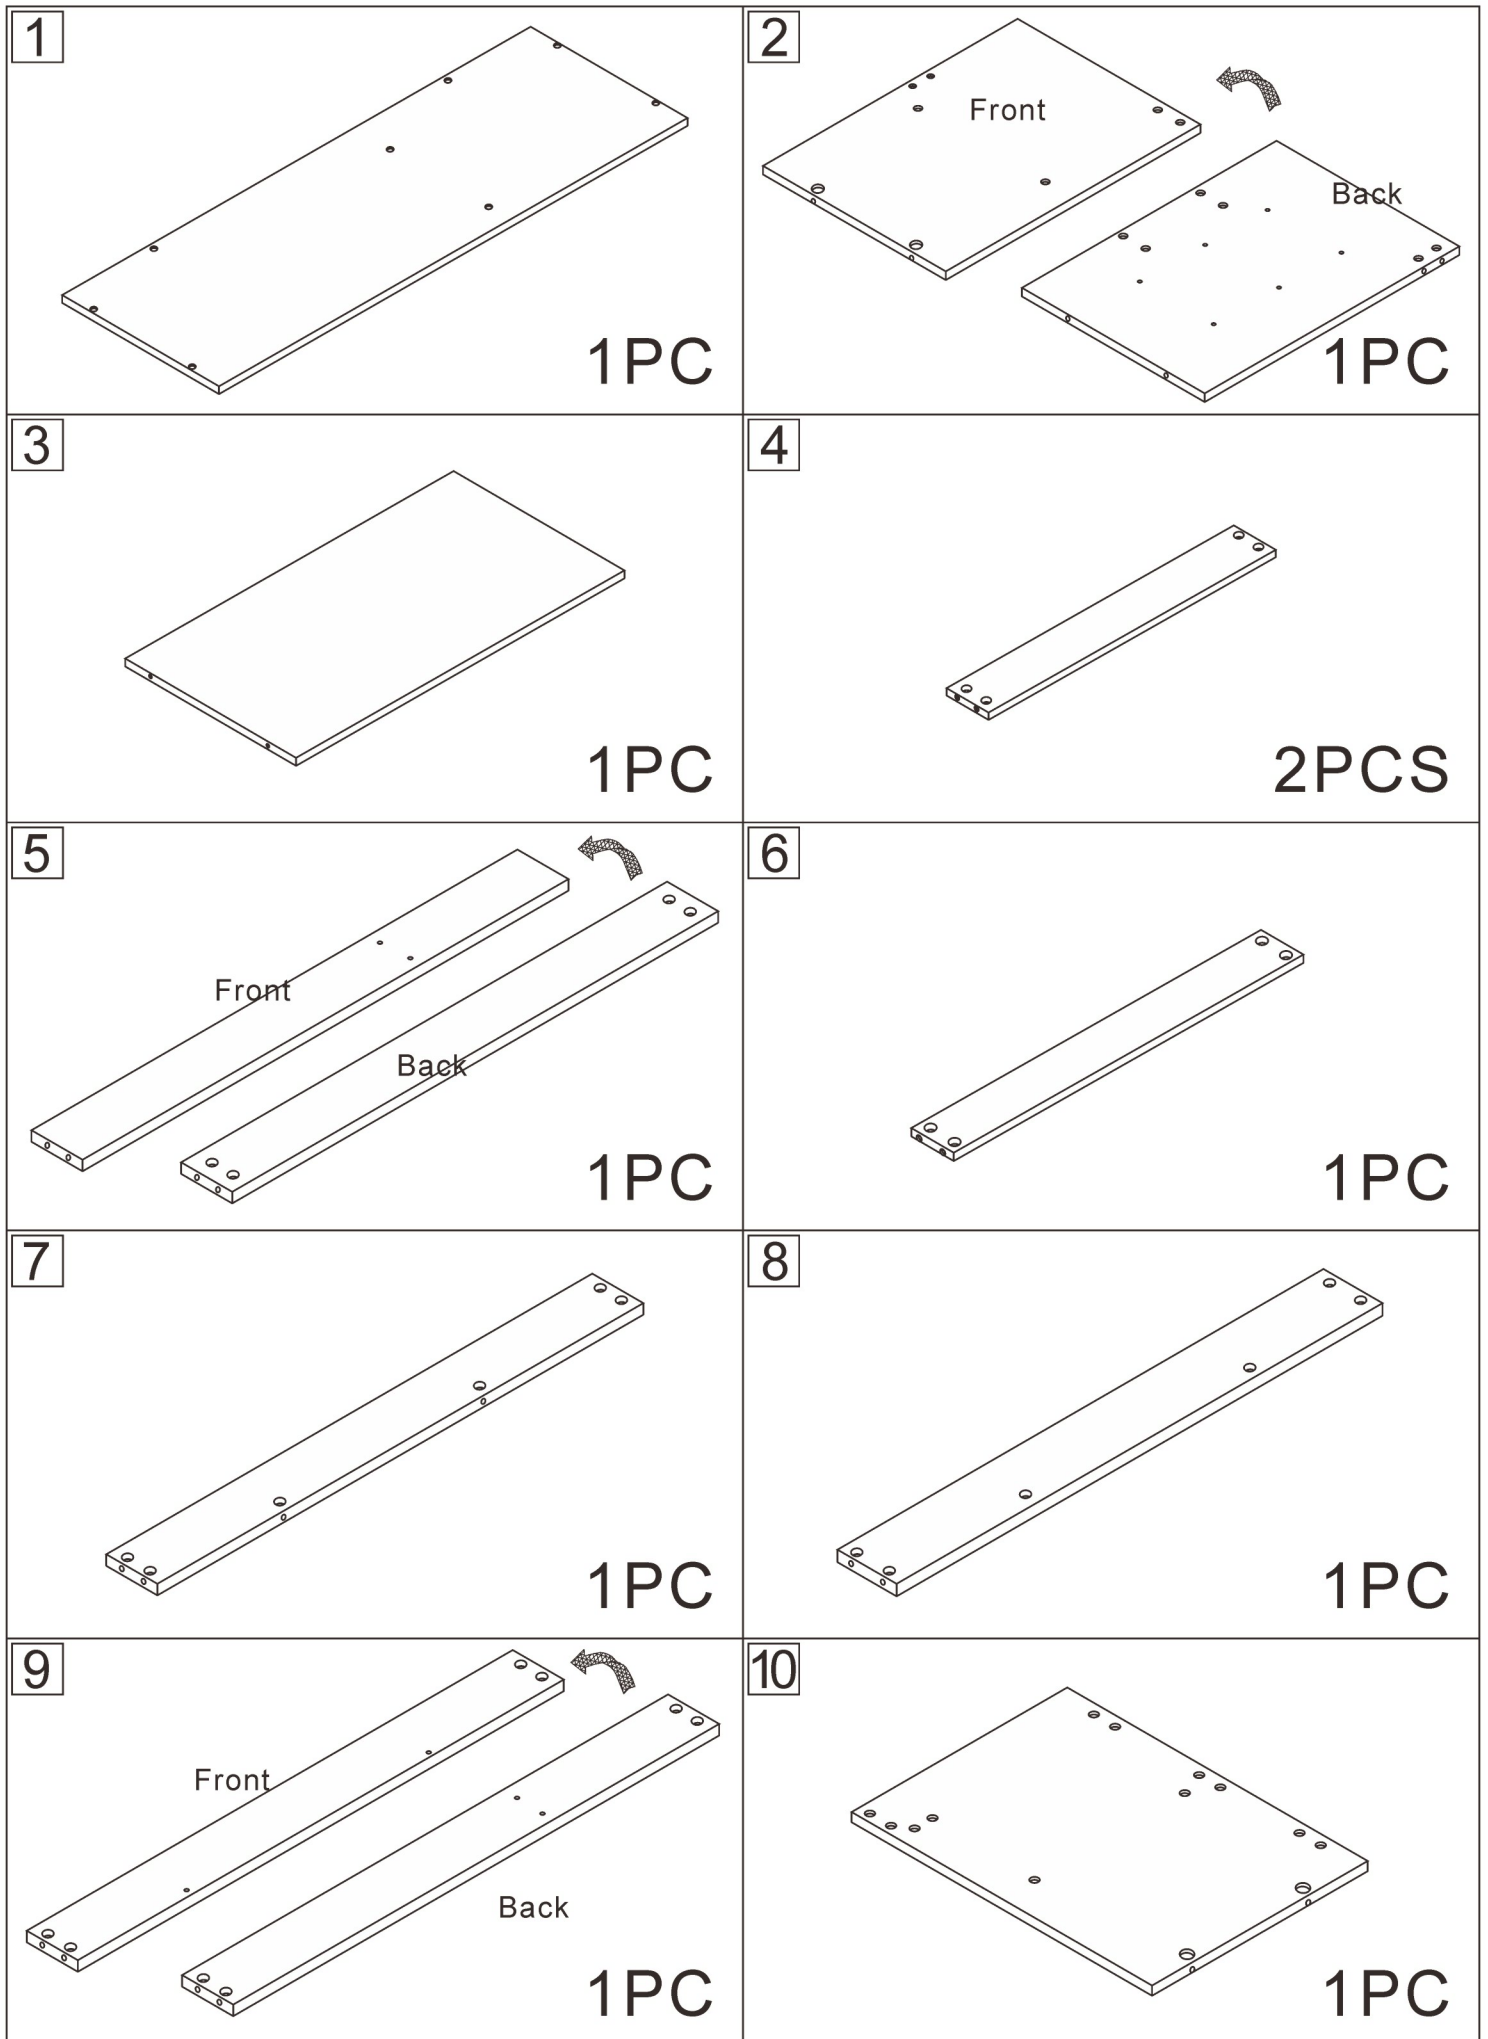

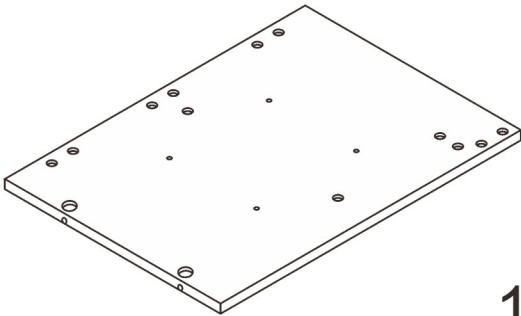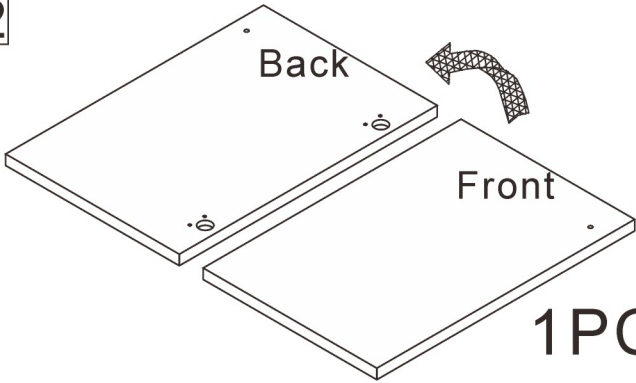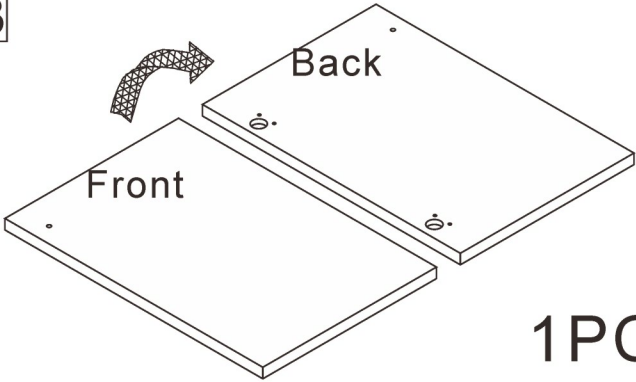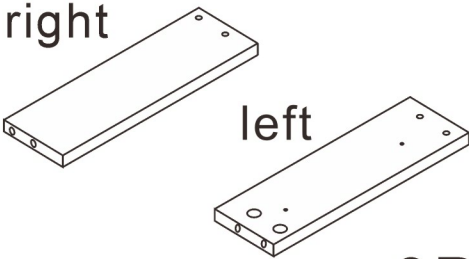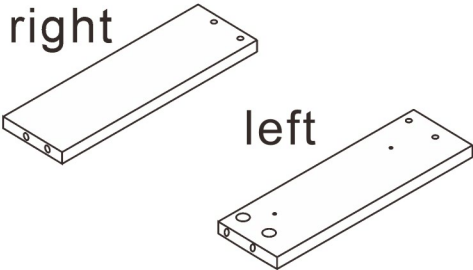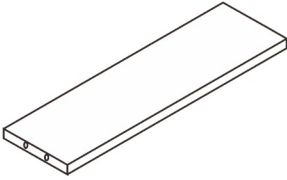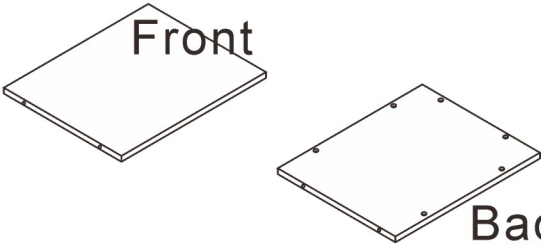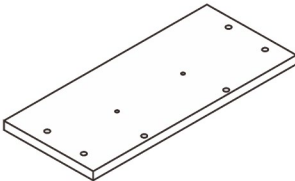
11  1PC	12  1PC
13  1PC	14  3PCS
15  3PCS	16  3PCS
17  3PCS	18  3PCS

1

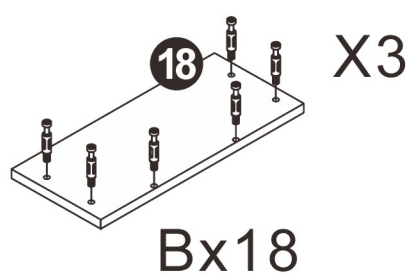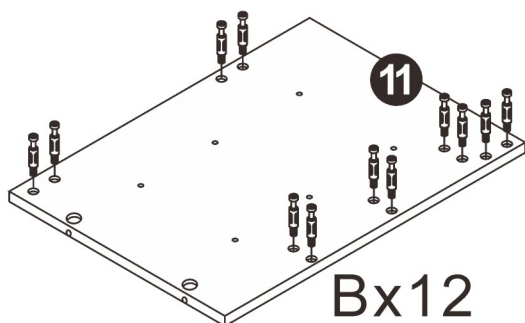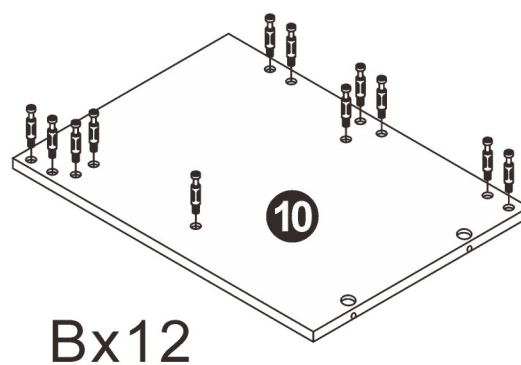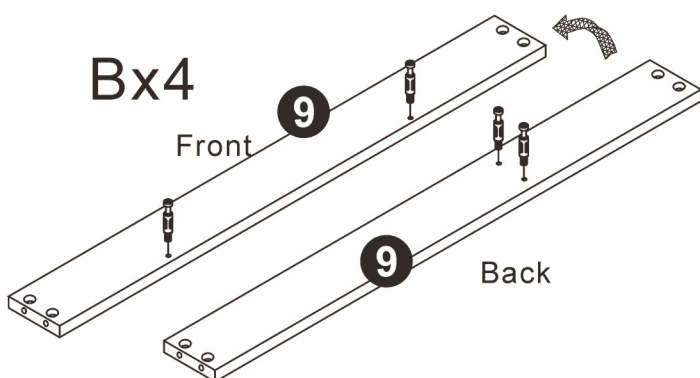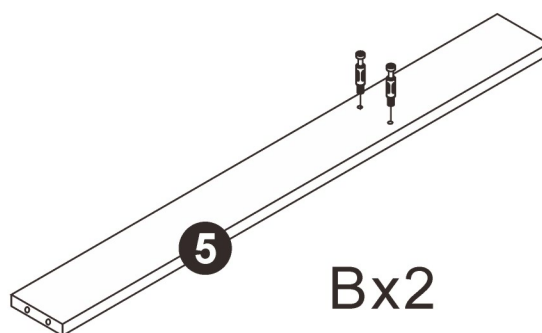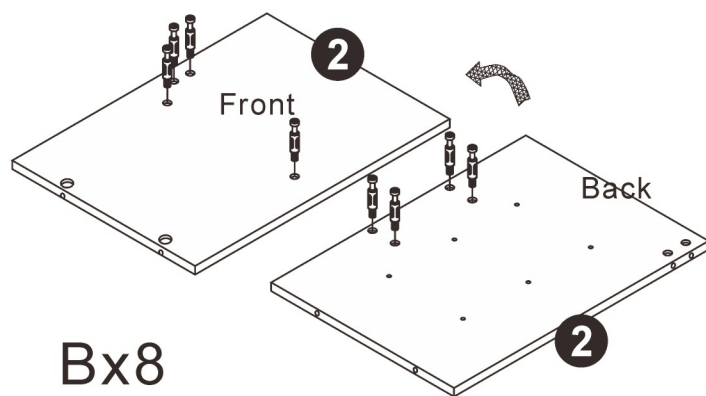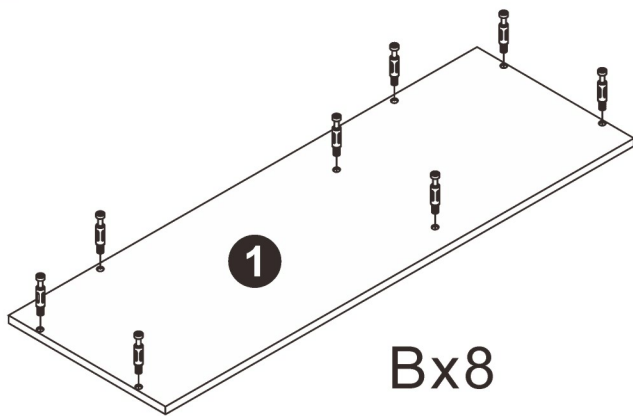


B	64PCS
6*28mm	

2

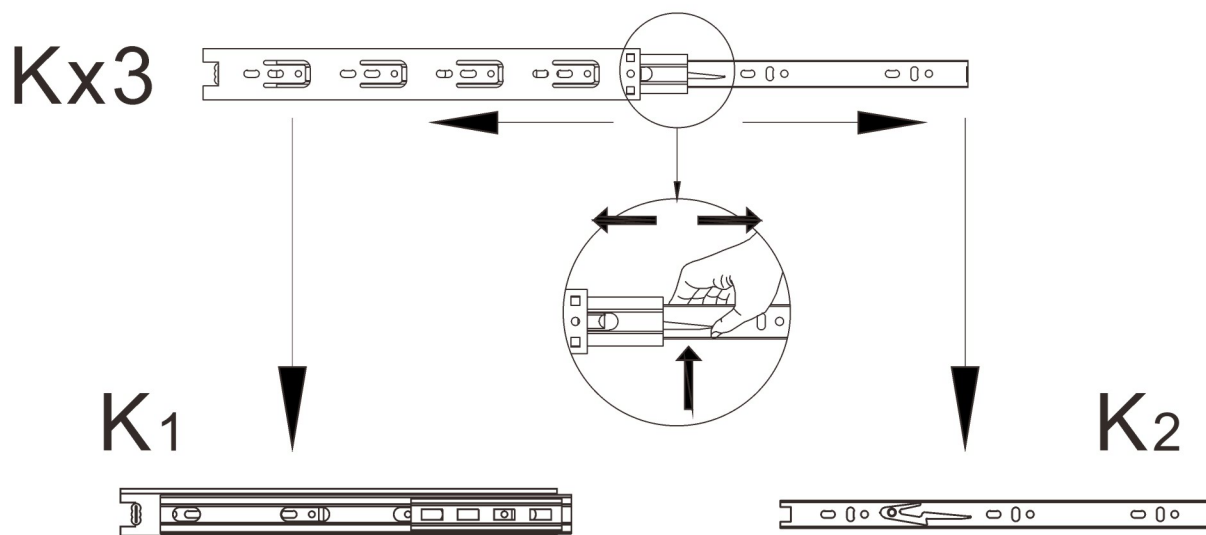

K ₁	3PCS
	
Three-section Rail	


3

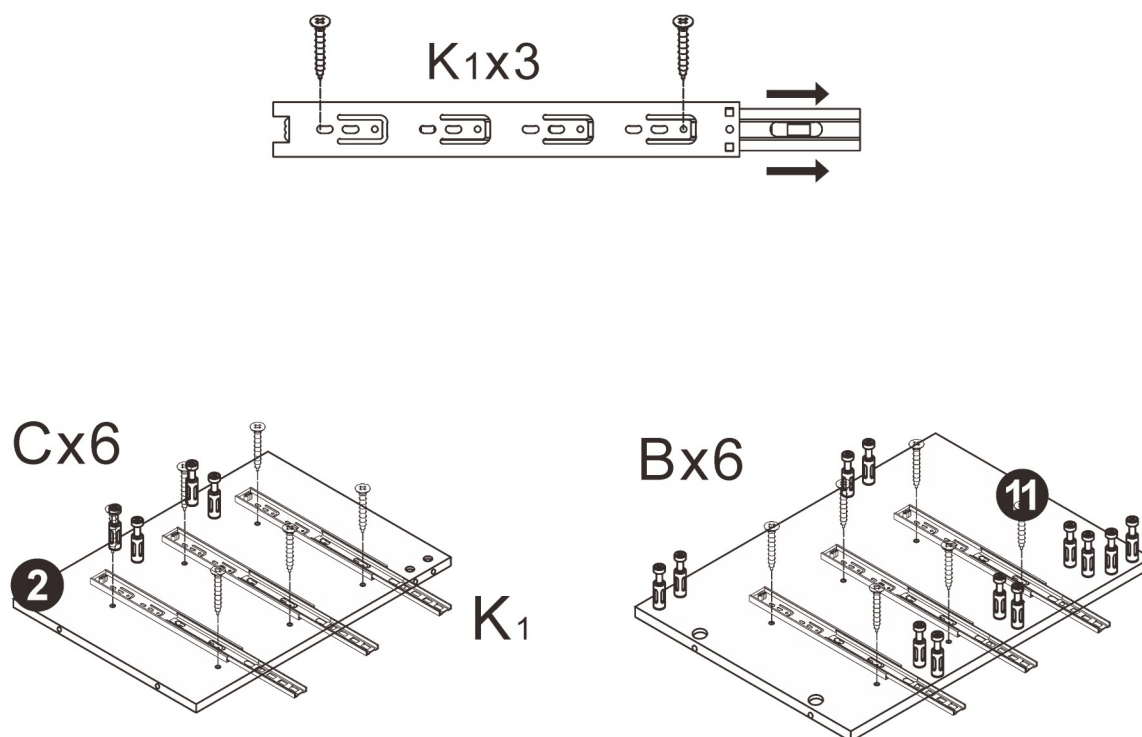

C	12PCS
	
3.5*14mm	

K ₁	3PCS
	
12 inch Three-section Rail	

4

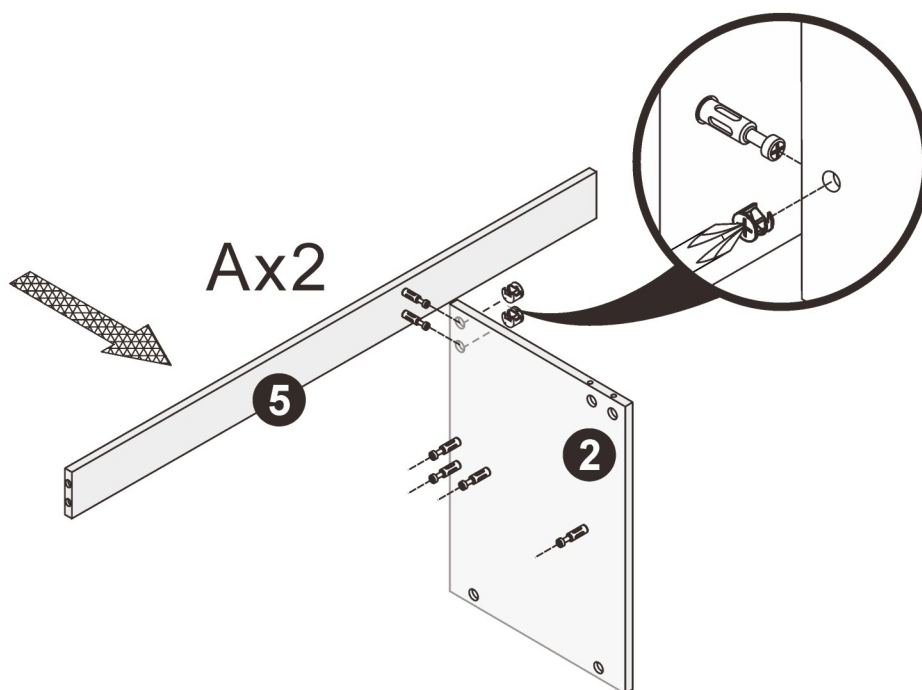


A 2PCS



15*10mm

5

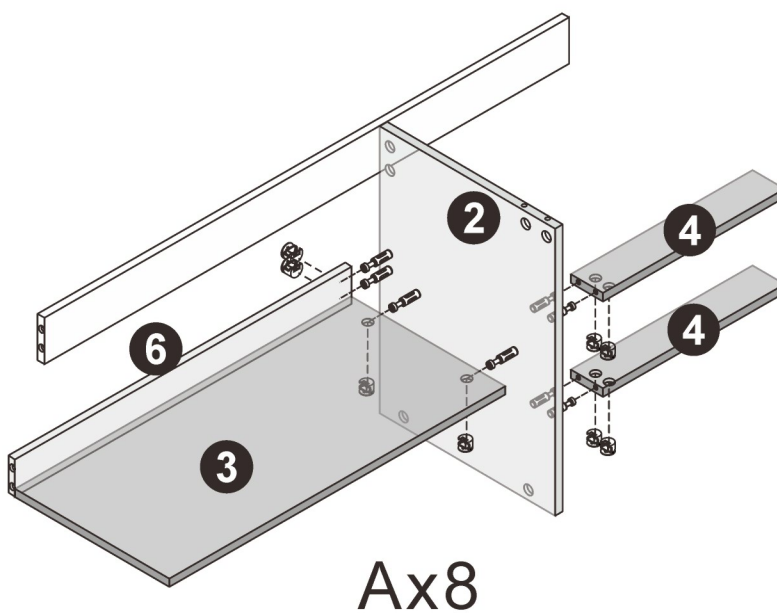


Ax8

A 8PCS




15*10mm

6

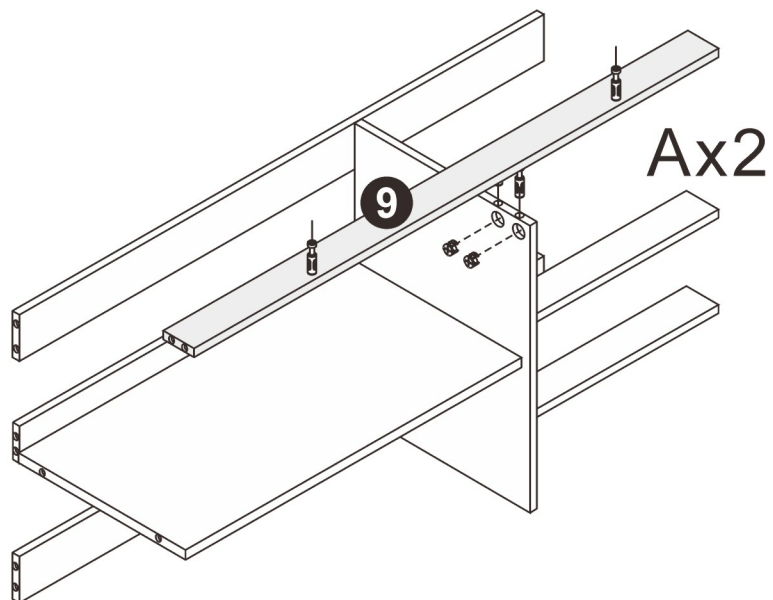


A	2PCS
	
15*10mm	

7

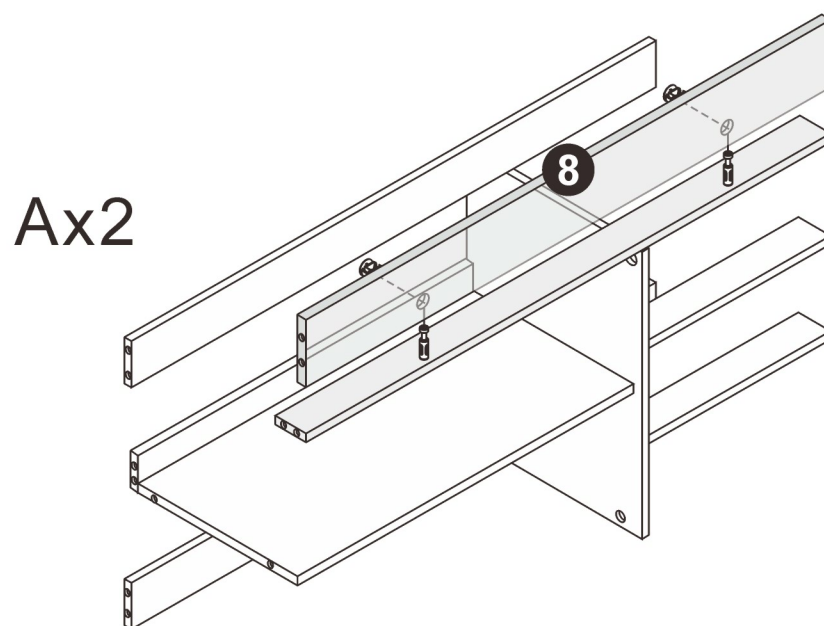

A	2PCS
	
15*10mm	

8

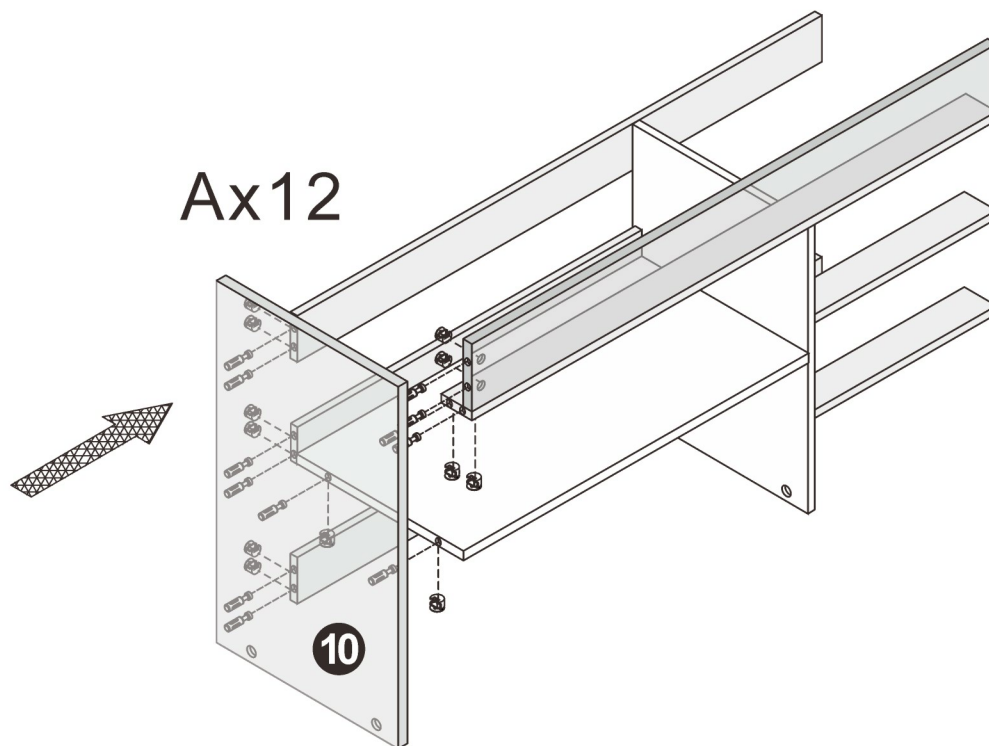


A 12PCS



15*10mm

9

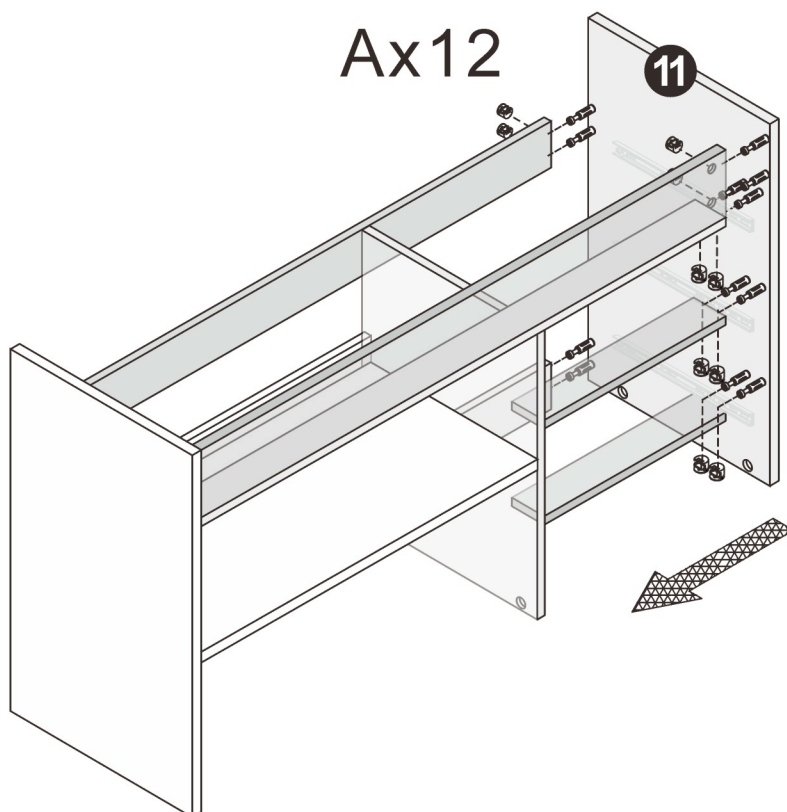


A 12PCS




15*10mm

10

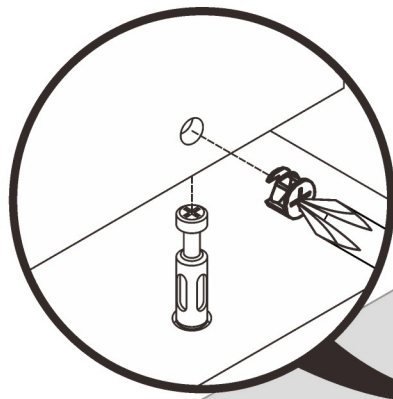

Ax8


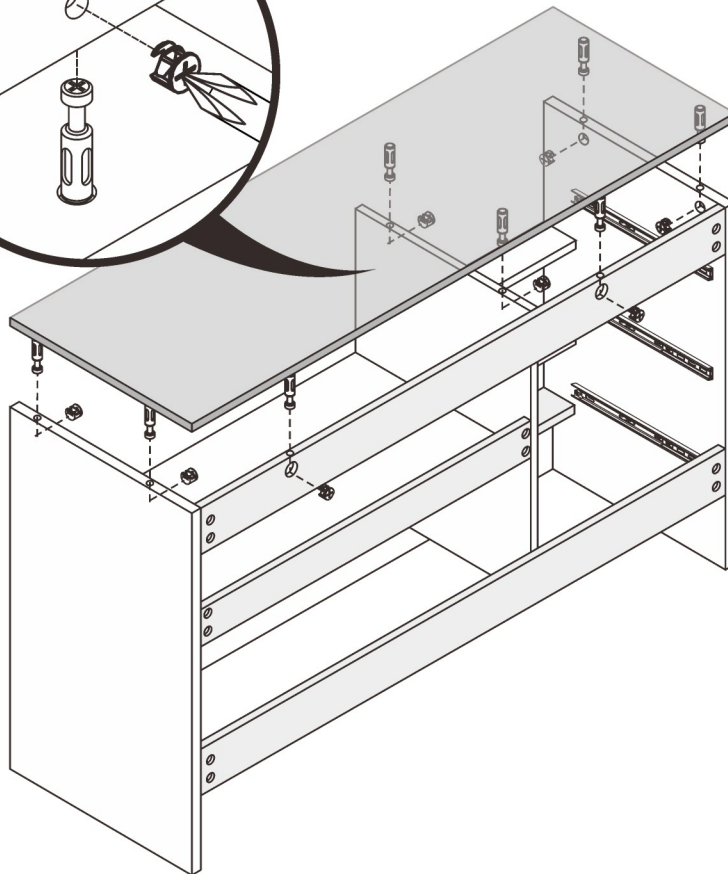


A	8PCS
15*10mm	

11

Jx2


Cx16

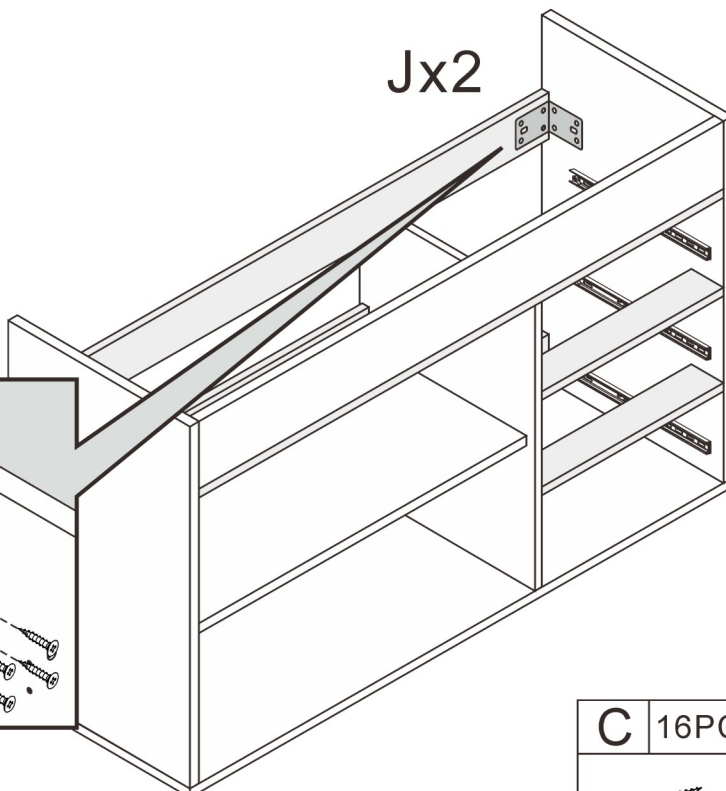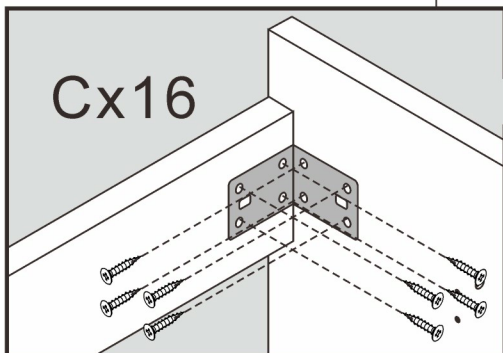


C	16PCS	J	2PCS
3.5*14mm		Corner code	


12

Nx2
Cx4


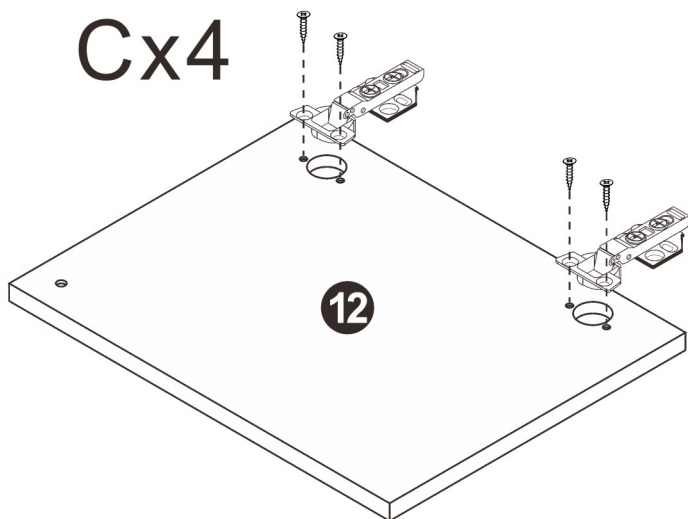


Nx2
Cx4

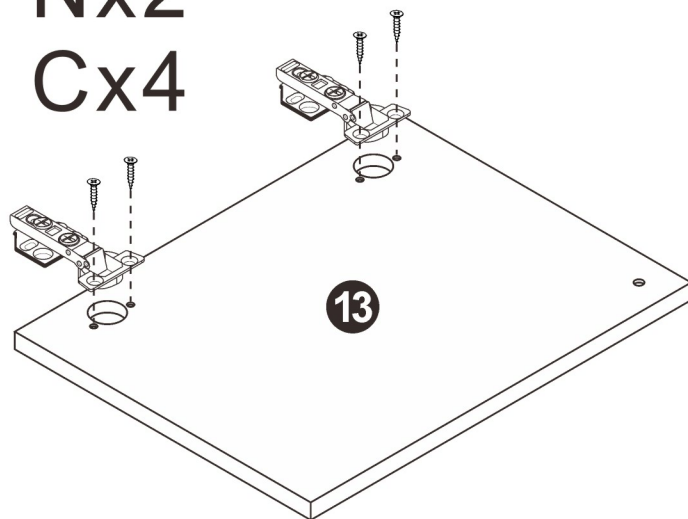

C	8PCS	H	4PCS
			
3.5*14mm		Mid bend	

13

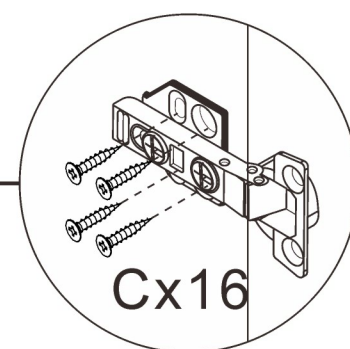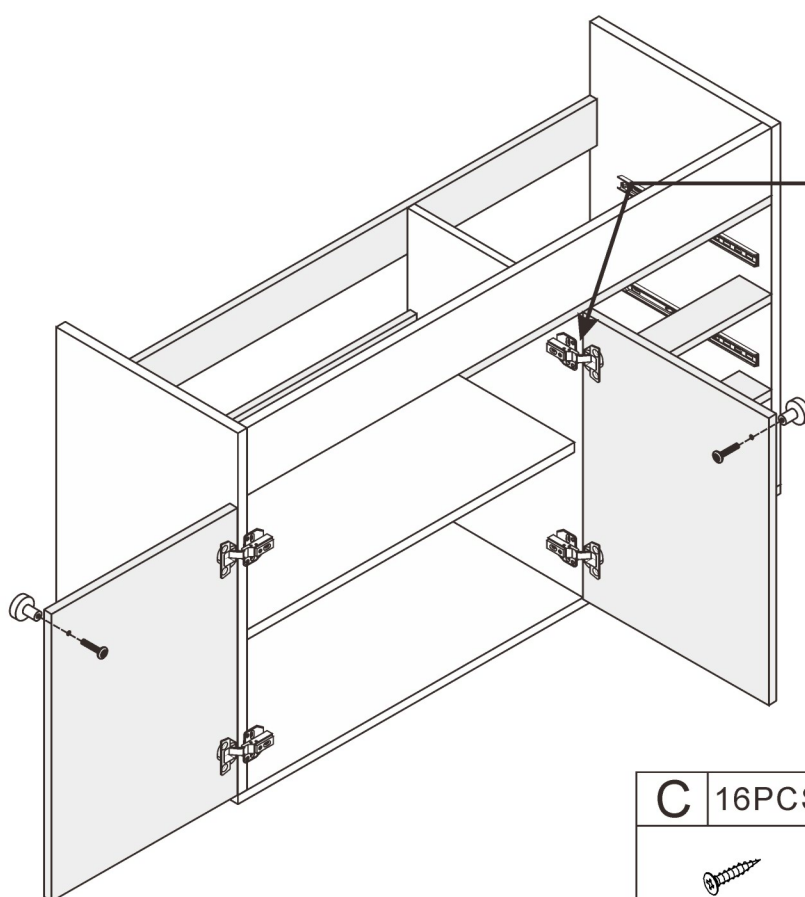

Ex2
Fx2


C	16PCS	E	2PCS	F	2PCS
					
3.5*14mm		4*20		Handles	

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

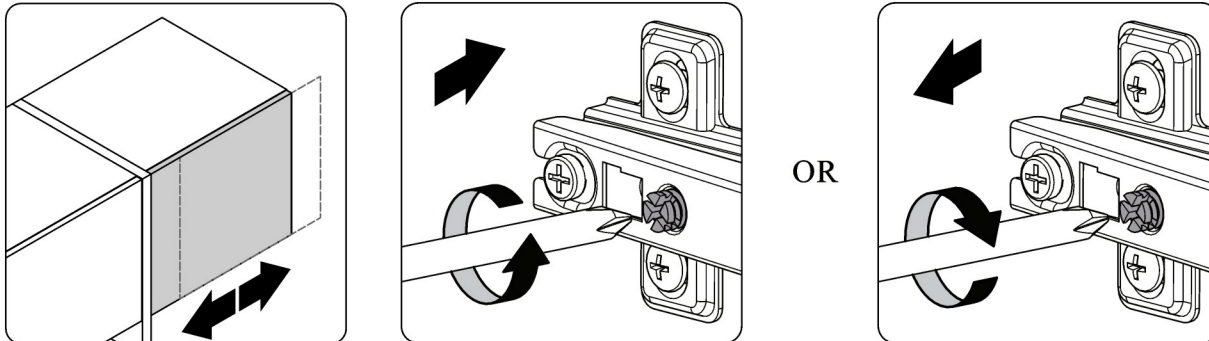


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

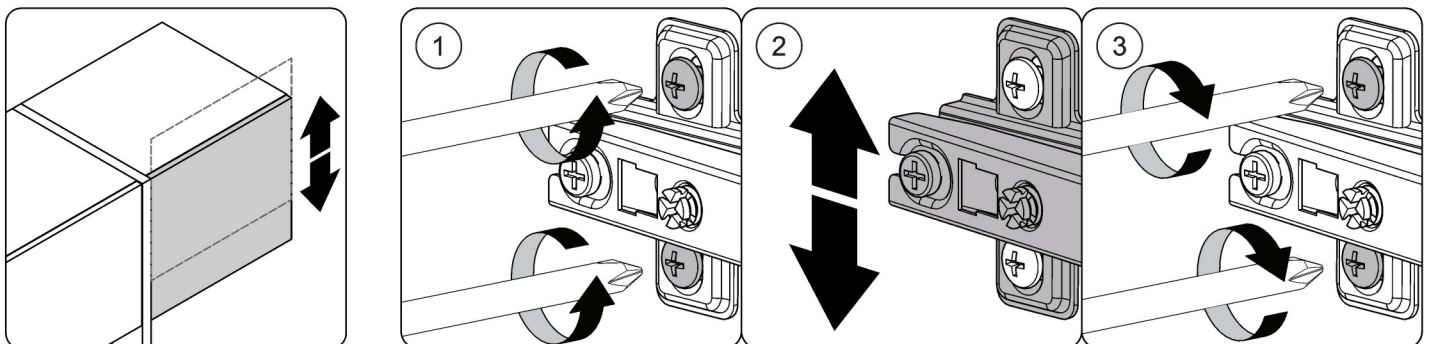


- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

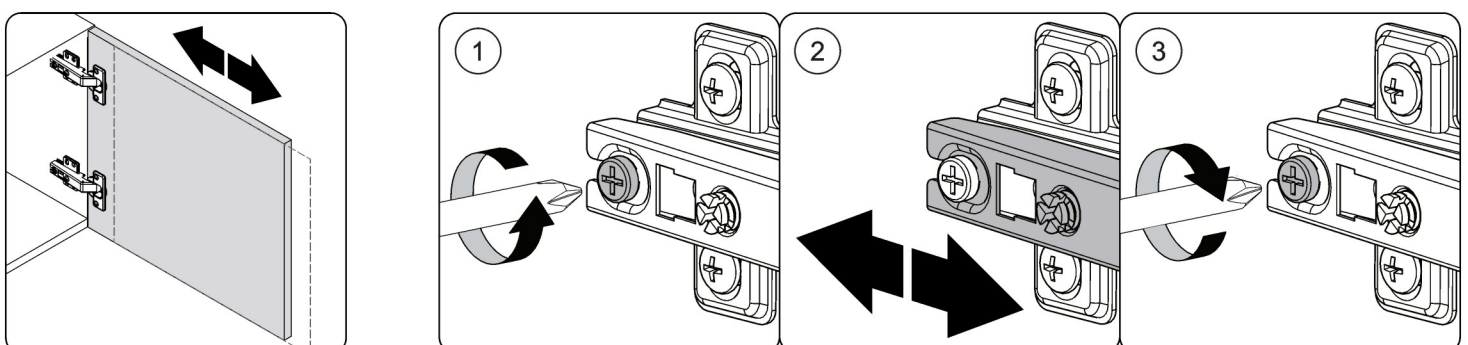


14

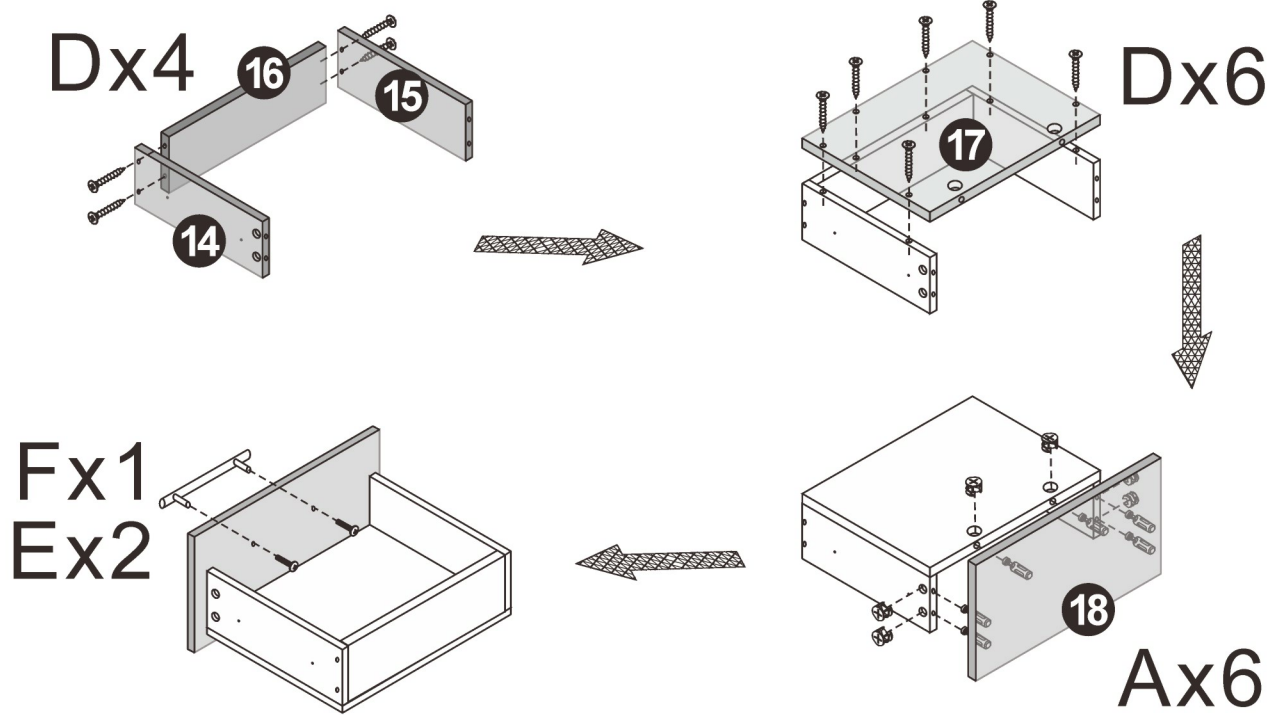


A	18PCS	D	30PCS	E	6PCS	H	3PCS
							
15*10mm		3.5*35mm		4*20		128 Handles	

15

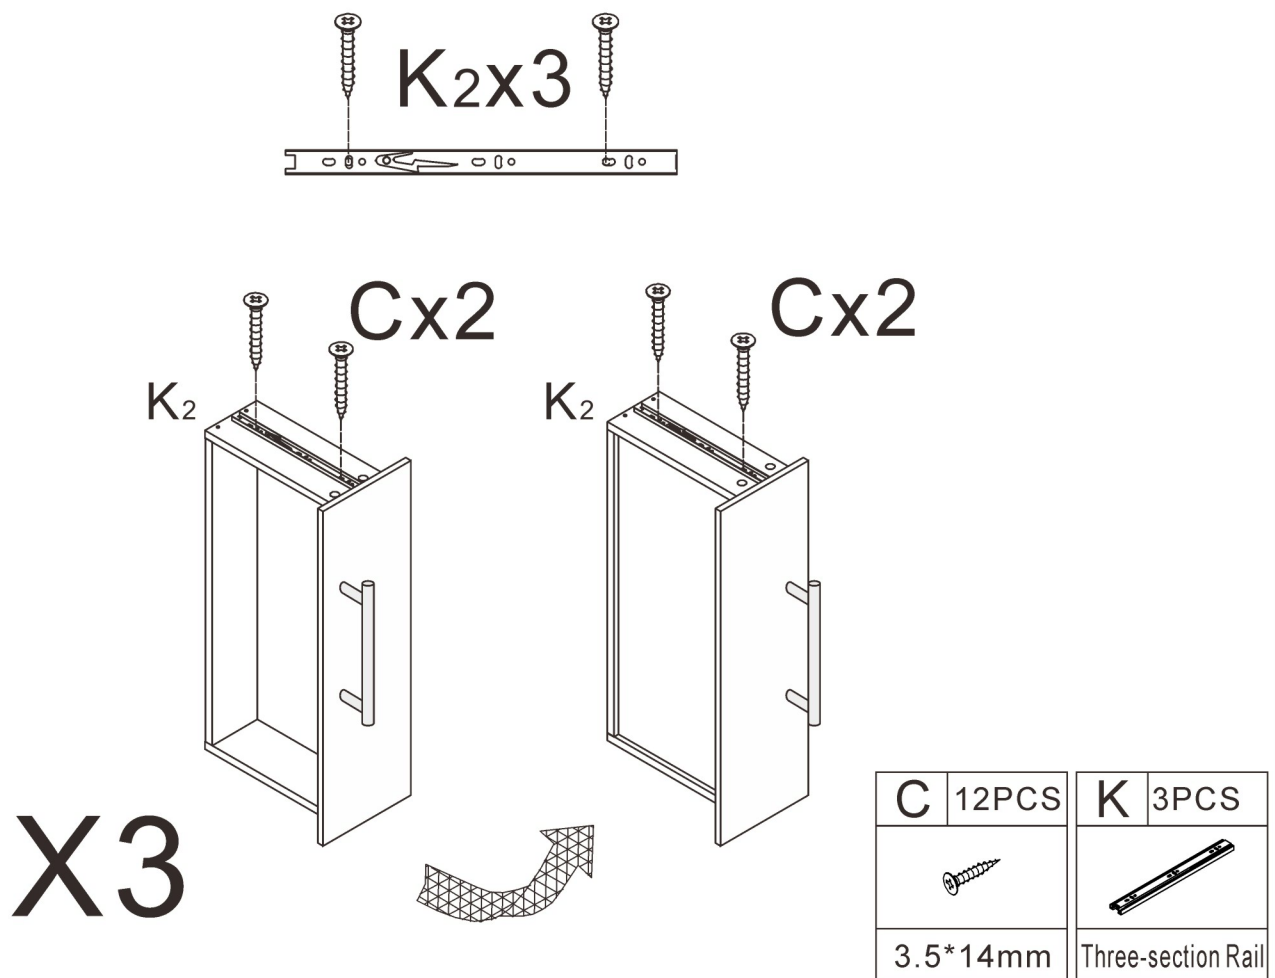

C	12PCS	K	3PCS
			
3.5*14mm		Three-section Rail	


16

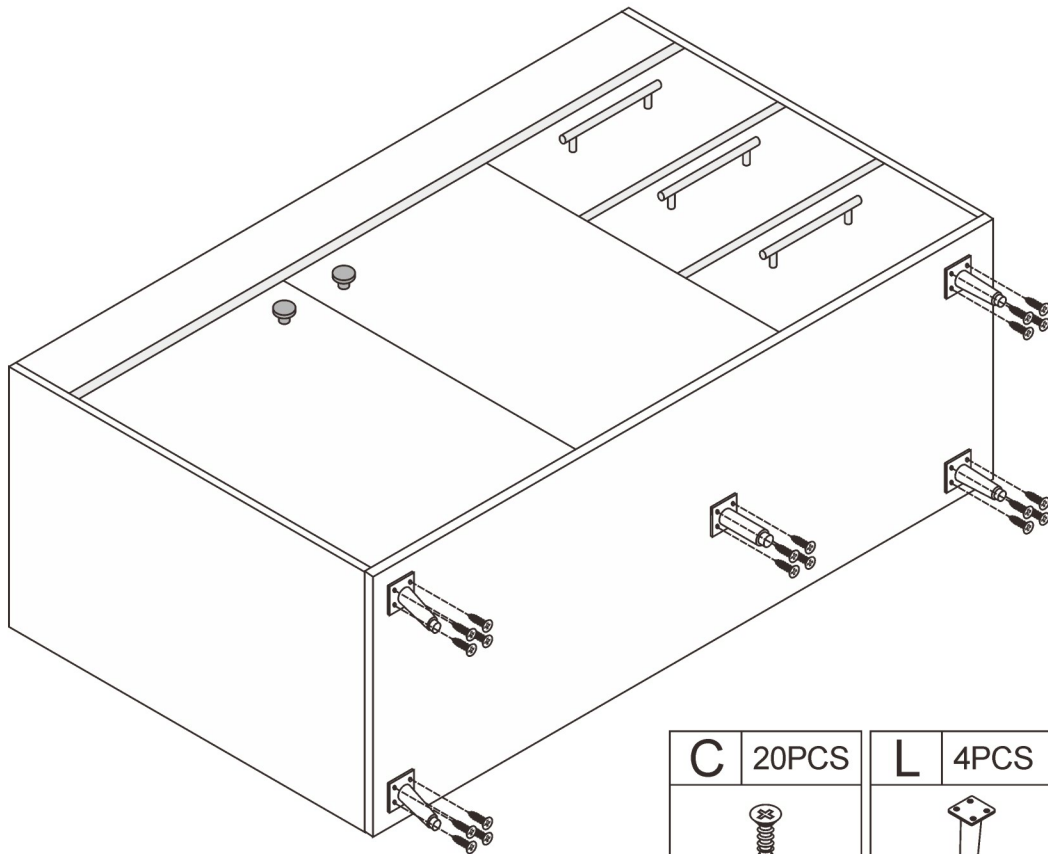

Cx20
Lx4
Mx1


C	20PCS	L	4PCS	M	1PCS
					
3.5*14mm		Hardware Feet		Hardware Feet	

17

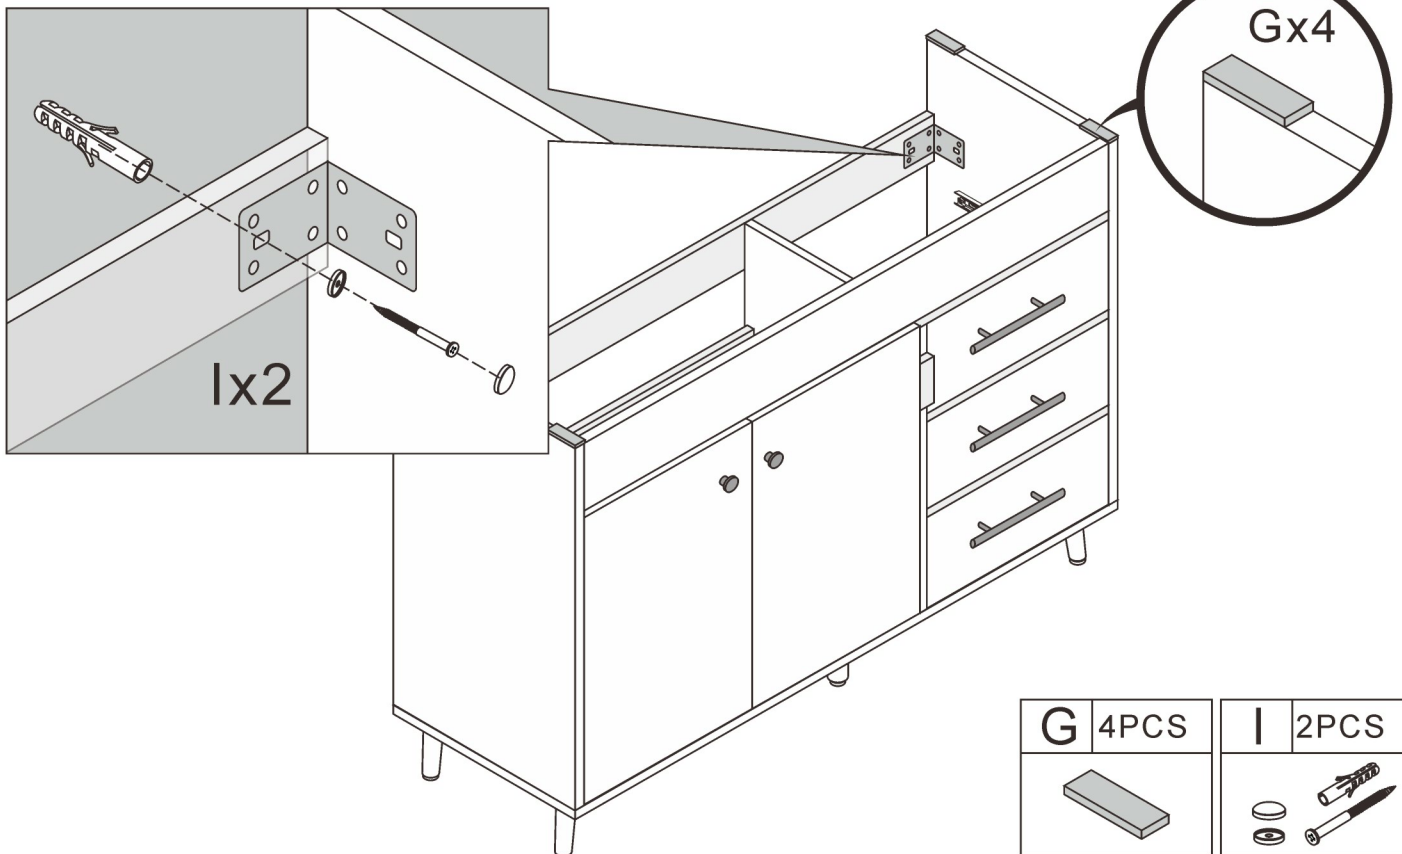


Gx4


Ix2

G	4PCS	I	2PCS
			
Sponge Mat		Expansion screw	

18

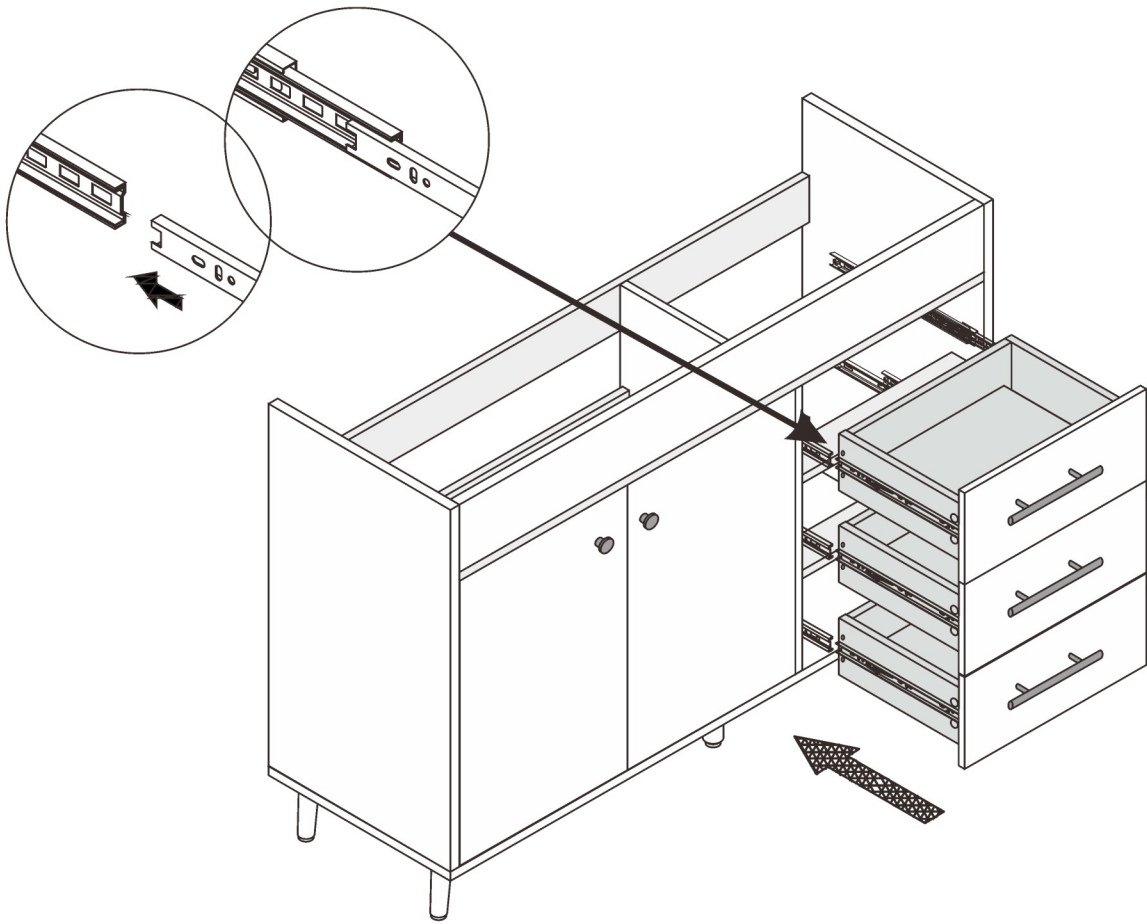

19

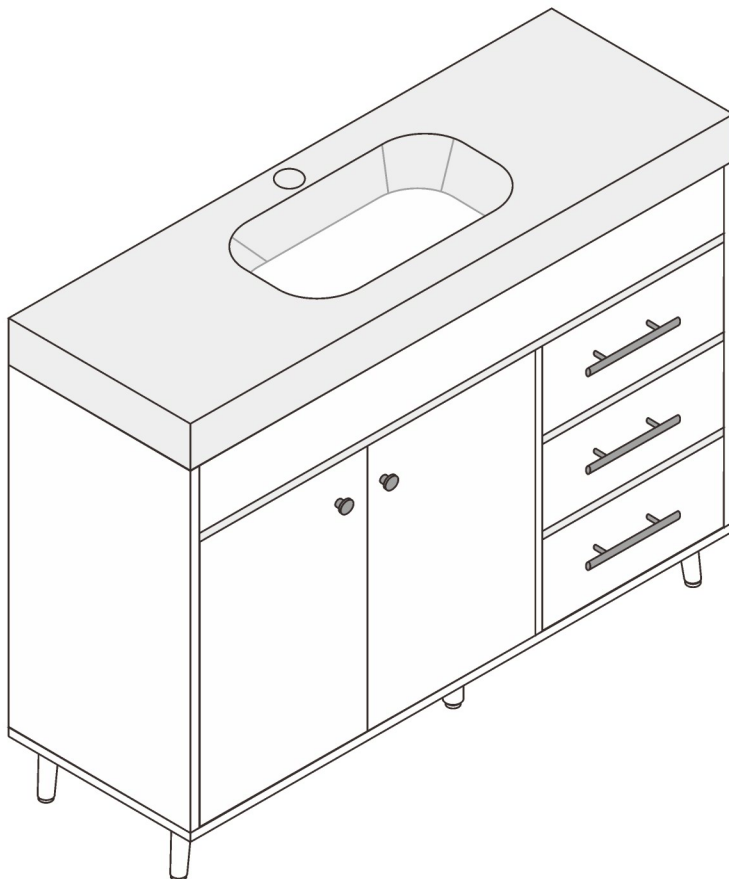

OK