

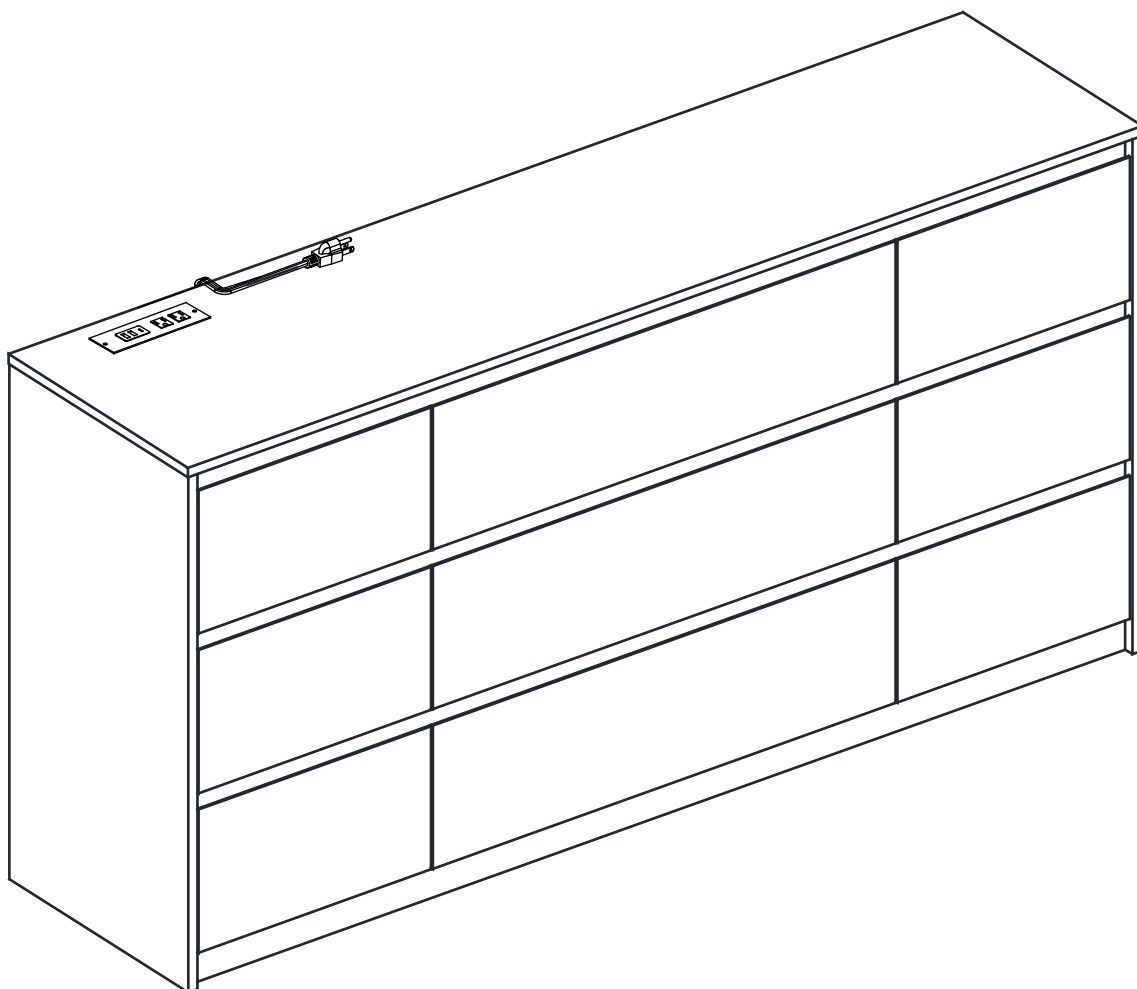
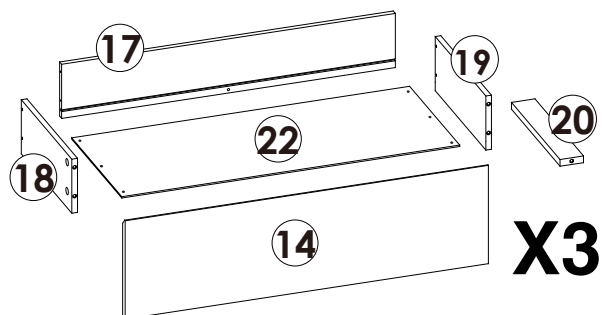
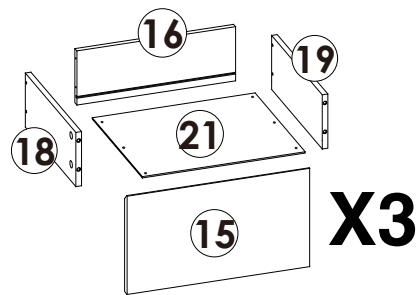
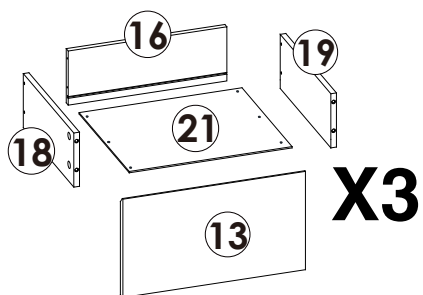
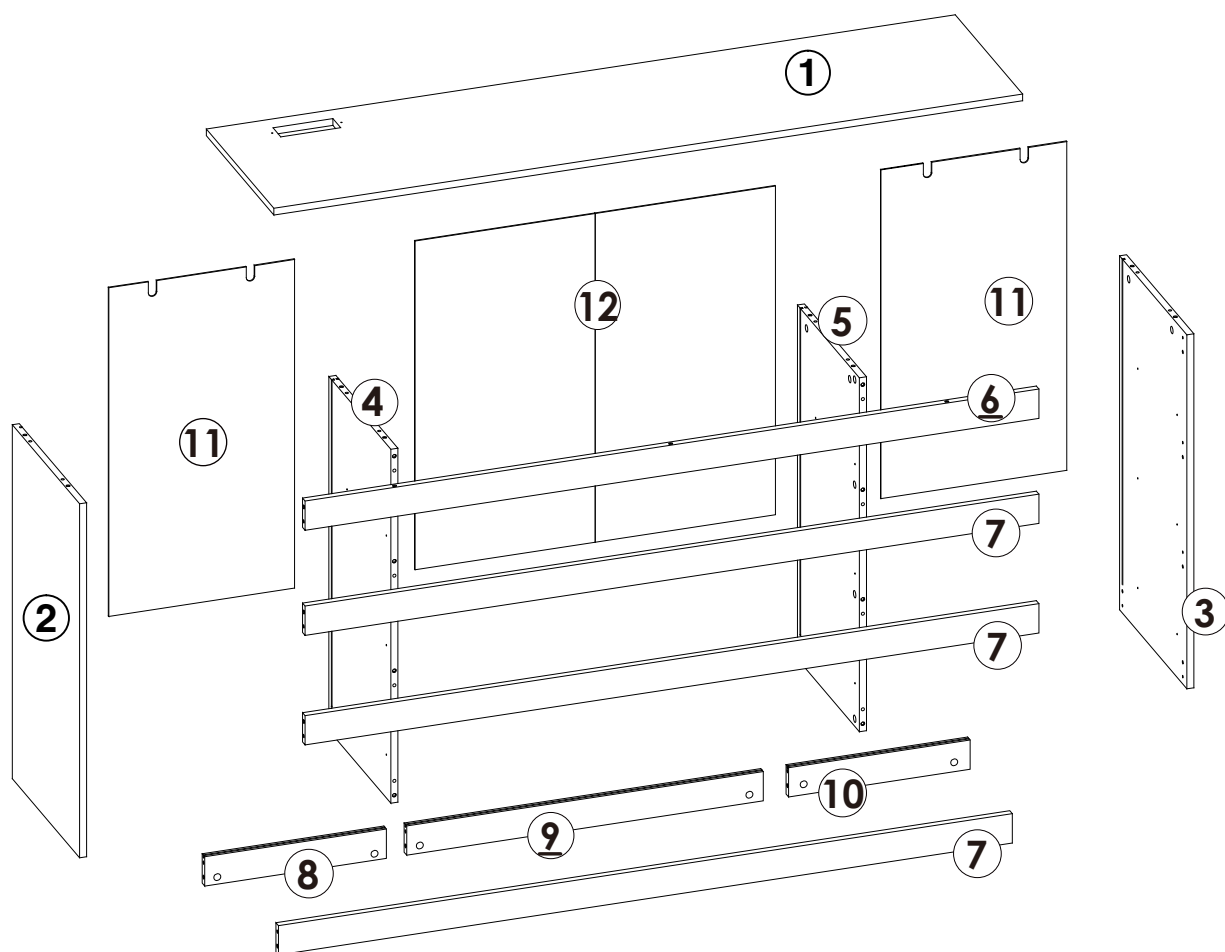
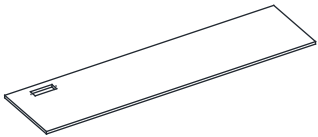
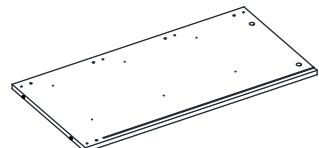
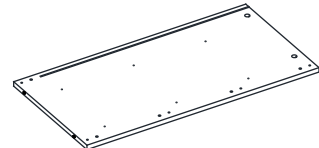
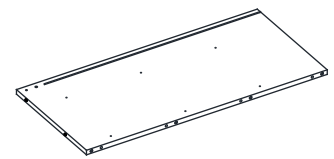
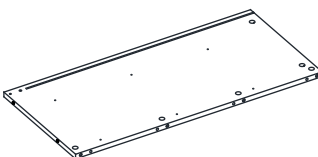
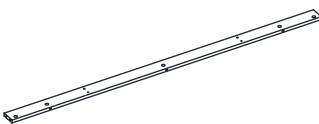
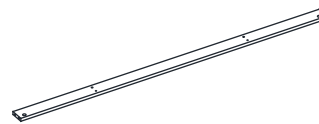
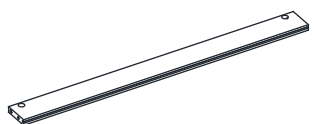

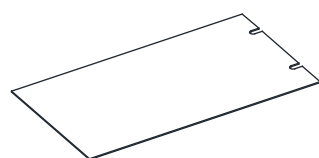
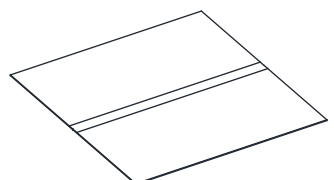

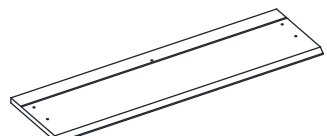
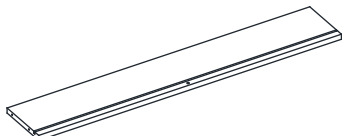
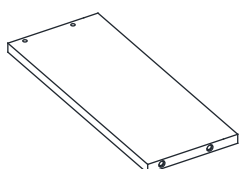











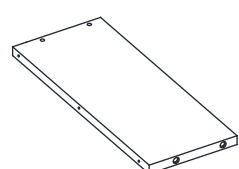





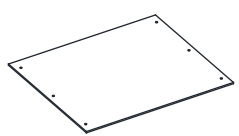


Parts and Operation Elements









			
① Top board 1pc	② Left side panel 1pcs	③ Right side panel 1pcs	④ Left partition 1pc
			
⑤ Right partition 1pcs	⑥ Top support bar 1pc	⑦ Middle/bottom support bar 3pc	⑧ Left rear lower support rod 1pc
			
⑨ Middle rear lower support rod 1pc	⑩ Right rear lower support rod 1pc	⑪ Left/Right back board 2pcs	⑫ Middle back board 1pc
			
⑬ Left drawer panel 3pcs	⑭ Middle drawer panel 3pcs	⑮ Right drawer panel 3pcs	⑯ Left/right drawer rear panel 6pcs
			
⑰ Middle drawer rear panel 3pcs	⑱ Drawer left panel 9pcs	⑲ Drawer right panel 9pcs	⑳ Drawer bottom support rod 3pcs
			
㉑ Left/right drawer base plate 6pcs	㉒ Middle drawer bottom plate 3pcs		

Hardware

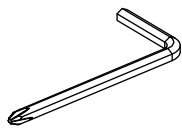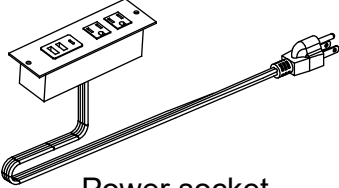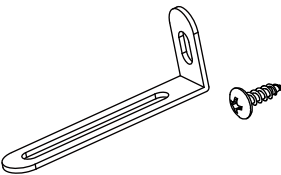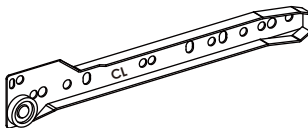
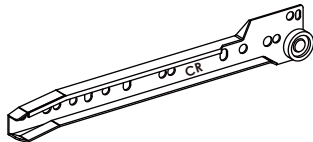
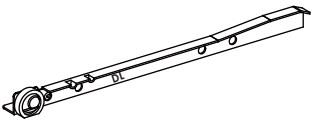
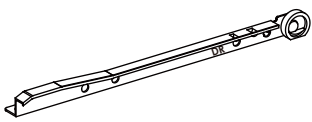
							
Cam bolt		Cam Lock		Wood dowel		Dual-purpose screwdriver	
A	72+2pcs	B	72+2pcs	C	30+2pcs	D	1pc
							
φ20mm Hole sticker		4x30mm screw		3.5x12mm screw		3*14mm screw	
E	72+2pcs	F	39+2pcs	G	108+2pcs	H	12+2pcs
							
Backboard buckle		3.5x14mm Black screw		Power socket			
J	12+2pcs	K	2pcs	L	1pc		
 							
4x14mm screw 5x40mm screw				350mm		350mm	
M	2set	CL	9pcs	CR	9pcs		
				 SPARE BAG THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING.			
350mm		350mm					
DL	9pcs	DR	9pcs				

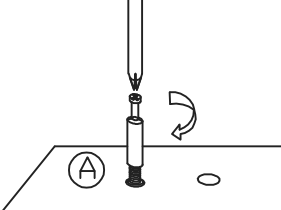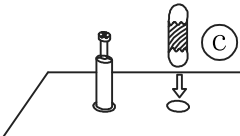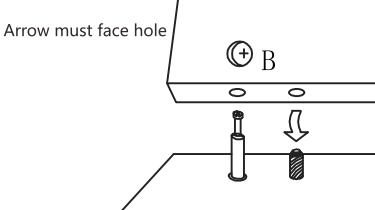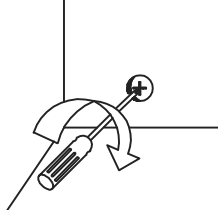			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.







1

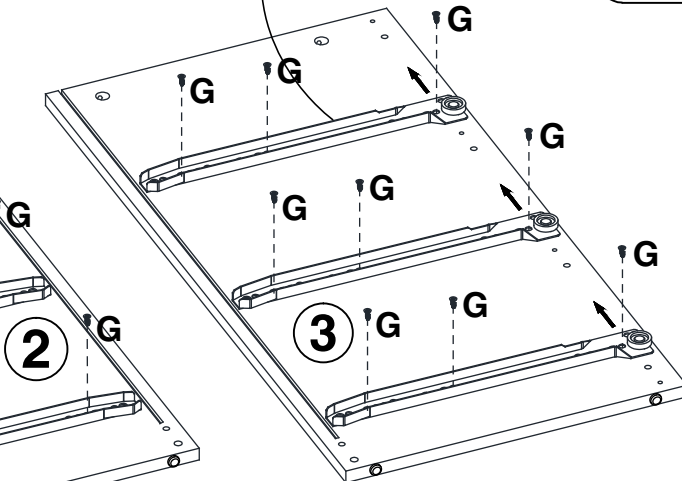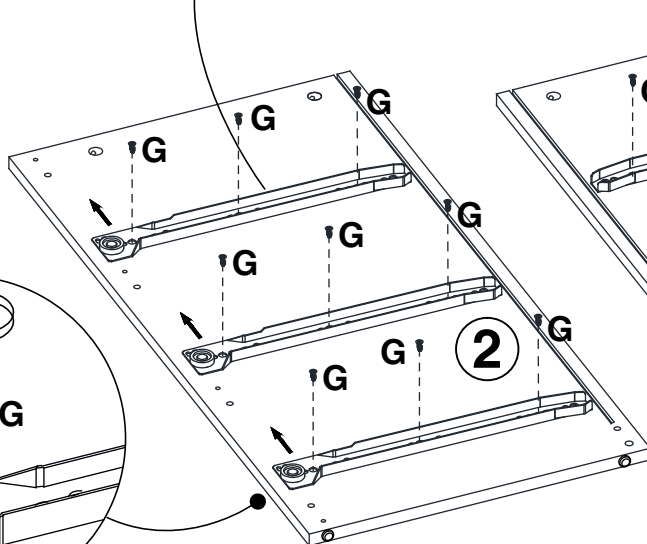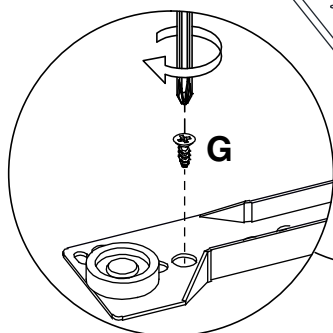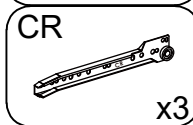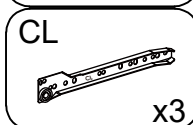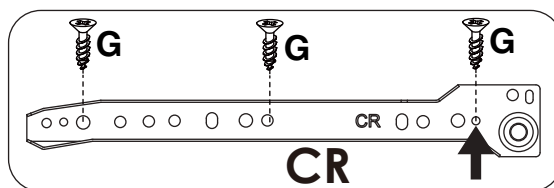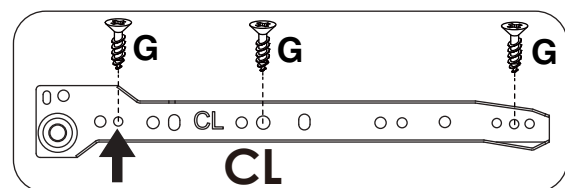



2

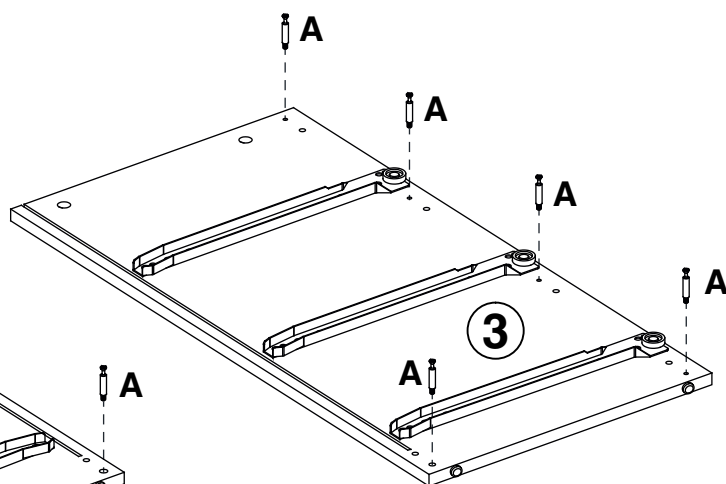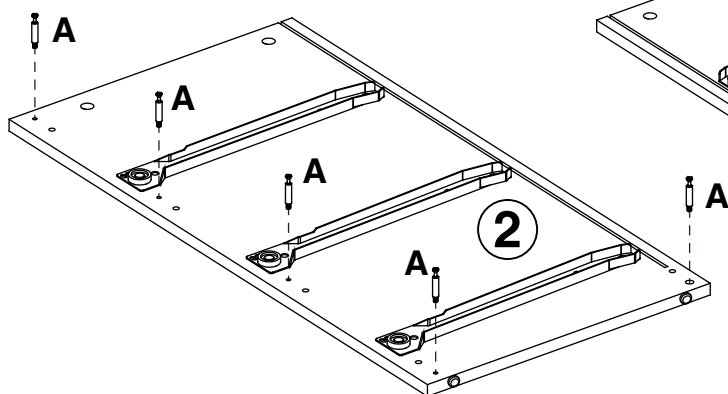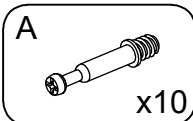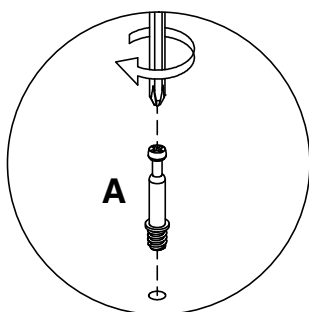







3

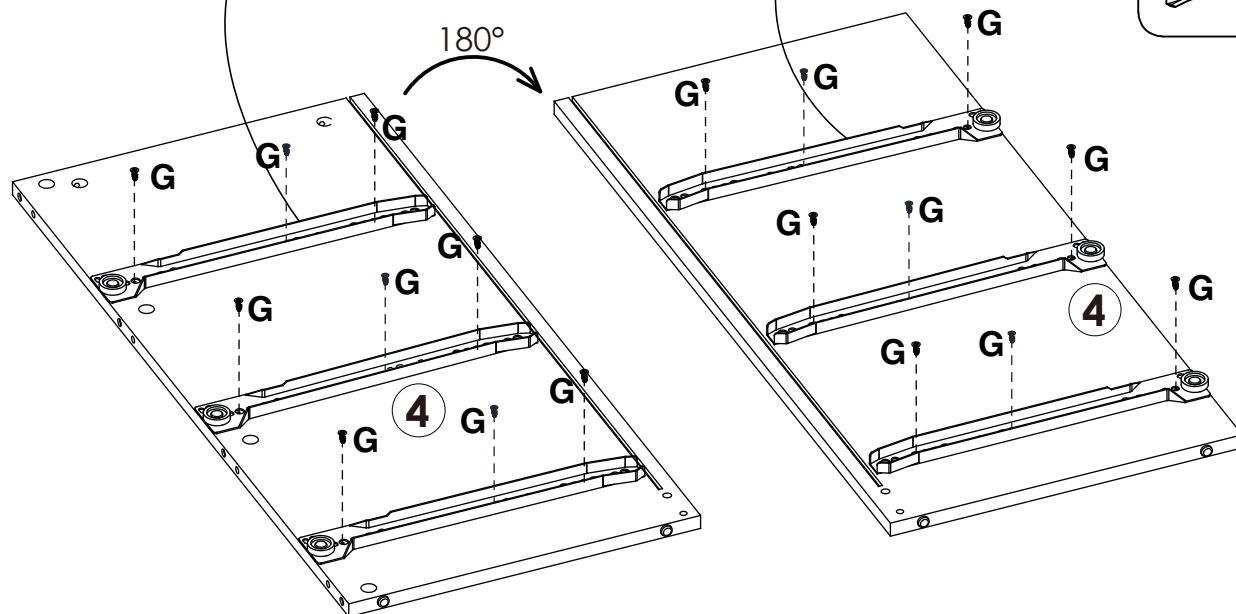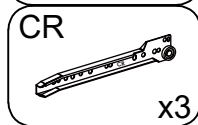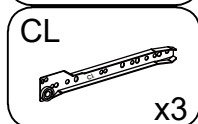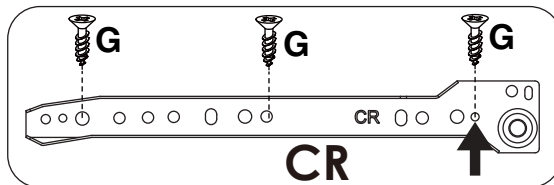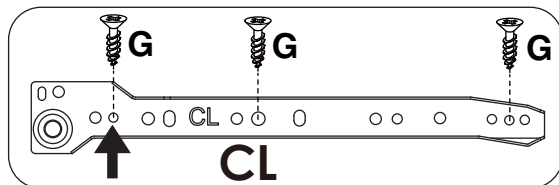



4

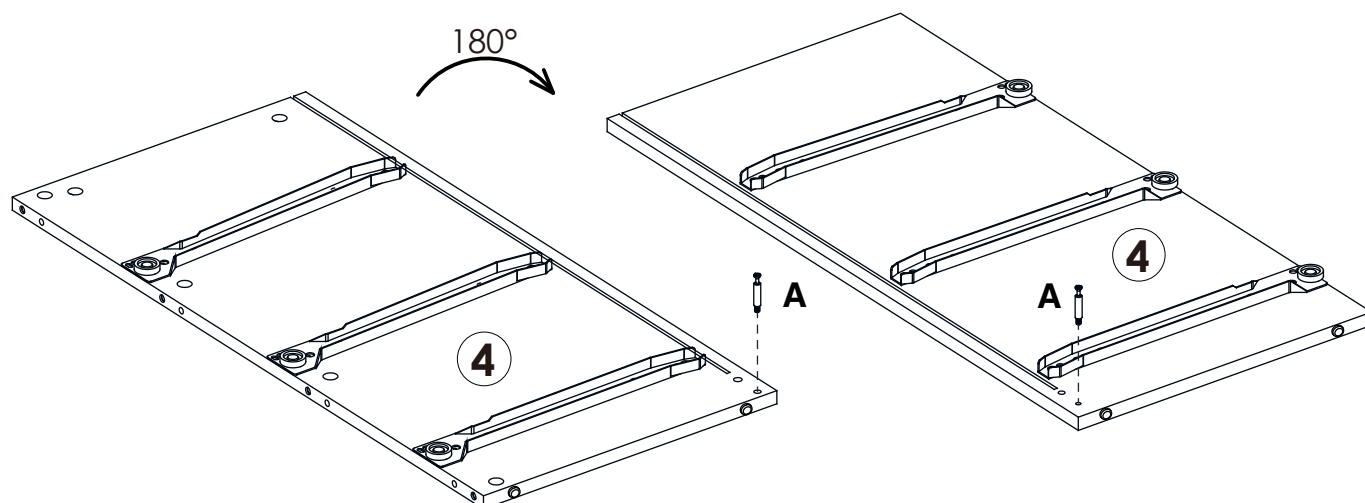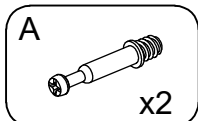






5

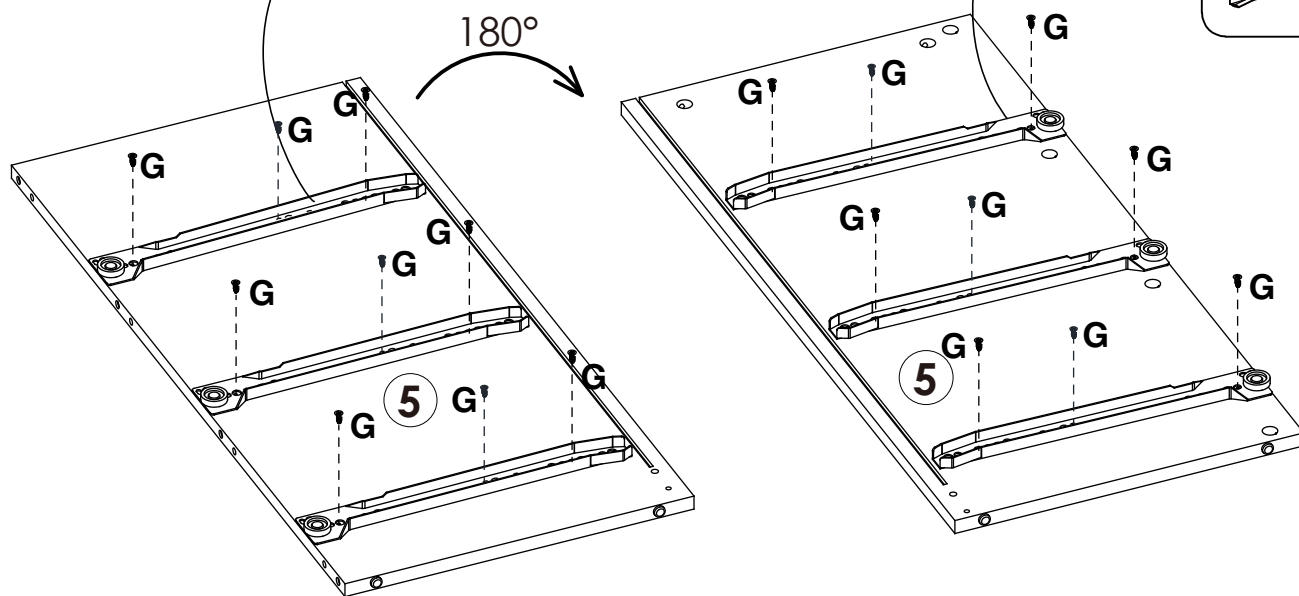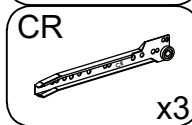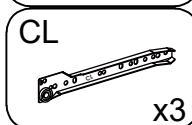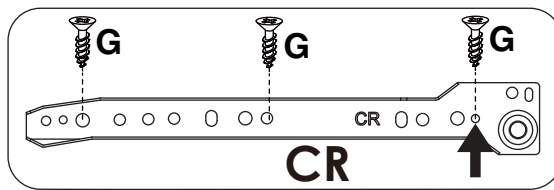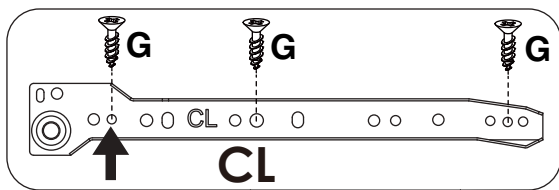



6

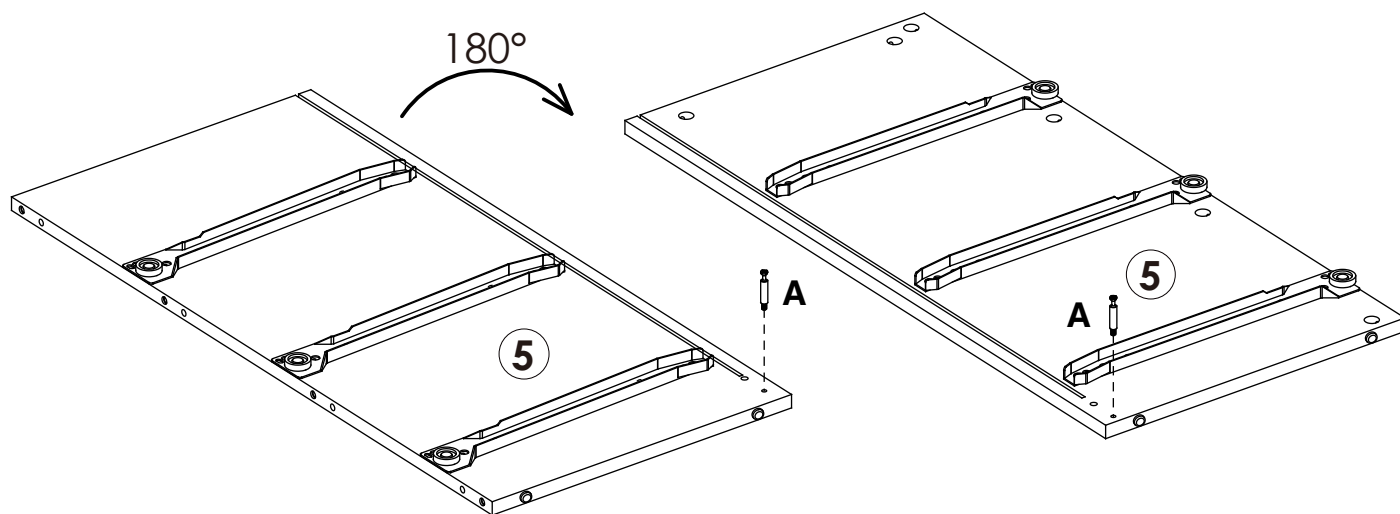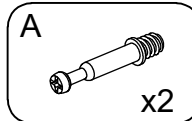



7

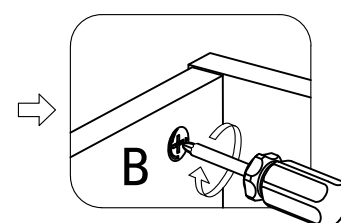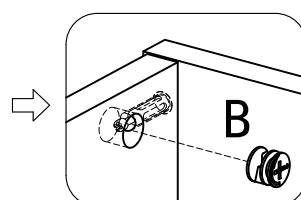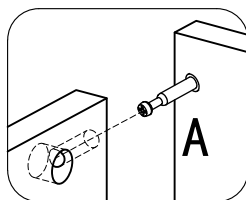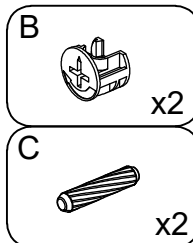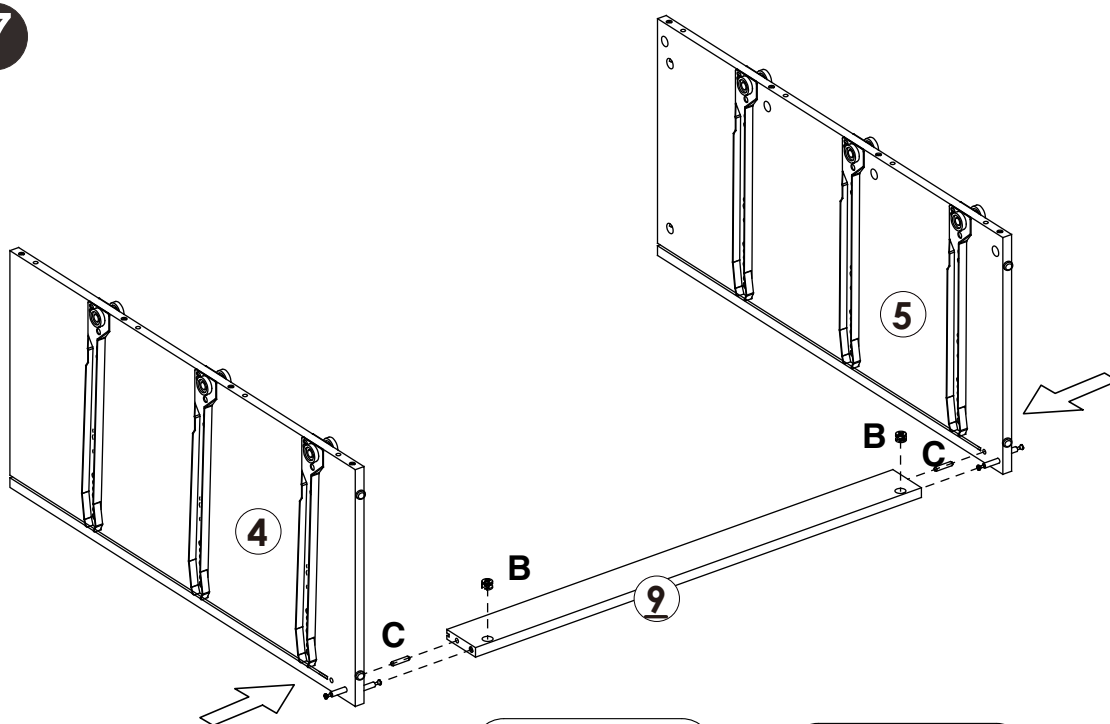




8

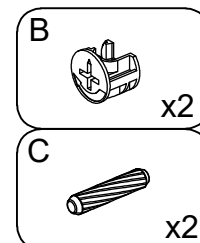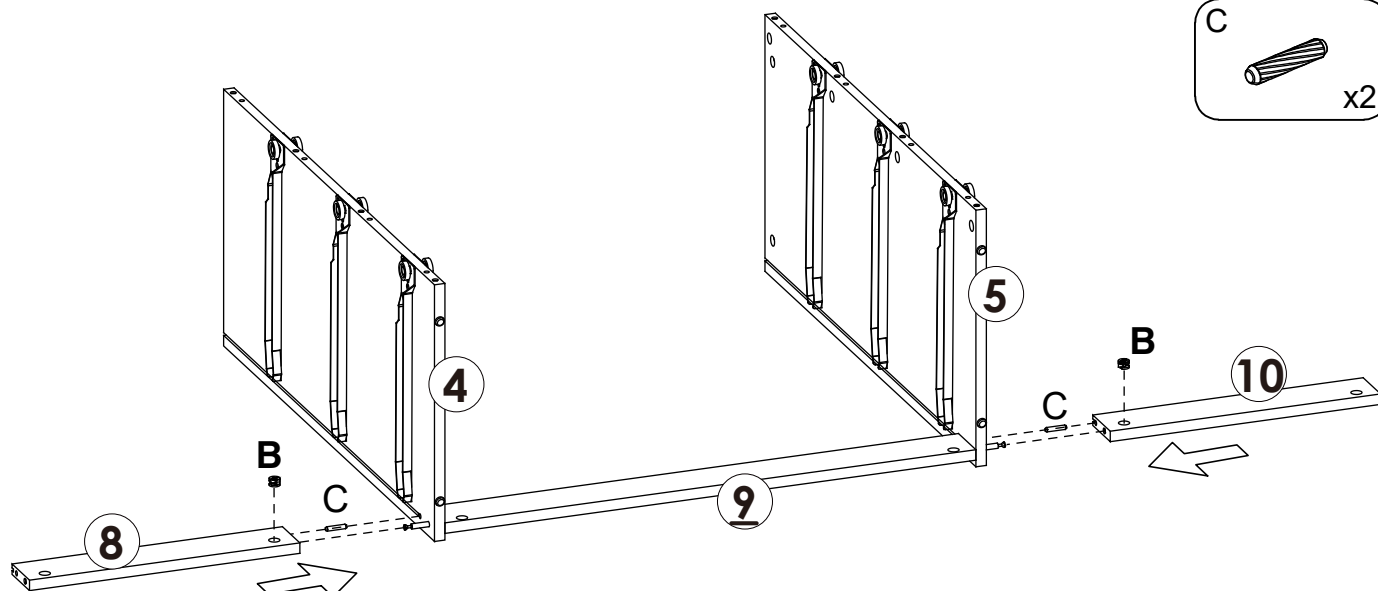



9

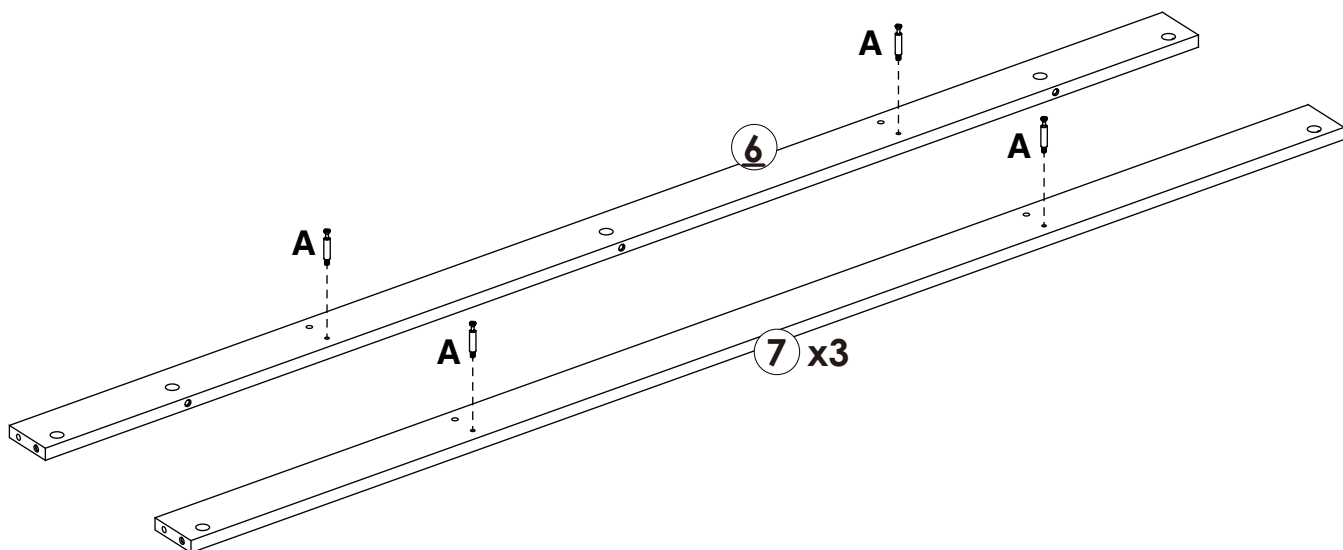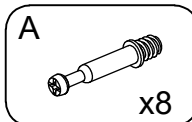


10

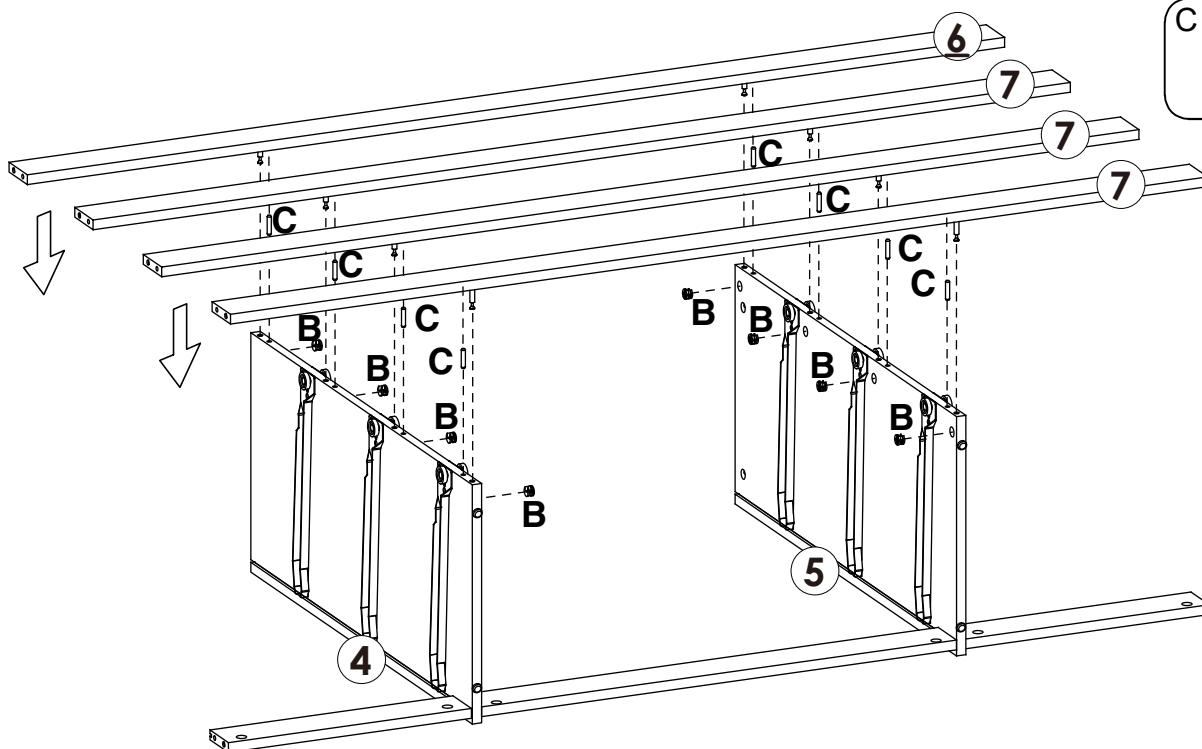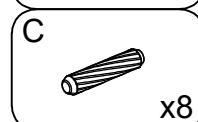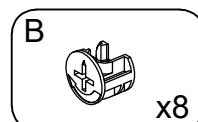





11

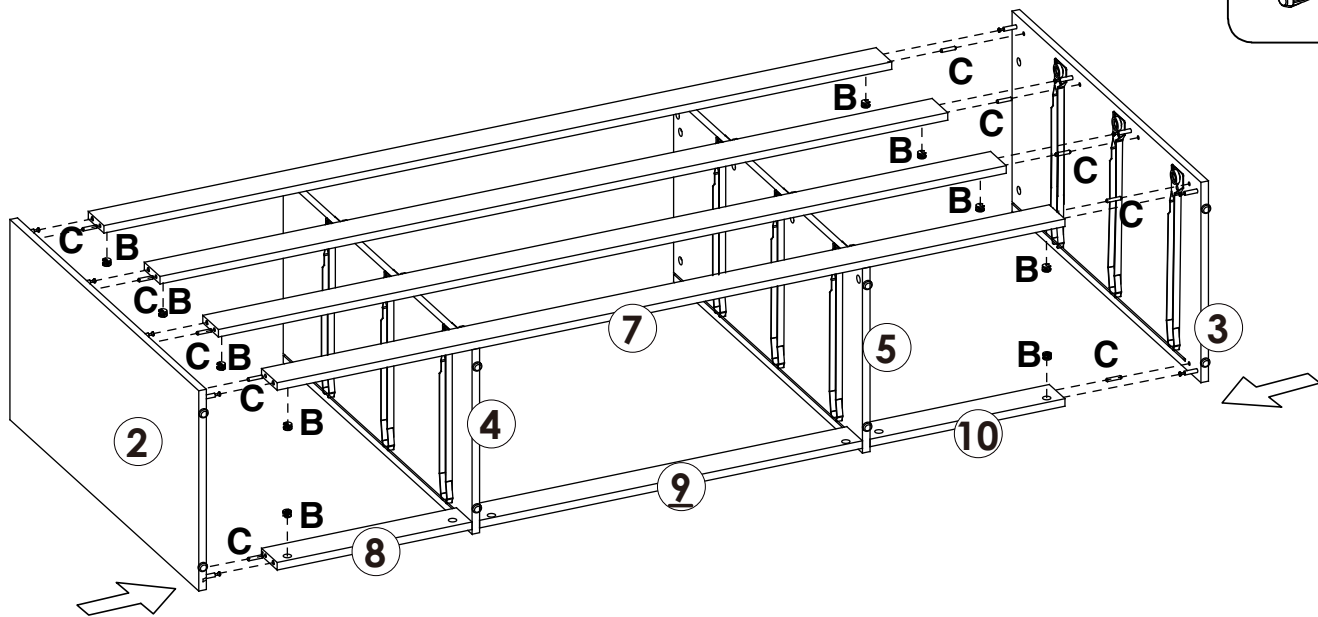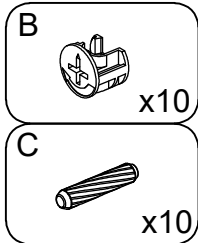




12

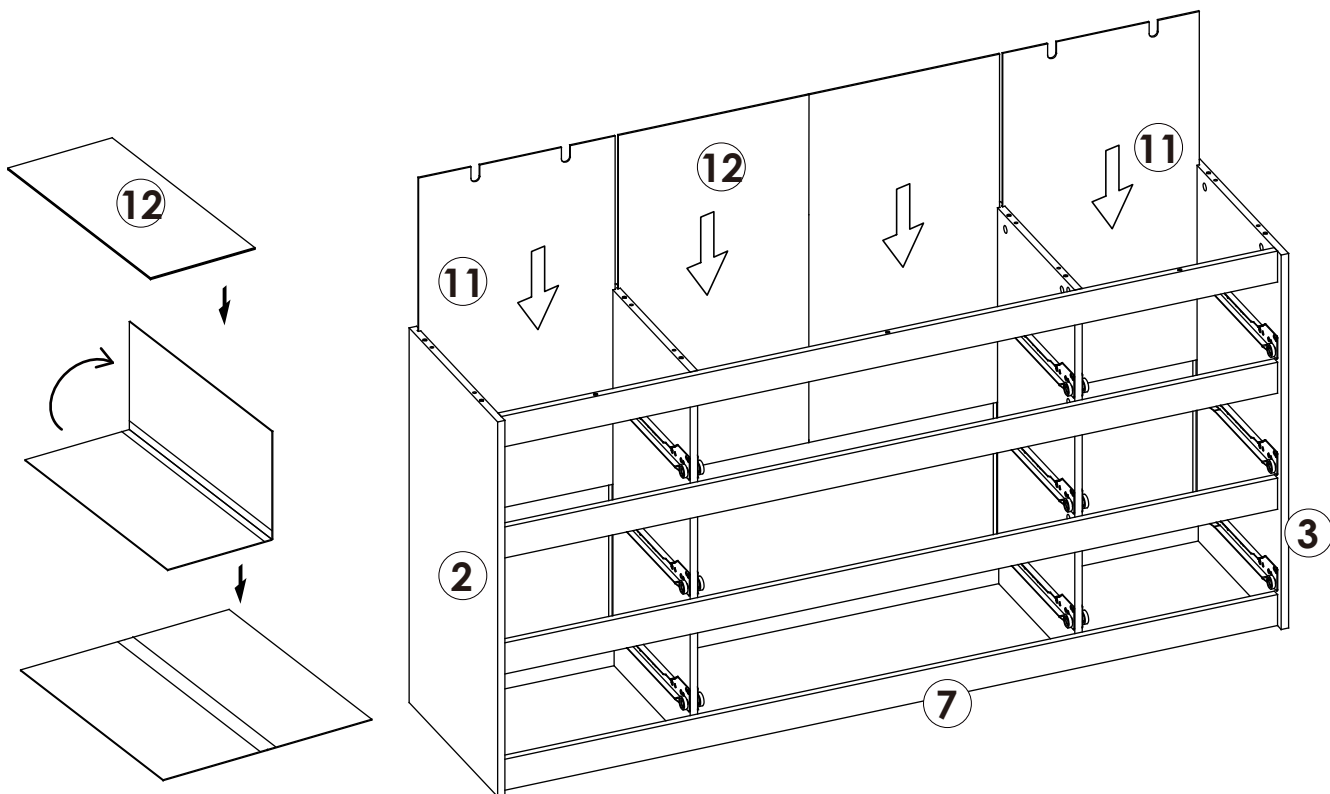



13

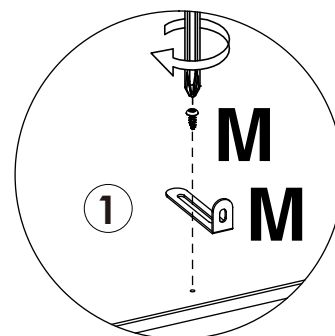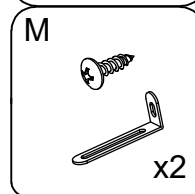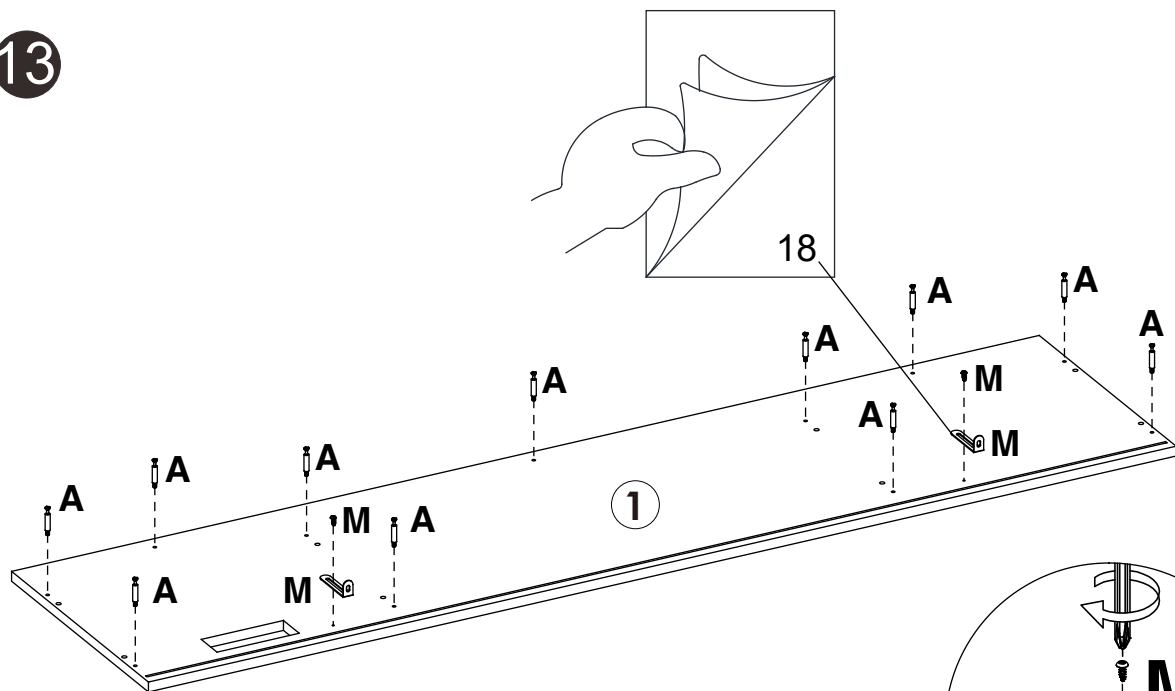



14

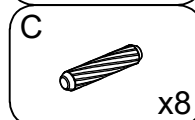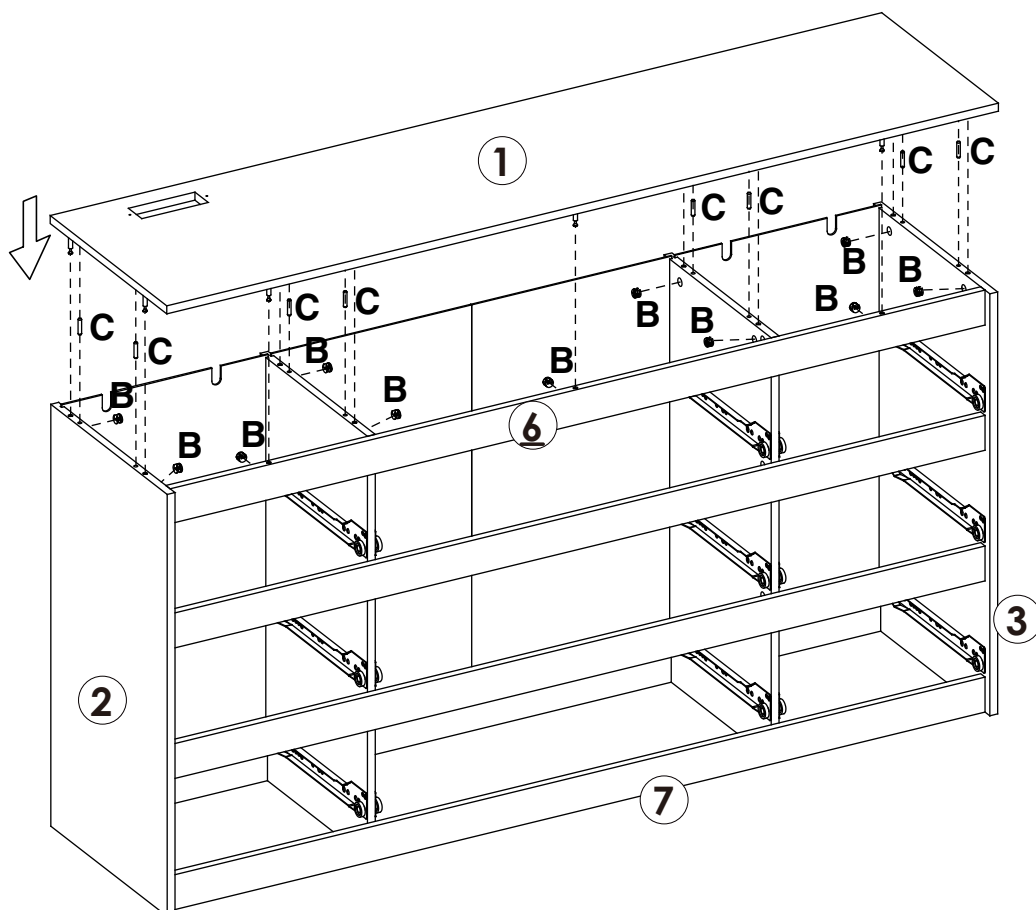

15

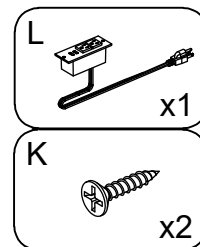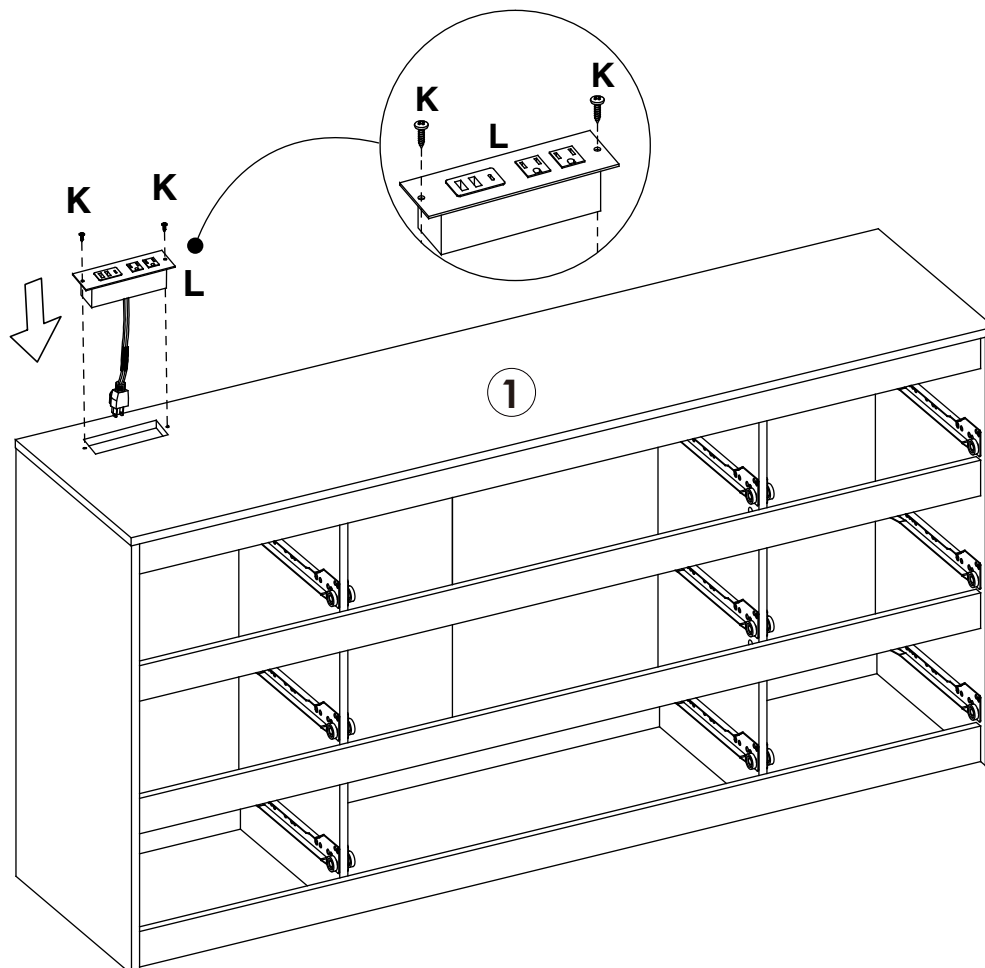


16

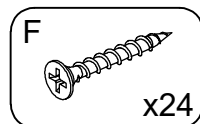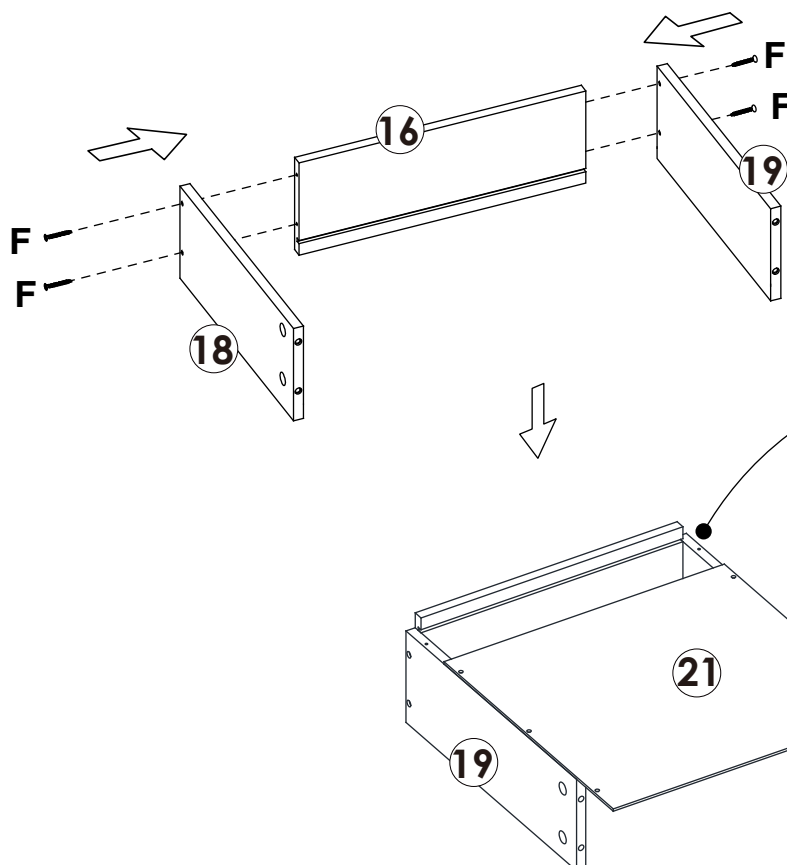


X6

17


A



x24

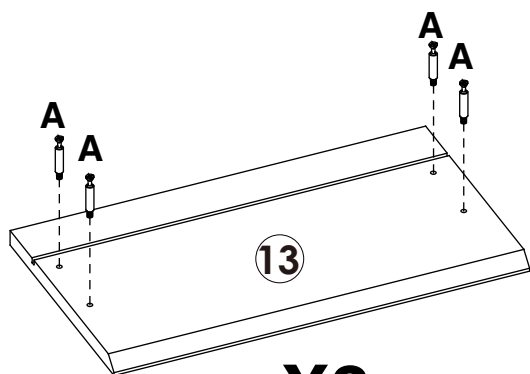

X3

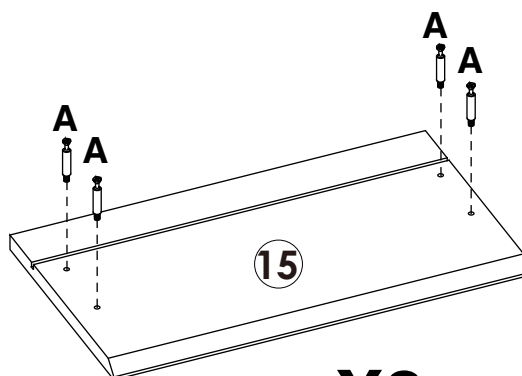


X3

18


B



x24




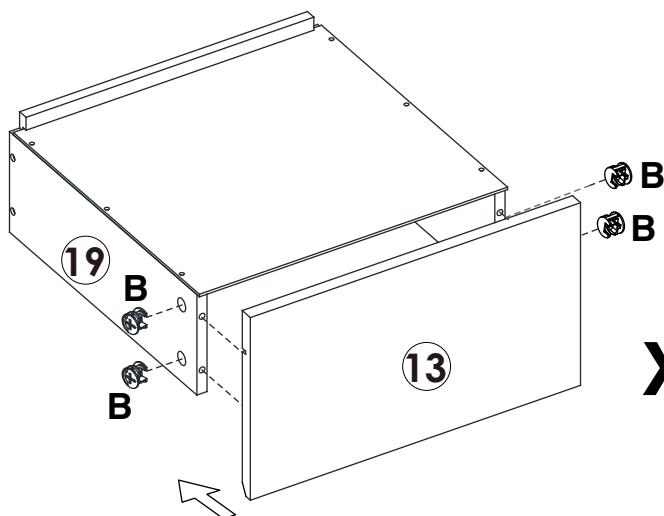


X3


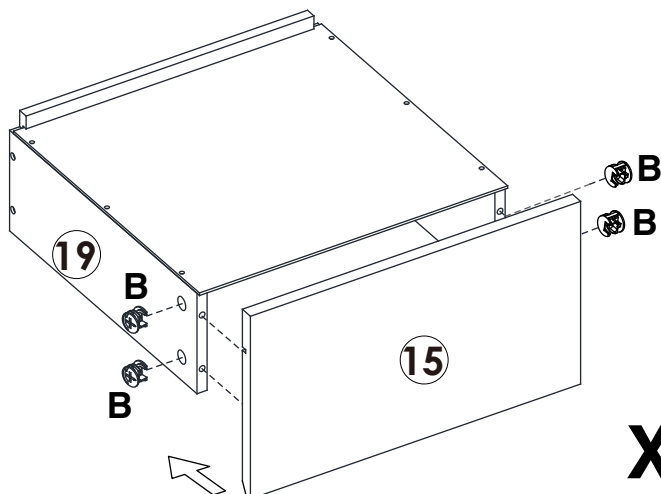


X3




19

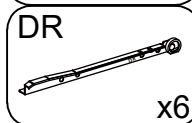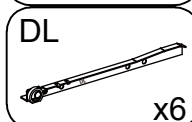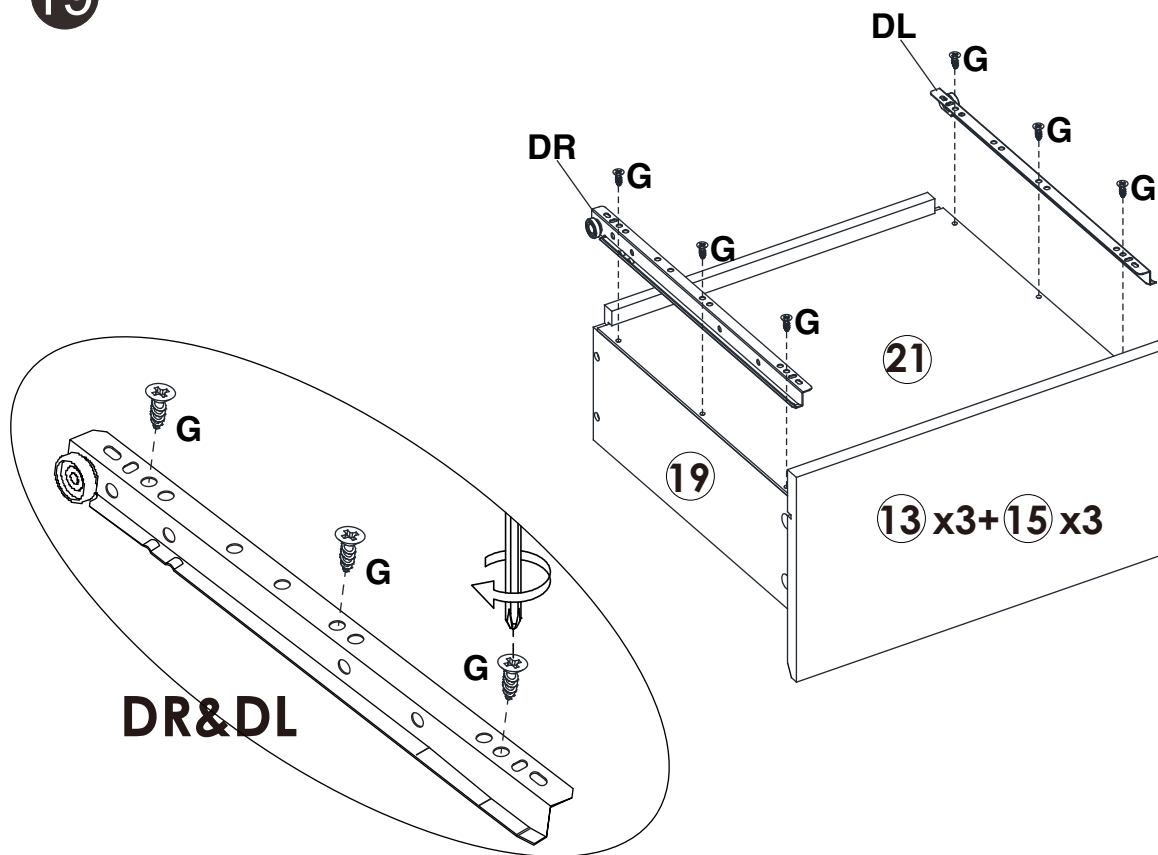

20



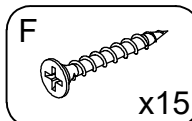
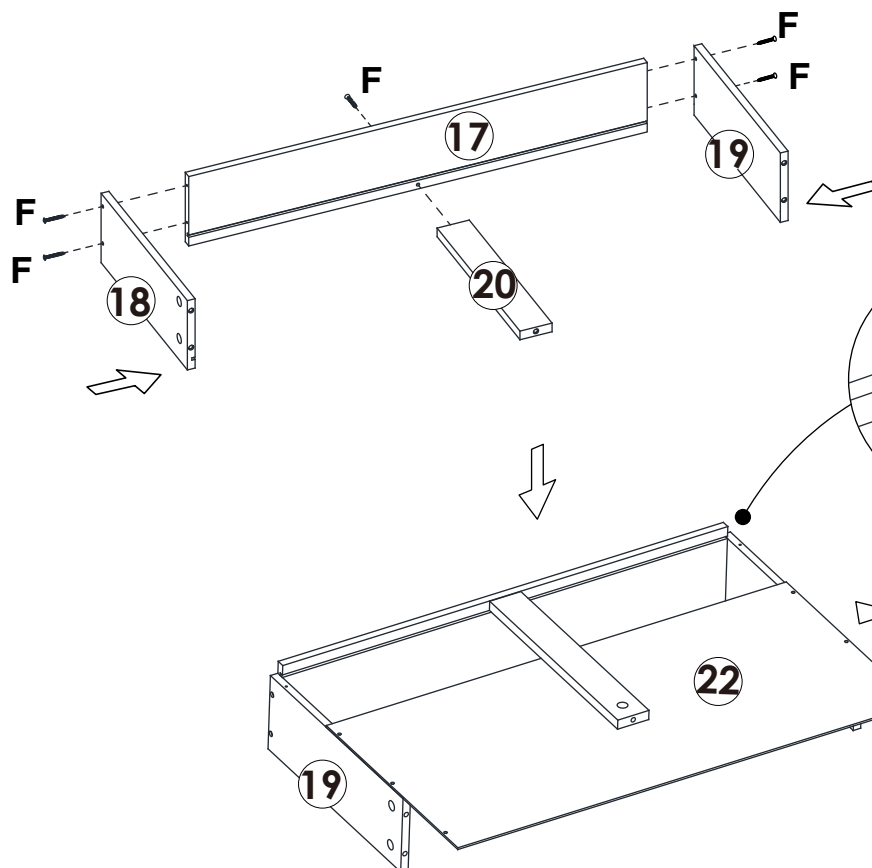


21

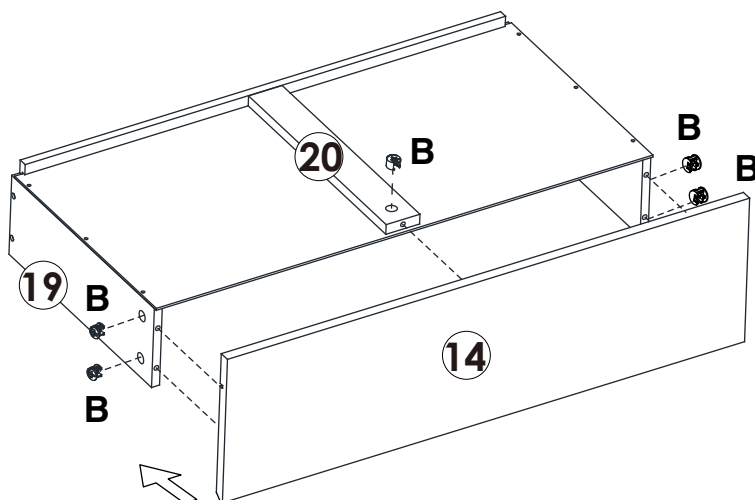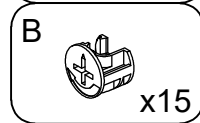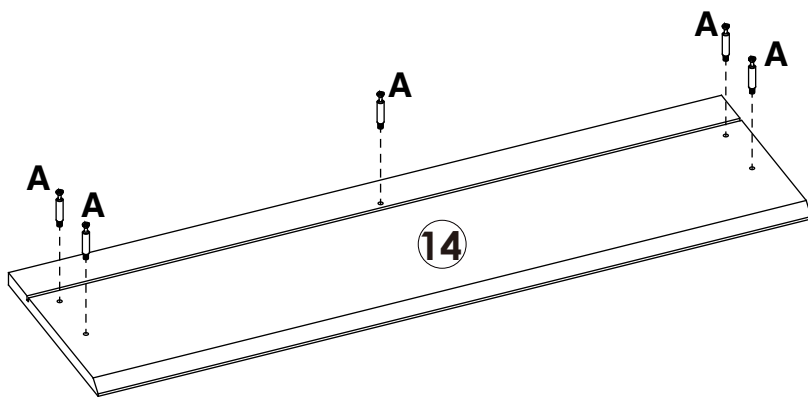


X3

22

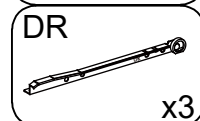

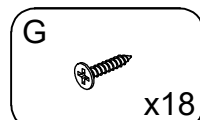
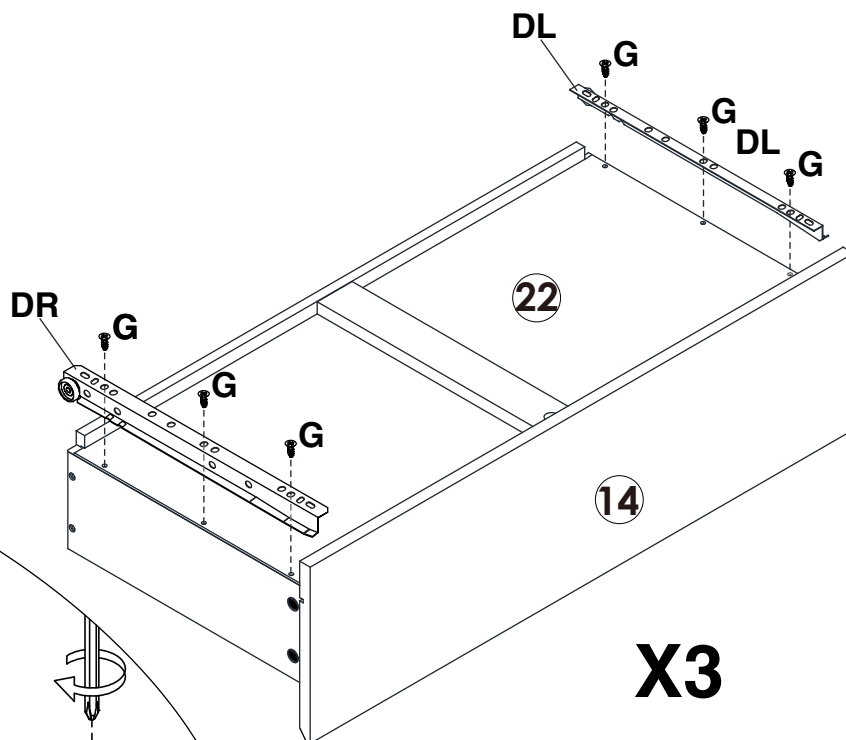


X3



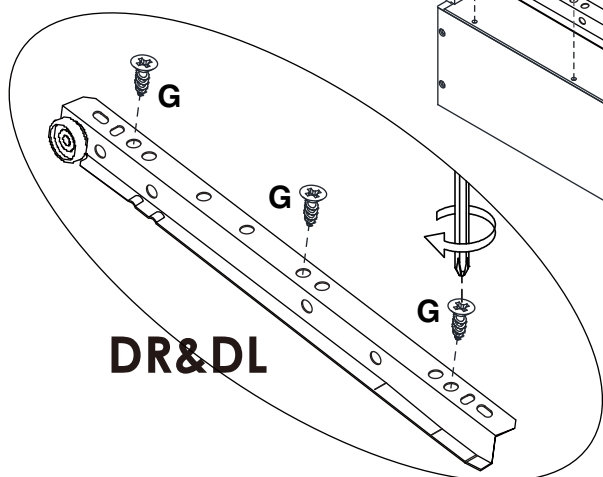


DR&DL






23

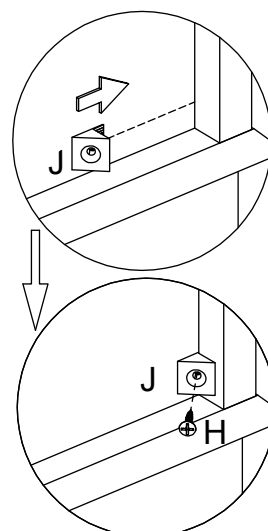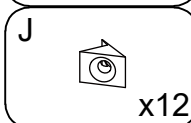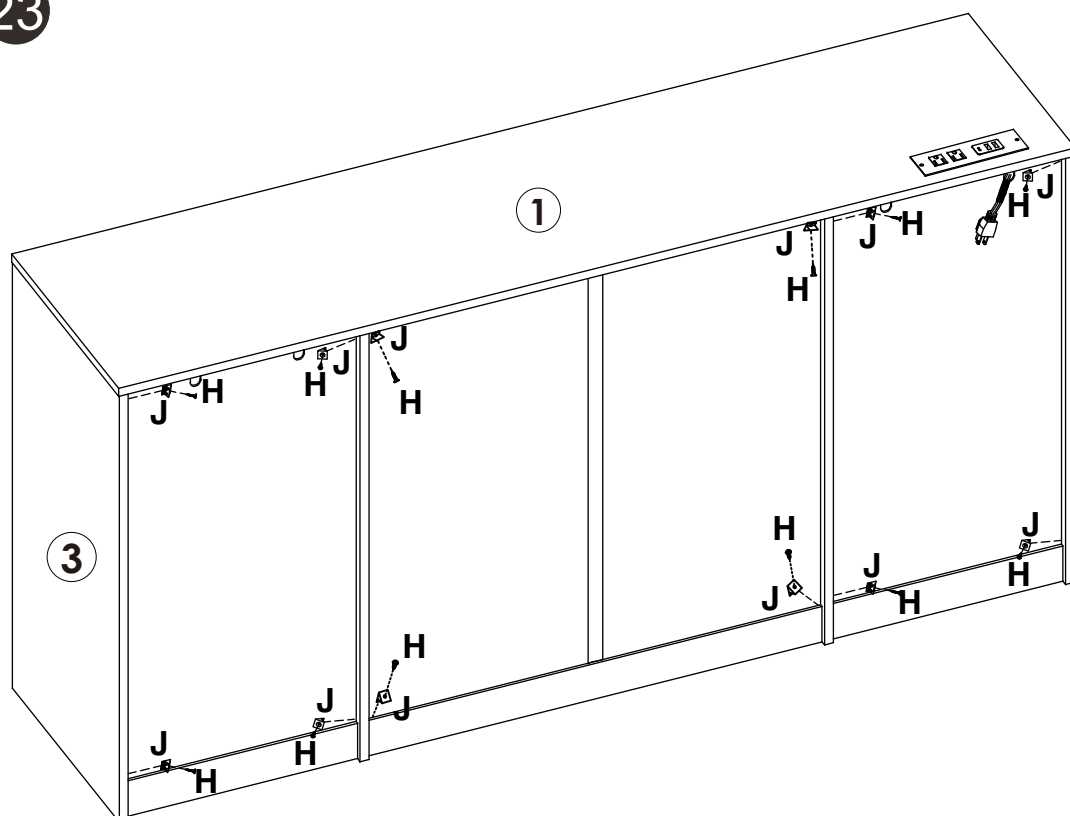



24

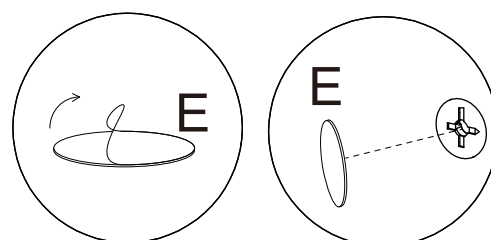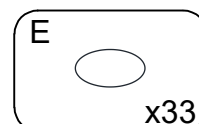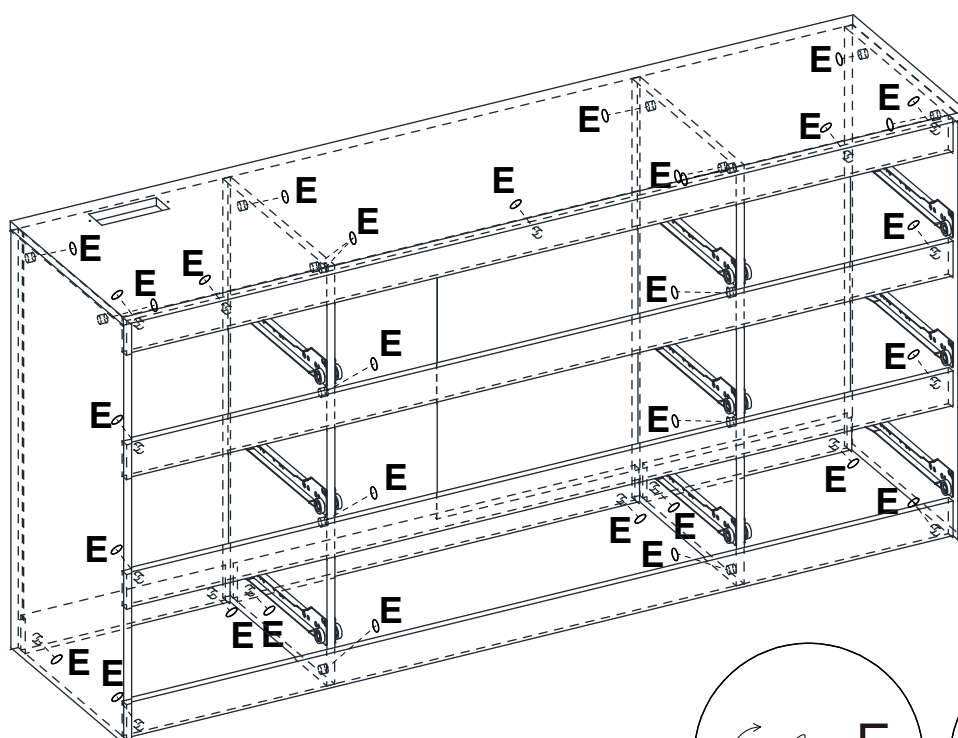

25

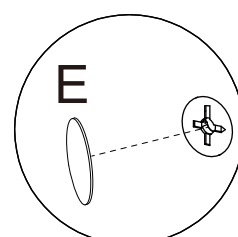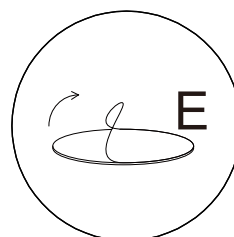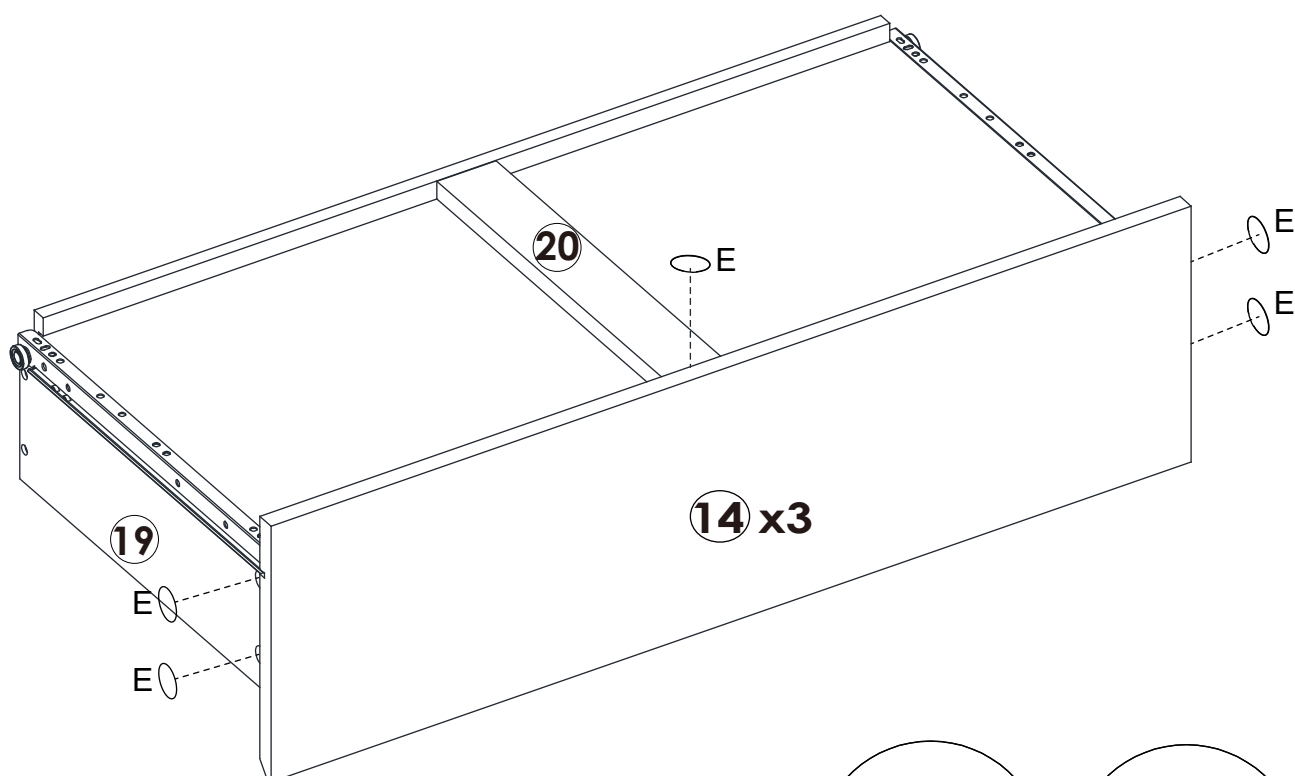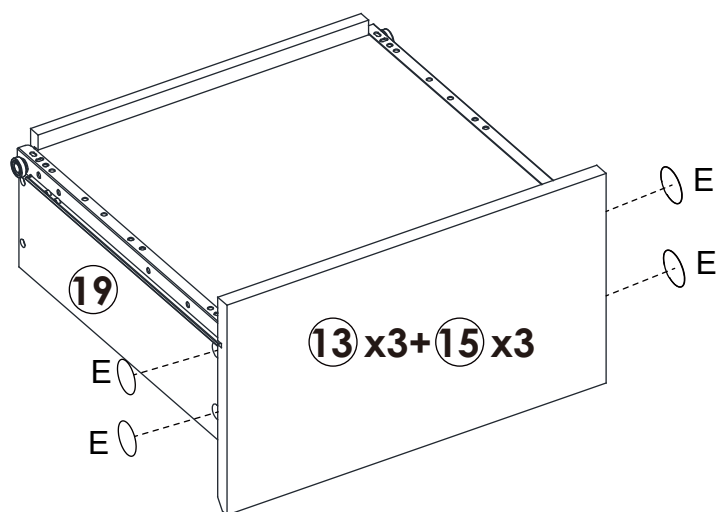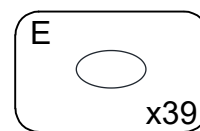


26

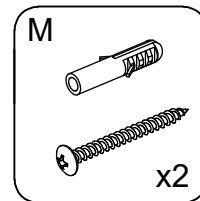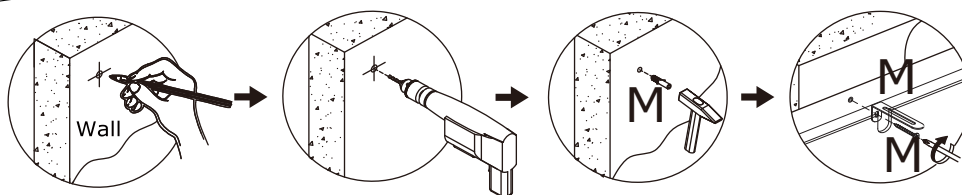

A solid wall	B cavity wall	C solid wood
Ø 8mm (5/16")	Ø 8mm (5/16")	Ø 3mm (Ø 1/8")

! Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

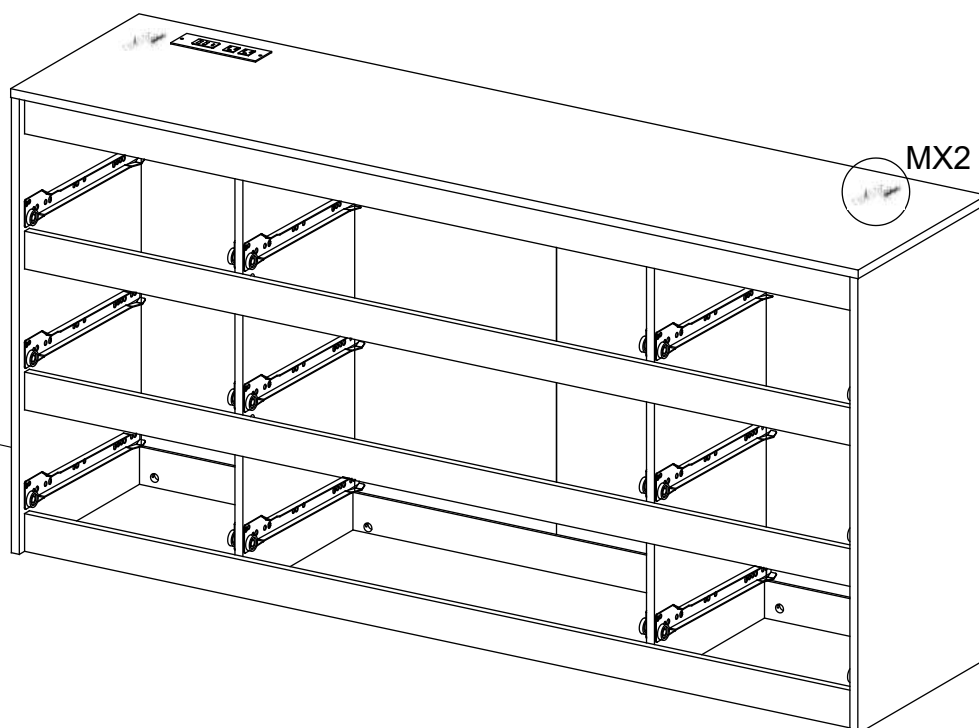

27

