



ASSEMBLY INSTRUCTION


*The socket can be installed on the left or right , and the height can also be adjusted.
Before installation, please choose the installation method A/B or C/D according to your needs.*

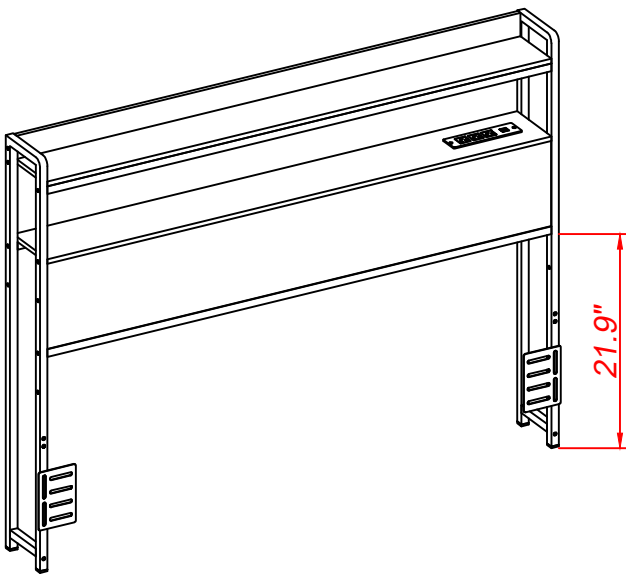


Option A

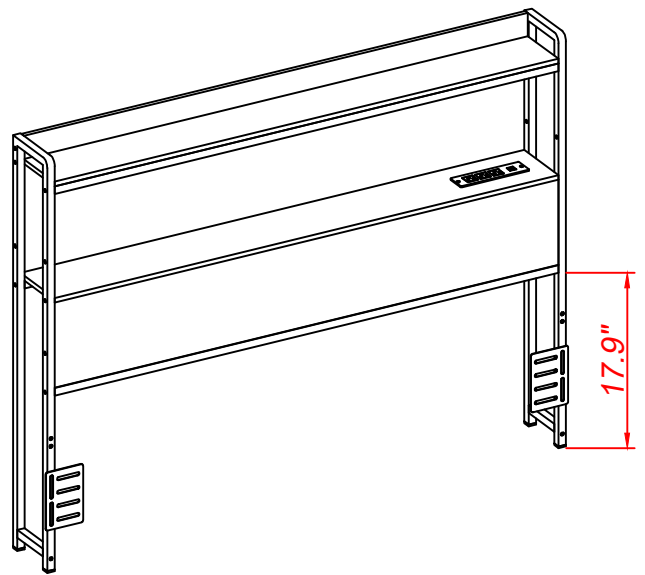

Option B

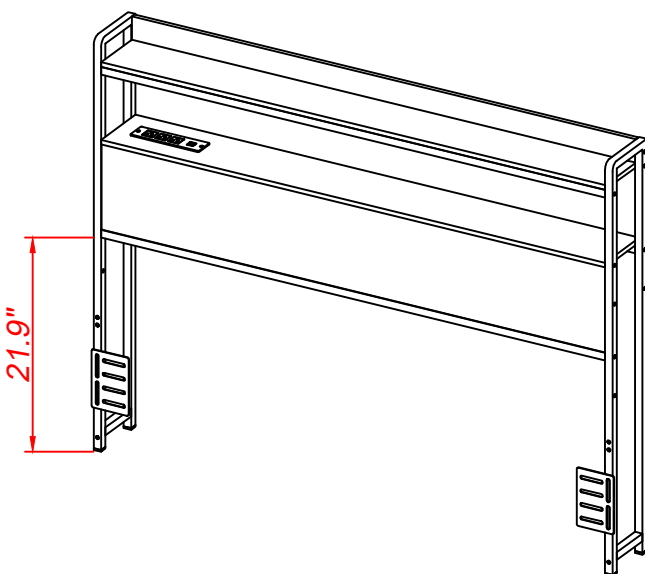

Option C

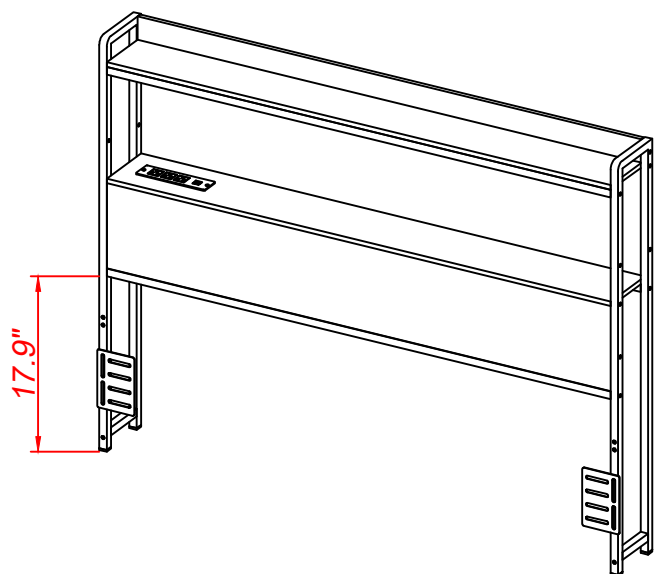

Option D

(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)

✉ **toptohome@hotmail.com**

Thank you for purchasing our products.


As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.






If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time, We will provide you with a 100% satisfactory solution.

Thanks again for your order. And please feel free to contact us from Amazon or **toptohome@hotmail.com** in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.













TIPS:

1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install, which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

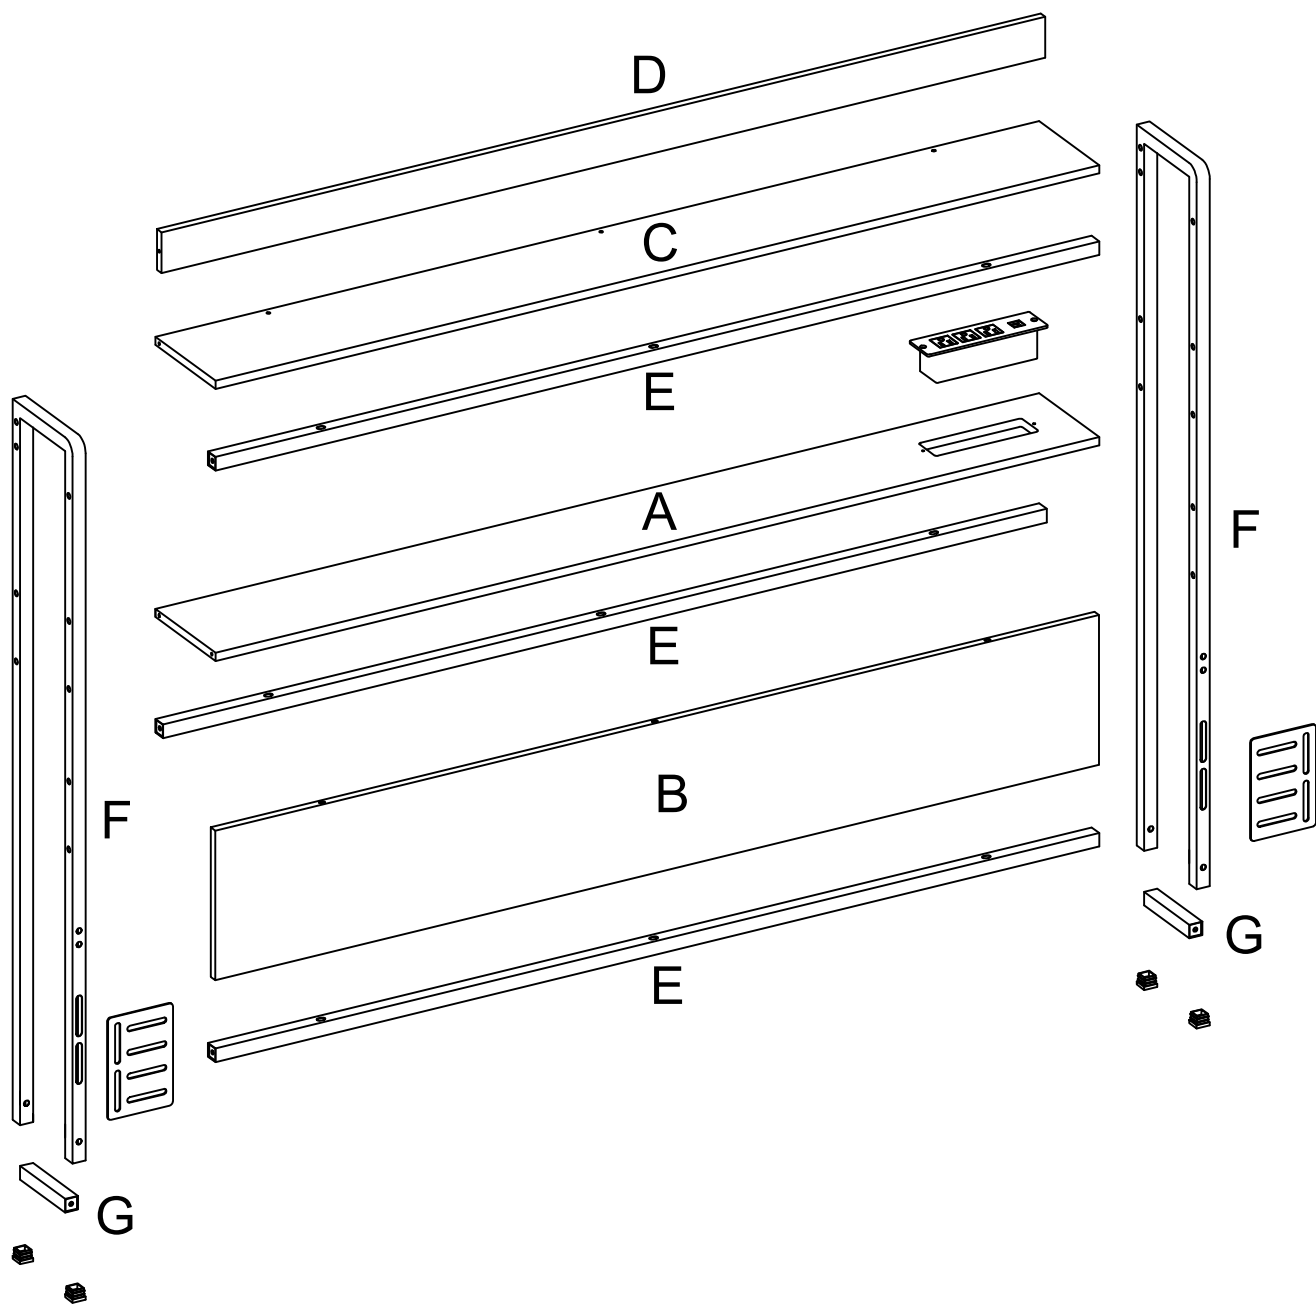

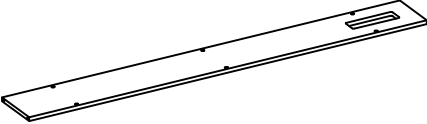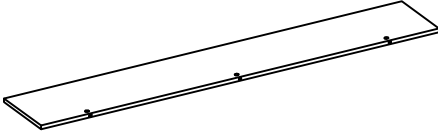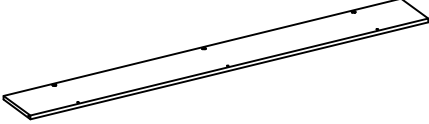
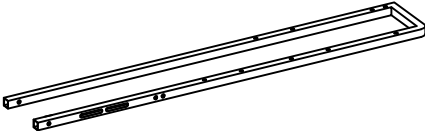
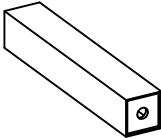
PART LIST		
A x 1pc 	B x 1pc 	C x 1pc 
D x 1pc 	E x 3pcs 	F x 2pcs 
G x 2pcs 		

HARDWARE LIST

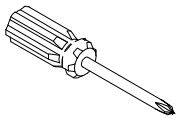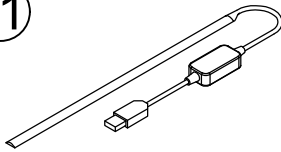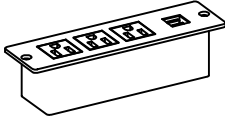①  M6x35 10 pcs	②  M6x27 6 pcs	③  M4x30 3 pcs	④  1 pc
⑤  M6x28 3 pcs	⑥  Ø12 3 pcs	⑦  M3x12 16 pcs	⑧  M5x45 9 pcs
⑨  20x20 4 pcs	⑩  M8 10 pcs	⑪  Twin: 85cm Full: 120cm 1 pc	⑫  3 pcs
⑬  8 pcs	⑭  1 pc	⑮  RF Remote Control 1 pc	⑯  M6x30 4 pcs
⑰  M6x55 4 pcs	⑱  M6x16x1.0 16 pcs	⑲  8 pcs	
⑳  2 pcs	㉑  10mm 1 pc	㉒  M4 1 pc	




Option A/B

STEP 1

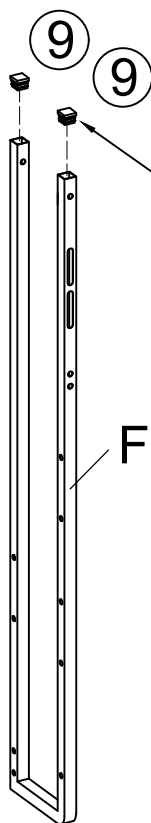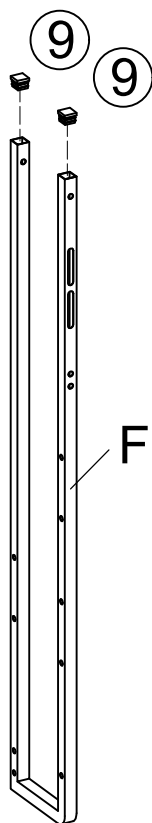


Please use a hammer or solid tools (not included) to knock the footpads into the frame.

STEP 2

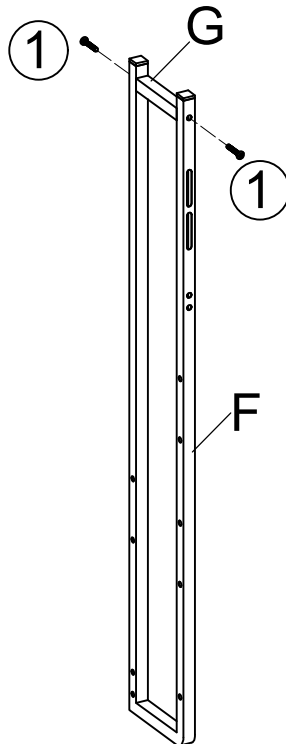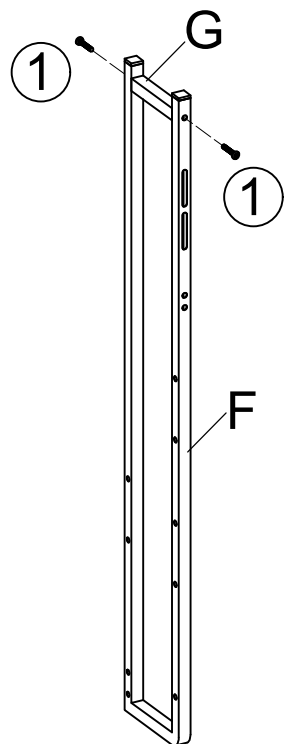


STEP 3

③  x3

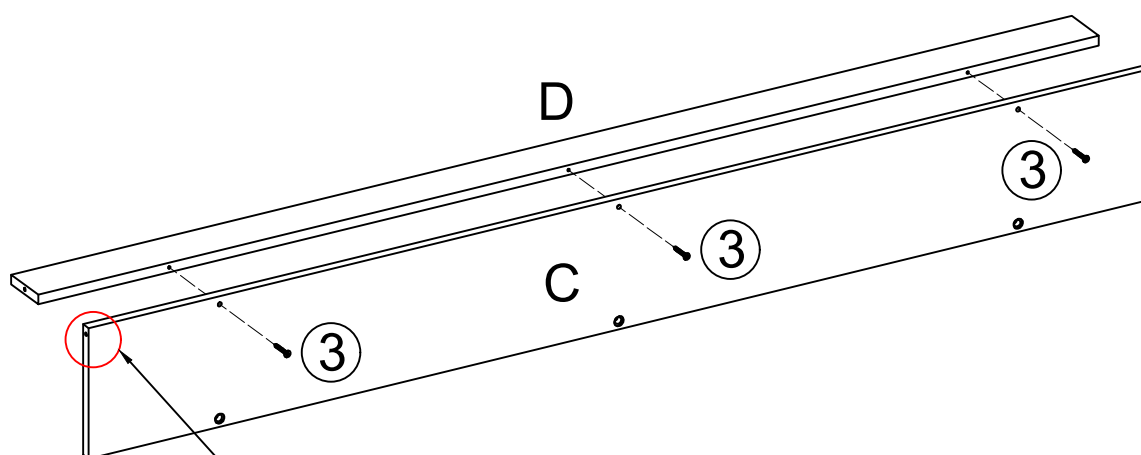


*Keep the holes of the
Part C toward this direction
as shown*




STEP 4



Note that the direction of part A as shown. The socket is on the right of the headboard.

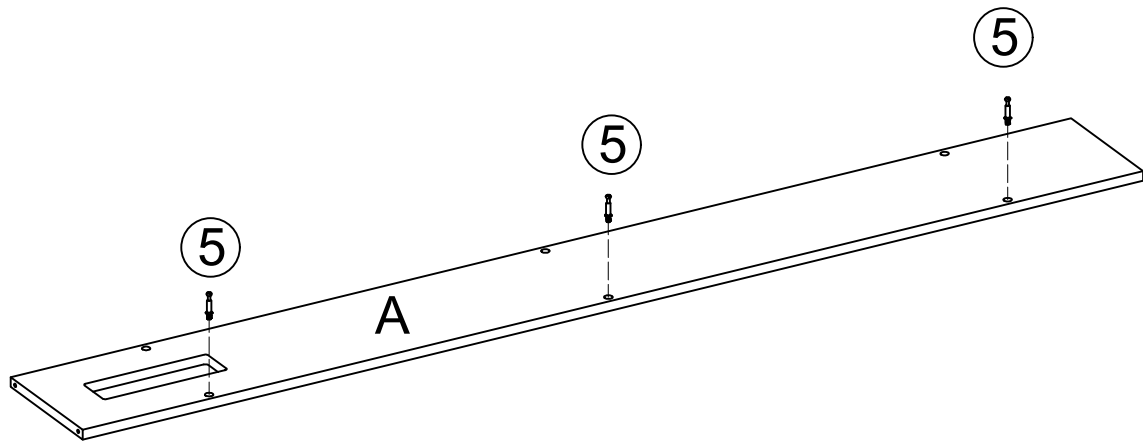



STEP 5

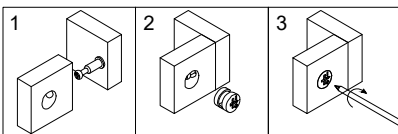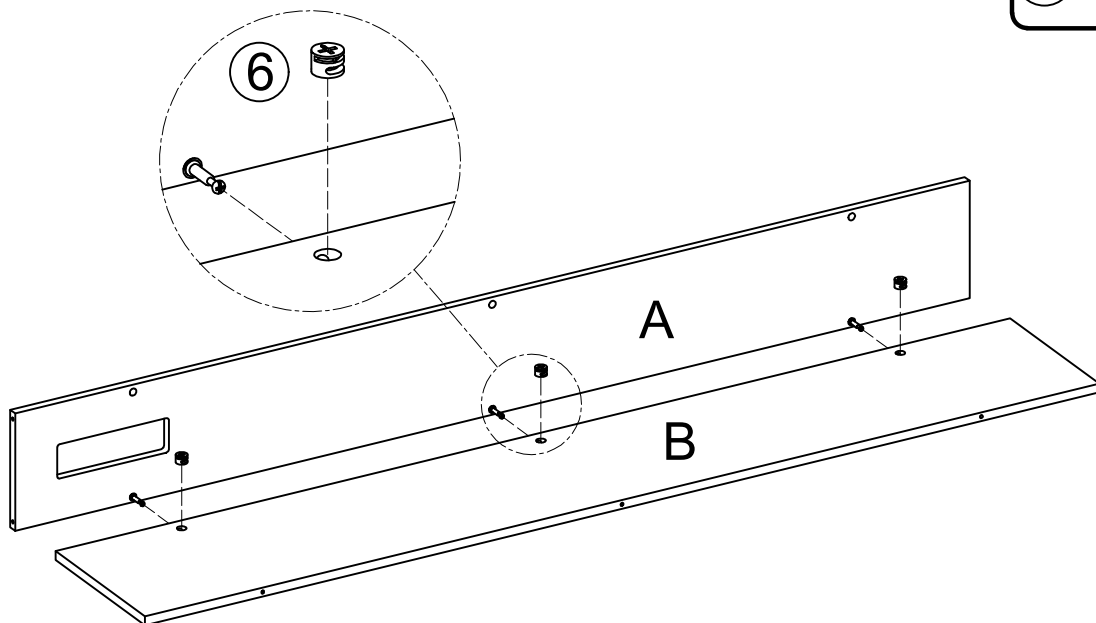



Please point the arrow upward to the mounting hole when installing Part ⑥, then use screwdriver to tighten it in the "+" direction.

Cam Lock Fastening System


STEP 6

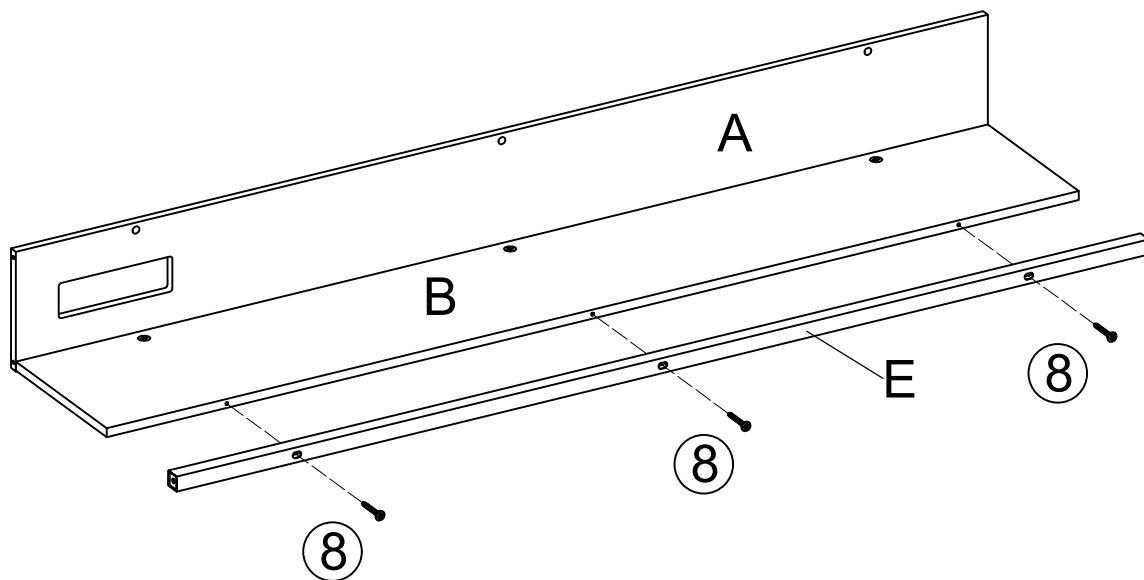

STEP 7

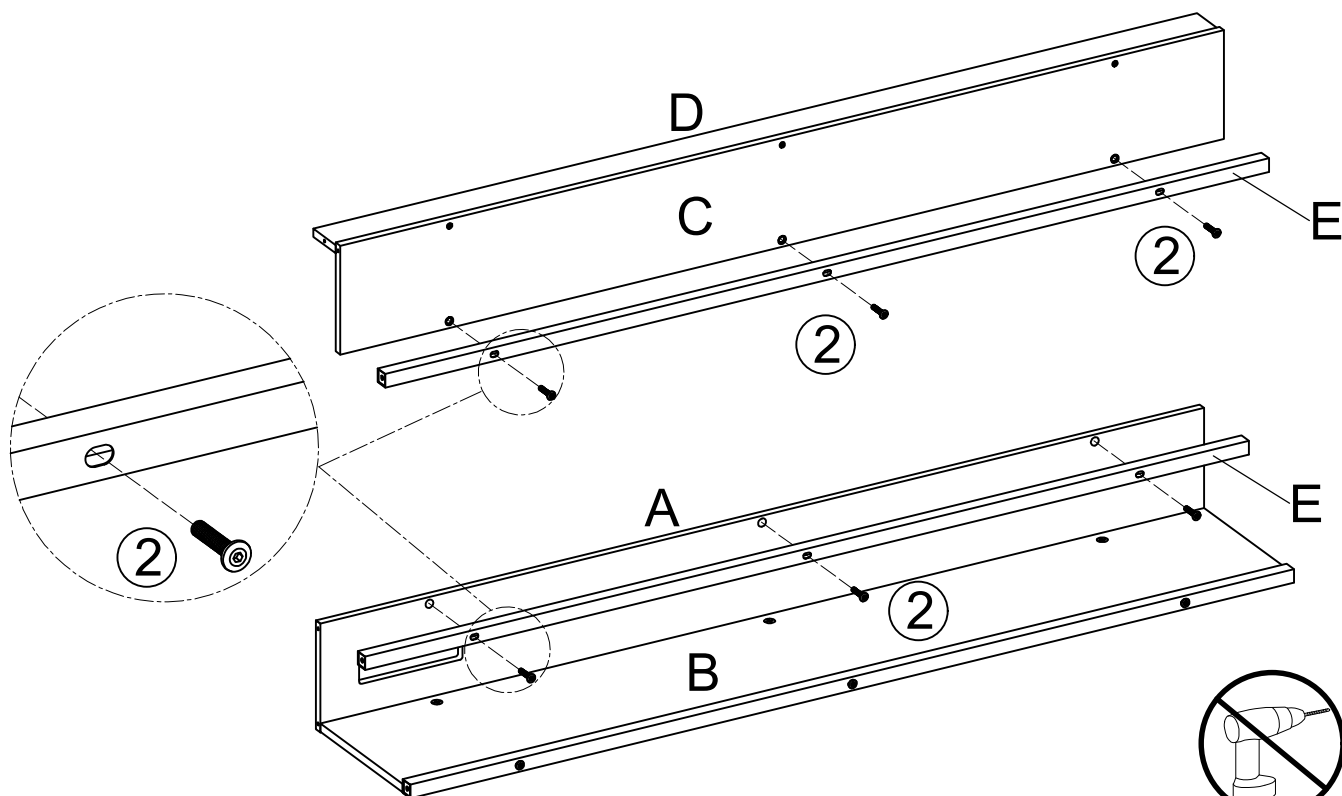


STEP 8




NOTE: there are 2 heights for the bed-rest board to be adjusted as you need.

For Option A

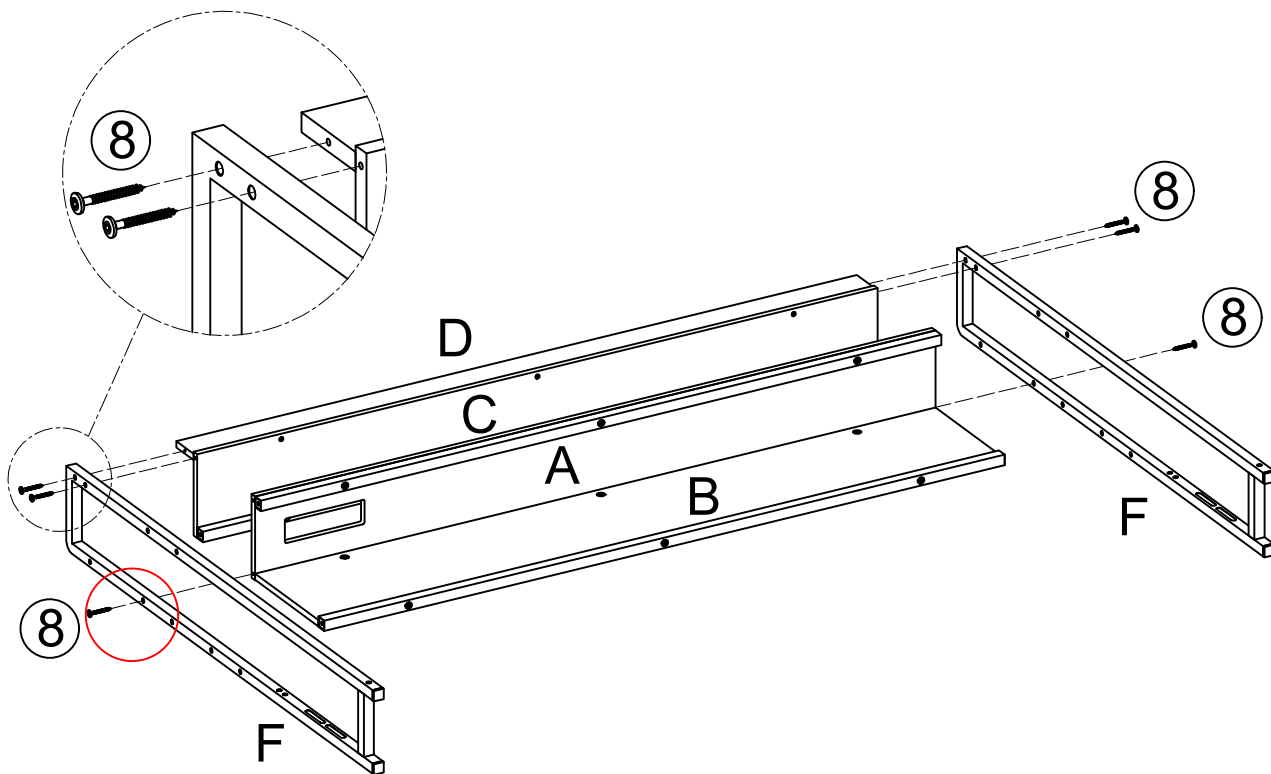


OR


For Option B

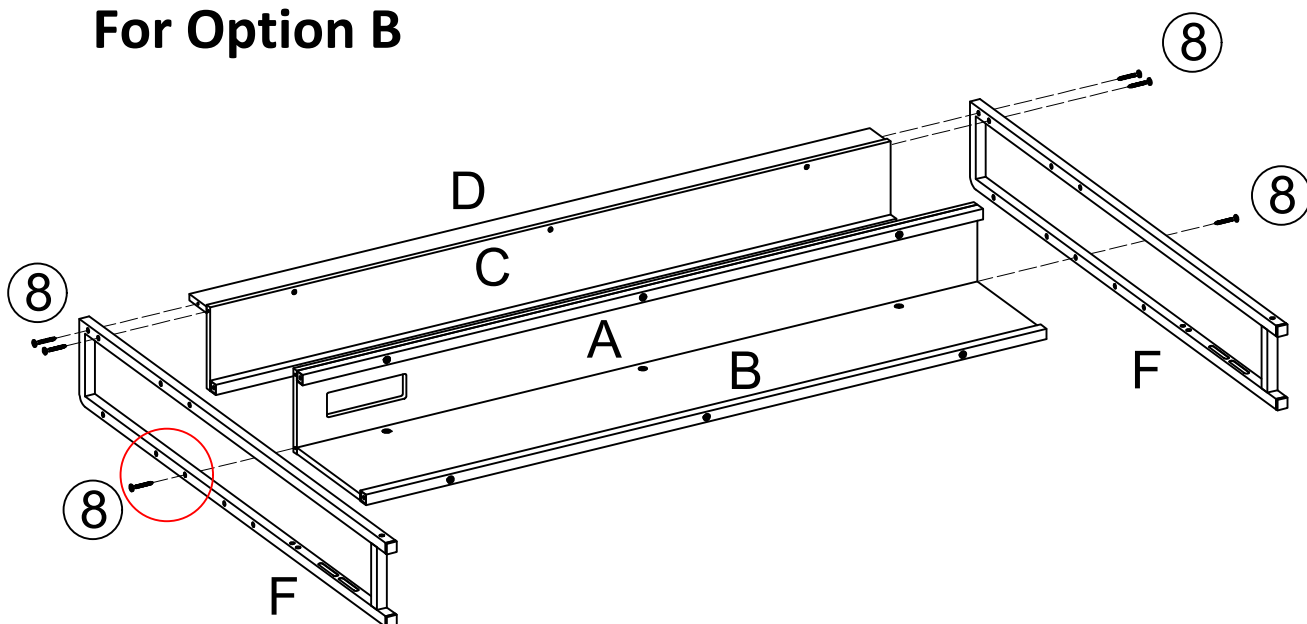

STEP 9




For Option A


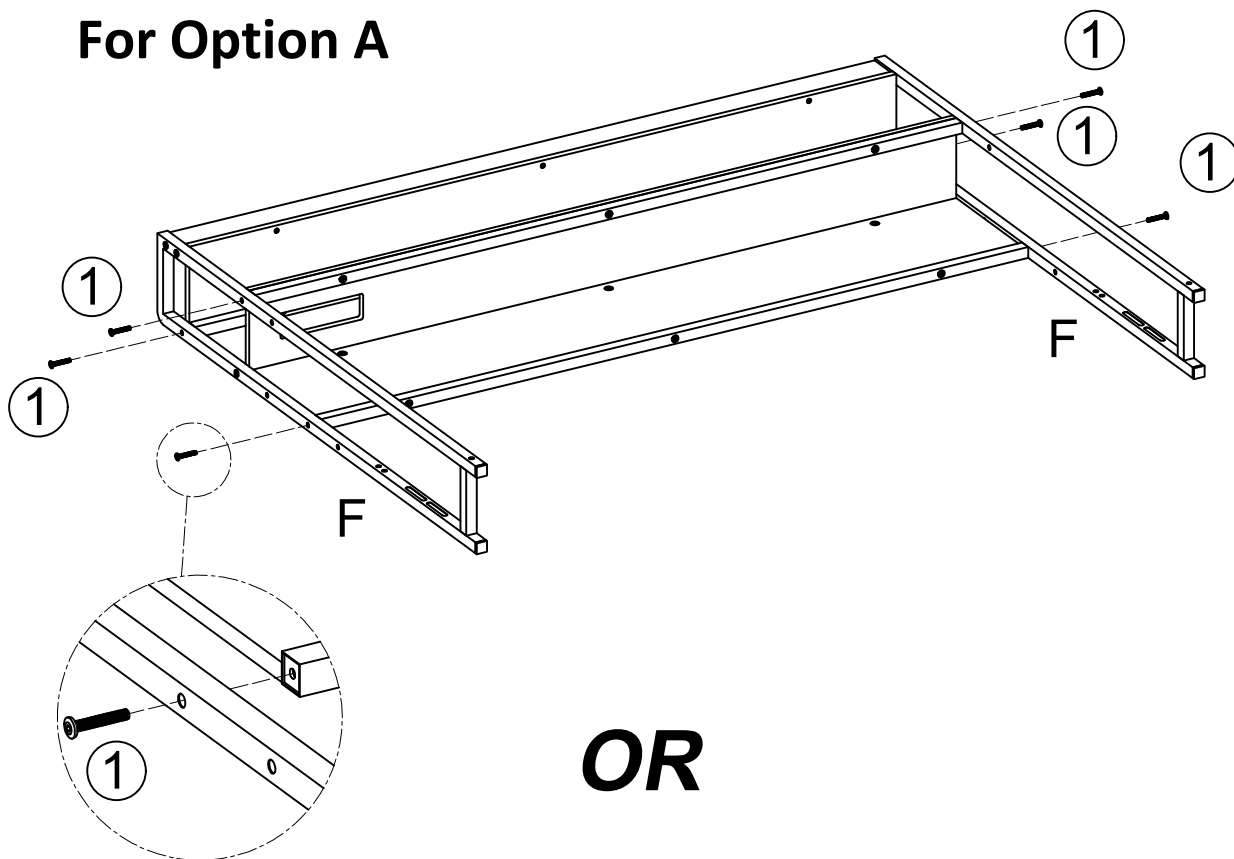


OR



For Option B

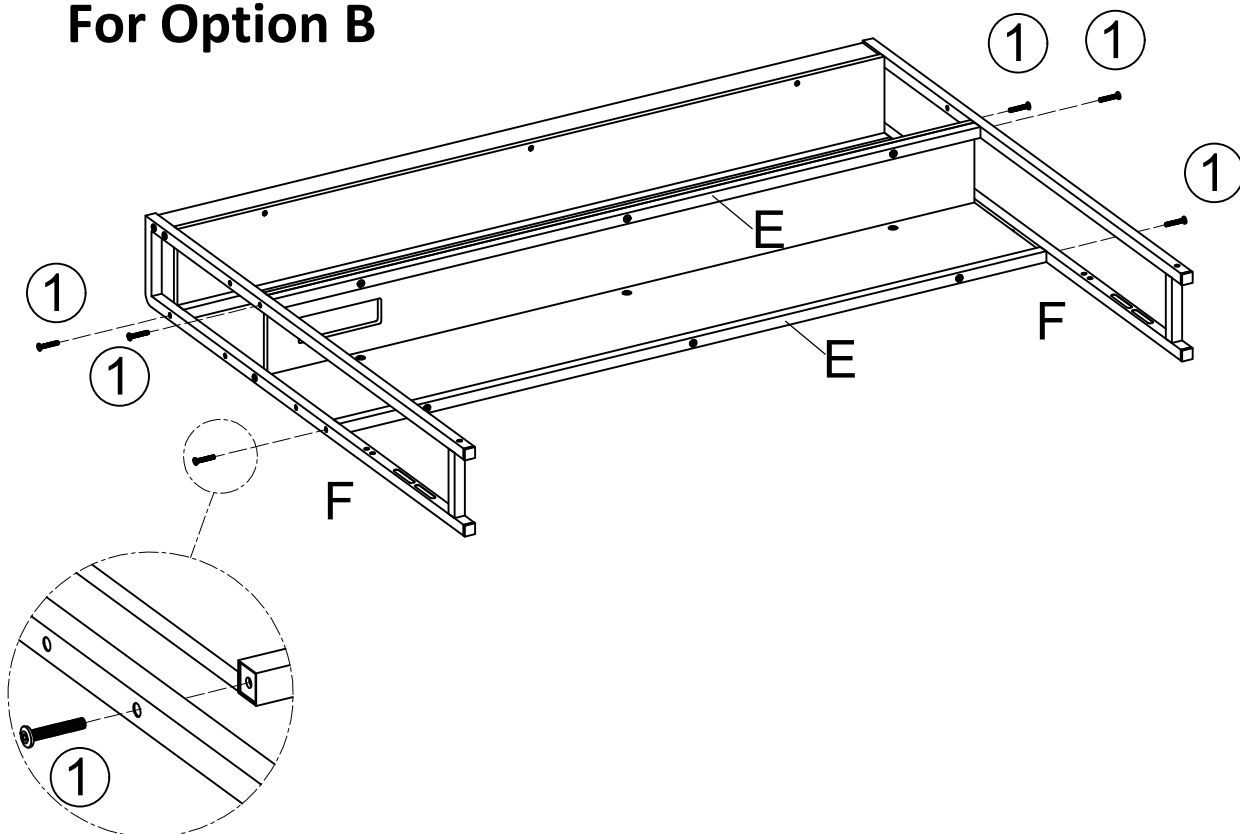


STEP 10

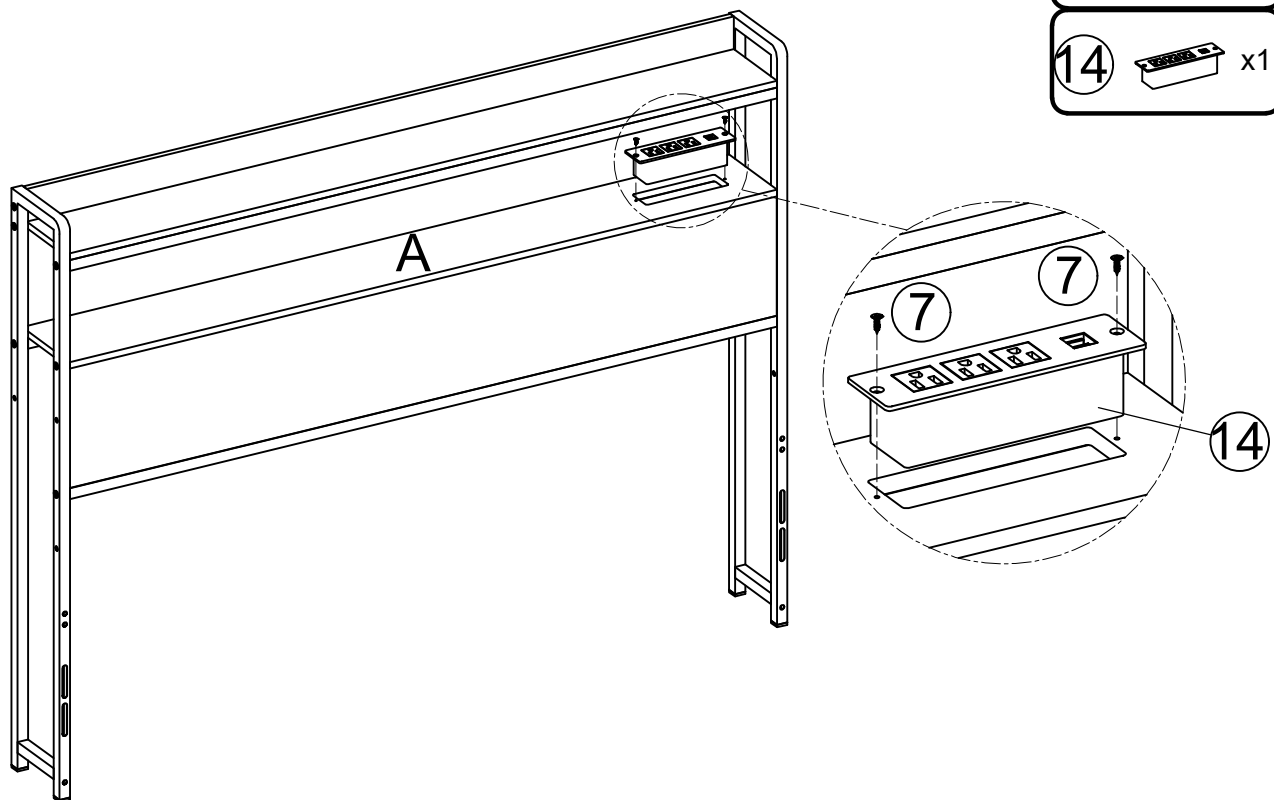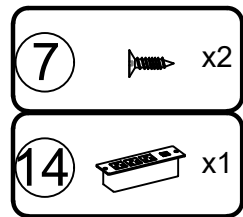

STEP 11

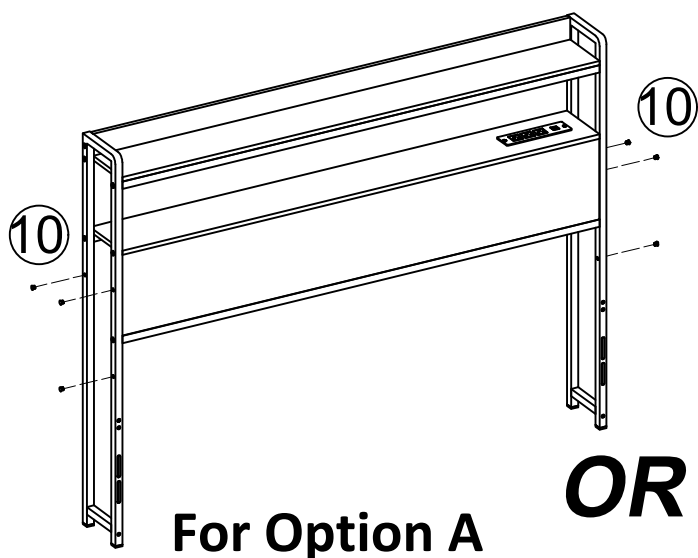


OR

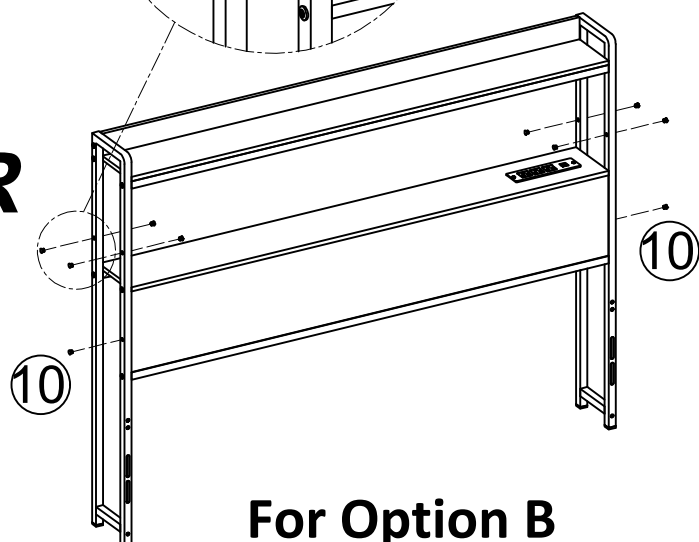


Plug Plastic Covers Part ⑩
to cover the spare holes for
nice looking as you need.

STEP 12

Tear off the tape of the LED strip, stick the LED strip to the bottom of shelf (C). Fix the LED strip with plastic clips.
Note: Do not cover the lamp beads.

- | | | |
|----|---|-----|
| 7 |  | x14 |
| 11 |  | x1 |
| 12 |  | x3 |
| 13 |  | x8 |

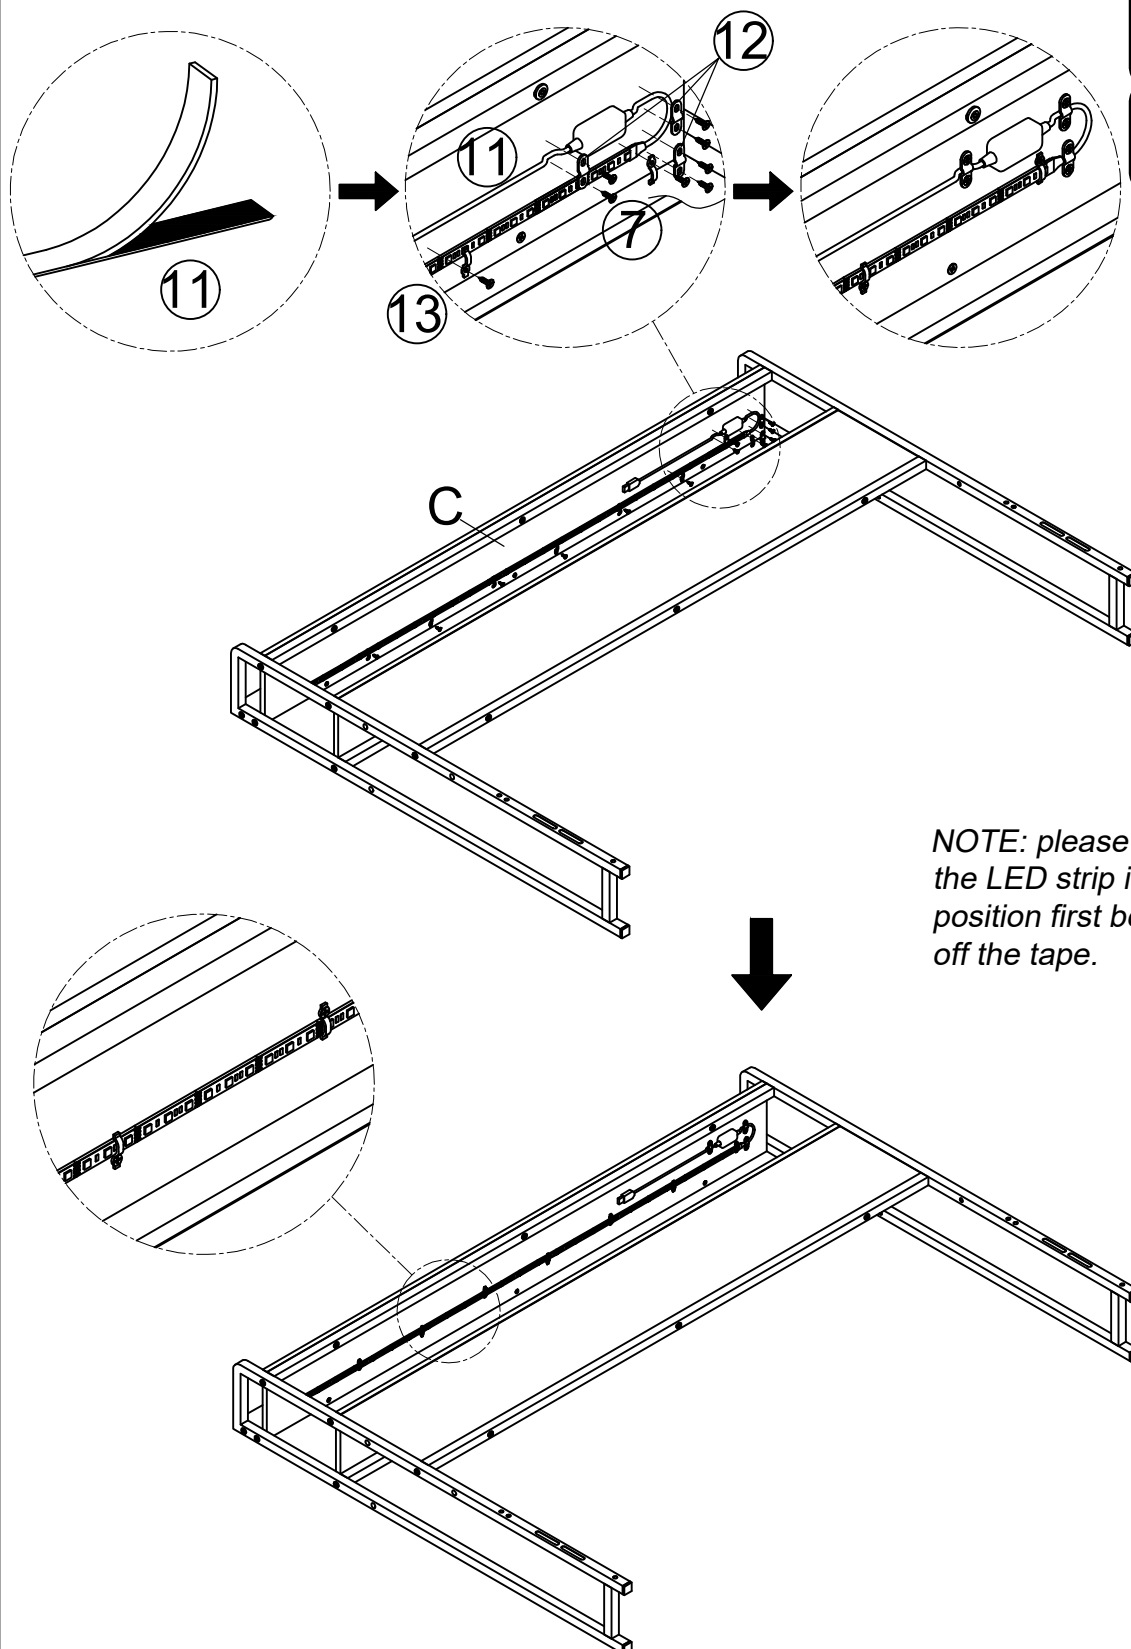


NOTE: please make sure the LED strip is in proper position first before tear off the tape.


Option C/D

STEP 4




Repeat step 1 through 3 as same as Option A/B create a Top Frame Assembly, then continue to assemble the Option C/D from step 4.



Note that the direction of part A as shown. The socket is on the left of the headboard.

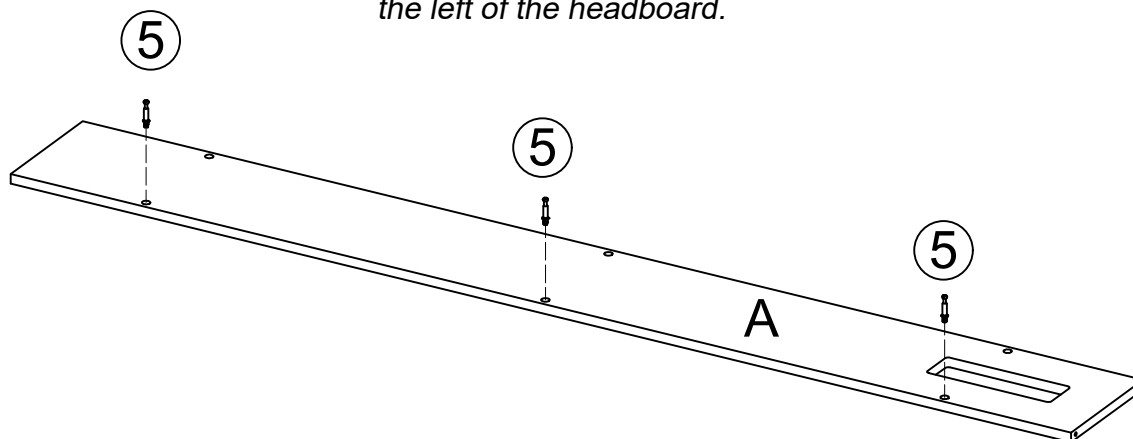



STEP 5

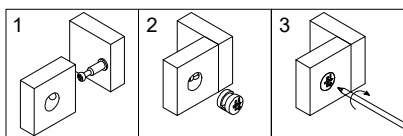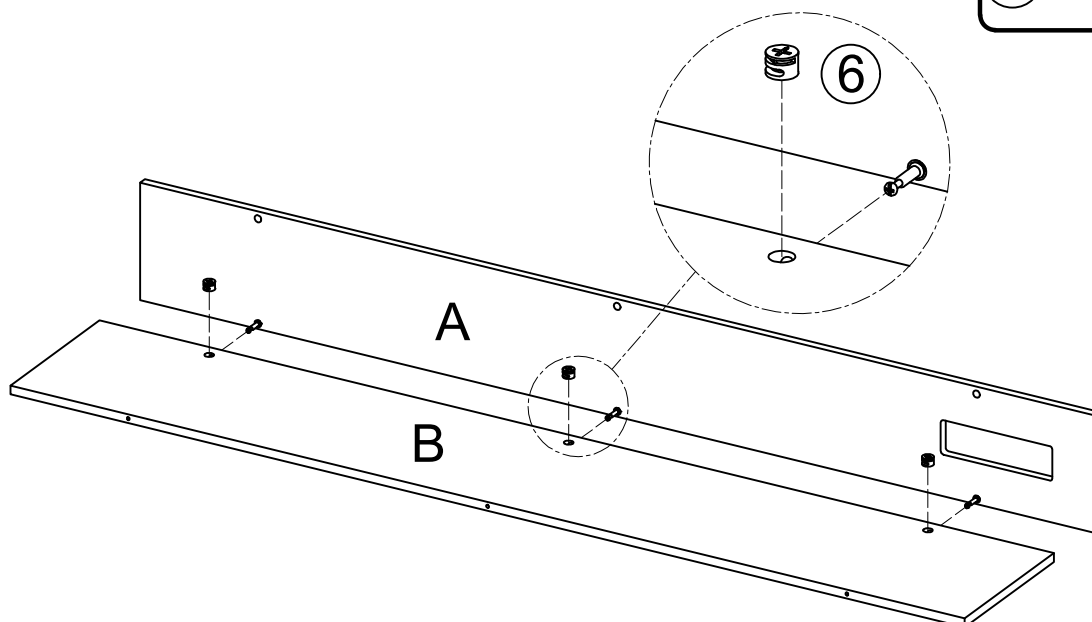



Please point the arrow upward to the mounting hole when installing Part ⑥, then use screwdriver to tighten it in the "+" direction.

Cam Lock Fastening System

STEP 6

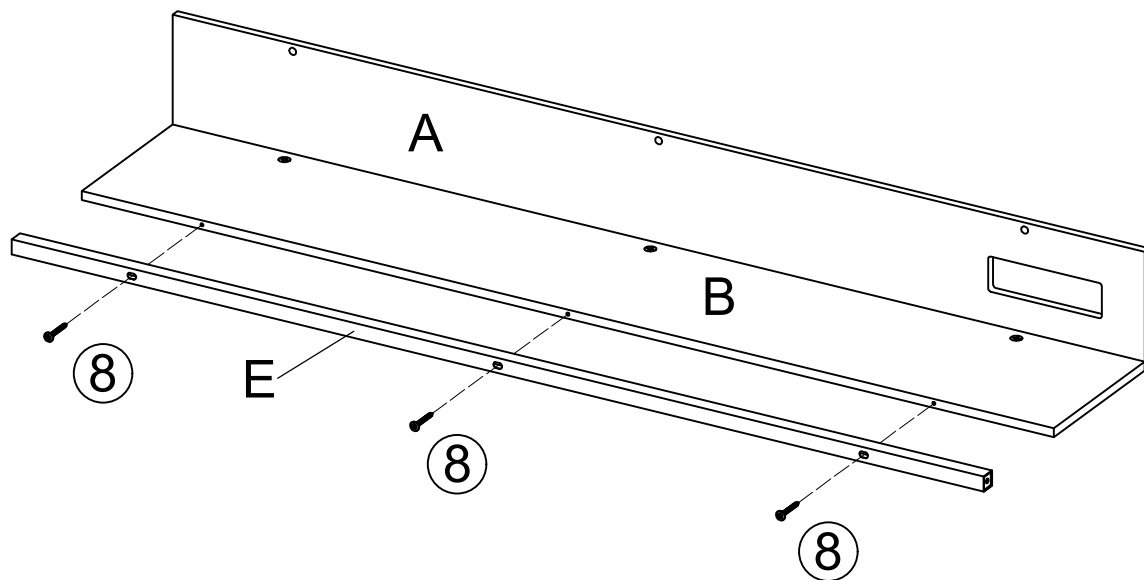

STEP 7

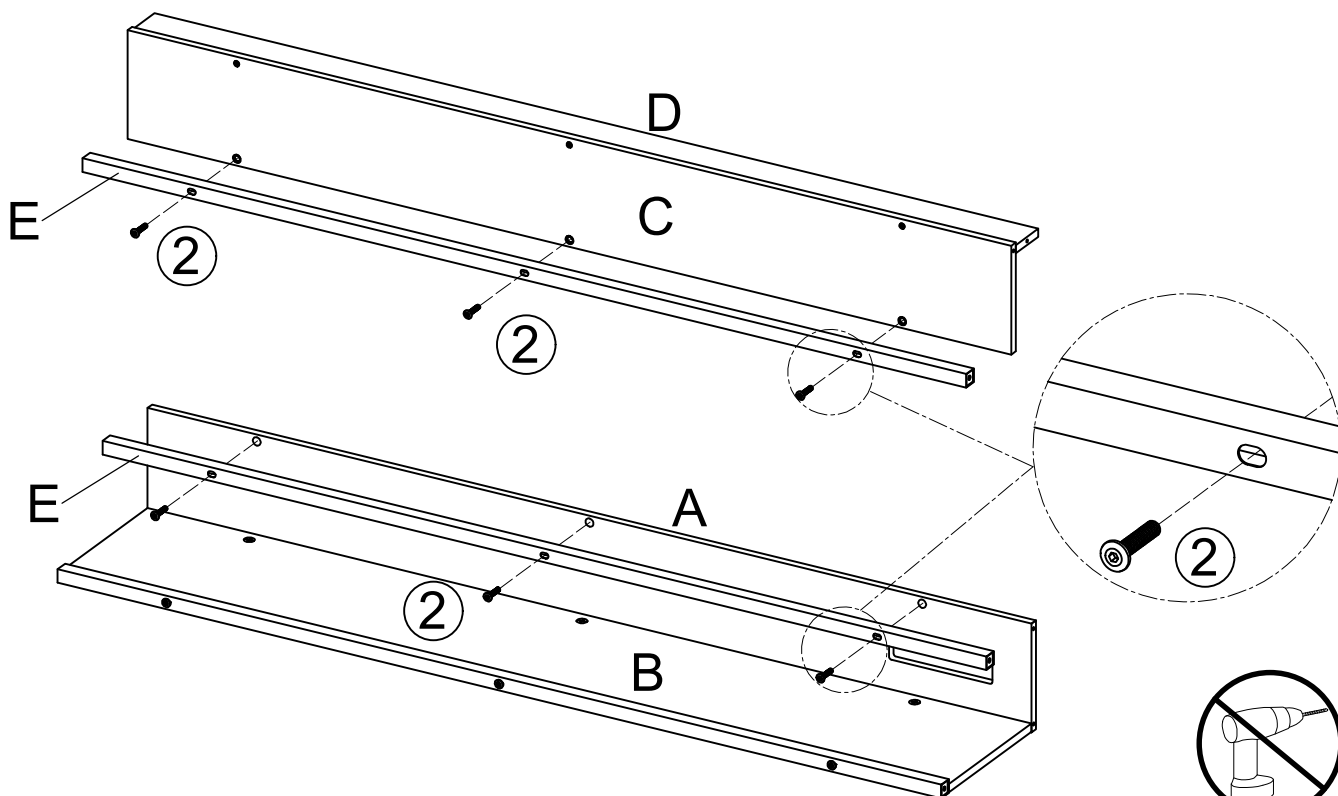


STEP 8

8  x6


NOTE: there are 2 heights for the bed-rest board to be adjusted as you need.

For Option C

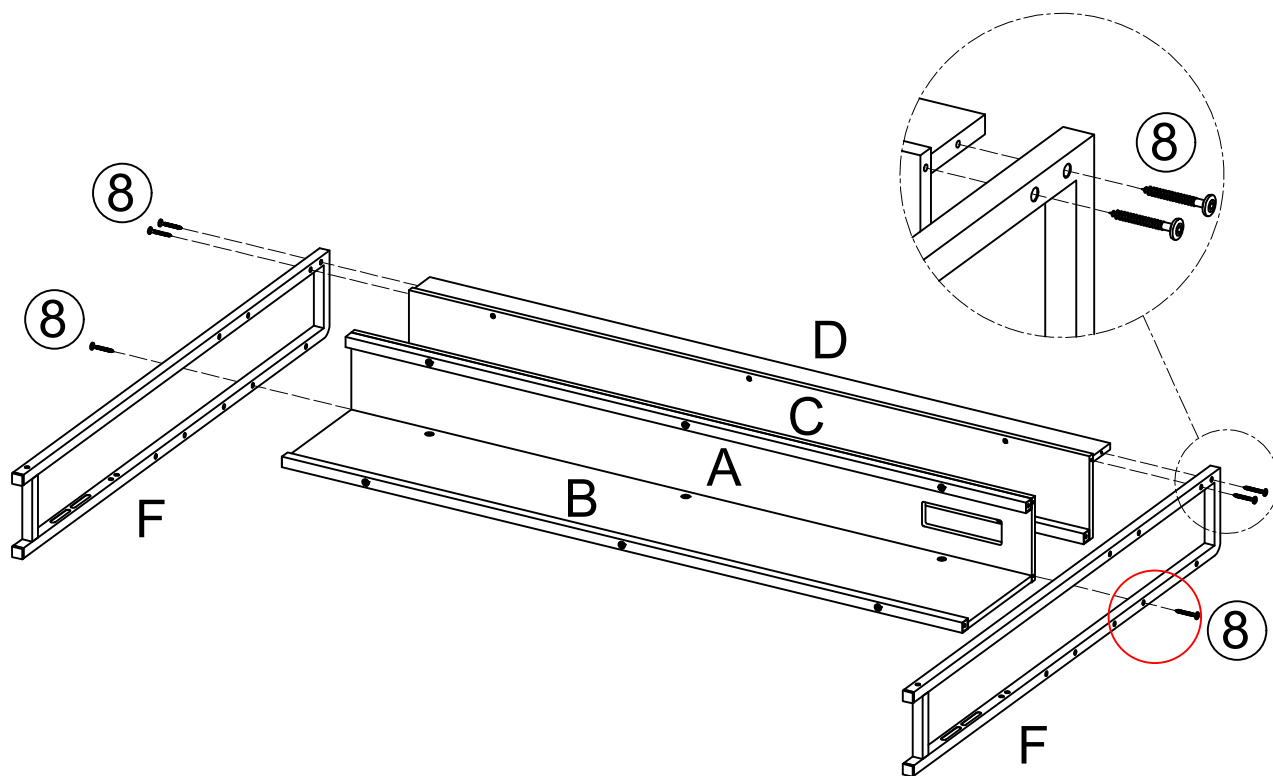


OR


For Option D

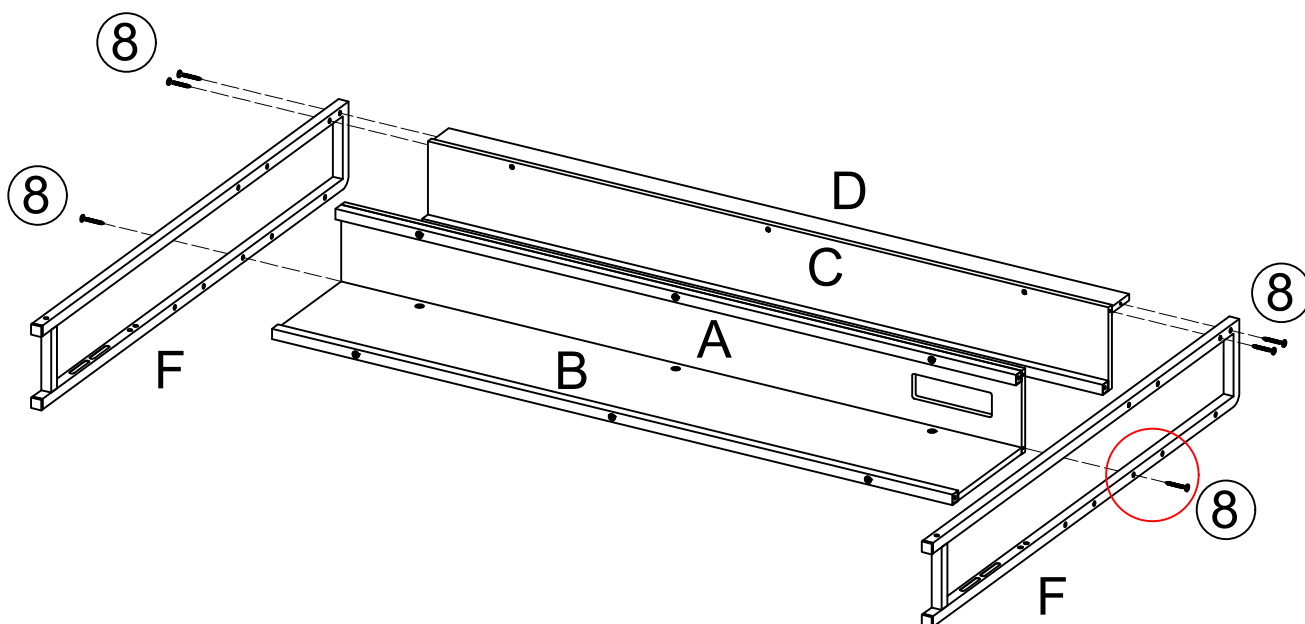

STEP 9




For Option C


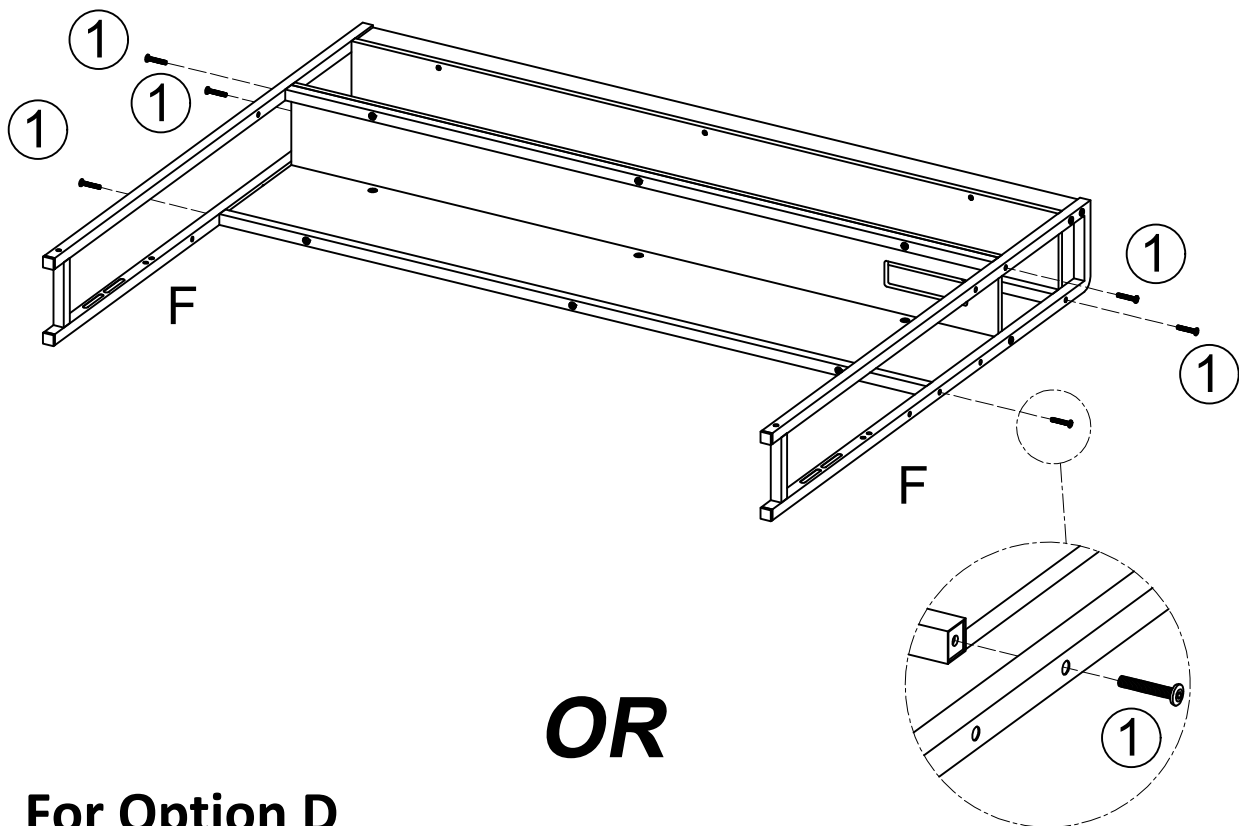


OR



For Option D

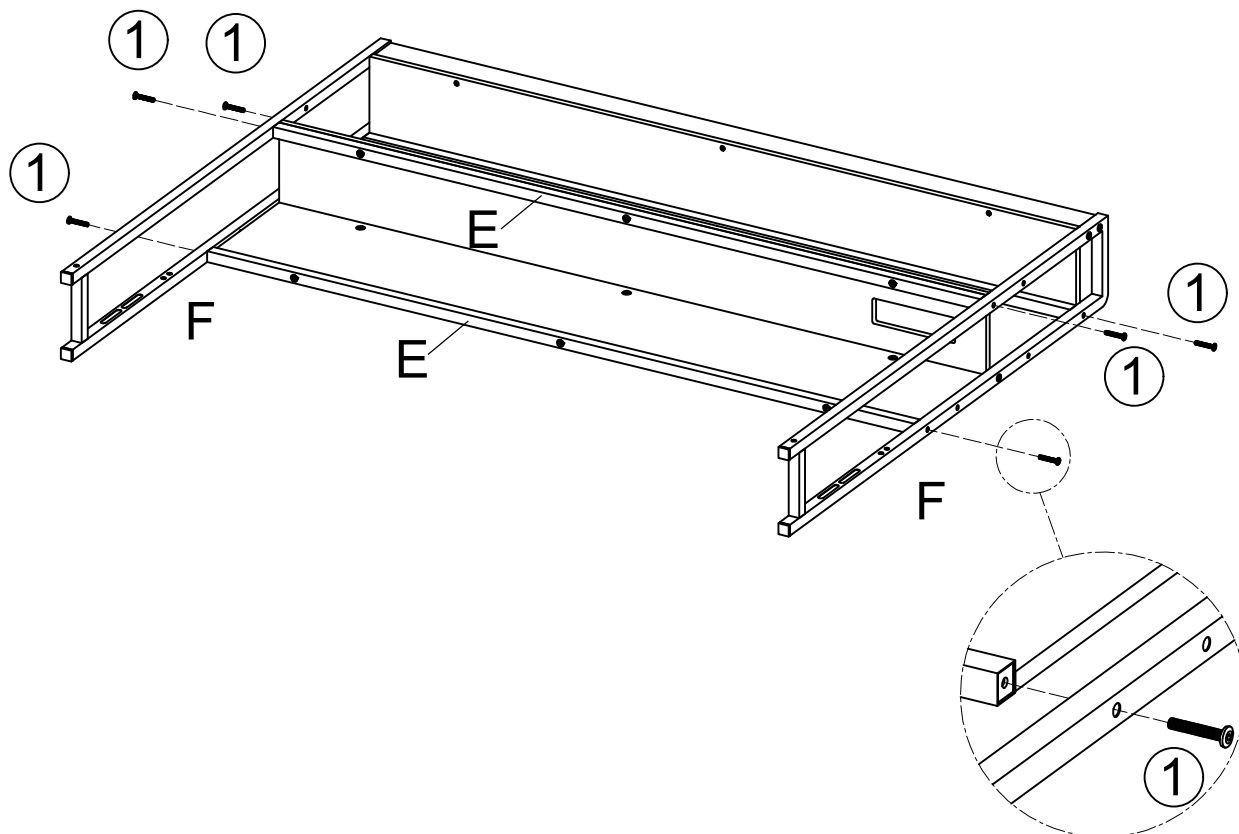

STEP 10

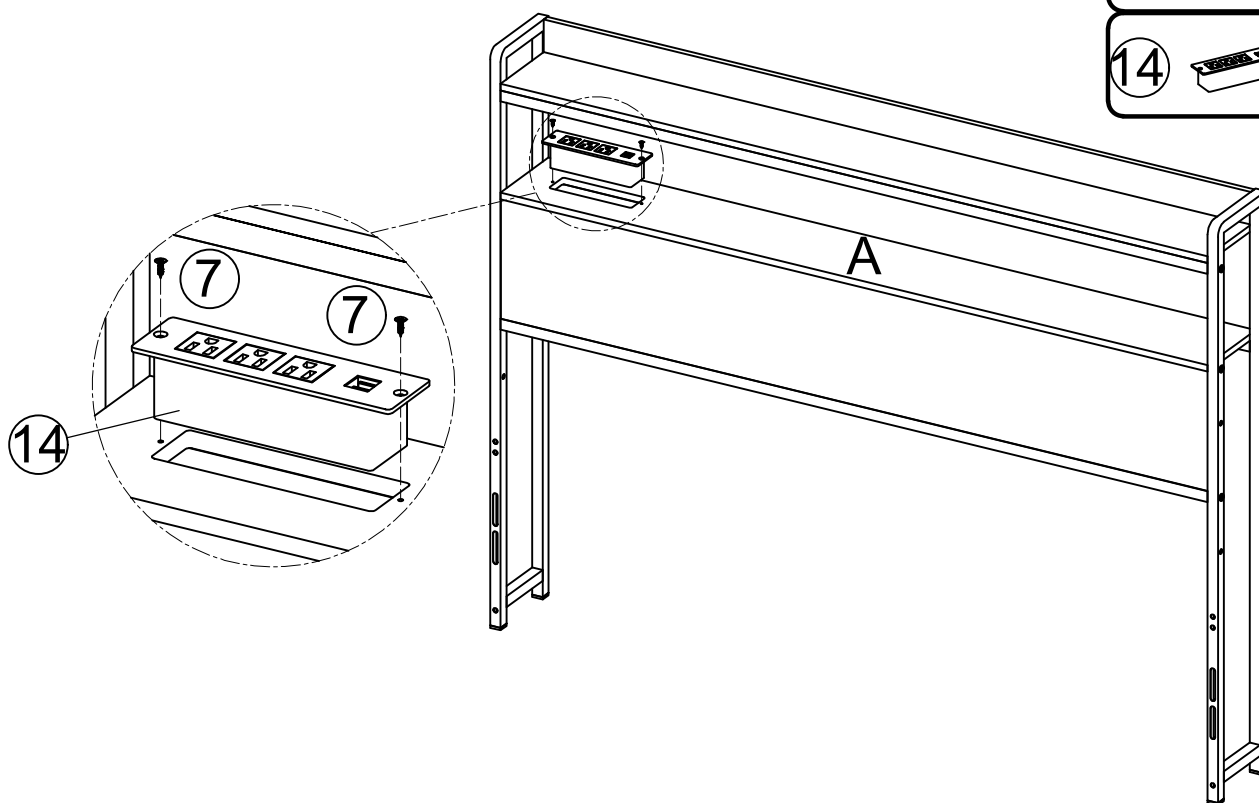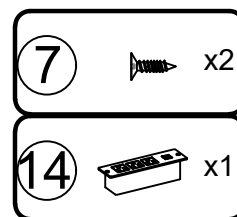




STEP 11

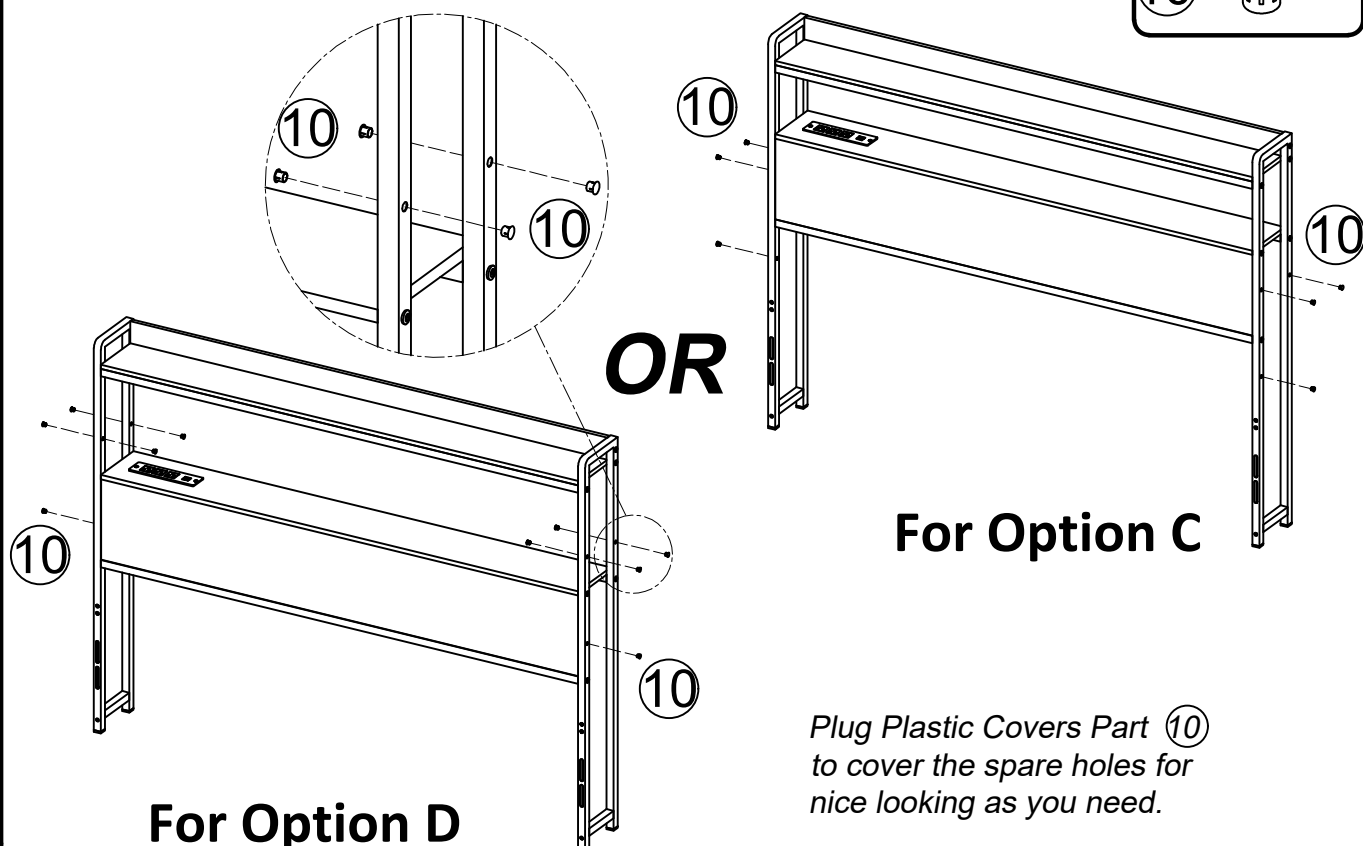


STEP 12

Tear off the tape of the LED strip, stick the LED strip to the bottom of shelf (C). Fix the LED strip with plastic clips.
Note: Do not cover the lamp beads.

- | | | |
|----|---|-----|
| 7 |  | x14 |
| 11 |  | x1 |
| 12 |  | x3 |
| 13 |  | x8 |

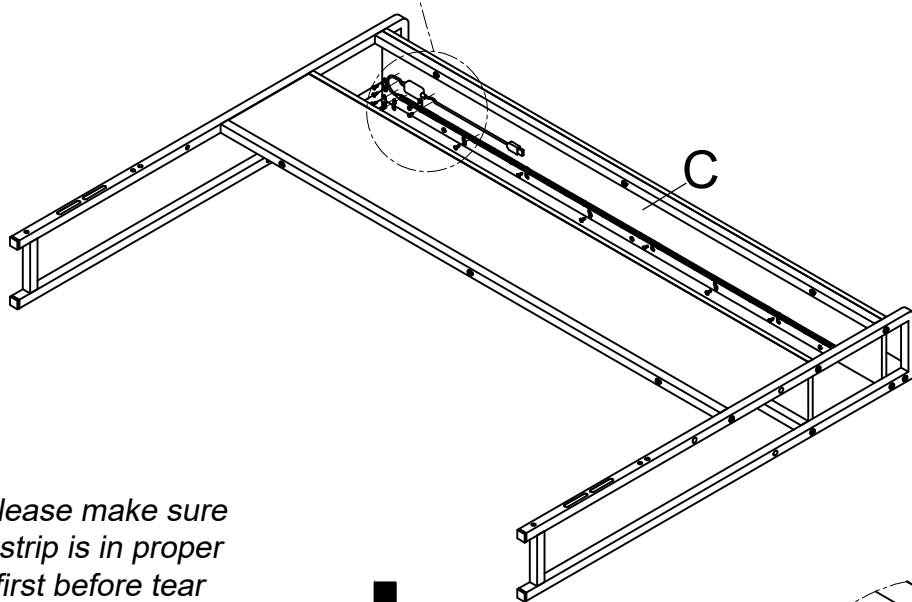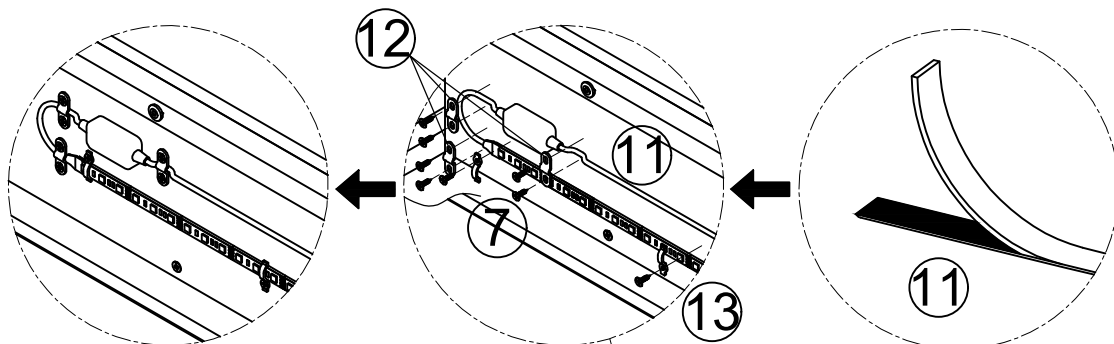


NOTE: please make sure the LED strip is in proper position first before tear off the tape.

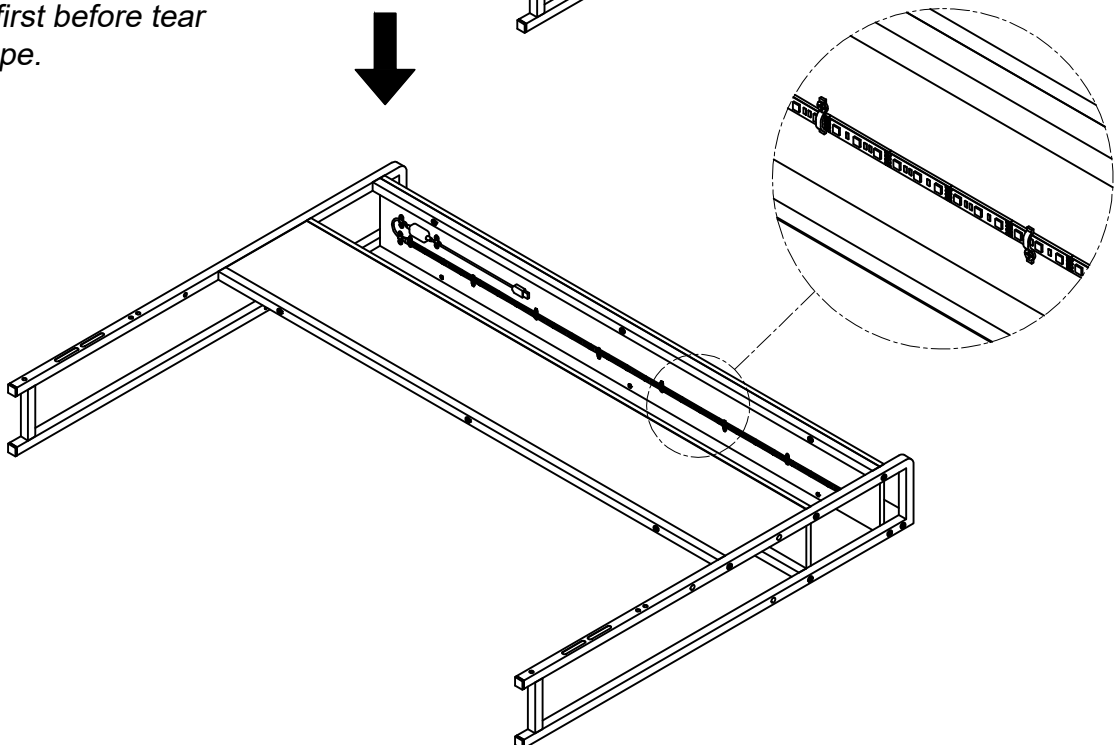


Bed Frame Adapter

When the installation distance between the headboard bracket and the bed frame (not included) is too large or too small, an adjustable board can be used to link.

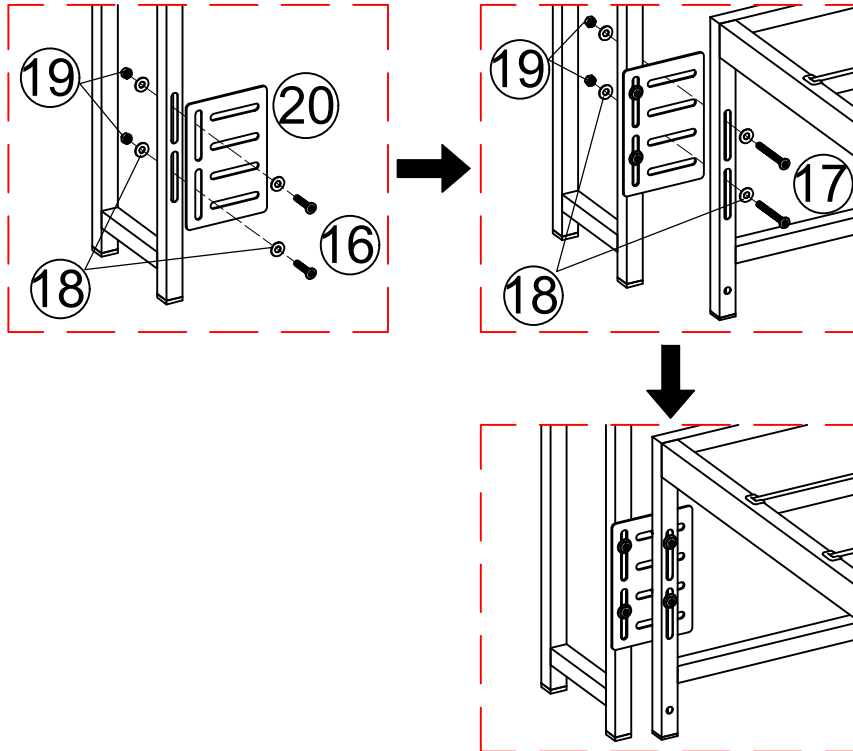

- 16  x4
- 17  x4
- 18  x16
- 19  x8
- 20  x2
- 21  x1

When the installation distance between the headboard bracket and the bed frame (not included) is just fine, an adjustable board can also be used to link.

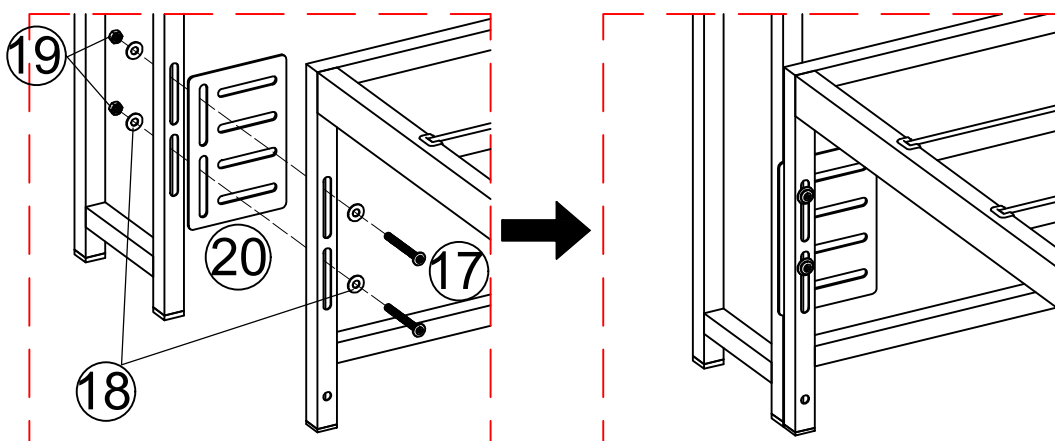

- 17  x4
- 18  x8
- 19  x4
- 20  x2
- 21  x1