



Assembly Instruction

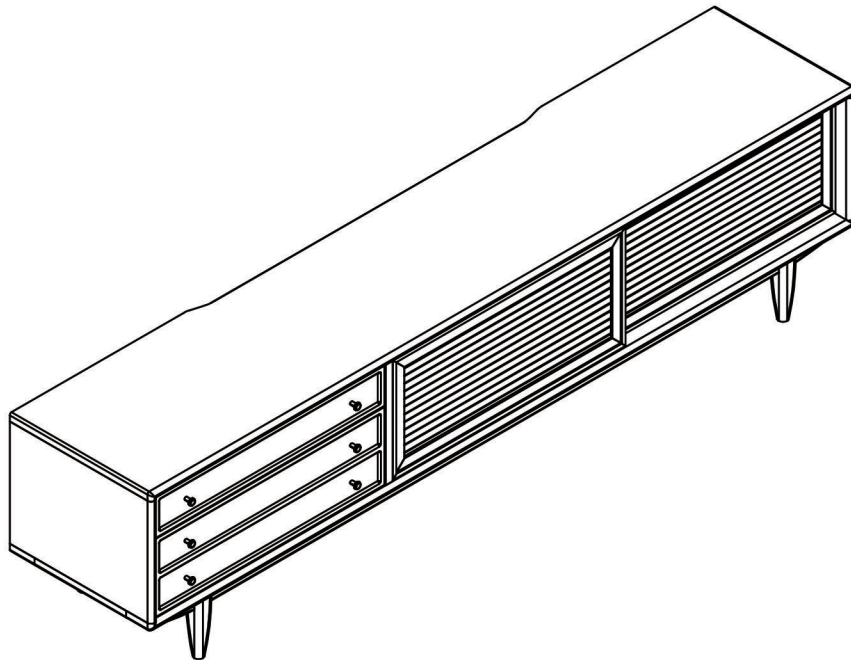


				
A. Allen wrench 5#=1	B. Hexagon socket screw M8*40=4	C. Elastic pad Φ8=4	D. Flat cushion Φ8=4	E. Allen wrench 4#=1

1. Invert or place the cabinet on its side

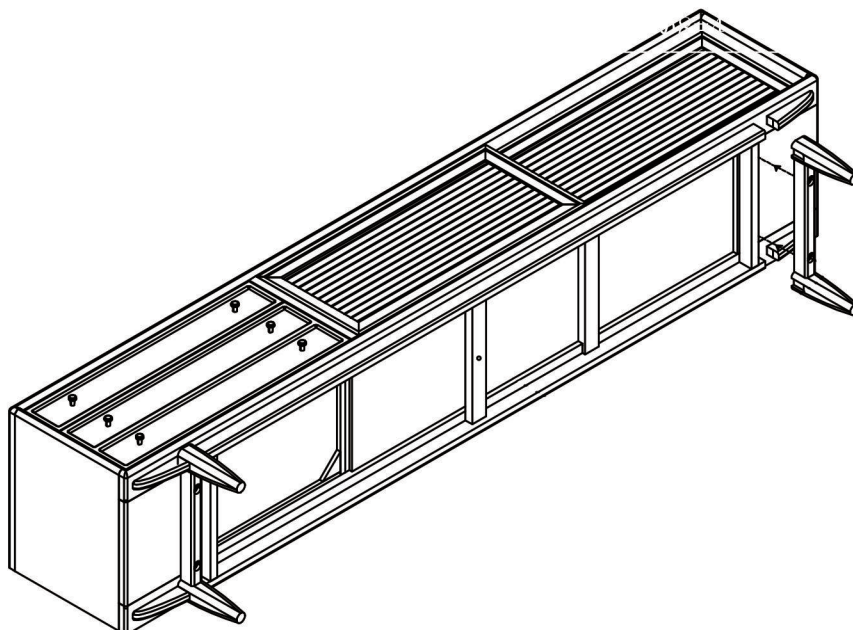

2. Insert spring washers and flat washers into the screws in sequence, and then rotate clockwise to fix them

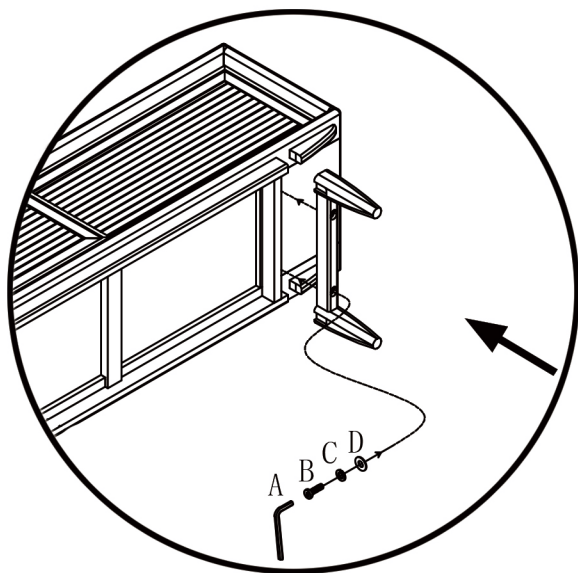

3. Rotate the middle cabinet leg clockwise

