


USER GUIDE

ENTRYWAY CABINET

Natural / Stylish / Unique



HARDWARE This is for 9 tier shelf only. Hardware count vary for different tier of shelf.

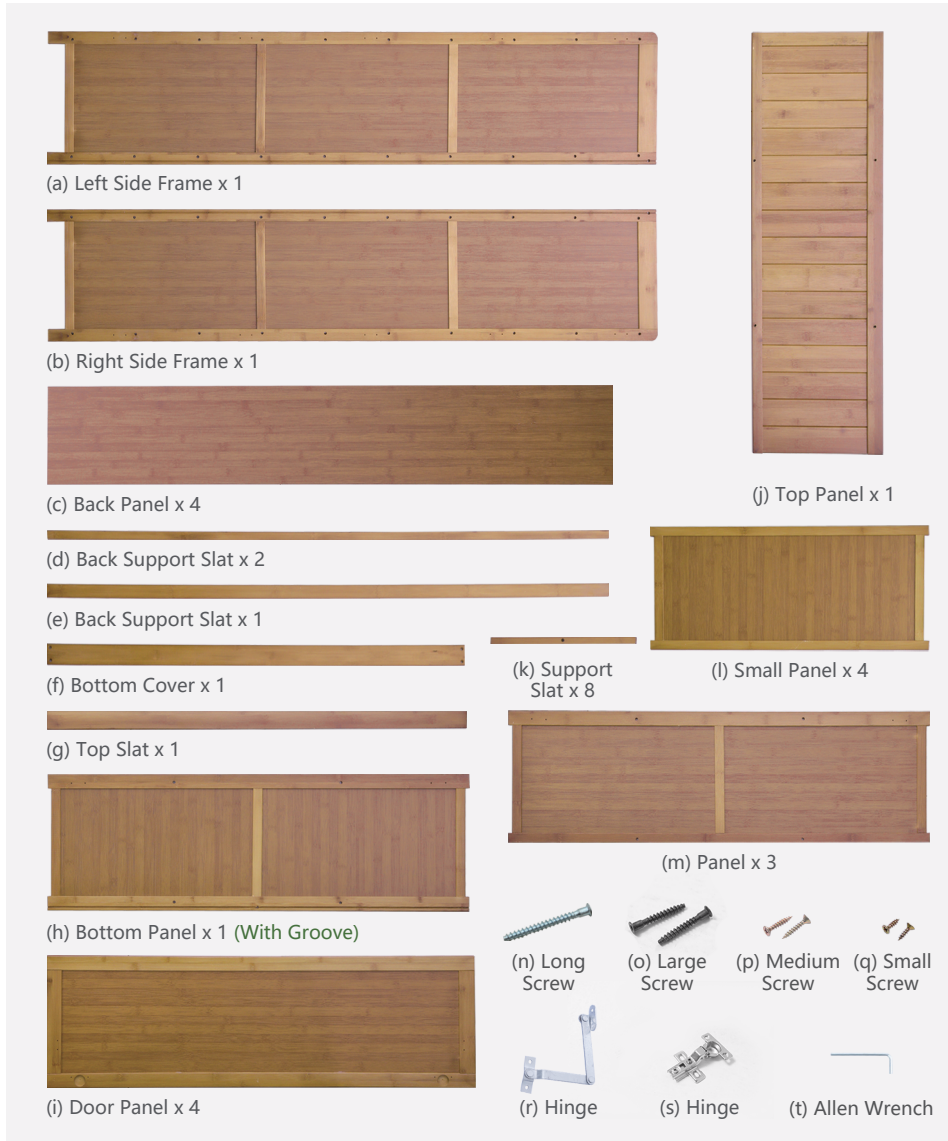

! HINGE ASSEMBLY



① Separate Hinges (s).



② Install them on Door Panels (i) with Small Screws (q).



Install the other half of the Separated Hinge onto Bottom Panel (h) with Small Screws (q).



Install them onto Panels (m) with Small Screws (q).

! ATTENTION

- ① Please always read and follow the assembly, maintenance and operating instruction.
- ② Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.
- ③ Keep children away during assembly. This item contains small parts which can be swallowed by children.
- ④ Wipe frames with water gently, do not use bleach, acid, or other solvents.
- ⑤ Check all hardwares before assembly. Incorrect parts used may lead to damage.



Scan the QR code to view the assembly video.



FINISHED PRODUCT

ASSEMBLY INSTRUCTION



① Position and secure Left Side Panel (a) and Bottom Panel (h) with Large Screws (o). Align the groove on both Panels.



② Install Right Side Frame (b) with Large Screws (o).



③ Position and secure Back Support Slat (e) with Large Screws (o).
© 2020-2021 by Pundarika LLC - MoNiBloom.com



④ Install 2 Support Slats (k) with Large Screws (o) as picture shown.



⑤ Install Panel (m) on the Support Slats (k) with Large Screws (o).



⑥ Install 2 more Support Slats (k) on the Panel from Step 5 with Large Screws (o).



⑦ Repeat Step 5 and 6 until all the Support Slats (k) are used.



⑧ Install Small Panels (l) as picture shown with Large Screws (o).



⑨ Install Top Panel (j) with Large Screws (o).



⑩ **Flip around the frame**, insert Back Panel (c) along the groove.



⑪ Insert Back Panels (d) then follow Step 10 to insert all the Back Panels (c).



⑫ Position Top Slat (g) as picture shown, secure it with Large Screws (o) and Long Screw (n) from the top.



⑬ Flip around the frame.



⑭ Install all the Door Panels (i) and Hinges (r) with Small Screws (q).



⑮ Install Bottom Cover (f) with Medium Screws (p).