

IN231100474V01_US

840-264V10

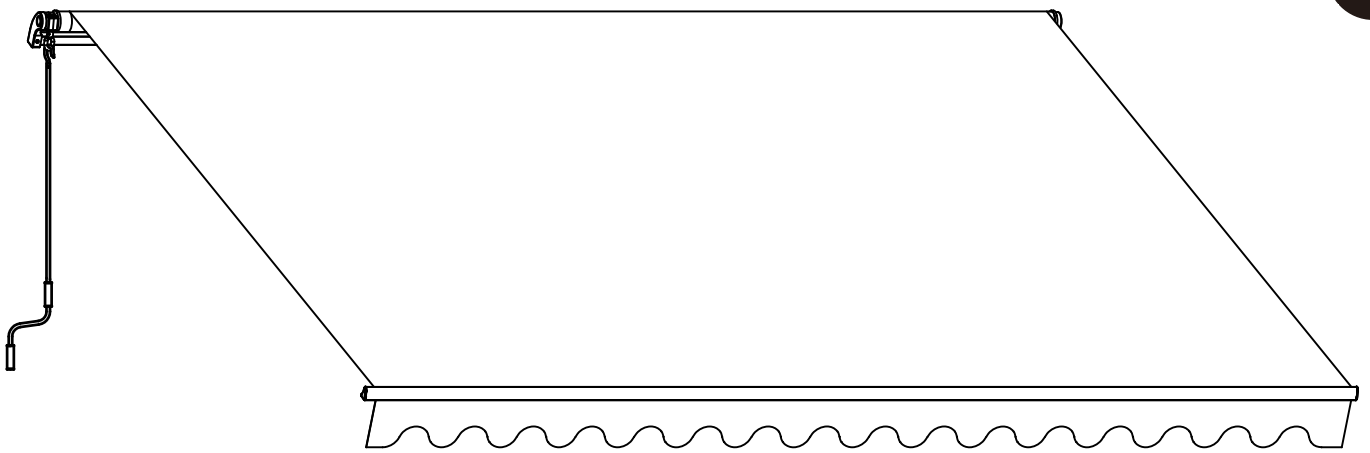

4.8x3m

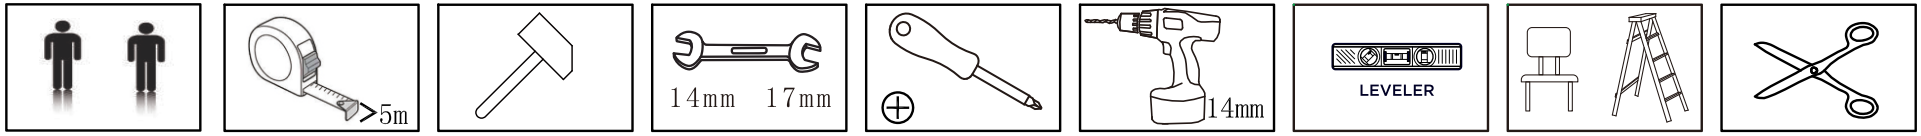

***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

***FR*_IMPORTANT:A LIRE ATTENTIVEMENT ET À CONSERVER POUR CONSULTATION ULTÉRIEURE.**

***ES*_IMPORTANTE, LEA Y GUARDE PARA FUTURAS REFERENCIAS.**

***PT*_IMPORTANTE, RETER PARA REFERÊNCIA FUTURA: LEIA ATENTAMENTE.**

***DE*_WICHTIG! SORGFÄLTIG LESEN UND FÜR SPÄTER NACHSCHLAGEN AUFBEWAHREN.**

***IT* _ IMPORTANTE! CONSERVARE IL PRESENTE MANUALE PER FUTURO RIFERIMENTO E LEGGERLO ATTENTAMENTE.**

EN

Dear customer,

Thank you for purchasing this product. So that your appliance serves you well, please read all the instructions in this user's manual. If you have any questions, please contact our customer care center,Our contact details are below:

FR

Cher client,

Nous vous remercions d'avoir acheté ce produit. Afin que vous puissiez profiter pleinement de votre appareil, veuillez lire toutes les instructions de ce manuel d'utilisation. Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle,Nos coordonnées sont les suivantes:

DE

Sehr geehrter Kunde,

Vielen Dank, dass Sie dieses Produkt erworben haben. Damit Ihr Gerät Ihnen gute Dienste leistet, lesen Sie bitte alle Hinweise in diesem Benutzerhandbuch. Wenn Sie Fragen haben, wenden Sie sich bitte an unser Kundendienstzentrum,Unsere Kontaktdaten stehen unten:

ES

Queridos clientes,

Gracias por comprar este producto. Para que su electrodoméstico le sirva mejor, lea todas las instrucciones de este manual del usuario. Si tiene alguna pregunta, comuníquese con nuestro Centro de Atención al Cliente,Nuestros datos de contacto son los siguientes:

PT

Caros clientes,

Obrigado por adquirir este produto. Para que o seu aparelho o sirva melhor, leia todas as instruções deste manual do utilizador. Se tiver alguma dúvida, por favor contacte o nosso Centro de Atendimento ao Cliente,Os nossos dados de contacto são os seguintes:

IT

Caro Cliente,

Grazie per aver acquistato questo prodotto. Per servirti meglio con questo apparecchio ti prego di leggere tutte le istruzioni in presente manuale utente. In caso di dubbio, si prega di contattare il nostro centro assistenza clienti,I nostri dettagli di contatto sono di seguito:

Country	Phone	Email
US	001-877-644-9366	customerservice@aosom.com
CA	416-792-6088	customerservice@aosom.ca
UK	0044-800-240-4004	enquiries@mhstar.co.uk
DE	0049-0(40)-88307530	service@aosom.de
FR	0033-1-84166106	aosom@mhfrance.fr
ES	0034-931294512	atencioncliente@aosom.es
PT	0034-931294512	info@aosom.pt
IT	0039-0249471447	clienti@aosom.it

US

Imported by Aosom LLC
27150 SW Kinsman Rd Wilsonville, OR 97070 USA
MADE IN CHINA

CA

Imported by Aosom Canada Inc.
7270 Woodbine Avenue, Unit 307, Markham, Ontario Canada
L3R 4B9
MADE IN CHINA

Importé par Aosom Canada Inc.
7270 Woodbine Avenue, unité 307, Markham, Ontario Canada
L3R 4B9
Fabriqué en Chine

UK

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA

FR

ADRESSE D&APOS;IMPORTATION:
MH FRANCE
2 Rue Maurice Hartmann
92130 Issy Les Moulineaux
France
FABRIQUÉ EN CHINE



Adresses sur quefairedemesdechets.fr

ES

IMPORTADOR:
SPANISH AOSOM, S.L.
C/ROC GROS,Nº15.08550, ELS HOSTALETS DE BALENYÀ, SPAIN.
B66295775
WWW.AOSOM.ES
ATENCIONCLIENTE@AOSOM.ES
TEL: 931294512
HECHO EN CHINA

PT

SPANISH AOSOM, S.L
C.ROC GROS N.15, 08550. ELS HOSTALETS DE BALENYÀ
TEL: 931294512 (SEG-SEX DAS 7:30H ÀS 16:30H)
INFO@AOSOM.PT
WWW.AOSOM.PT

DE

ADRESSE DES IMPORTEURE:
MH Handel GmbH
Wendenstraße 309
D-20537 Hamburg
Germany
IN CHINA HERGESTELLT

IT

IMPORTATO DA:
AOSOM Italy srl
Centro Direzionale Milanofiori
Strada 1 Palazzo F1
20057 Assago (MI)
P.I.: 08567220960
FATTO IN CINA


⚠ WARNING

Improper installation and operation of your awning can result in severe personal injury as well as product failure not covered by warranty. Please follow all instructions carefully or contact technical support for assistance.

Before you proceed, please read the following safety precautions:

⚠

- DO NOT remove the safety wrap that secures the awning arms until instructed to do so. The awning arms will spring open and can cause serious injury if handled inappropriately.
- DO NOT stand facing front of the awning when cutting off binds between arms. Hold tightly and stretch slowly until completely open.
- Kindly make sure use correct direction armrest to assemble, the awning will be easily damaged if use wrong armrest.

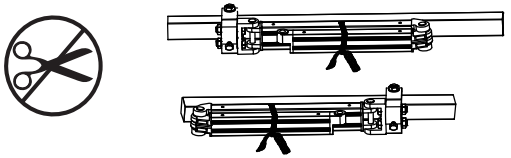

⚠

Proper location and fastening of the wall brackets is critical. Please follow instructions in the manual. Failure to securely fasten all brackets could result in the collapse of the awning and cause personal injury or death.

⚠

Keep children away from assembly area.

Safe Installation and Operation

1.Never install it in high and windy places, as the sunshade may drop and hurt someone.

2.Don’t use it in places that have vibrations or impulsions.

3.Don’t use it in places with high temperature such as walls near furnaces.

4.Don’t put heavy things on the frame as it may fall down and cause damage.

5.Please close the awning in storm conditions, such as excessive windy and rain.







6.Never use it for other purposes other than suggested.

7.Be careful with your fingers during installation.








8.Two adults are needed to move and install the sunshade as the product is big and heavy.

9.Please use all the screws and nuts correctly during installation as it is very dangerous if you leave it loose.


HARDWARE

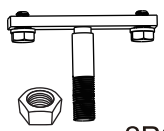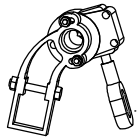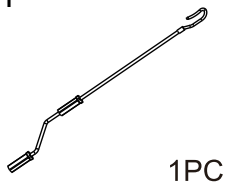J  2PCS	K-1  1PC	K-2  1PC	L  2PCS	P  4PCS	S  16PCS	Q  1PC
M  4PCS	T  4PCS	N  8PCS	D-1  1PC	D-2  1PC	H  1PC	


PARTS

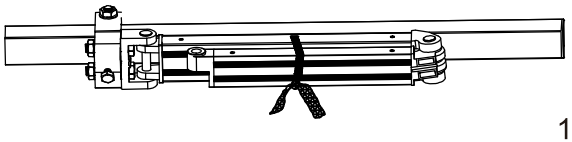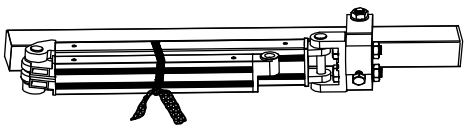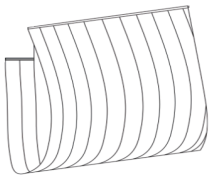A-1  1PC	A-2  1PC	A-3  1PC
B-1  1PC	B-2  1PC	B-3  1PC
C-1  1PC	C-2  1PC	C-3  1PC
E  1PC	F  1PC	G  3PCS


A-1 X1	A-2 X1	A-3 X1	S X8




Connect roller tubes "A-1"&"A-2"&"A-3"

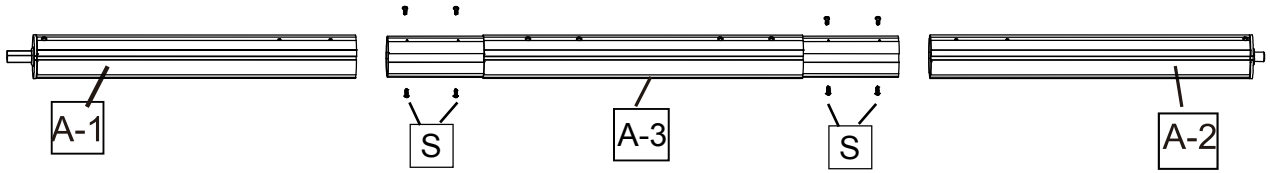


Insert roller tube "A-1"&"A-2"into "A-3" and connect them with screws "S"

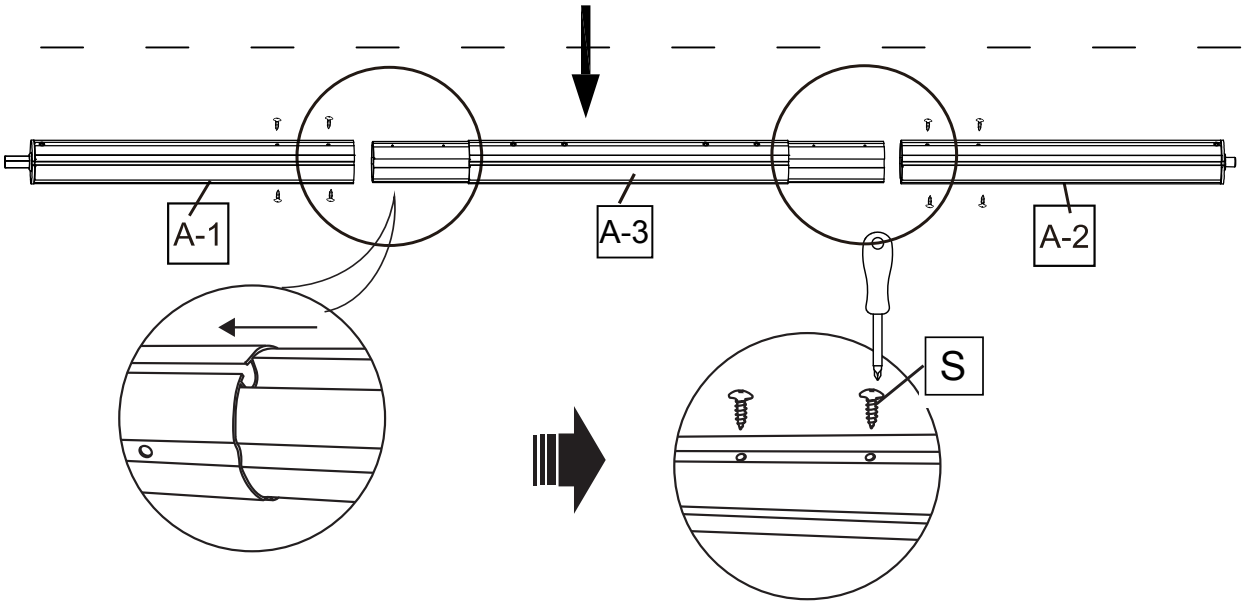


Complete the connection to be a complete roller tube "A"

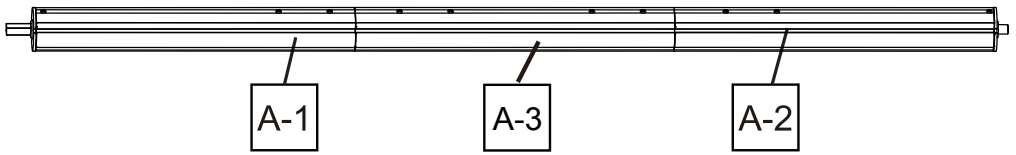


C-1 X1	C-2 X1	C-3 X1	S X4




Connect front bars "C-1"&"C-2"&“C-3”

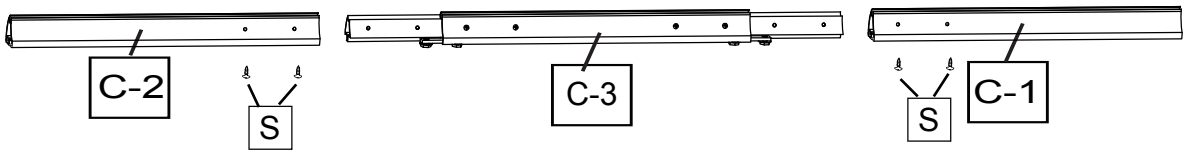

Insert front bar "C-2"&"C-1"into "C-3" and connect them with screws "S"
Do not forget to tighten all the screws

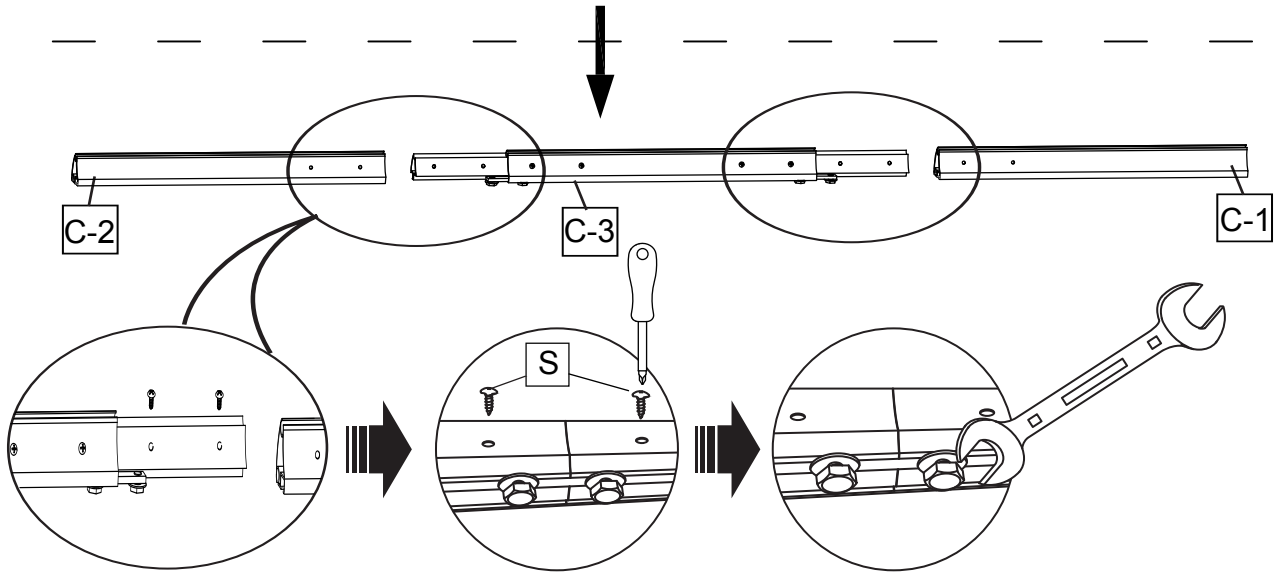



Complete the connection to be a complete front bar "C"

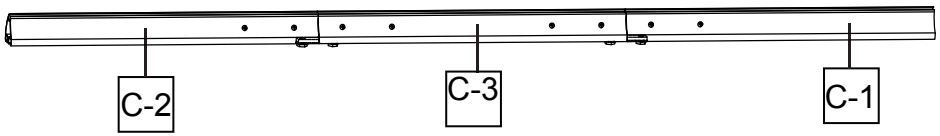

B-1 X1	B-2 X1

14mm 17mm

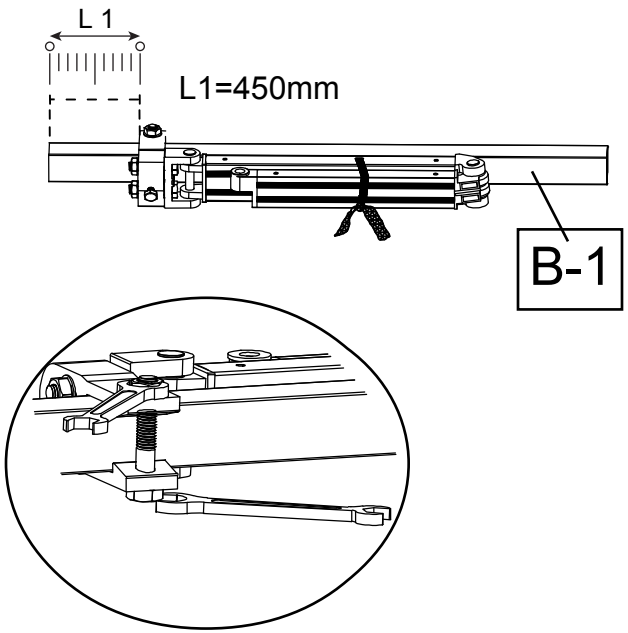

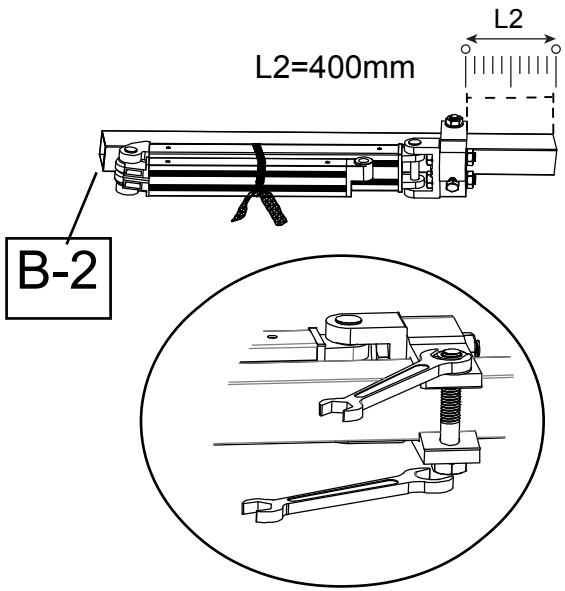


⚠ Before connect parts "B-1" and parts "B-2", please measurement the length of "L" and check nuts on the tube is tighten or not.


The length on "B-1" and "B-2" should be change the distance as request before usage. Please check the awning size you purchased and adjust the length by yourself.


After adjusting the distance, tighten all the screw nuts

B-1 X1	B-2 X1	B-3 X1	S X4



Connect parts "B-1" and "B-2"

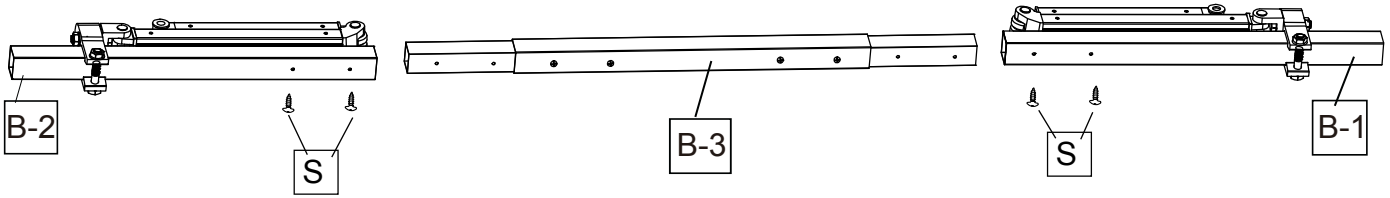


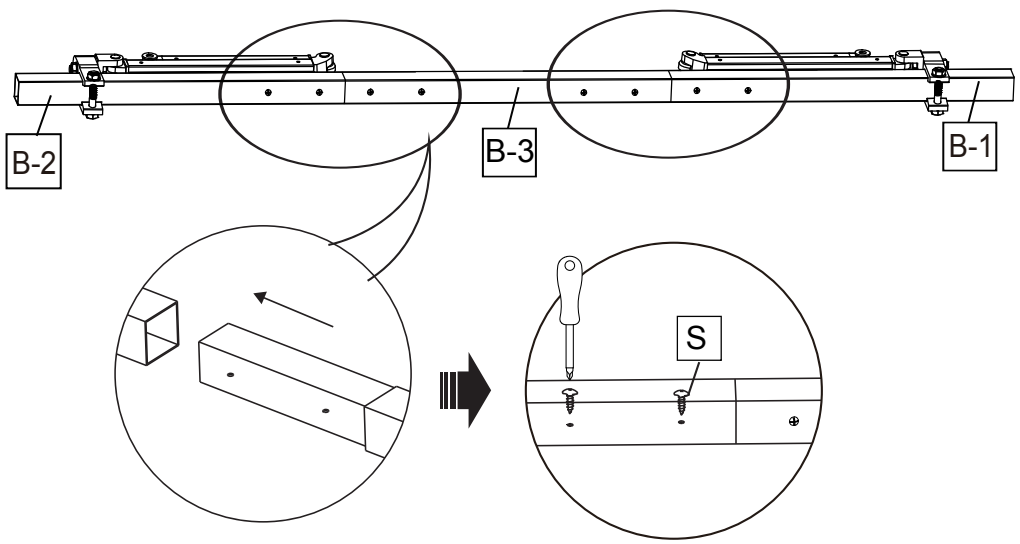


Connect steel square tubes with screws "S"


G X3	E X1	F X1


Plastic rope "G" should be through into fabric "E" and flap "F"

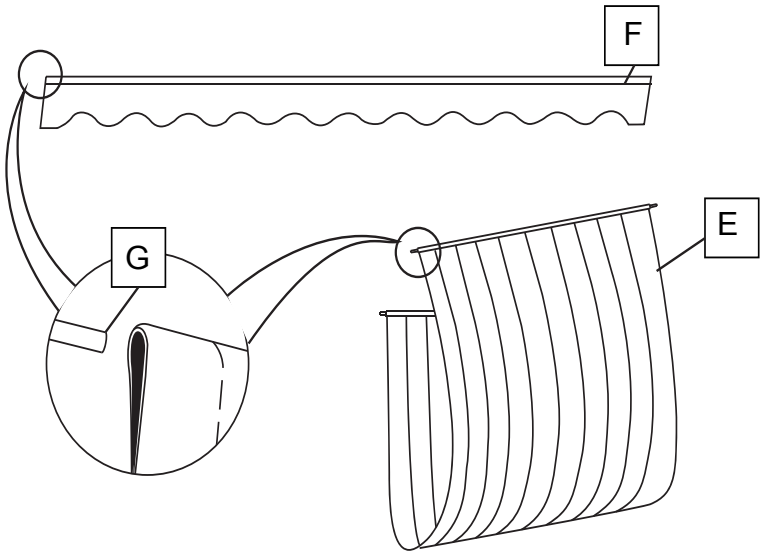

Thread the fabric into the groove of the tube

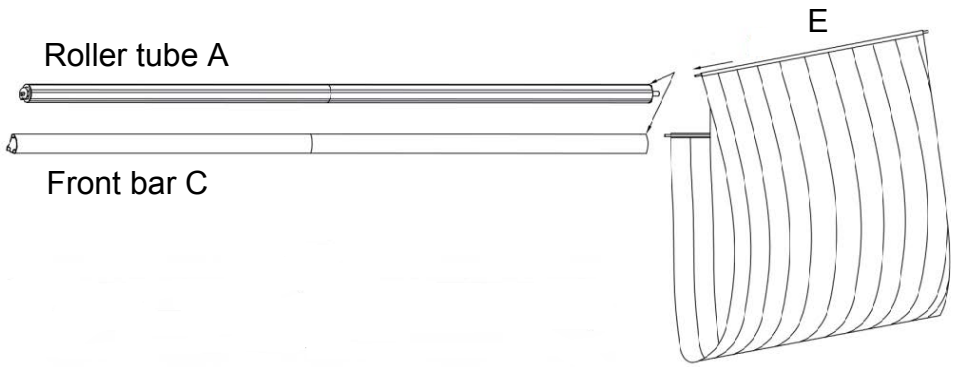


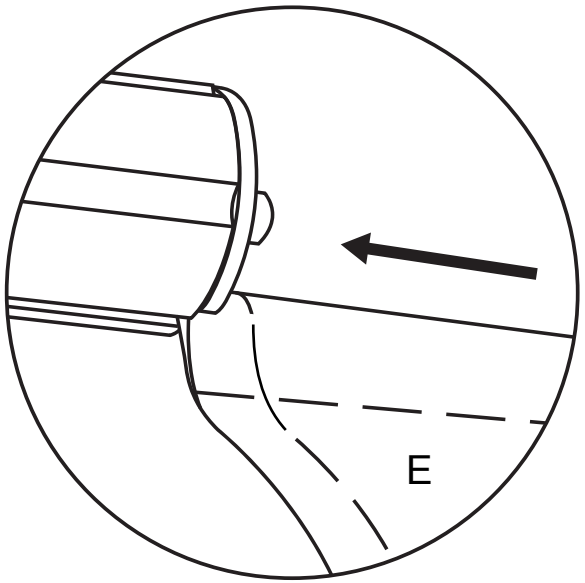

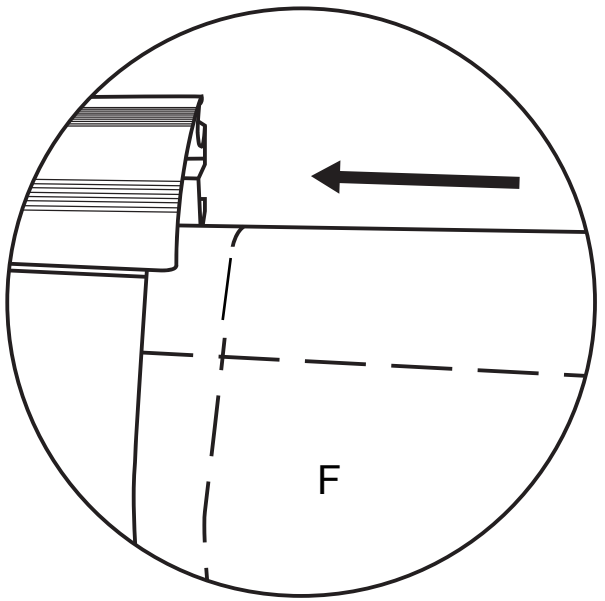


P X2


Install part "P" into the left and right groove of roller tube

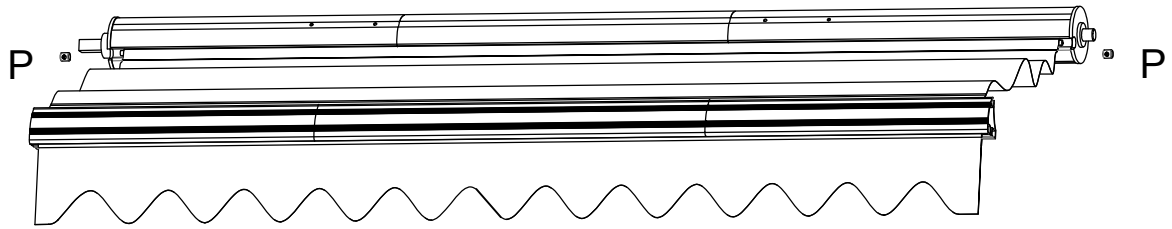


After installation, use a screwdriver to tighten the small screw on part "P"

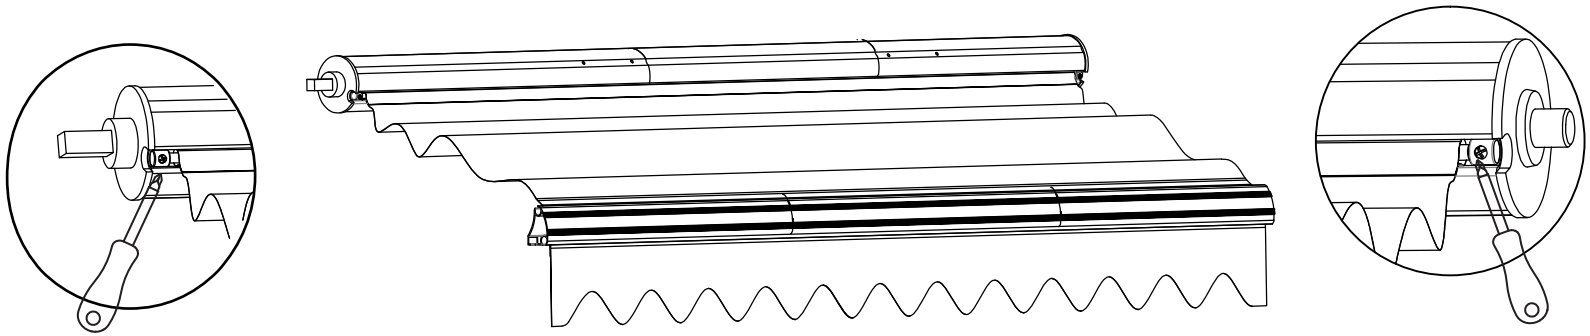



Roll the fabric as the arrow direct by hand

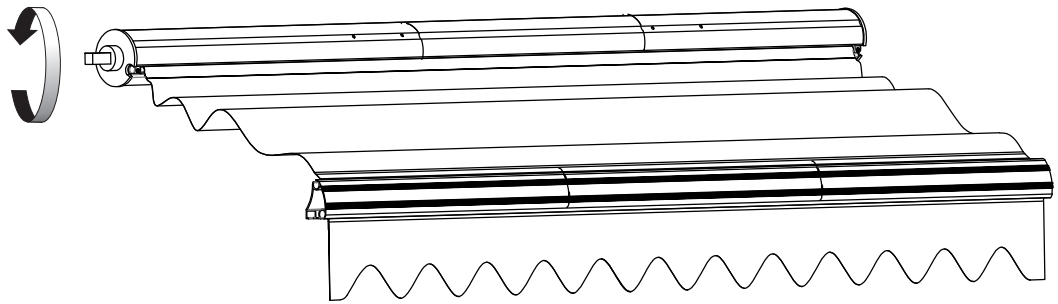



J X2	P X2	K-1 X1	K-2 X1

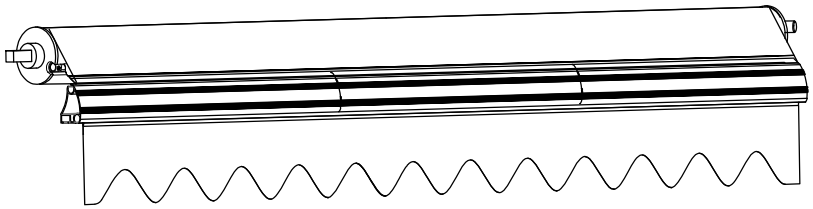

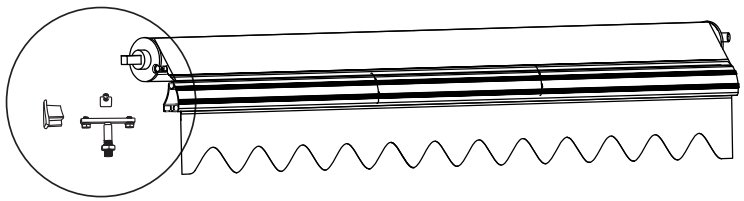

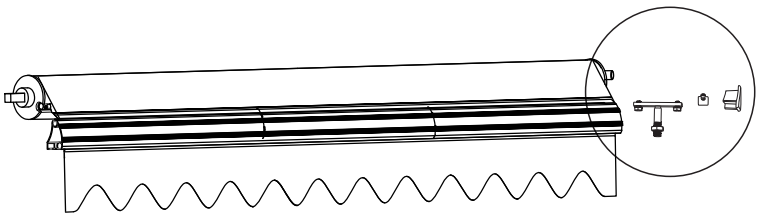

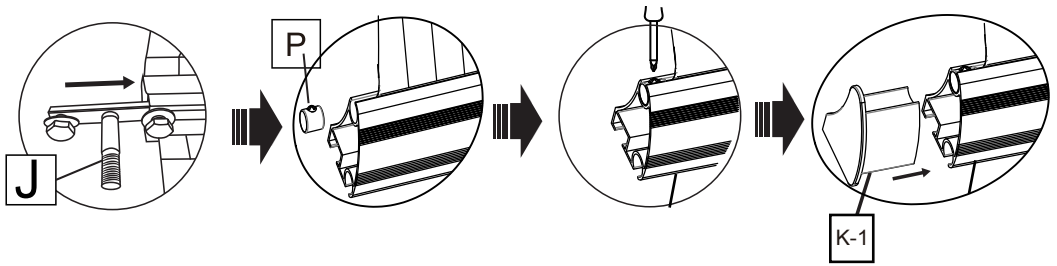

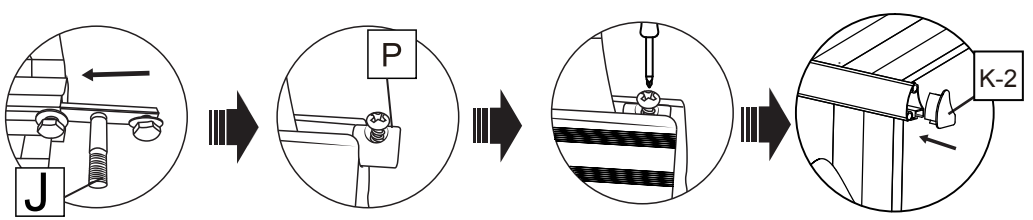

Put parts "J" and "P" into left groove of front tube, then tighten the screws on the "P"


Insert the plug "K-1" into front tube, a wooden hammer tool can be used to help with installation.


Put parts "J" and "P" into right groove of front tube, then tighten the screws on the "P"

Insert the plug "K-2" into front tube, a wooden hammer tool can be used to help with installation.

D-1 X1


D-2 X1



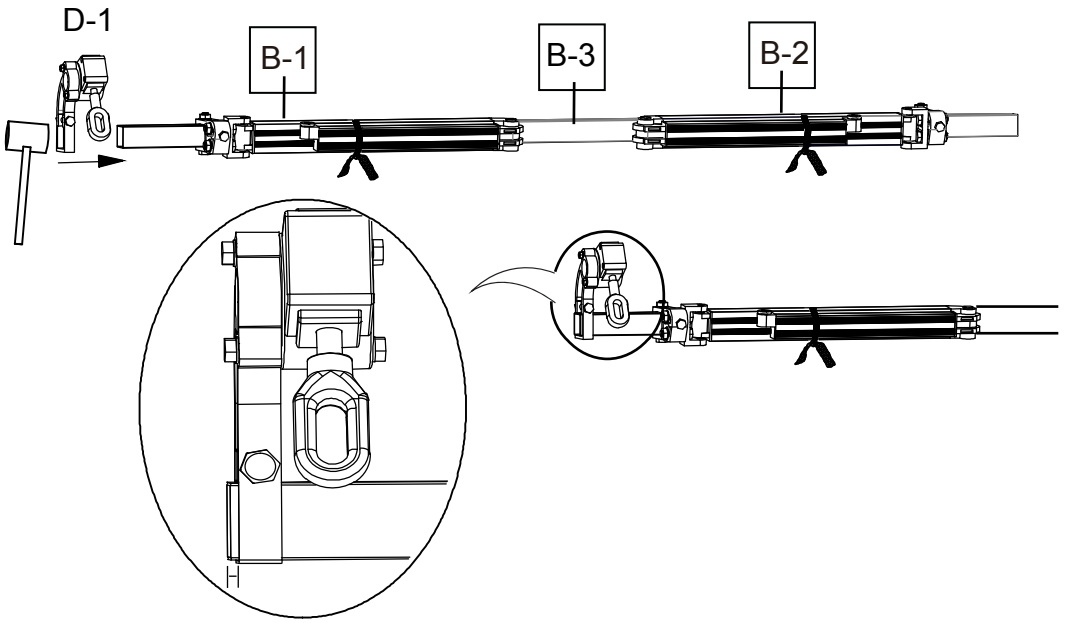



Put the square tube "B-1" through the part


"D-1". Square tube should be a little longer than "D-1" part

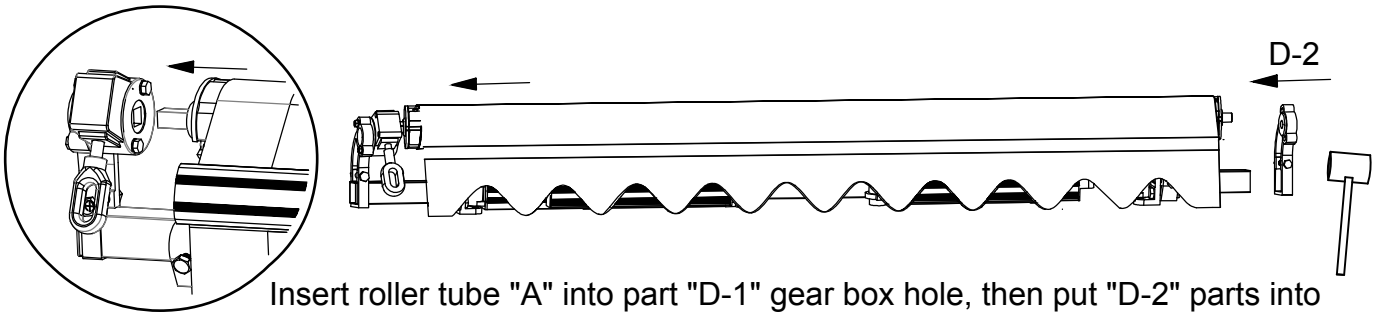


Insert roller tube "A" into part "D-1" gear box hole, then put "D-2" parts into "B-2" square tube, and make sure roller tube "A" also into the fixing hole meanwhile.

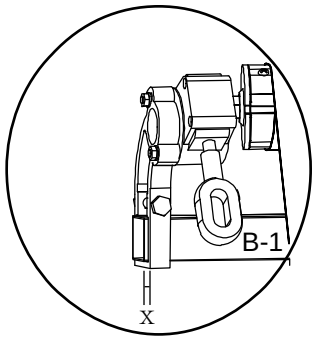

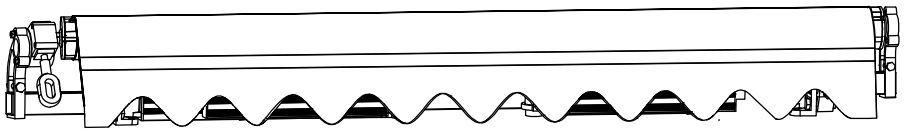

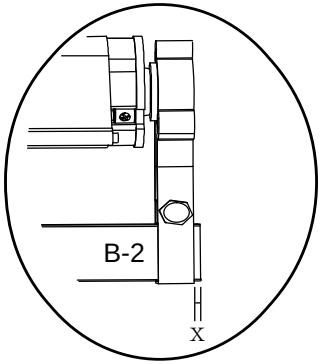


Square tube of "B-2 "should be a little longer than "D-2" parts.
Please make sure the distance of left side "X" and right side "X" is always same measurement.

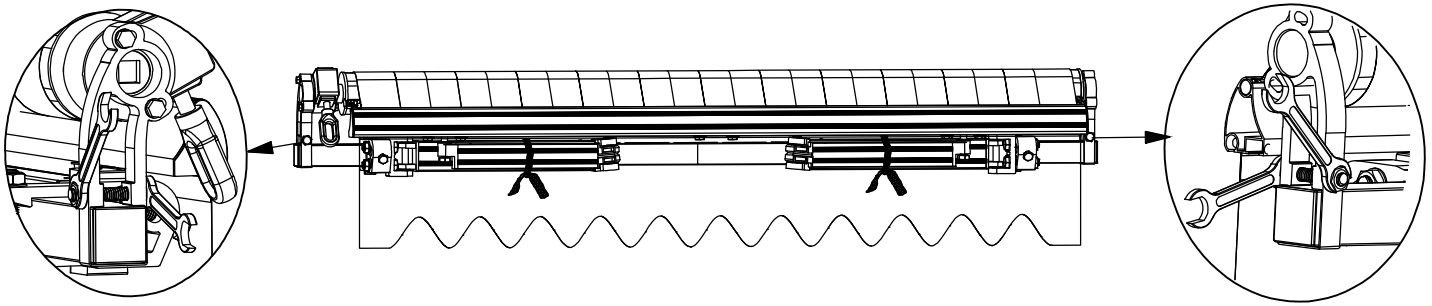

⚠ Please tighten all the screws on "D-1"&"D-2 "very much by wrench.
This step is very important!!!


L X2


14mm 17mm

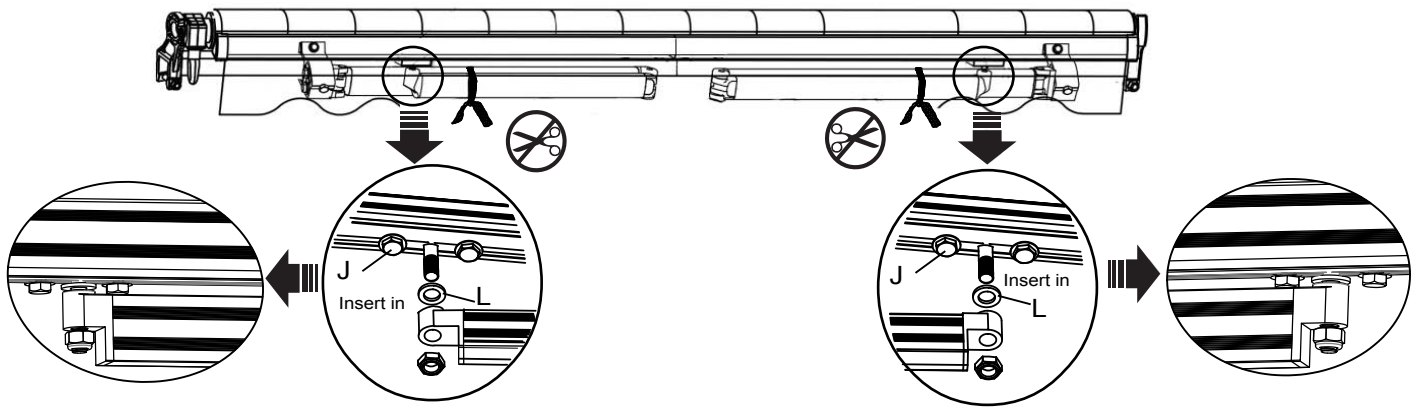

Insert Part "J" into the arm, then place the arm close to the square tube, keeping the arm parallel to tube "B" (this is an important step!!!)

Fully tighten the screw nuts

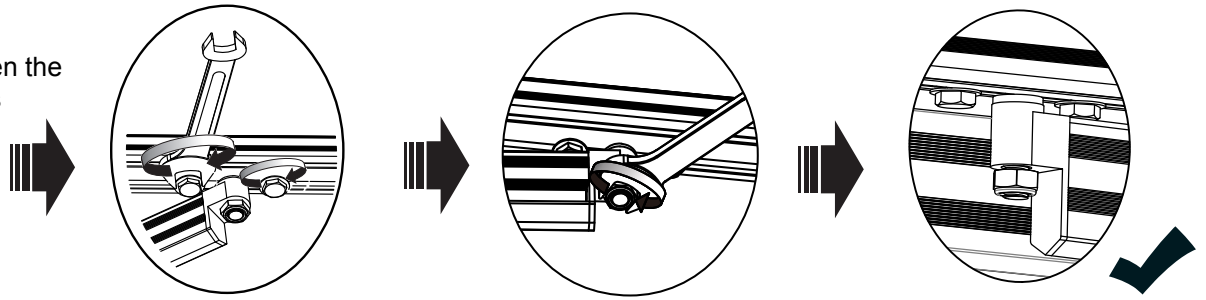

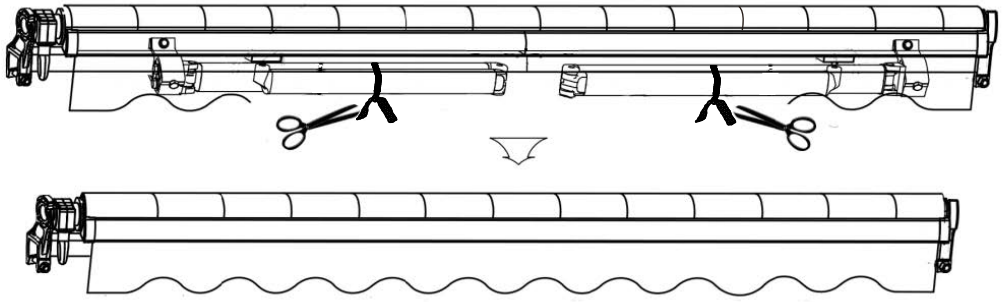

Untie the rope tied to the folding arm of the aluminum pipe, and the awning is assembled.

Specification

Product name	Material and surface treatment	Applicable wall type	Recommended installation height	Applicable weather
Retractable awning	Materials: Steel tube, aluminum alloy, plastic parts, polyester fabric. Service treatment: Tubes: spray paint and oxidation Cloth surface: PU, UV, waterproof	Reinforced concrete walls brick walls	2.5m-3m	The products are used to shield sunshine. Applicable when wind is under level 3. Not suitable for rainy weather.

Wall Mounting

Notes about Wall Mounting


This awning can be secured to reinforced concrete, brick.
Expansion bolt is for reinforced concrete, brick.
We recommend a professional installer for the safest and most secure installation.
Never attempt to secure the wall brackets to loose wall stones or any surfaces that are not absolutely firm!

⚠ CAUTION

Proper location of the brackets is the most important aspect of the awning installation. It is critical that you fasten all the mounting brackets to studs, joists, headers or other major structural components.

⚠WARNING

Failure to securely fasten all the brackets to the wall could result in the collapse of the awning and cause personal injury or death.

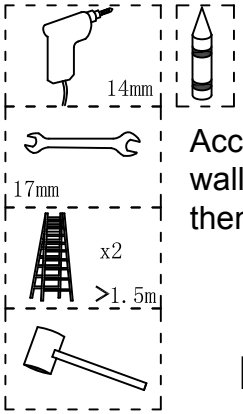


M X3


N X6

According to the size of the awning, find a suitable height on the wall. Mark the position of the wall bracket with a marker pen and then drill holes.

La=Lb=Lc=145cm

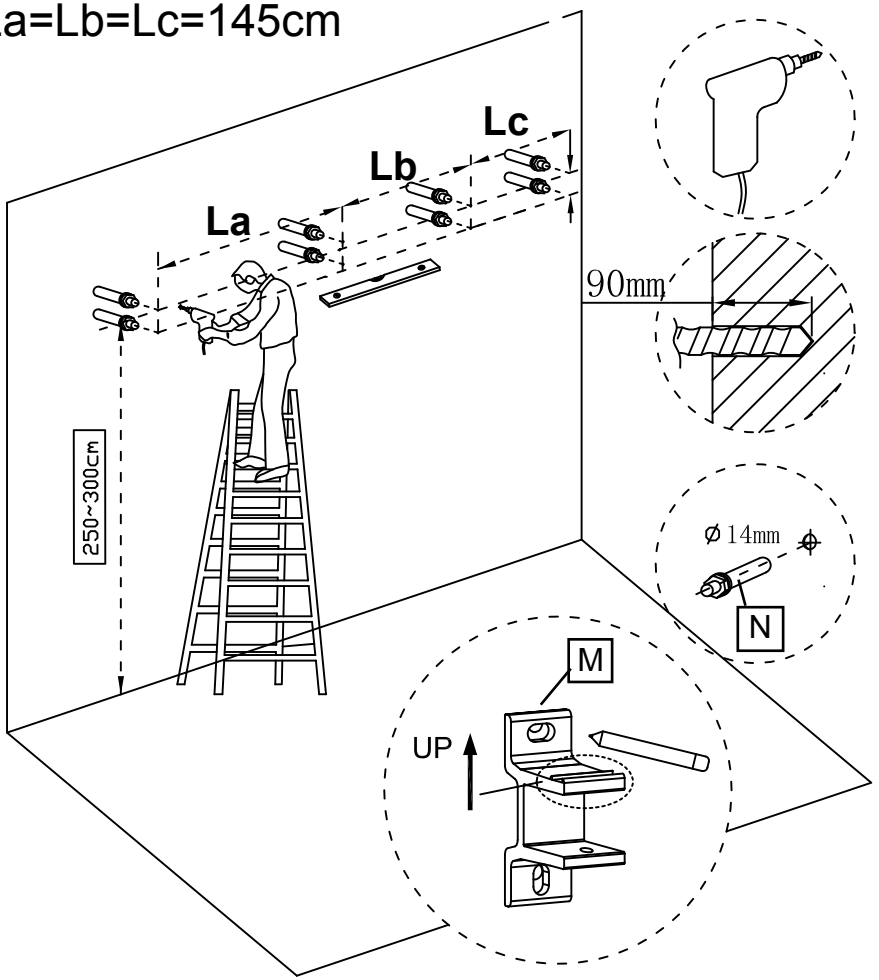



Install the expansion screws to secure the wall bracket firmly to the wall.

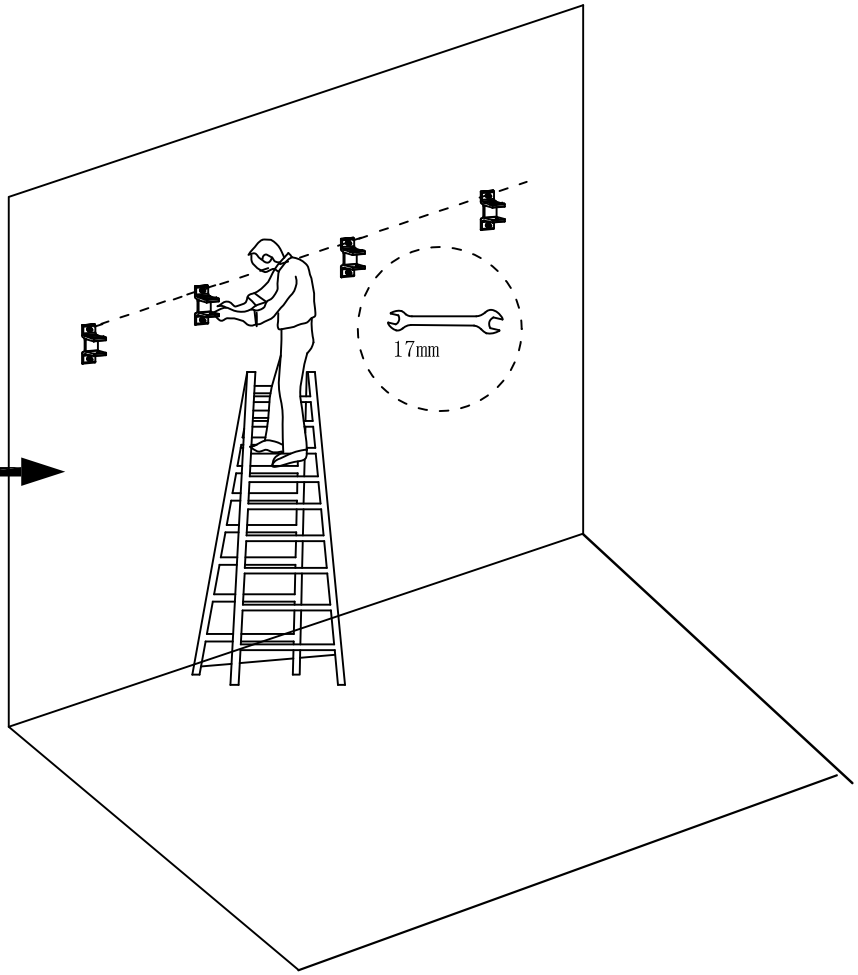



T X3


Install the awning on the wall bracket while tightening the fixing screws on the wall bracket.

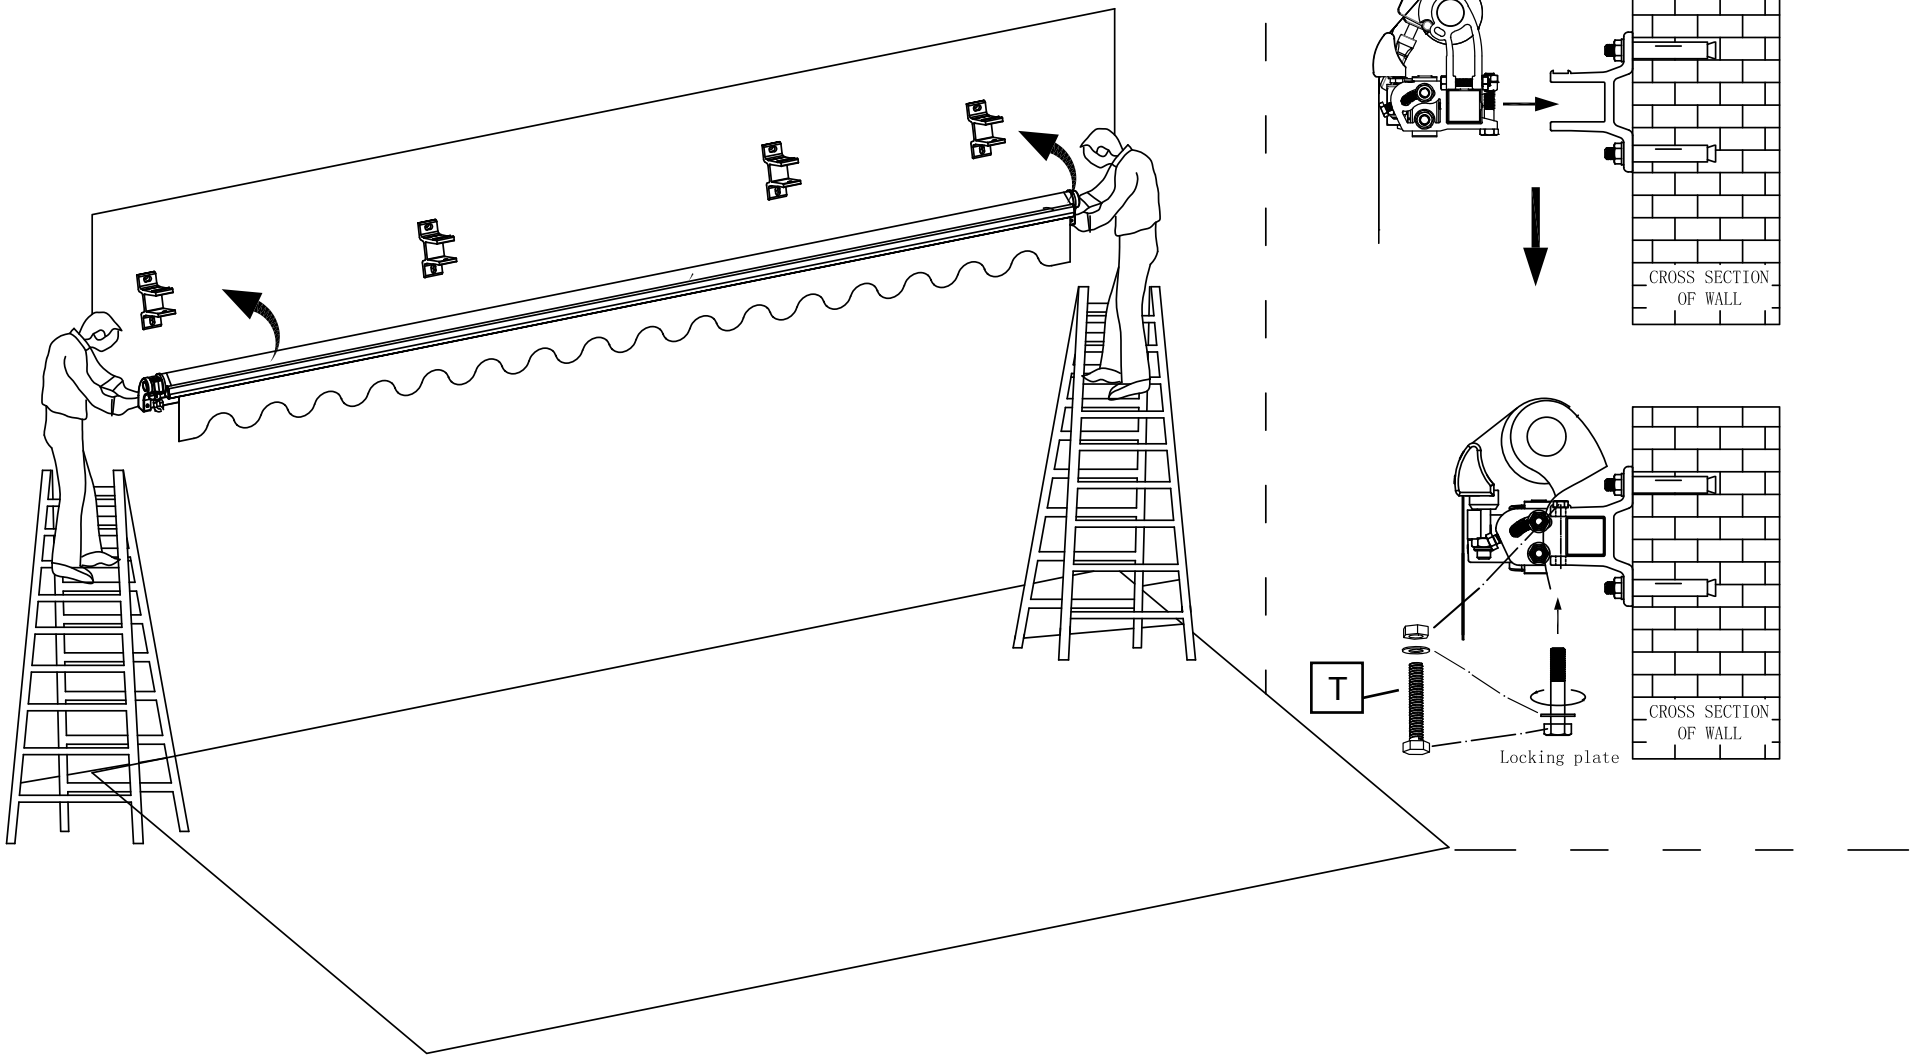


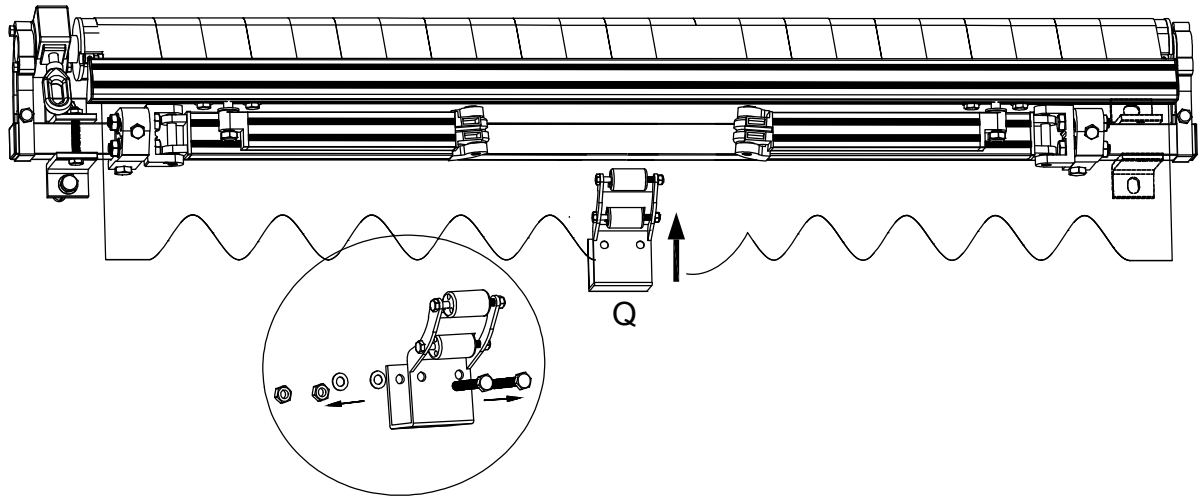

Q

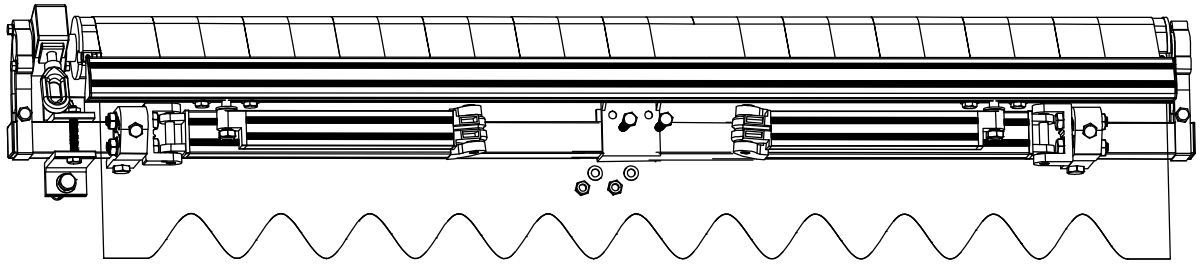


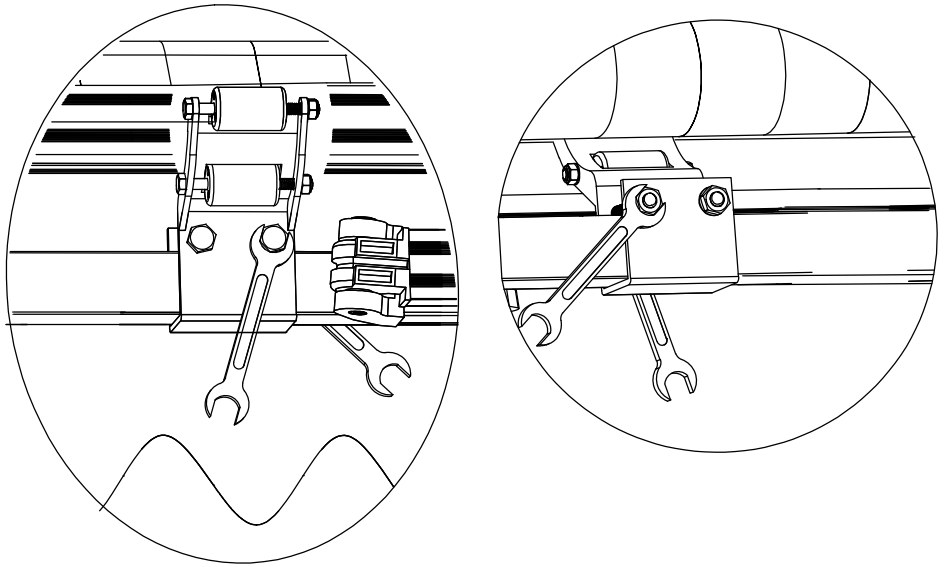

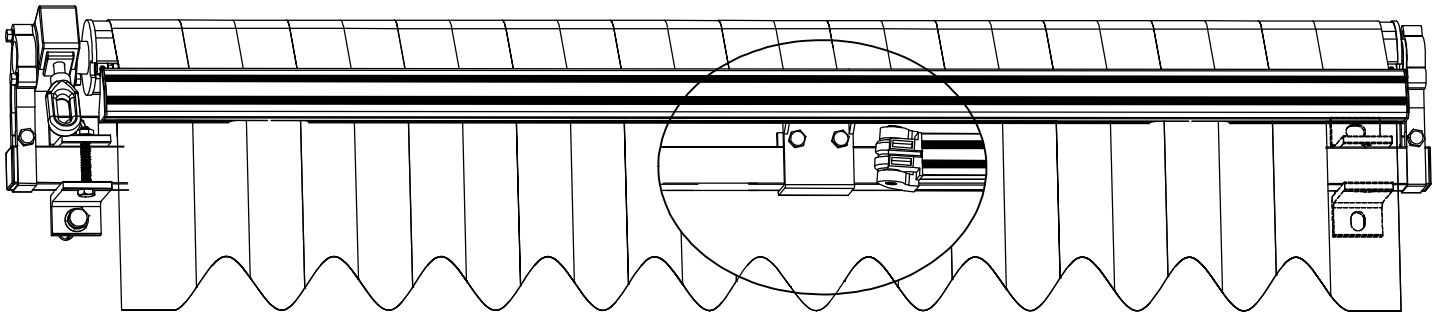

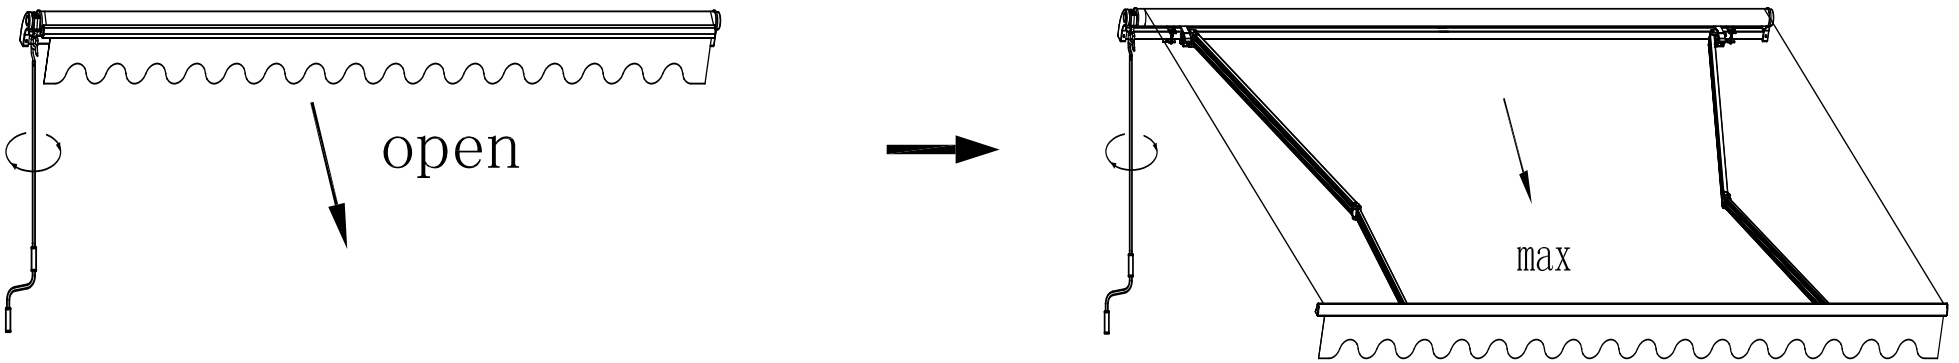
open
max

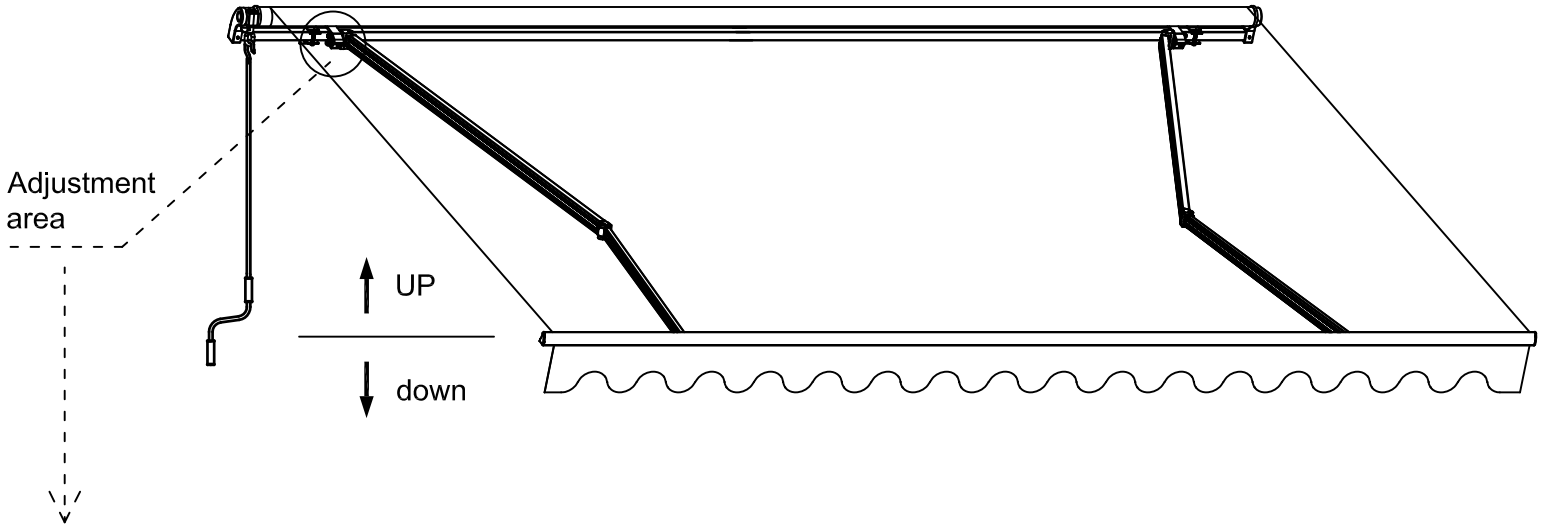

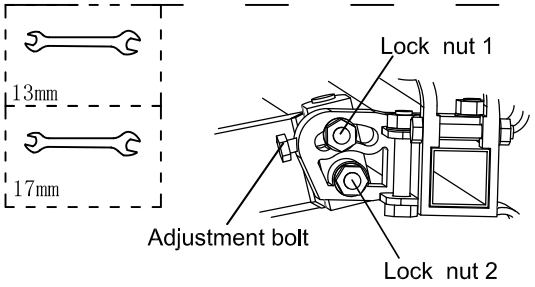

Adjustment

Front Bar UP →	Lock nut 1, loosen Lock nut 2, loosen →	Adjustment bolt fasten →	Lock nut 1, fasten Lock nut 2, fasten
Front Bar Down →	Lock nut 1, loosen Lock nut 2, loosen →	Adjustment bolt loosen →	Lock nut 1, fasten Lock nut 2, fasten