

Instructions for use: The cabinet legs should be designed to avoid lateral stress. When moving, please lift vertically off the ground. Dragging may cause loose connectors, affecting stability and service life

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.

BEFORE STARTING


Before Using Product

- Read each step carefully before starting.It is very important thateach step is performed in the correct order.If these steps are not followed in sequence,assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used,preferably on a carpet,or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process,we suggest you keep a lite tightness for all the screws during assembly.After the whole product is assembled, firmly tighten all the screws.

⚠ WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly,keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted,not dragged or pushed.Failure to do so could cause instability,product collapse,and/or serious injury.
- Be careful when using power tools to assemble your furniture.Power tools may strip or damage the parts.

QUICKFIT

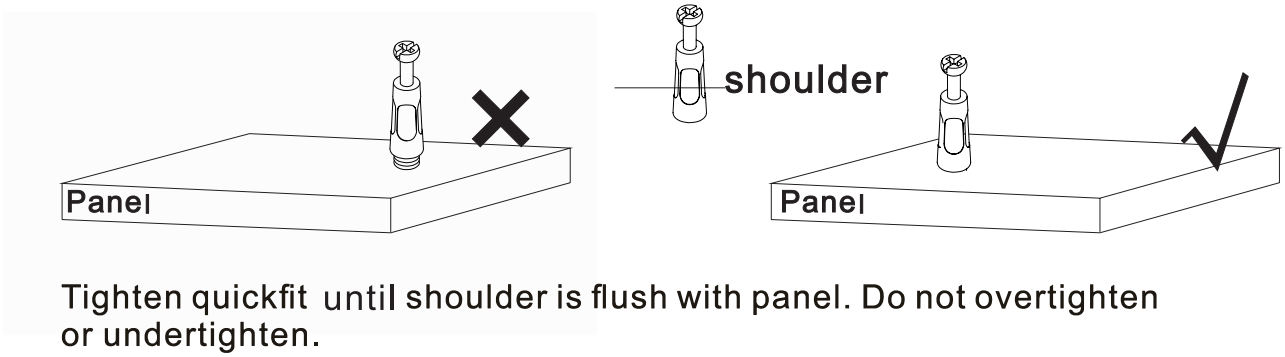


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

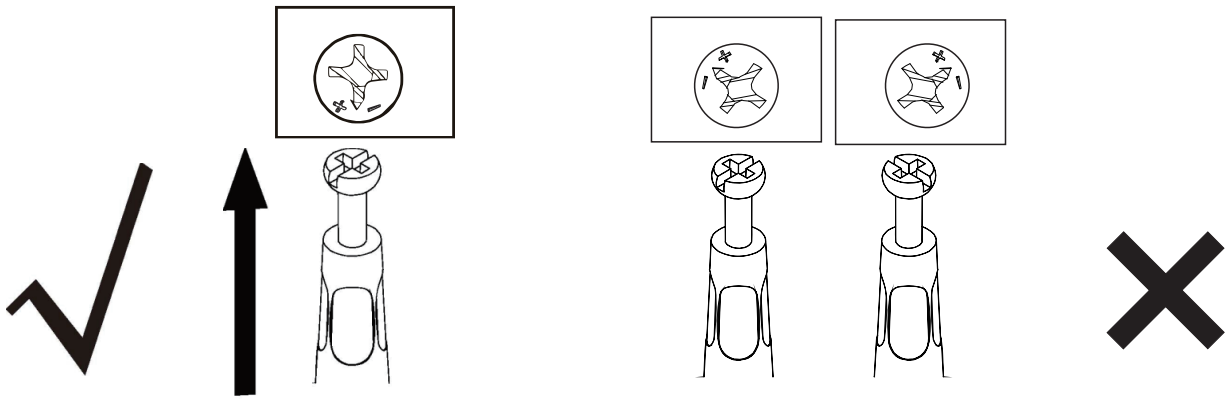


CORRECT WRONG

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

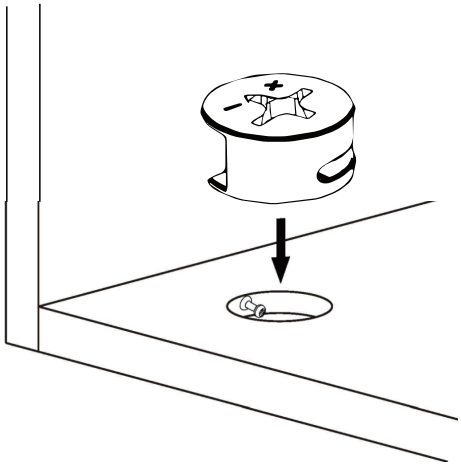


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

















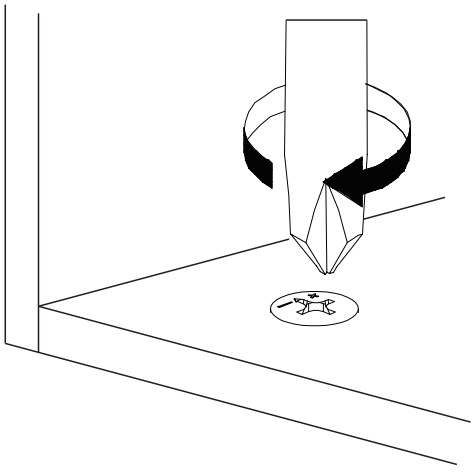


Turn cam lock clockwise to tighten.







PART LIST

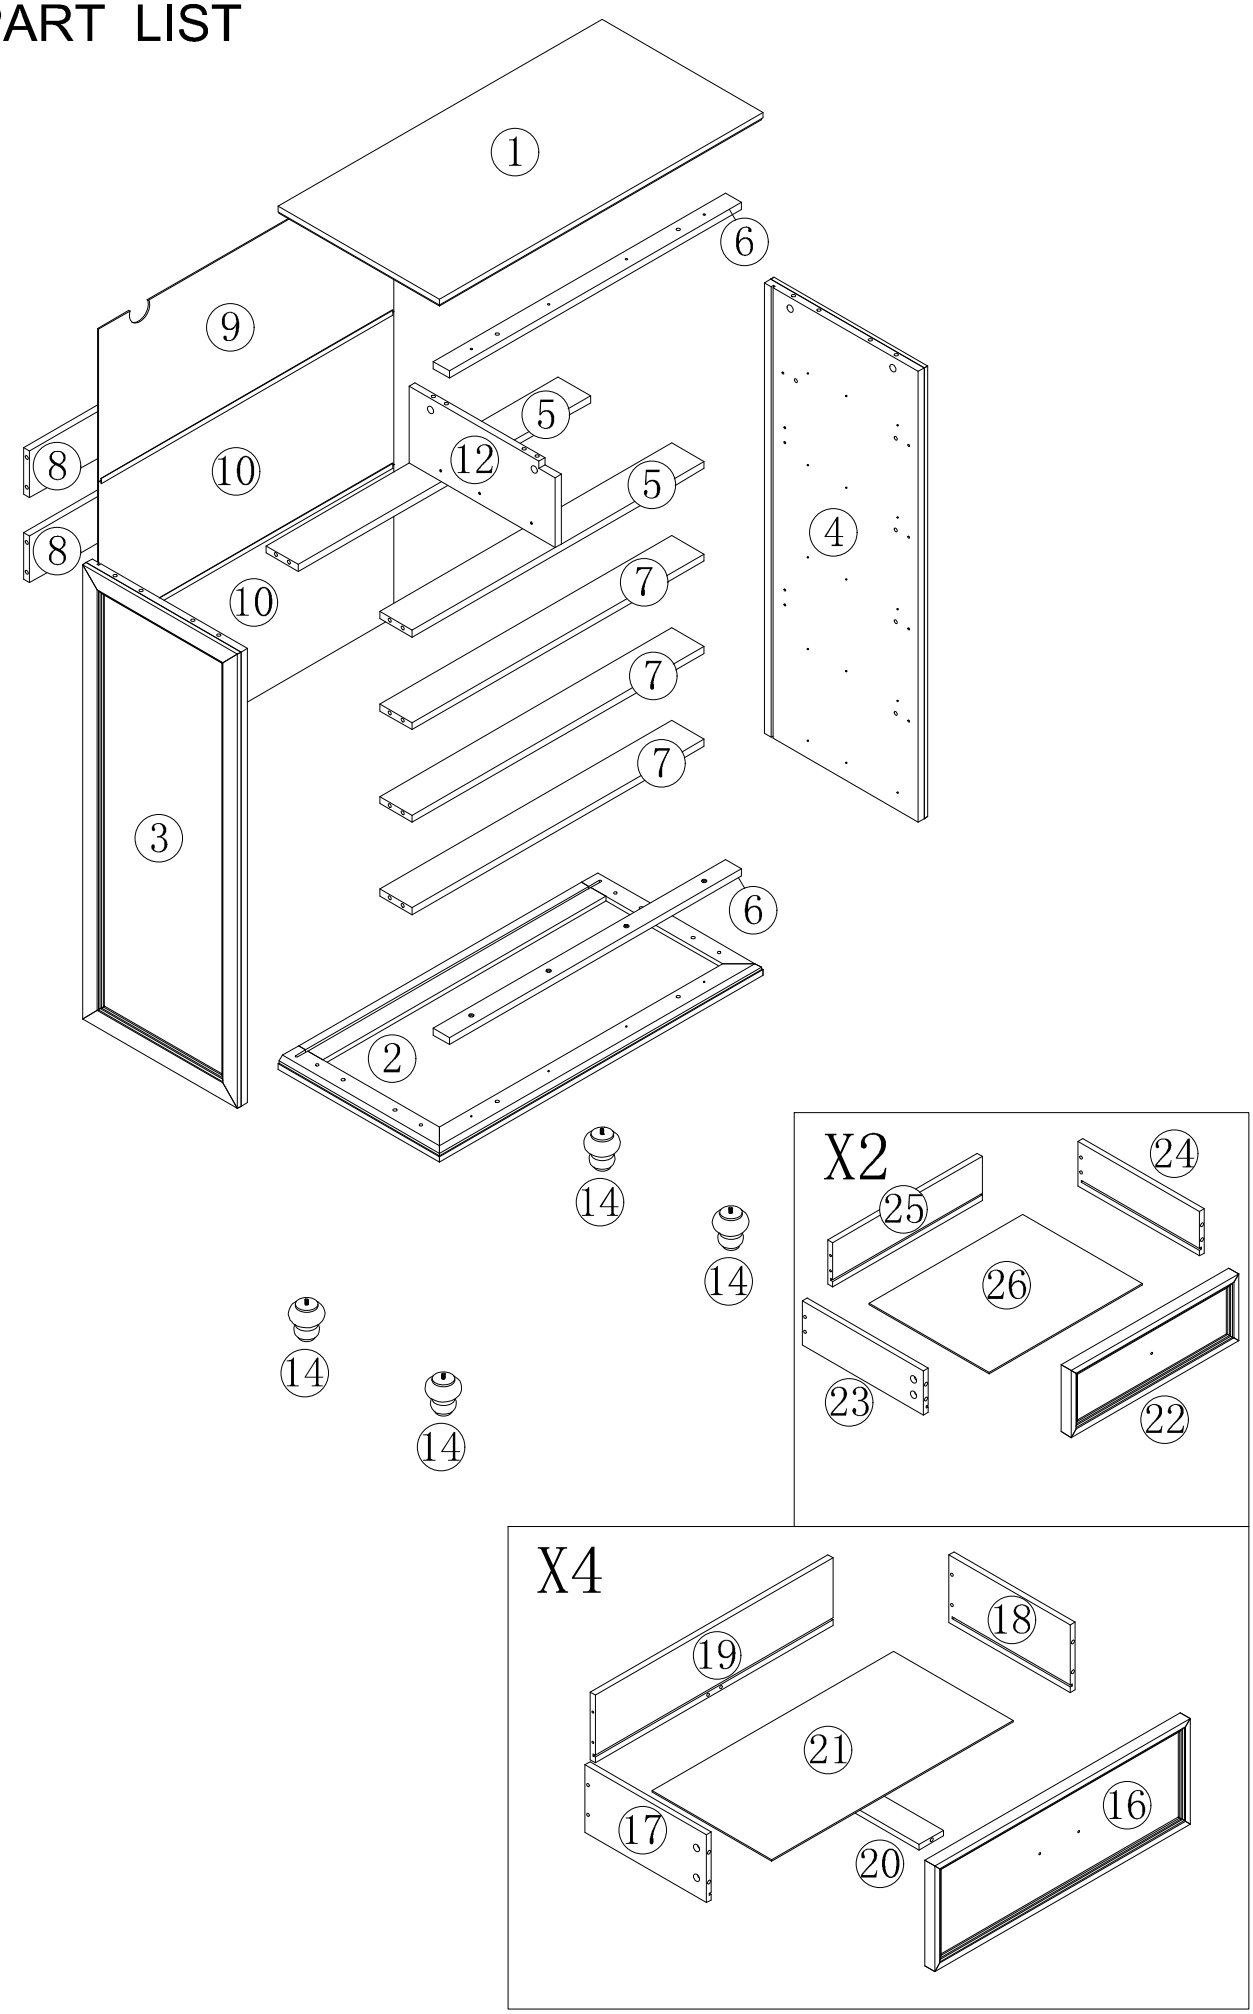
1
6
9
5
8
10
12
5
8
4
7
10
7
7
3
6
2
14
14
14
14
X2
24
25
26
23
22
X4
18
19
21
16
17
20









PART LIST

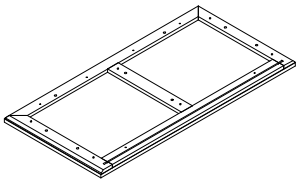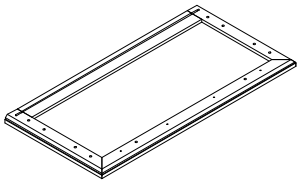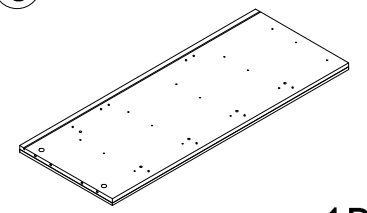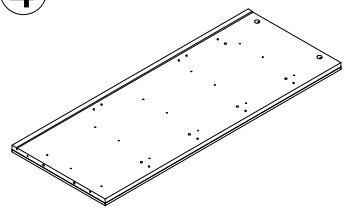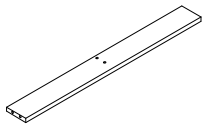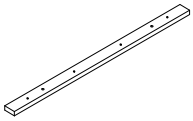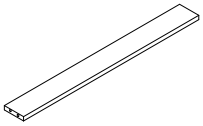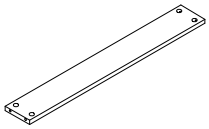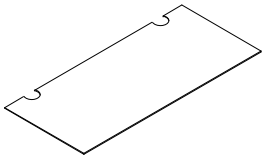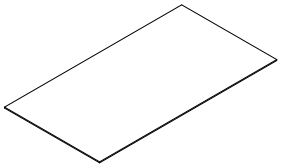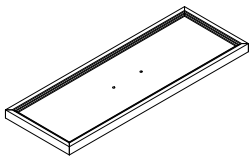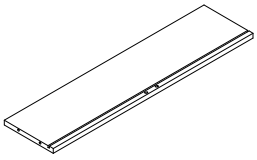①  1PC	②  1PC	
③  1PC	④  1PC	⑤  2PCS
⑥  2PCS	⑦  3PCS	⑧  2PCS
⑨  1PC	⑩  2PCS	⑫  1PC
⑭  4PCS	⑯  4PCS	⑰  4PCS
⑱  4PCS	⑲  4PCS	⑳  4PCS


PART LIST

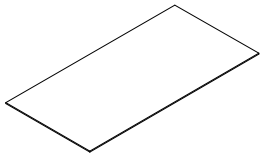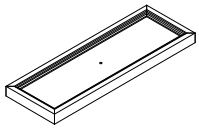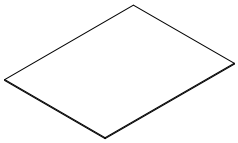
21  4PCS	22  2PCS	23  2PCS
24  2PCS	25  2PCS	26  2PCS

HARDWARE LIST

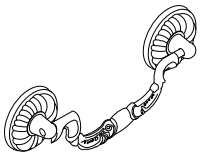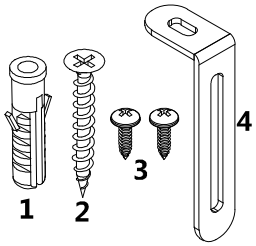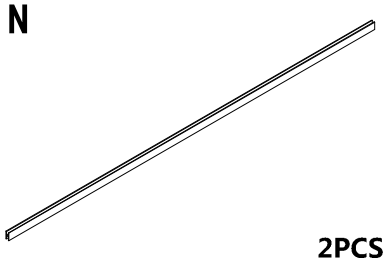A  ϕ6X35 (52+3)PCS	B  ϕ15X9.5 (52+3) PCS	C  ϕ8X30 (26+2)PCS
D  ϕ5X40 (38+3)PCS	E  4PCS	F  ϕ4X8 (10+1)PCS
G  ϕ3X15 (12+1)PCS	H  (12+1)PCS	I  ϕ4X30 (8+1)PCS
J  6SET	K  ϕ3X12 (69+3)PCS	L  ϕ4X12 3PCS
M  2PCS	N  2PCS	O  2PCS
 3PCS	 1PC	


J X6SET



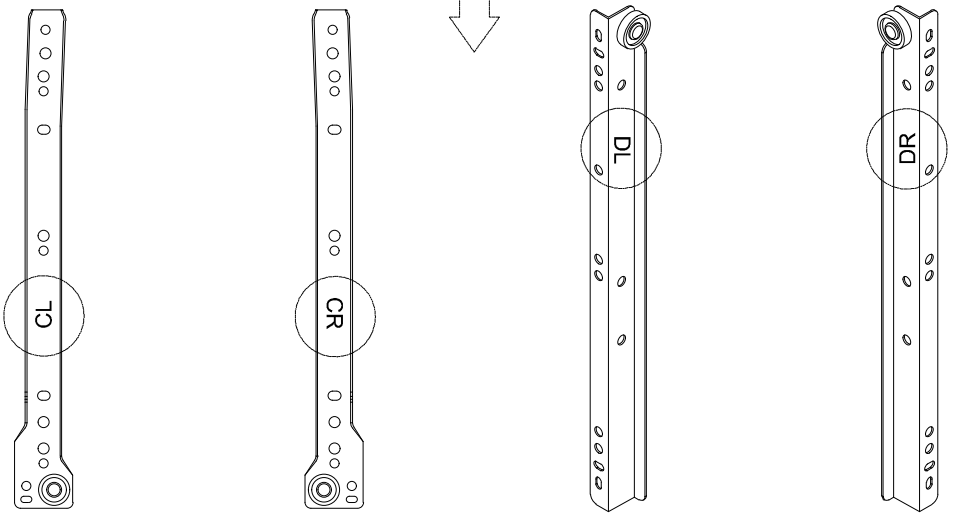


CL CR DL DR


E

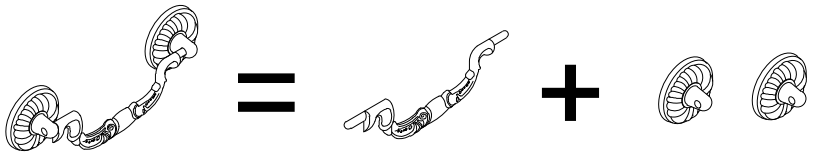


K




L

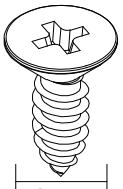



M =

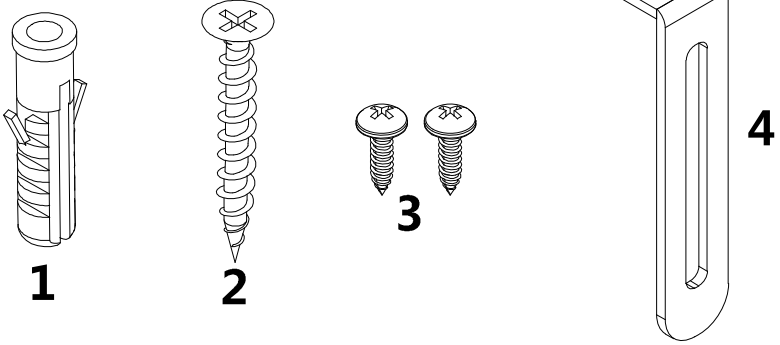



STEP 1

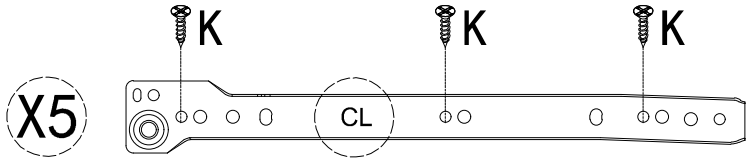

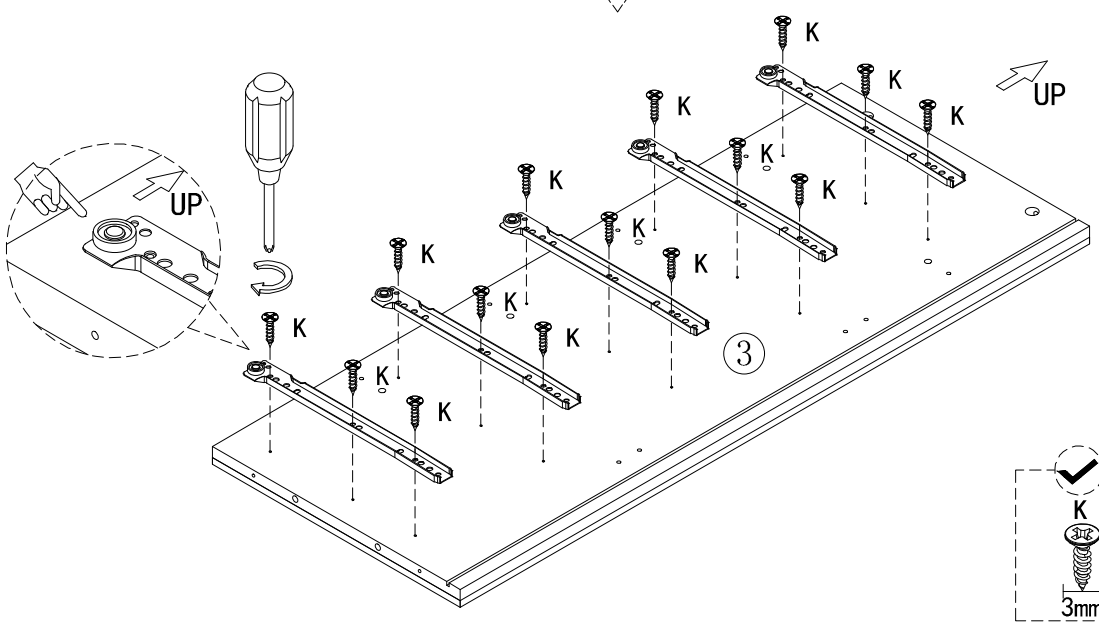

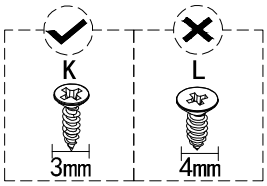


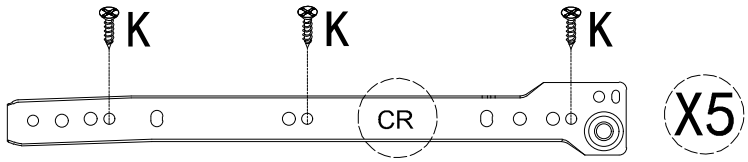


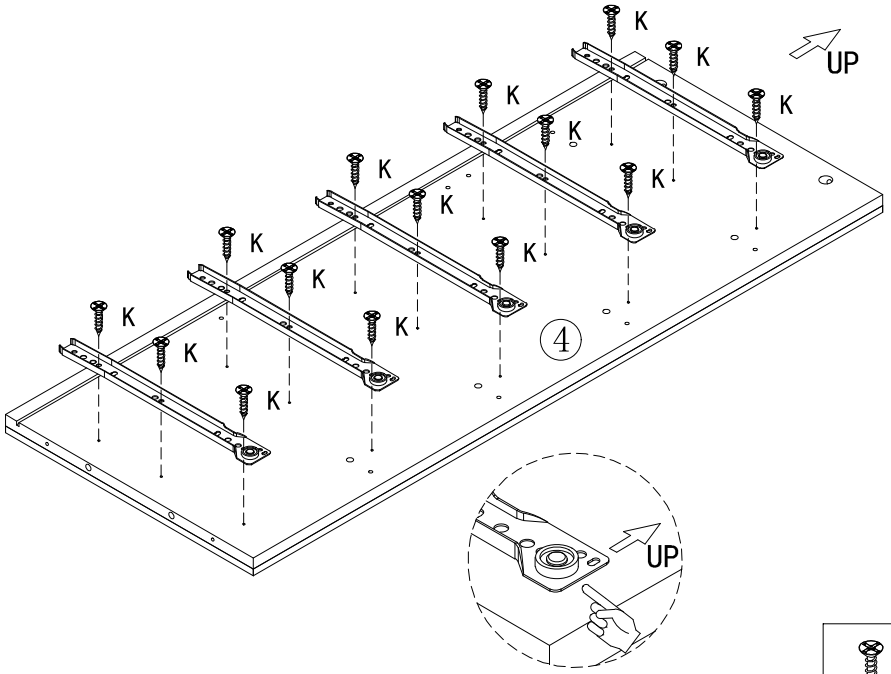

	K X 30PCS


STEP 2

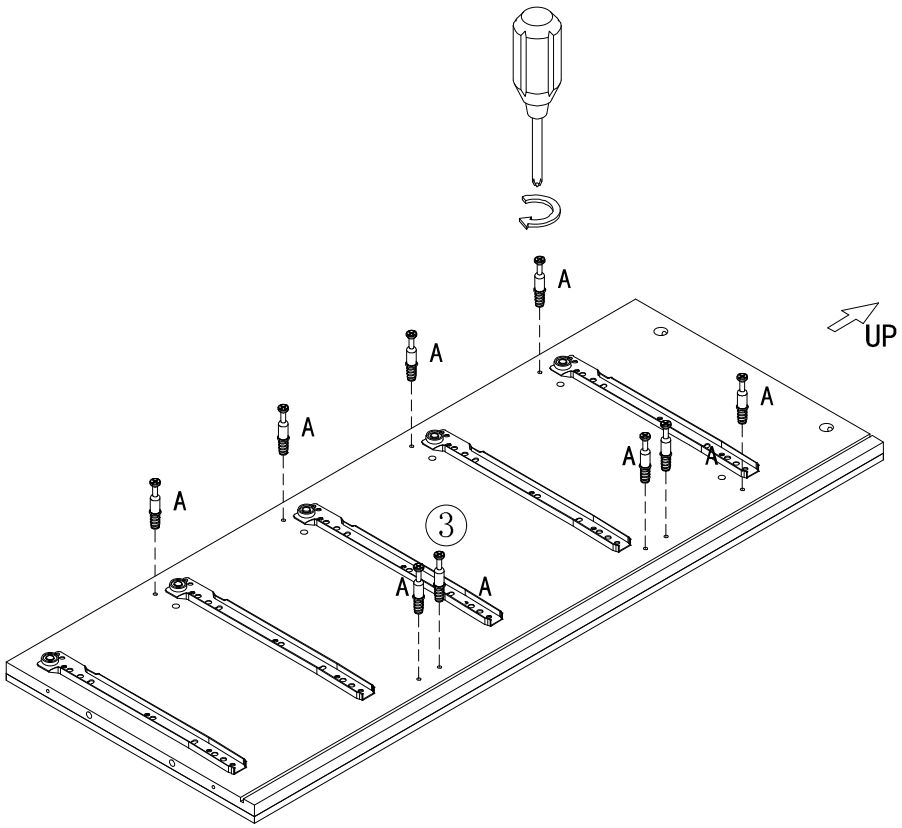


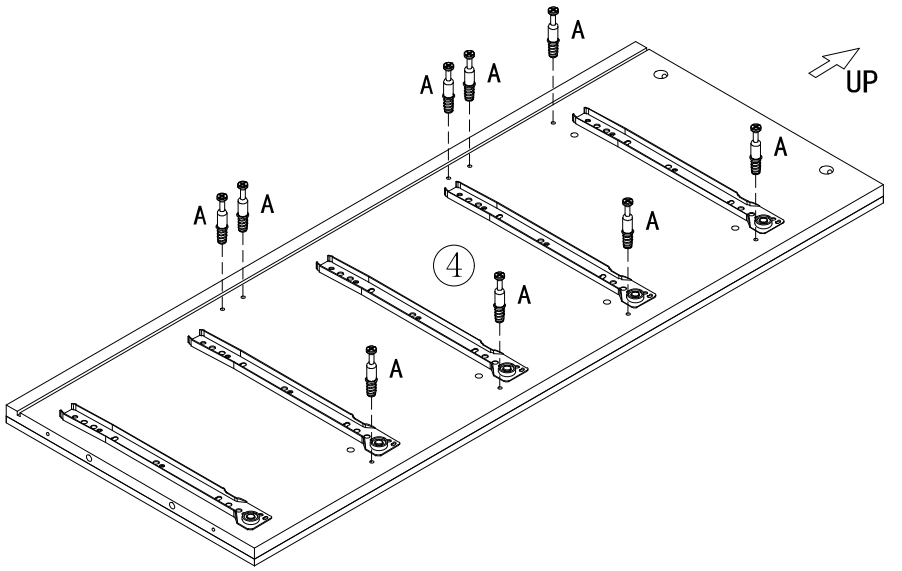

	A X 18PCS


STEP 3

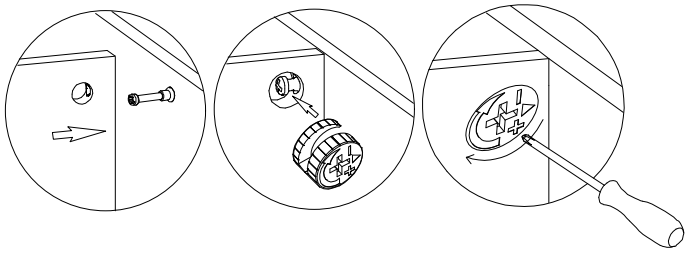


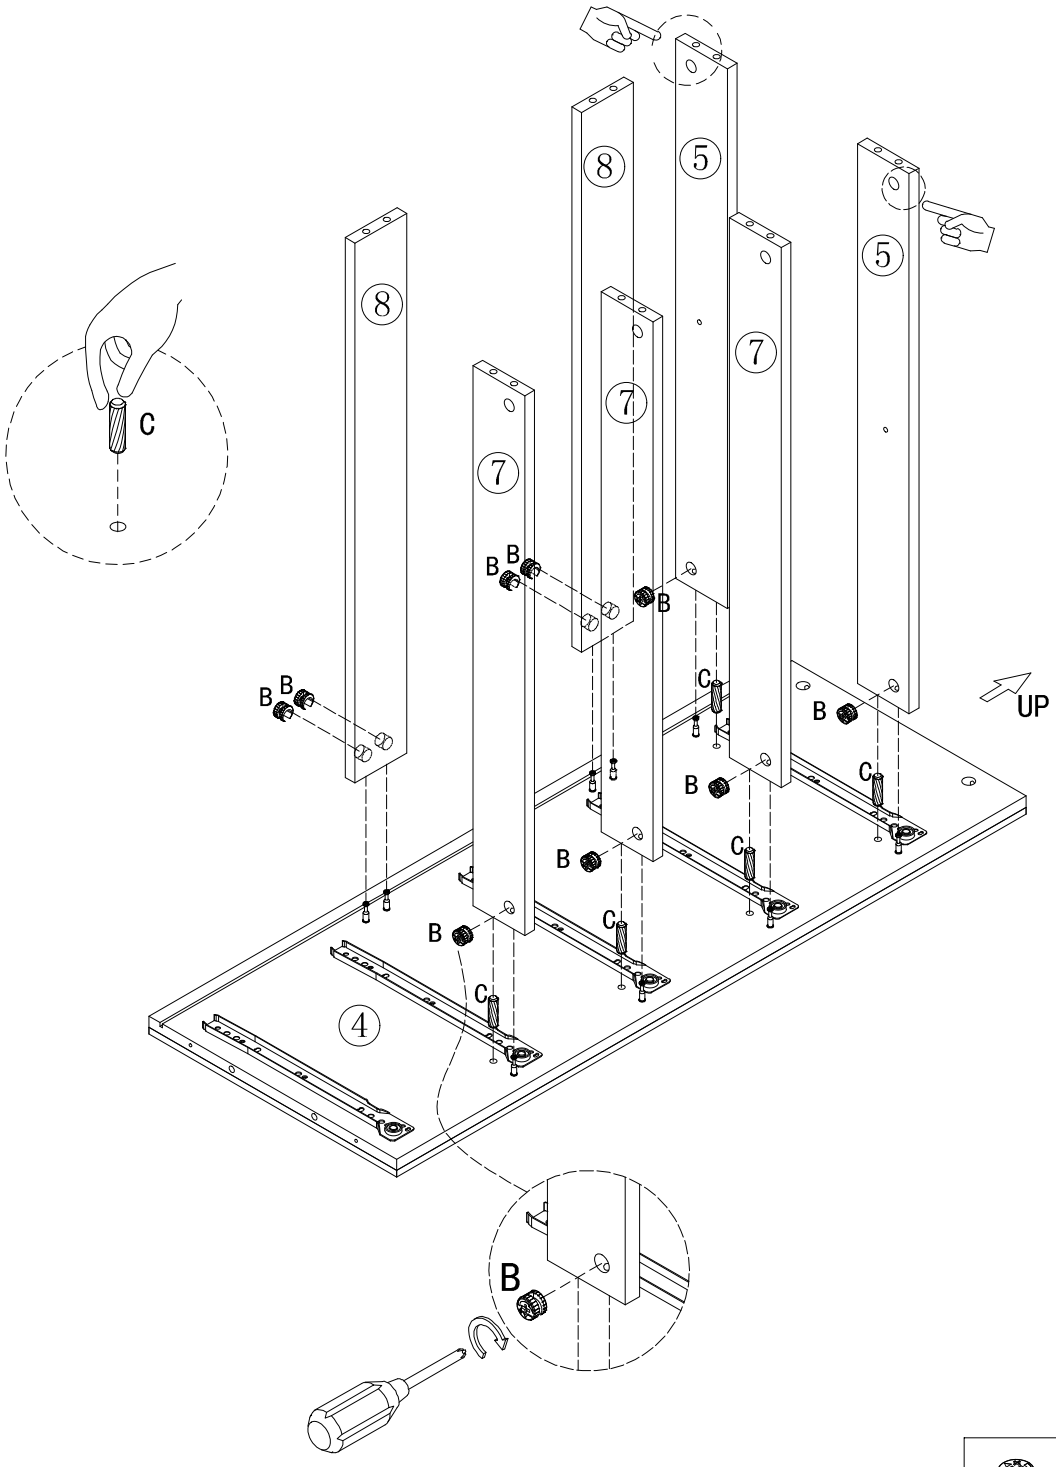


	B X 9PCS
	C X 5PCS

STEP 4

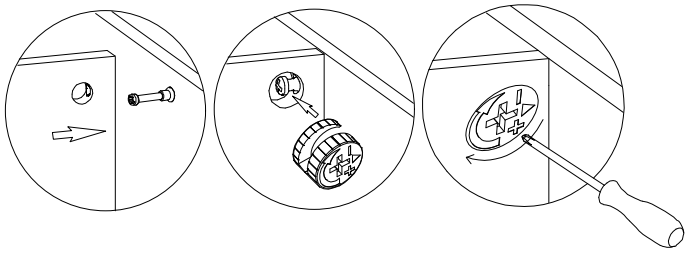


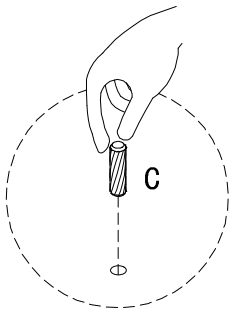


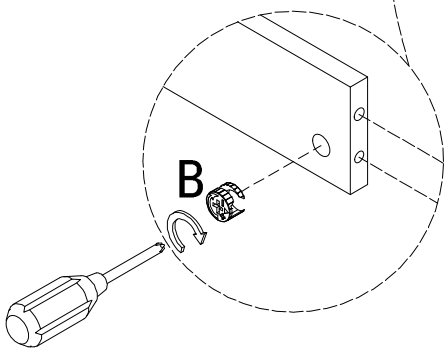

	B X 9PCS
	C X 5PCS

STEP 5

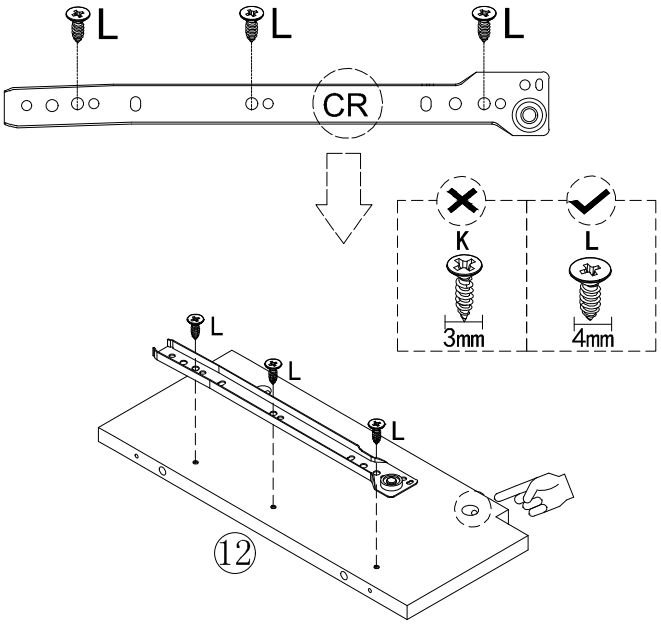


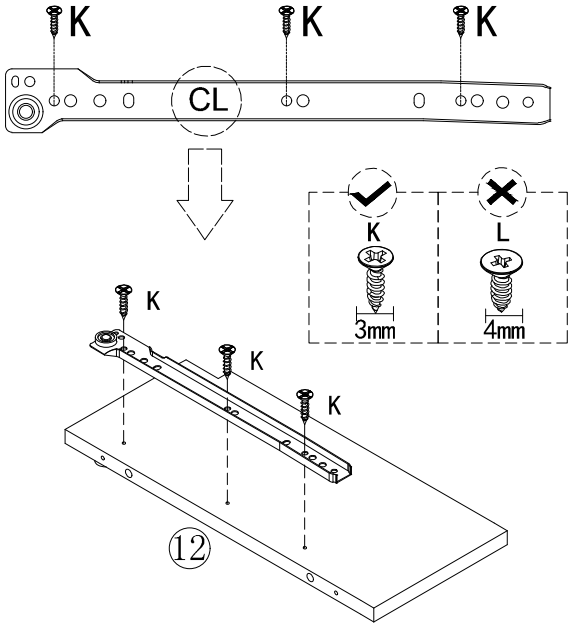




	K X 3PCS
	L X 3PCS

STEP 6

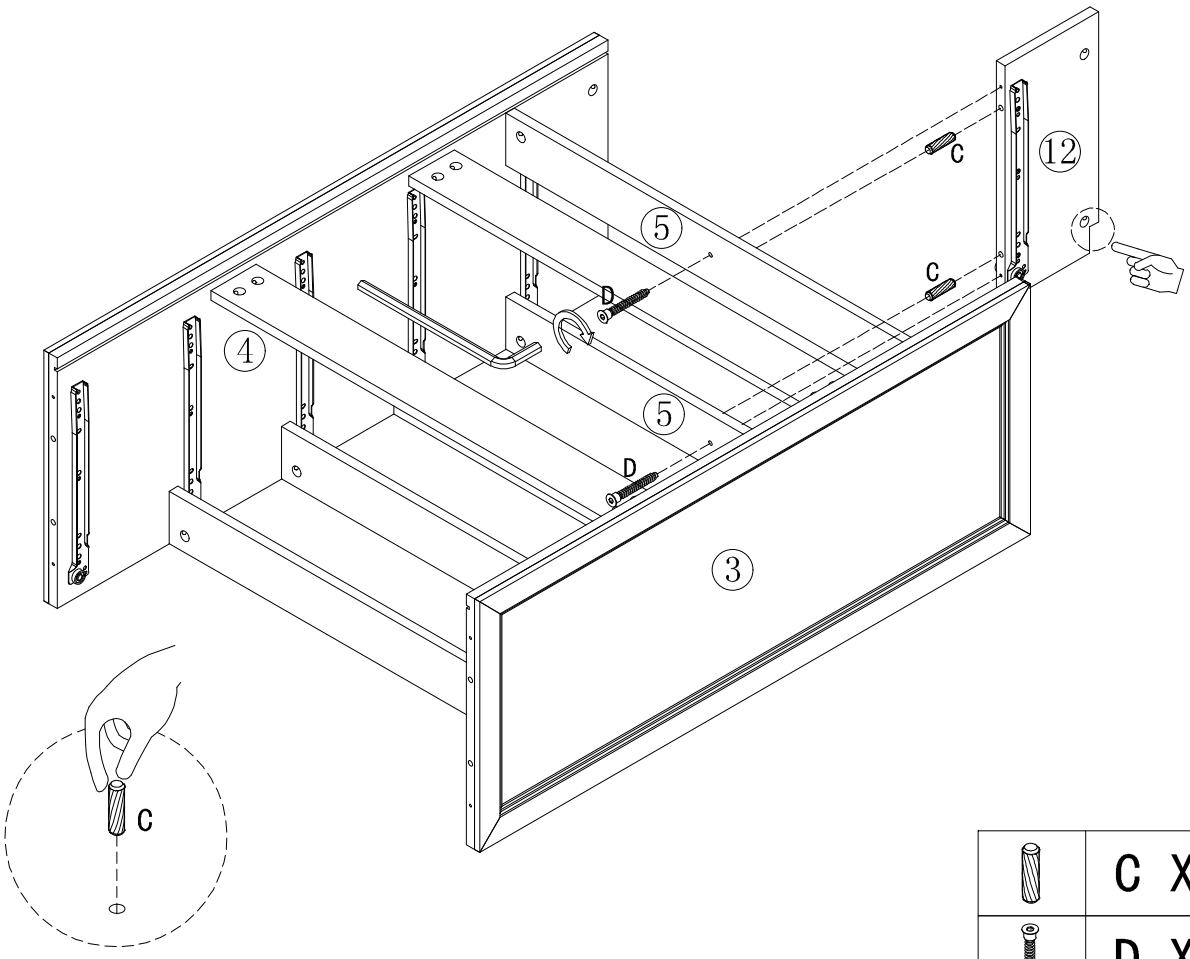



	C X 2PCS
	D X 2PCS

STEP 7

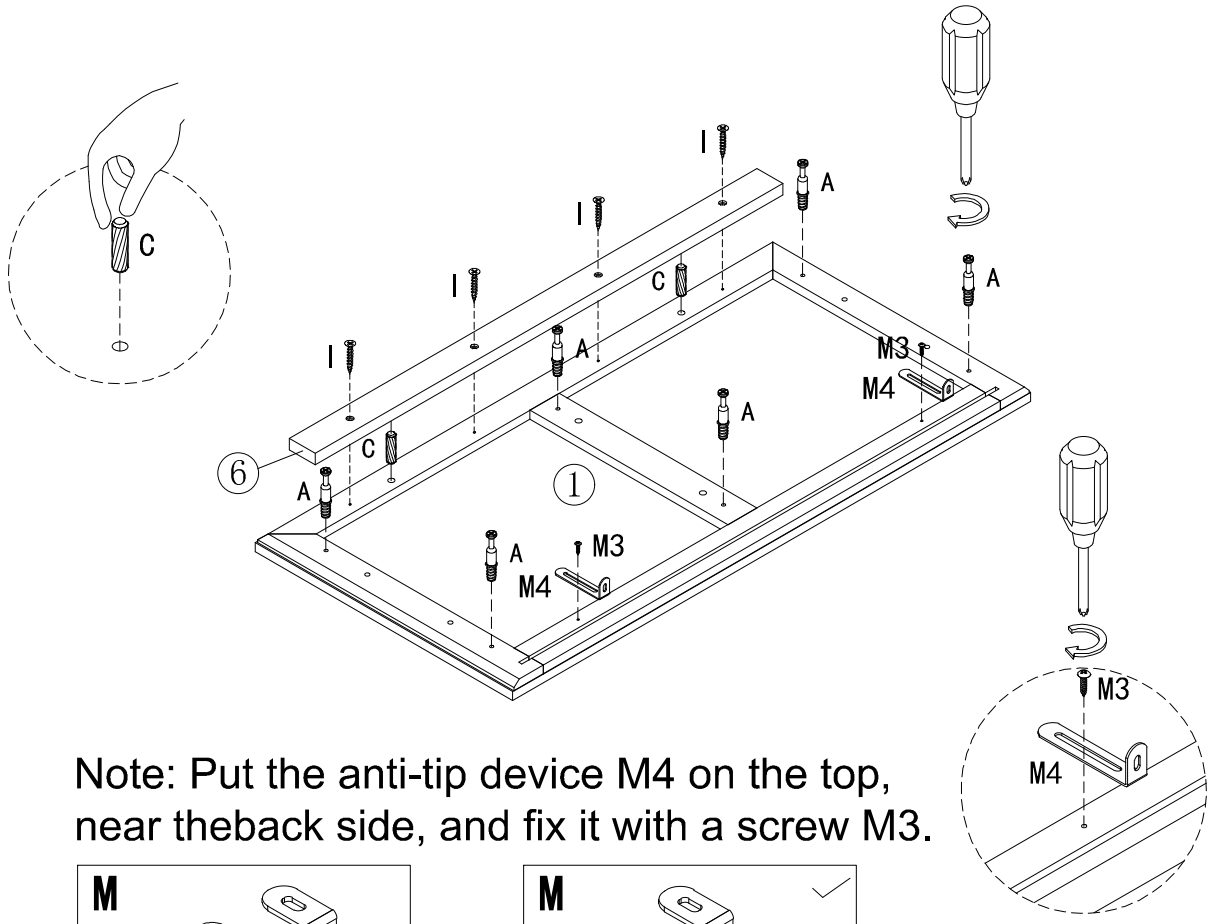


Note: Put the anti-tip device M4 on the top, near theback side, and fix it with a screw M3.

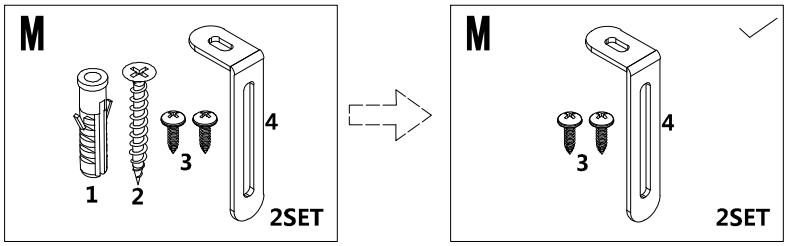

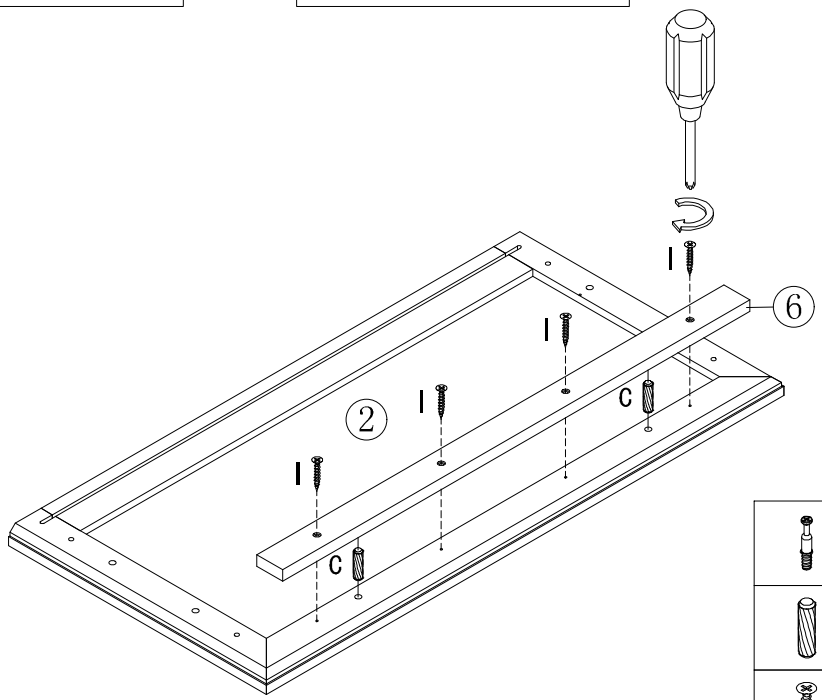


	A X 6PCS
	C X 4PCS
	I X 8PCS
	M X 2SET

STEP 8

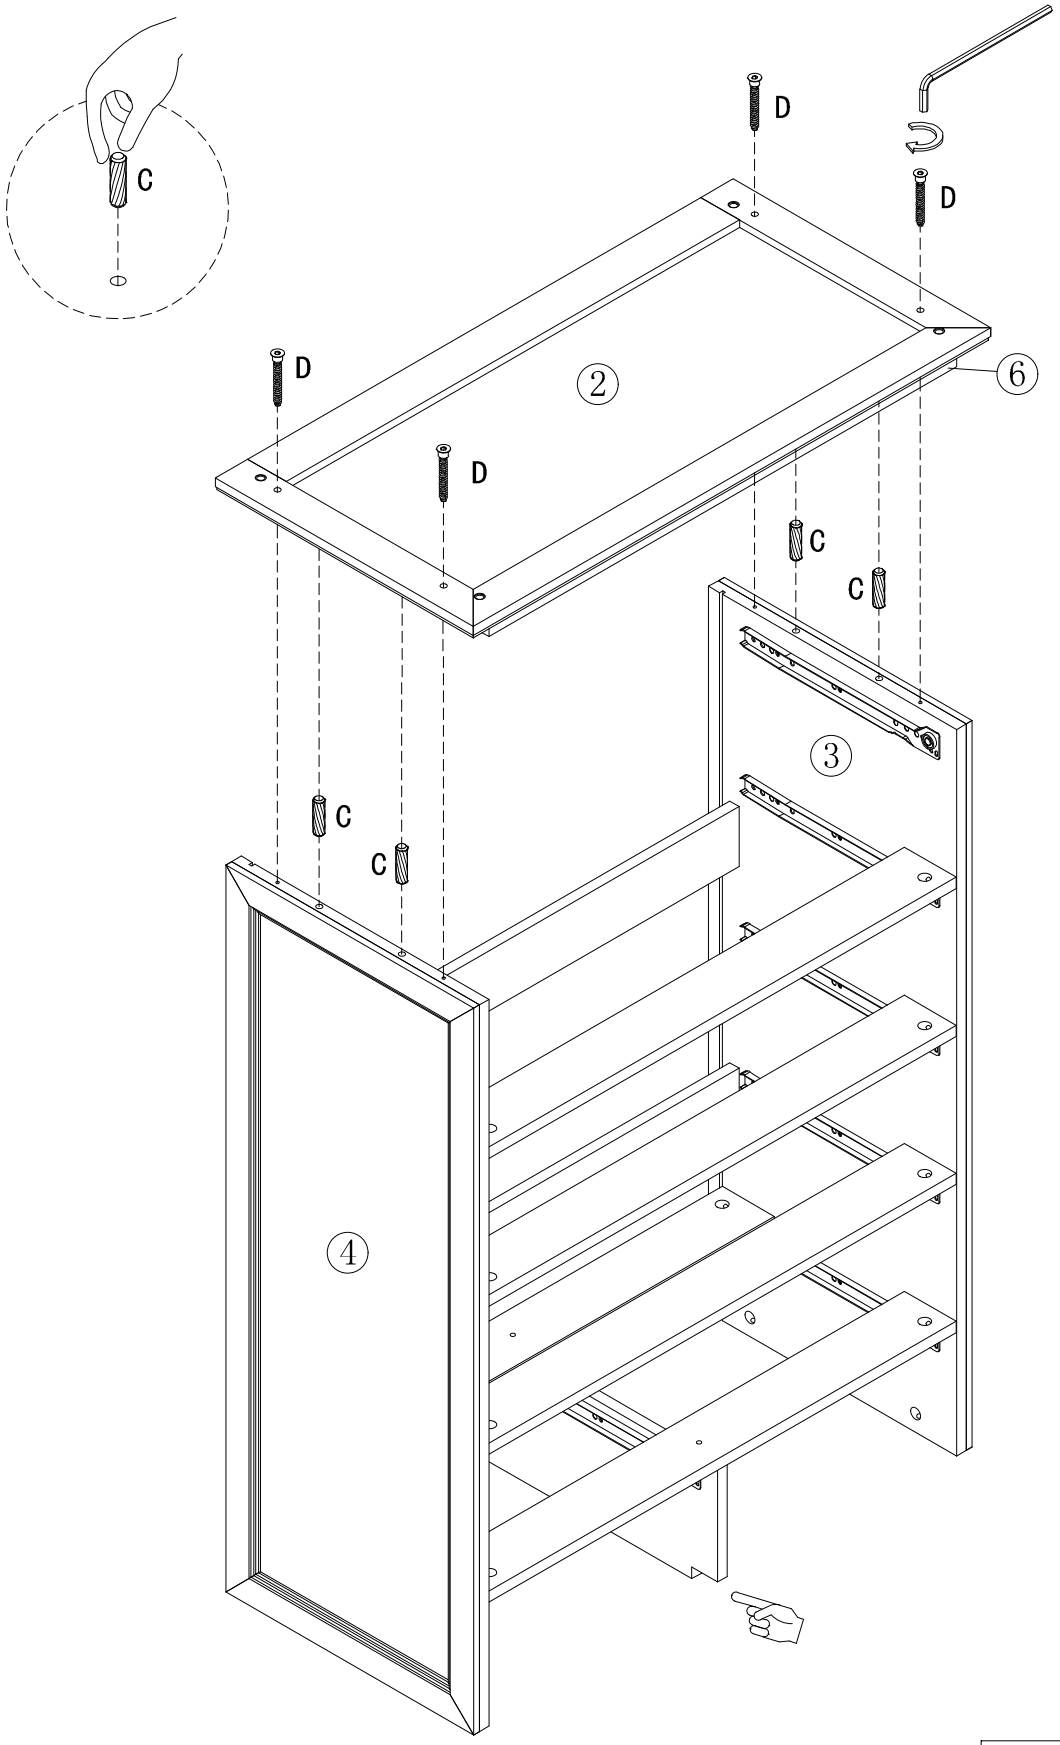


	C X 4PCS
	D X 4PCS

STEP 9

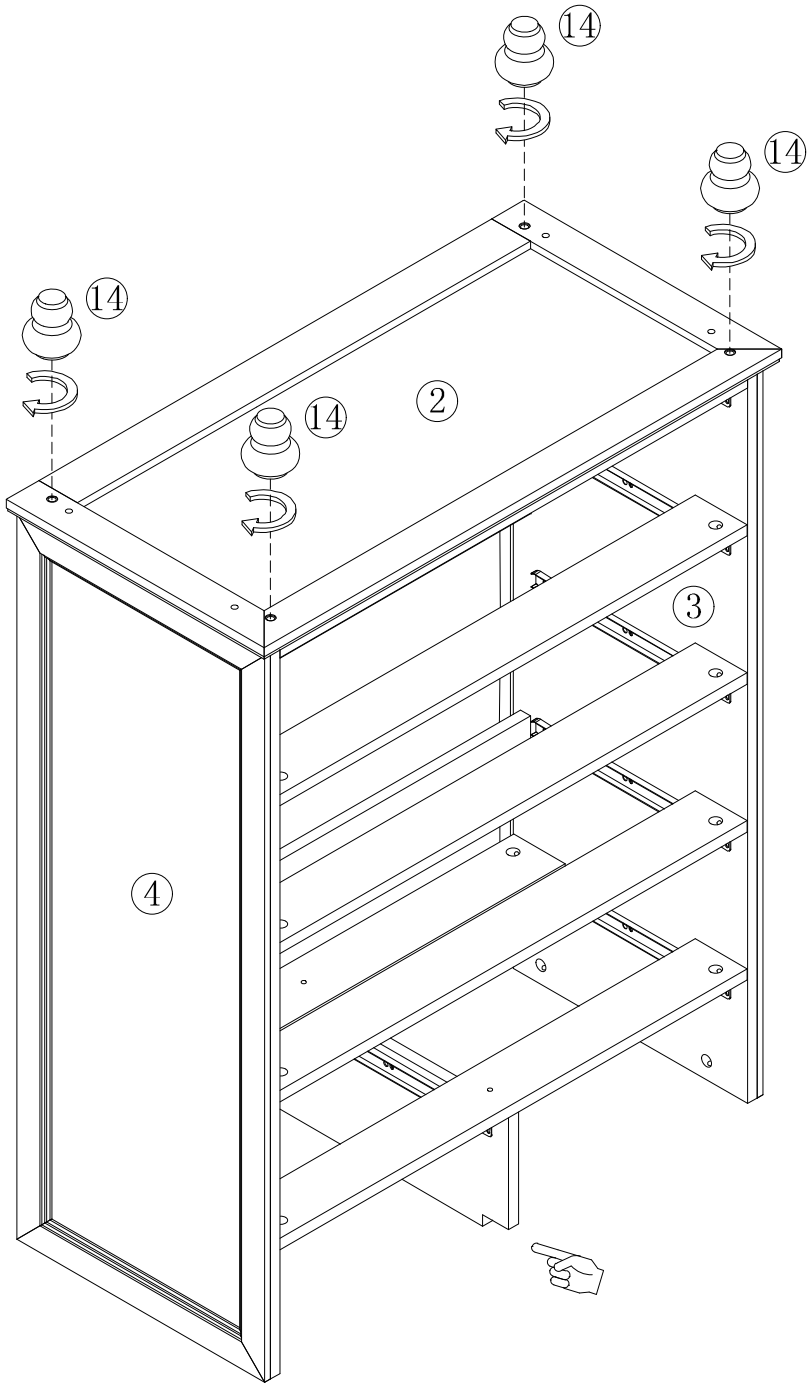


STEP 10

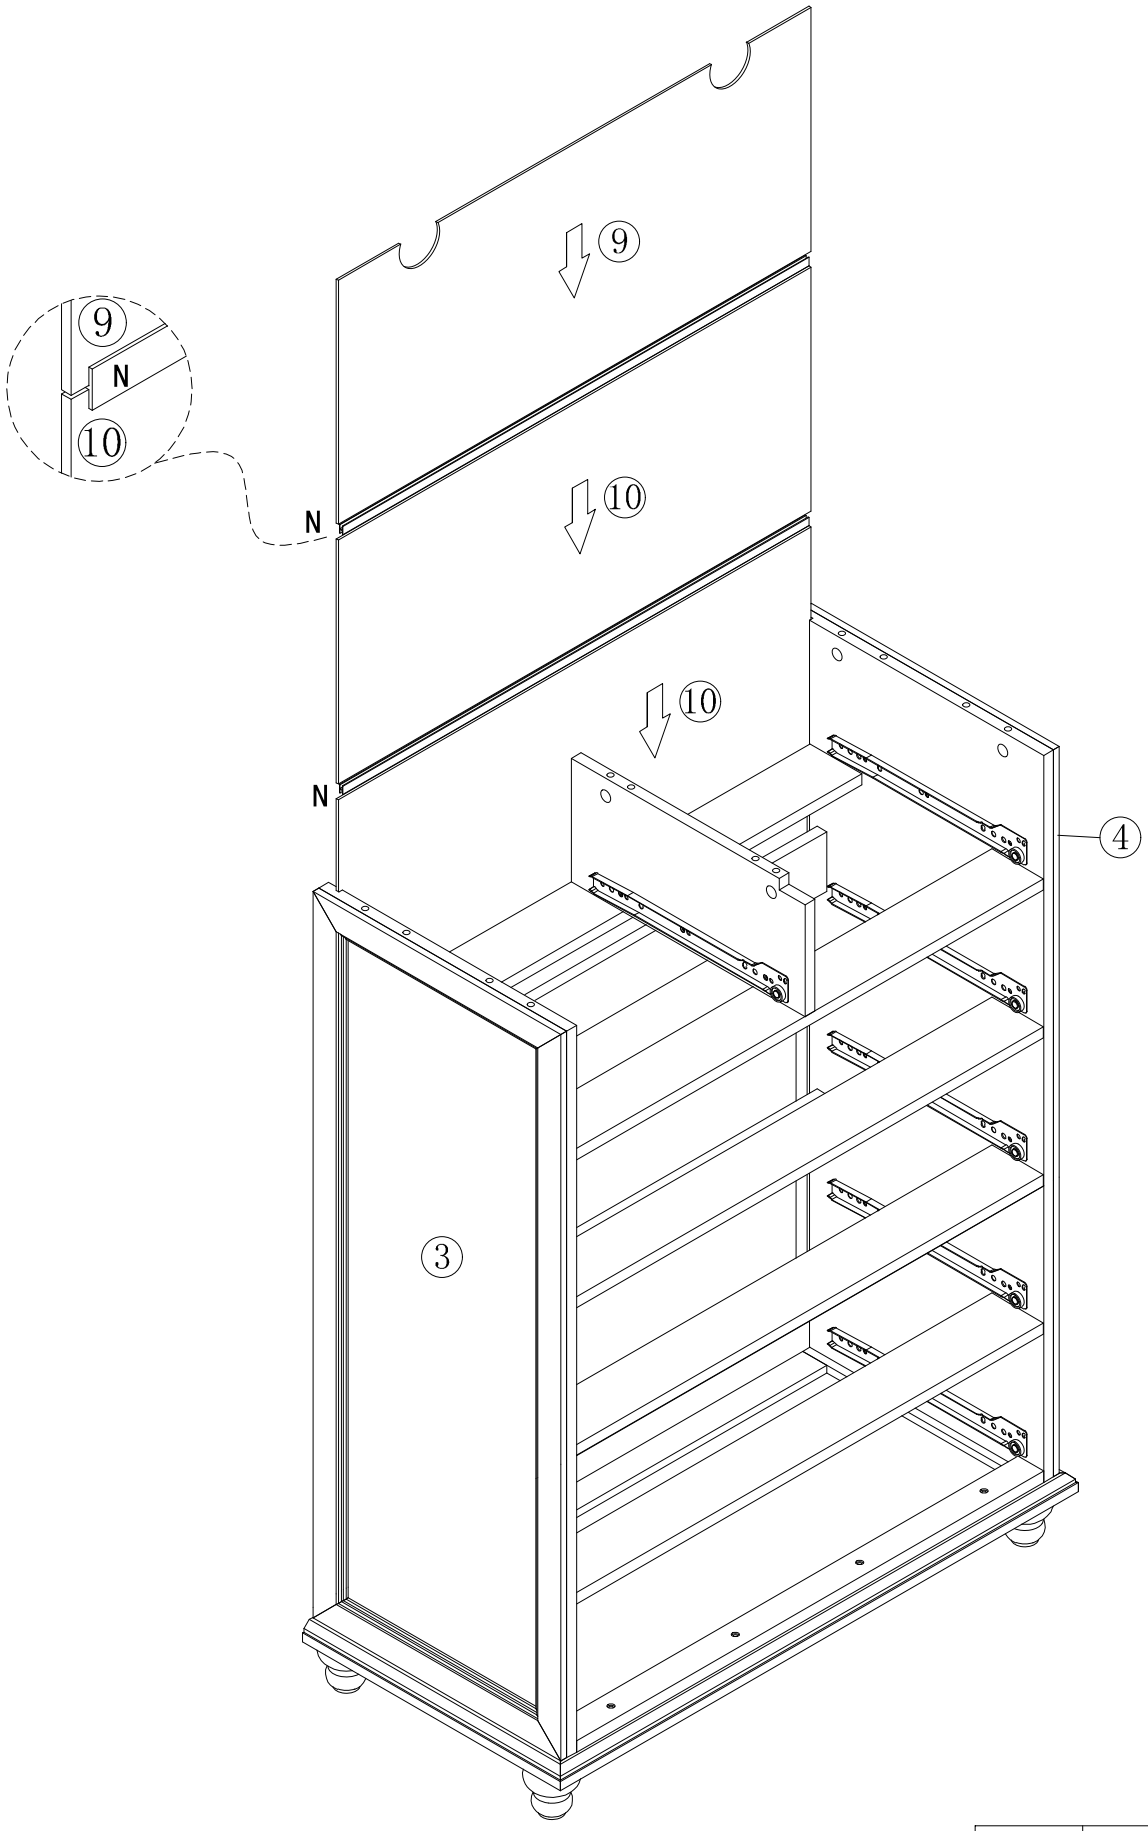


N X 2PCS

STEP 11

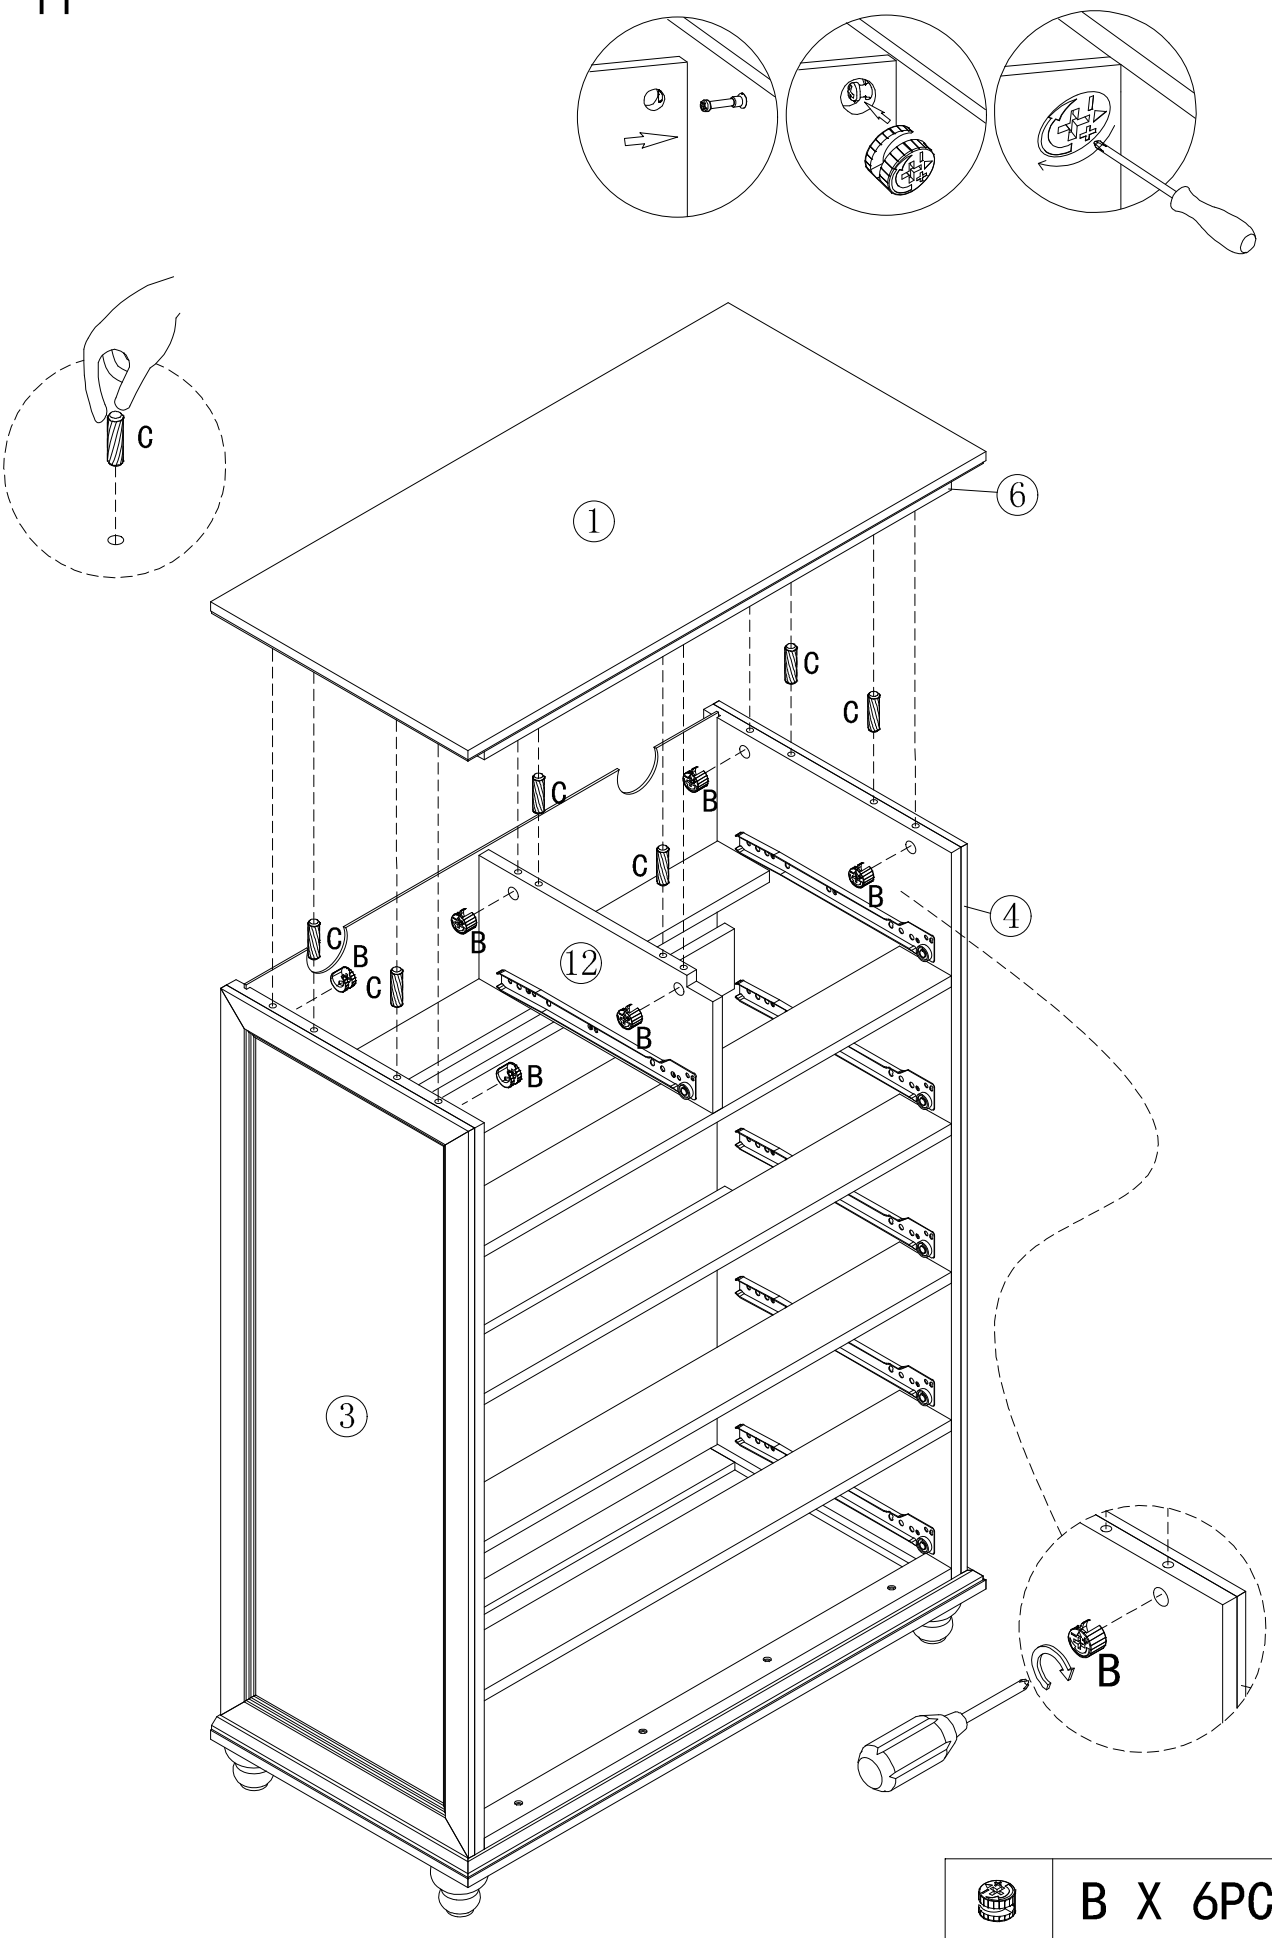


	B X 6PCS
	C X 6PCS

STEP 12

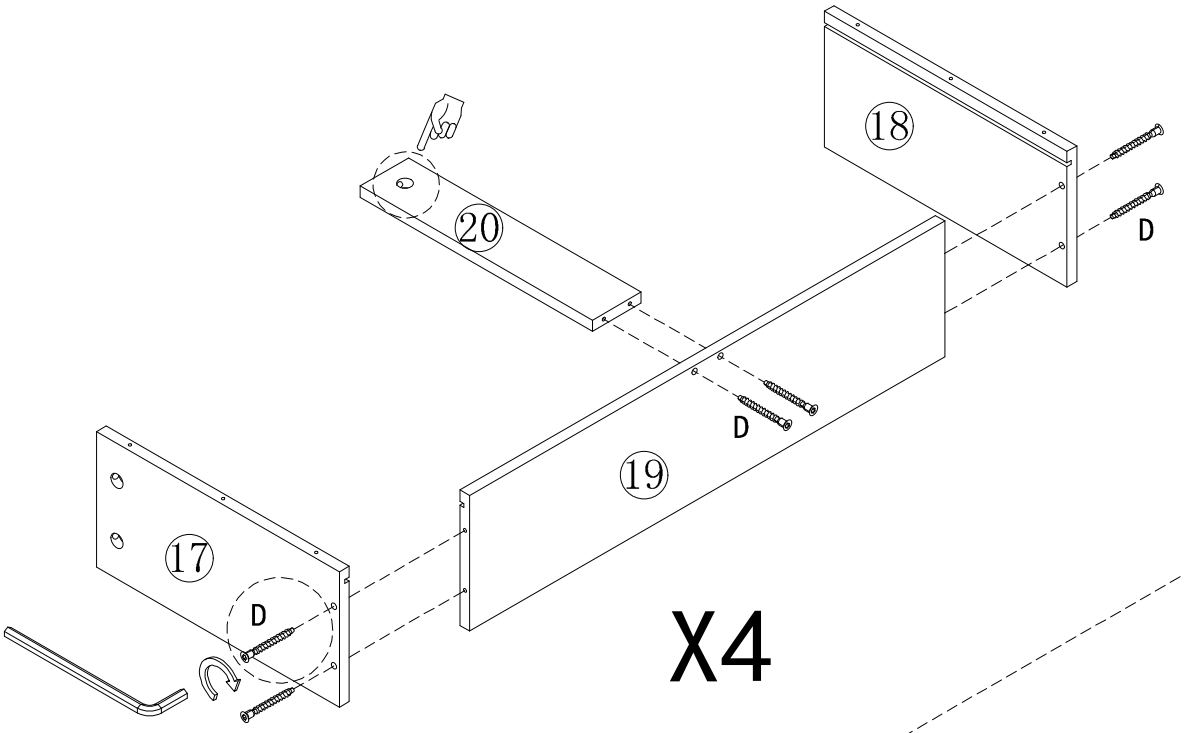


X4

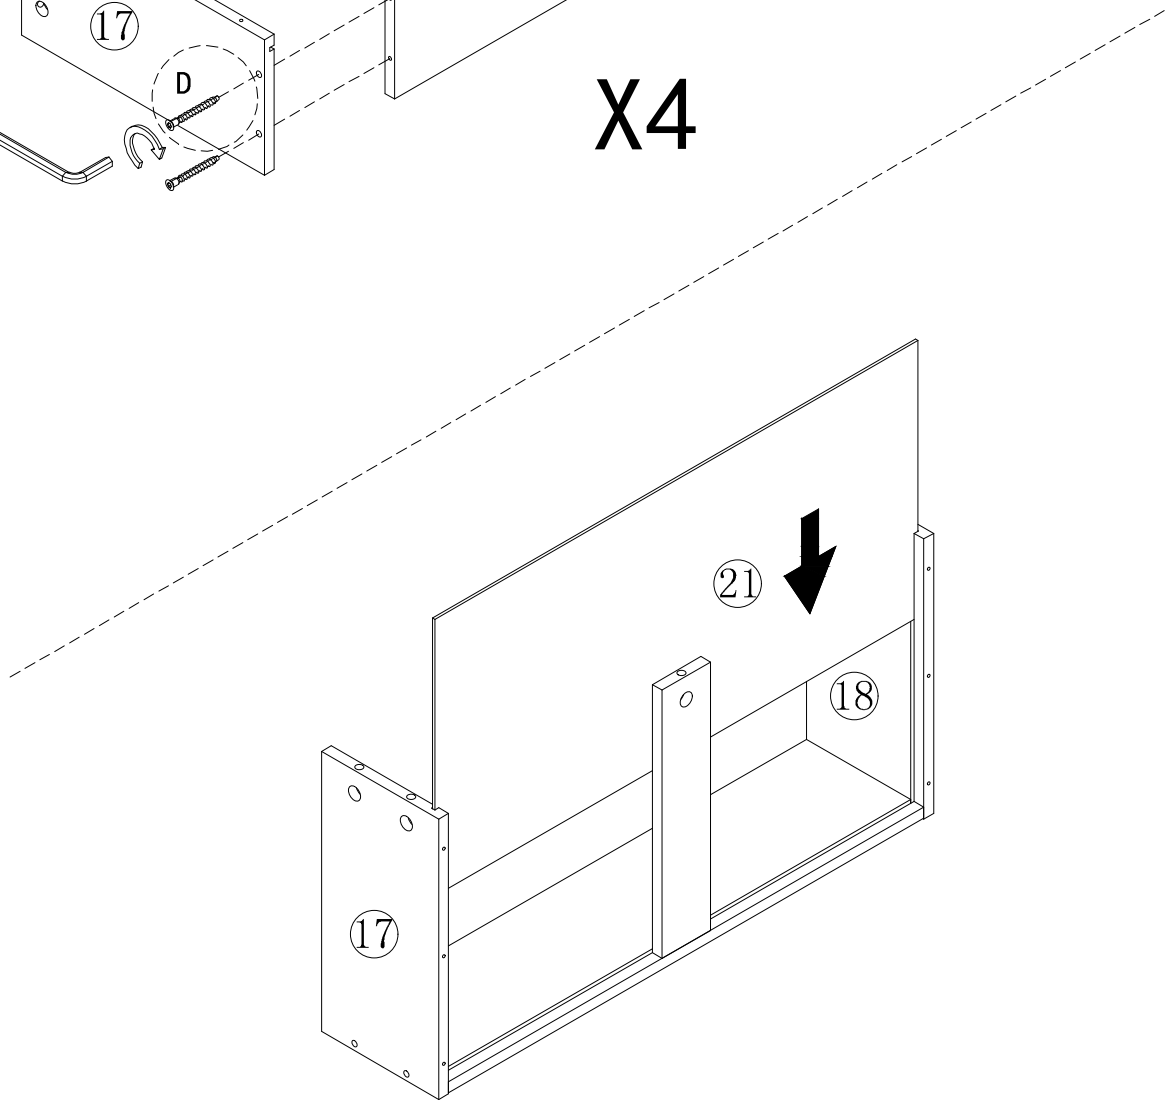


X4

D X 24PCS

STEP 13

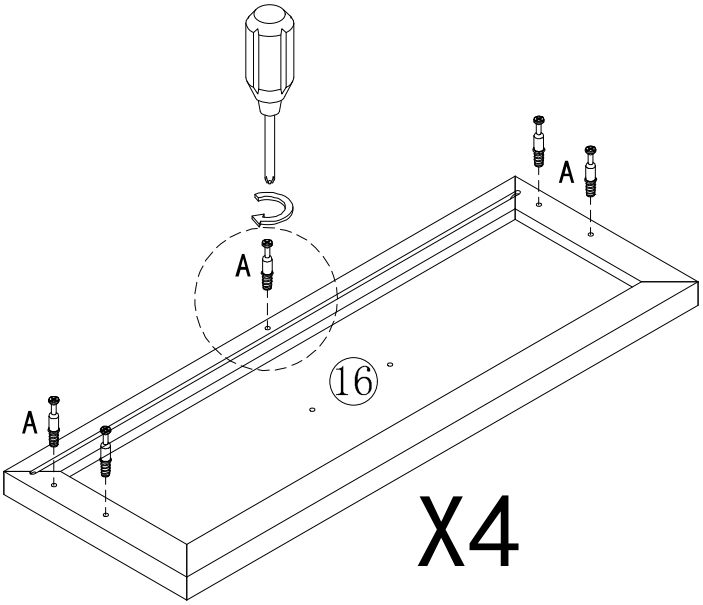


X4

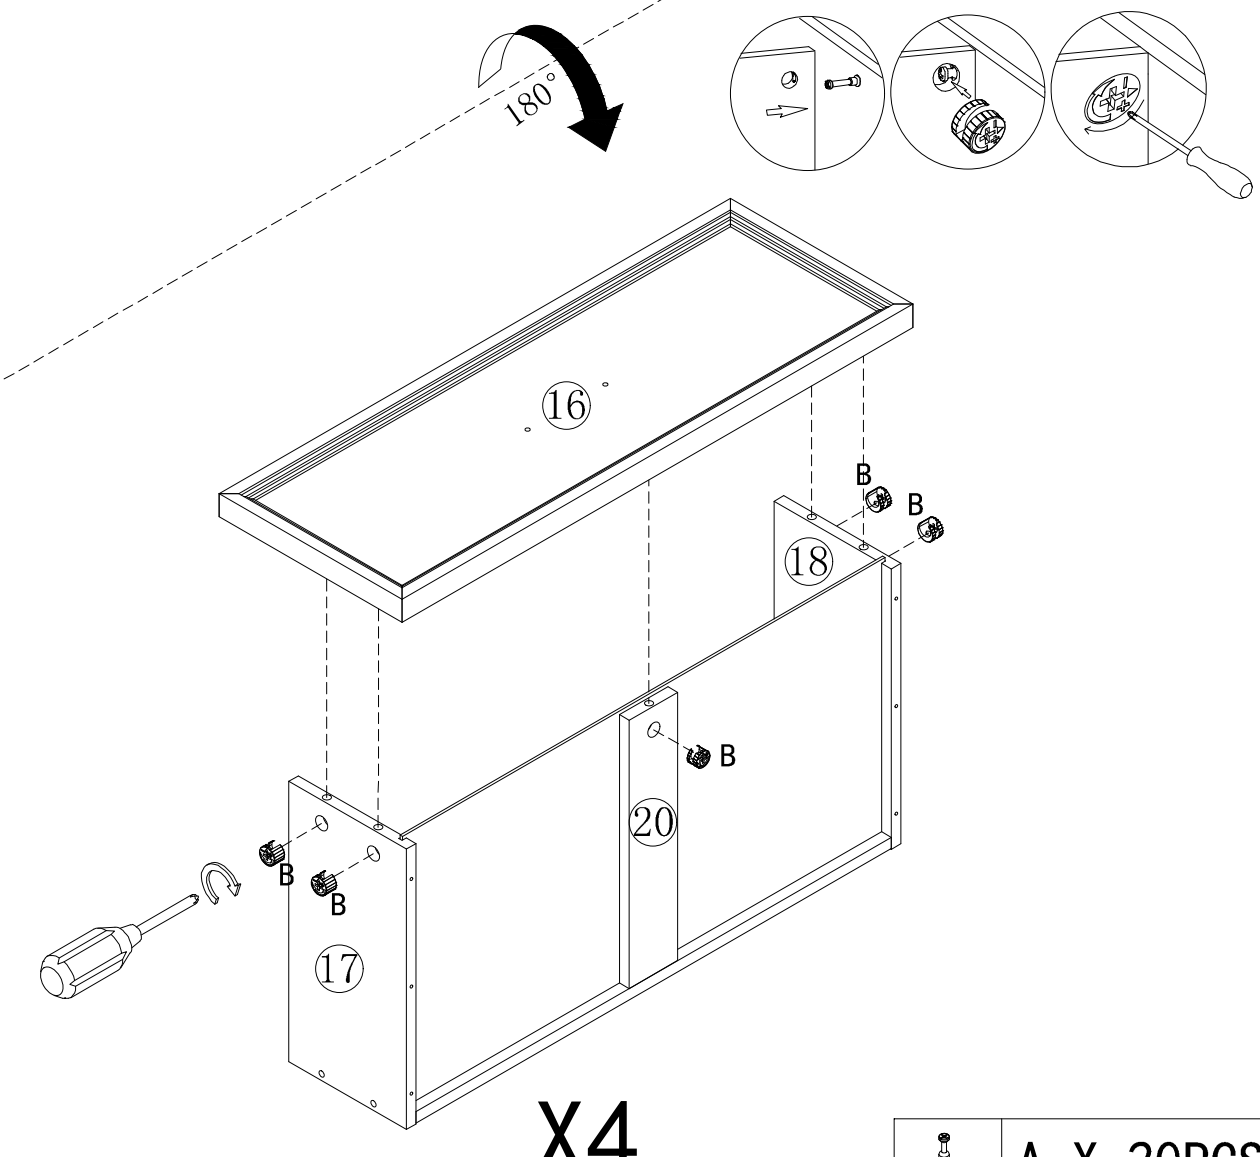

X4


	A X 20PCS
	B X 20PCS


STEP 14

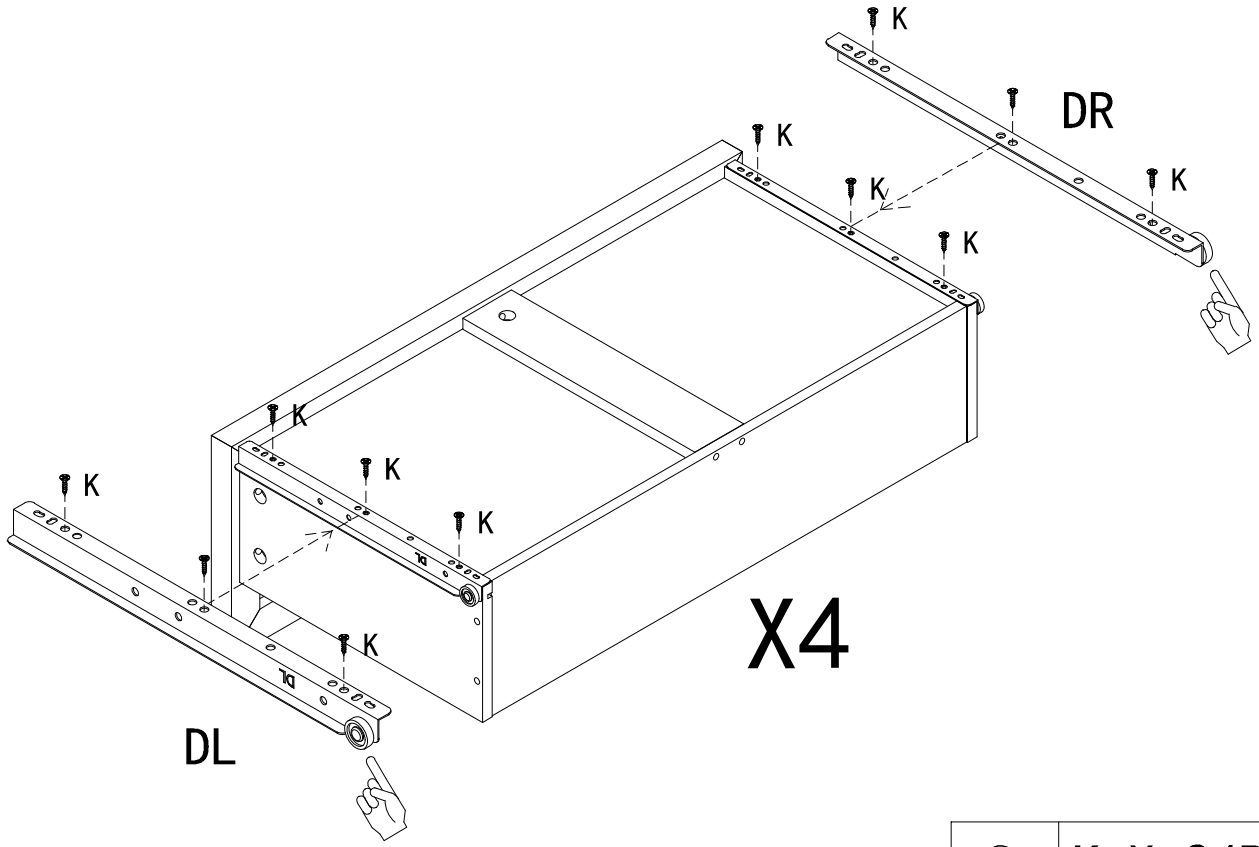

	K X 24PCS


STEP 15

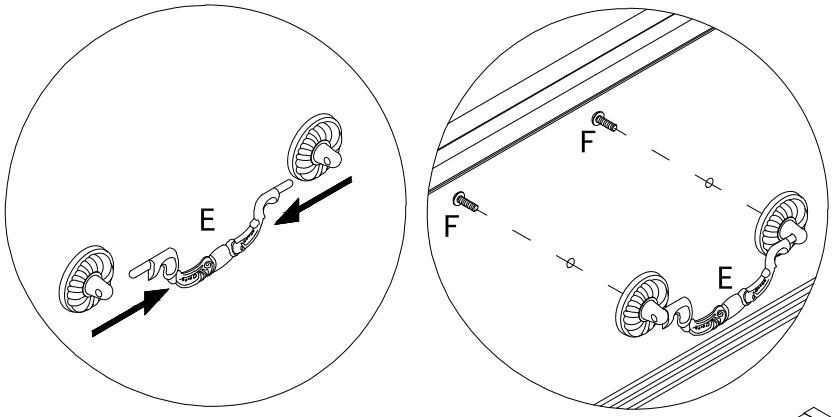

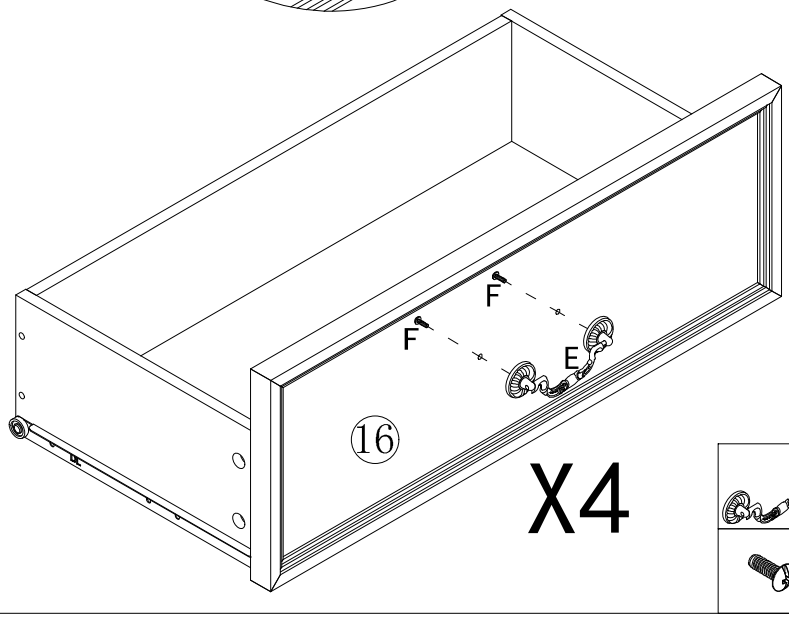


	E X 4PCS
	F X 8PCS


STEP 16

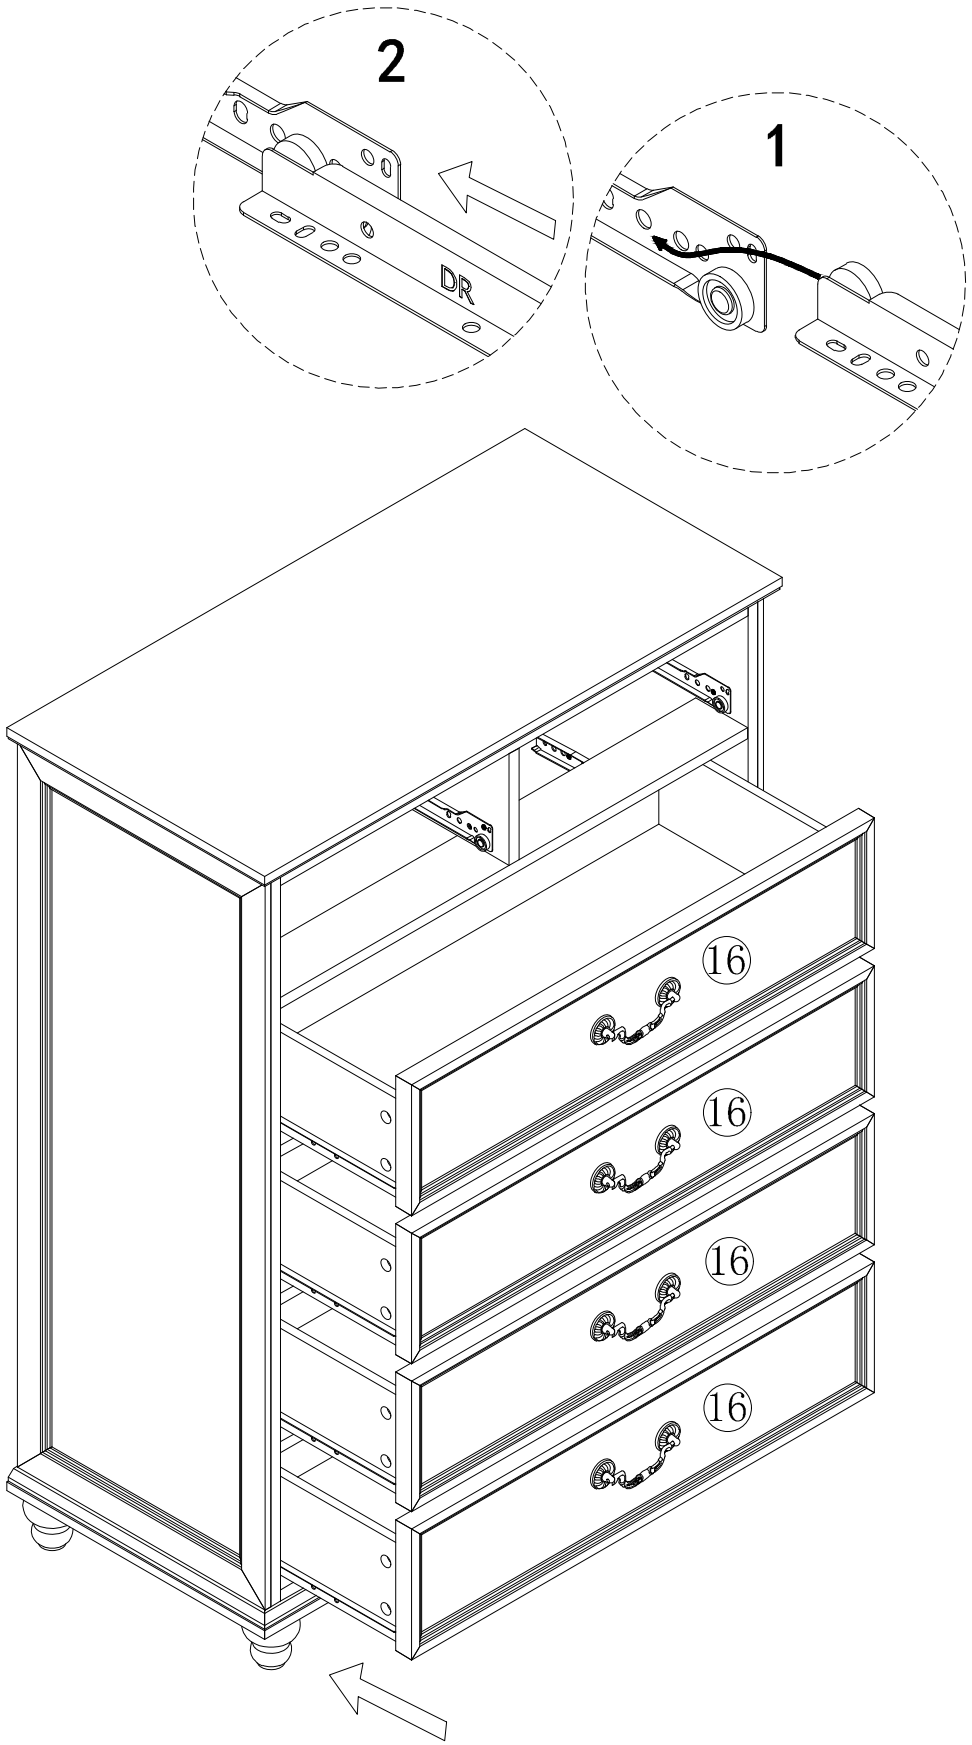

STEP 17

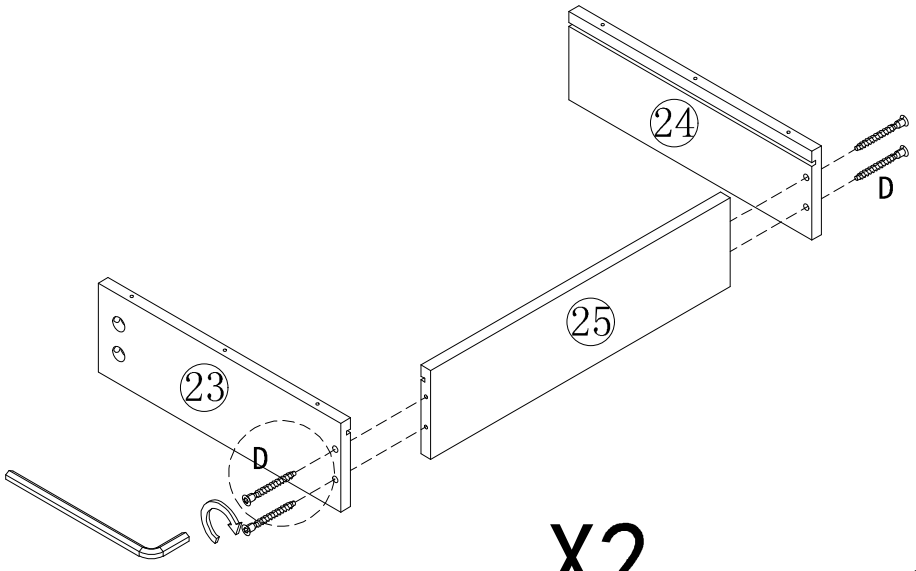


X2

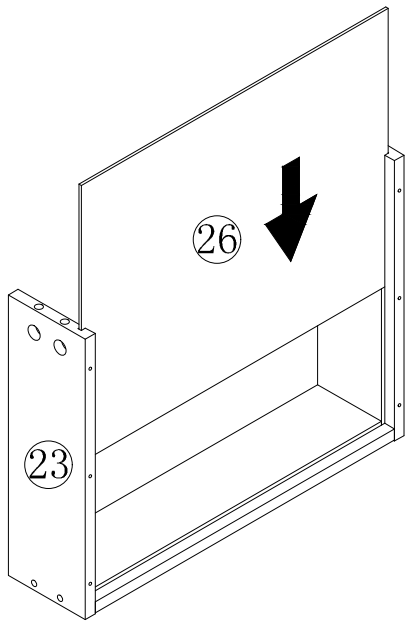

X2


	D X 8PCS

STEP 18

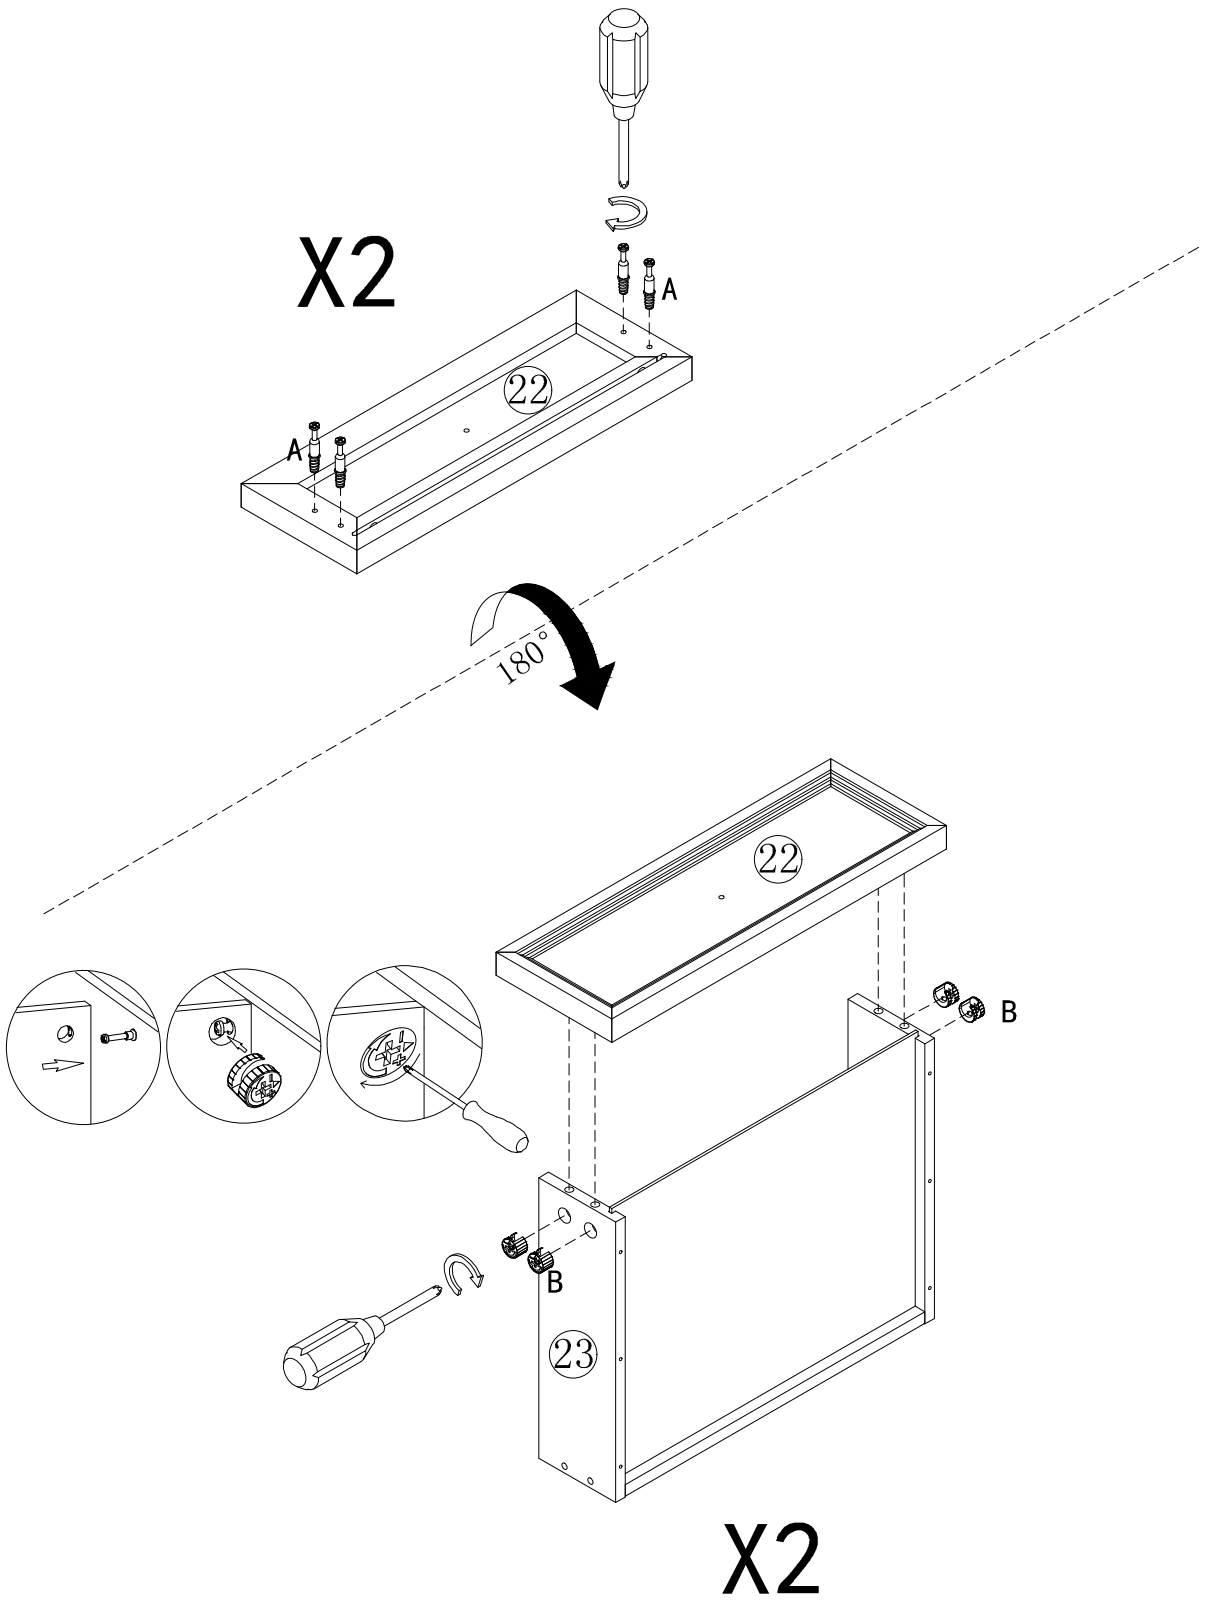


	A X 8PCS
	B X 8PCS

STEP 19

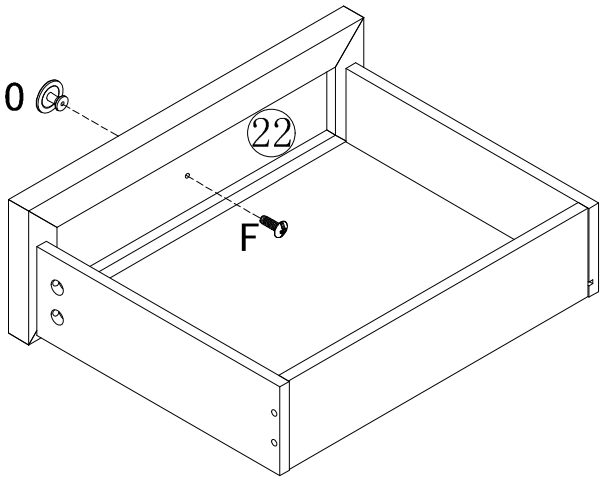


X2

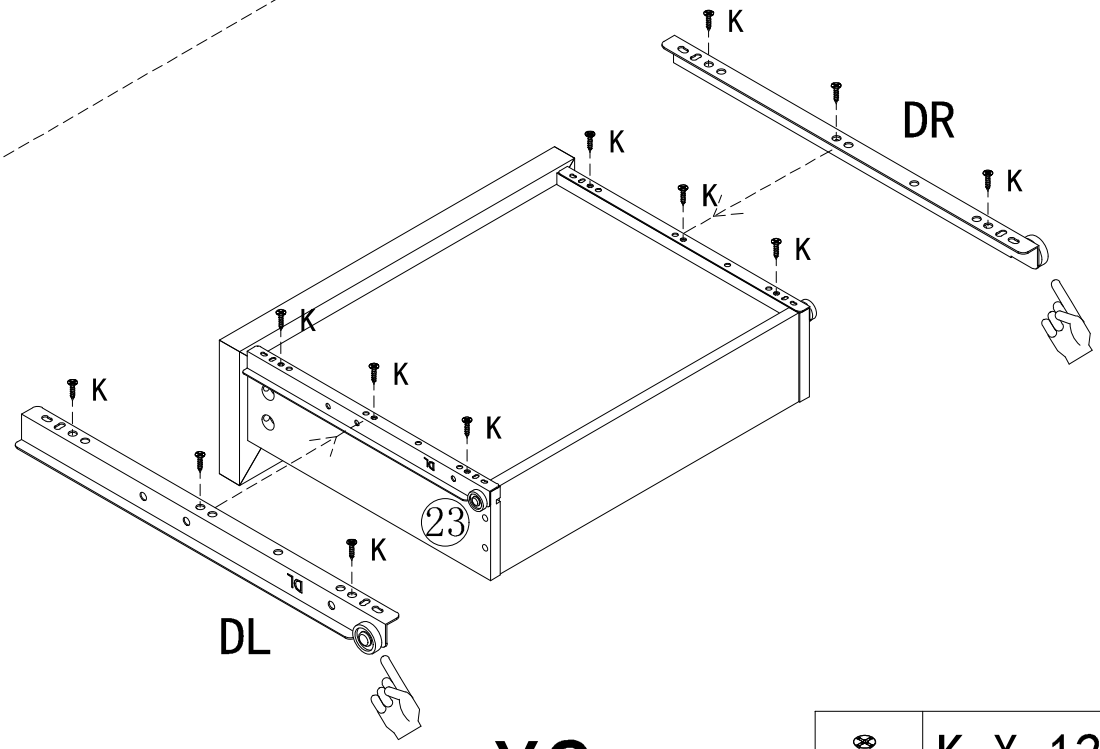

X2


	K X 12PCS
	O X 2PCS
	F X 2PCS

STEP 20

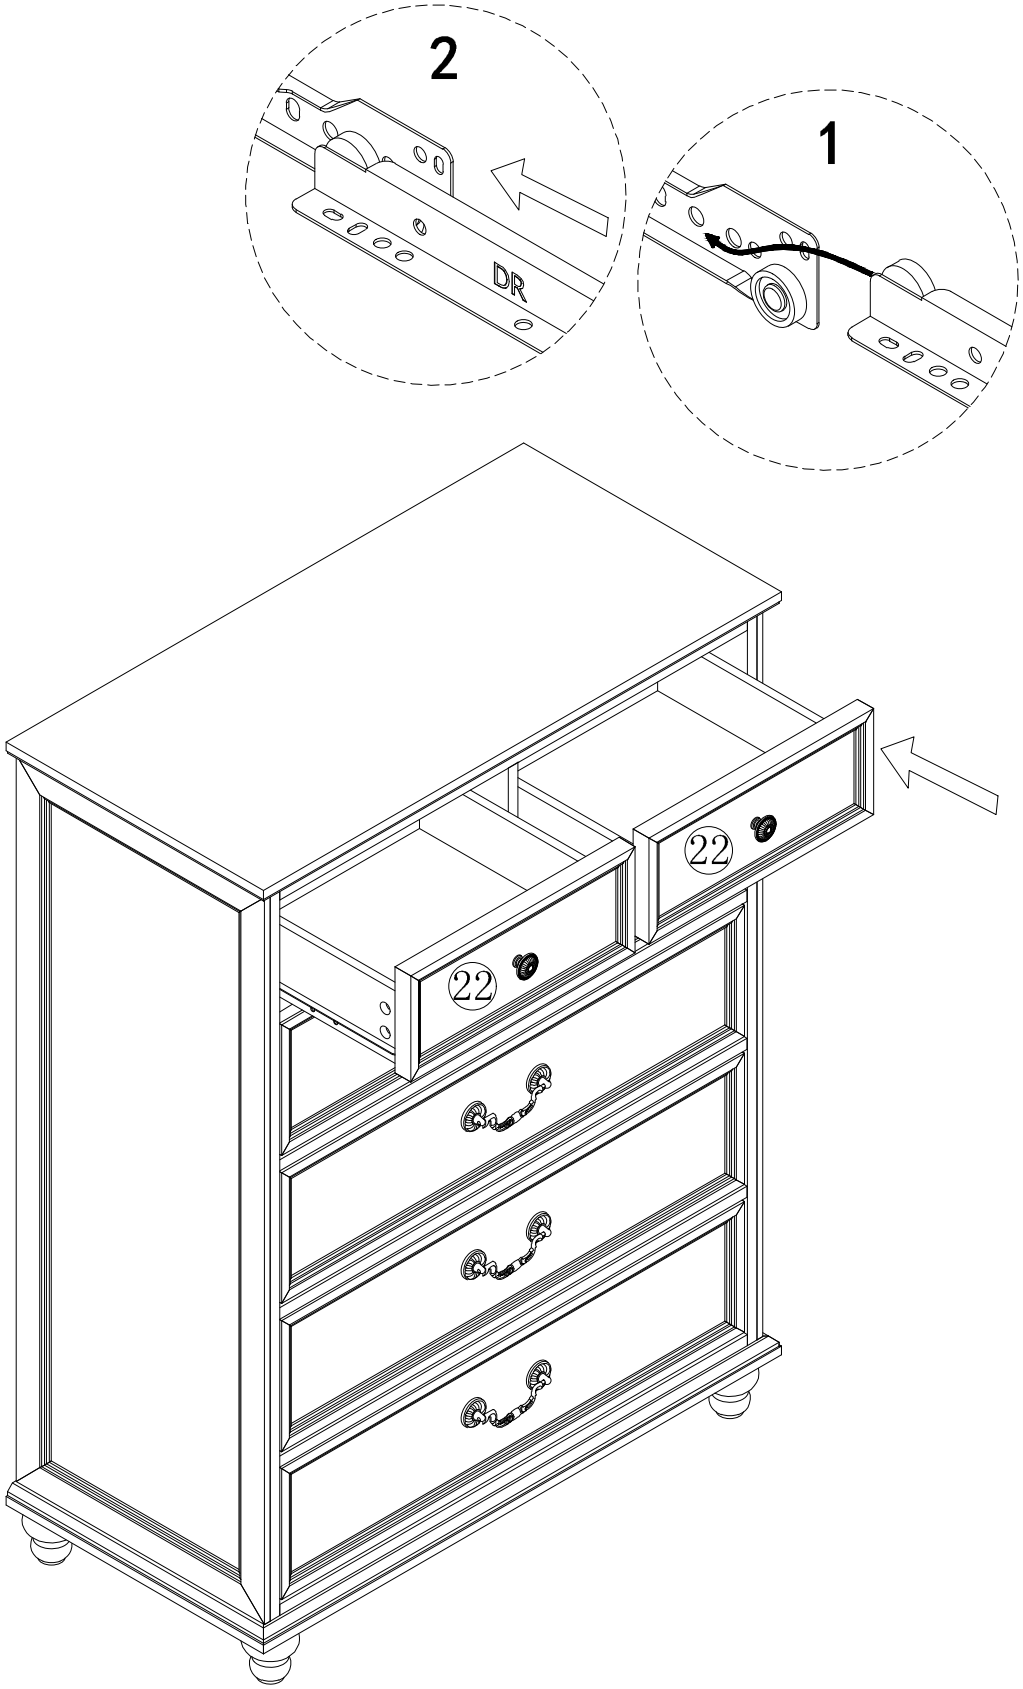


STEP 21

NOTE:To prevent the cabinet
from wobbling
please be sure to install
the back panel fasteners.

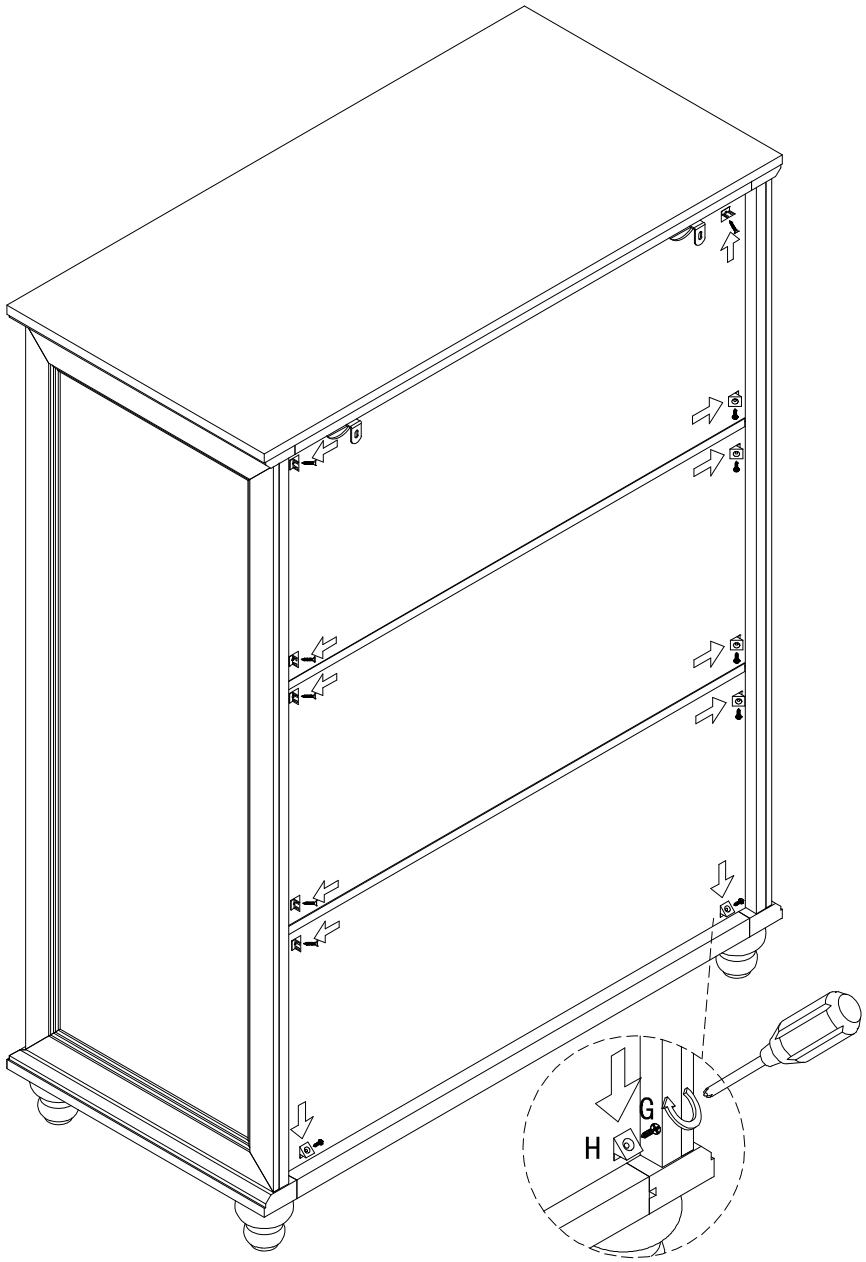

	H X 12PCS
	G X 12PCS

STEP 22

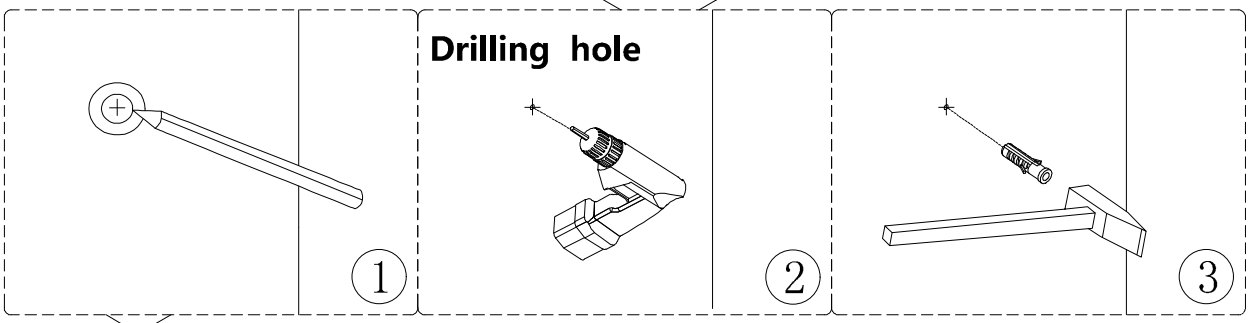

Drill a hole in the wall, then hammer the M1 into the wall with a hammer

Note: Follow step
Link M4 and M1 with a M2 using a screwdriver,and assembly it tightly.

WALL

