

Twin Bed

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME


20 MINUTES

### PARTS IDENTIFICATION

#### **B1 (BOX 1)**



#### **B2 ( BOX 2)**

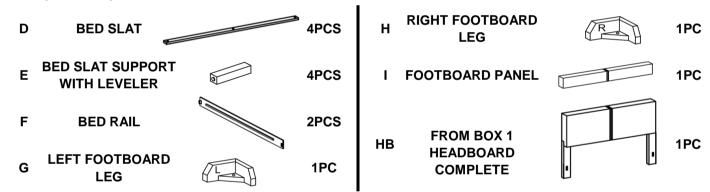

## **HARDWARE IDENTIFICATION**

#### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED

1	BOLT (JCBC M6 x 50mm - RBW)	6PCS	3	ALLEN WRENCH (M4 x 60mm - BLK)		1PC
2	LOCK WASHER (20mm - RBW)	6PCS			-	


#### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED

4	FLAT HEAD SCREW (CSK M4 X 32mm - RBW)	<u> </u>	8PCS	6 SMALL ALLEN WRENCH (M4 x 100mm - BLK)	1PC
5	BOLT (JCBC M6 X 40mm - RBW)		6PCS	7 BIG ALLEN WRENCH (M5 x 70mm - BLK)	1PC

#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


## STEP 1

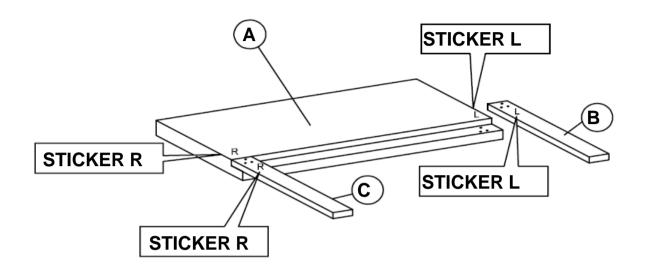

\*\*BACK VIEW

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS

## STEP 2

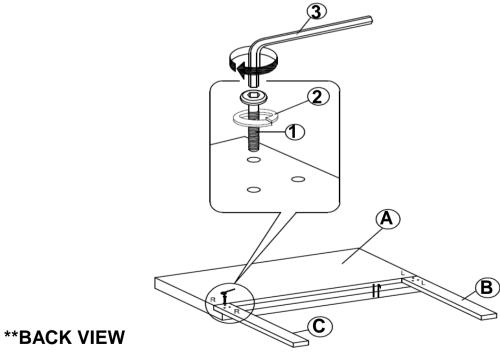


IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS


PAGE 3 OF 5

# **ASSEMBLY INSTRUCTIONS** STEP 3 (H)G Black Woven MATCH ' Black THE Woven **LABEL** STEP 4 HB STEP 5 PAGE 4 OF 5

# STEP 6

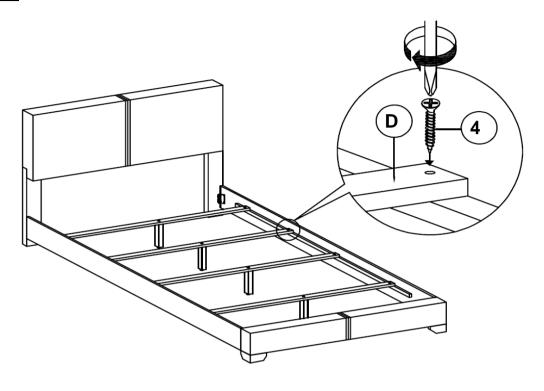


# STEP 7 COMPLETE

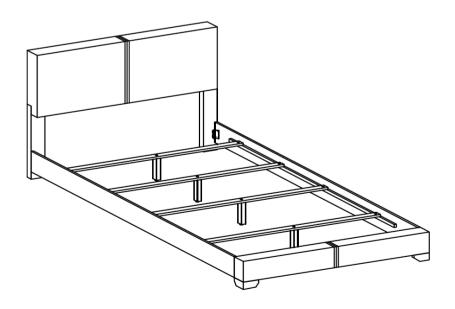



Inner Size: 39.25"W X 76.00"D

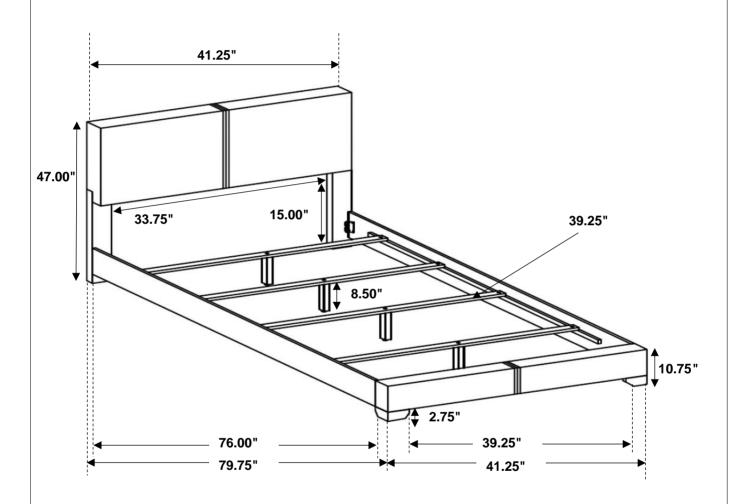

Note: Dimension tolerance ±5%