

Instructions for use: The cabinet legs should be designed to avoid lateral stress. When moving, please lift vertically off the ground. Dragging may cause loose connectors, affecting stability and service life

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.

BEFORE STARTING


Before Using Product

- Read each step carefully before starting.It is very important thateach step is performed in the correct order.If these steps are not followed in sequence,assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used,preferably on a carpet,or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process,we suggest you keep a lite tightness for all the screws during assembly.After the whole product is assembled, firmly tighten all the screws.

⚠ WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly,keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted,not dragged or pushed.Failure to do so could cause instability,product collapse,and/or serious injury.
- Be careful when using power tools to assemble your furniture.Power tools may strip or damage the parts.

QUICKFIT

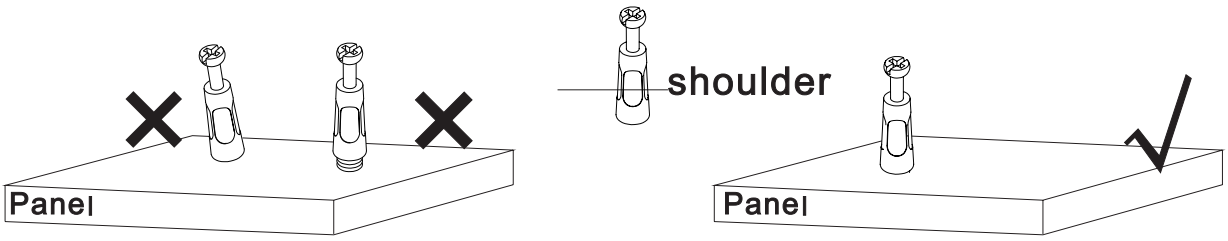


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

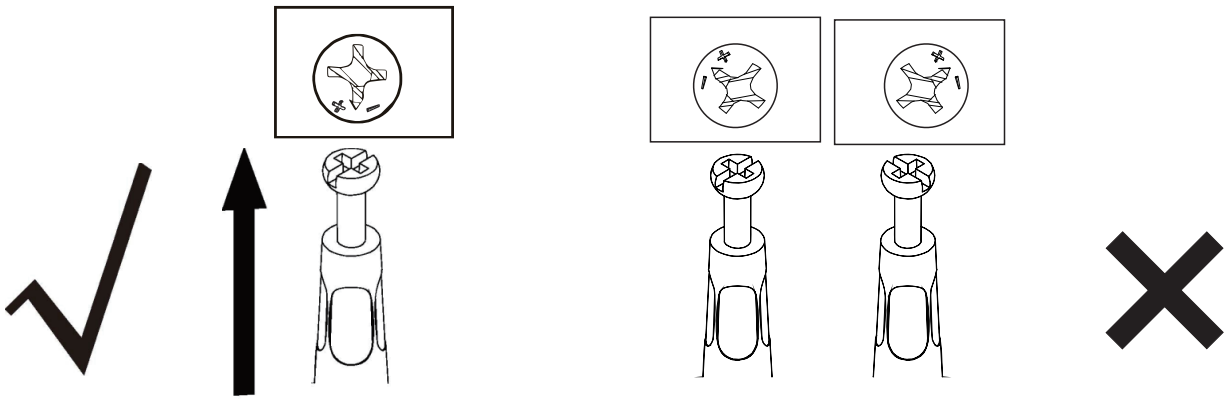


CORRECT WRONG

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

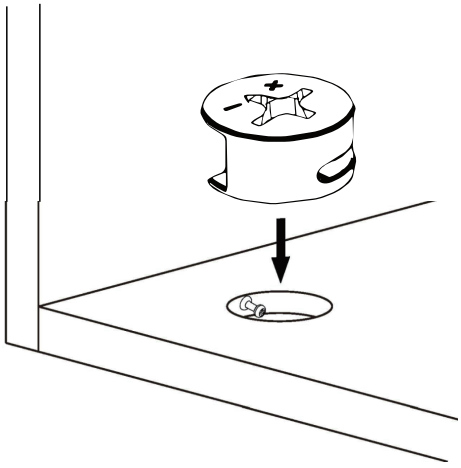



Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

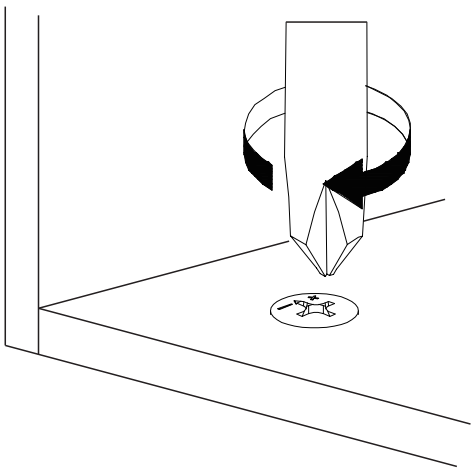


Turn cam lock clockwise to tighten.

If the top Panel collapses or bends
Please adjust according to the following image

















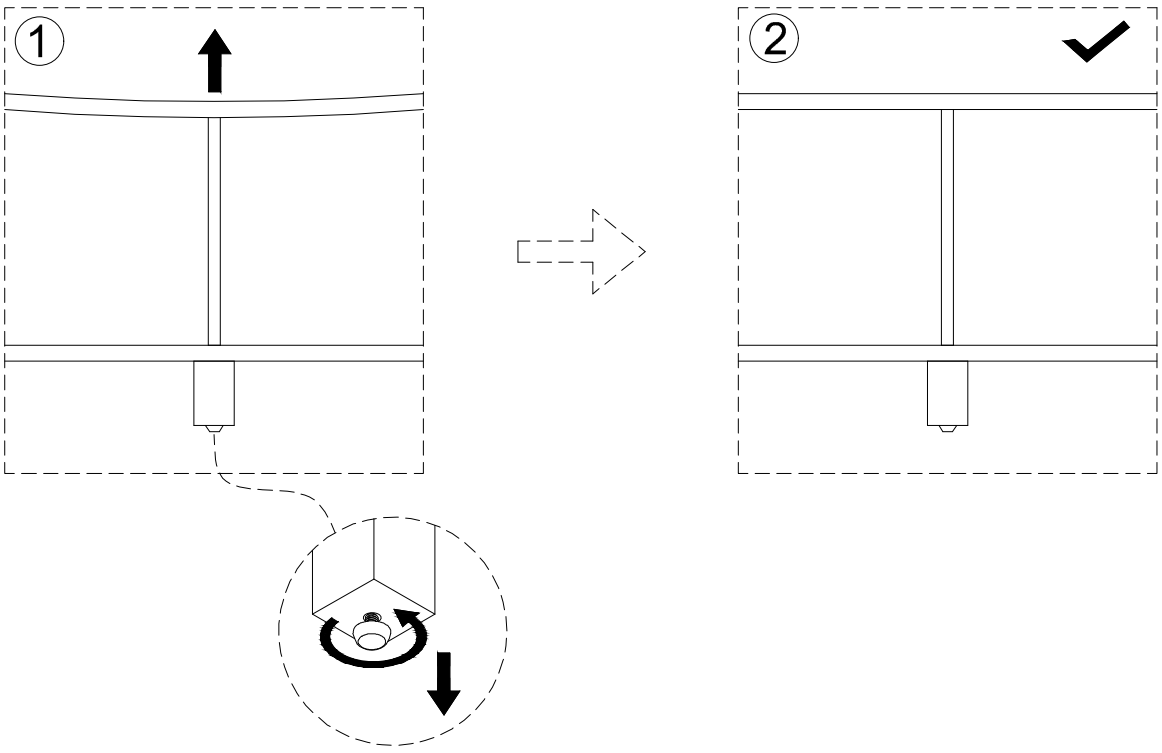


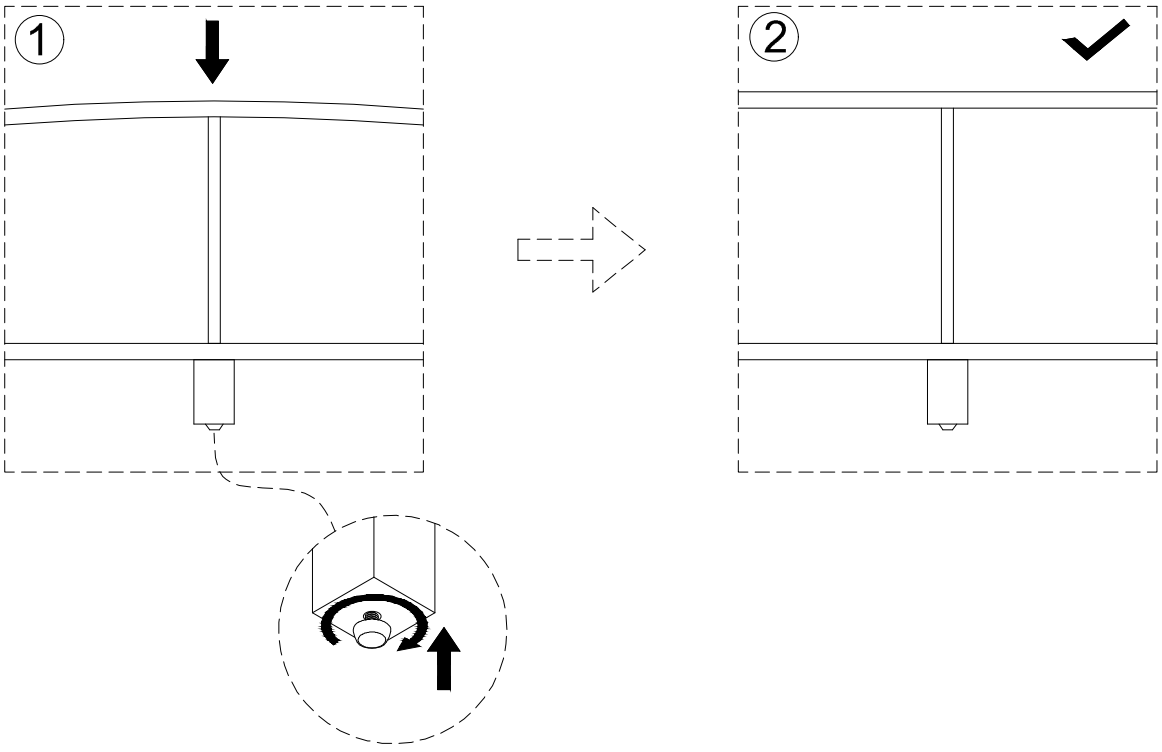










PART LIST

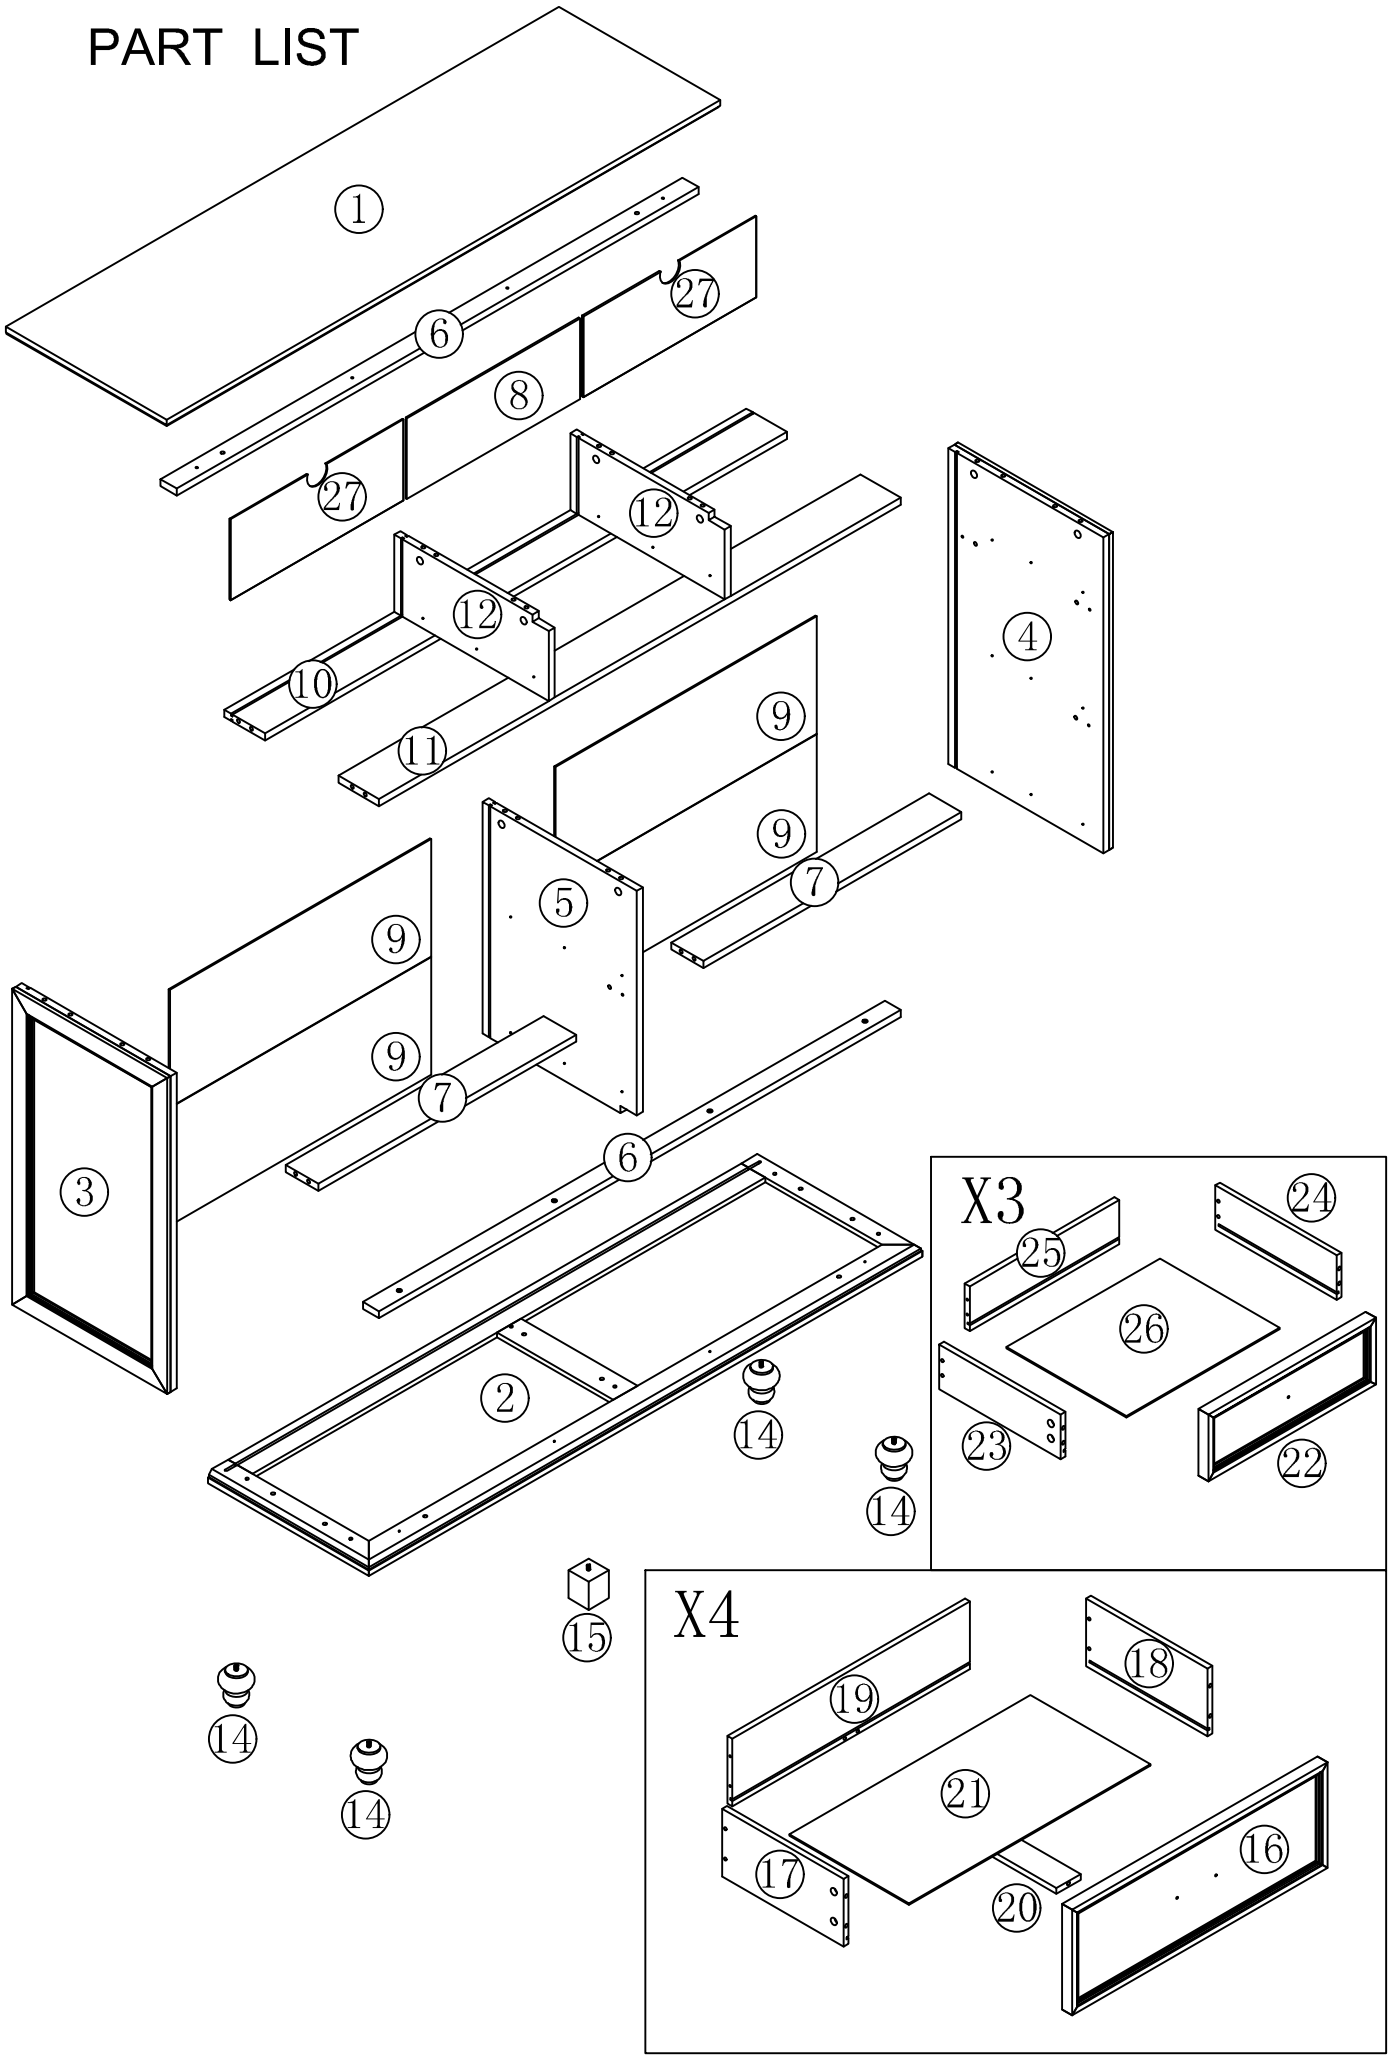
1
6
27
8
27
12
12
10
11
4
9
9
7
5
9
9
7
3
6
2
14
14
15
14
14
X3
24
25
26
23
22
X4
18
19
21
17
20
16









PART LIST

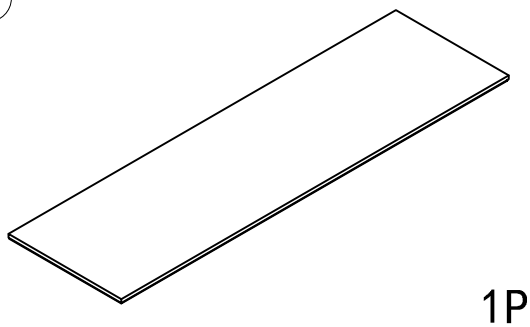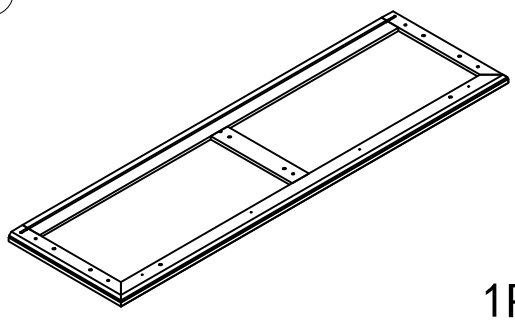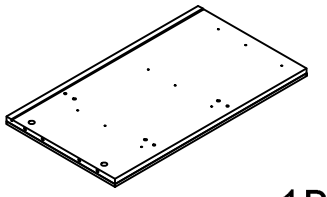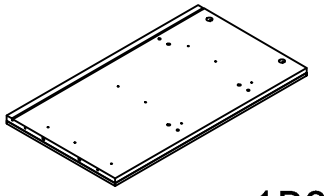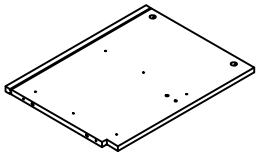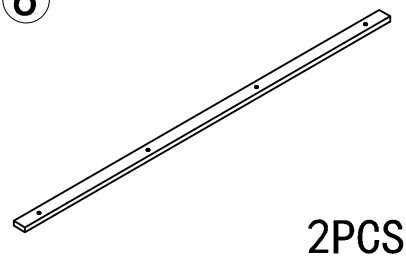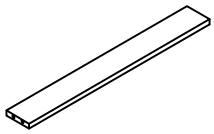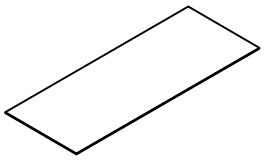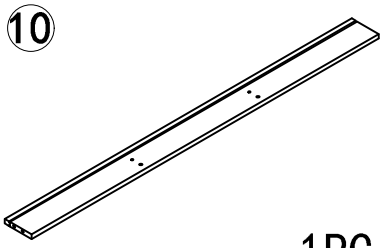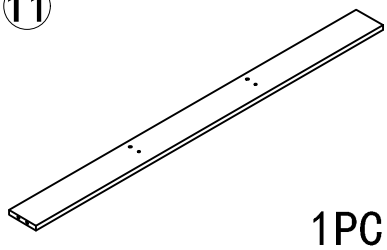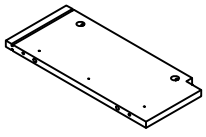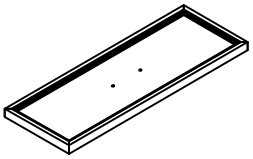①  1PC	②  1PC	
③  1PC	④  1PC	⑤  1PC
⑥  2PCS	⑦  2PCS	⑧  1PC
⑨  4PCS	⑩  1PC	⑪  1PC
⑫  2PCS	⑭  4PCS	⑮  1PC
⑯  4PCS	⑰  4PCS	⑱  4PCS


PART LIST

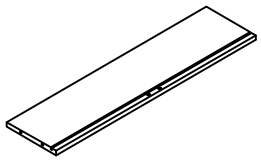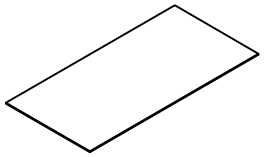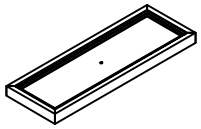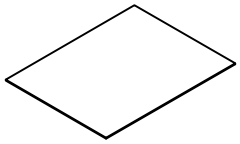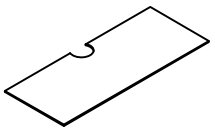
19  4PCS	20  4PCS	21  4PCS
22  3PCS	23  3PCS	24  3PCS
25  3PCS	26  3PCS	27  2PCS

HARDWARE LIST

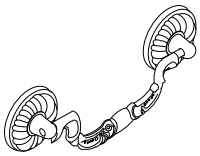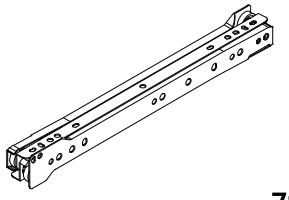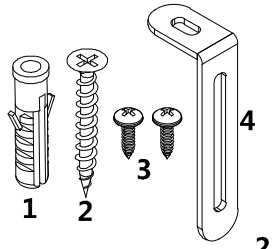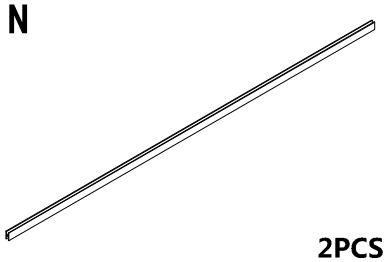A  ϕ6X35 (50+3)PCS	B  ϕ15X9.5 (50+3) PCS	C  ϕ8X30 (32+2)PCS
D  ϕ5X40 (46+3)PCS	E  4PCS	F  ϕ4X8 (11+1)PCS
G  ϕ3X15 (20+2)PCS	H  (20+2)PCS	I  ϕ4X30 (8+1)PCS
J  7SET	K  ϕ3X12 (72+3)PCS	L  ϕ4X12 (12+1)PCS
M  2PCS	N  2PCS	O  3PCS
 3PCS	 1PC	


J X7SET

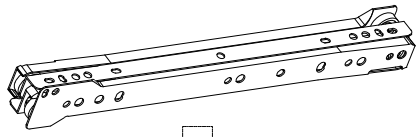

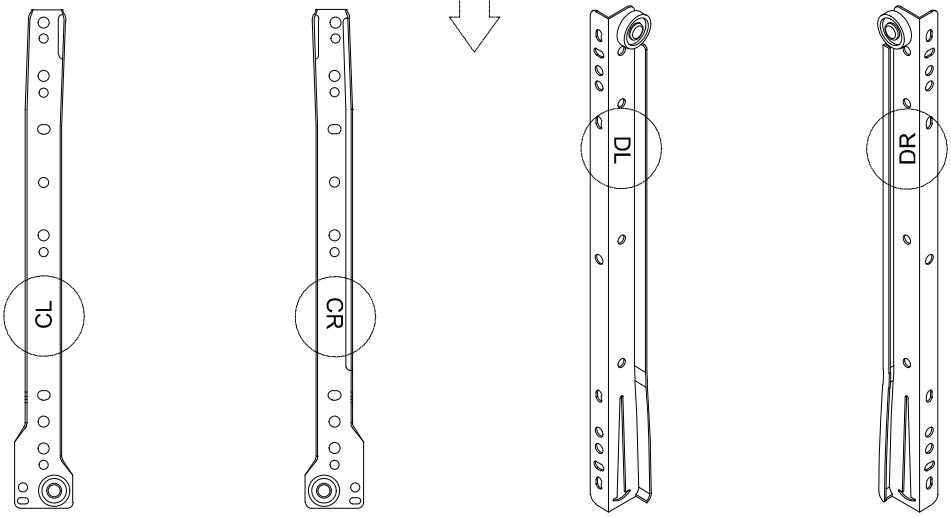


CL CR DL DR


E

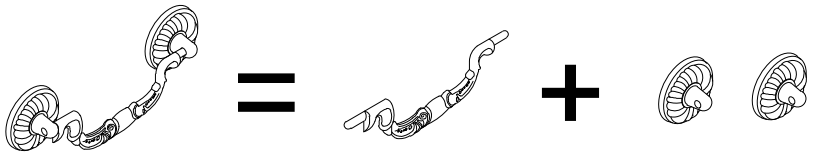


K




L

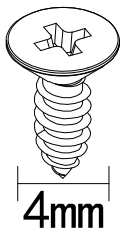


M =

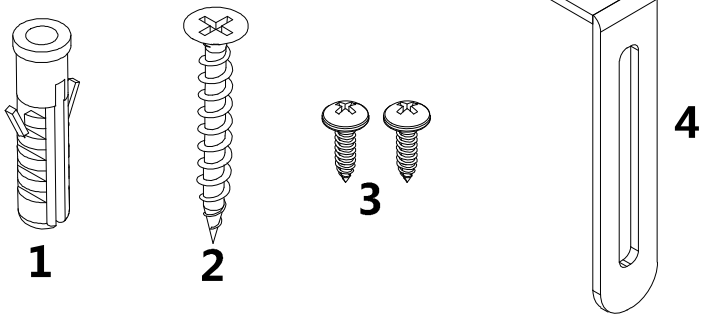


STEP 1

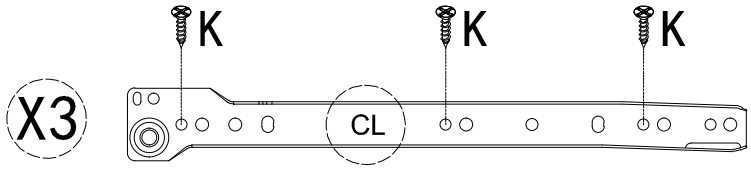


Pay attention to
the hole position

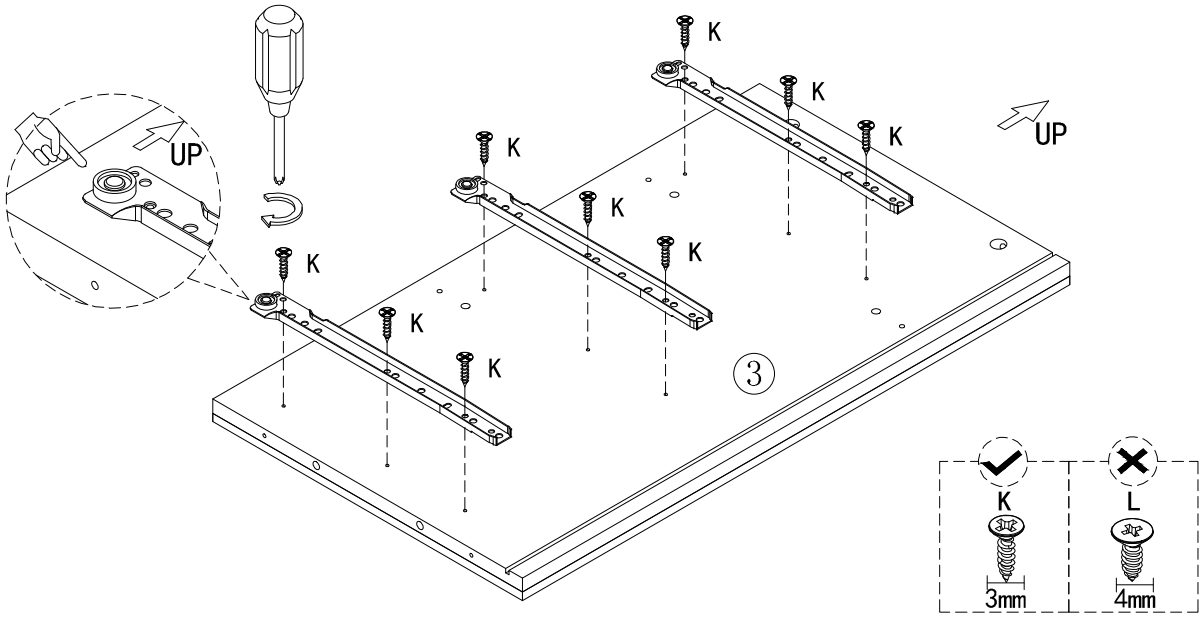

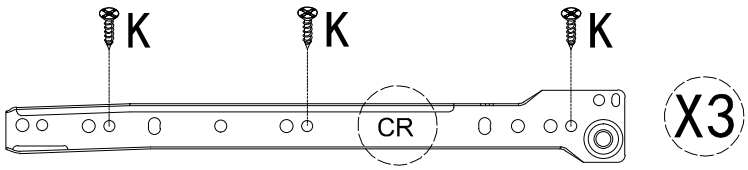



Pay attention to
the hole position

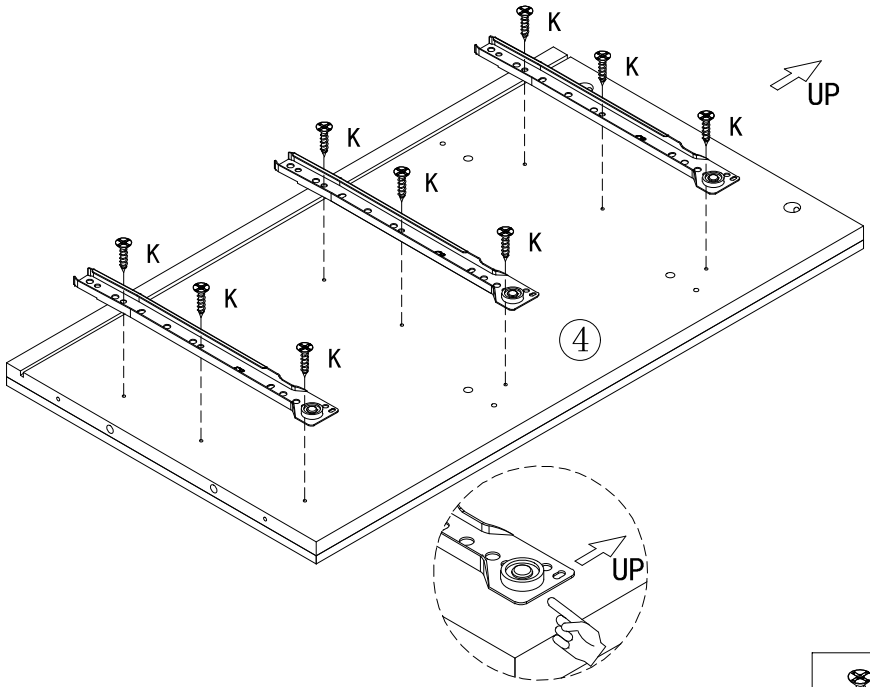

	K X 18PCS


STEP 2

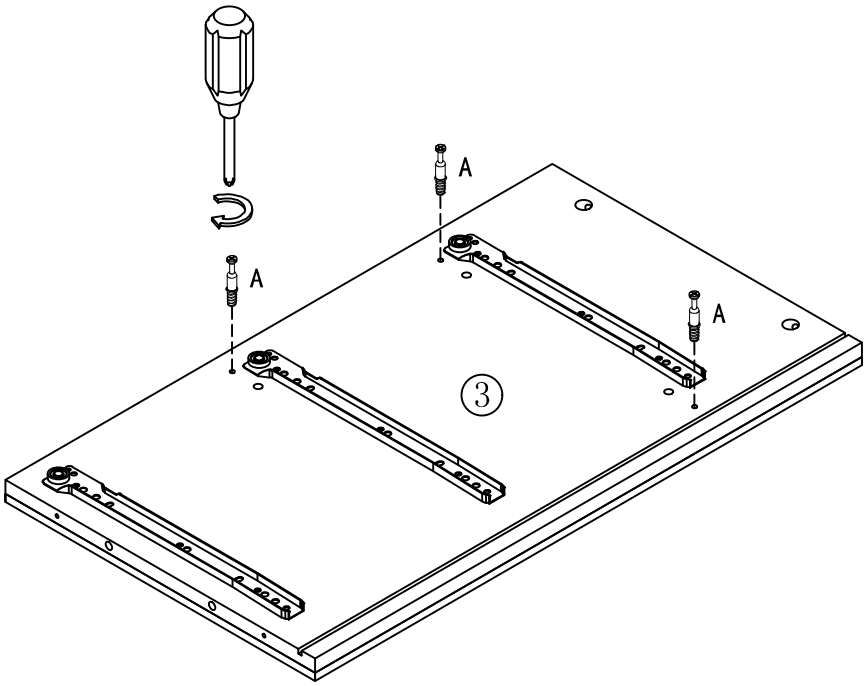

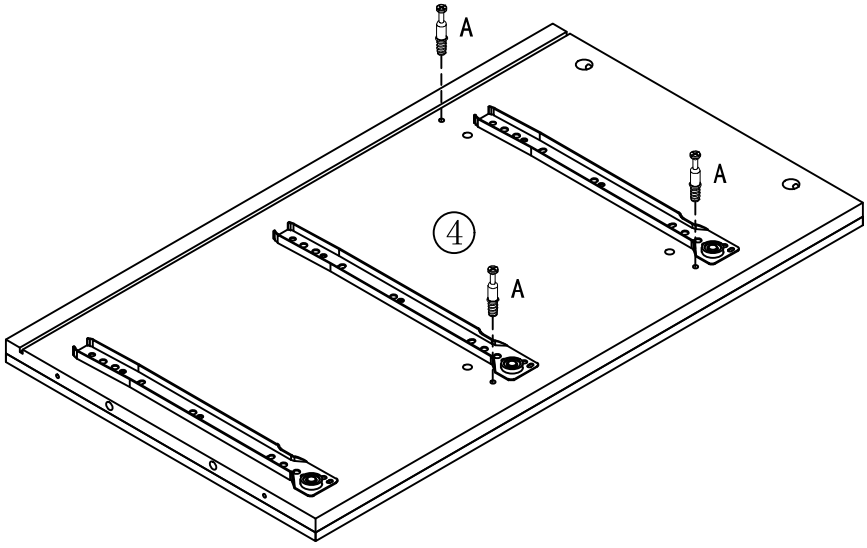



	A X 6PCS

STEP 3

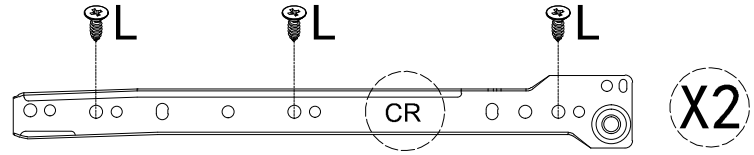


Pay attention to the hole position

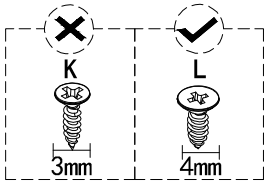


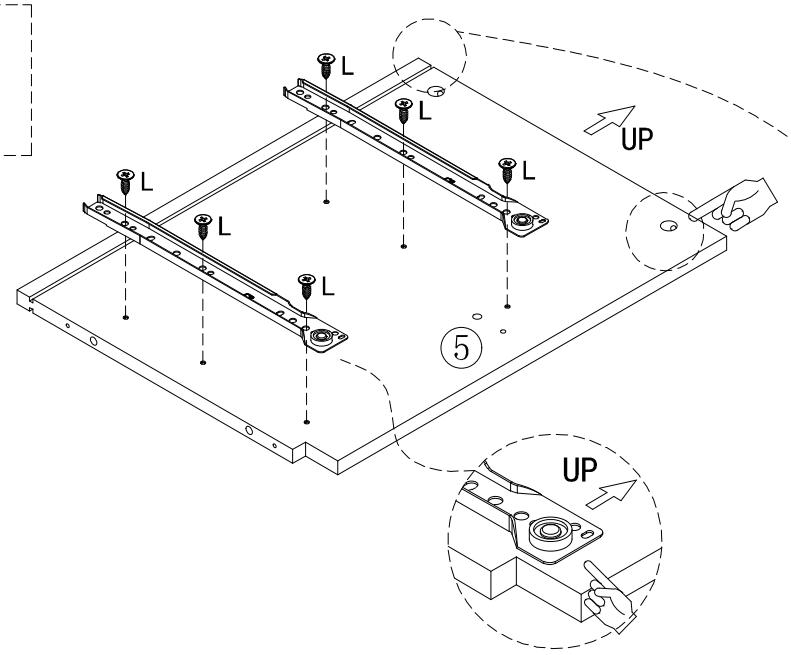



ROTATE180°

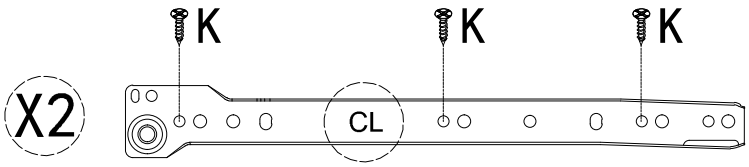

Pay attention to the hole position

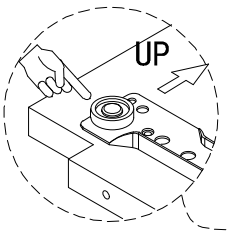


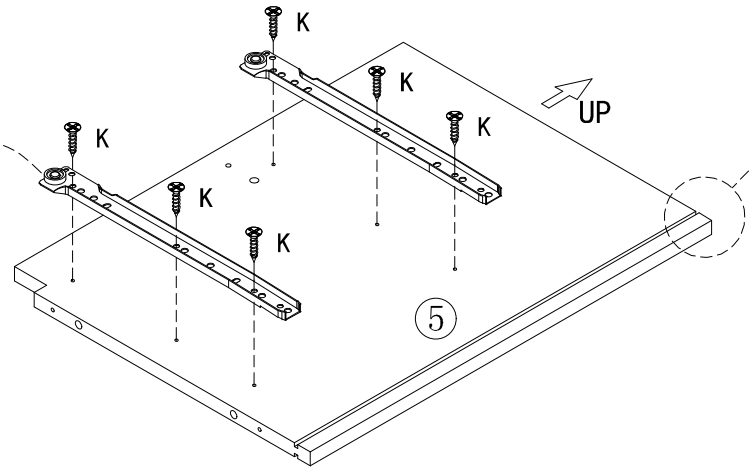

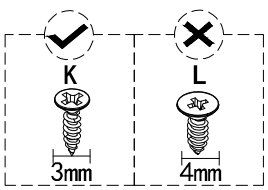



	K X 6PCS
	L X 6PCS

STEP 4

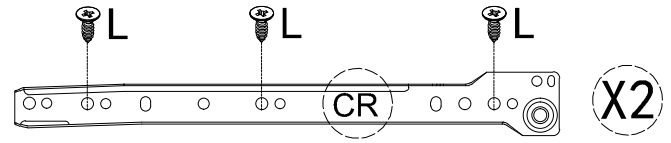


Pay attention to the hole position

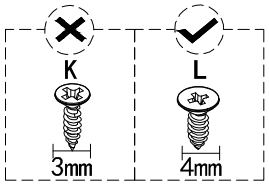


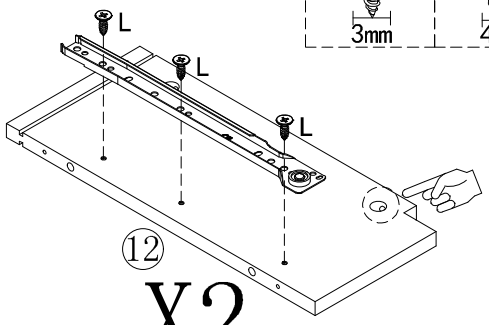


X2

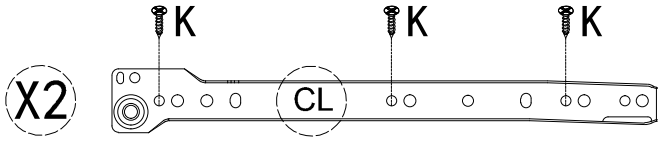

Pay attention to the hole position

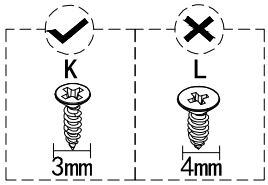

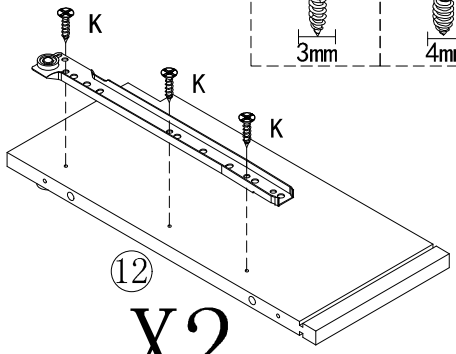


X2




	K X 6PCS
	L X 6PCS

STEP 5

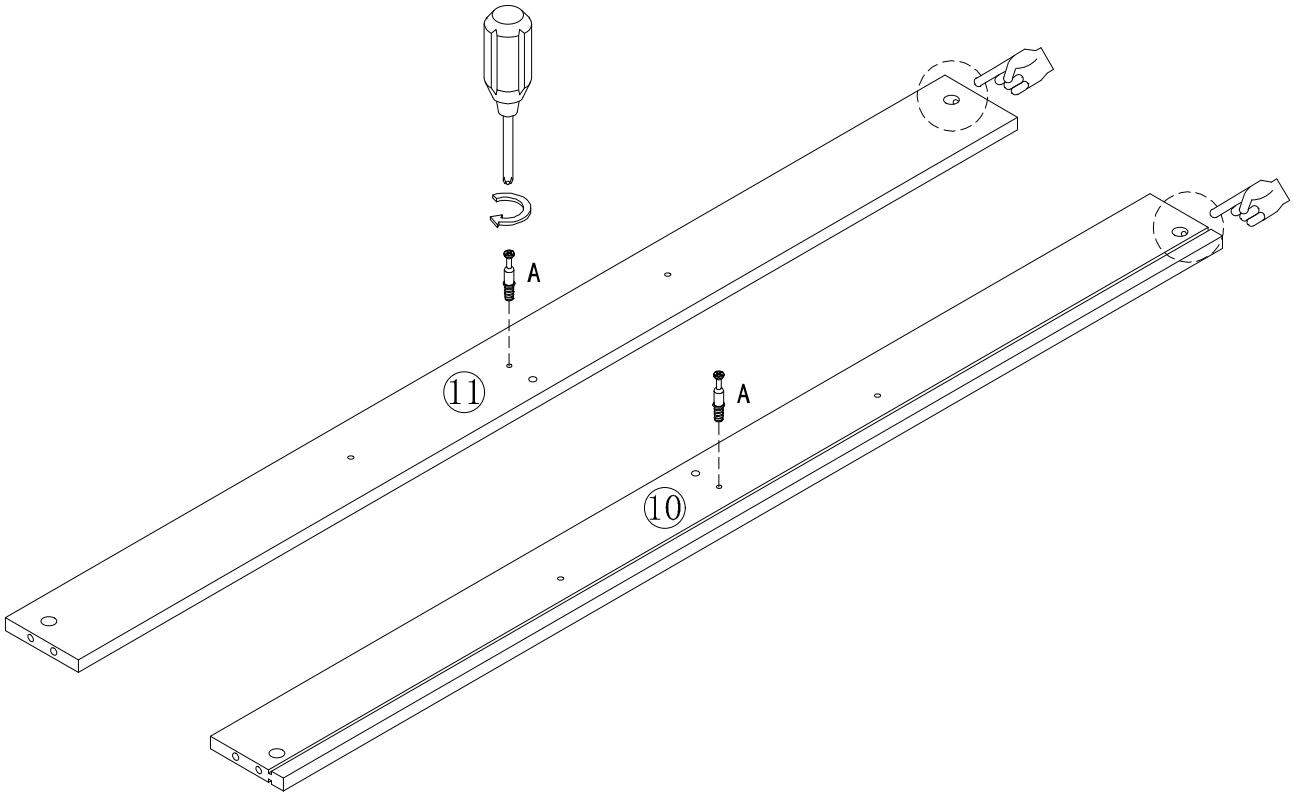


	A X 2PCS

STEP 6

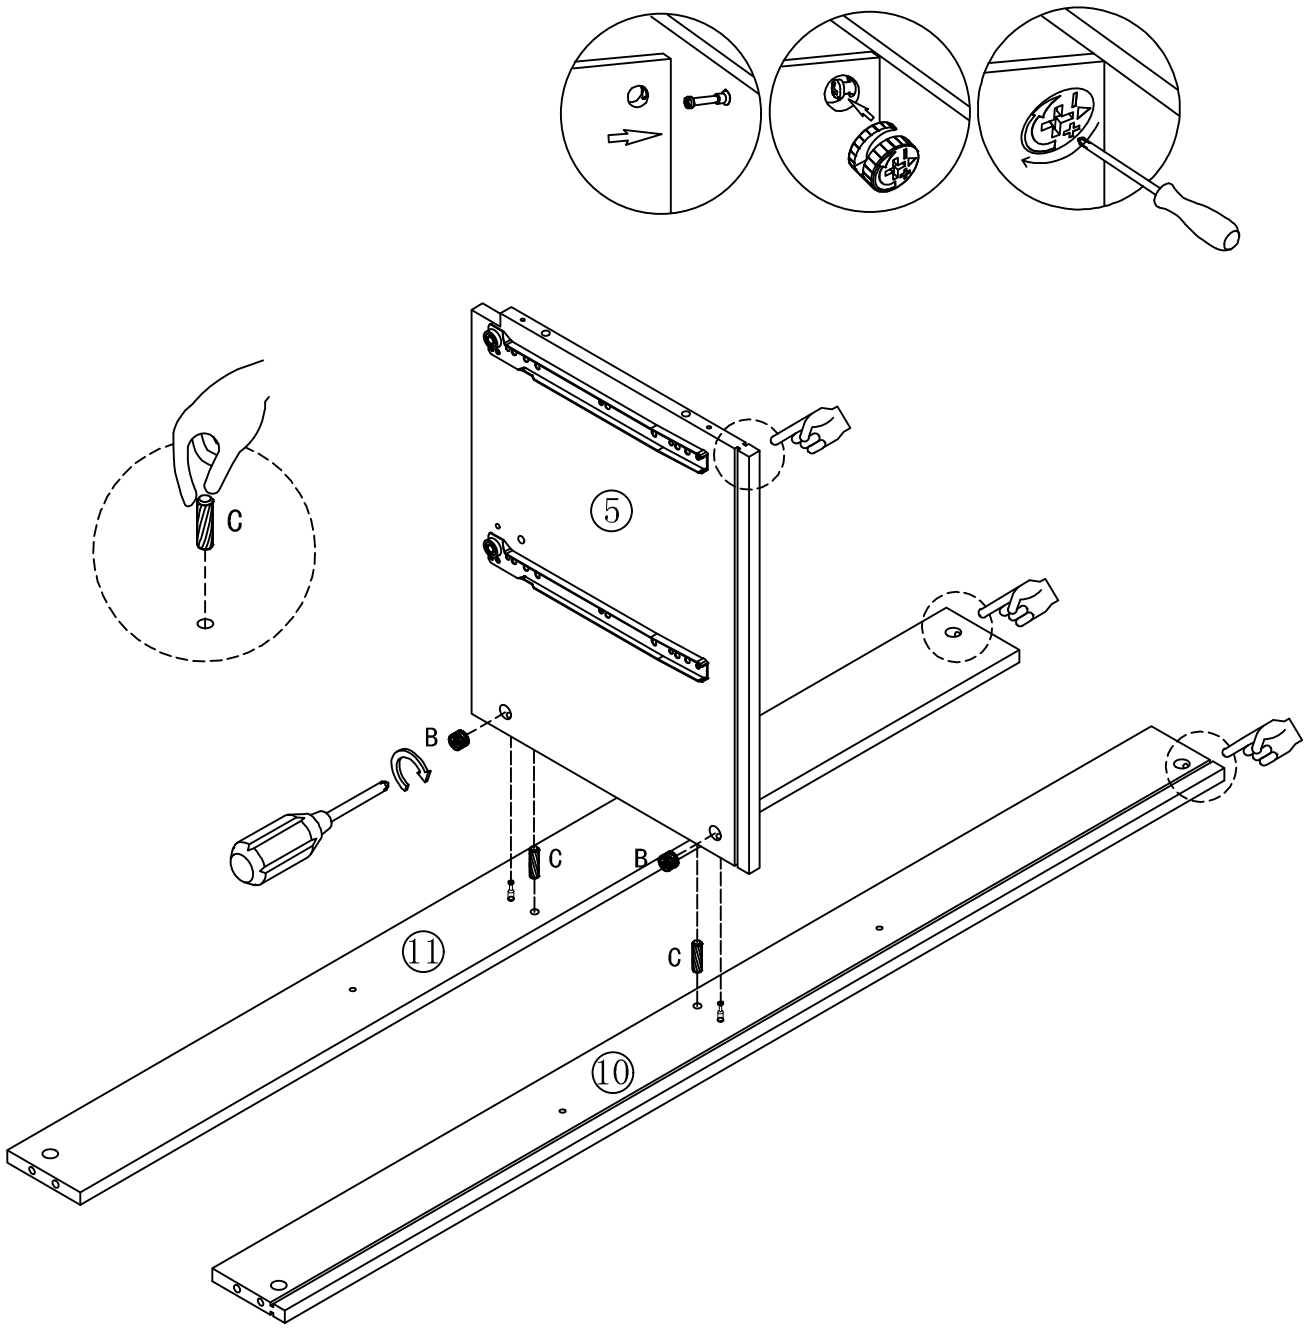


	B X 2PCS
	C X 2PCS

STEP 7

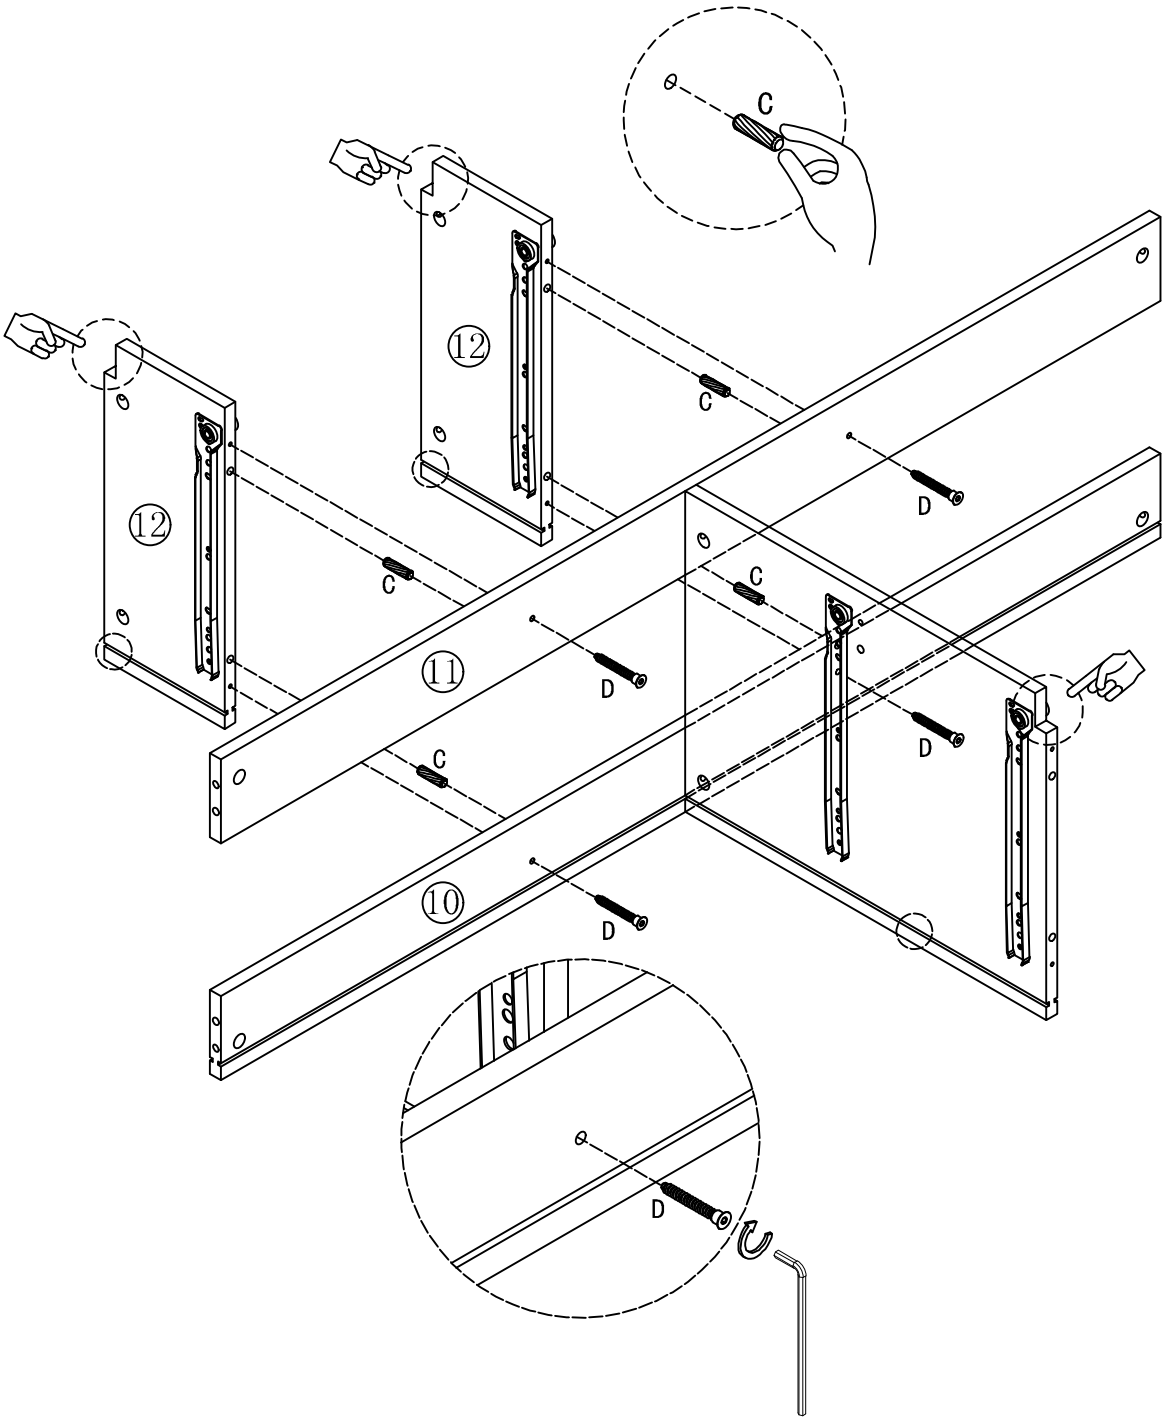


	C X 4PCS
	D X 4PCS

STEP 8

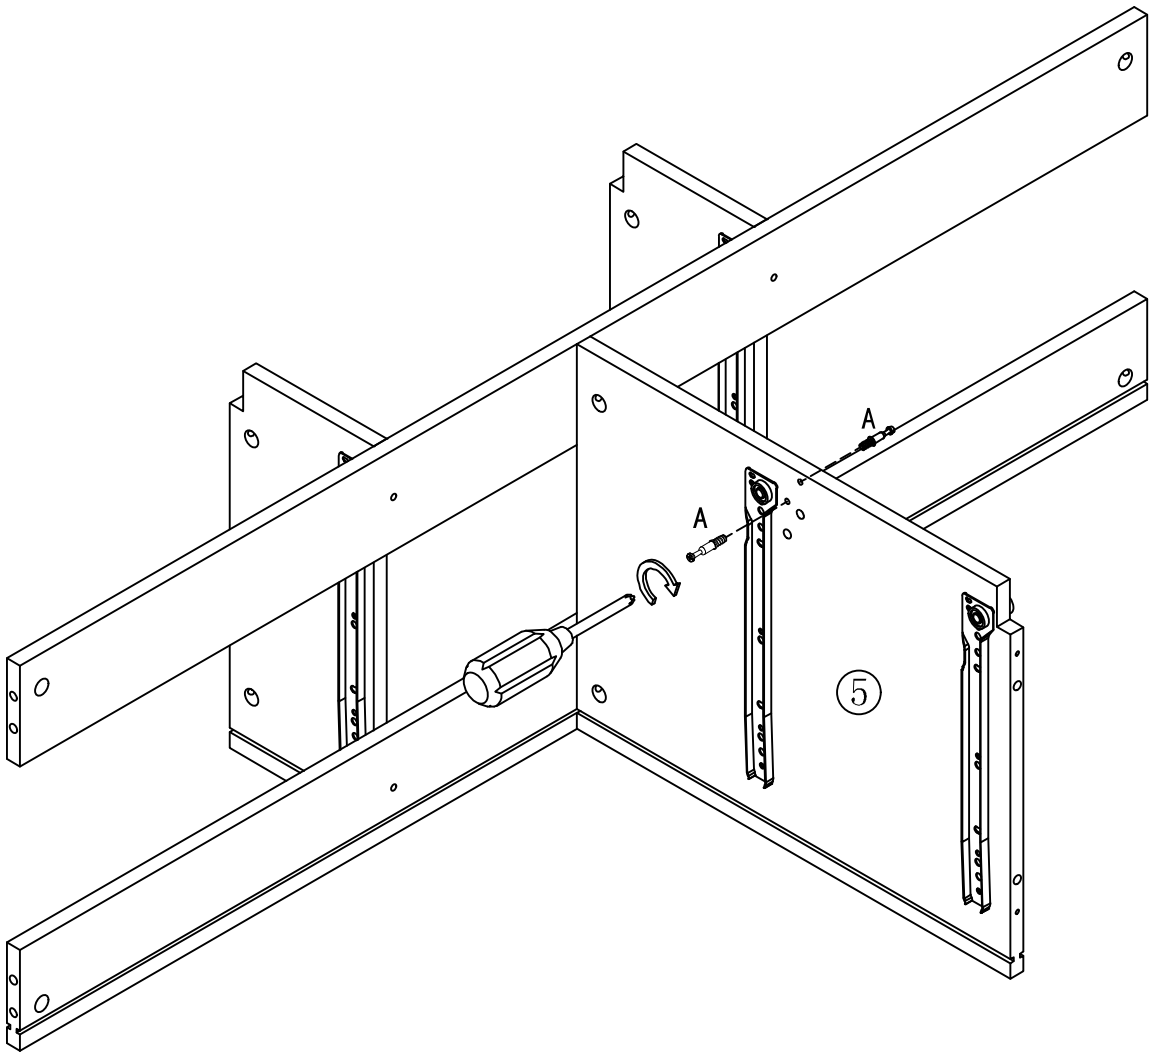


	A X 2PCS

STEP 9

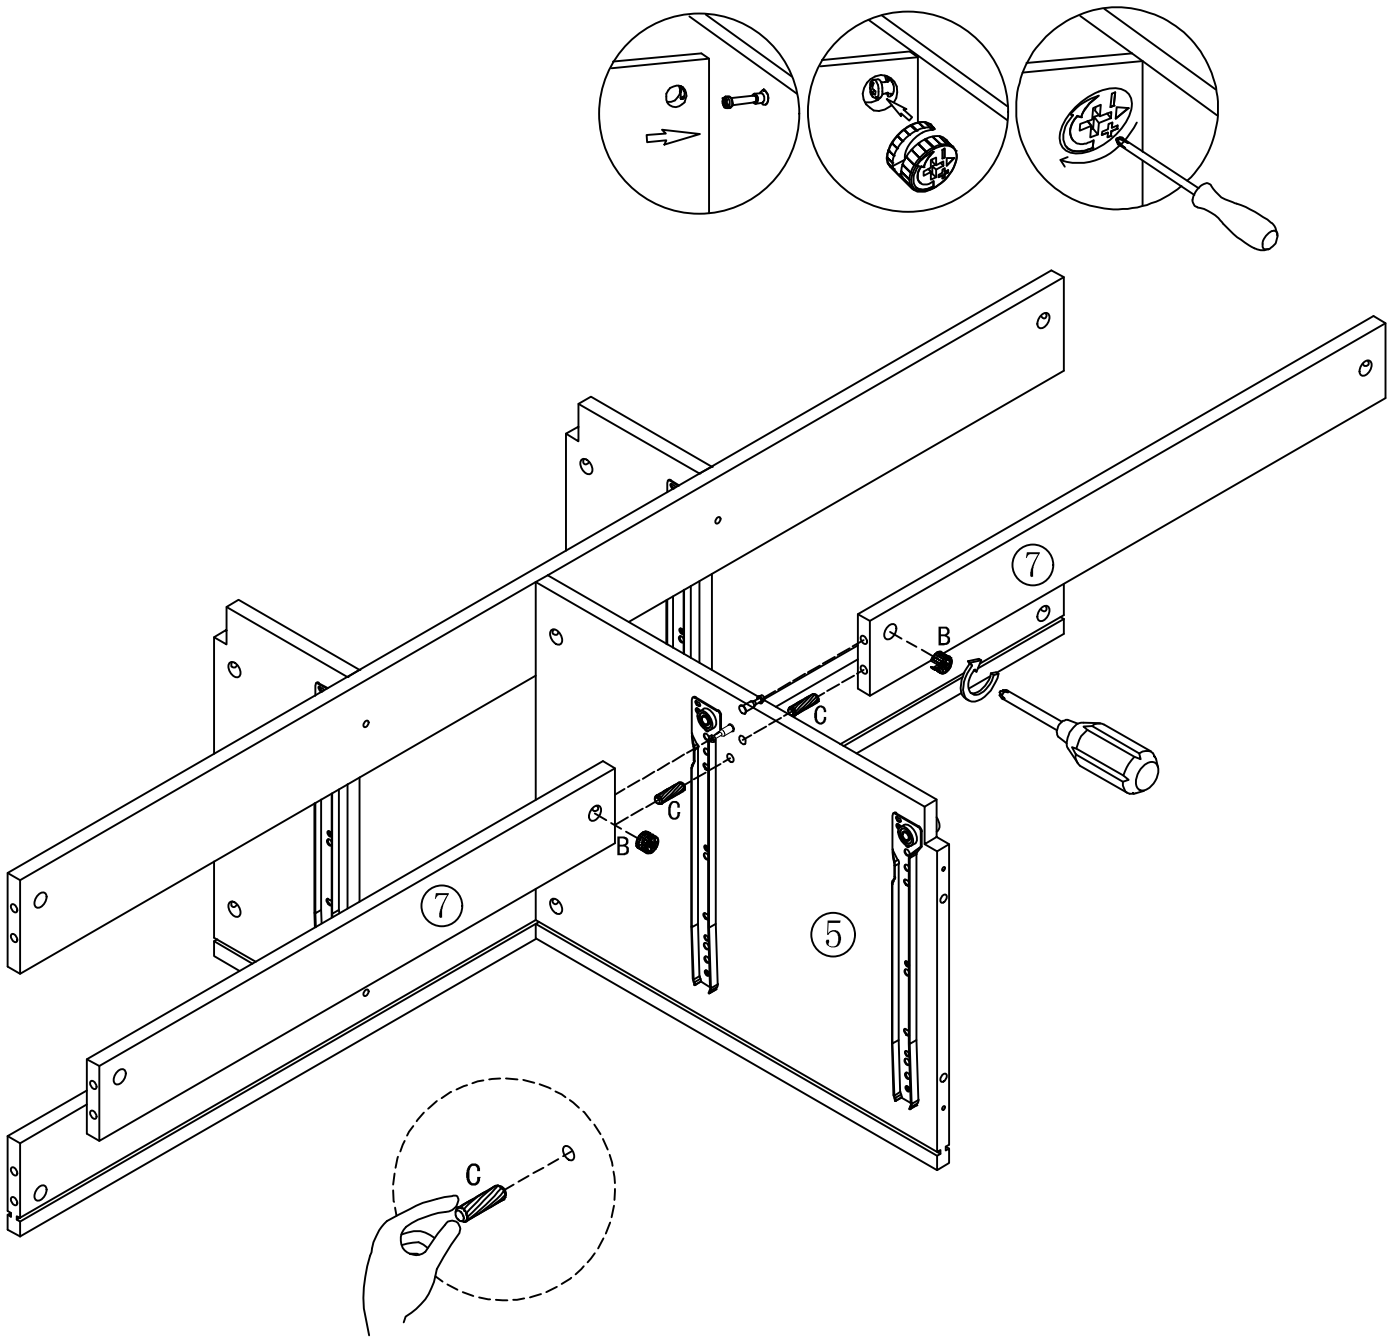


	B X 2PCS
	C X 2PCS

STEP 10

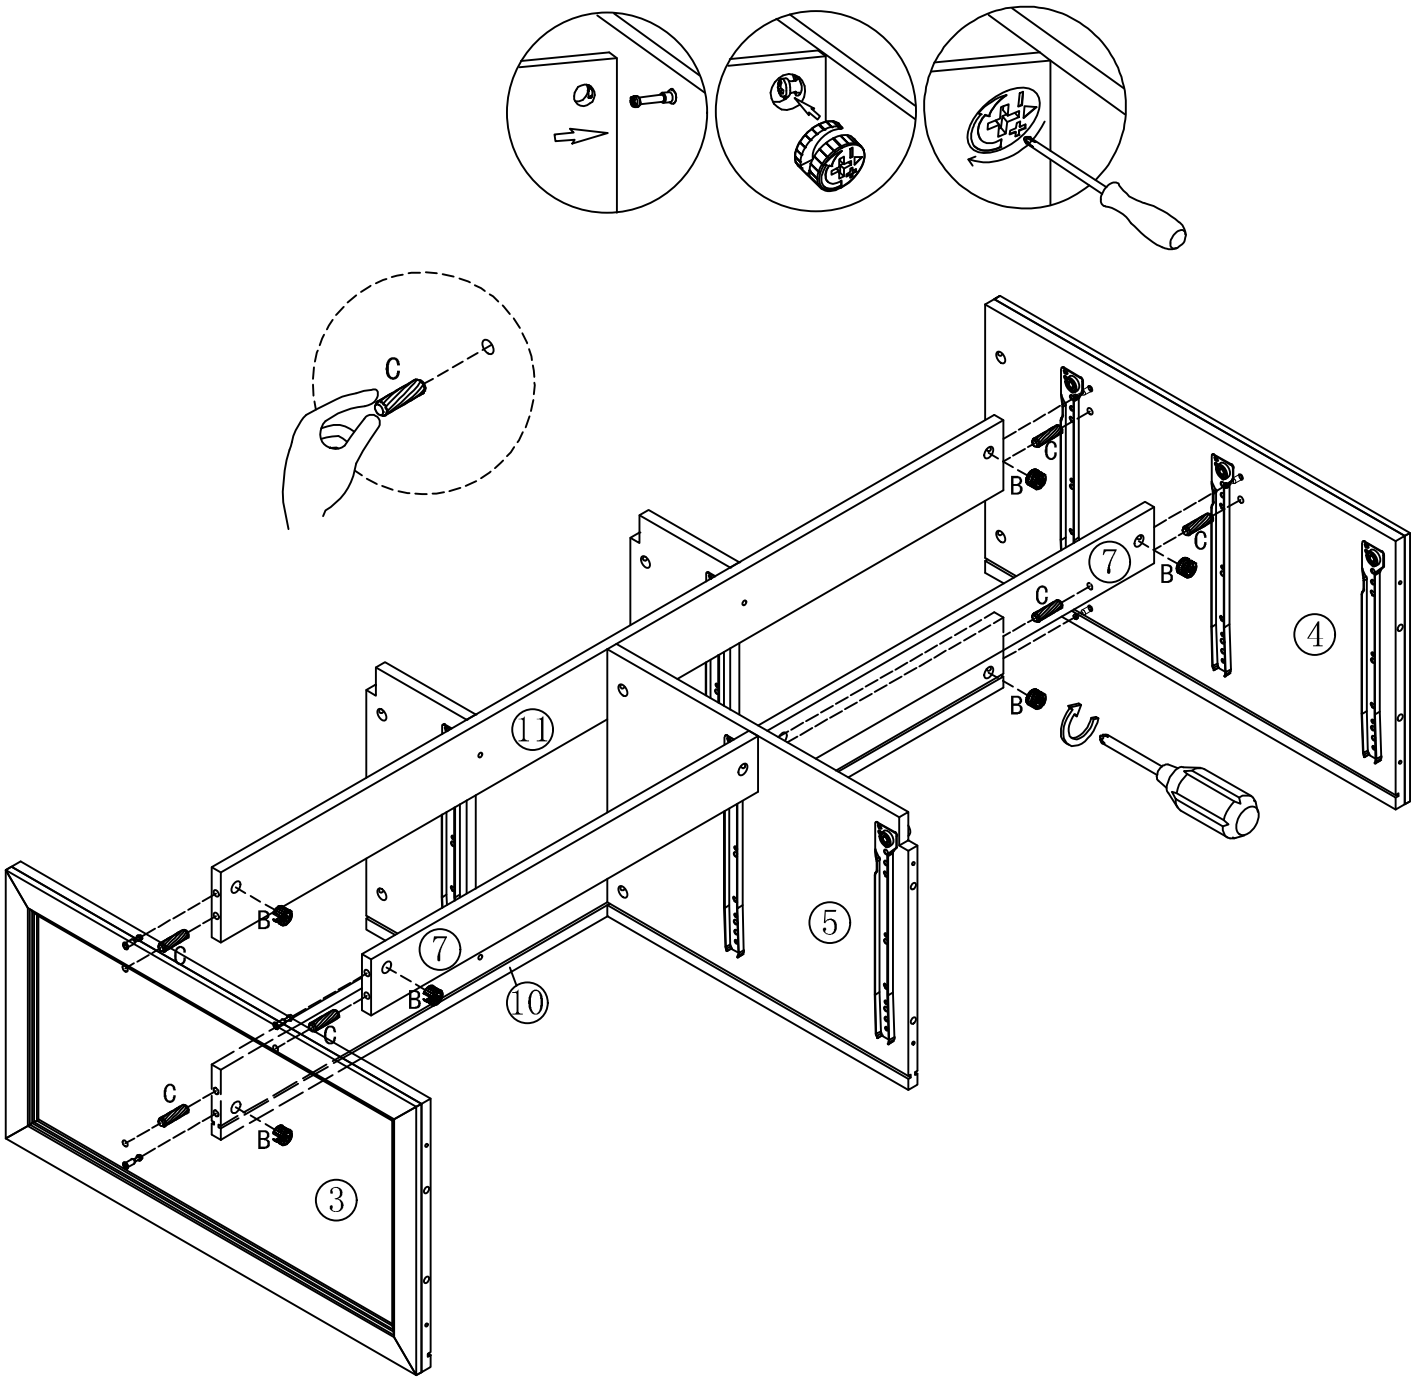


	B X 6PCS
	C X 6PCS

STEP 11

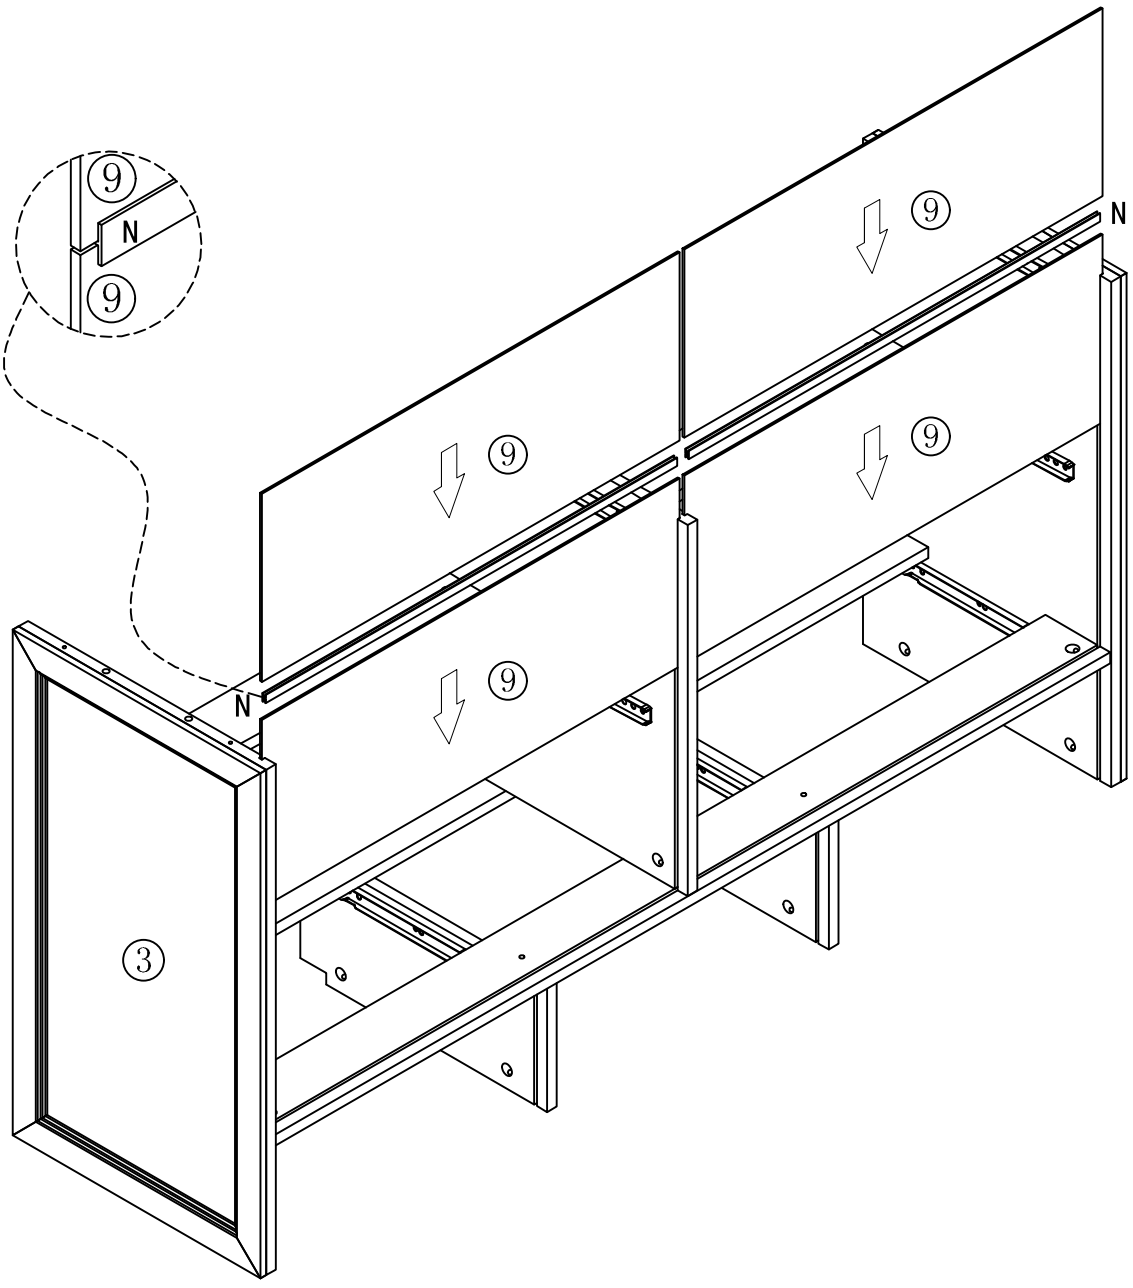


N X 2PCS

STEP 12

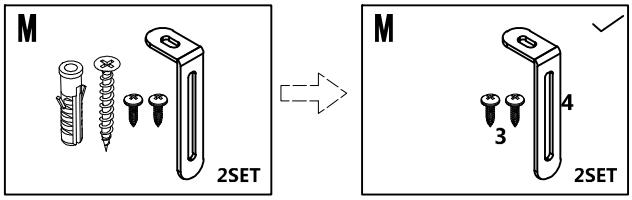


Note: Put the anti-tip device M4 on the top, near theback side, and fix it with a screw M3.

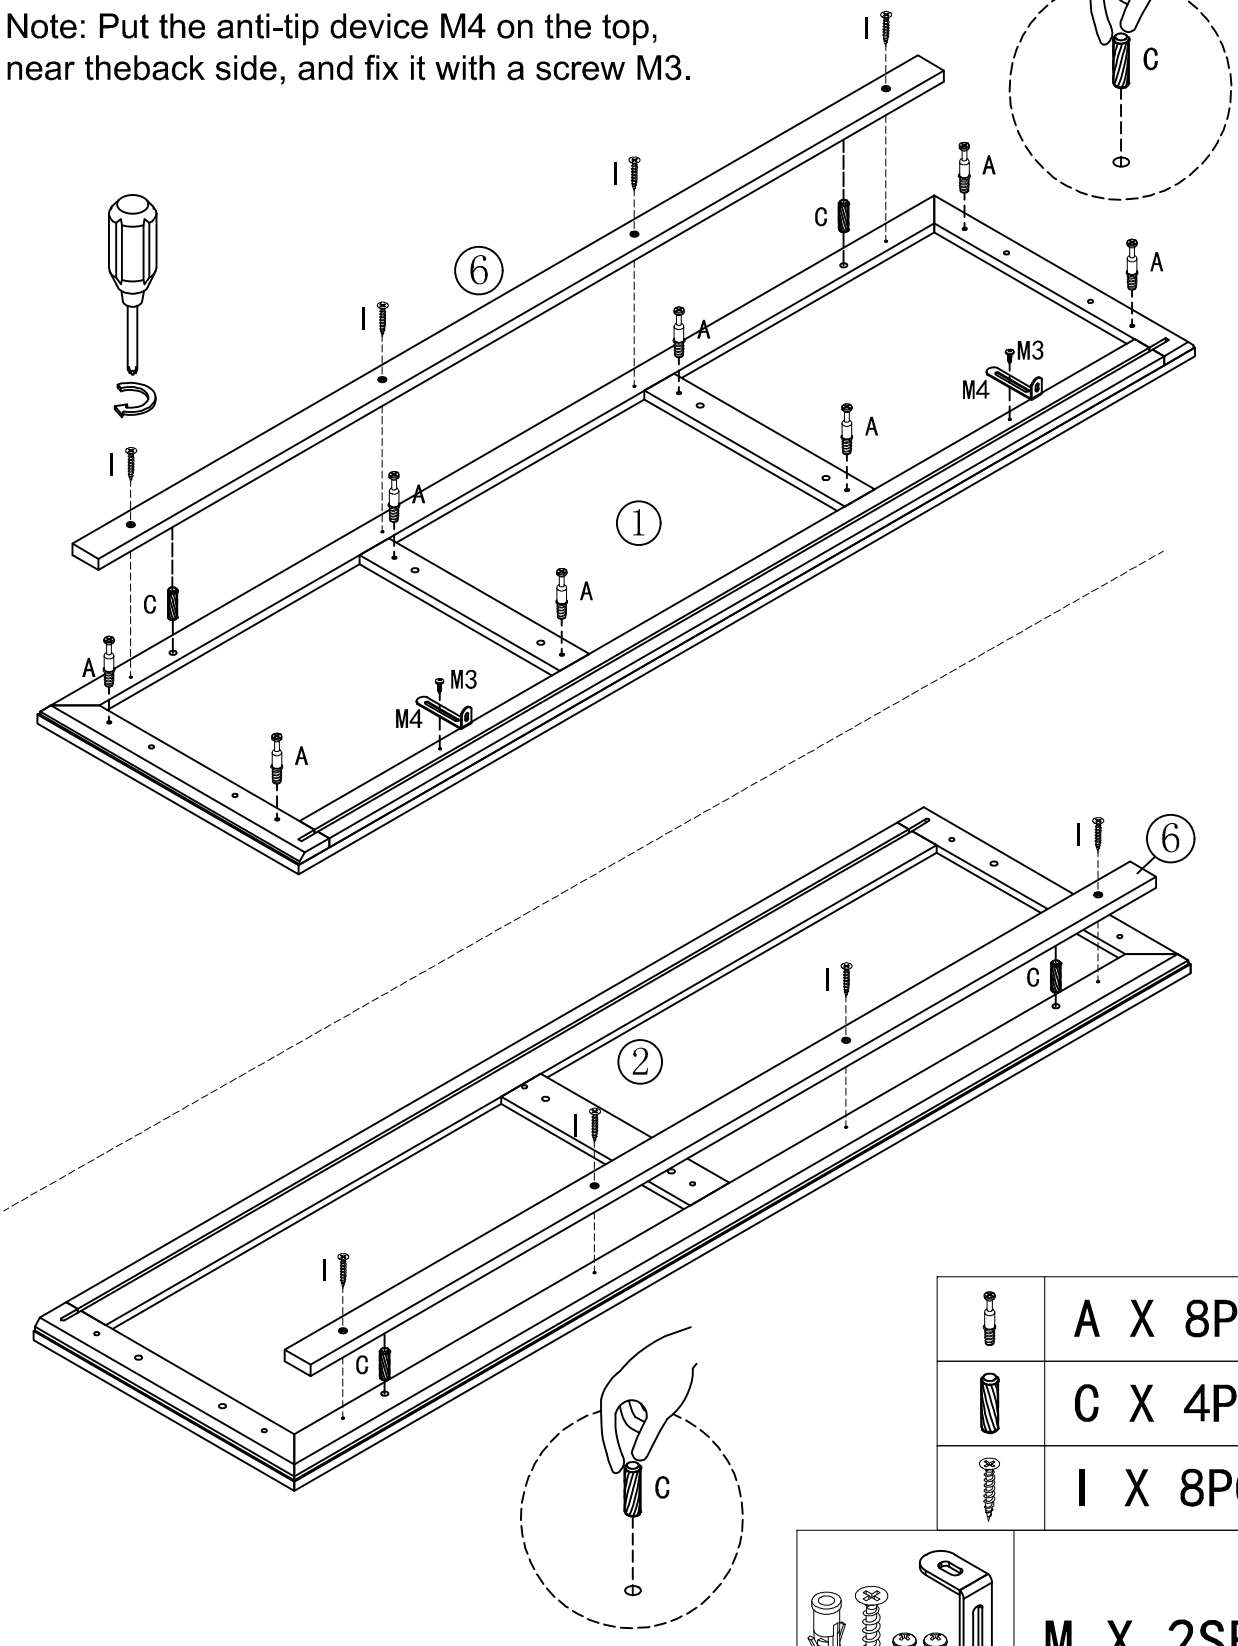


	A X 8PCS
	C X 4PCS
	I X 8PCS
	M X 2SET

STEP 13

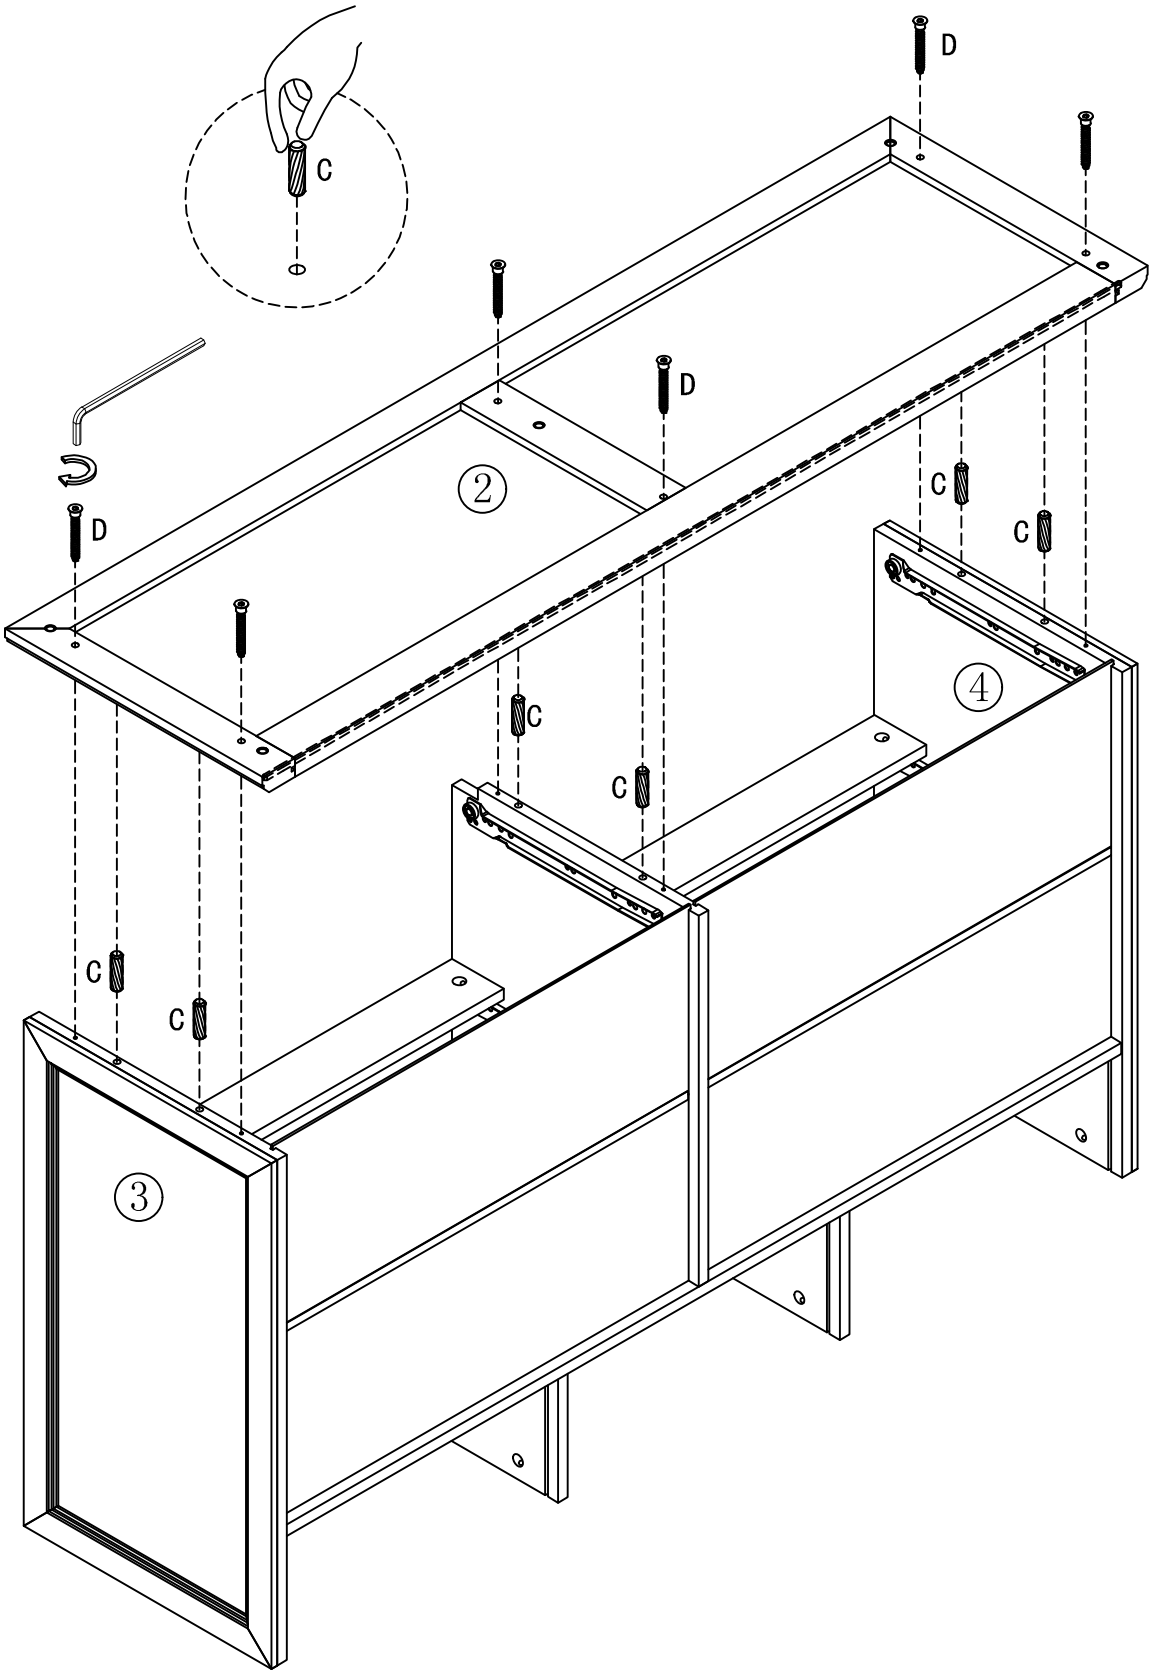


	C X 6PCS
	D X 6PCS

STEP 14

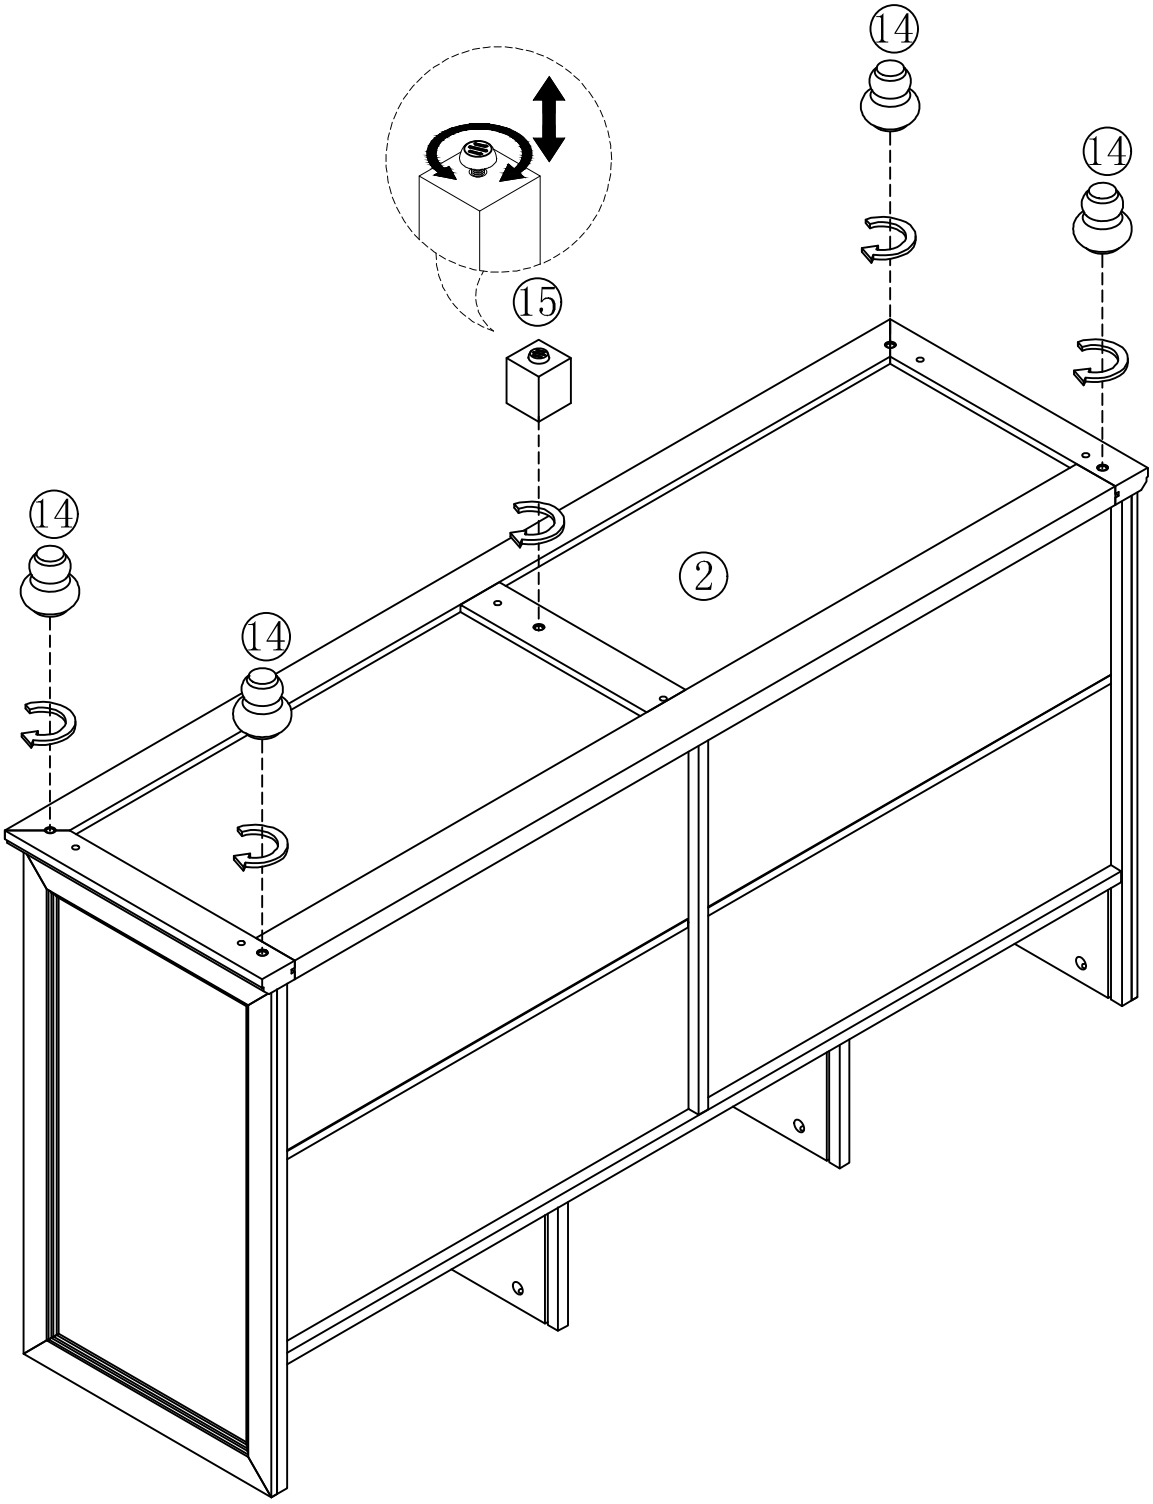


STEP 15

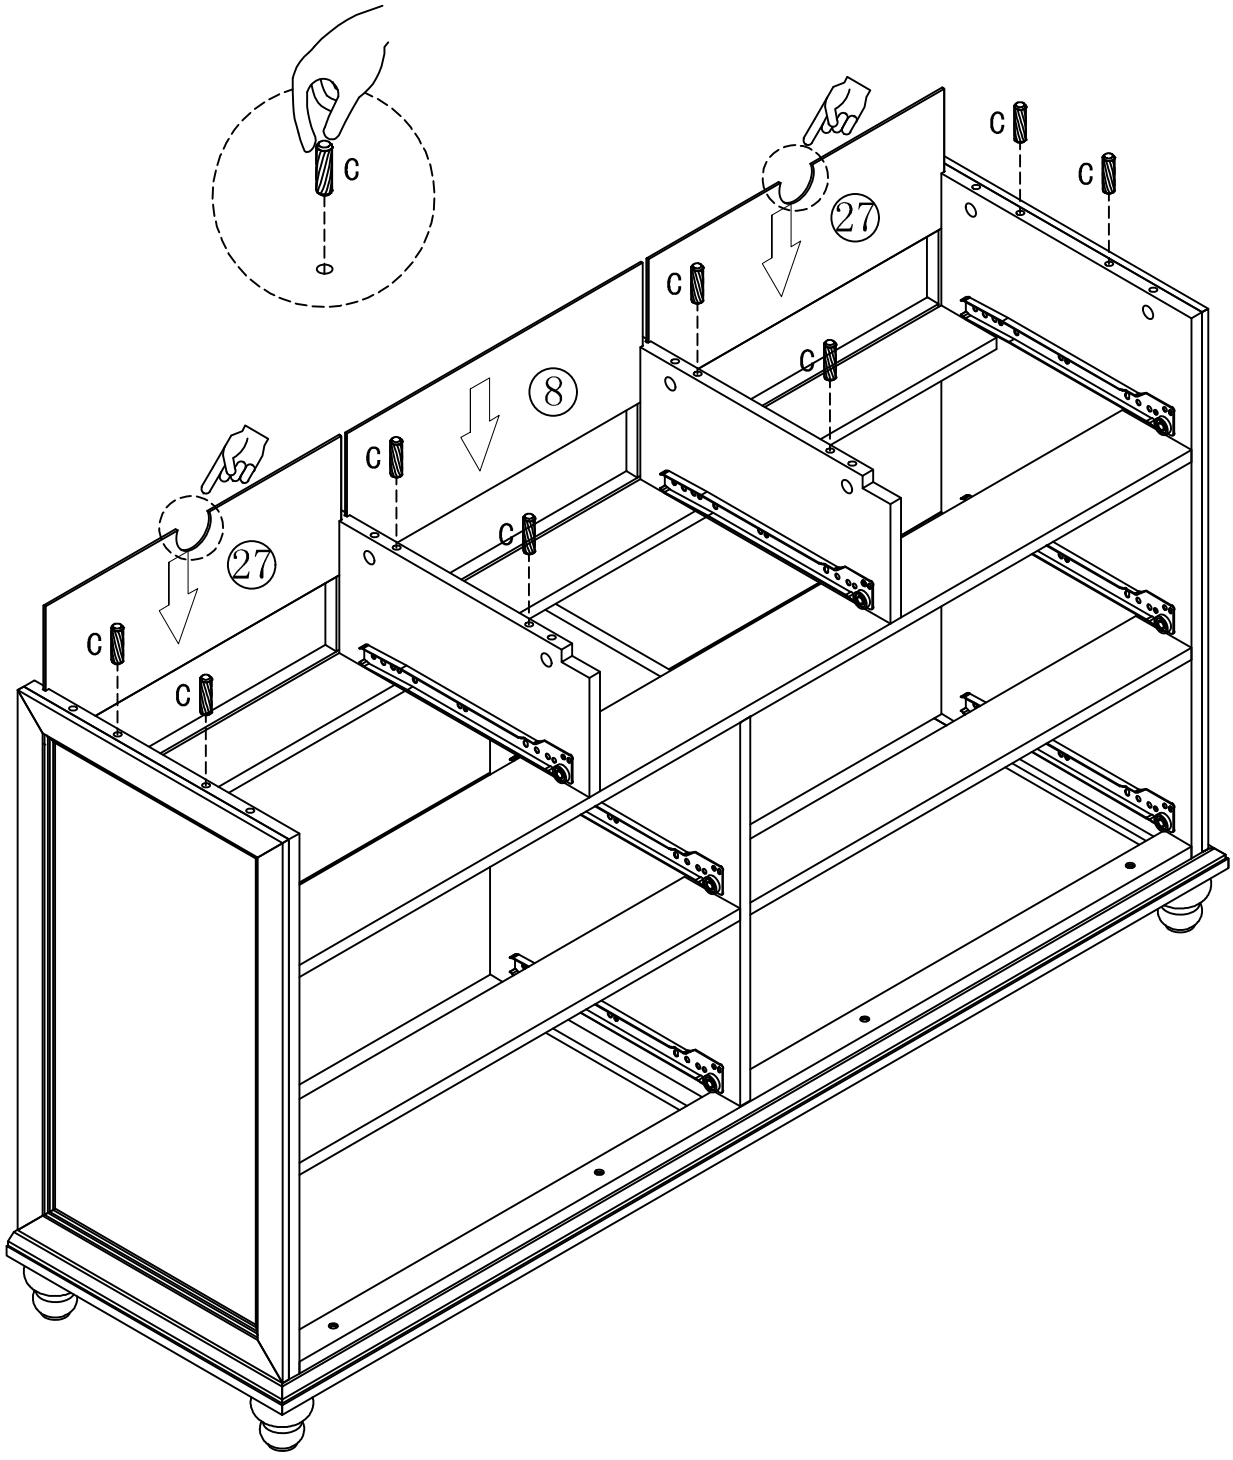

	C X 8PCS


STEP 16

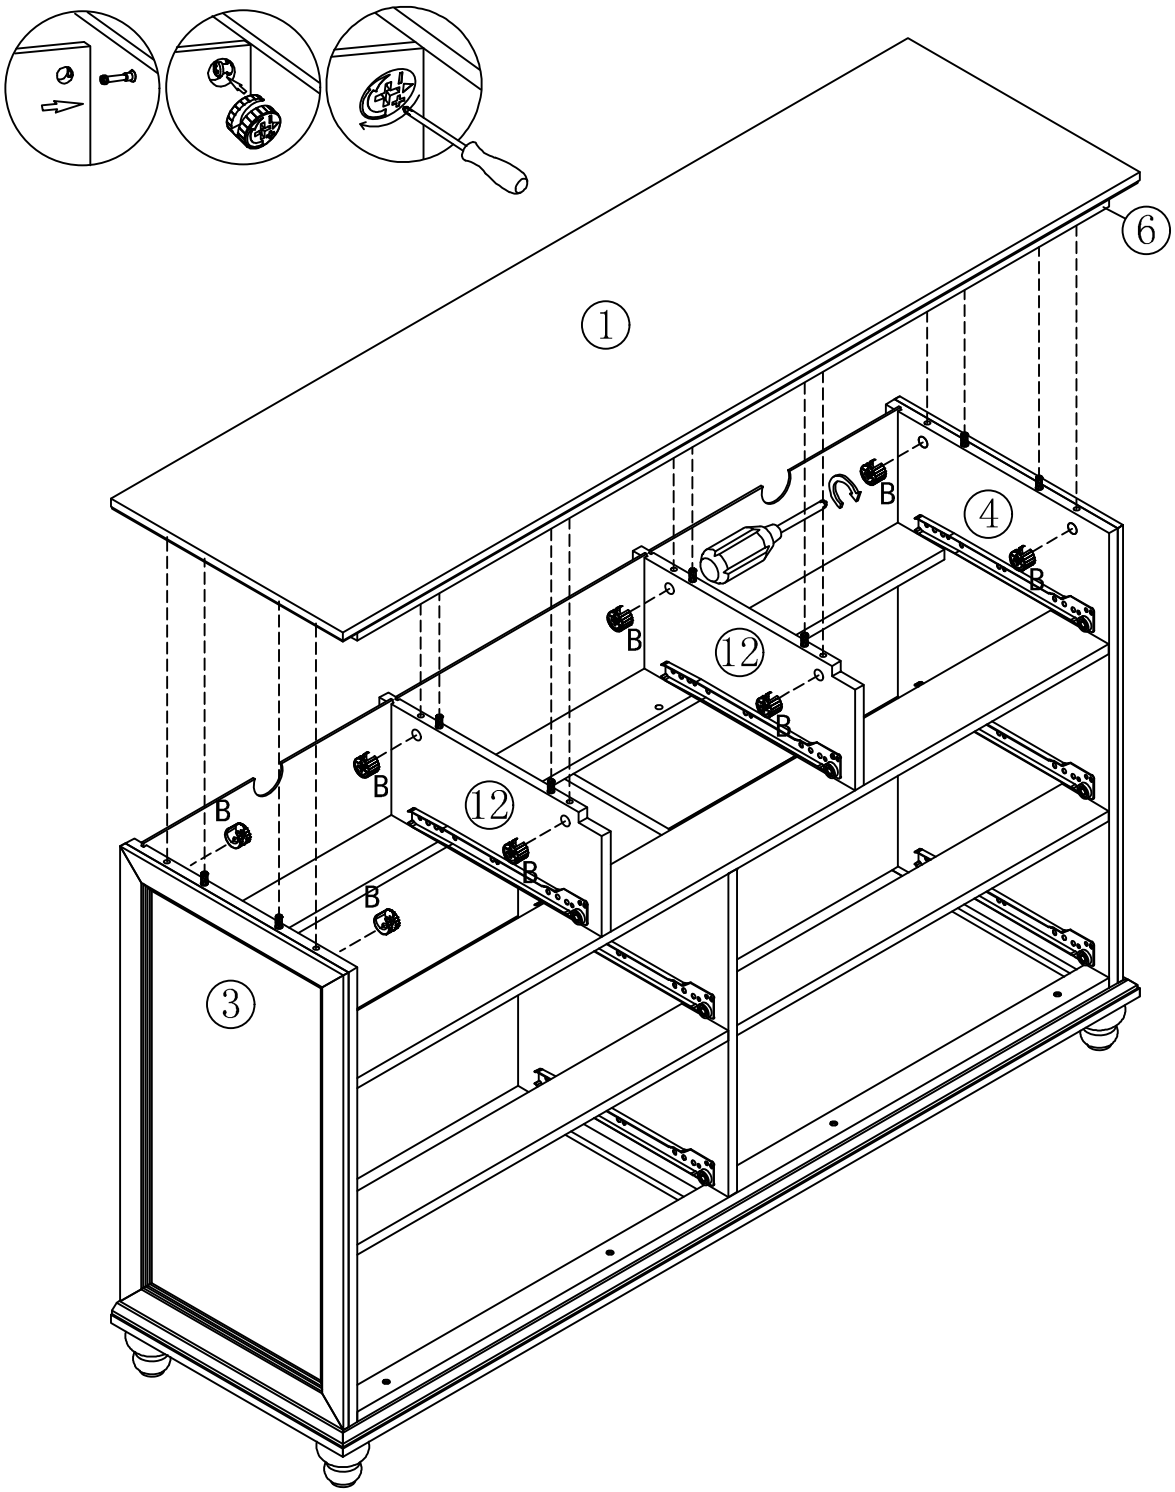

	B X 8PCS


STEP 17

NOTE:To prevent the cabinet
from wobbling
please be sure to install
the back panel fasteners.

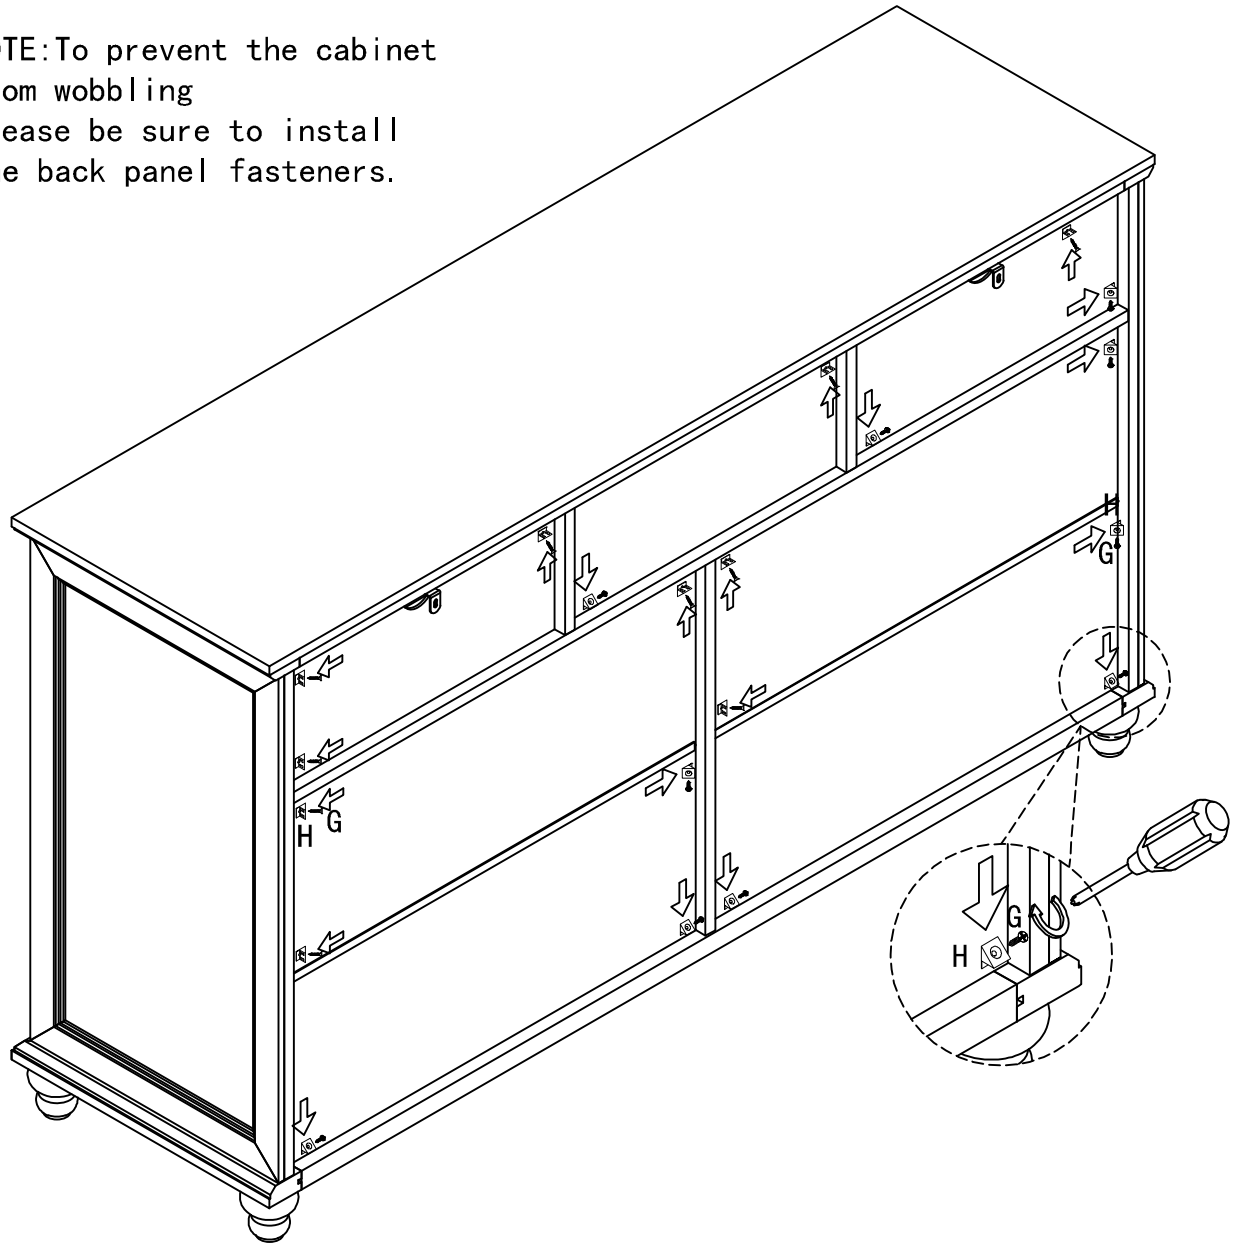

	H X 20PCS
	G X 20PCS


STEP 18

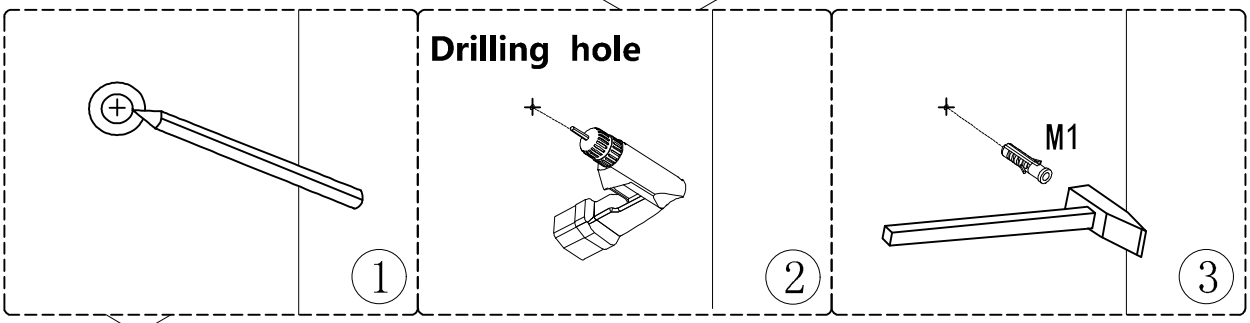


Drill a hole in the wall, then hammer the M1 into the wall with a hammer


WALL

Note: Follow step
Link M4 and M1 with a M2 using a screwdriver,and assembly it tightly.

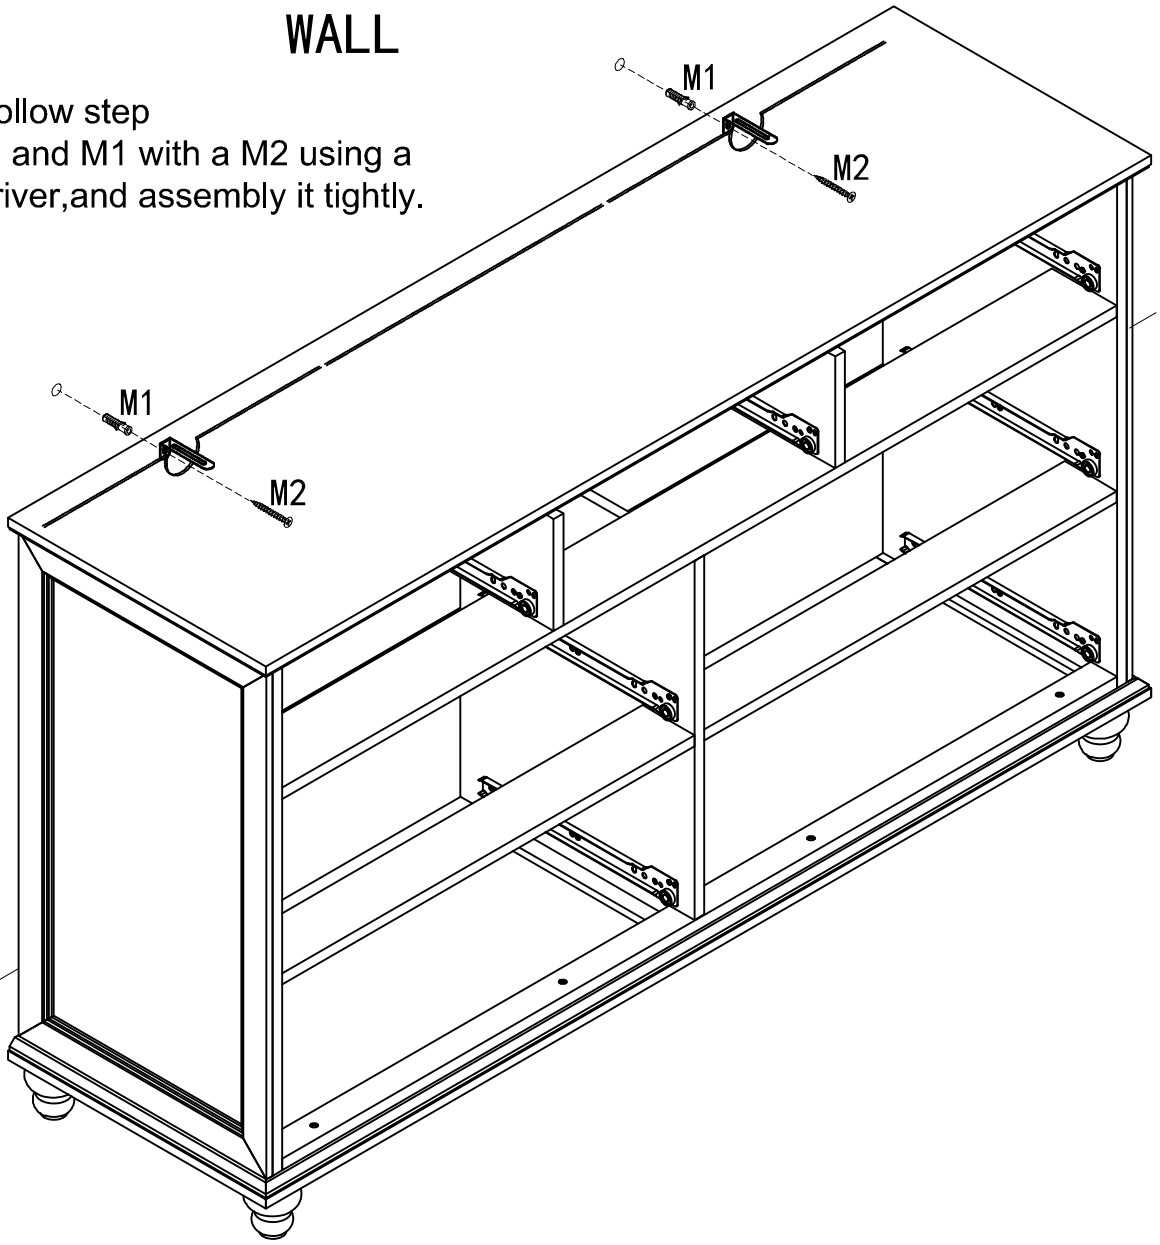


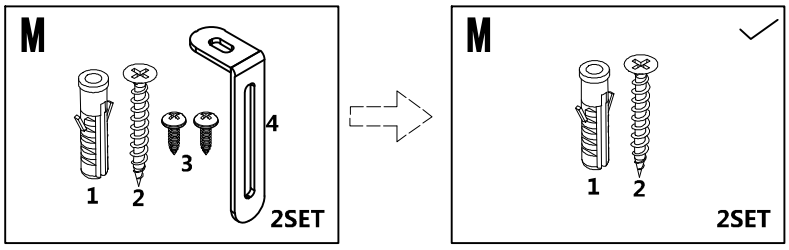

STEP 19

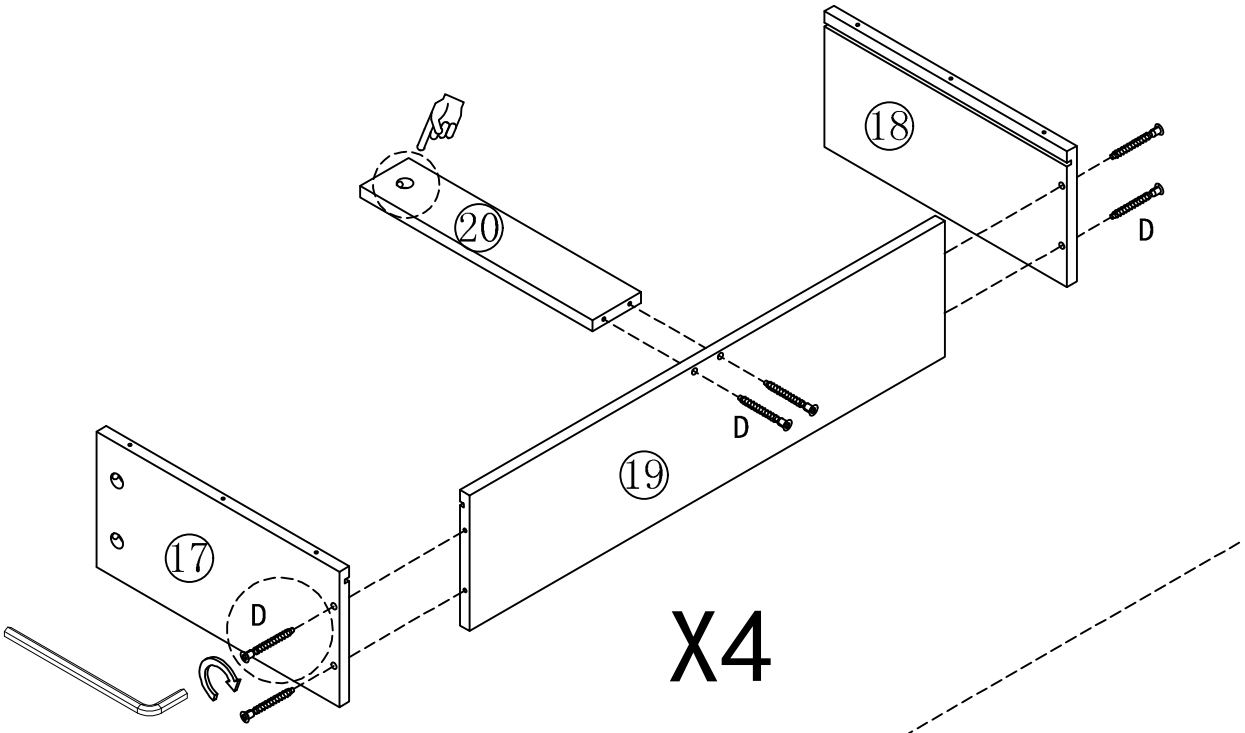


X4

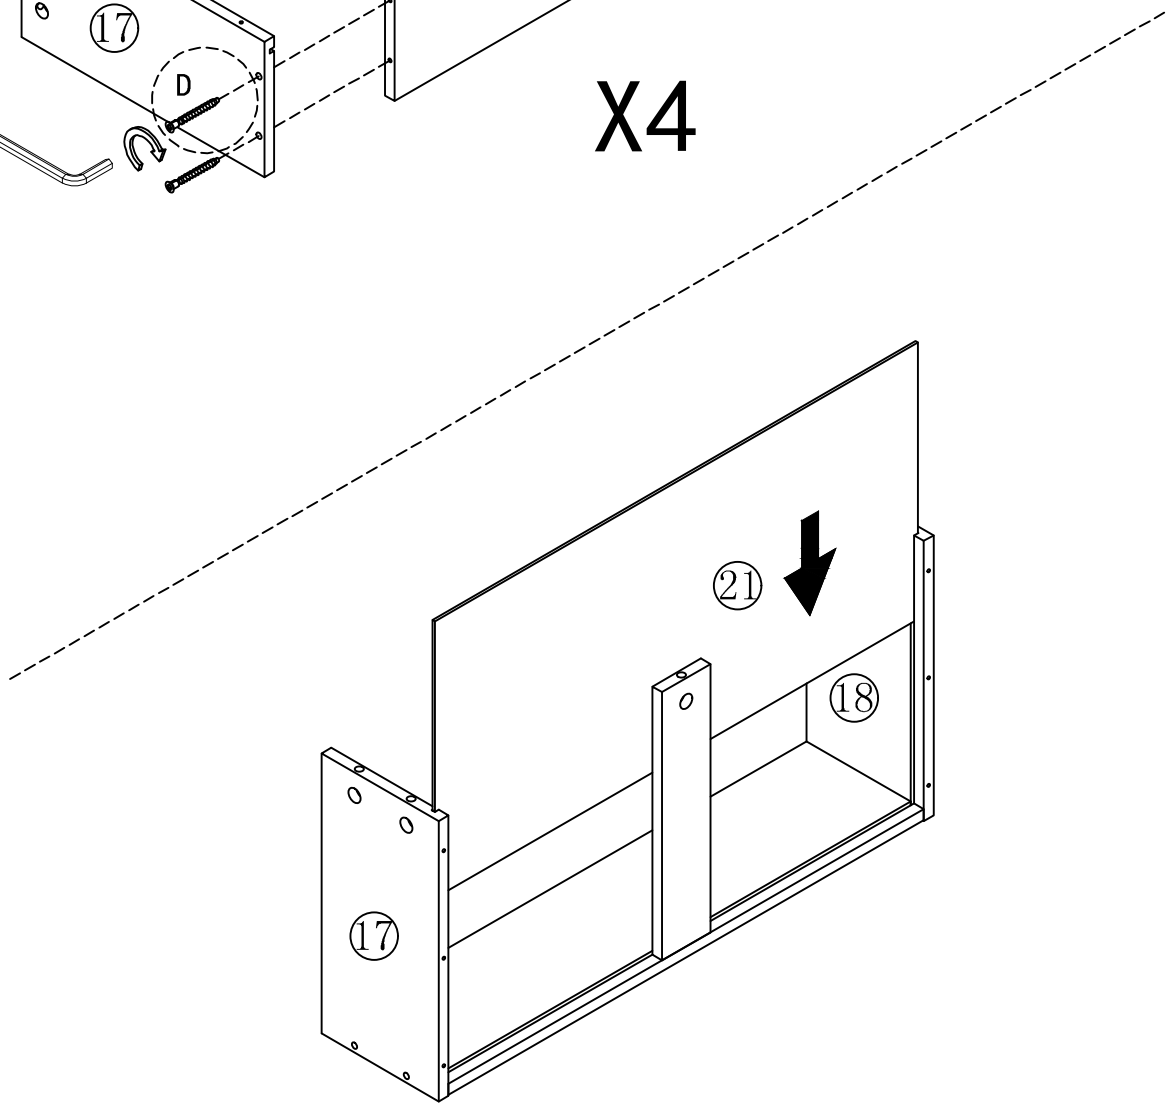


X4

D X 24PCS

STEP 20

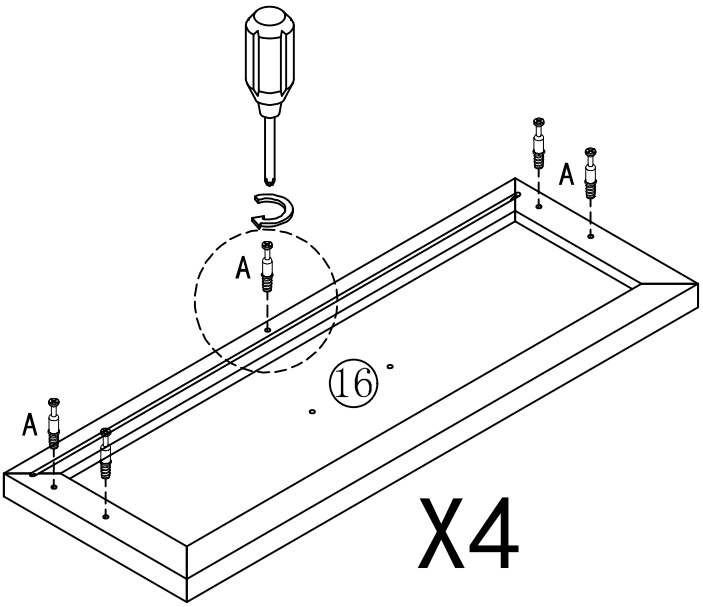


X4

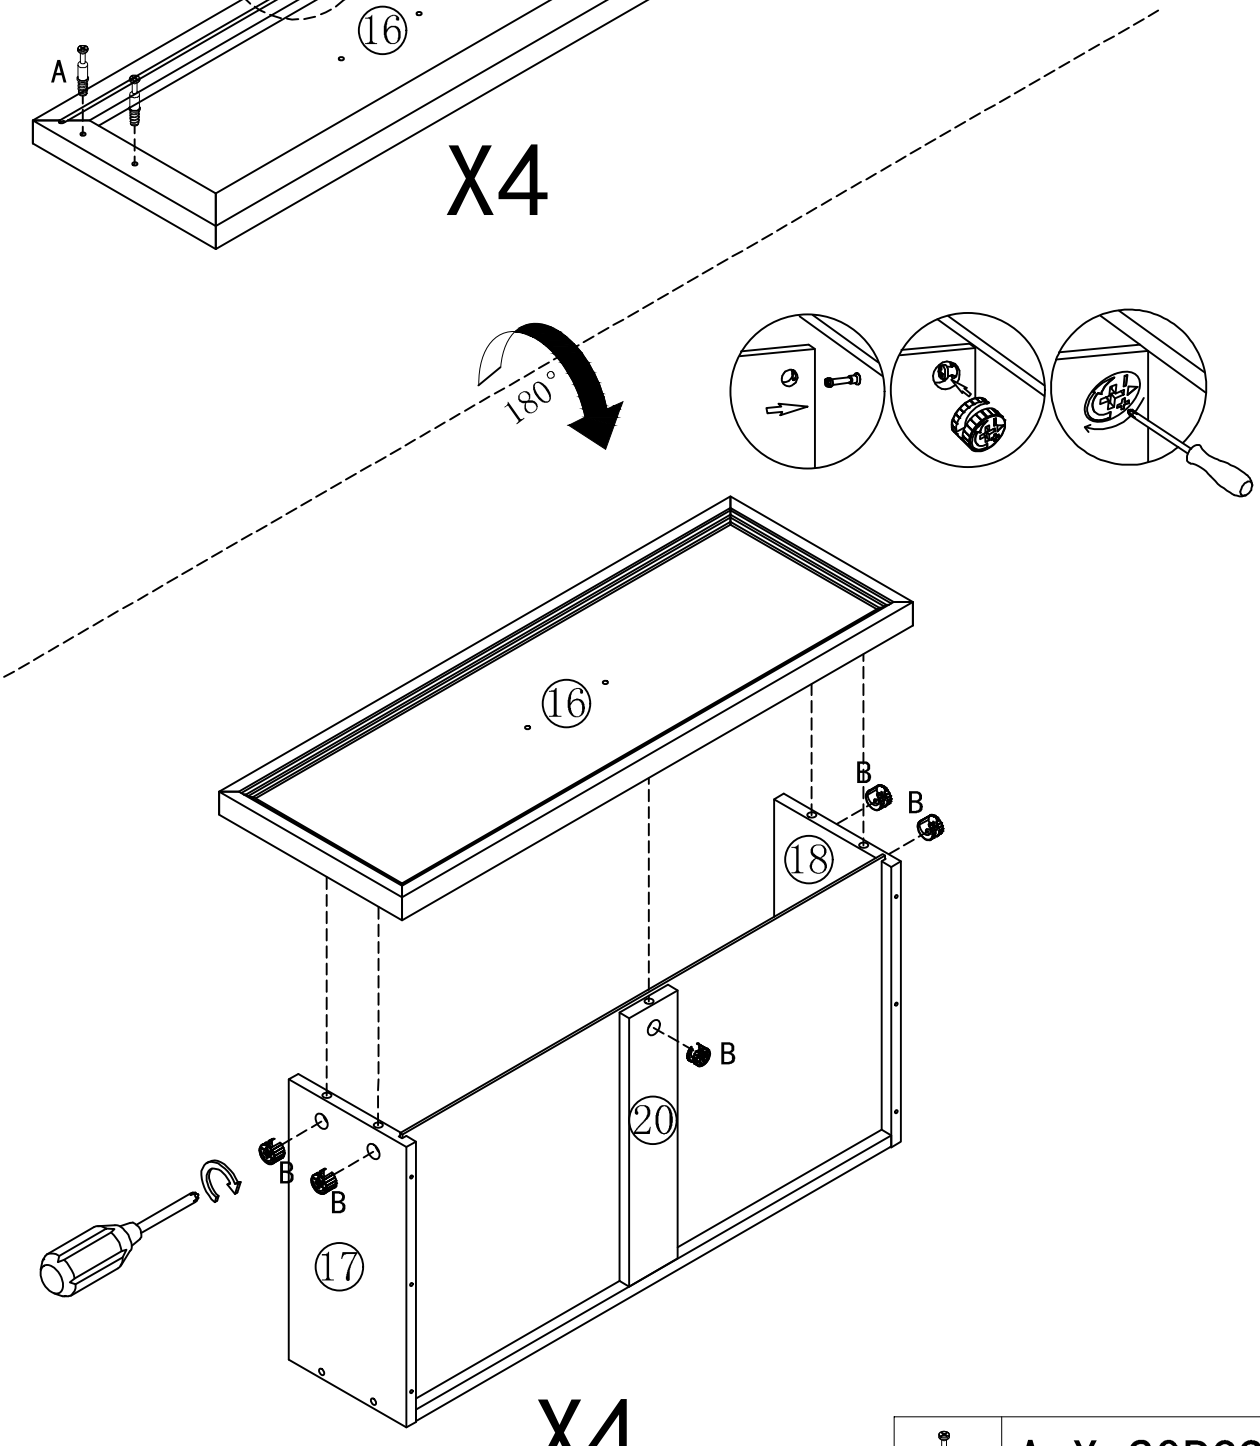

X4


	A X 20PCS
	B X 20PCS


STEP 21

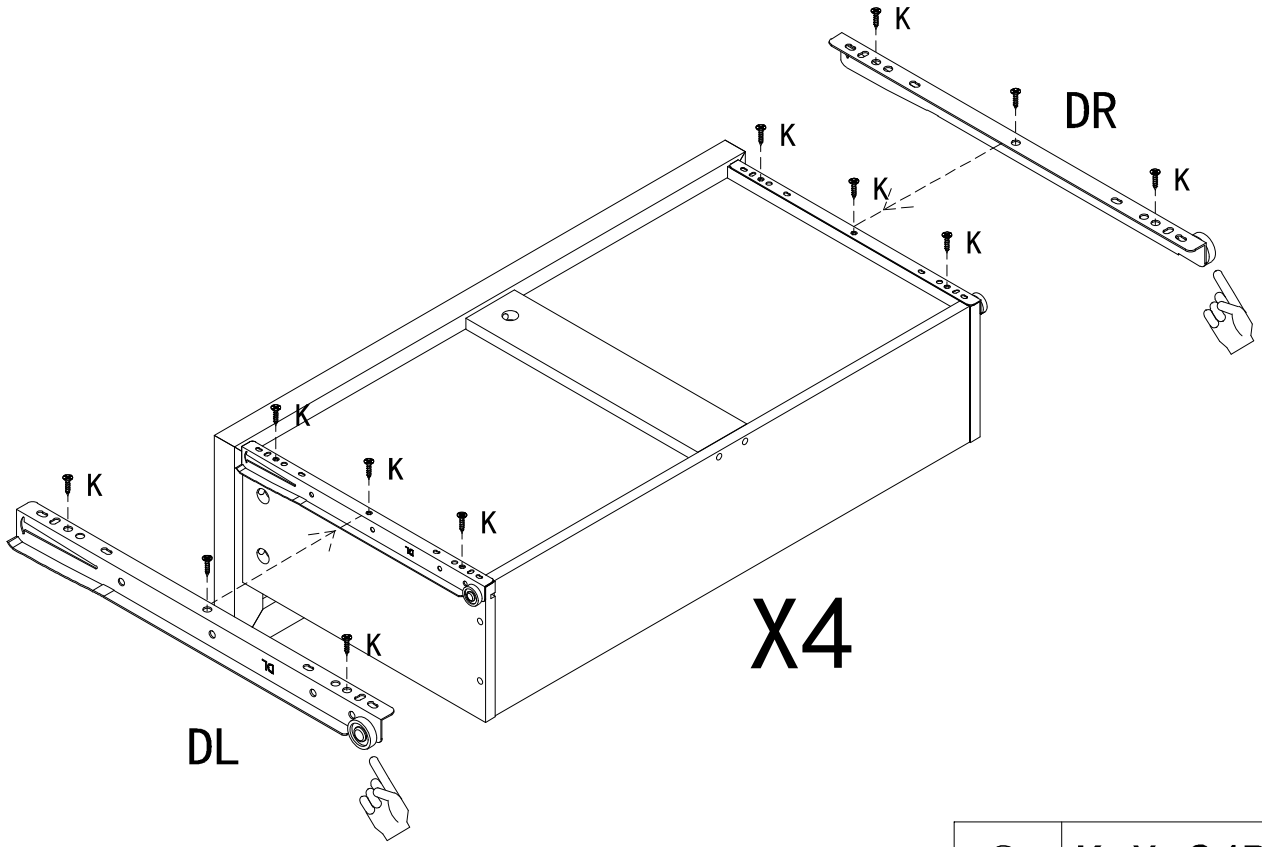

	K X 24PCS


STEP 22

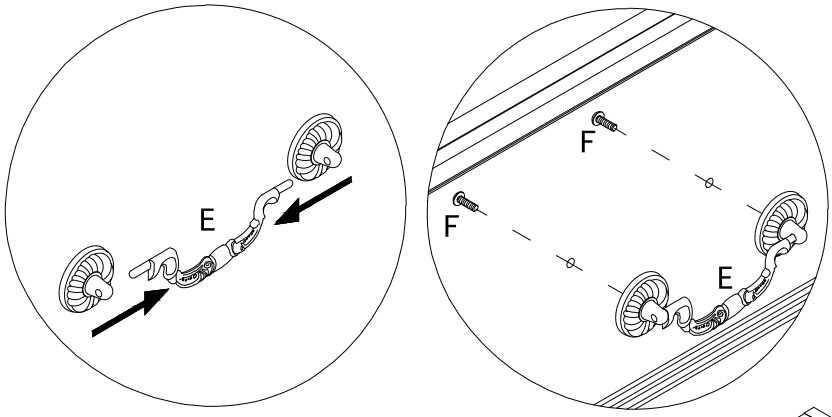

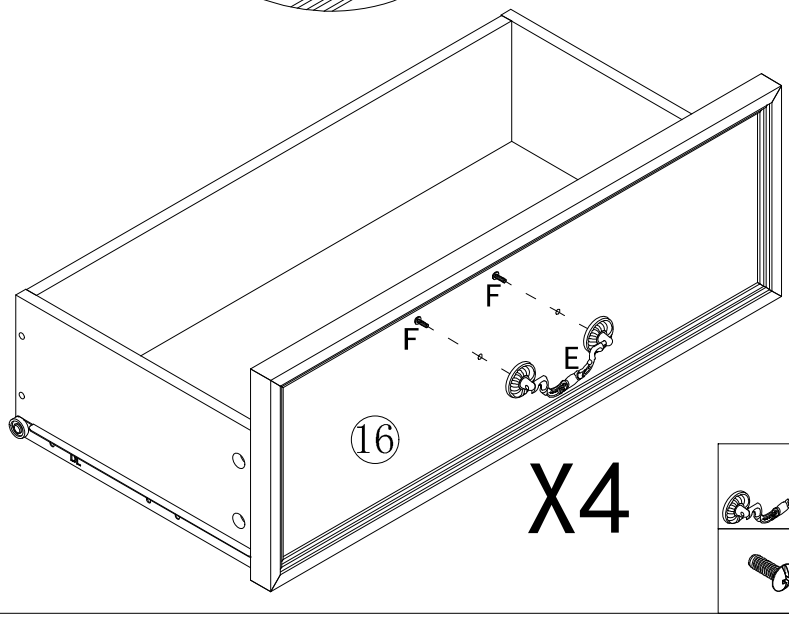


	E X 4PCS
	F X 8PCS


STEP 23

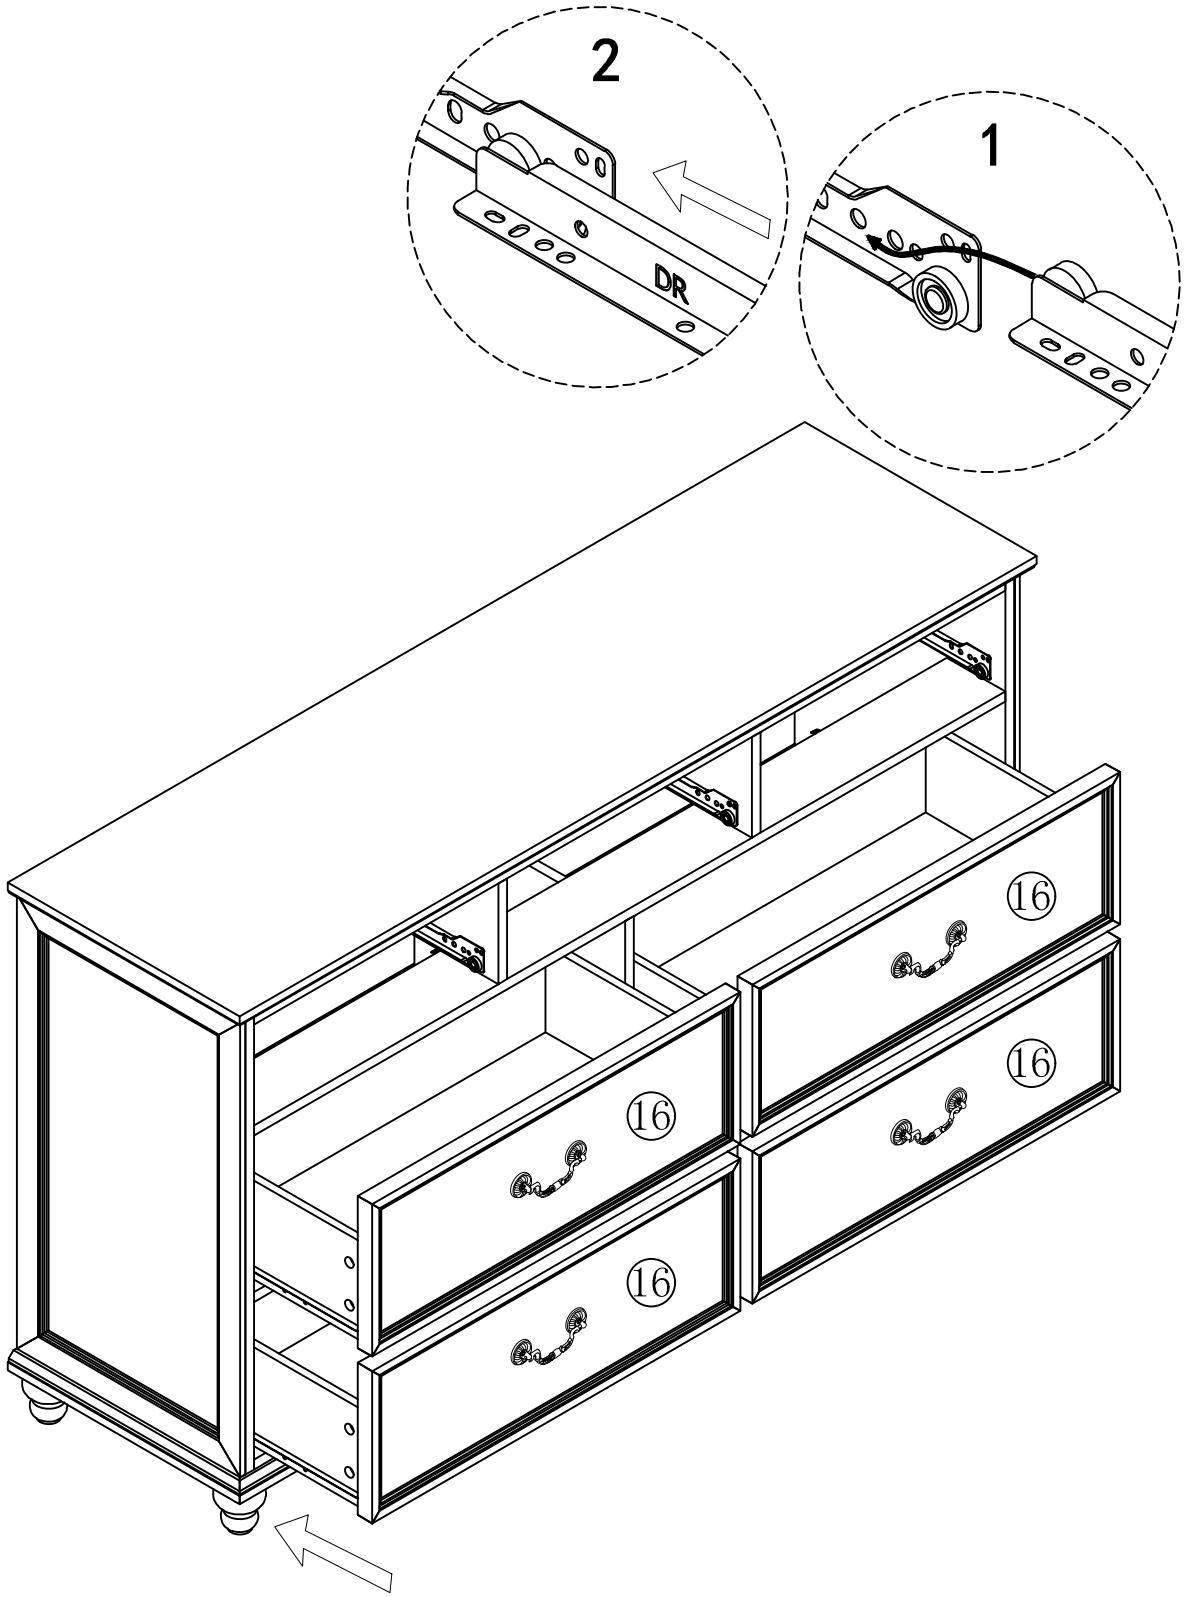

STEP 24

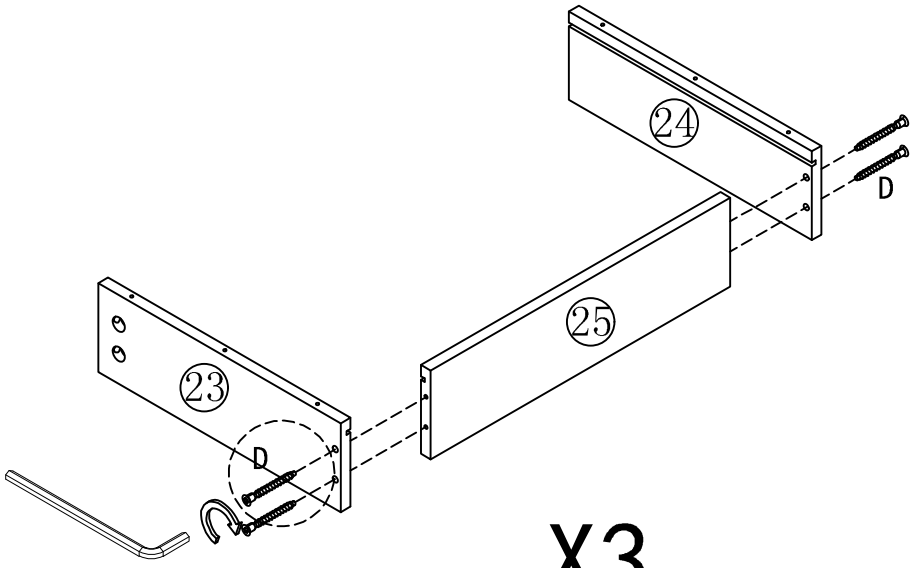


X3

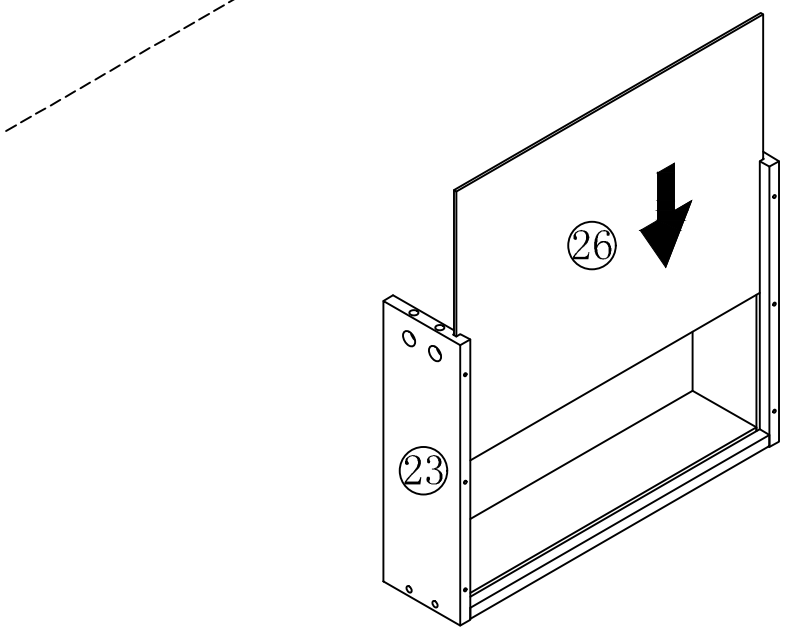

X3


	D X 12PCS

STEP 25

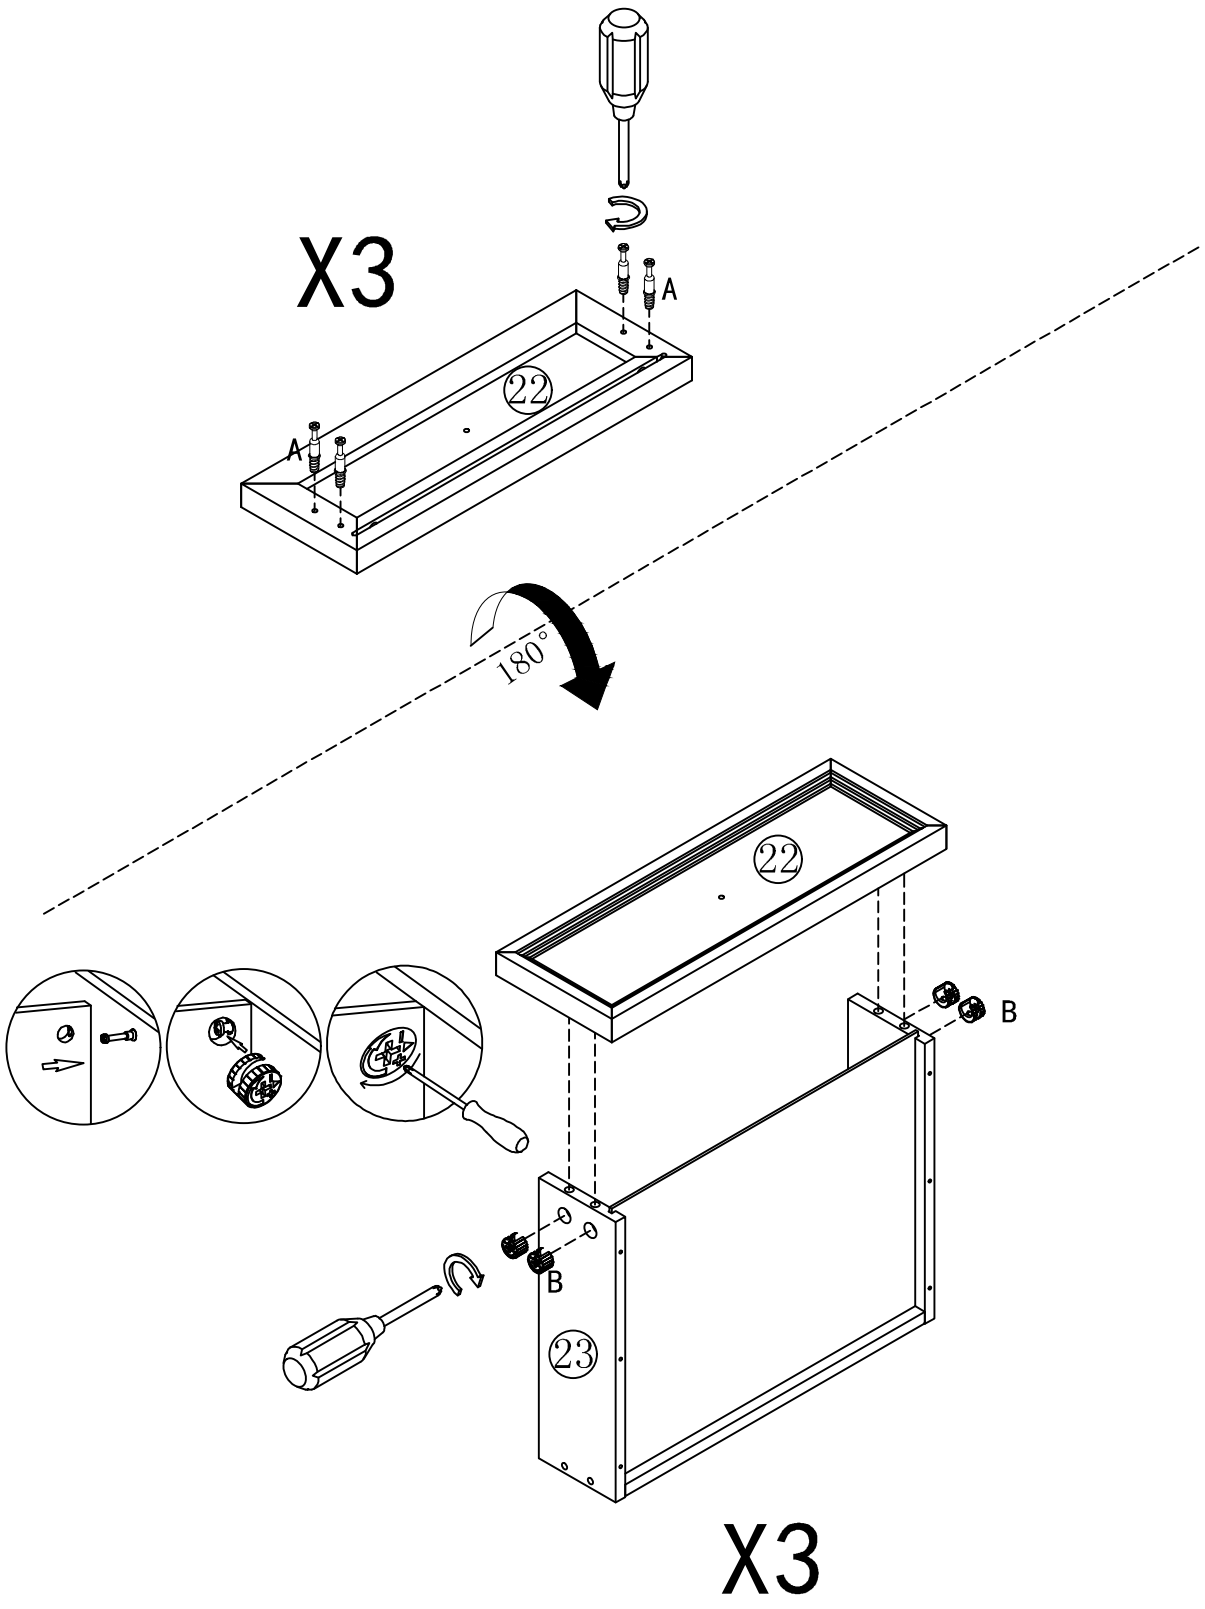


	A X 12PCS
	B X 12PCS

STEP 26

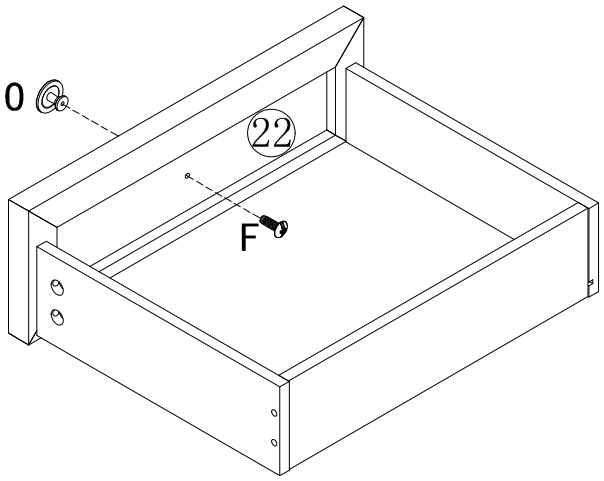

X3

Pay attention to
the hole position

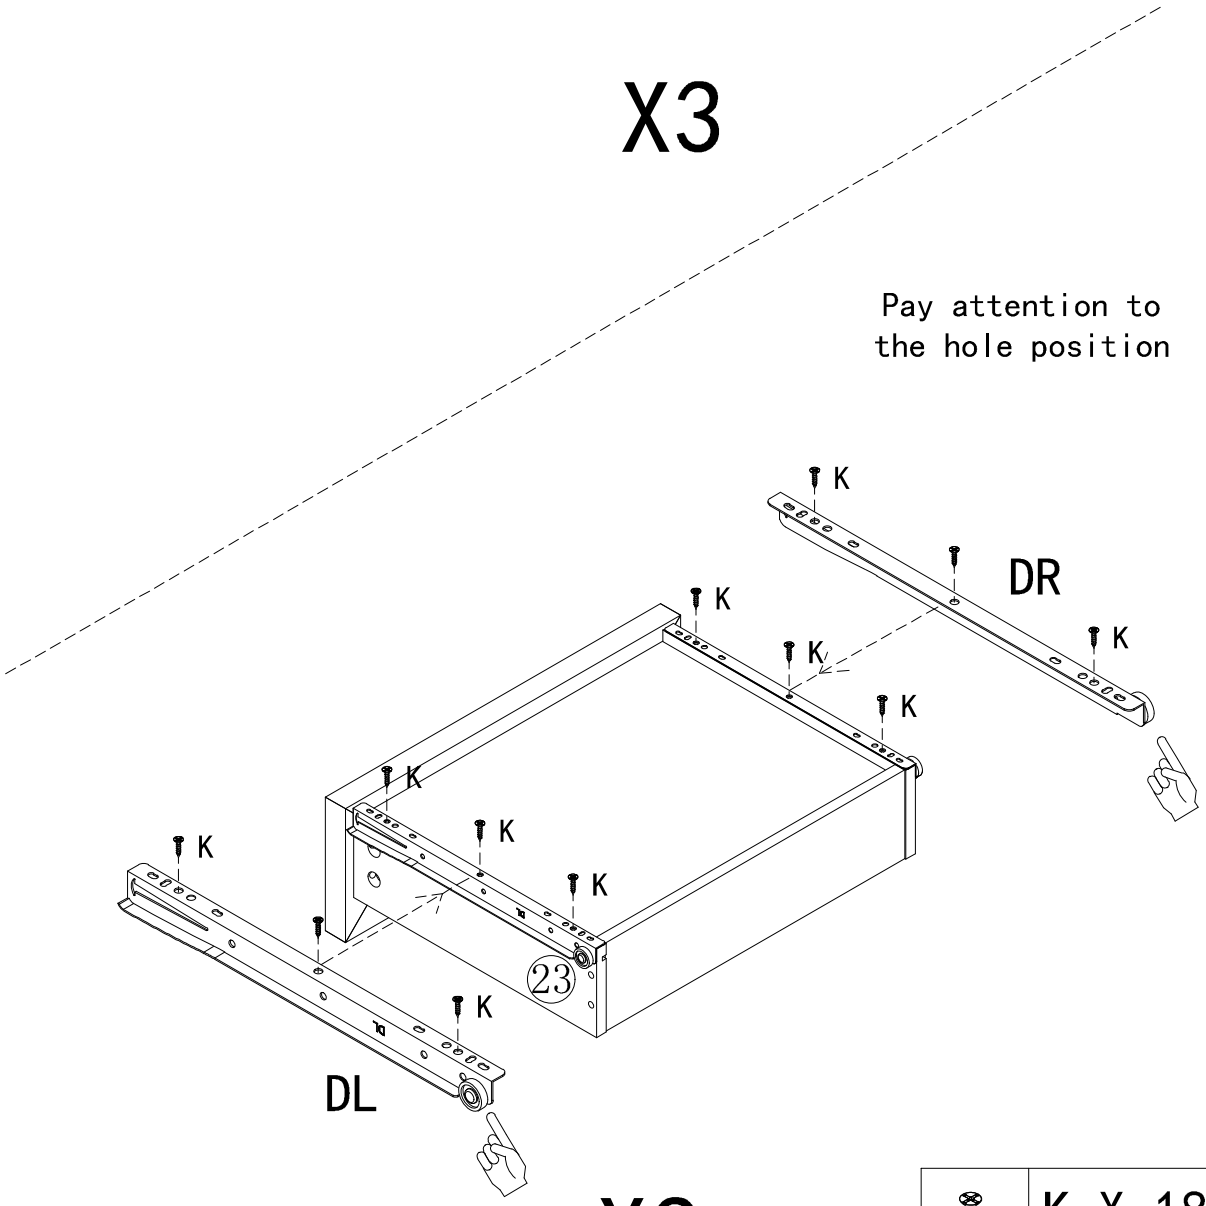

X3

	K X 18PCS
	O X 3PCS
	F X 3PCS

STEP 27

