



CORDLESS ROLLER BLIND

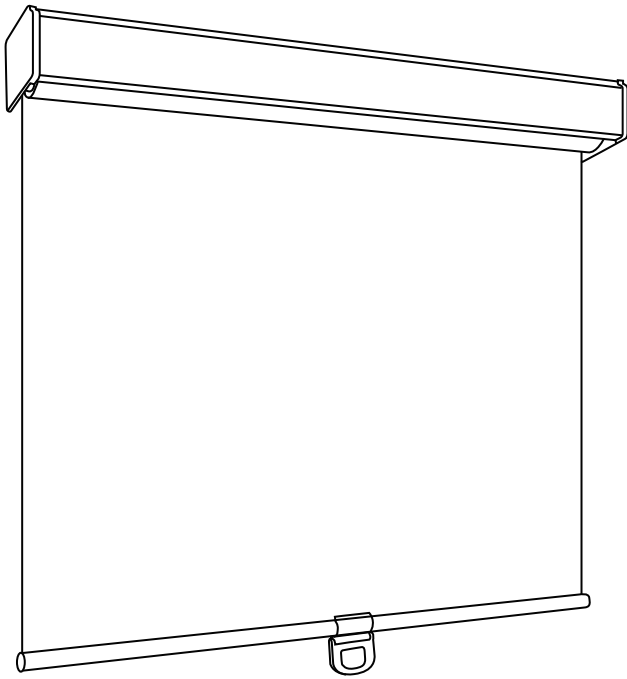


Different wall materials require different types of screws. Choose screws that are specially suited to the material in your wall.

Inside Mount

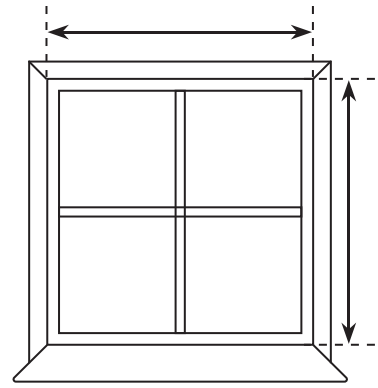


Window inner width - 0.5 inch

Outside Mount

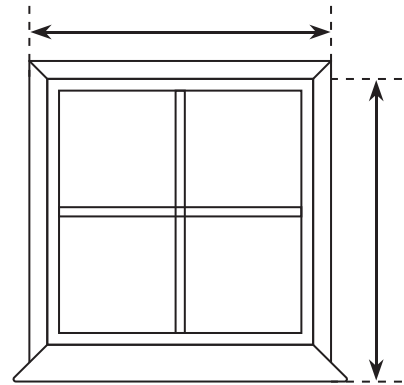


Recommended width + 6 inch to cover the window frame

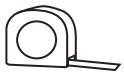


Tape Measure



Pencil

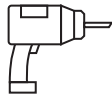


Electrical Drill

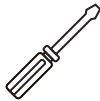

Screw Driver


1

Mark two points with a pencil, keeping each at least 2 inches from the window's inner left and right edges.

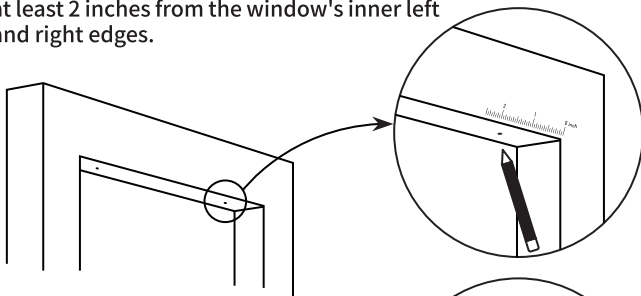


2

Using a cordless drill with a 6mm drill bit, predrill holes where you marked the pencil dots.


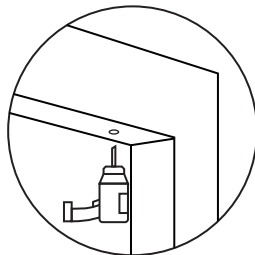


3



Lightly hammer the anchor into the hole until it is flush or fully inserted.

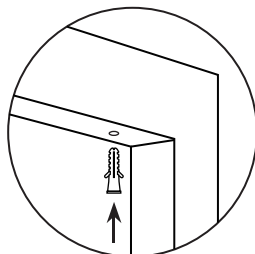

Inside Mount

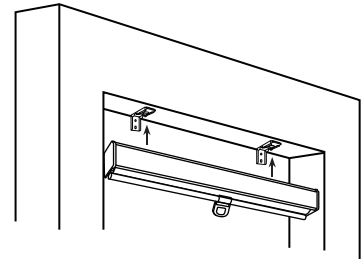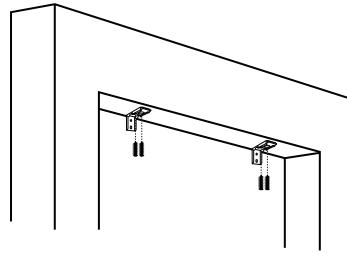

Outside Mount

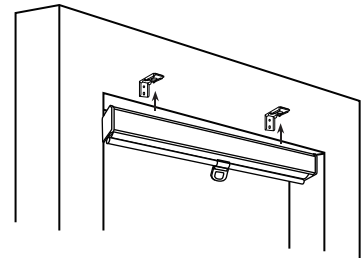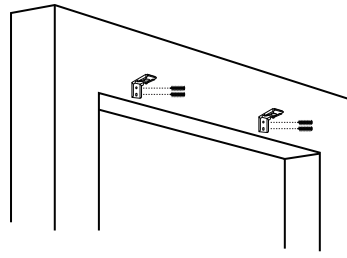

NOTE Do not forget to attach the grip before finishing.

