


Hardware

Tools Required

Power tools NOT recommended

NO.	Quantity	Accessory
A	4	 Metal Bracket
B	4	 Straight Bracket
C	12	 Screw 5x40 mm
D	32	 Screw 8X30 mm
E	2	 Screw 8 x 70 mm + Ø8 mm flat washers + M8 spring washer
F	1	 Allen Wrench 5mm
G	4	 Bed Leg
H	3	 Center Leg
I	2	 Screw 5x60 mm

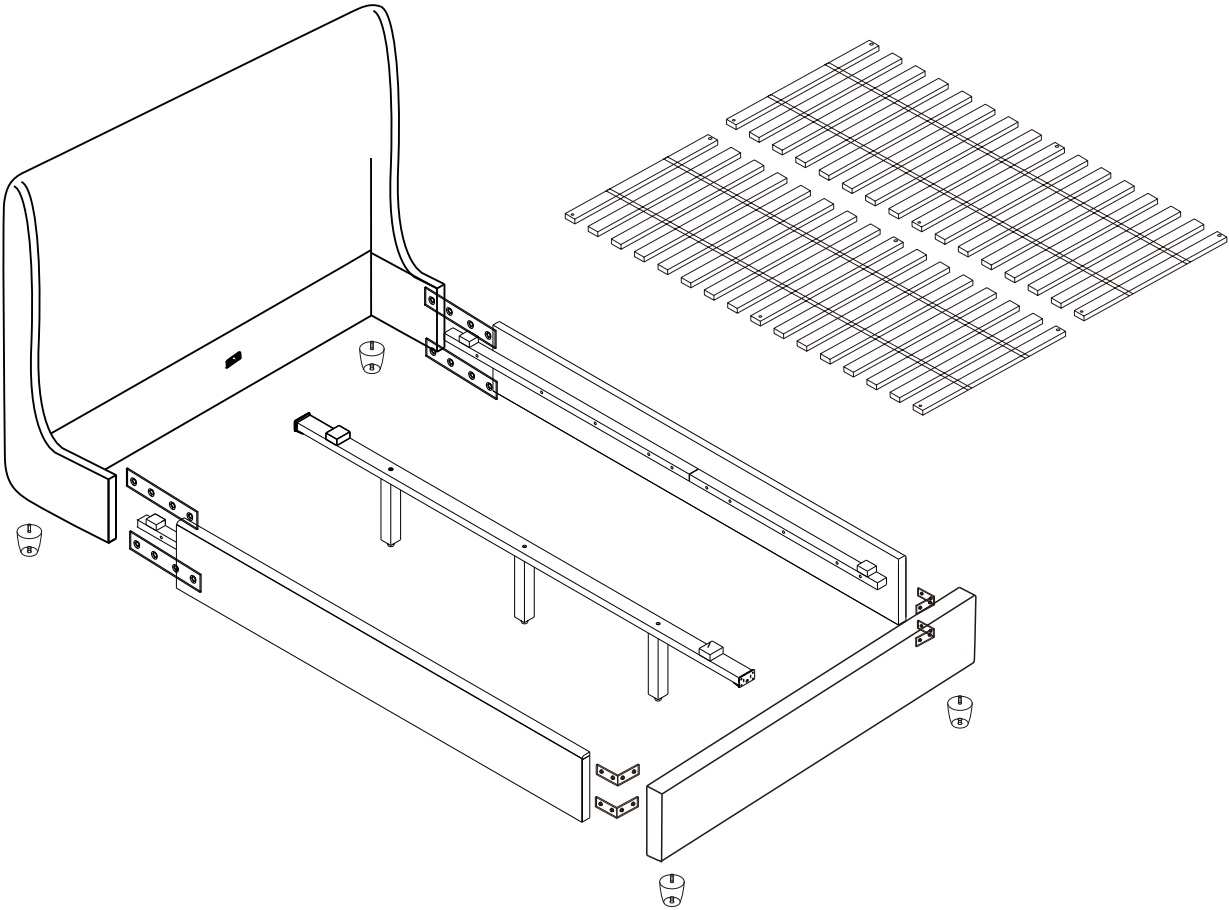

Hardware

Tools Required

Power tools NOT recommended


1

1.) Use the provided metal brackets (A) and (B) to join the side rails to the footboard and headboard, using screws (D) and allen wrench (F) to secure.

2.) Use the allen wrench (F) to secure screws and washers (E) into each side rails.

3.) Secure screws (I) to the side rails.

4.) Secure 4 bed legs (G).

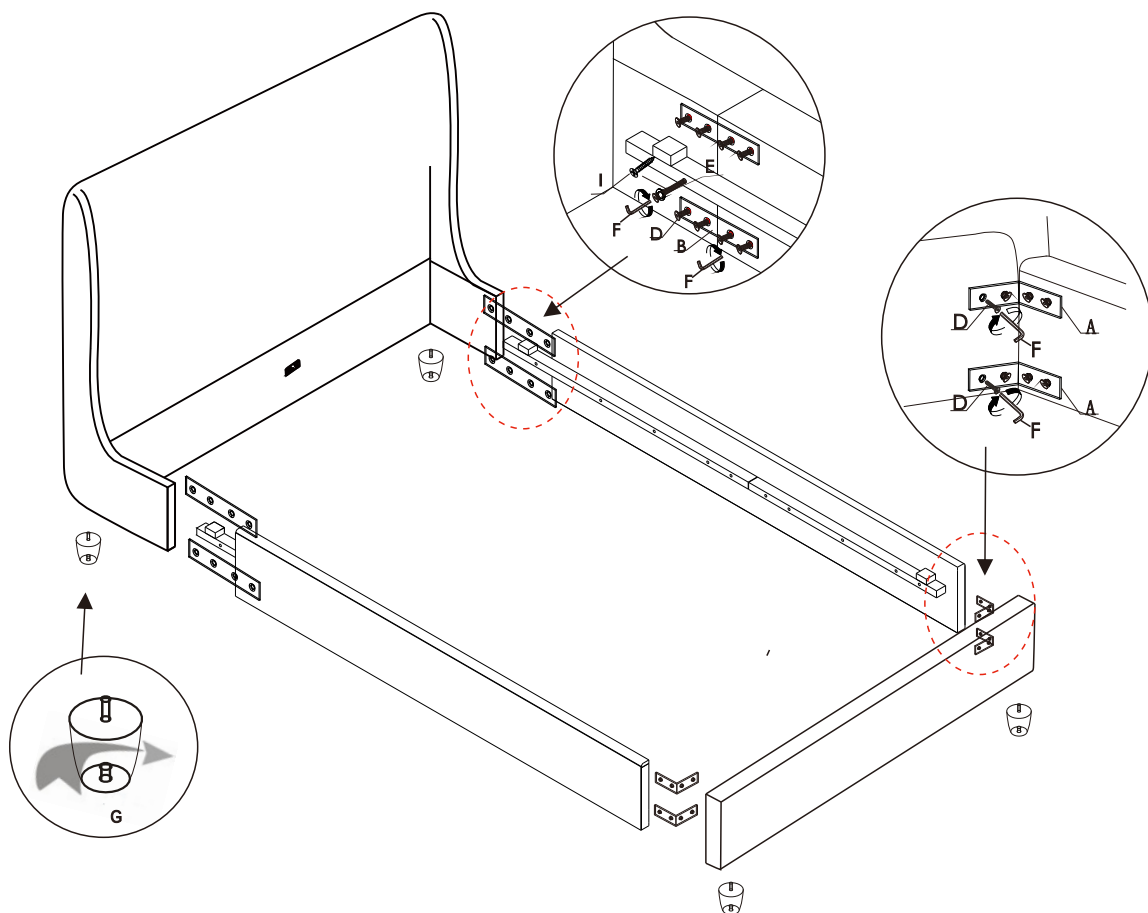


Hardware


Tools Required

Power tools NOT recommended

- ② 1). Insert the 3 support legs (H) into the designated holes along the underside of the center rail.
- 2). Twist each leg to adjust the height and ensure all legs are at the same level for even support.

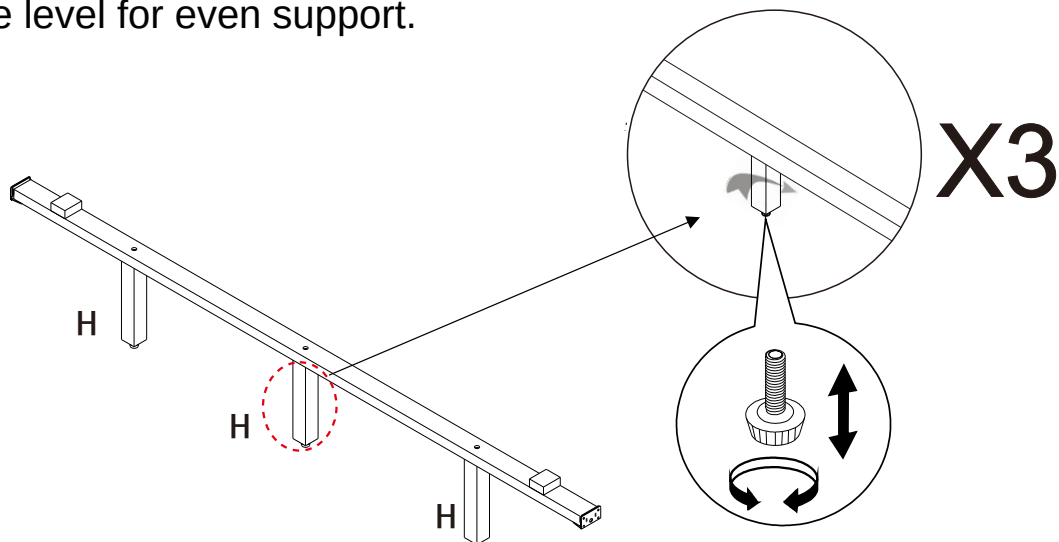

- ③ Position the center support rail between the side rails and attach each end of the center rail to the brackets on the side rails.

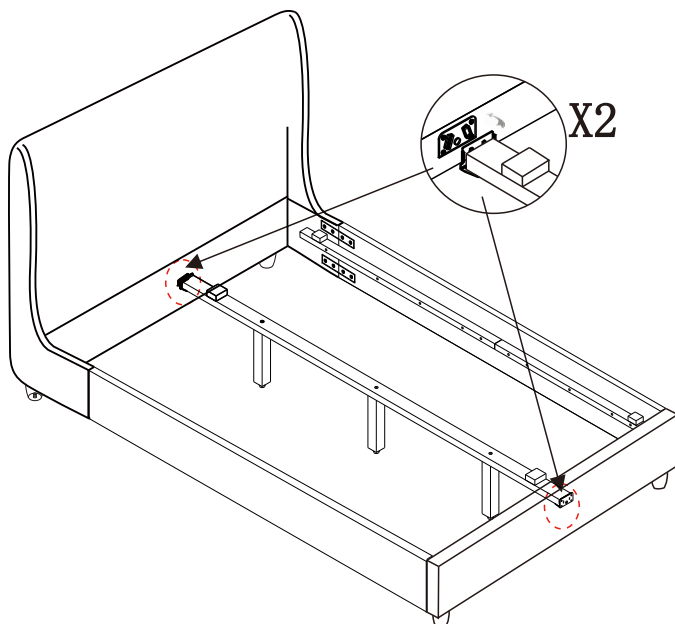

Hardware

Tools Required

Power tools NOT recommended

- 4
- 1). Place the slats evenly across the bed frame.
 - 2). Secure the slates using the screws (C).
 - 3). The bed is fully assembled and ready to use.

