


END TABLE

Assembly Instructions - Please keep for future reference

ET-005

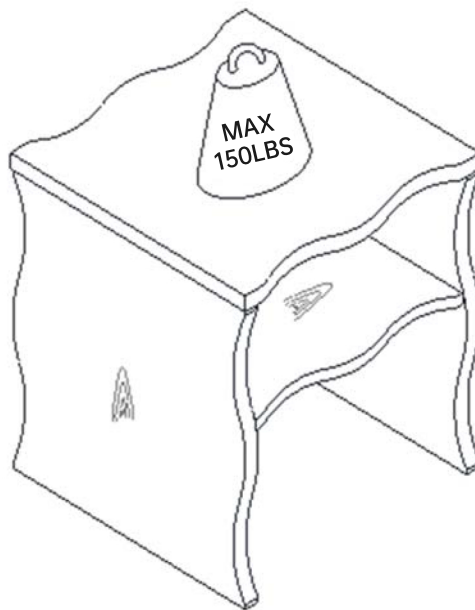

Dimensions

Width-35.43inch

Depth-23.62inch

Height-15.75inch

Important-Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

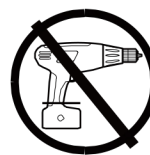

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.







Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

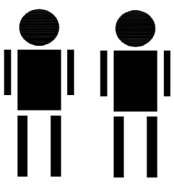A  35MM x8+2	B  Ø14.5 x8+2	C  Ø8*30 x12+1	D  M6*60 x4	E  M4 x1
F  M8*70 x4	G  M8 x4	H  M8 x4	I  x1	J  Ø50 x4
K  Ø22 x8	L  x1	 Person x2		


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

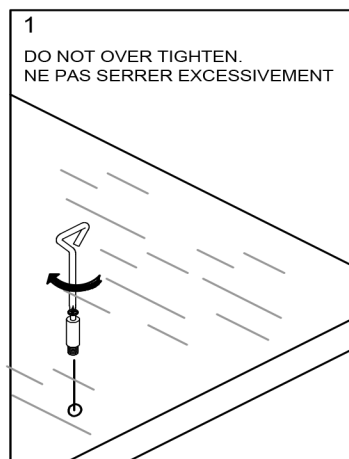

Step 2


Push the male camlock into the entry hole.

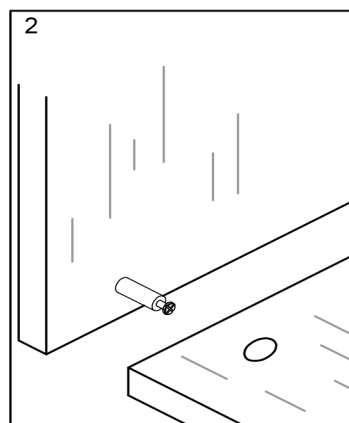

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

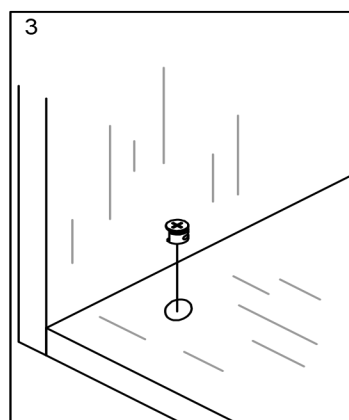


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

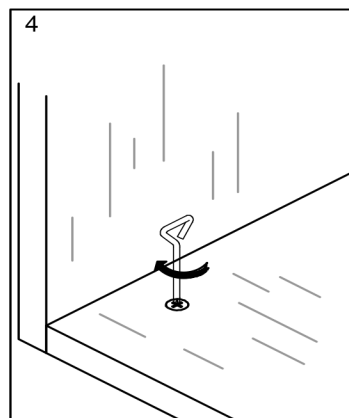

Using Camlocks 4 in 1


Step 1

Push the male camlock into the entry hole.

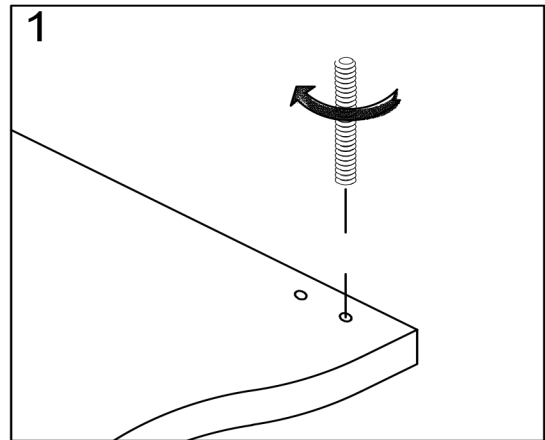


Step 2

Push the male camlock into the entry hole.

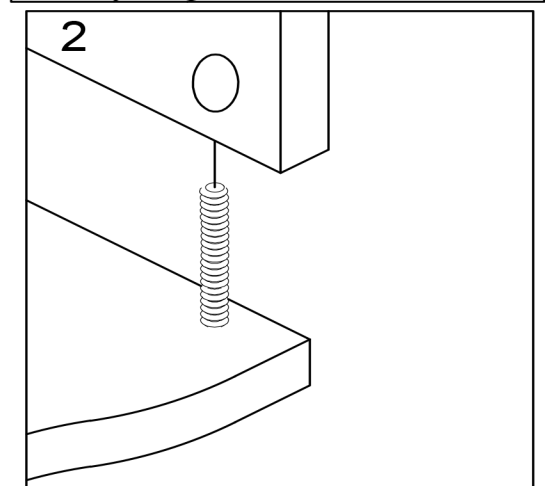


Step 3

Insert the female camlock (half-moon cam and screw nut) to ensure the female camlock hole points towards the screw pole of the male camlock.

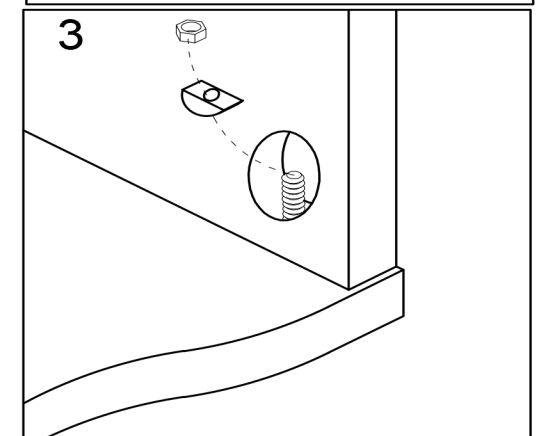


Step 4

Turn the female camlock clockwise with a wrench till the camlock is locked tightly.

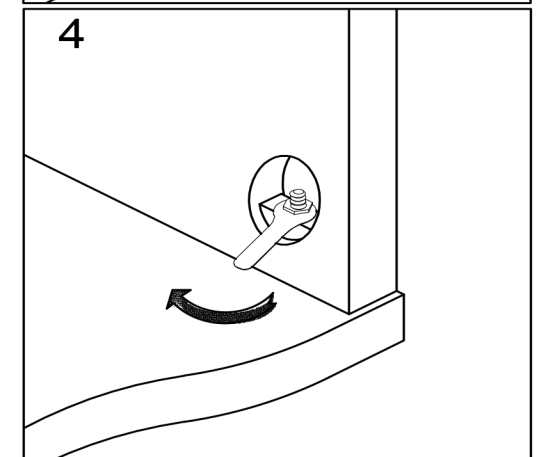


Assembly Instructions

① *1

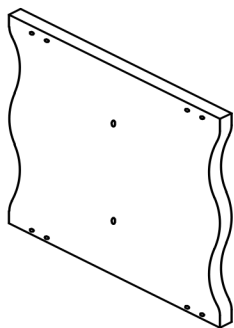


450*450*25mm

② *2

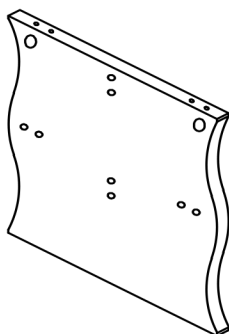


468*446*25mm

③ *1

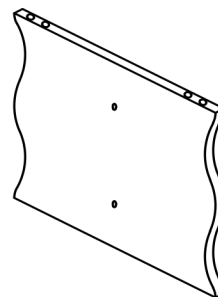

394*430*18mm

④ *2







394*50*25mm

Assembly Instructions

Step 1


WARNING: Before assembling the furniture, please thoroughly inspect the work area and remove any small debris to prevent scratches on the product surface.

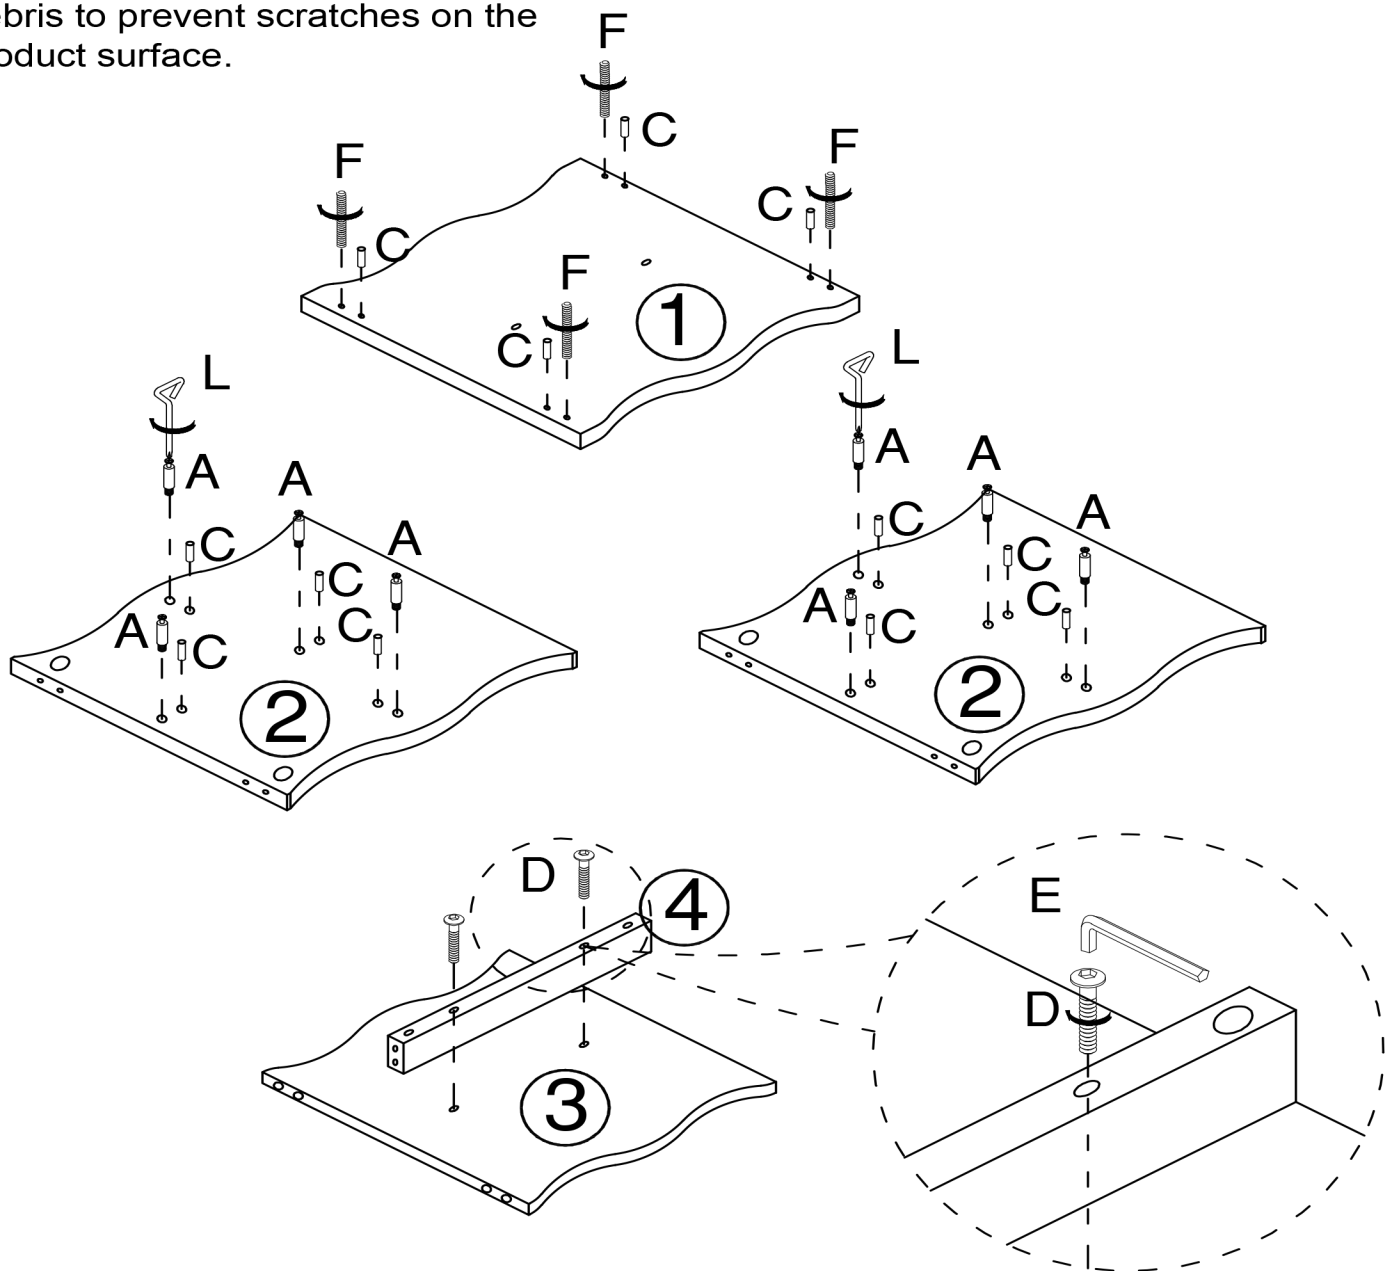

A  35MM x8	C  ø8*30 x12	D  M6*60 x2	E  M4 x1	F  M8*70 x4	L  x1	 Person x2
---	---	--	---	---	--	--

Assembly Instructions


Step 2

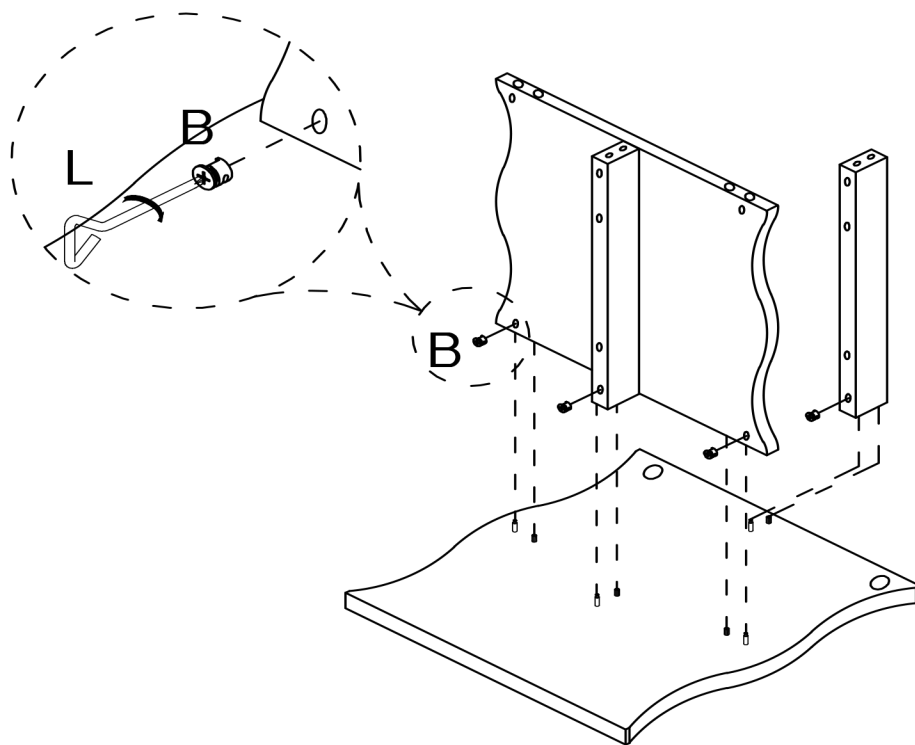

B  ø14.5 x4	L  x1	 Person x2
---	--	---

Assembly Instructions


Step 3


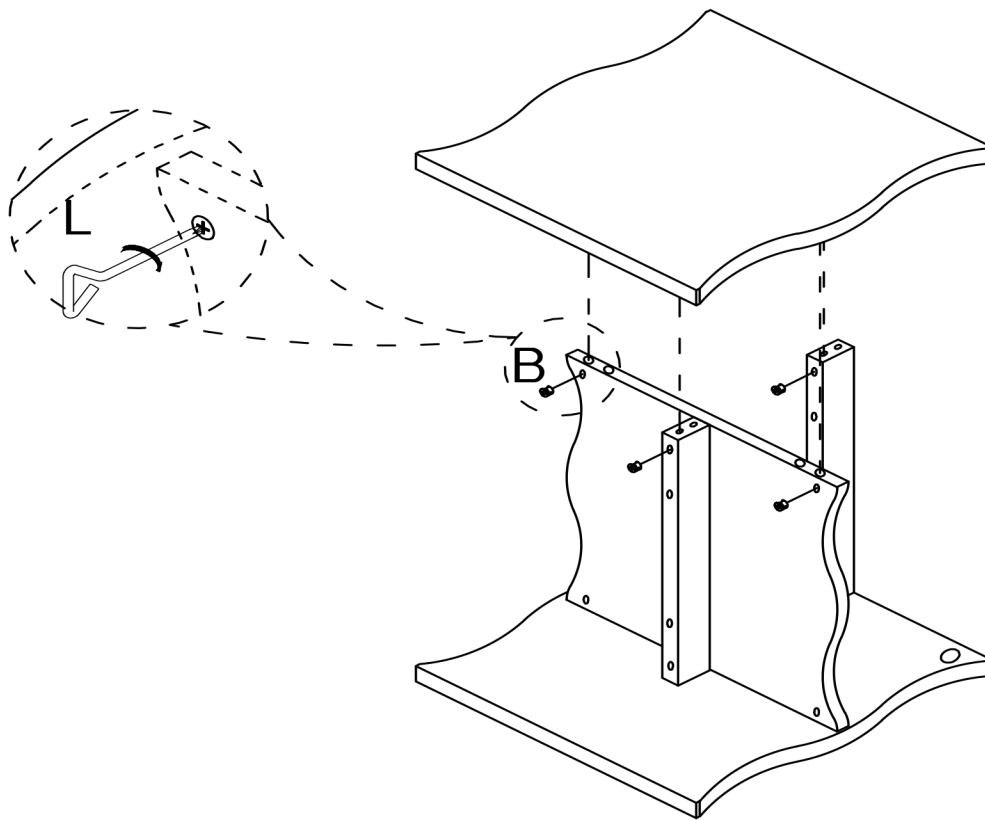


B  ø14.5 x4	L  x1	 Person x2
---	--	---

Assembly Instructions



Step 4

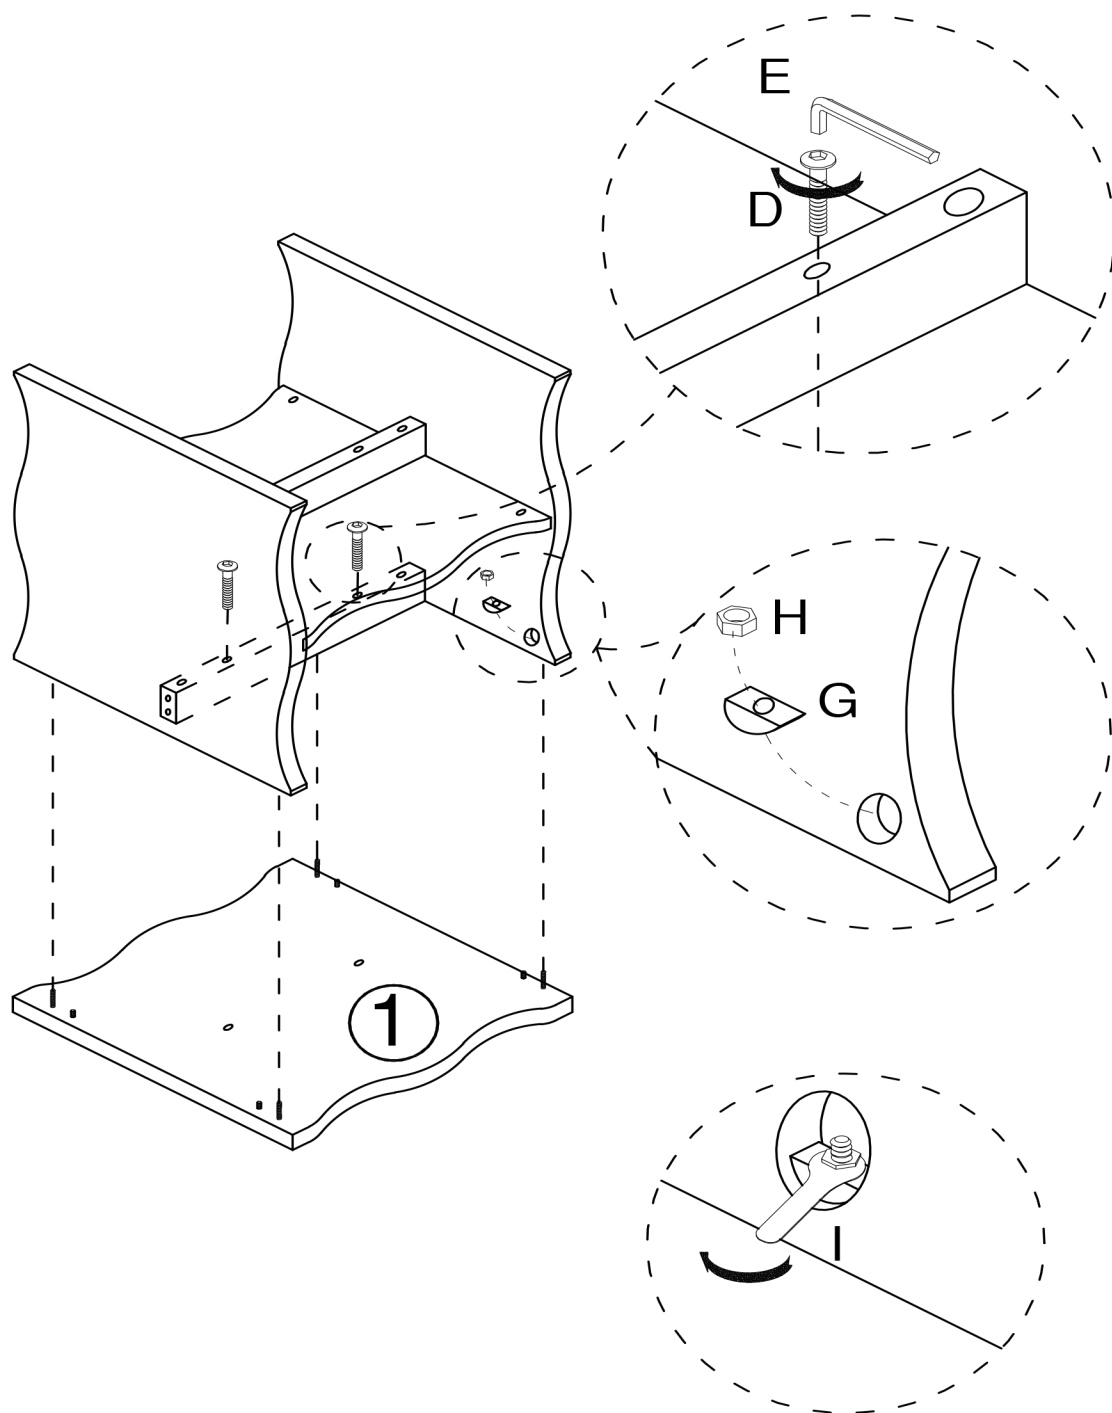

D	E	G	H	I	
					
M6*60 x2	M4 x1	M8 x4	M8 x4	x1	Person x2

Assembly Instructions

Step 5

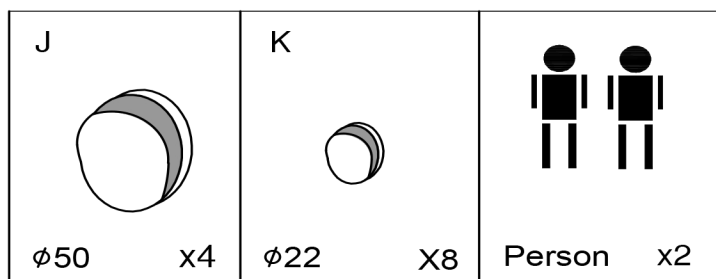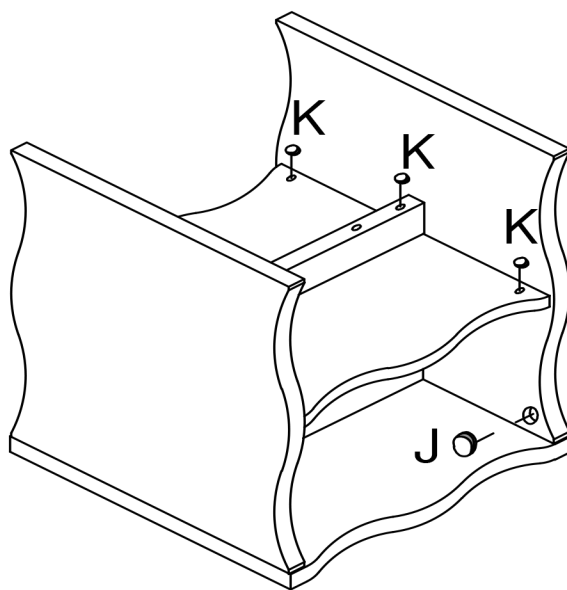

Step 6

