

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 45 minutes.
- * Tools Required for Assembly (included): Allen Key , while Screwdriver and Hammer (Not Included).


CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.










ITEM ID: ACC3602A

ITEM DIMENSTION: 15.75" X 15.75" X 23.62"

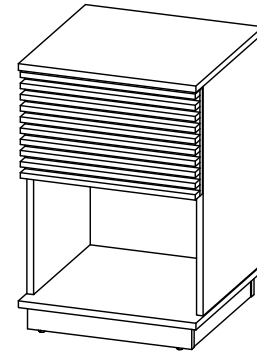


Weight Capacity - 55 LBS
Warning : Do not stand on Accent Table
Warning : Do not over torque bolts

Part List


PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
A	TOP PANEL		X1	F	BACK PANEL		X1	J	DRAWER BACK		X1
B	BOTTOM PANEL		X1	G	LEG PANEL-LONG		X2	K	DRAWER SIDE-L		X1
C	SIDE PANEL (L)		X1	H	LEG PANEL-SHORT		X2	L	DRAWER SIDE-R		X1
D	SIDE PANEL (R)		X1	I	DRAWER FRONT		X1	M	DRAWER BOTTOM		X1
E	MIDDLE PANEL		X1								

Hardware List


PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY	PIECE	DISCRIPTION	PICTURE	QTY
HW1	MINIFIX CAM		X14	HW7	M3.5 X 16MM C.B SCREW		X20	HW12	WALL BRACKET		X4
HW2	MINIFIX BOLT		X14	HW8	M4 X 38MM C.B SCREW		X4	HW13	3.5 X 16MM SCREW		X2
HW3	MINIFIX CAP		X14	HW9	5/8 PVC NAIL LEG		X4	HW14	4 X 35MM SCREW		X2
HW4	M8 X 30MM WOOD DOWEL		X20	HW10	L BRACKET		X4	HW15	6 X 40MM WALL PLUG		X2
HW5	M6 X 50MM CSK CAP WOOD SCREW		X6	HW11	10" DRAWER SLIDE (L/R)	(A)  (B) 	X1	HW16	CABLE TIE		X2
HW6	ALLEN KEY M4		X1								

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 45 minutes.
- * Tools Required for Assembly (included): Allen Key , while Screwdriver and Hammer (Not Included).

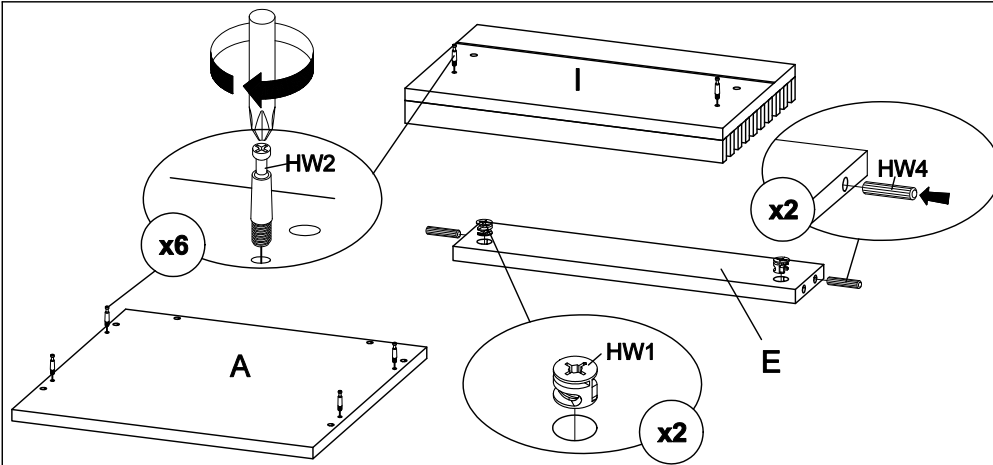


**STEP 1: INSERT HARDWARE (HW2) ONTO PANEL (A, I).
INSERT HARDWARE (HW1, HW4) INTO PANEL (E).**

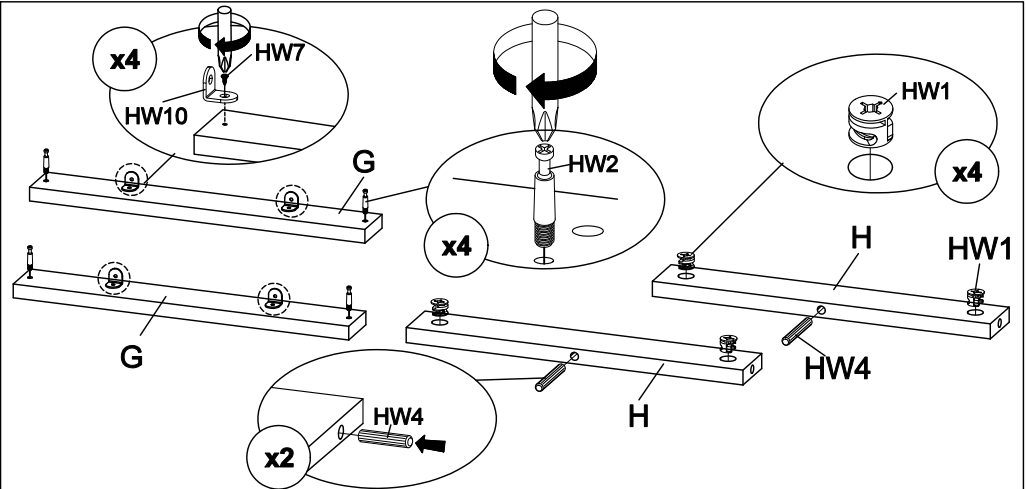


STEP 2: INSERT HARDWARE (HW1, HW4) INTO PANEL (H). INSERT HARDWARE (HW2) ONTO PANEL (G). ASSEMBLE HARDWARE (HW10) ONTO PANEL (G) WITH HARDWARE (HW7).

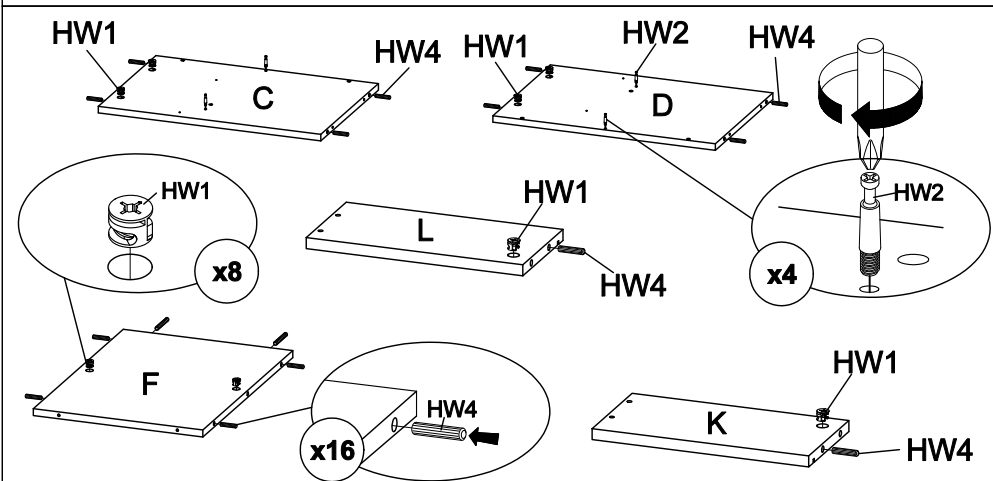


**STEP 3: INSERT HARDWARE (HW1, HW4) INTO PANEL (C, D, F, K, L).
INSERT HARDWARE (HW2) ONTO PANEL (C, D)**

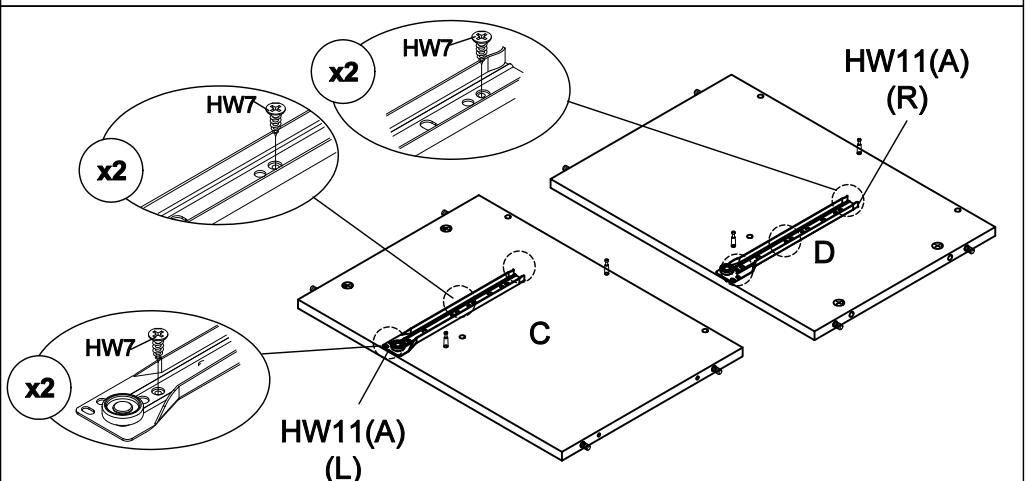


STEP 4: ATTACH HARDWARE (HW11(A) (L/R)) ONTO PANEL (C, D) WITH HARDWARE (HW7).

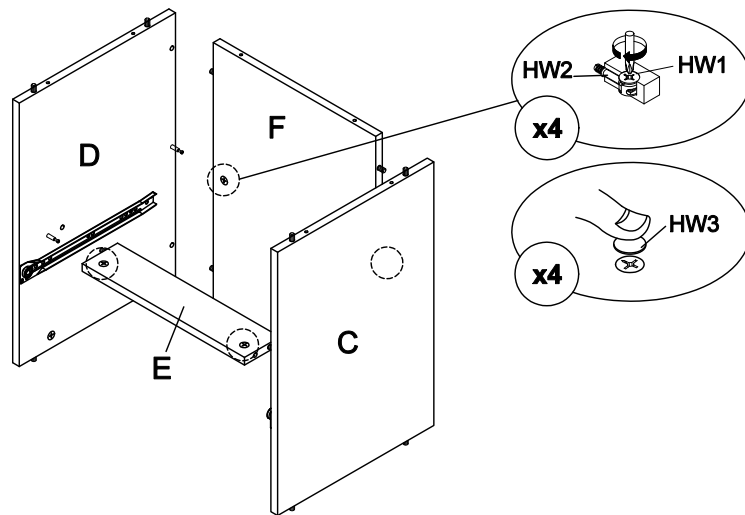


STEP 5: ATTACH PANEL (C,D) TO PANEL (E,F). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTILL TIGHT. APPLY (HW3) ONTO ALL(HW1).

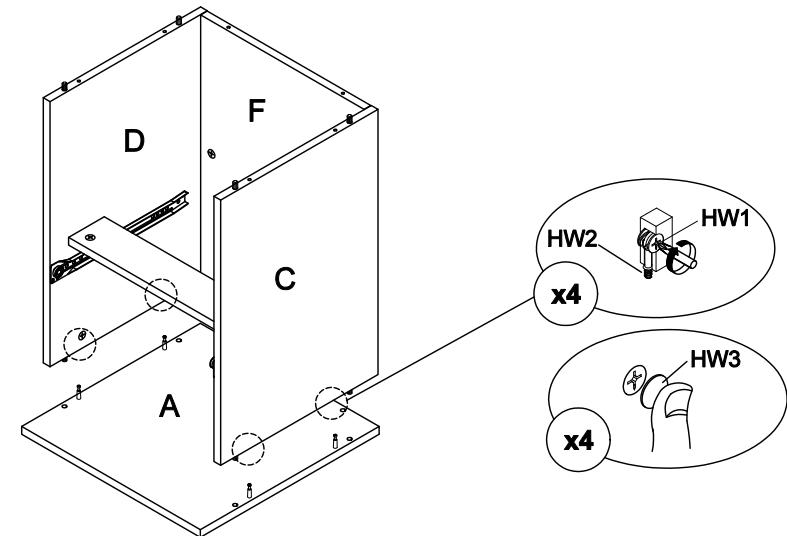


STEP 6: ATTACH PANEL (A) TO PANEL (C,D,F). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

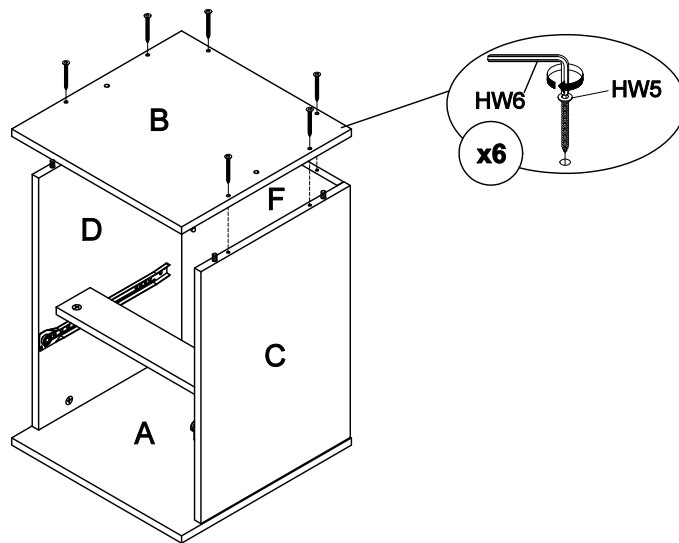


STEP 7: ATTACH PANEL (B) TO PANEL (C,D,F) BY USING HARDWARE (HW5,HW6).

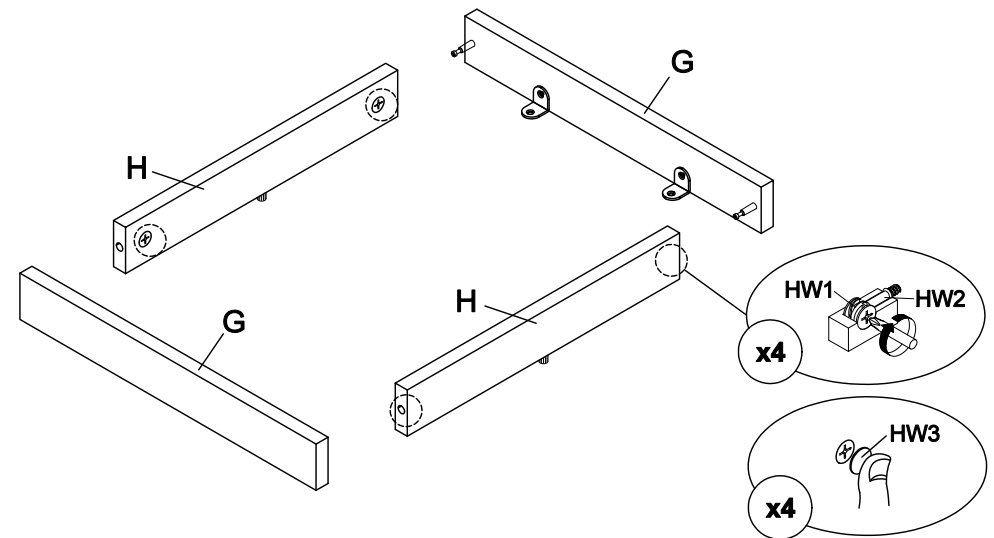


STEP 8: ATTACH PANEL (G) TO PANEL (H). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTIL TIGHT. APPLY (HW3) ONTO ALL (HW1).

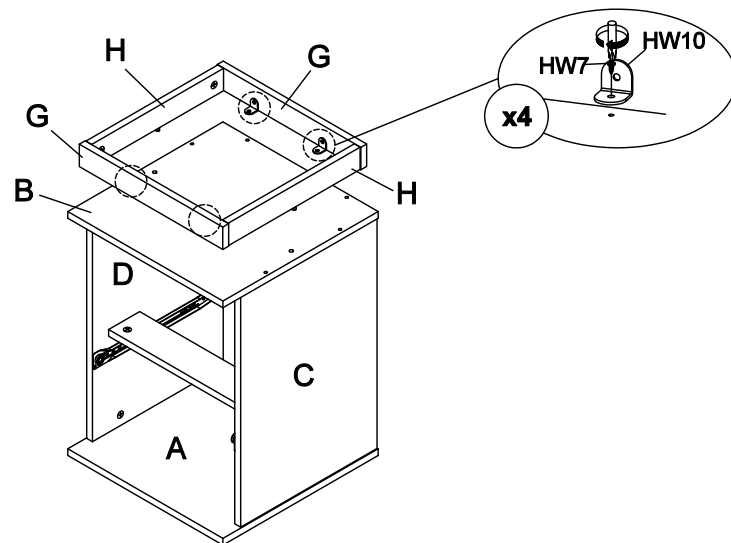


STEP 9: ASSEMBLE HARDWARE (HW10) TO THE BOTTOM OF CABINET BY USING HARDWARE (HW7).

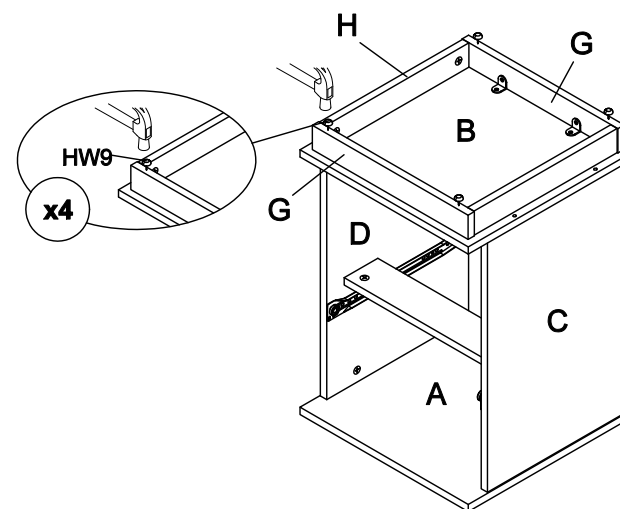


STEP 10: HIT HARDWARE (HW9) INTO BOTTOM OF LEG PANEL (G).

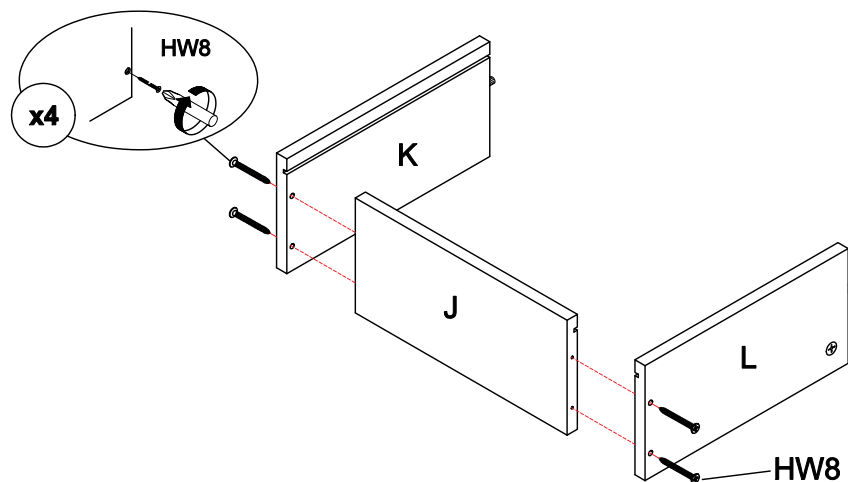


STEP 11: ASSEMBLE PANEL (K,L) TO PANEL (J) BY USING HARDWARE (HW8).

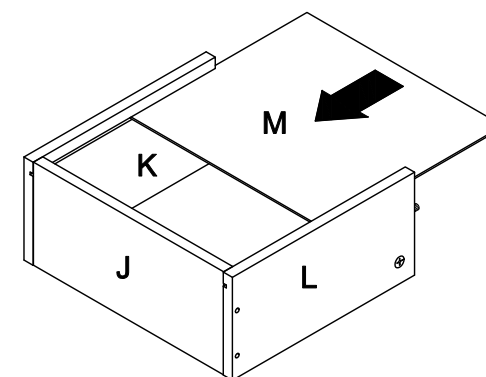


STEP 12: INSERT THE PANEL (M) ALONG THE SLOT.

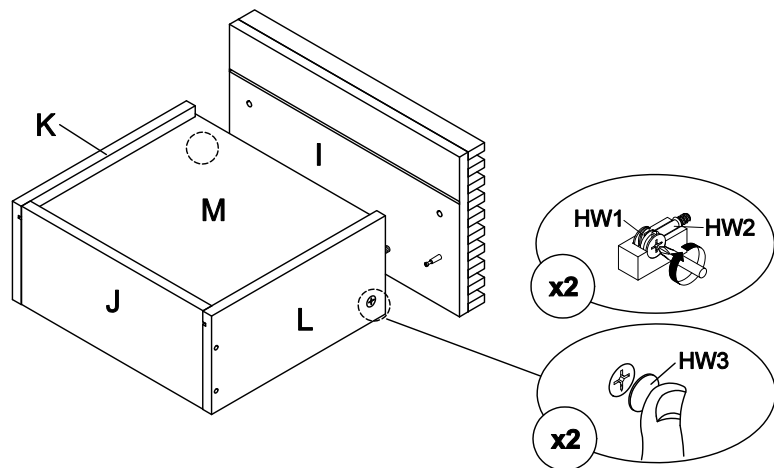


STEP 13: ATTACH PANEL (I) TO PANEL (K,L). INSERT ALL HARDWARE (HW2) INTO (HW1). ROTATE ALL (HW1) UNTILL TIGHT. APPLY (HW3) ONTO ALL (HW1).

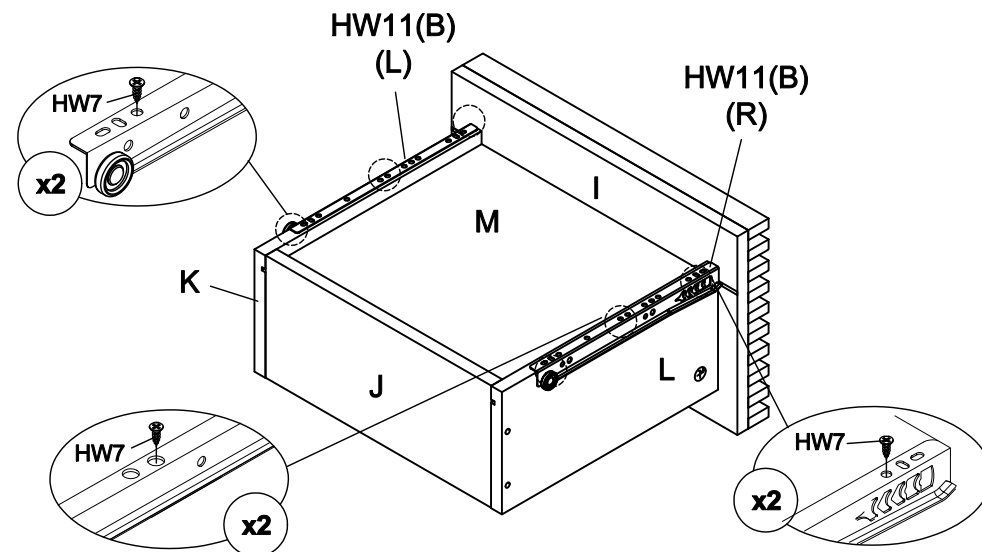


STEP 14: ASSEMBLE HARDWARE (HW11(B) (L/R)) TO PANEL (K,L) BY USING HARDWARE (HW7).

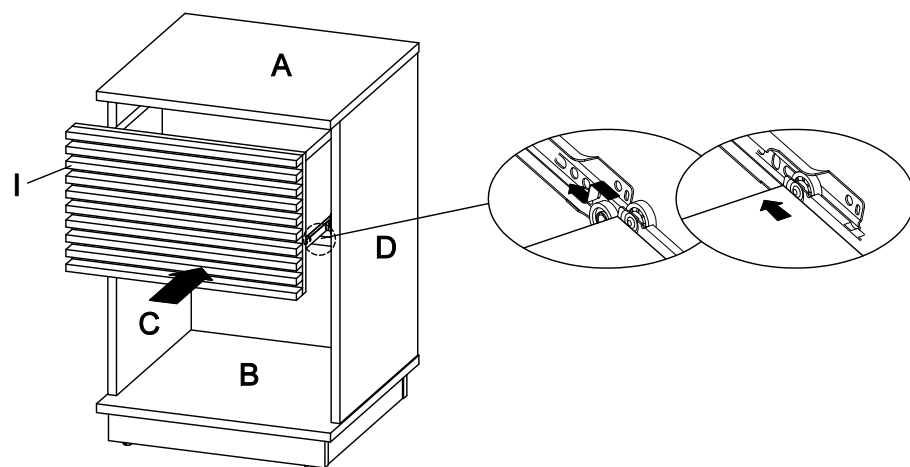


STEP 15: PUT ALL THE DRAWER IN PLACE ALONG THE DRAWER SLIDES.

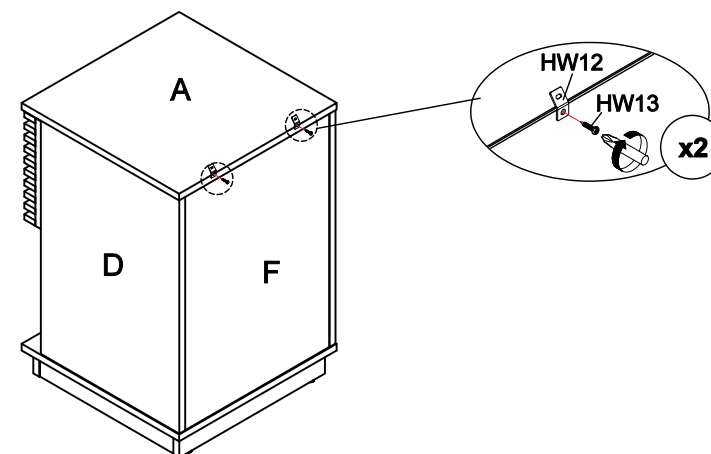


STEP 16: ASSEMBLE HARDWARE (HW12) TO PANEL (A) BY USING HARDWARE (HW13).

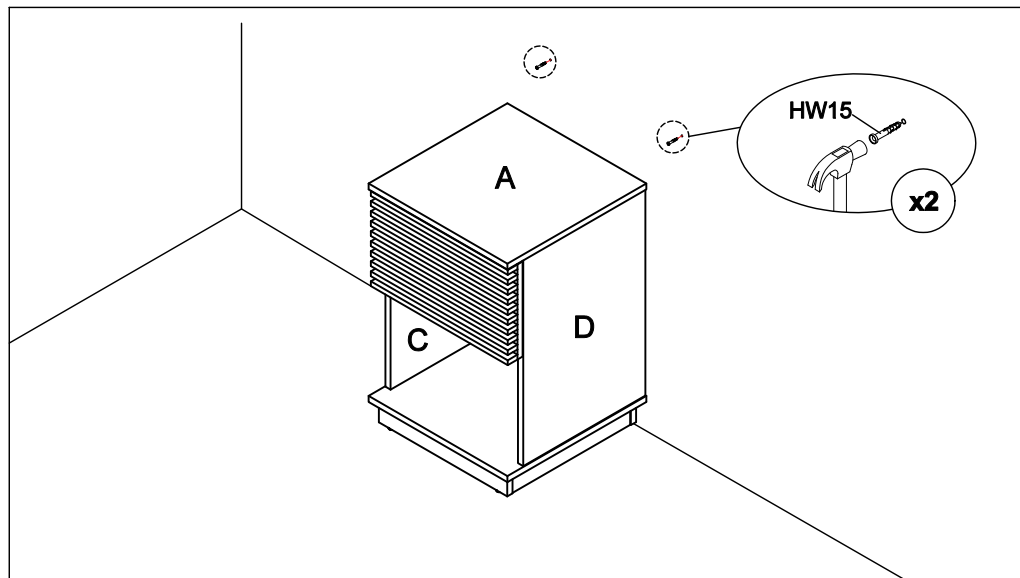

STEP 17: MARK AND USE THE POWER DRILL A HOLE ON THE WALL. HIT HARDWARE (HW15) INTO THE WALL.

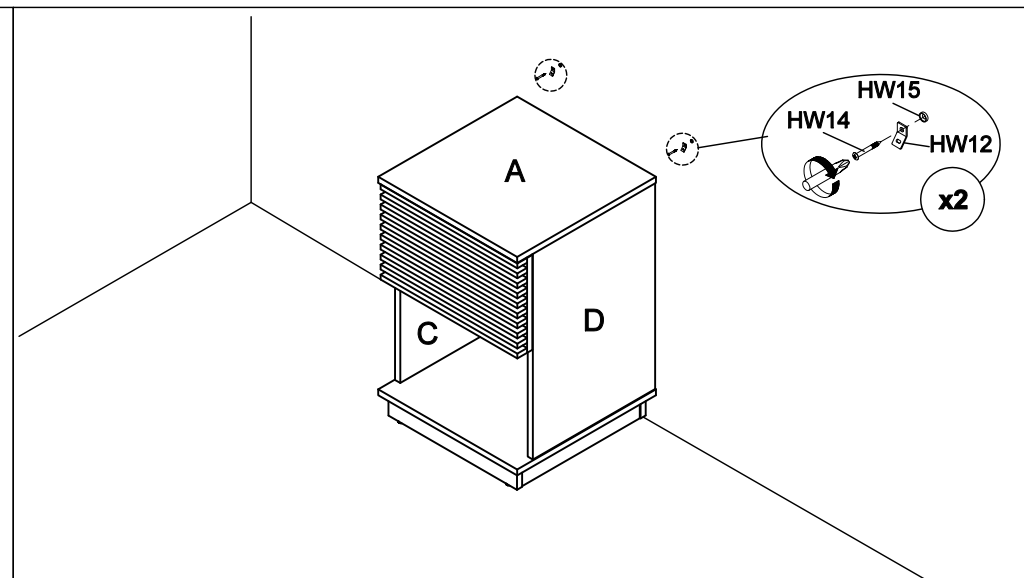

STEP 18: ASSEMBLE HARDWARE (HW12 TO HW15) BY USING HARDWARE (HW14). IN THE ORDER SHOWN IN THE PICTURE.

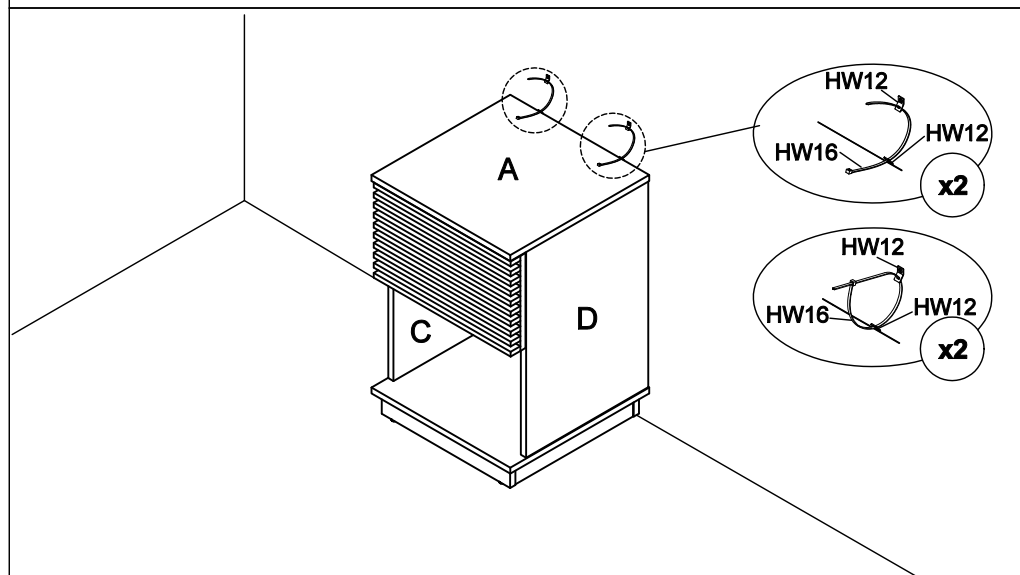

STEP 19: CONNECT BOTH OF THE HARDWARE (HW12) BY USING HARDWARE (HW16). TIGHTEN THE HARDWARE (HW16), AS SHOWN.