



Assembly Instructions









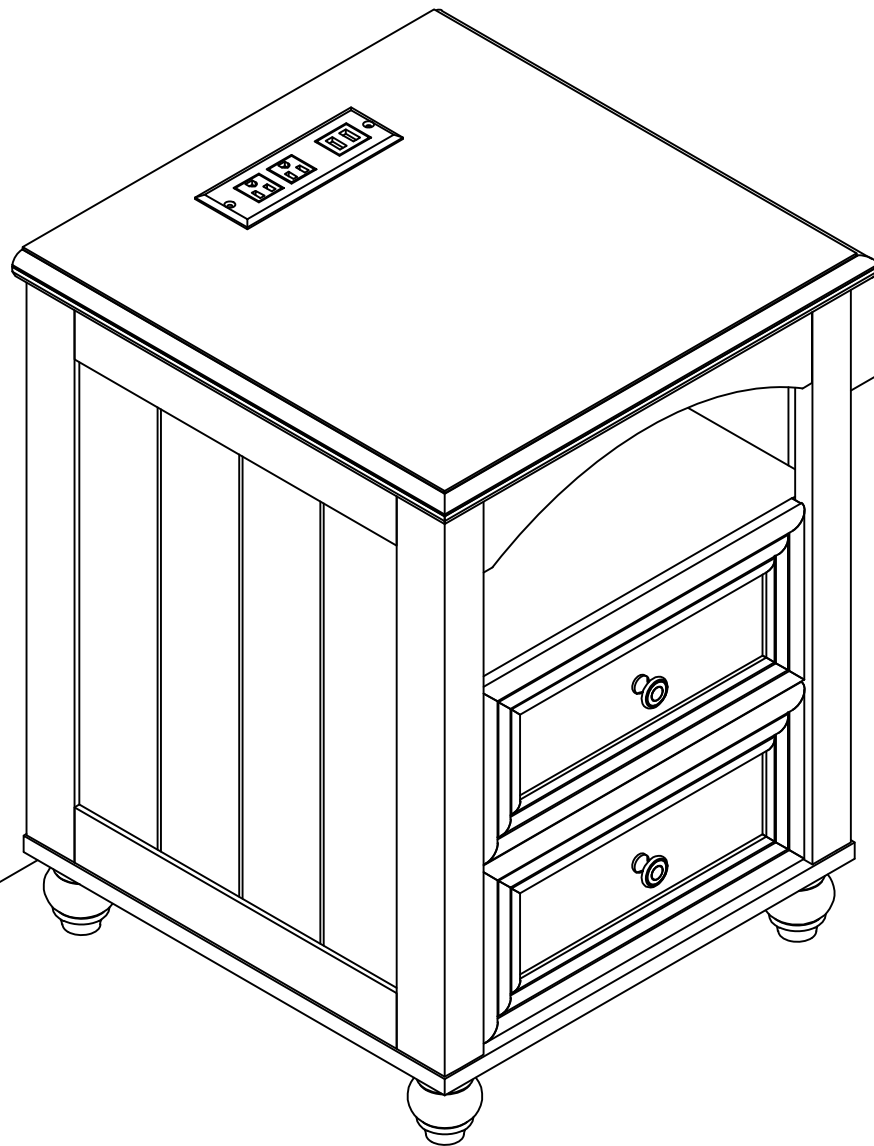


Instructions for use: The cabinet legs should be designed to avoid lateral stress. When moving, please lift vertically off the ground. Dragging may cause loose connectors, affecting stability and service life




PART LIST

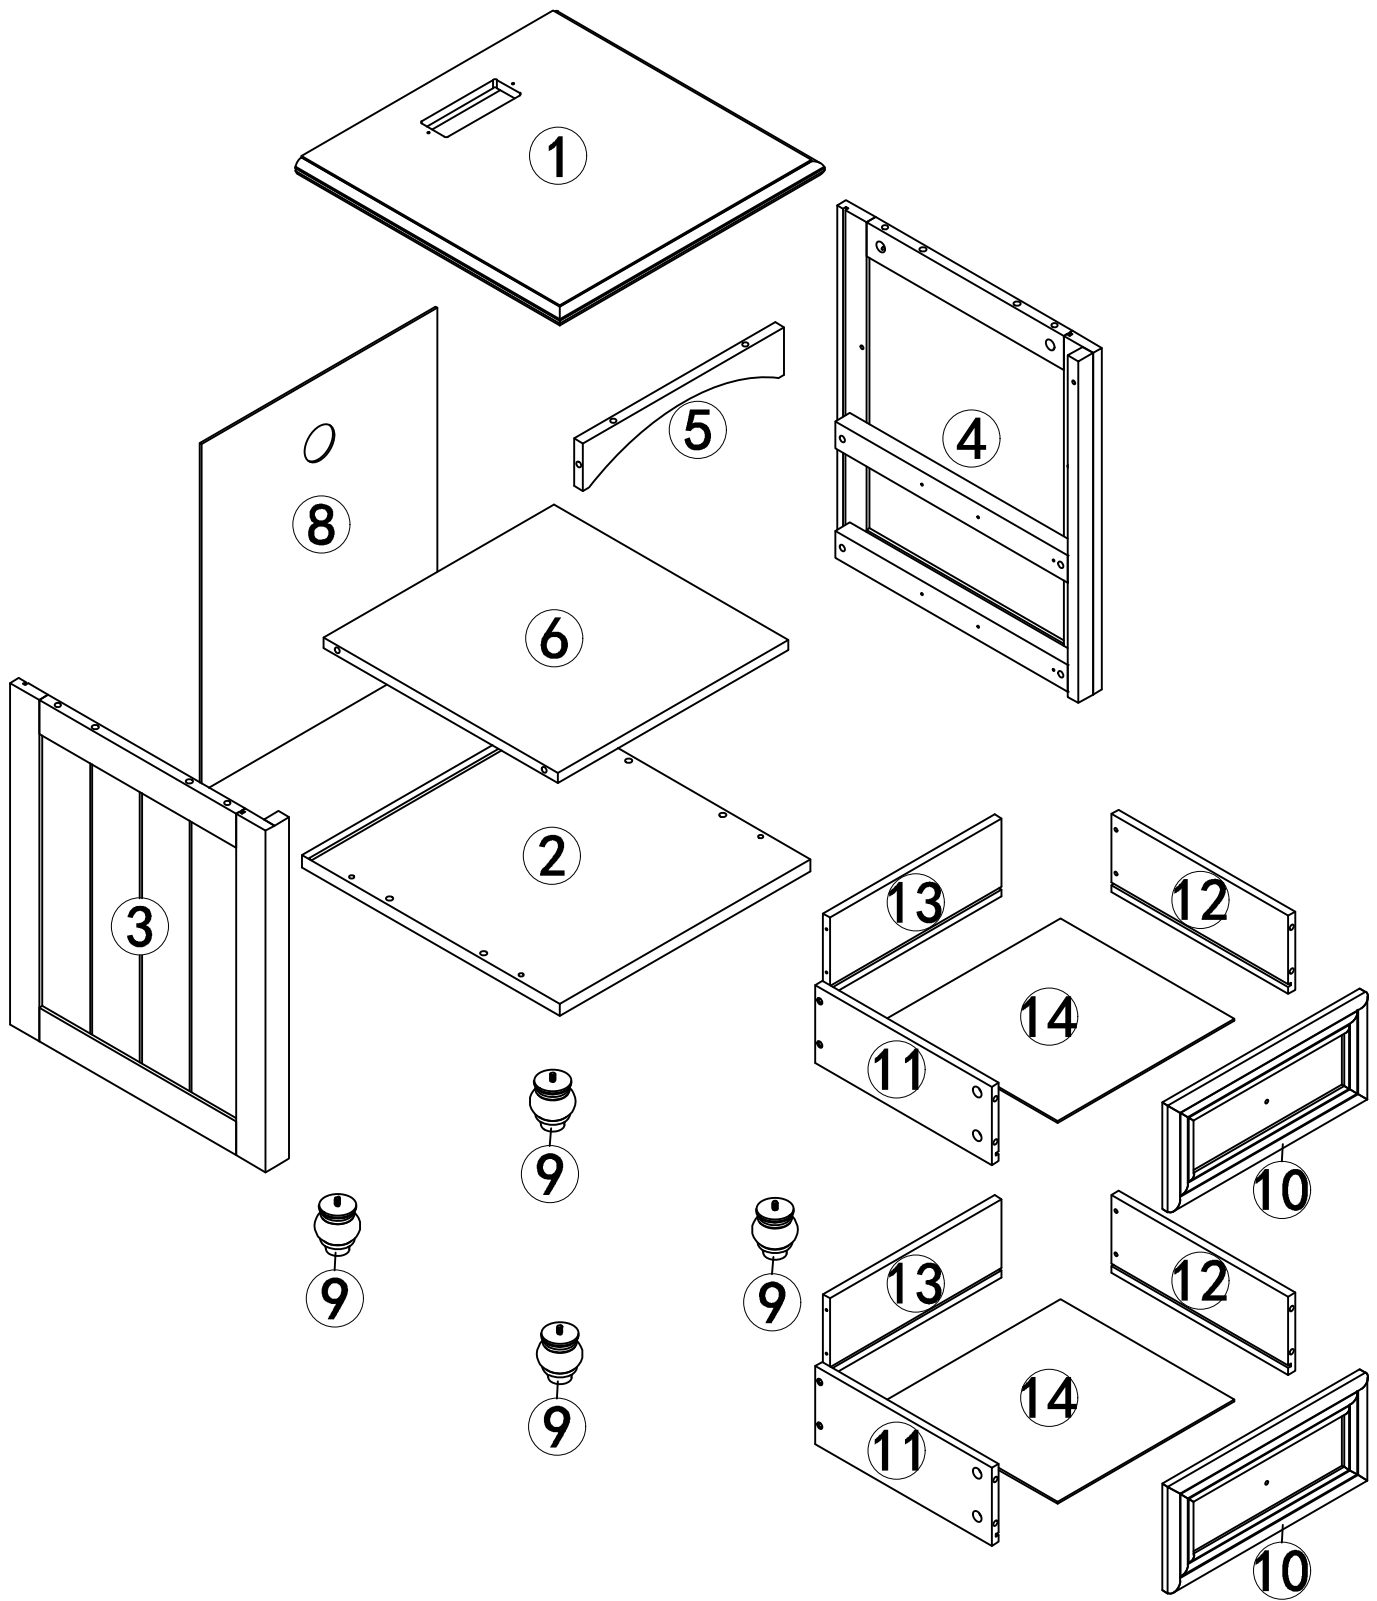


HARDWARE LIST

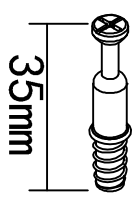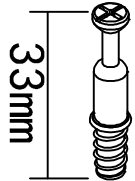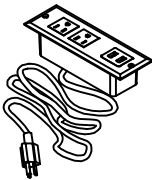A  Ø6x35mm (12+1)PCS	B  Ø15x9.5mm (20+2)PCS	C  Ø4x32mm (8+1)PCS
D  Ø8x30mm (8+1)PCS	E  Ø5x40mm (4+1)PCS	F  Ø6x33mm (8+1)PCS
G  (4+1)PCS	H  Ø3x15mm (4+1)PCS	I  1PC
J  Ø3x12mm (26+2)PCS	K  2SET	L  2PCS
M  Ø4x12mm 2PCS	 1PC	 1PC


! K X 2SET

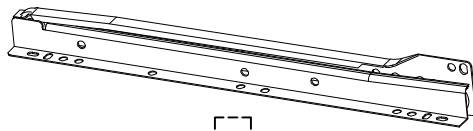


CL




CR




DL



DR

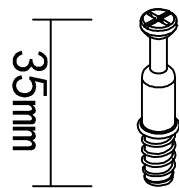


A

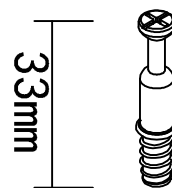


F

STEP 1

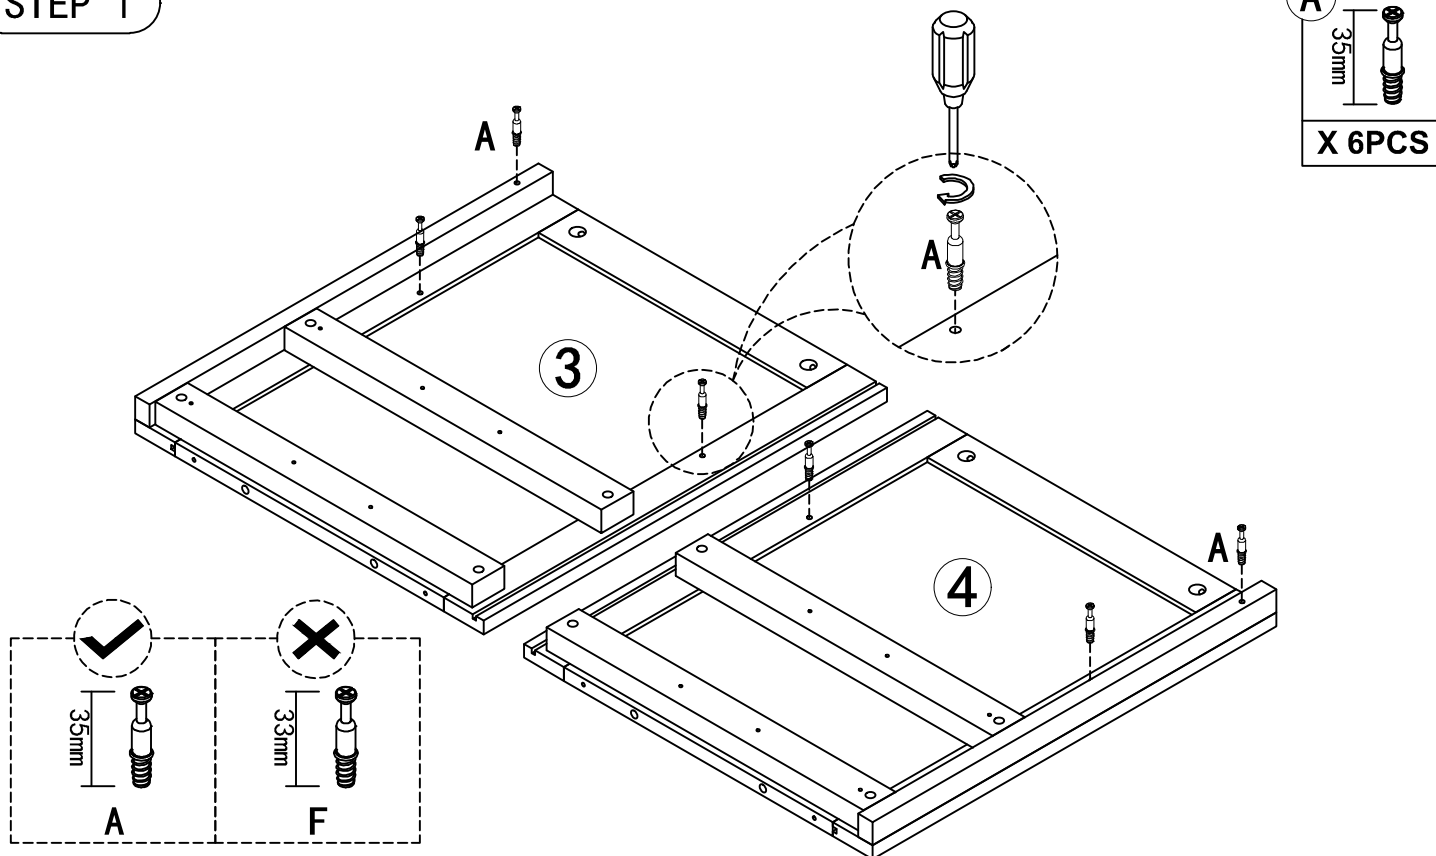


STEP 2

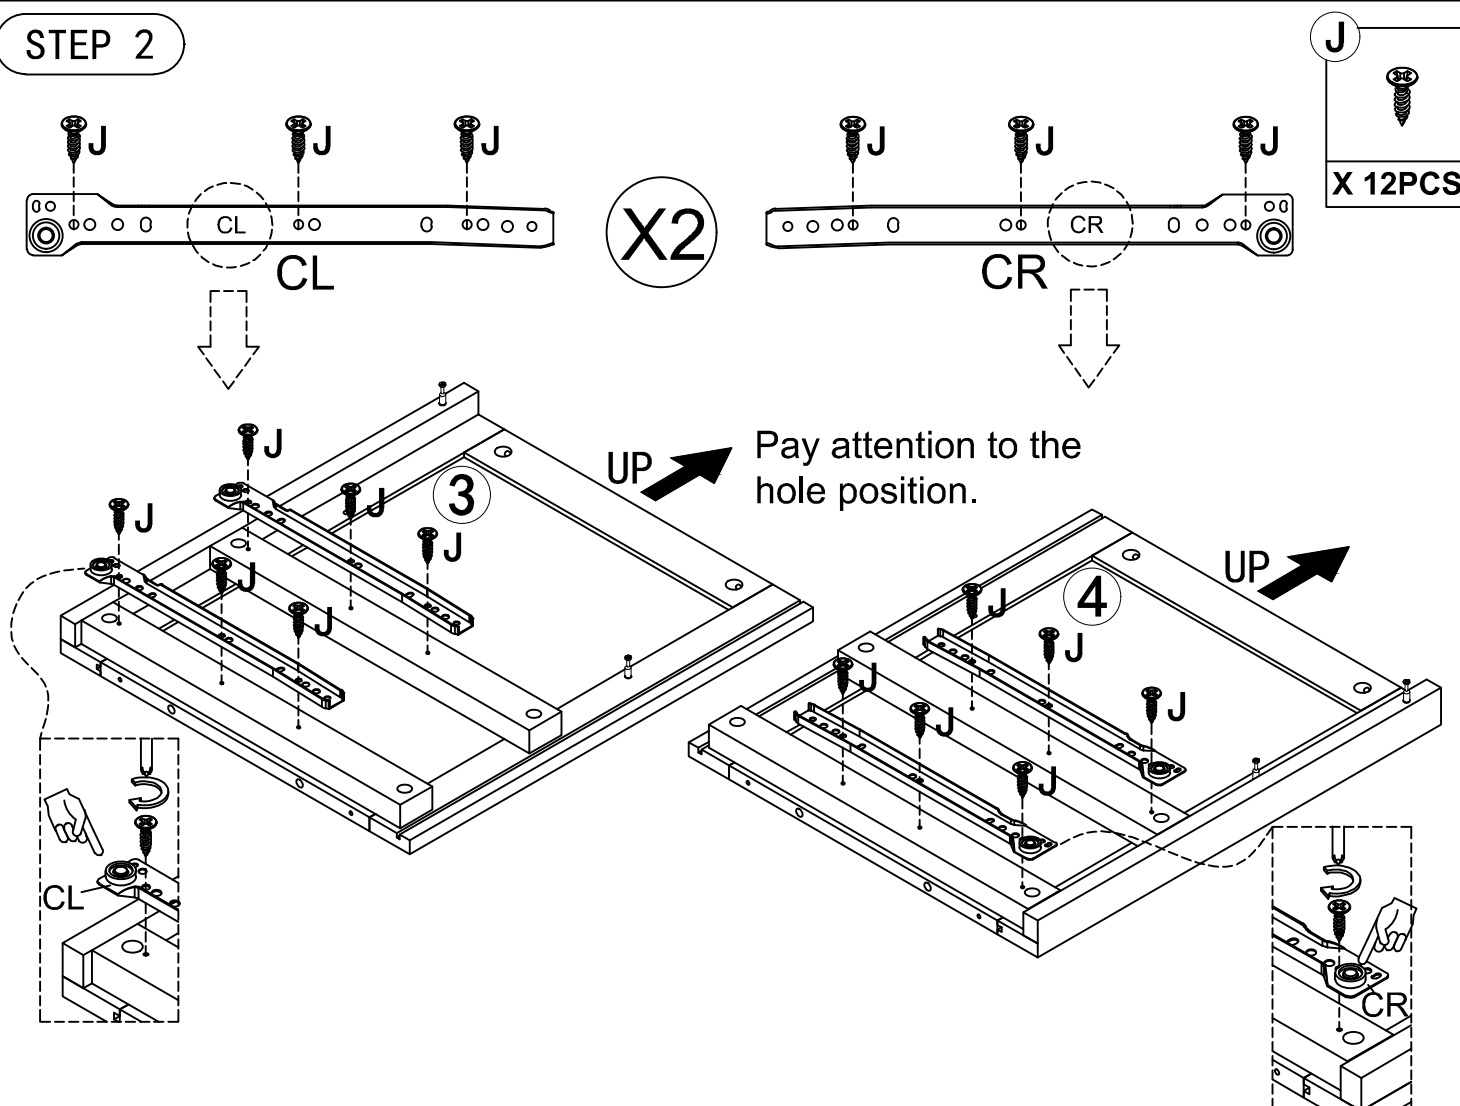

STEP 3

B


X 1PC

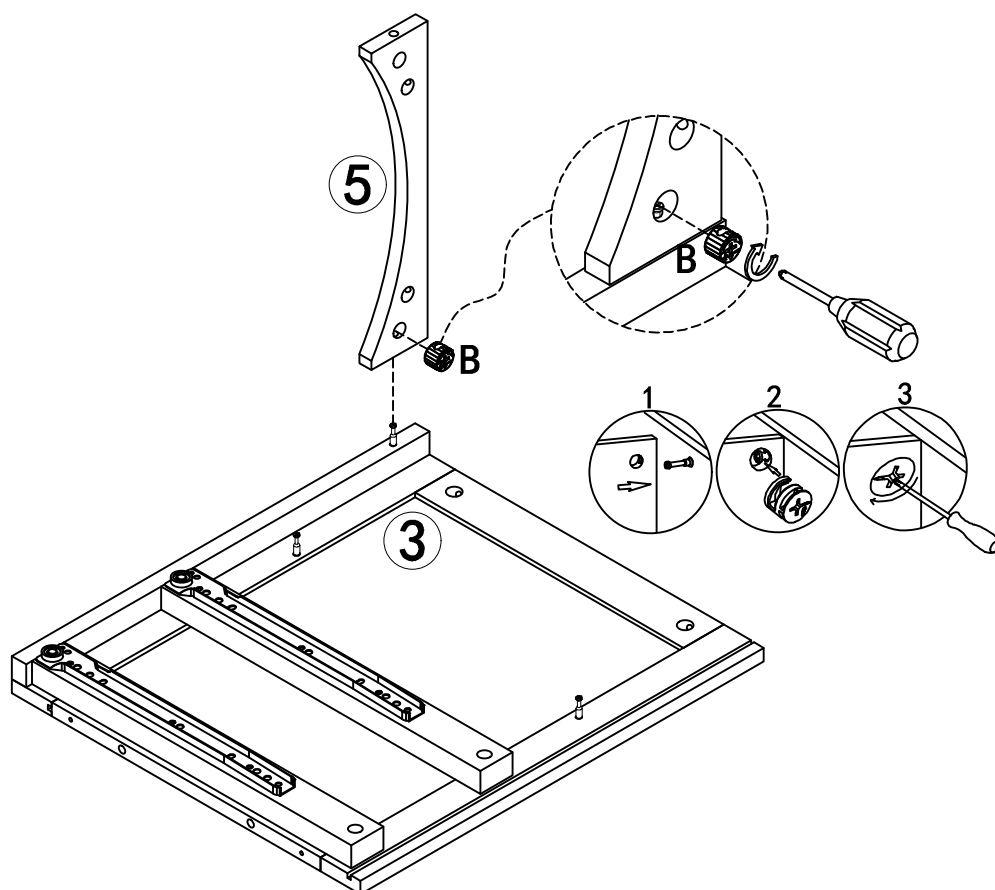

STEP 4

B

X 2PCS


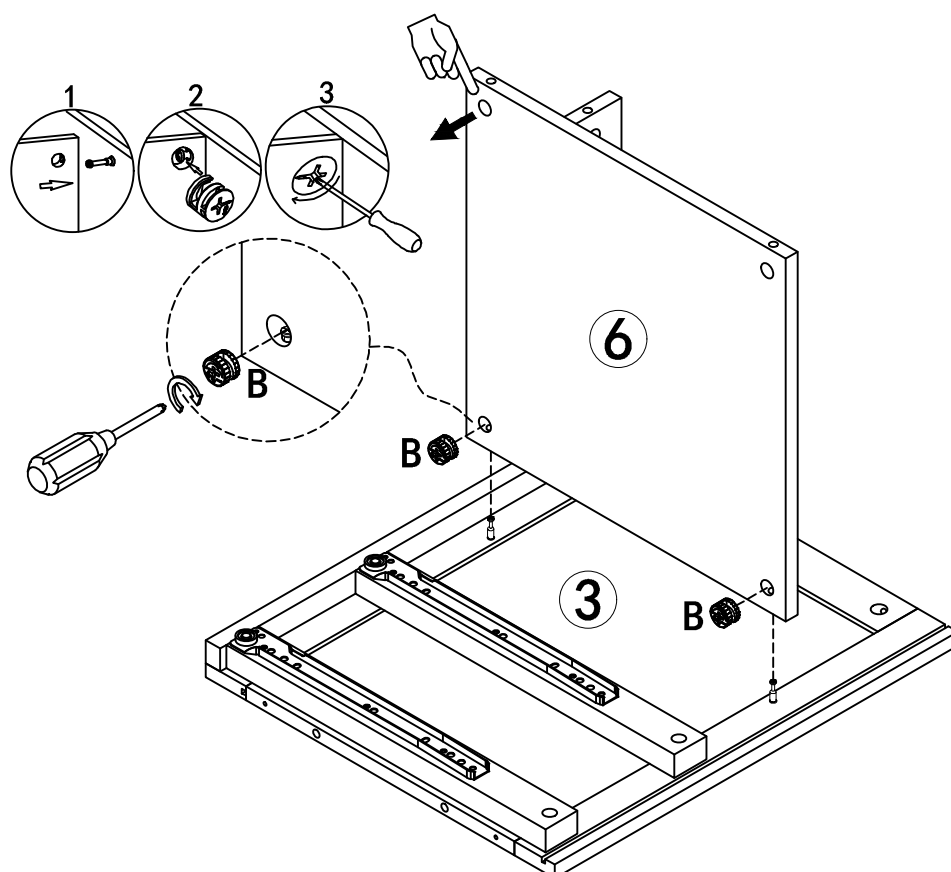


STEP 5

B



X 3PCS

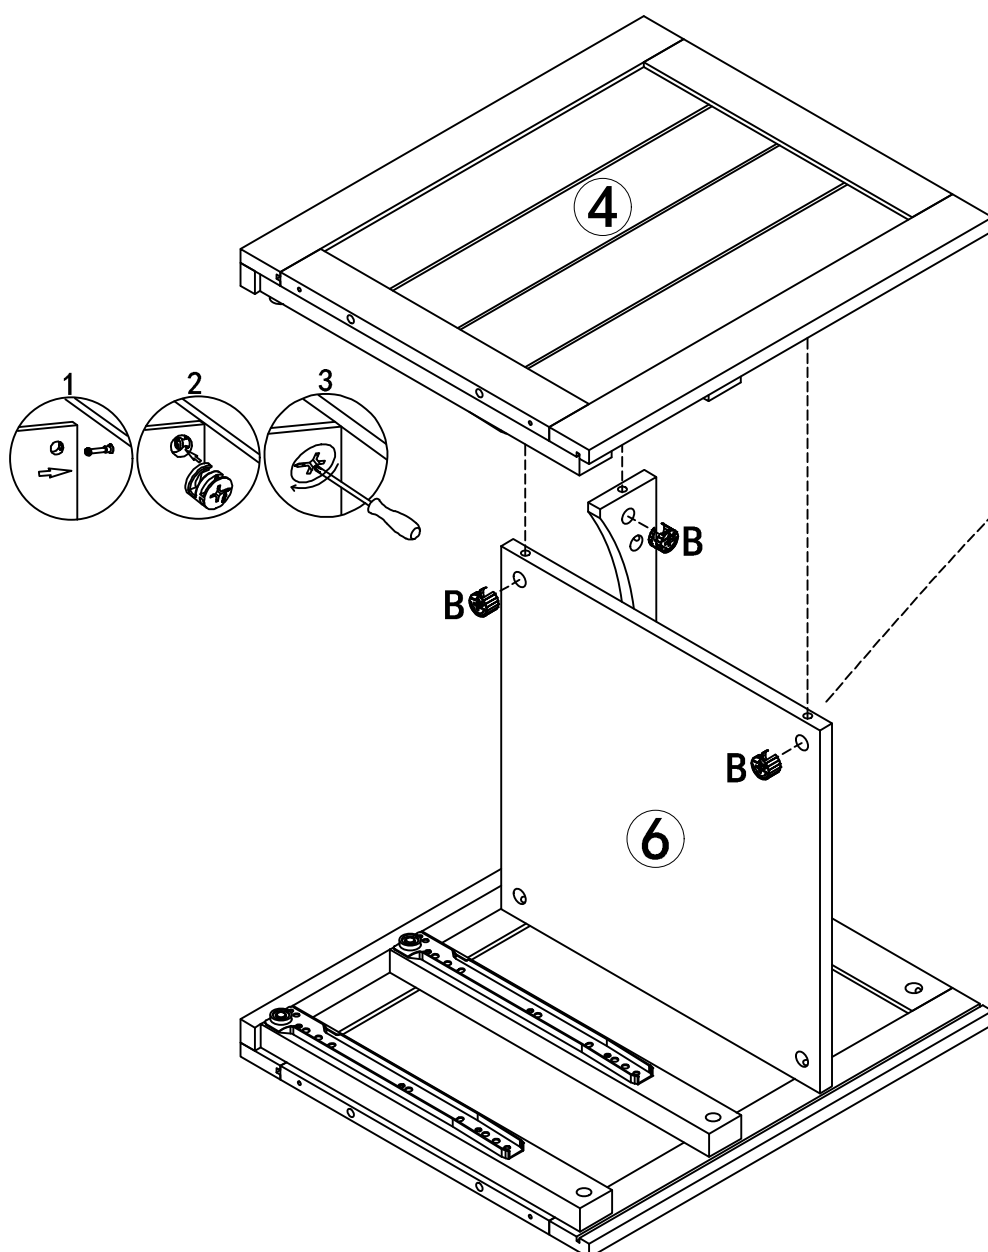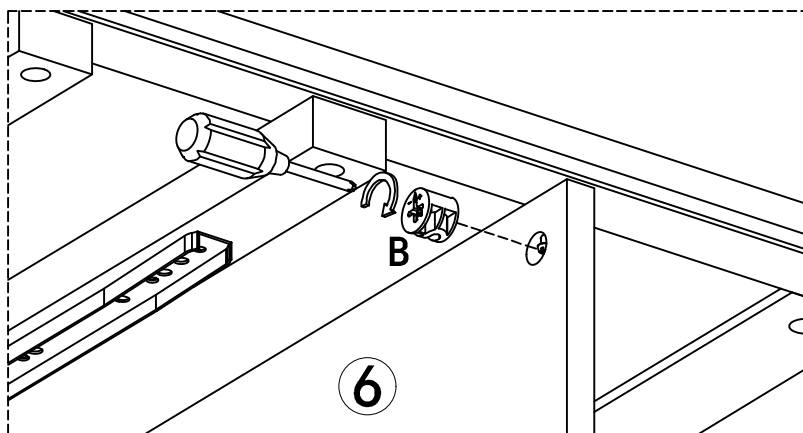


STEP 6



D




X 4PCS

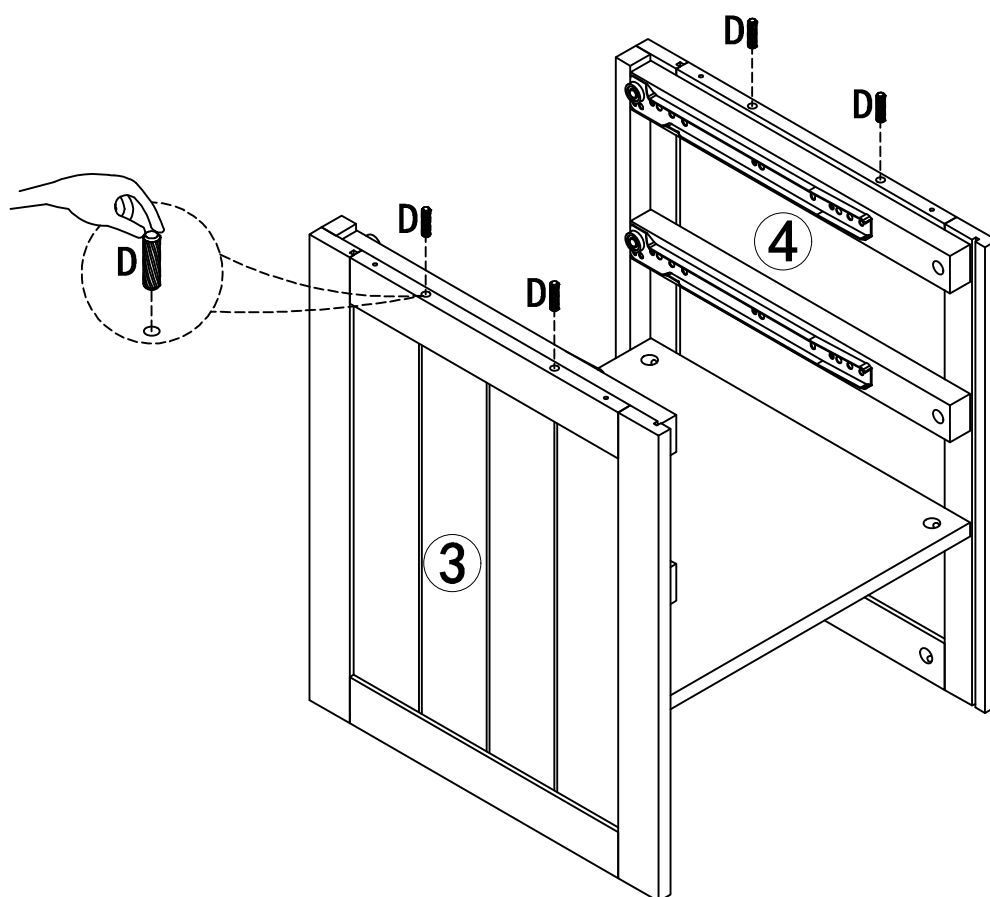

STEP 7

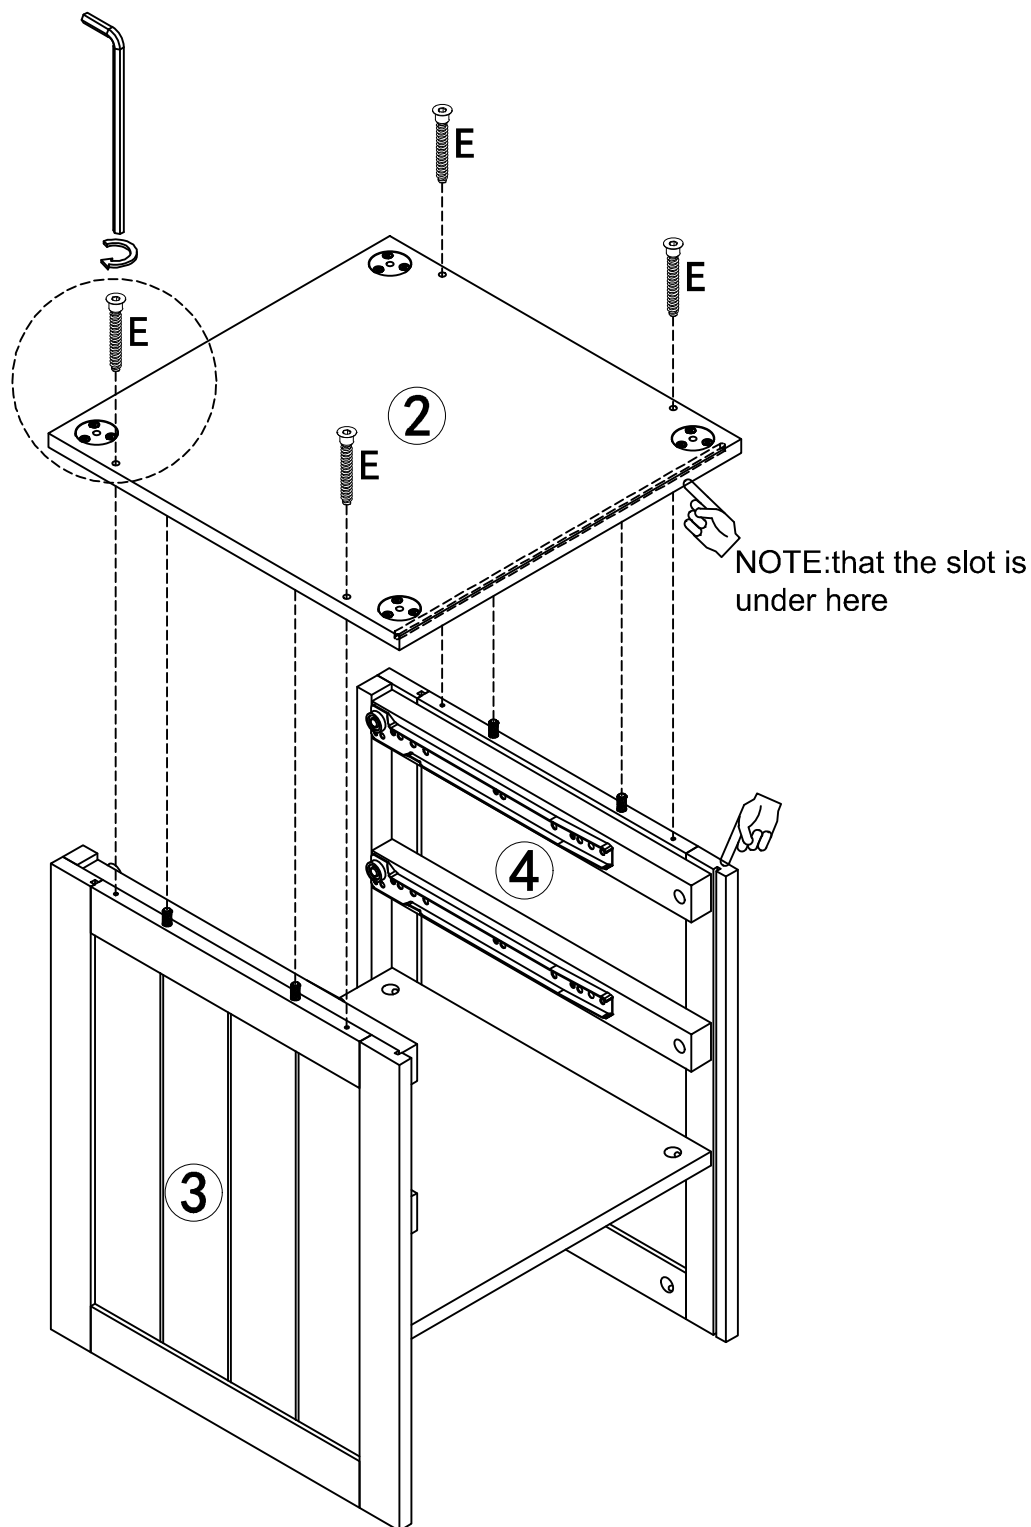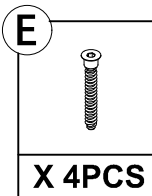


STEP 8

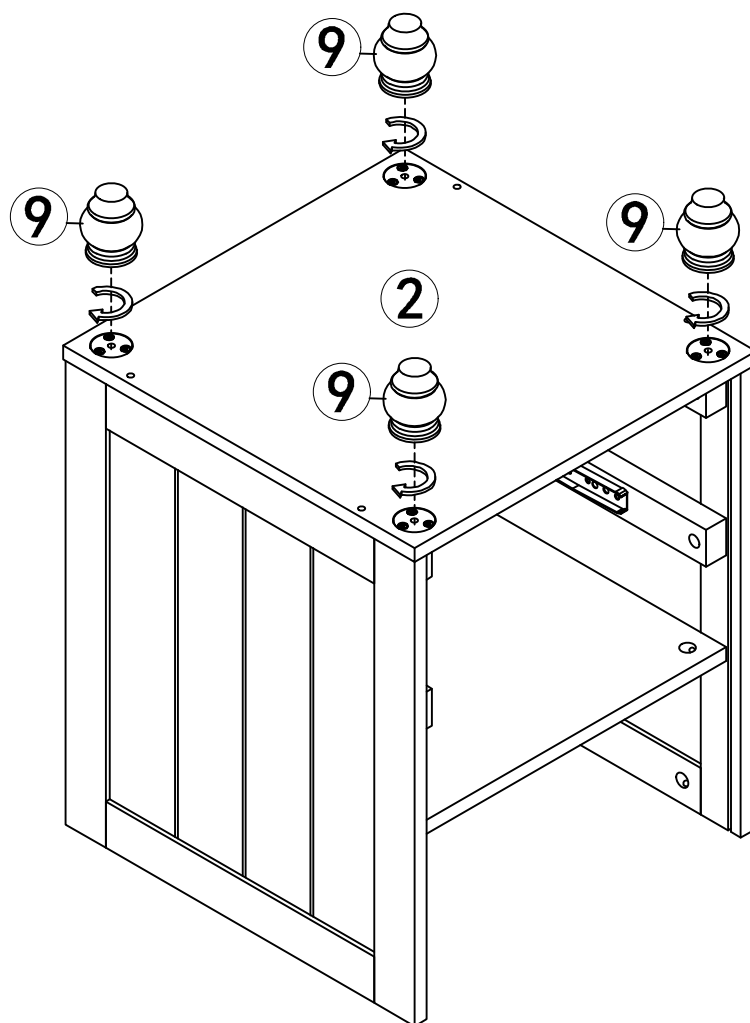



STEP 9


D
X 4PCS

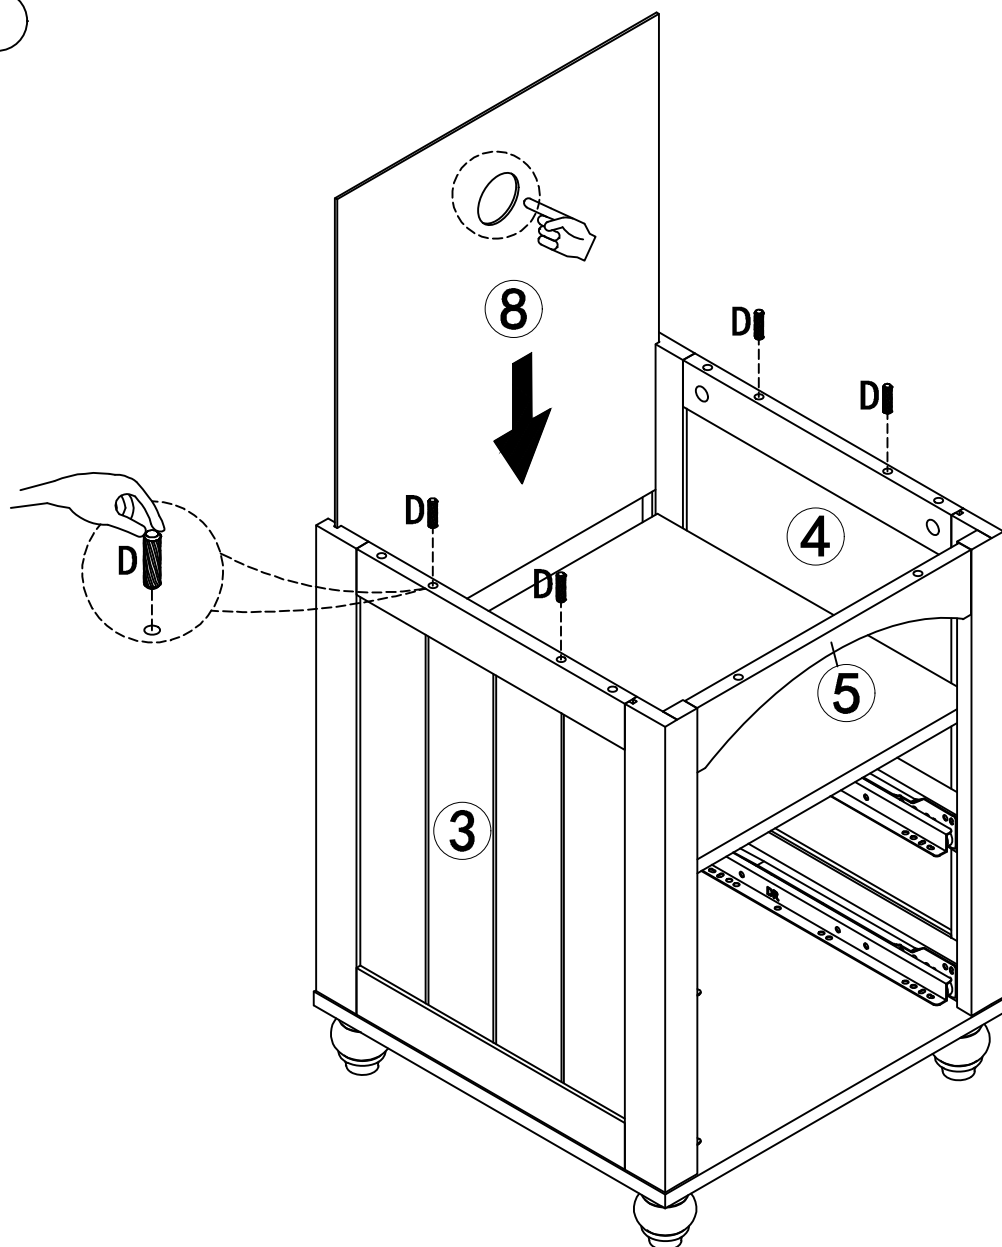

STEP 10

A
35mm
X 6PCS

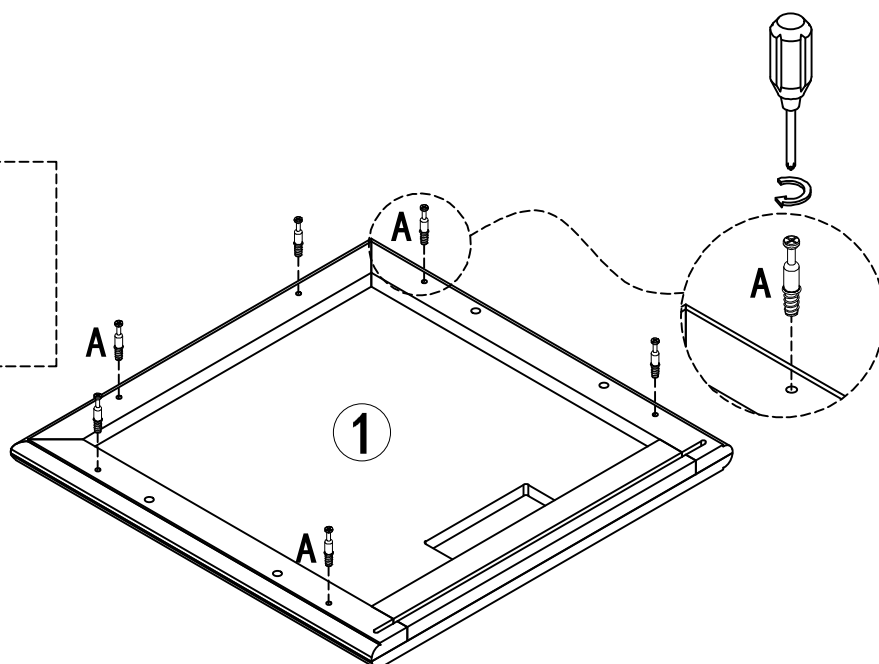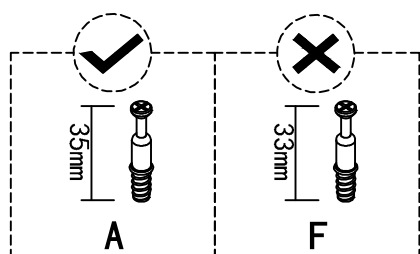


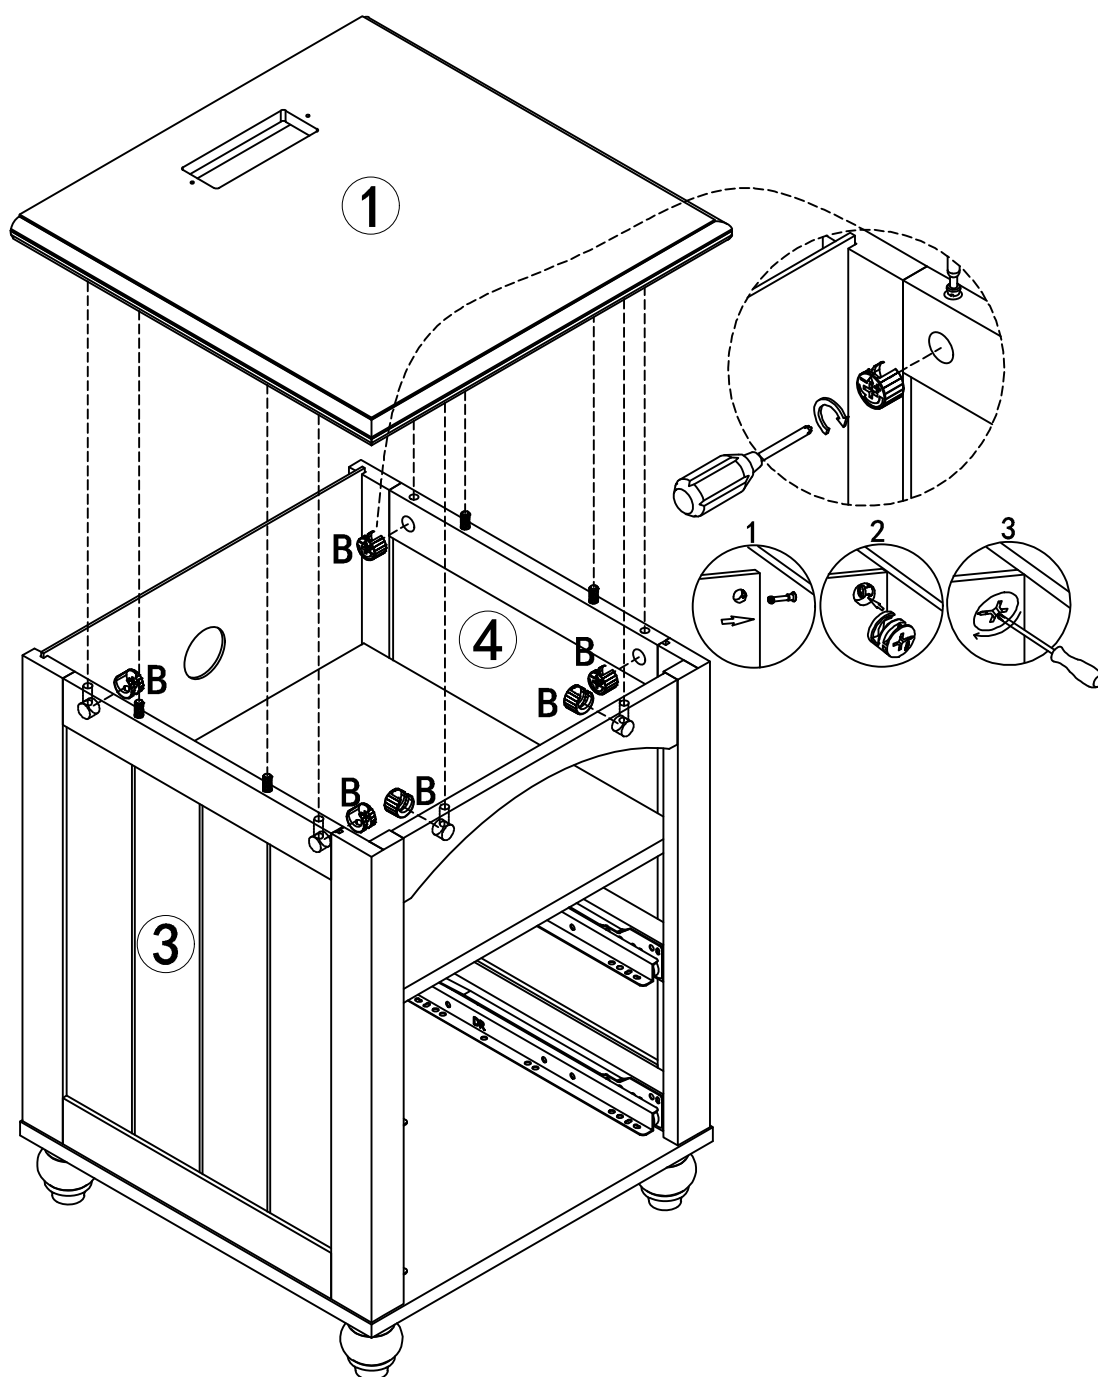



STEP 12

G 	H 	I 	J 
X 4PCS	X 4PCS	X 1PC	X 2PCS



NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.

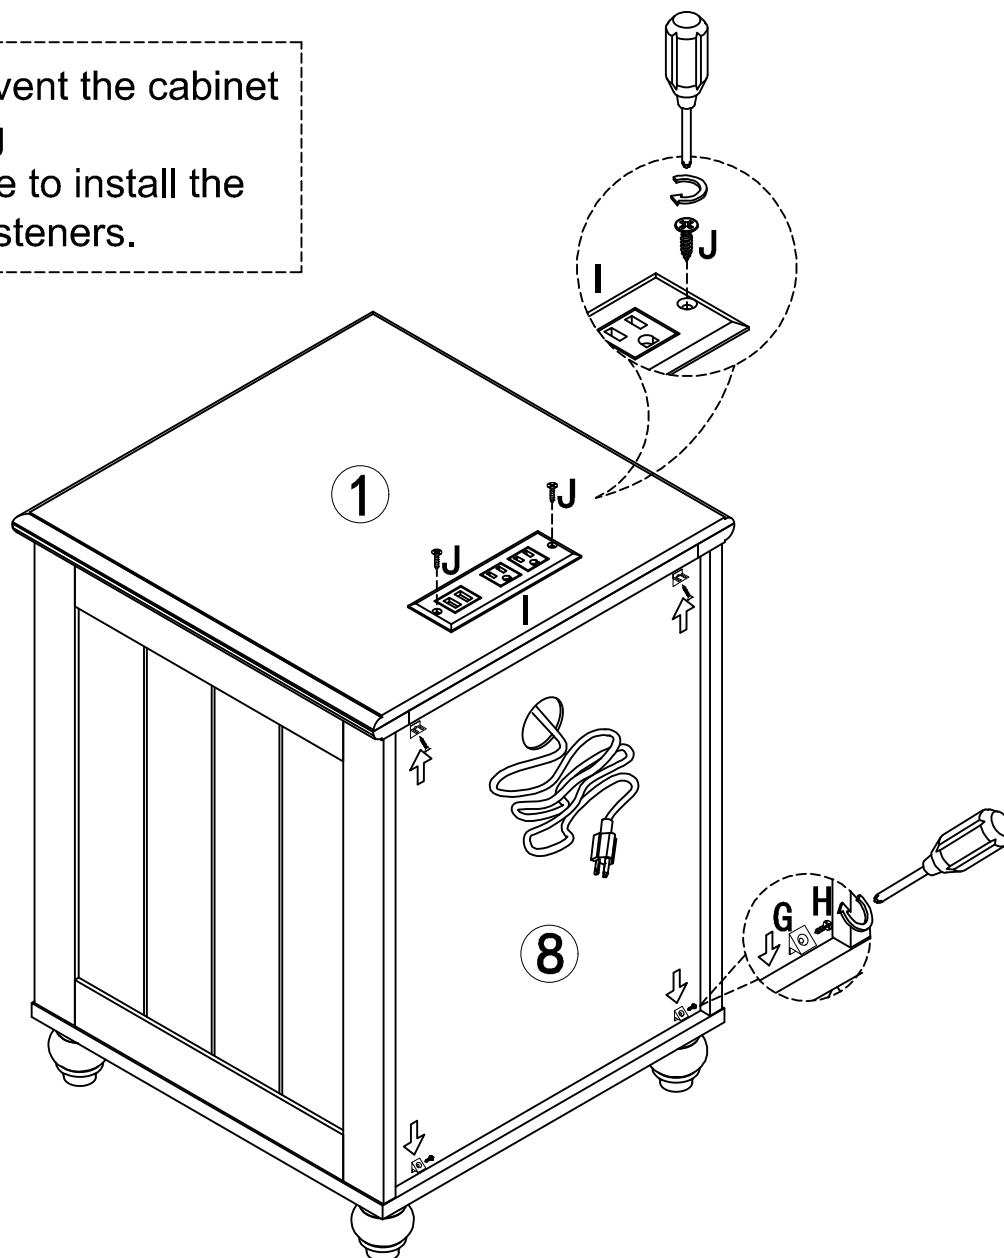



STEP 13

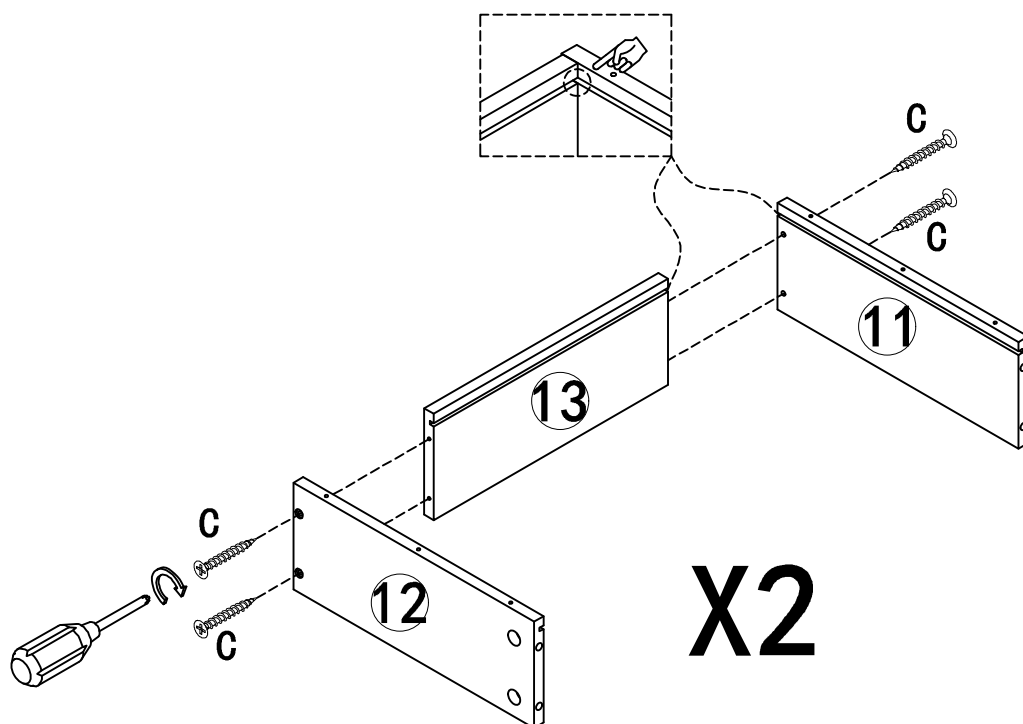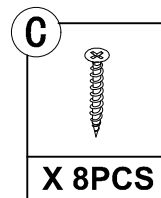




STEP 14

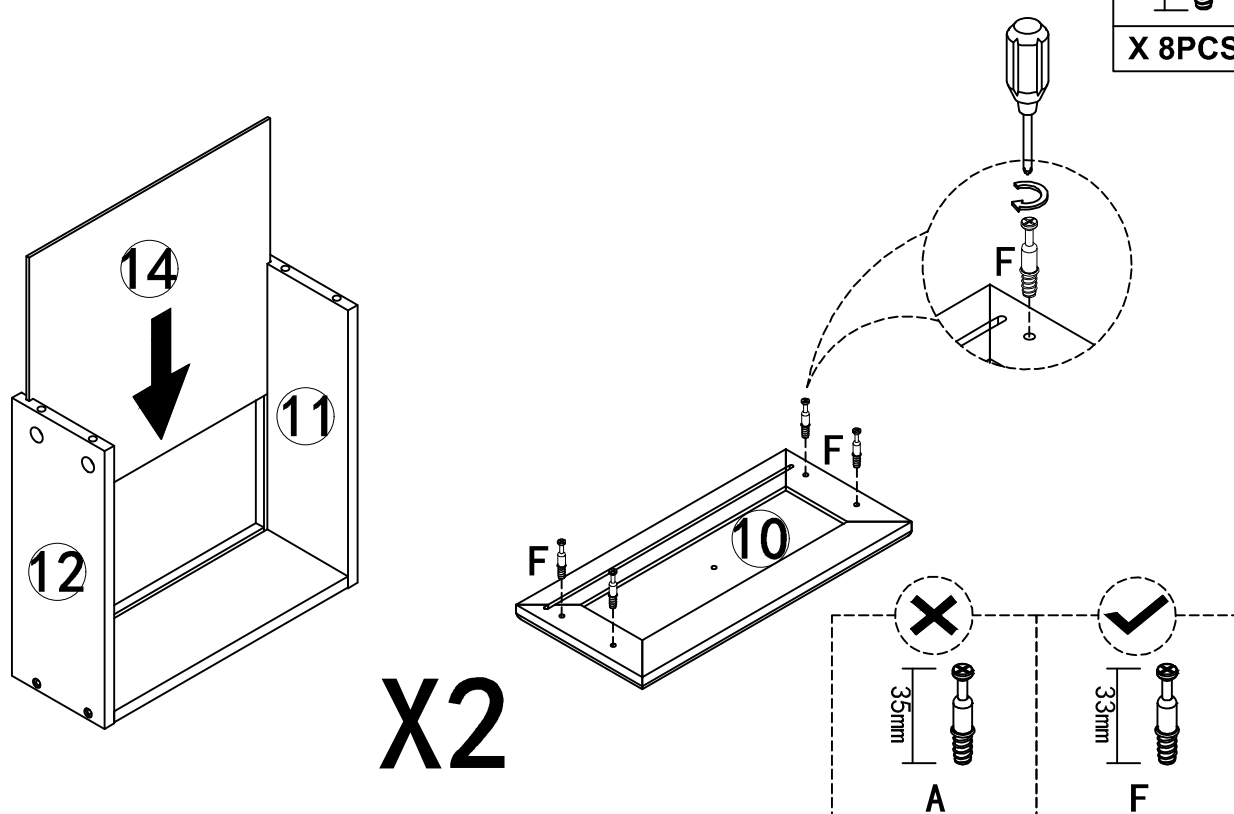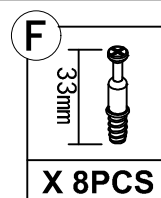

STEP 15

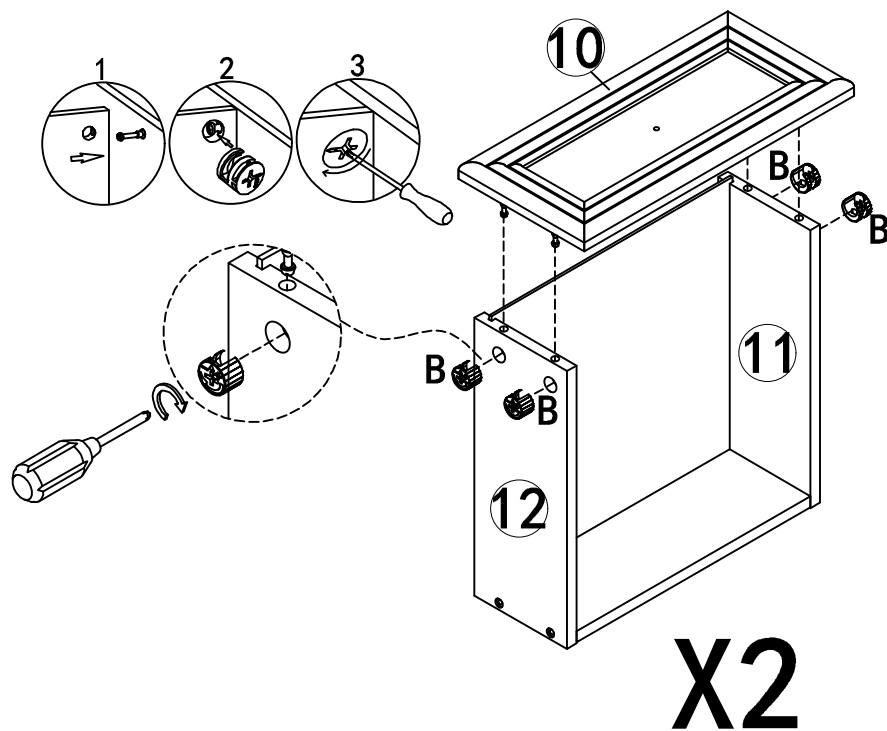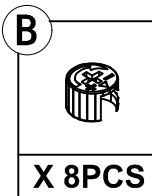


STEP 16

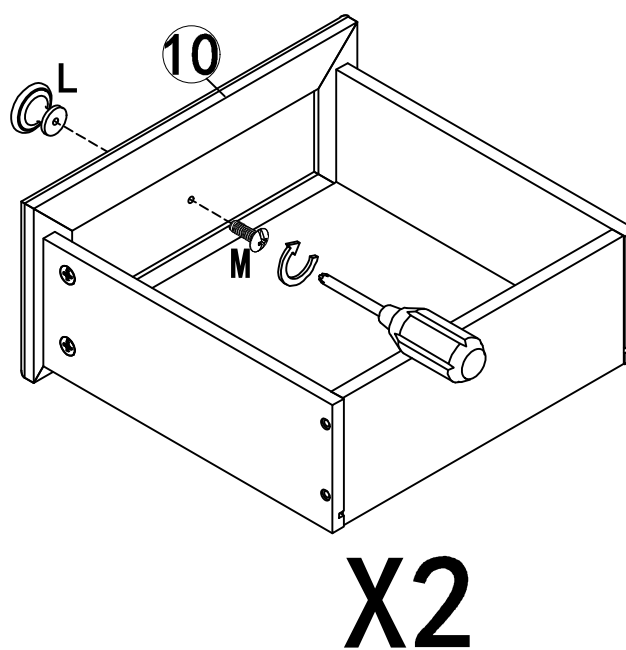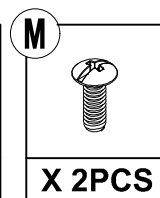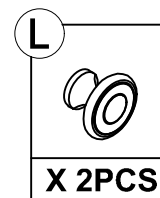

STEP 17

Pay attention to the hole position.

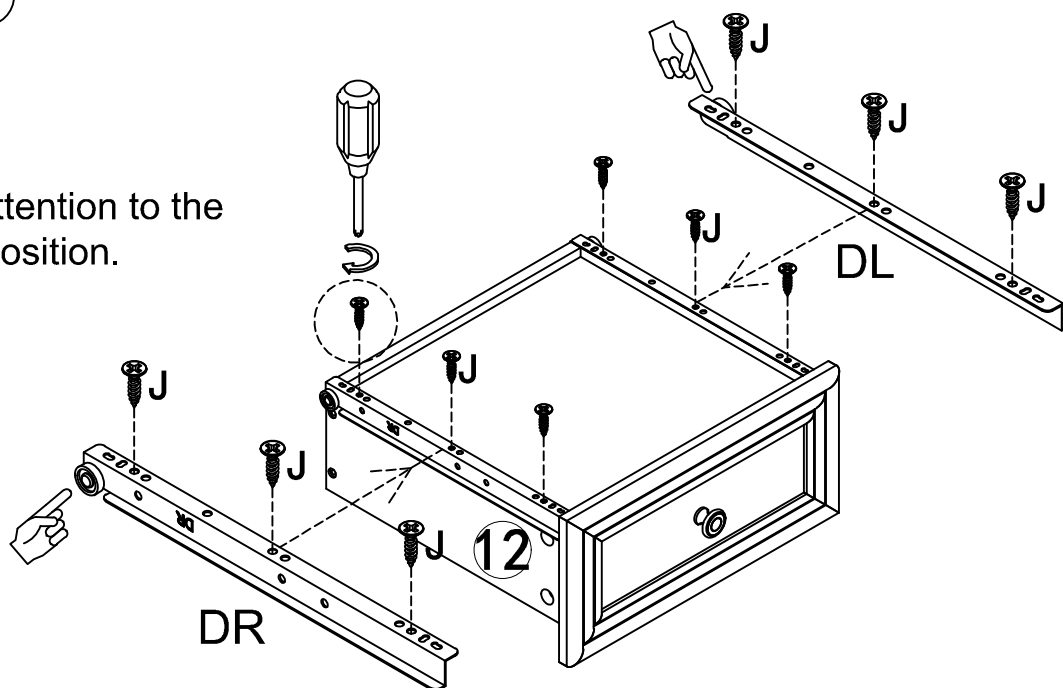

X2

STEP 18

