



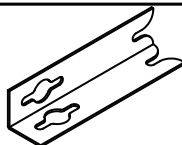
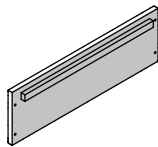

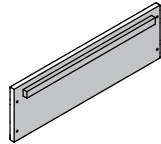
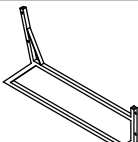




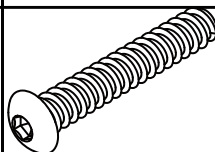
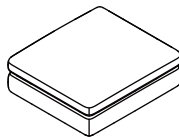



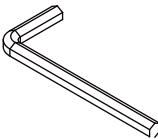
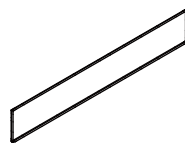
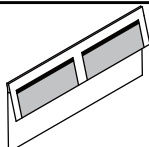


Part NO.	Part Image	Part Name	QTY	Part NO.	Part Image	Part Name	QTY
A-L		Left Armrest	1	K		Backrest Base Connecting Rod	1
A-R		Right Armrest	1	L		Sofa Corner Bracket	2
B-L		Left Sofa Front Board	1	M		Connect Metal Piece	1
B-R		Right Sofa Front Board	1	N		Leg	4
C		Middle Support Bracket	1	O		Screws M6x20mm	14
D-L		Left Back Frame	1	P		Screws M6x30mm	8
D-R		Right Back Frame	1	Q		Screws M6x6 5mm	3
E		Seat Wooden Slat	2	R		Nut	3
F		Seat Cushion	2	S		Washer	10
G		Back Cushion	2	T		Allen Key	1
H		Armrest bag	2	U		Allen Key	1
I		Front Fabric Cover	1	The 2 ARMREST are COMPRESSED, please open the plastic compressed bags to take them out before you assemble the sofa			
J		Back Frame Cover	1				

Sofa Overall Assembly Drawing

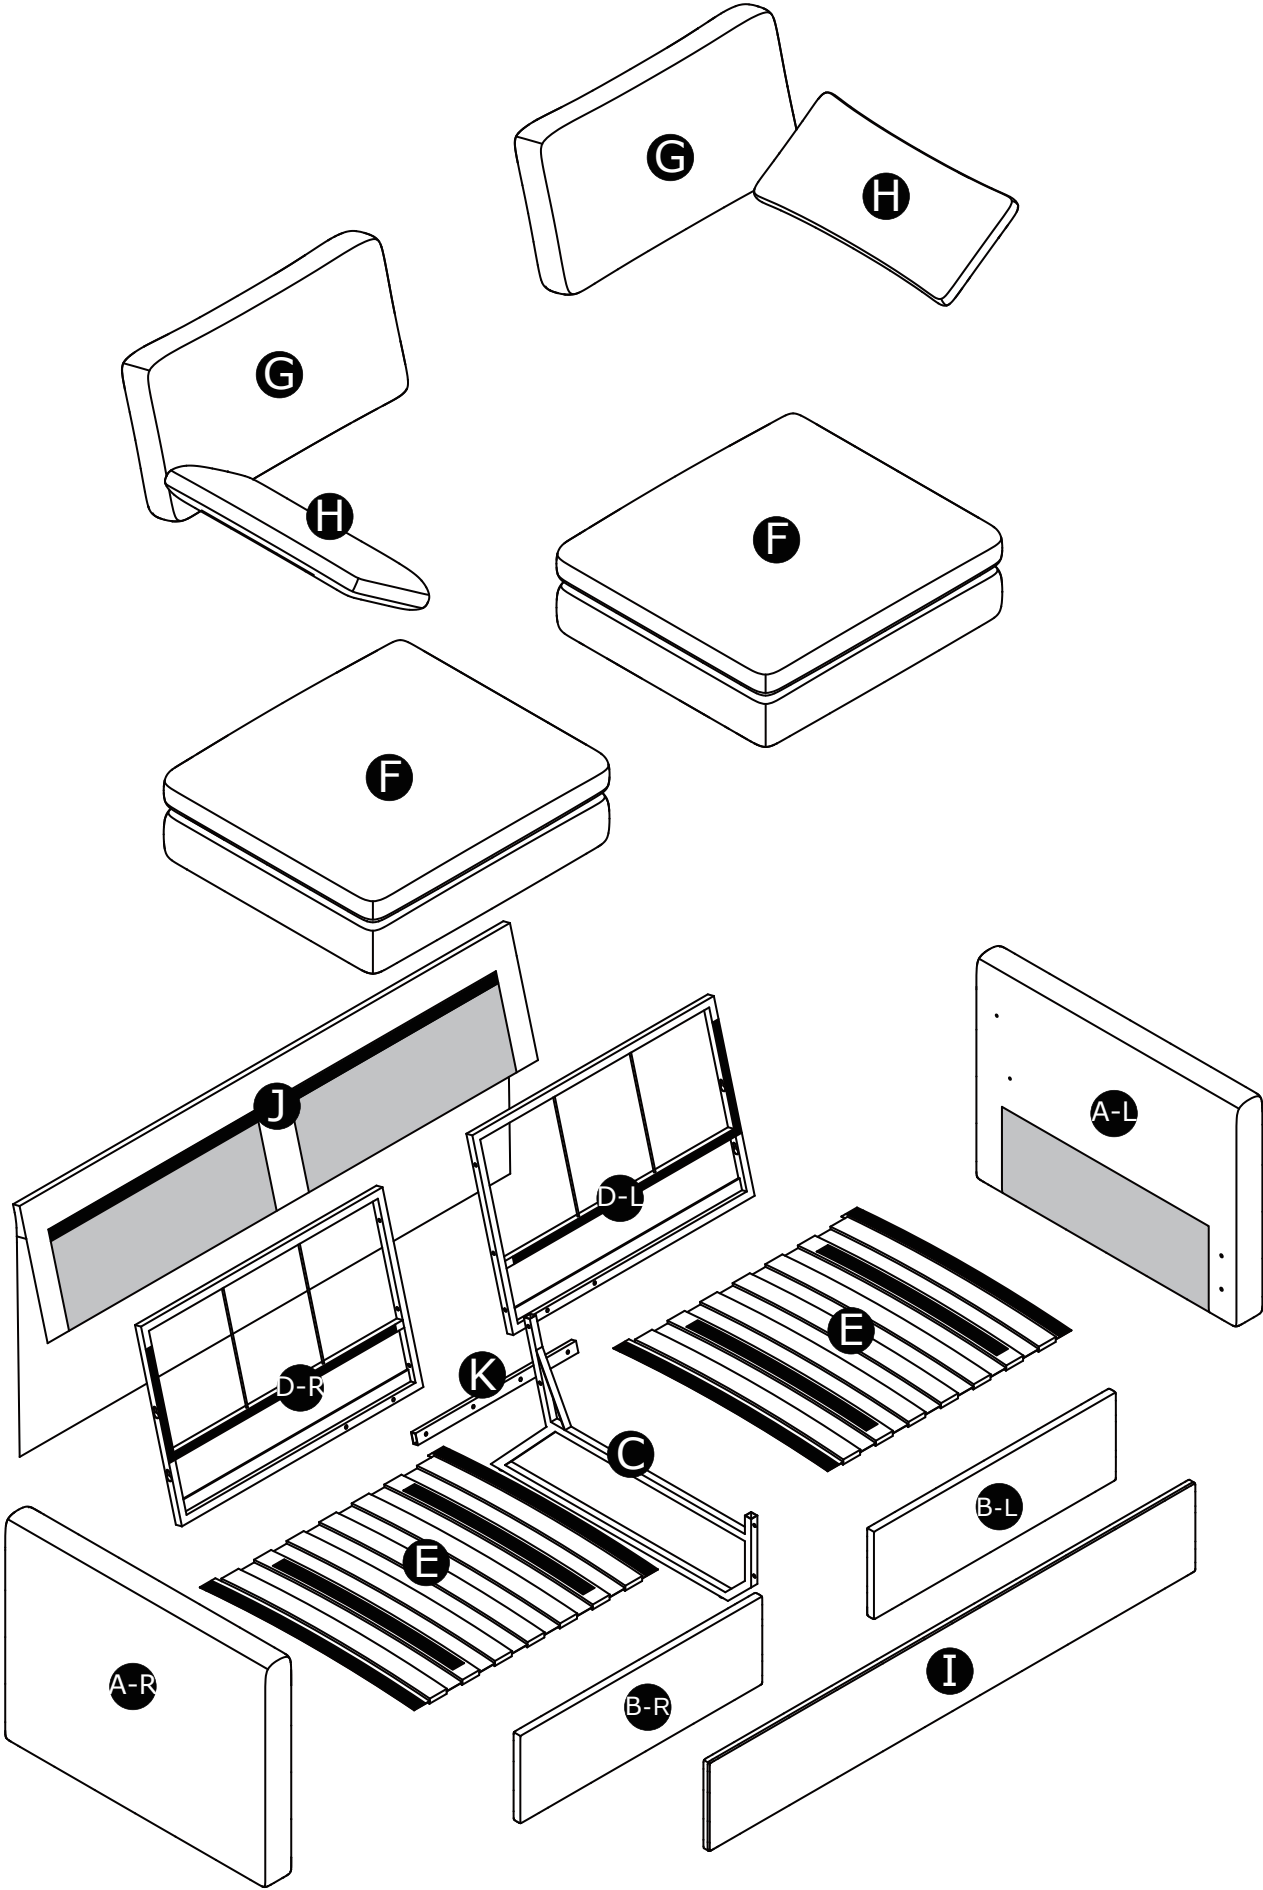


STEP 1

C x1

M x1

O x2

U x1

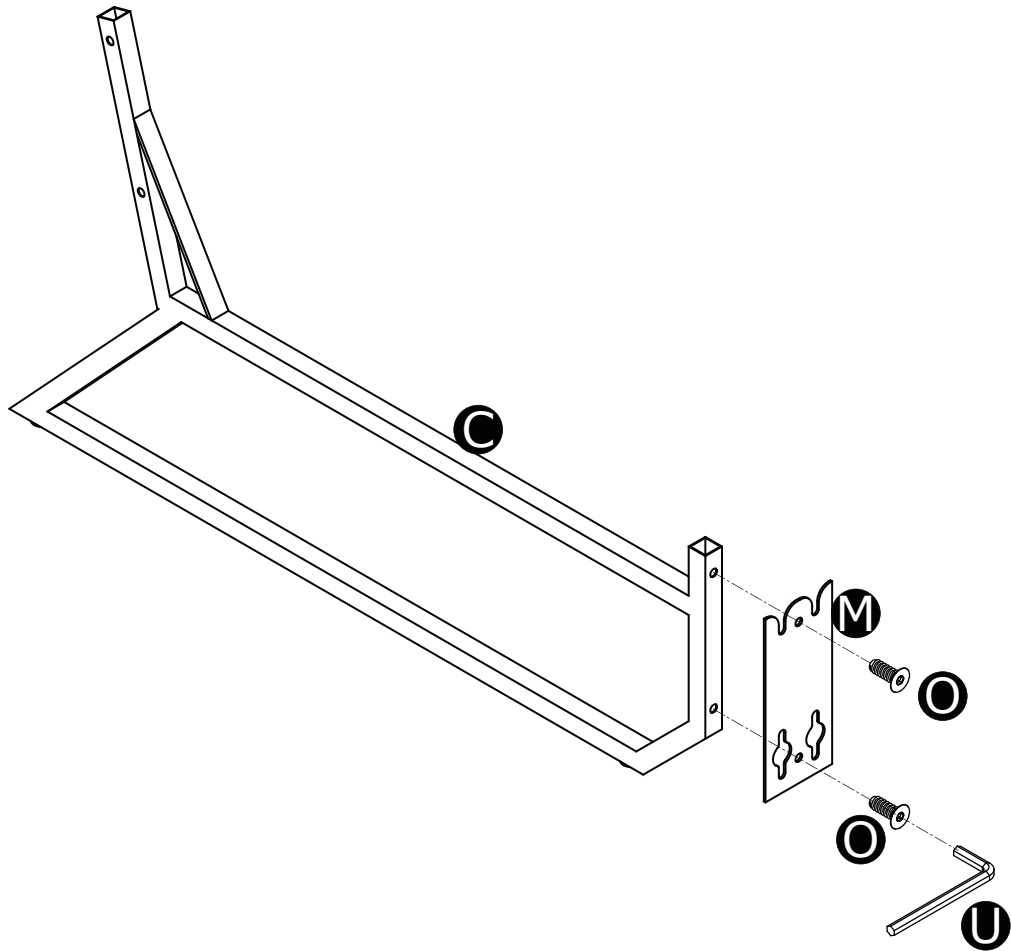


Please attach the velcro of the part "I" on the part "B-R,B-L"

STEP 2

B-L x1

B-R x1

I x1

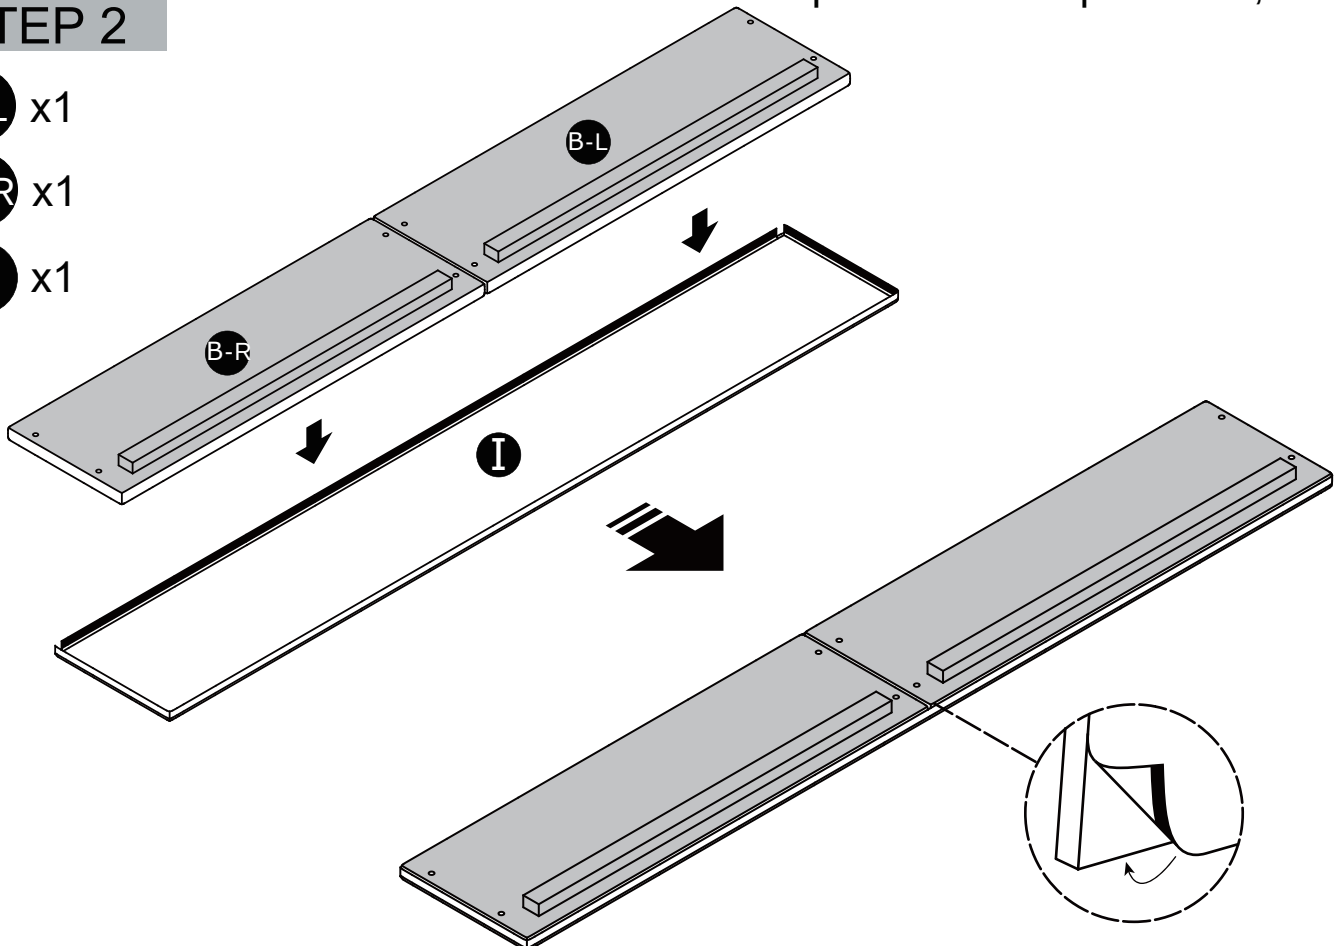


STEP 3

○ x8


U x1




Insert the screws, but do not tighten them fully at this time.

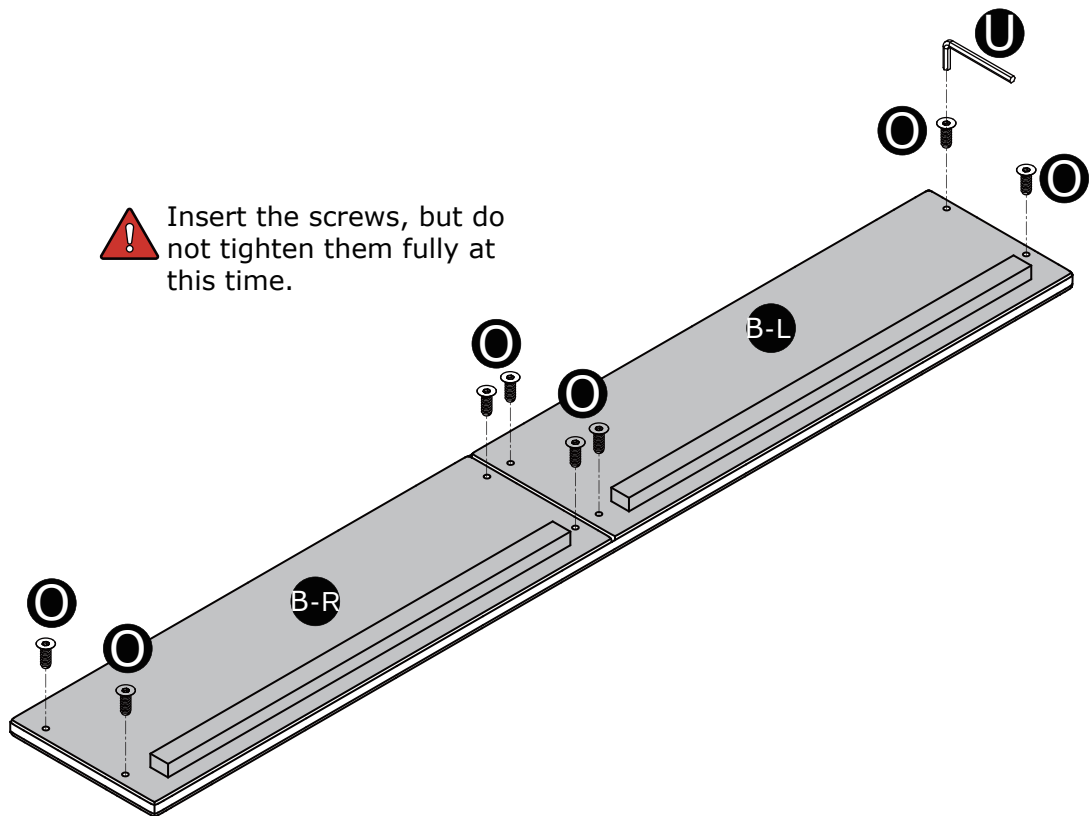

STEP 4

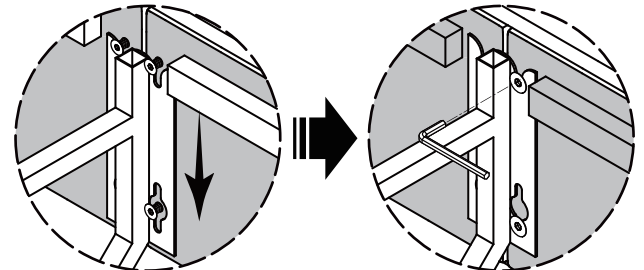





Slide screws "O" into part "M" and tighten them at this time

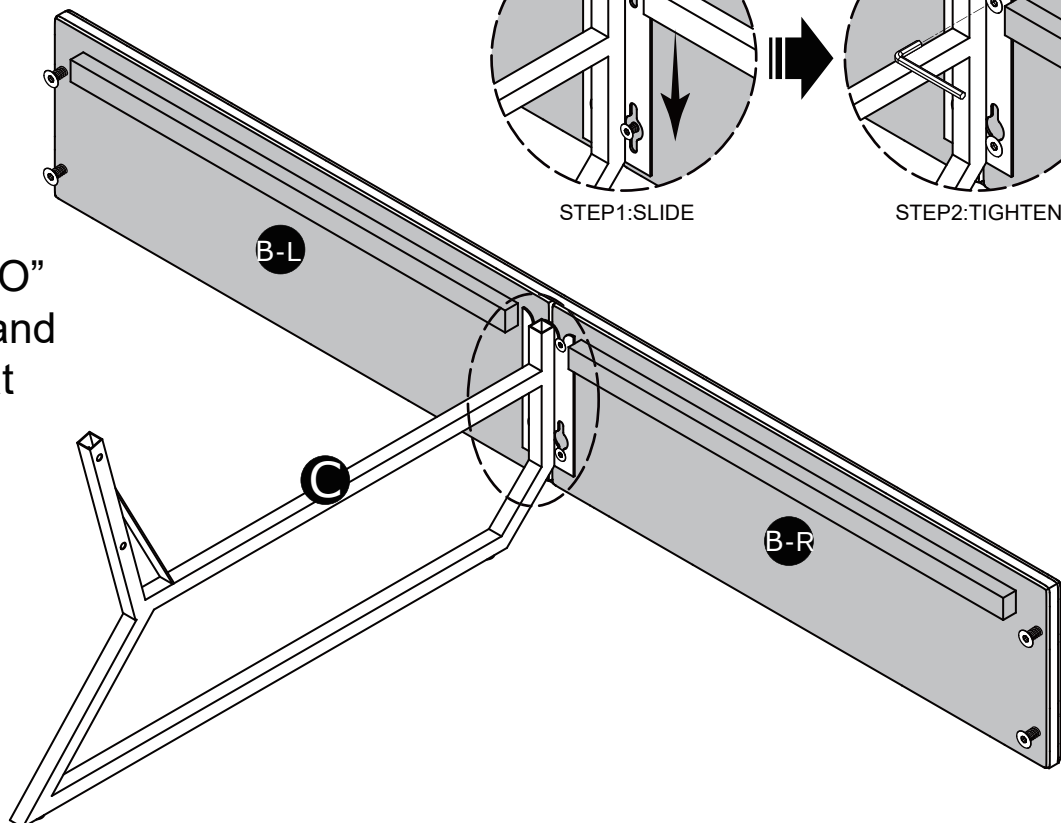

STEP 5

A-L x1

A-R x1

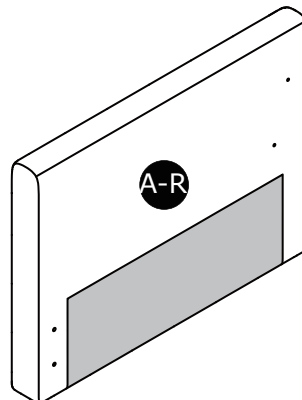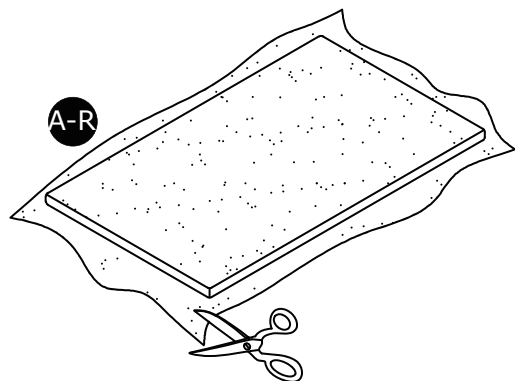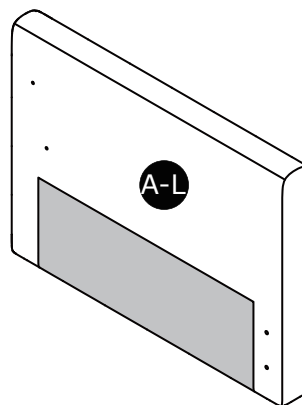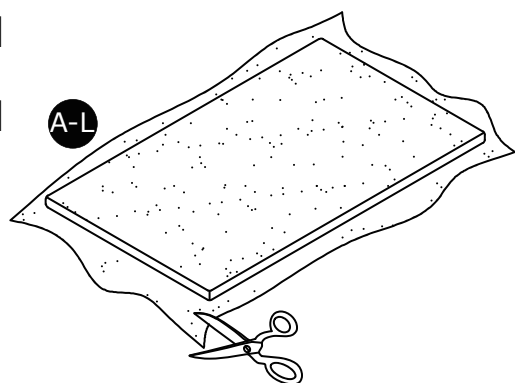

The 2 ARMREST are COMPRESSED, please open the plastic compressed bags to take them out before you assemble the sofa



STEP 6

O x4

L x2

N x4

U

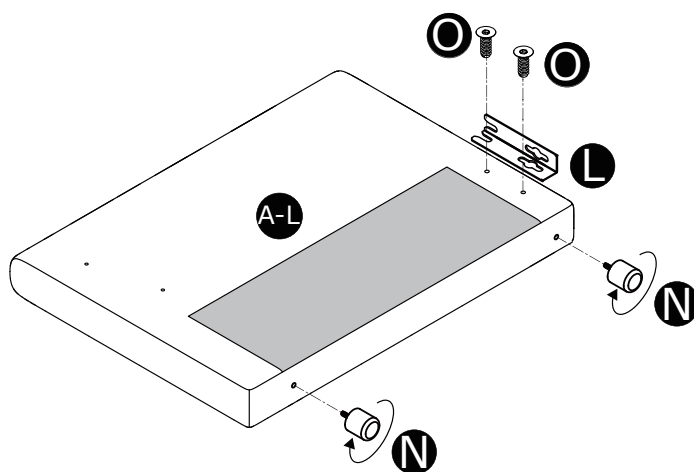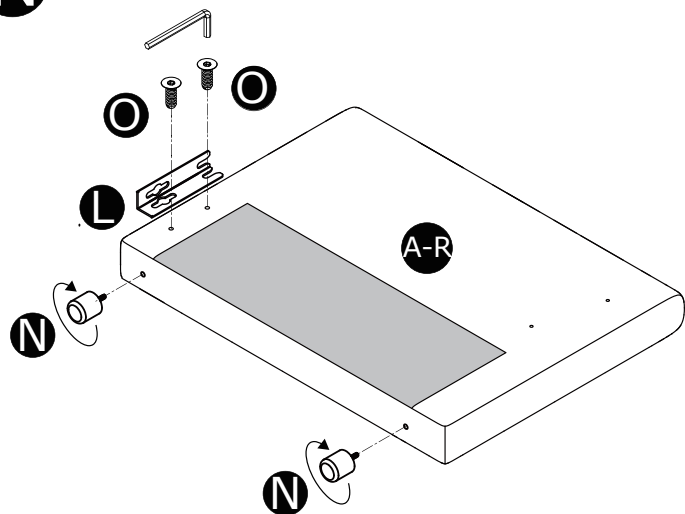


STEP 7

D-L x1

P x2

U x1

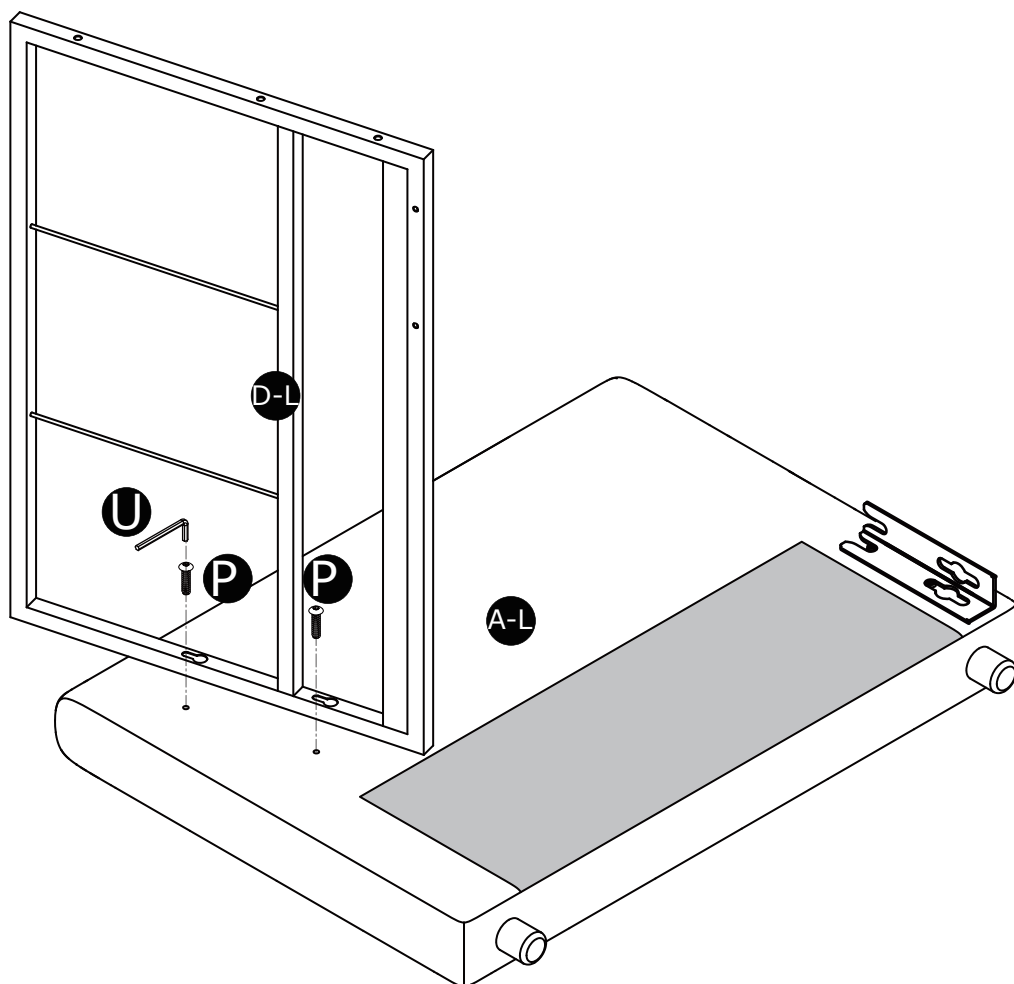


STEP 8


D-R x1

P x2

U x1

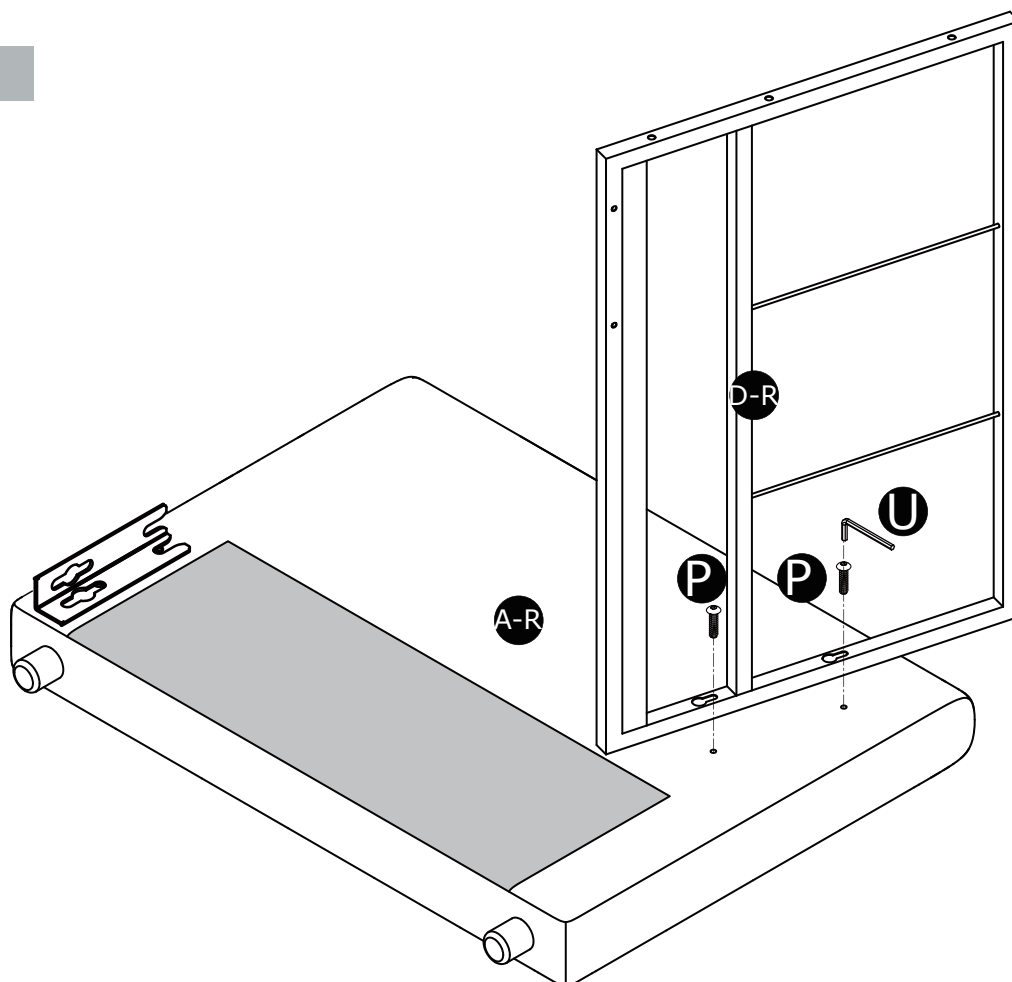


STEP 9

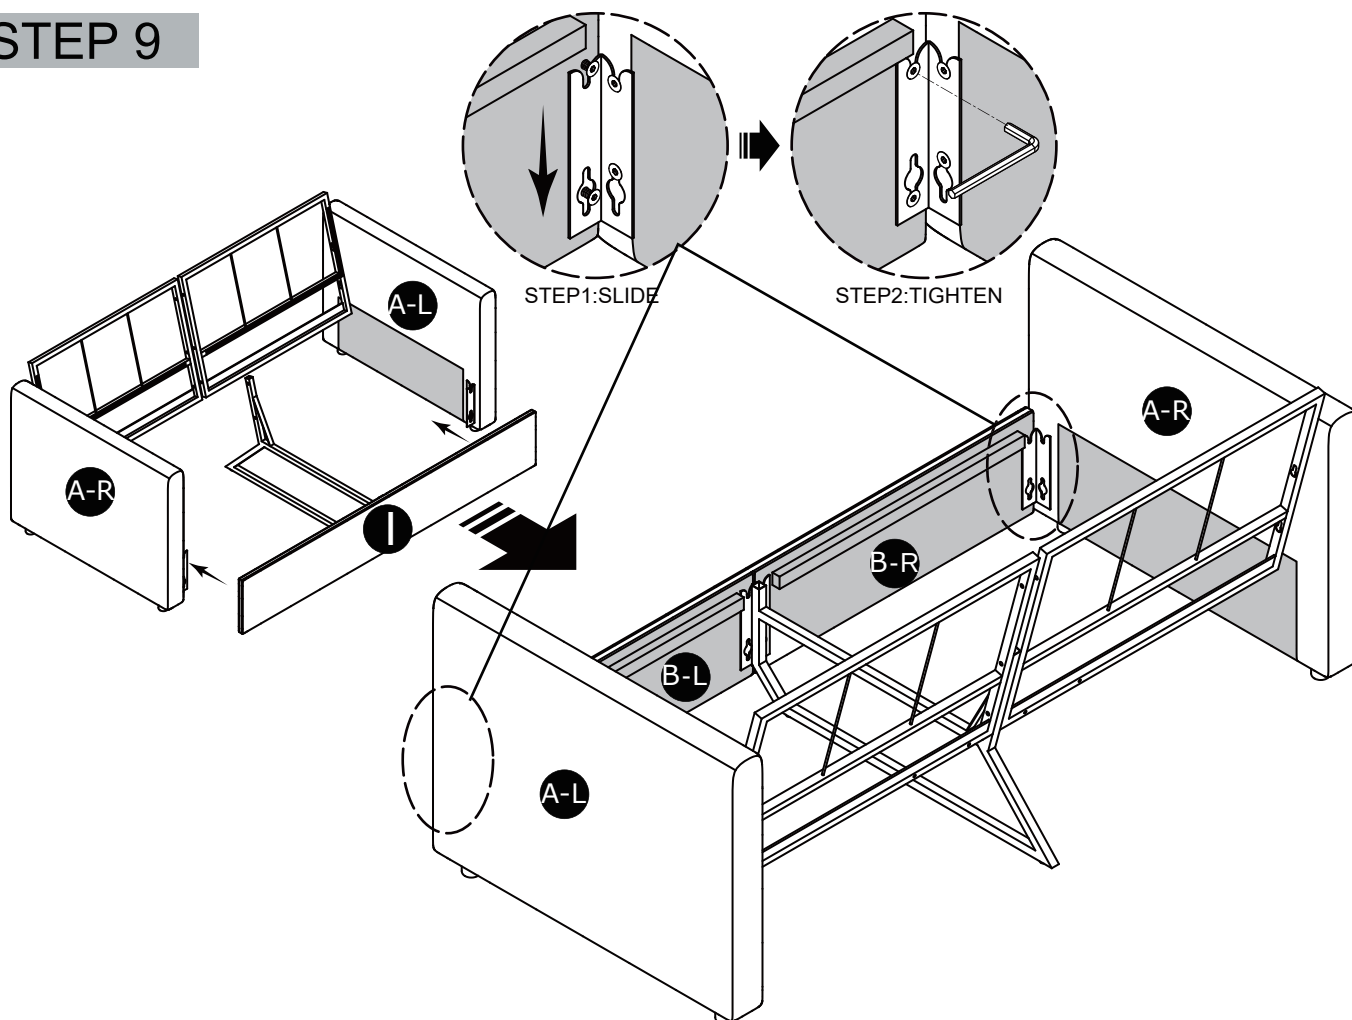

STEP 10

- Q** x3
- R** x3
- S** x6
- T** x1
- U** x1

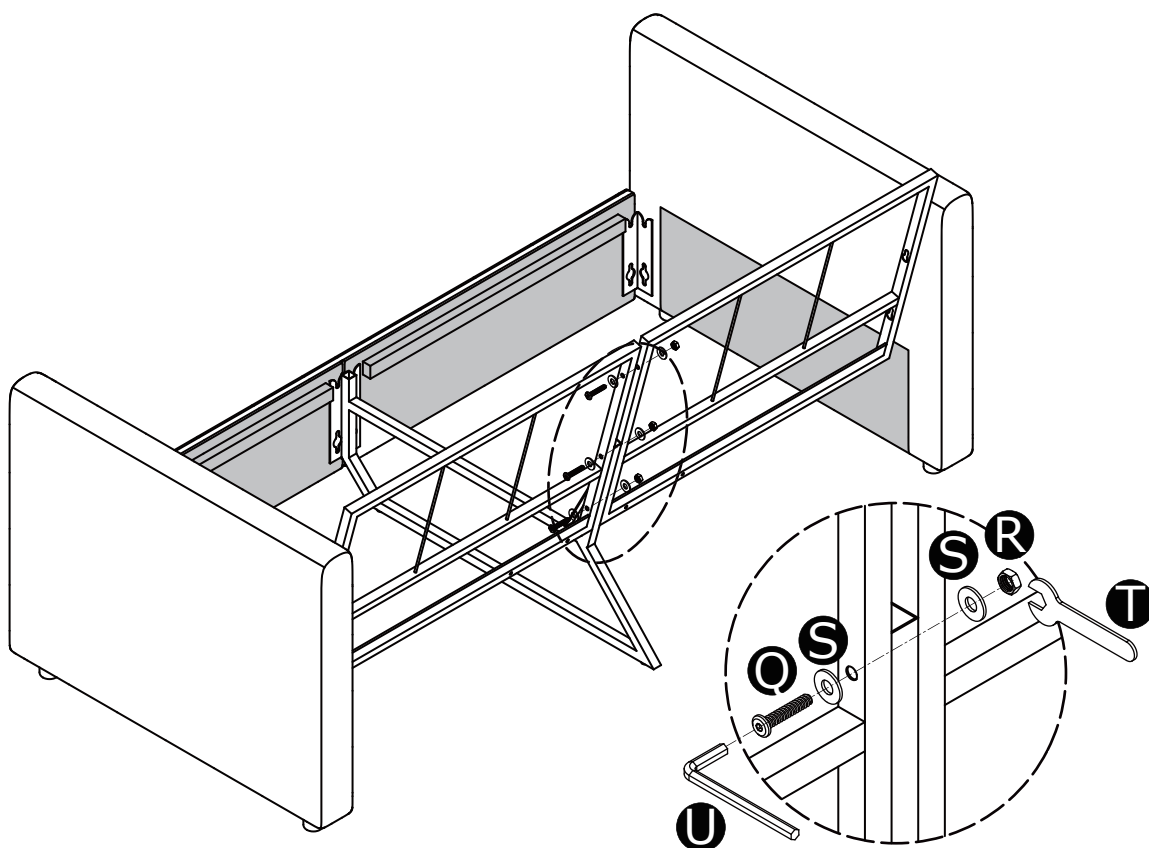


STEP 11

K x1


P x4

S x4

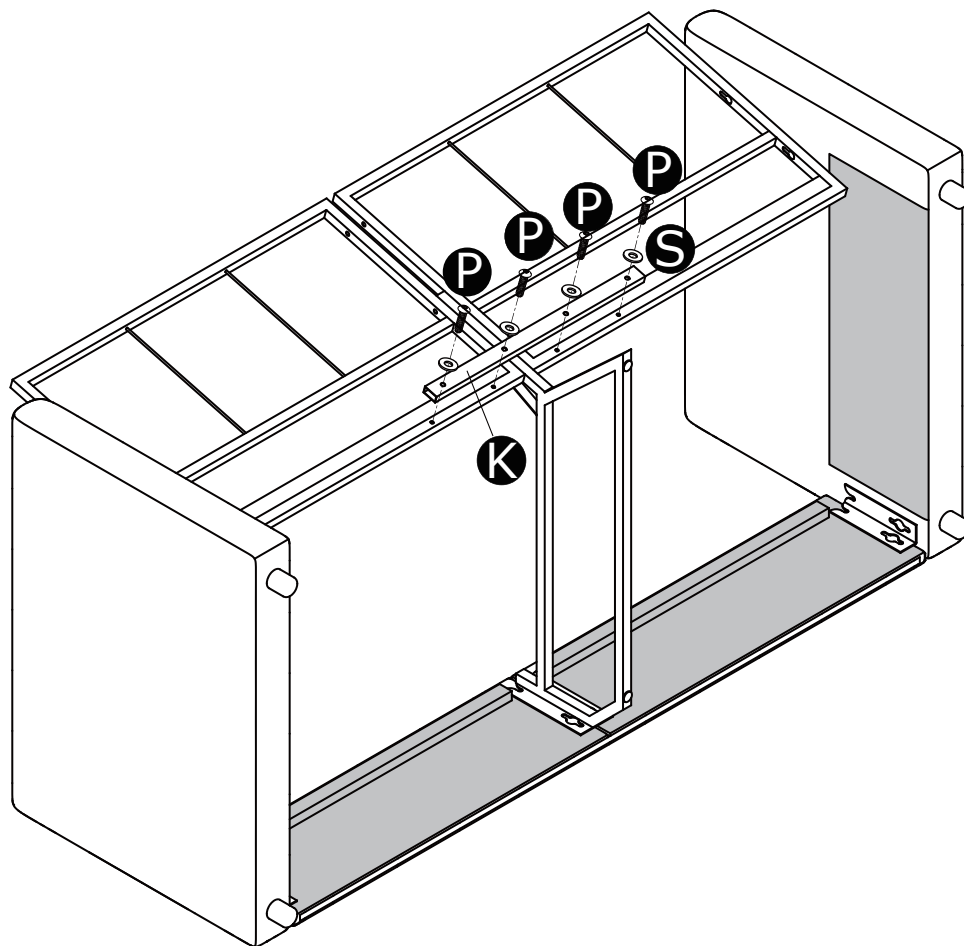

STEP 12


J x1

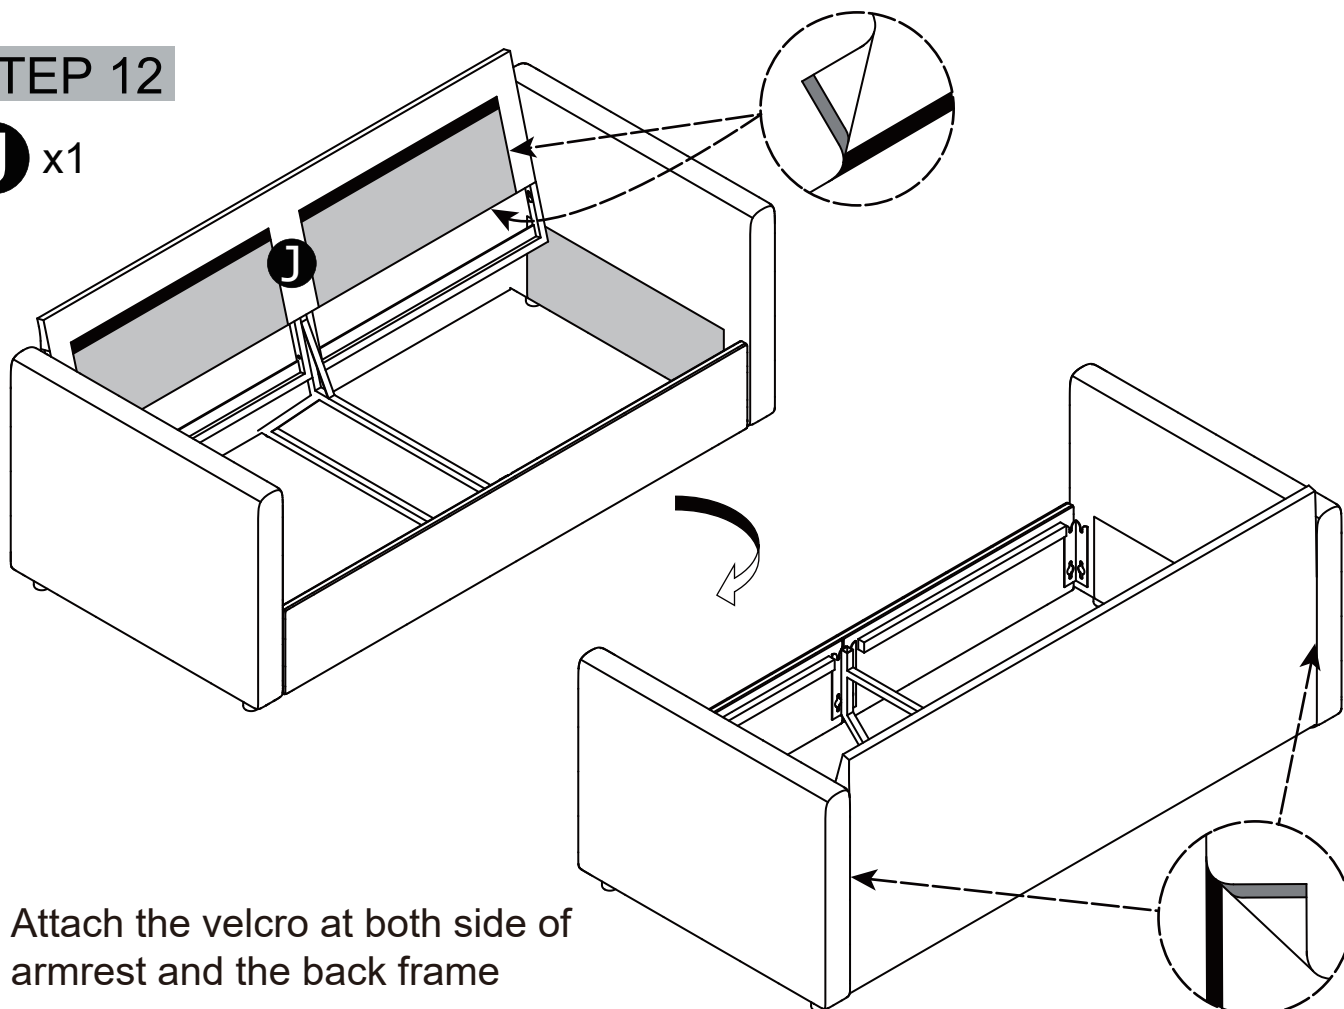

Attach the velcro at both side of
armrest and the back frame

STEP 13



E x2

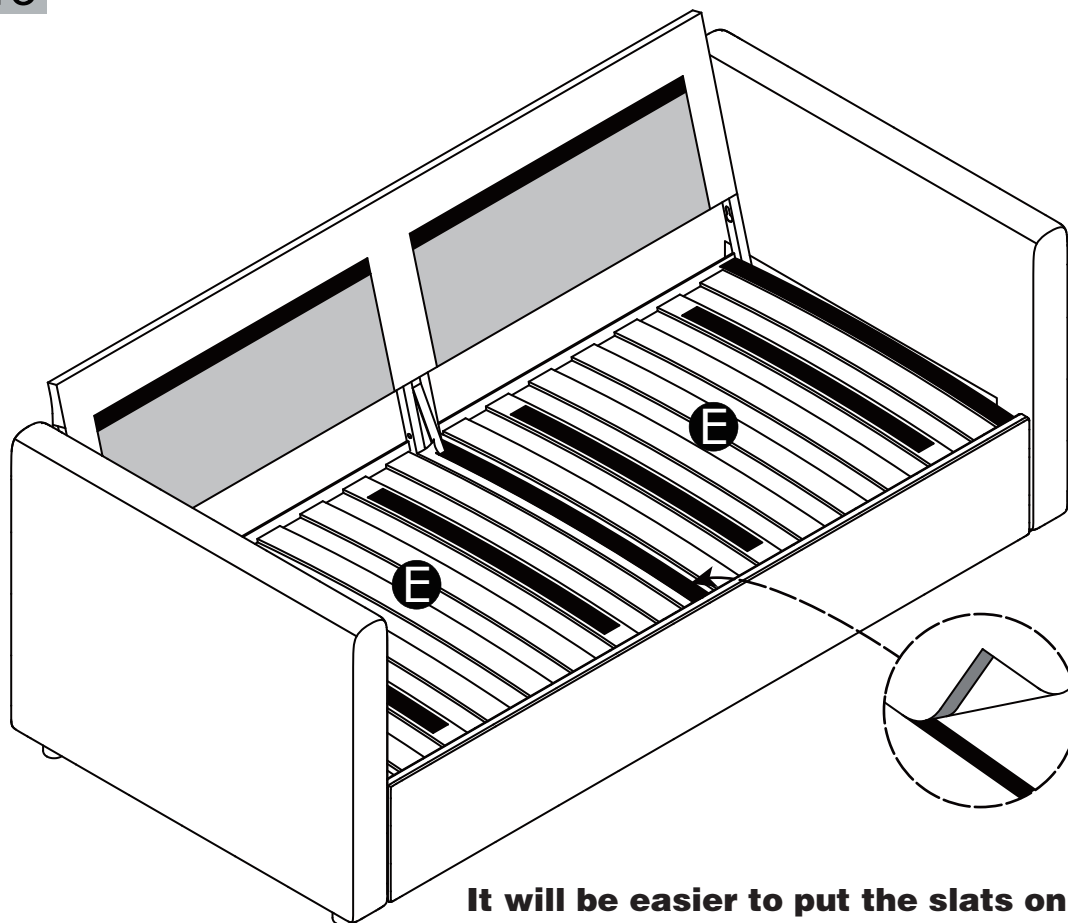

It will be easier to put the slats on the back frame first, then put it on the front board


STEP 14

F x2

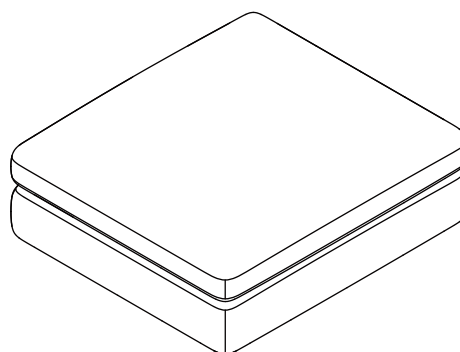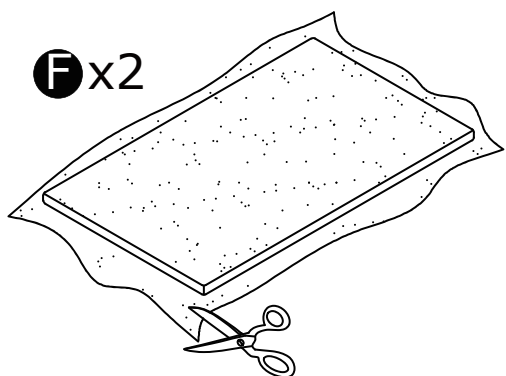


F x2


STEP 15

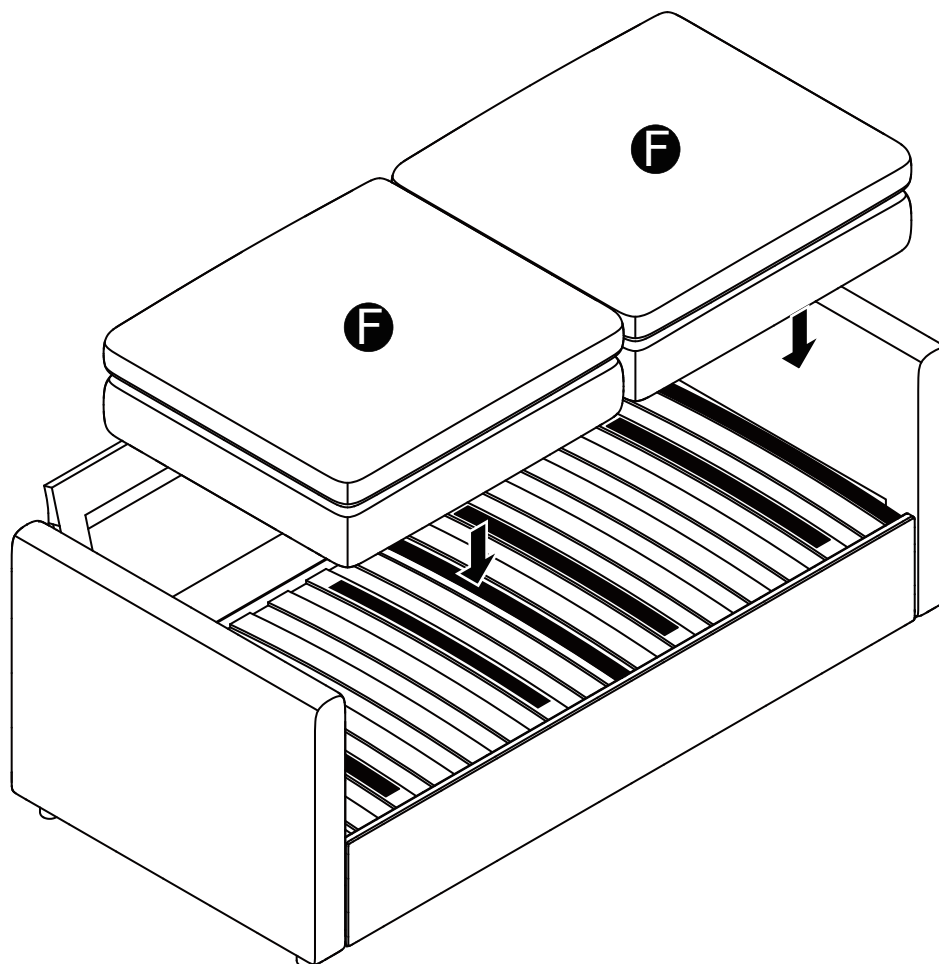


STEP 16

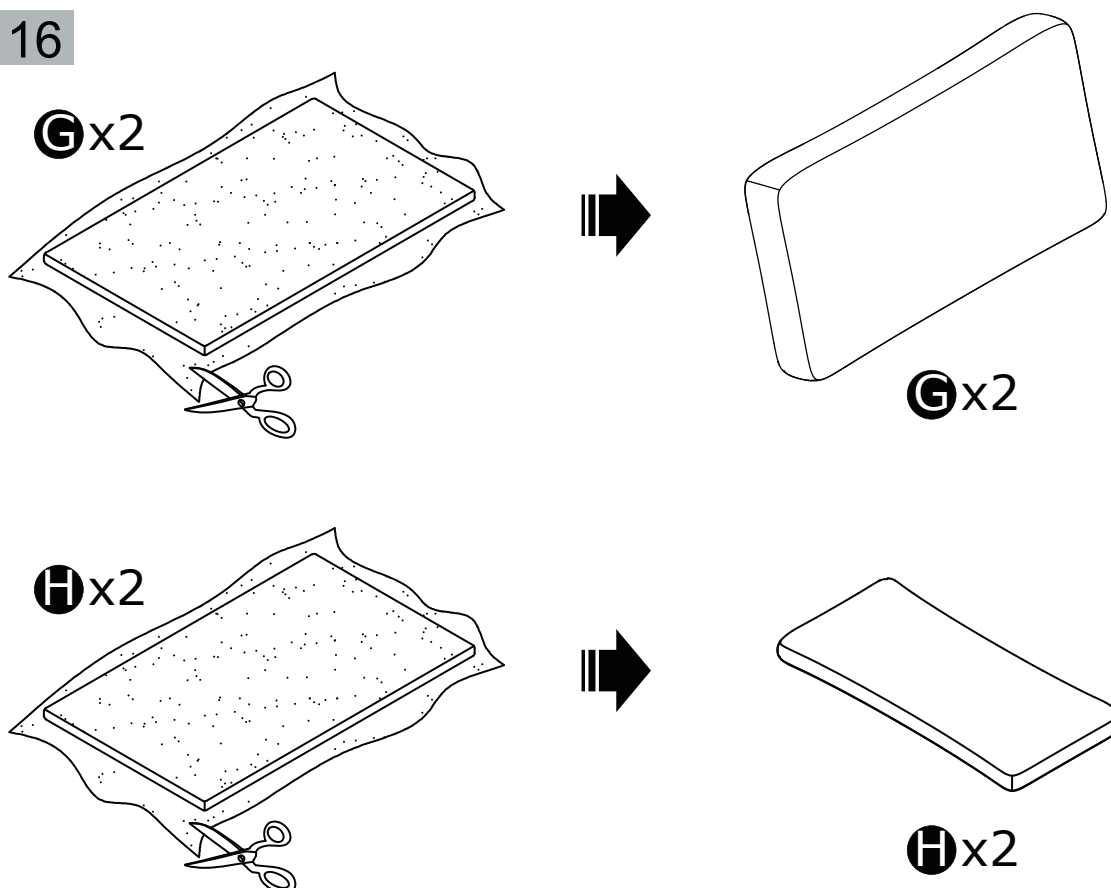

STEP 17

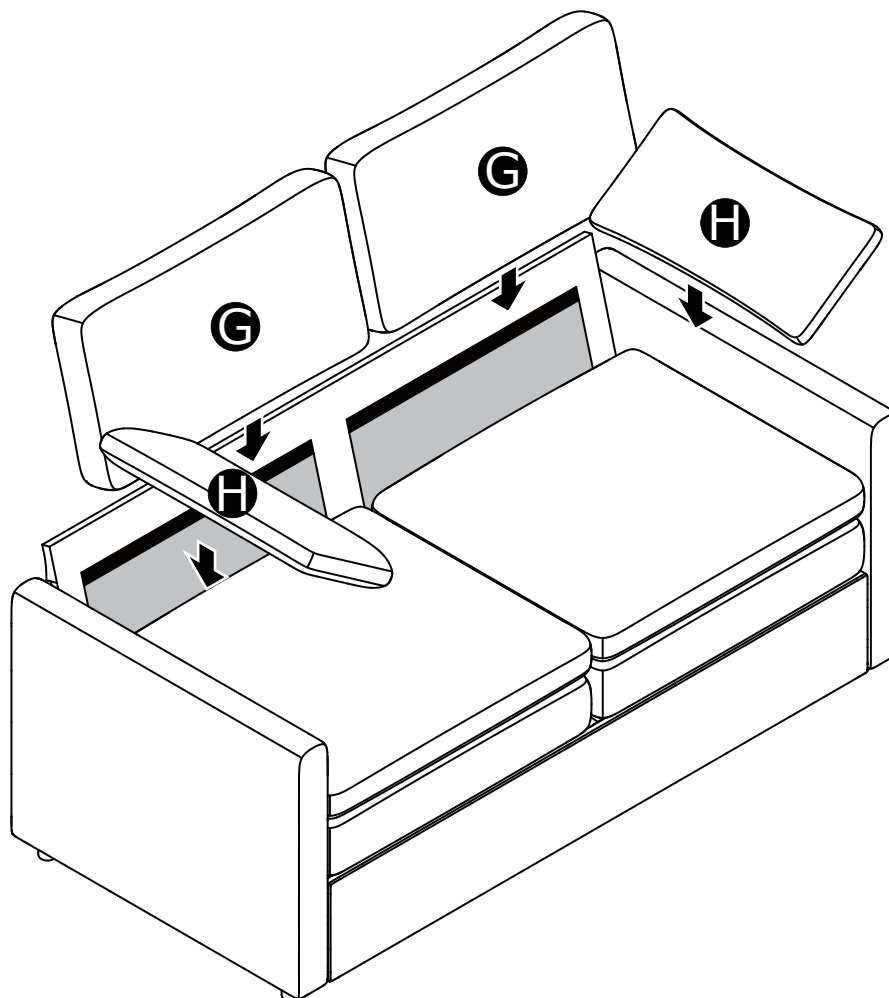

STEP 18

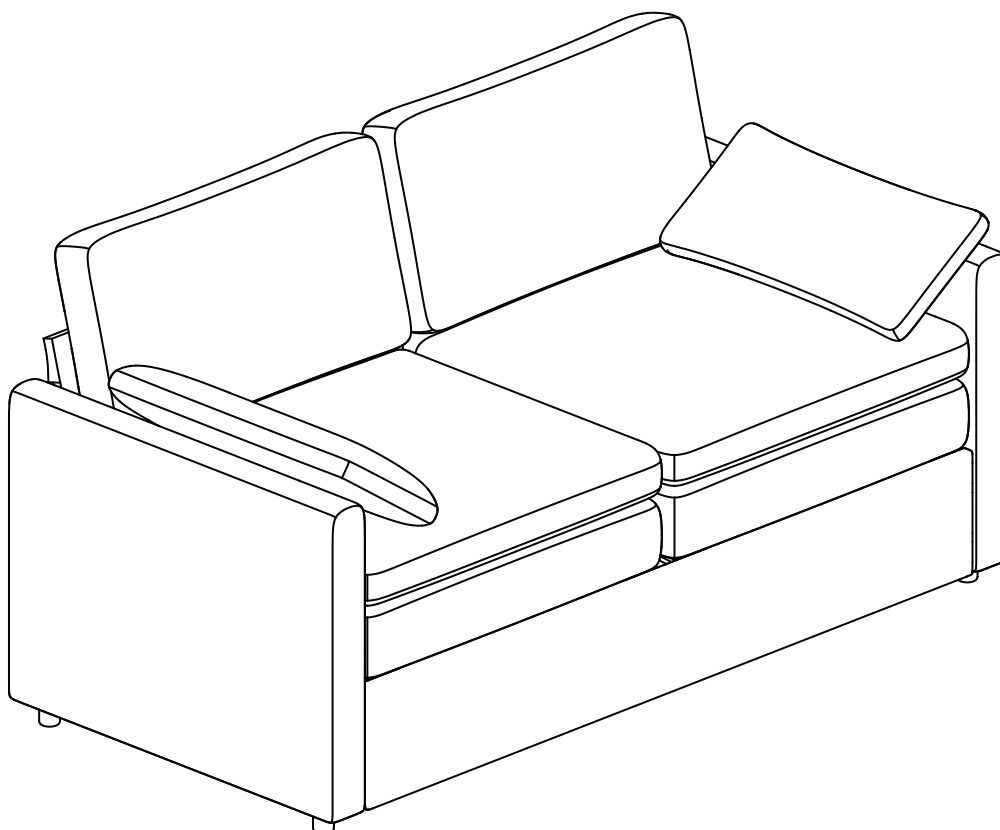

The product has compression parts,
Please pat them by hand and wait 72 hours, the cushions will be recover.