



# ASSEMBLY INSTRUCTIONS







## QUEEN FLOATING BED, LED LIGHT

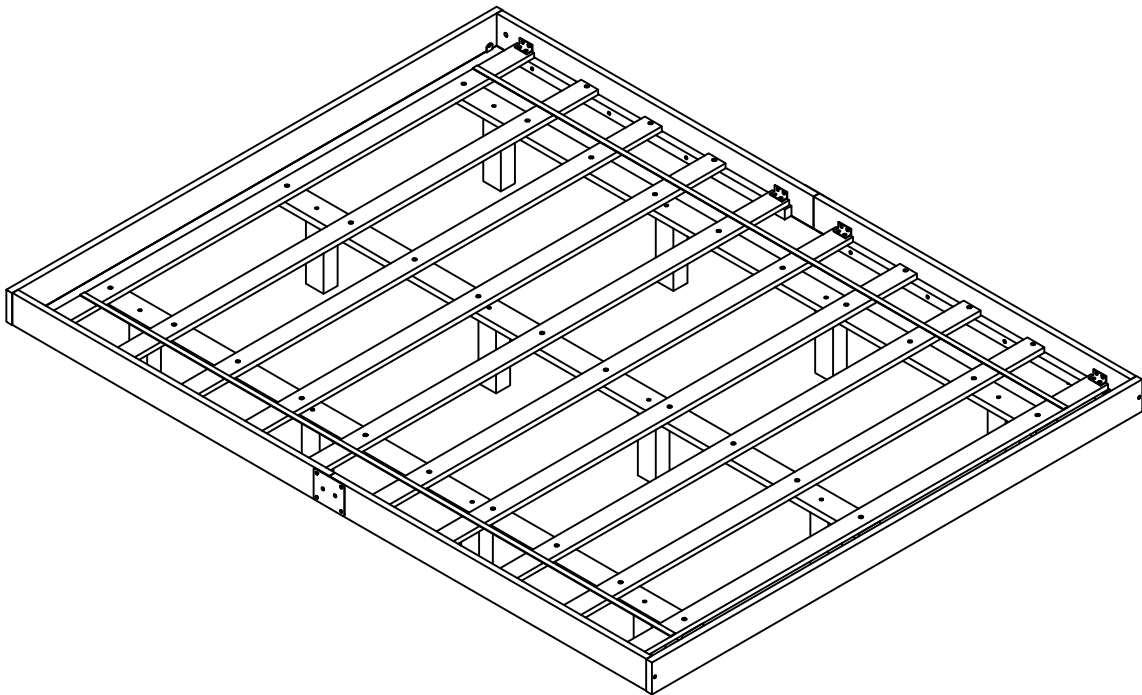

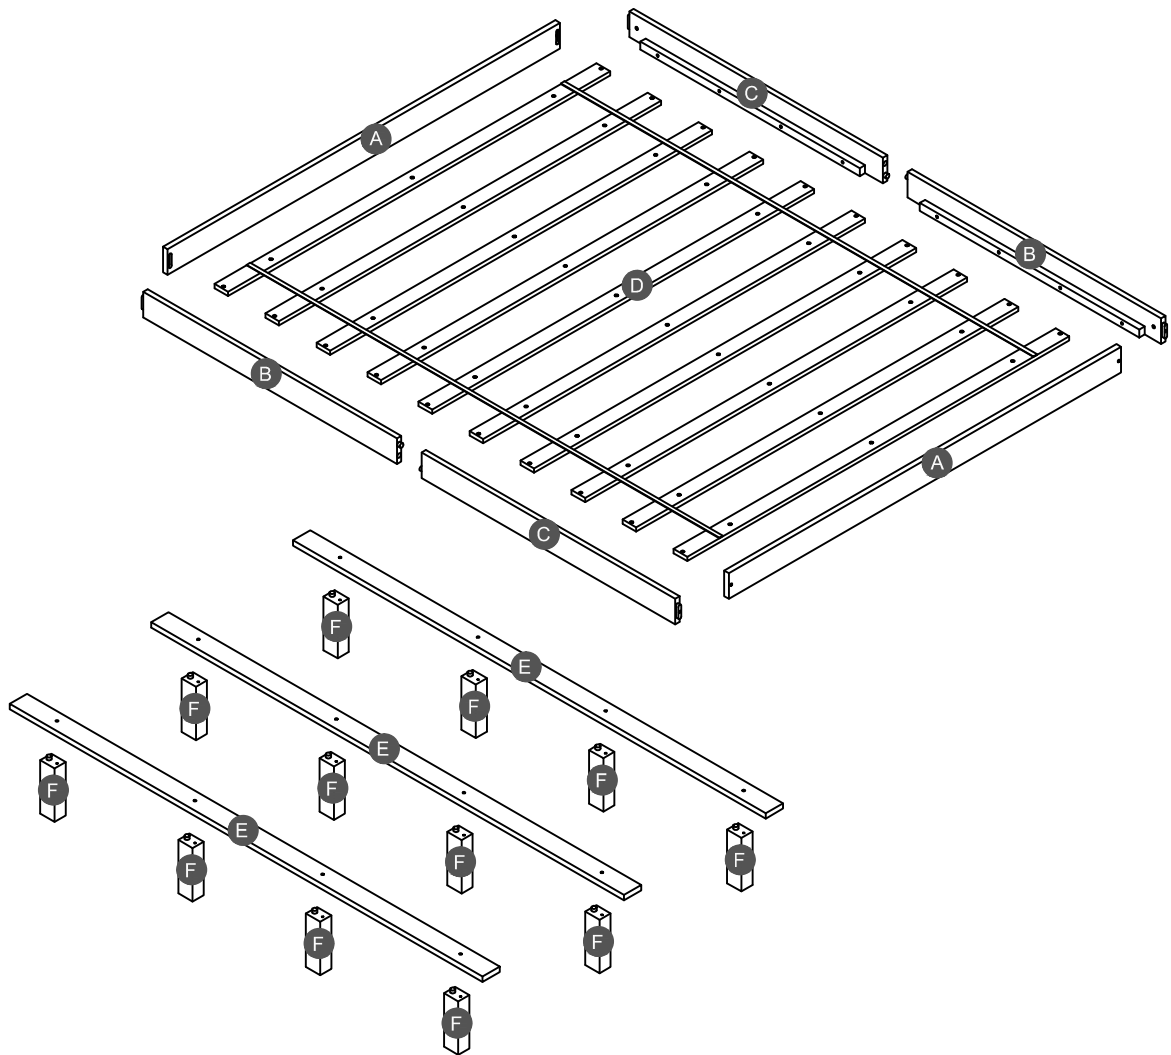











## Detail View

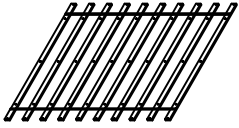


## Part List

<b>A</b>  Horizontal bar HB/FB - 2pcs	<b>B</b>  Side rail (Left front/Right back) - 2pcs	<b>C</b>  Side rail (Right front/Left back) - 2pcs
<b>D</b>  Slat - 1Set = 10pcs	<b>E</b>  Lower support slat - 3pcs	<b>F</b>  Leg support - 12pcs

## Hardware List


<b>1</b>  (Ø12)1/4"*60mm Hex-Head bolts (4pcs)	<b>2</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts(4pcs)	<b>3</b>  (Ø12)1/4"*50mm Hex-Head bolts (12pcs)
<b>4</b>  Ø4*30mm Wood screws (50pcs)	<b>5</b>  (1/4")4.5*58mm Allen key (1pc)	<b>6</b>  Ø3.5*15mm Wood screws (49pcs)
<b>7</b>  40*18*18*2mm Metal bracket (8pcs)	<b>8</b>  L3000mm Adapter and wire strip (1pc)	<b>9</b>  L5000mm Led light (1pc)
<b>10</b>  22*10*6mm Clamp plastic (1pc)	<b>11</b>  18*20*20*1.5mm Metal bracket (4pcs)	<b>12</b>  100*80*1.5 mm Metal bracket (2pcs)

### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

## STEP 1:

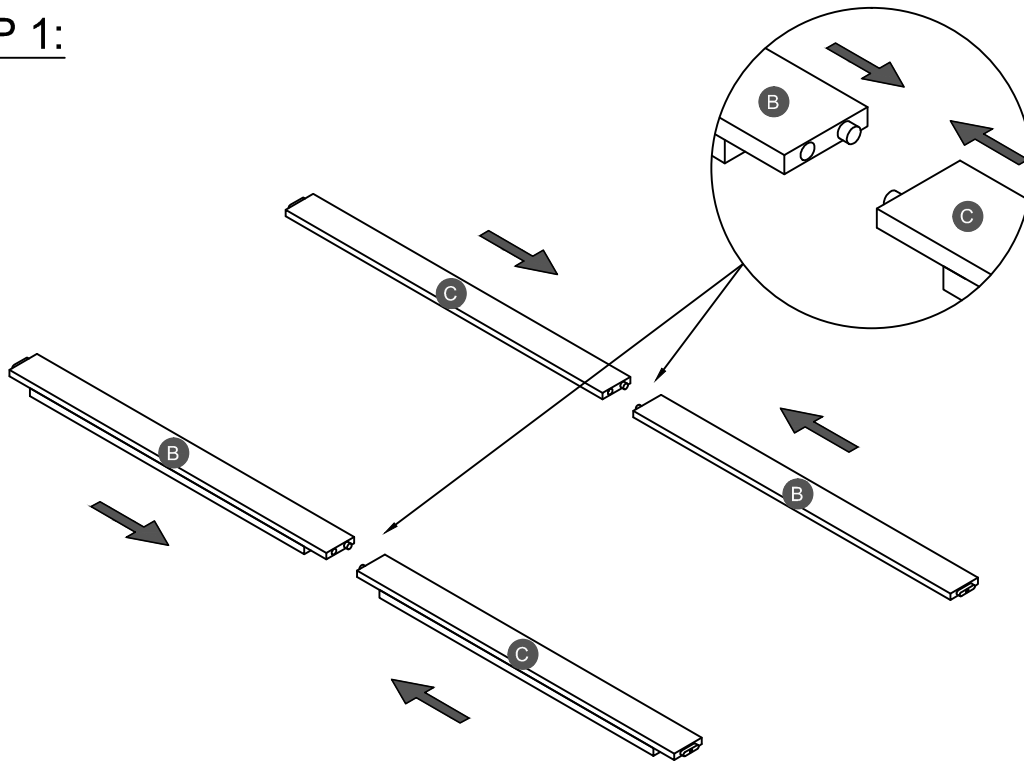

## STEP 2:

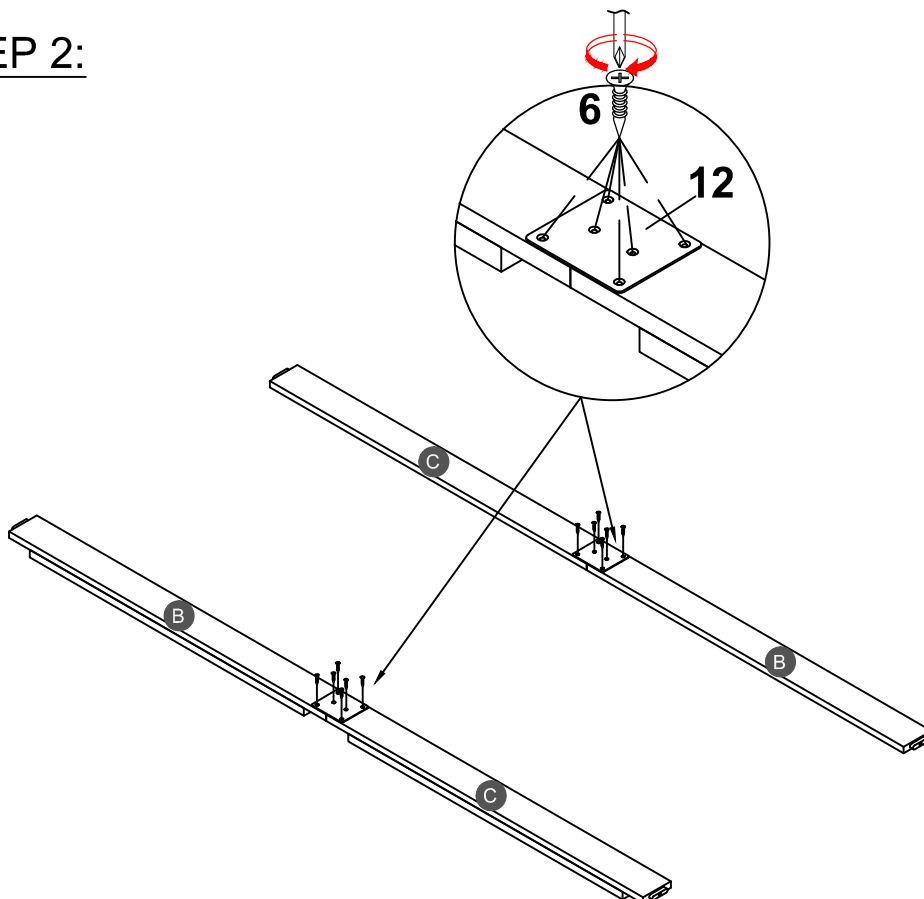


6





12PCS



12



2PCS


### STEP 3:


1		2	
4PCS		4PCS	

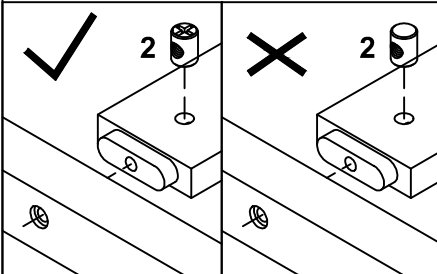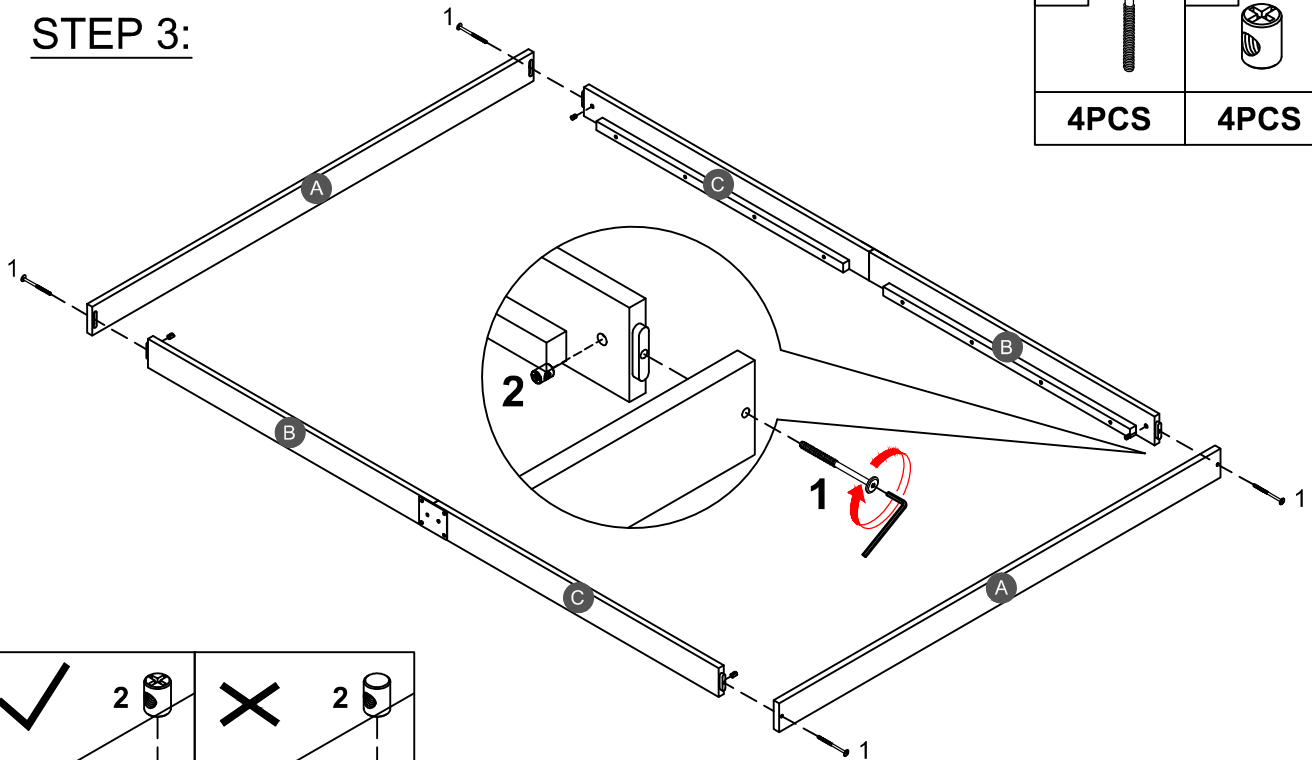

Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

### STEP 4:

3	
12PCS	

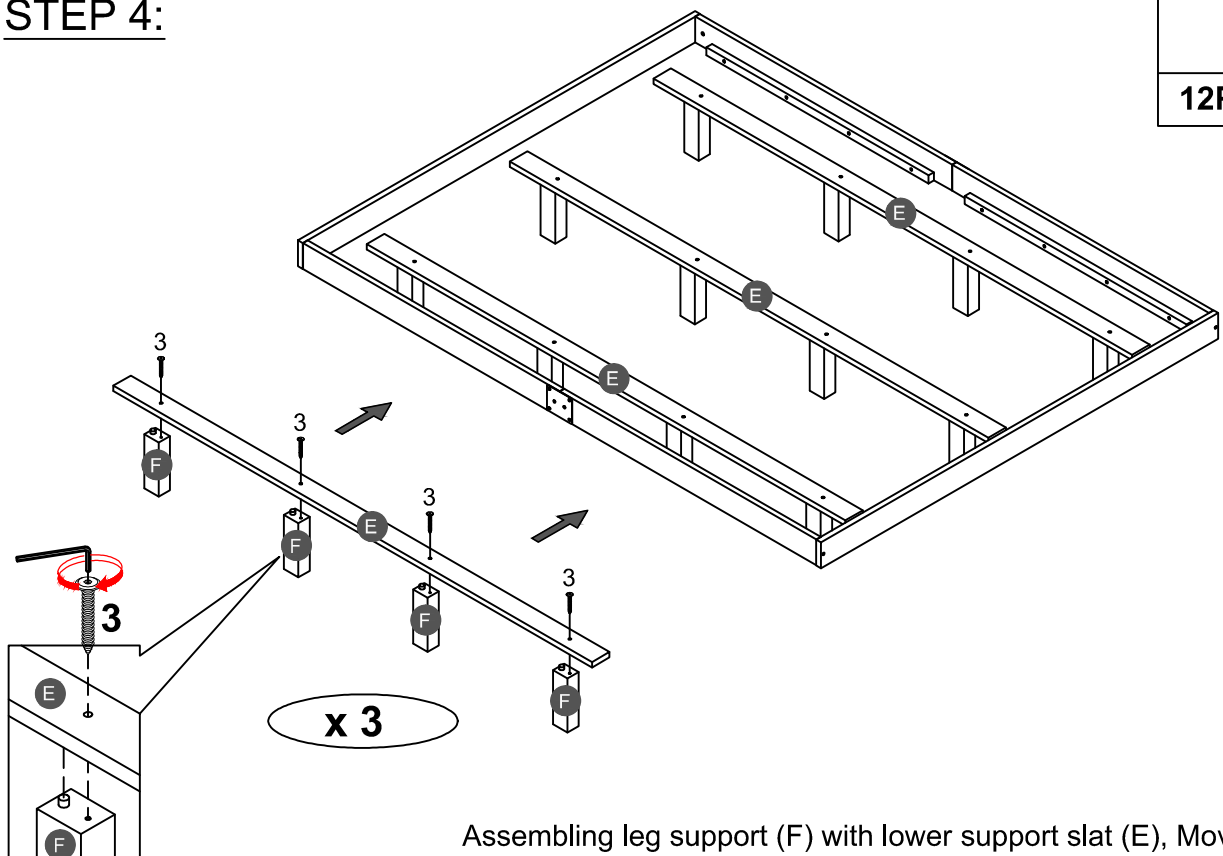


Assembling leg support (F) with lower support slat (E), Move support slat inside Queen Floor bed.

## STEP 5:

4



50PCS

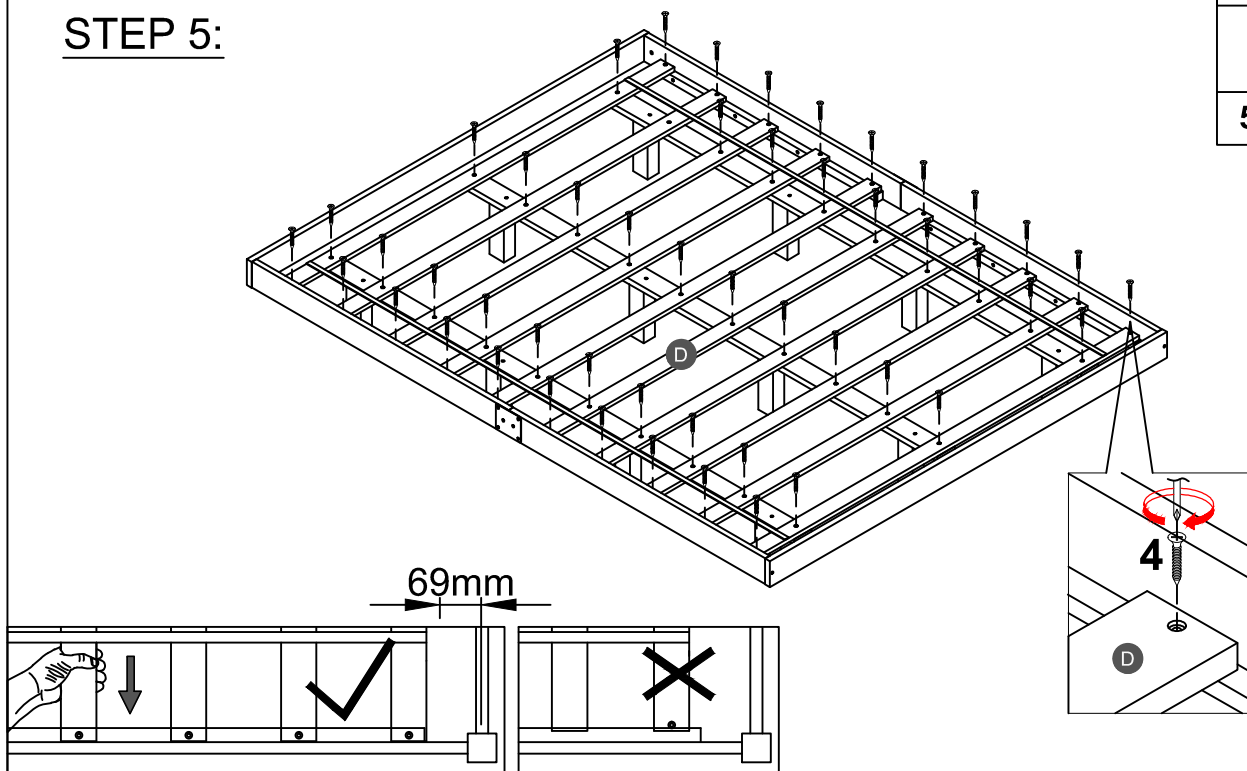

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

## STEP 6:

6




32PCS






7

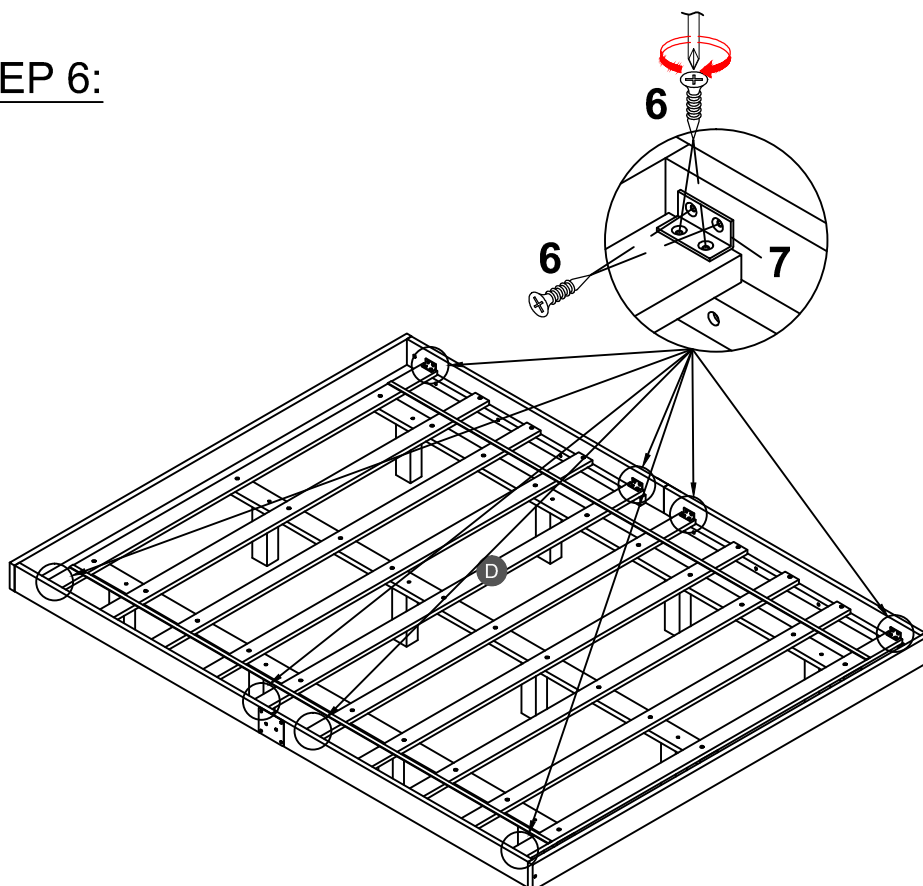

8PCS



# STEP 7:

6	8	9	10	11
				
5PCS	1PC	1PC	1PC	4PCS

