


ASSEMBLY AND INSTALLATION INSTRUCTIONS

CA2341-FM

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE

- NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. read and save these instructions.

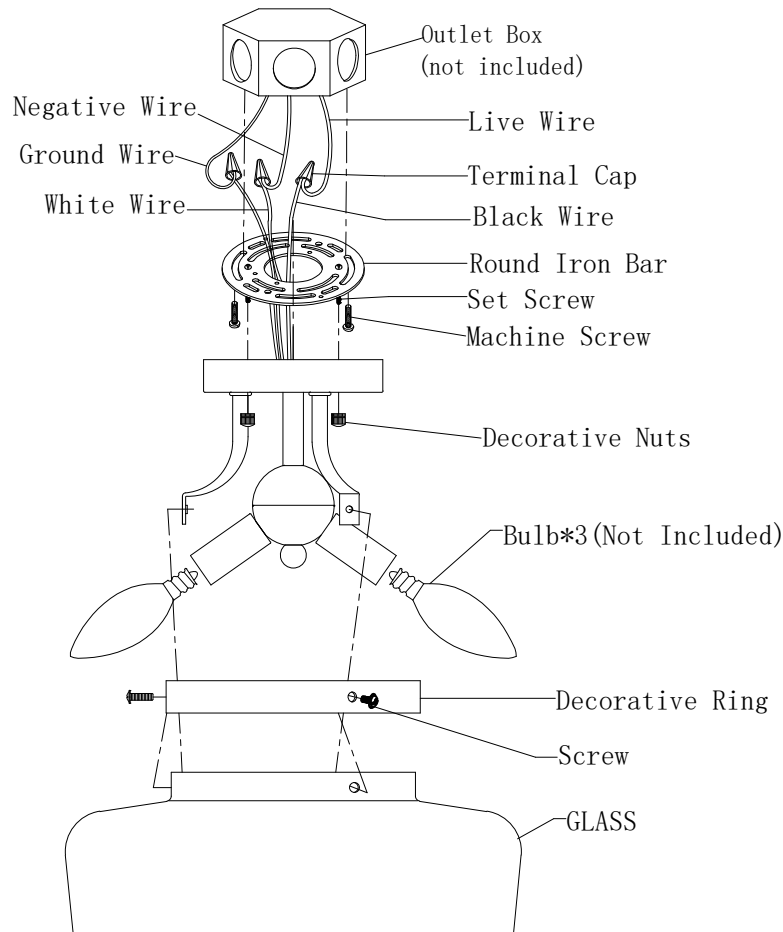

1. Turn off the power before installation.
2. Insert the Iron Bar by installing screws and fix it in the junction box.
3. Let the wires go through central hole of the mounting plate. Connect black fixture wire to black supply wire and white fixture wire to white supply wire using wire caps. You can wrap them with electrical tape for a more secure connection.
4. Connect ground wire (bare copper wire) from back plate with ground wire from junction box using a wire cap. Wrap them with electrical tape for a more secure connection. If your house does not have ground wire, attach grounding wire to green grounding screw marked GND. Tuck all wires carefully into the junction box.
5. With a screwdriver, the three screws are locked through the circular decorative fixing ring and the glass with the corresponding three bracket bending screw holes.
6. Install the back plate to the mounting plate with cap screws. then secure it with Decorative nuts.
7. Install the E12 Bulb (bulb is not included).

Turn on the power at fuse or circuit box.