


Assembling Instruction










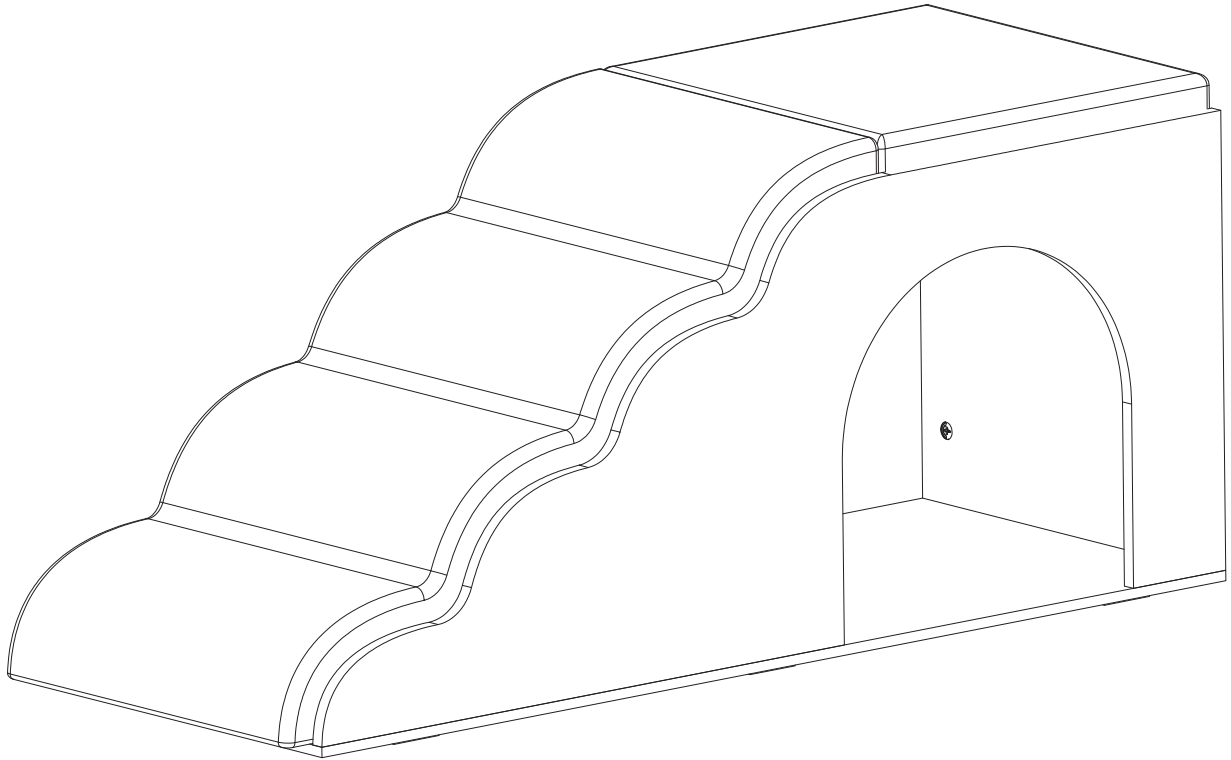








ATTENTION:

Do not tighten the screws until all of them are in the right position.

1. Please check the manual carefully and make sure you have received all of the parts.
2. If there is any missing part, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos. We will check and offer you the best solution soon.

Part List

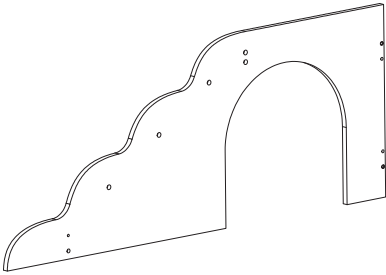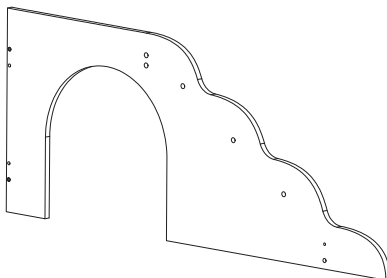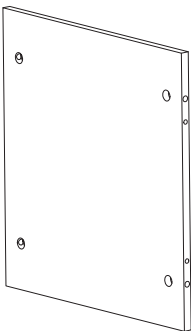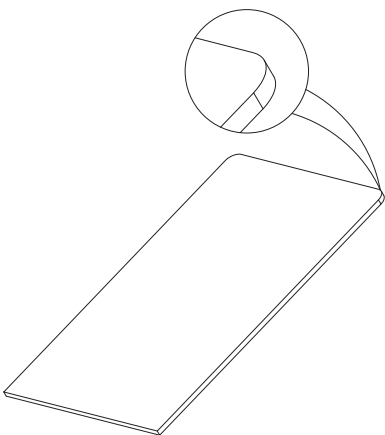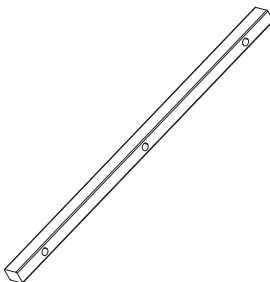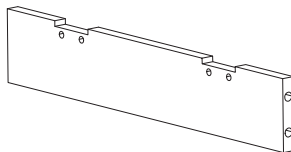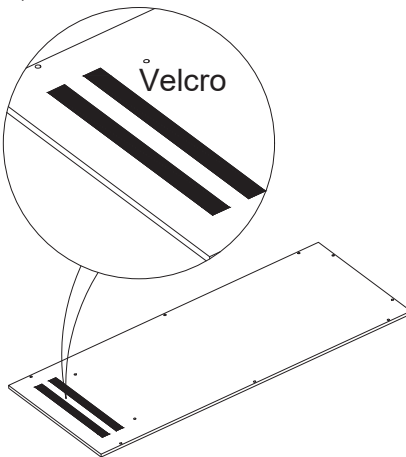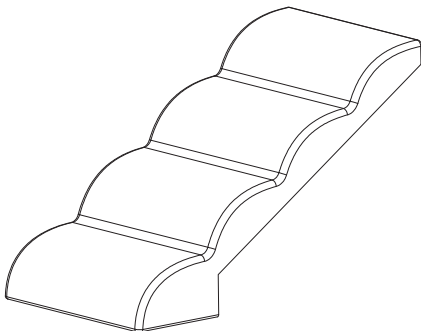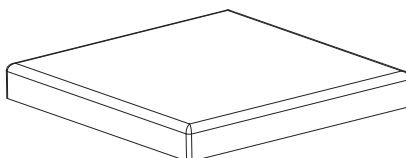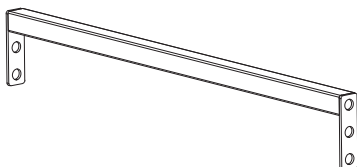 ① *1	 ② *1	 ③ *1	
 ④ *1	 ⑤ *2	 ⑥ *1	 ⑦ *1
 ⑧ *1	 ⑨ *1	 ⑩ *1	

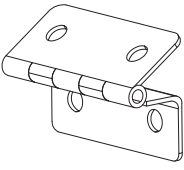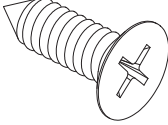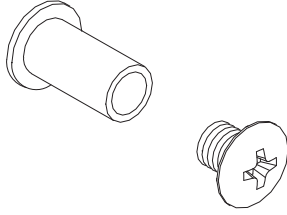
 A *6	 B *6	 C *6	 D *4 M6*10
 E *6 M6*28	 F *2	 G *6 M3*10	 H *4
 J *10 M5*40	 K *8 anti-slip mat	 L *1	 M *1

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please email: aftersales.group.sam@gmail.com




The Installation of part B and C is as shown, which you will use in next steps.


1. Insert the hole of this board

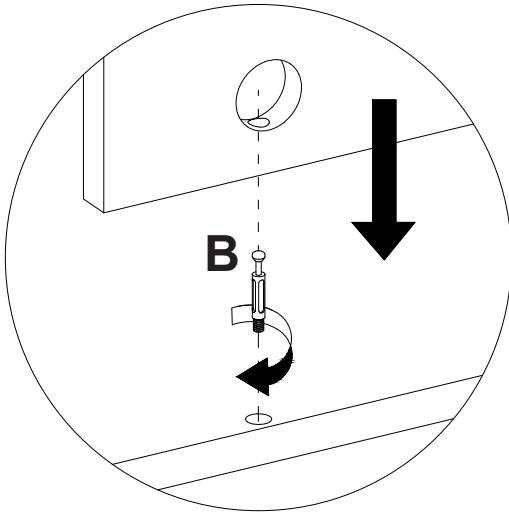


2. The cusp points to part B !

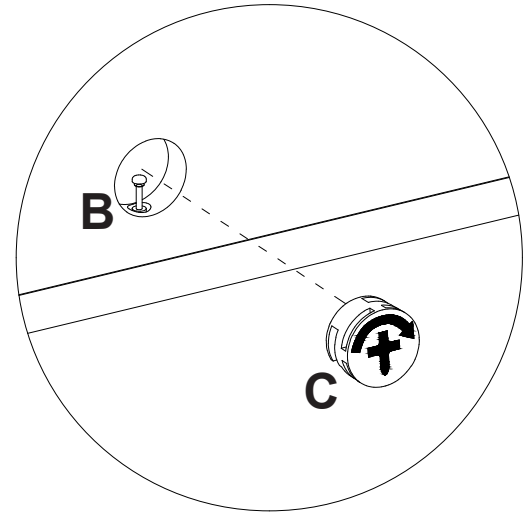


3. Tighten C clockwise along the arrow.

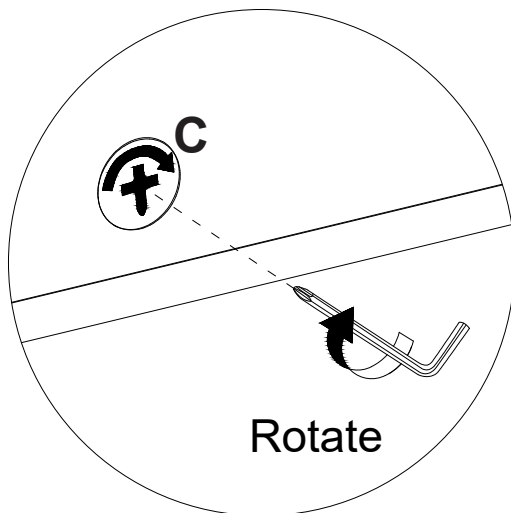

4. Finish.


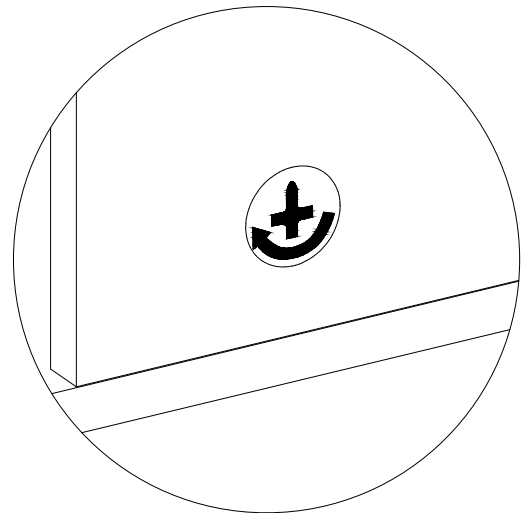


1

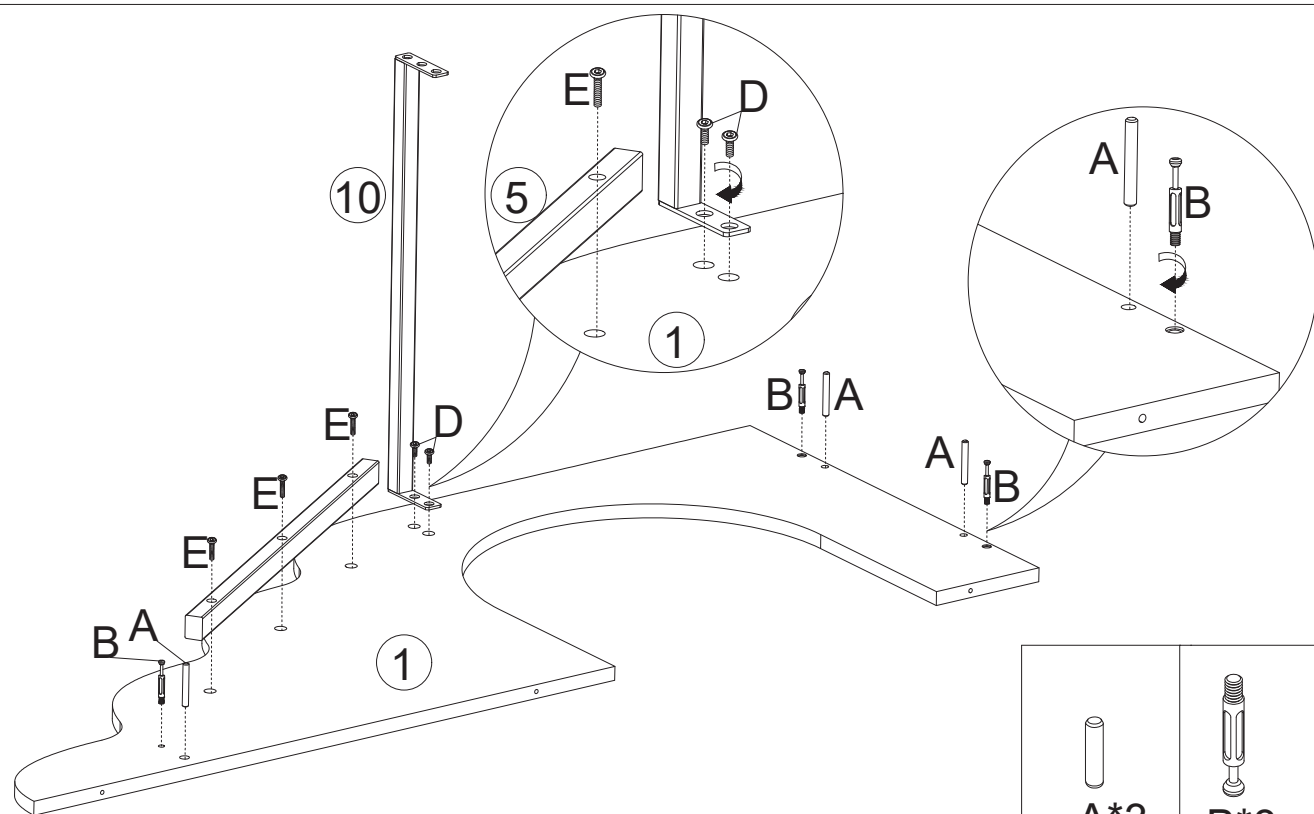


A*3

B*3

D*2
M6*10E*3
M6*28


L

2

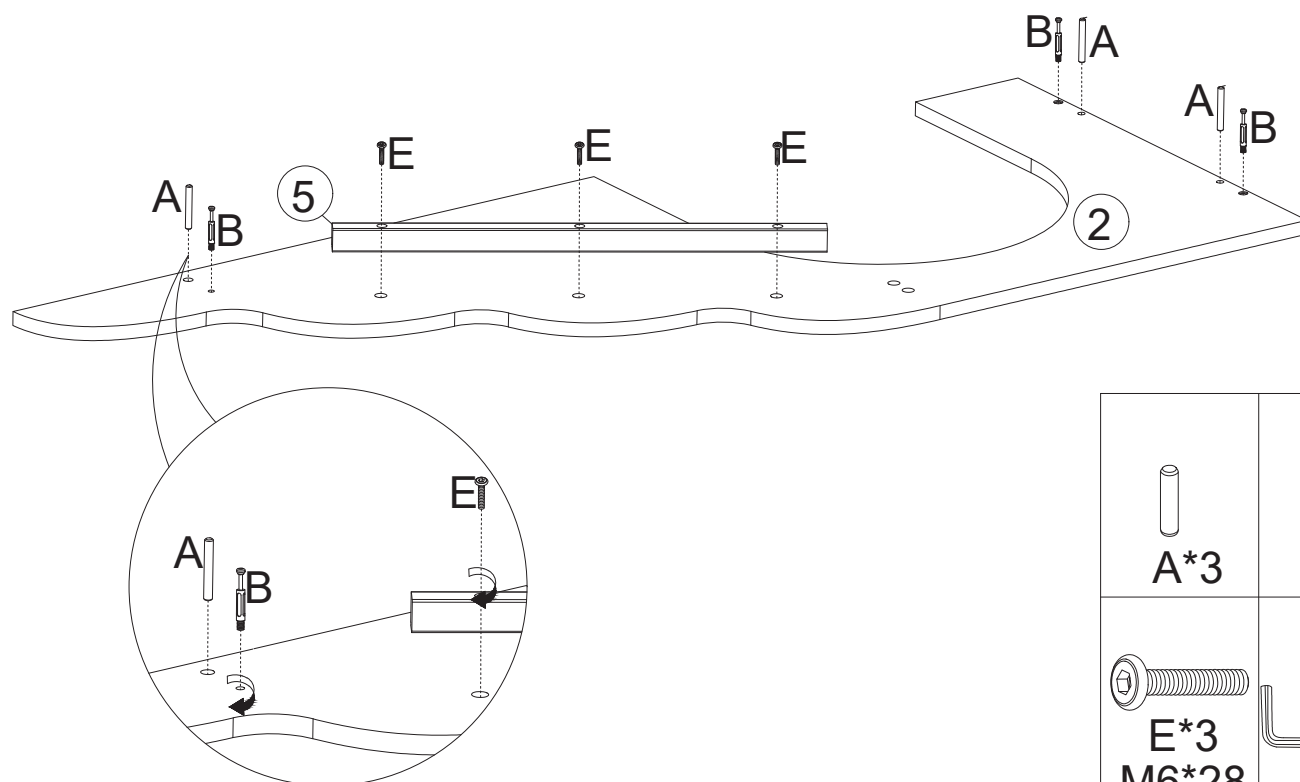


A*3

B*3

E*3
M6*28


L

3


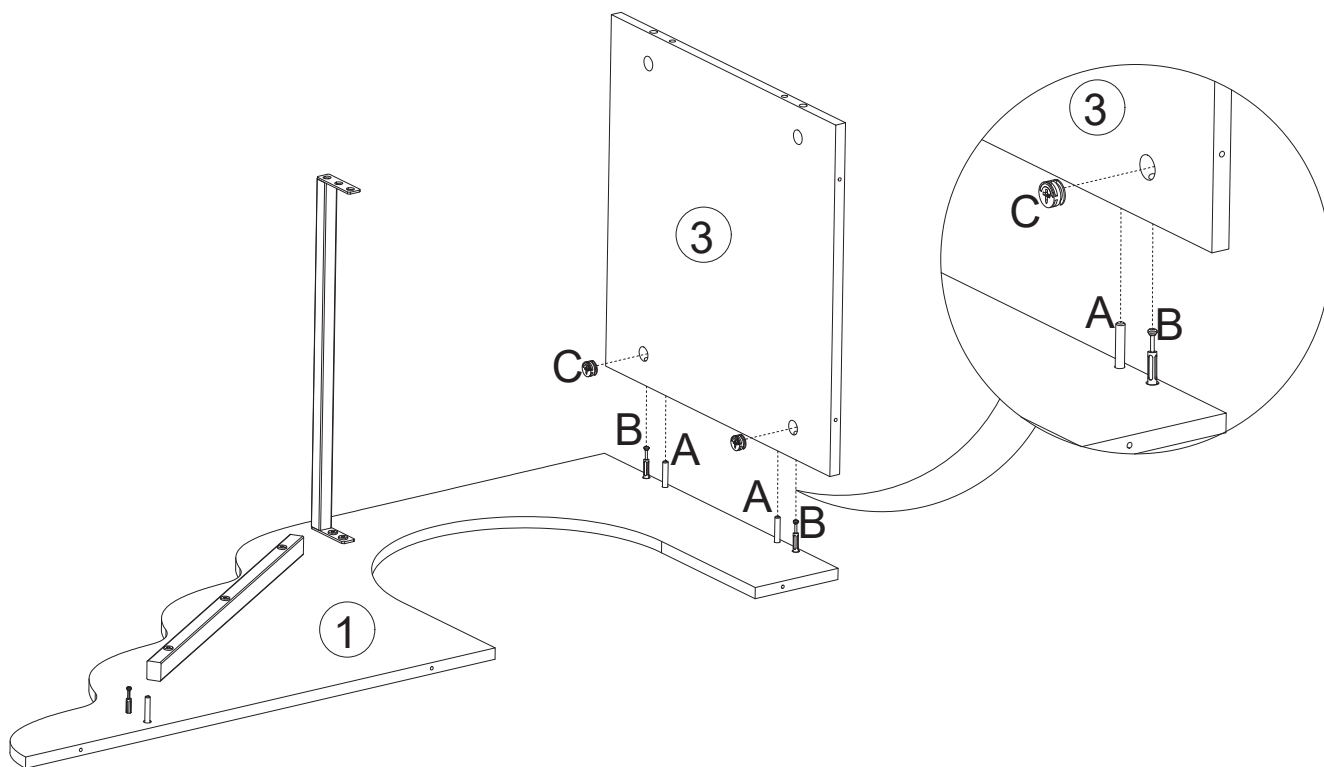


4



5

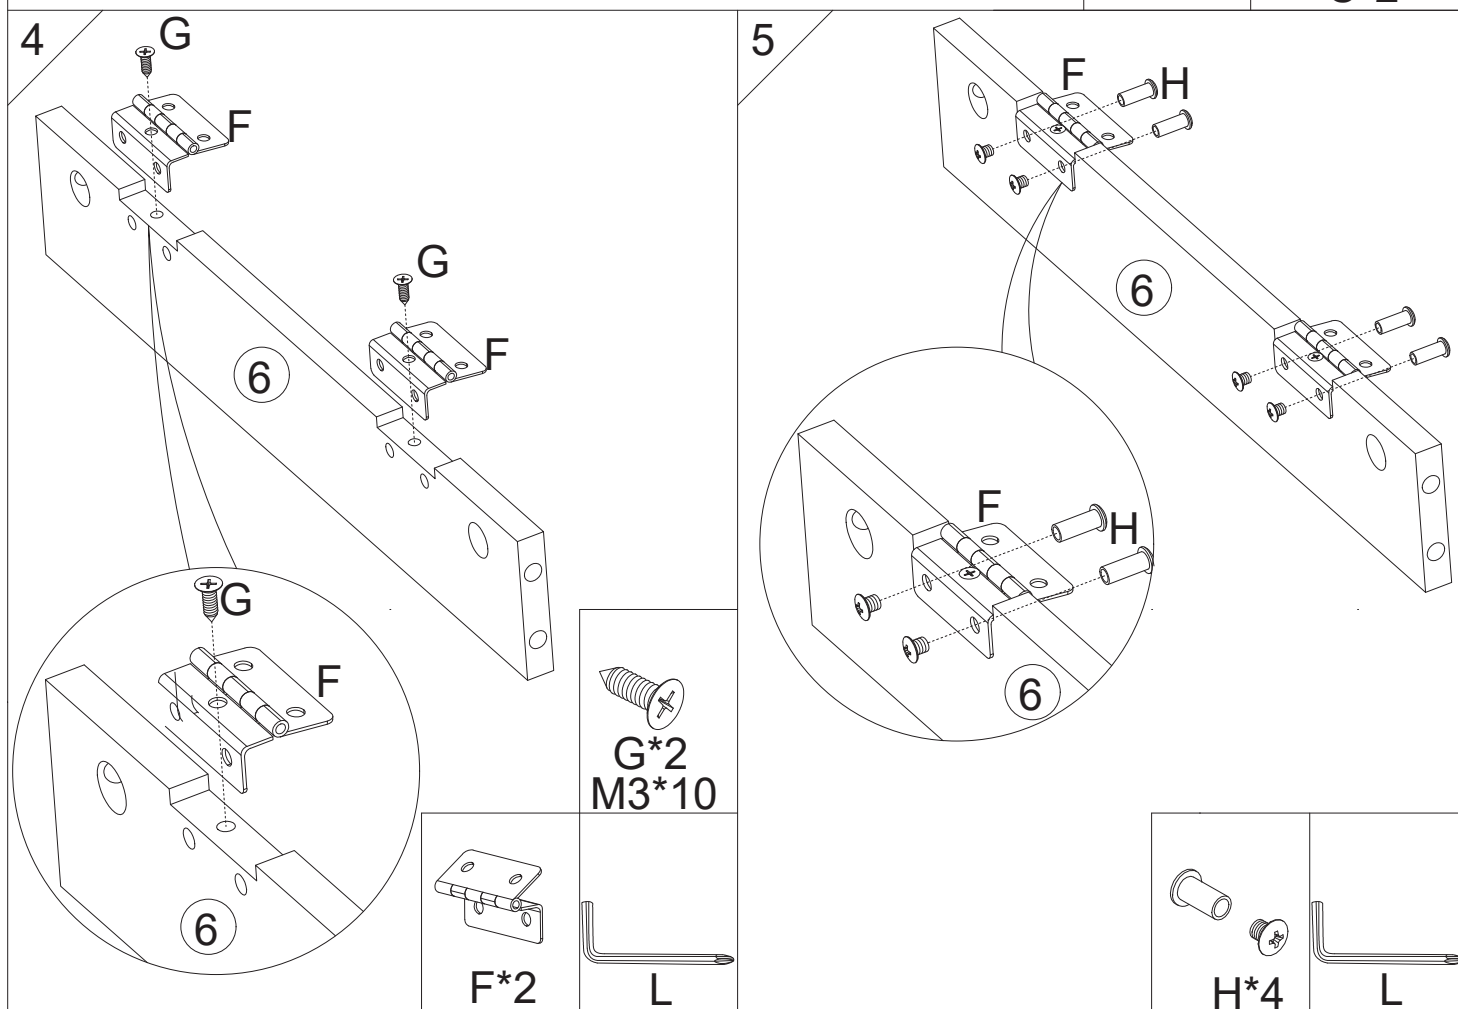


6

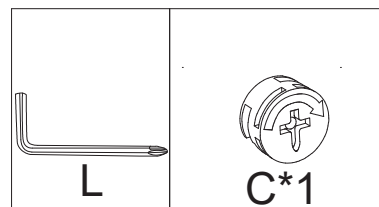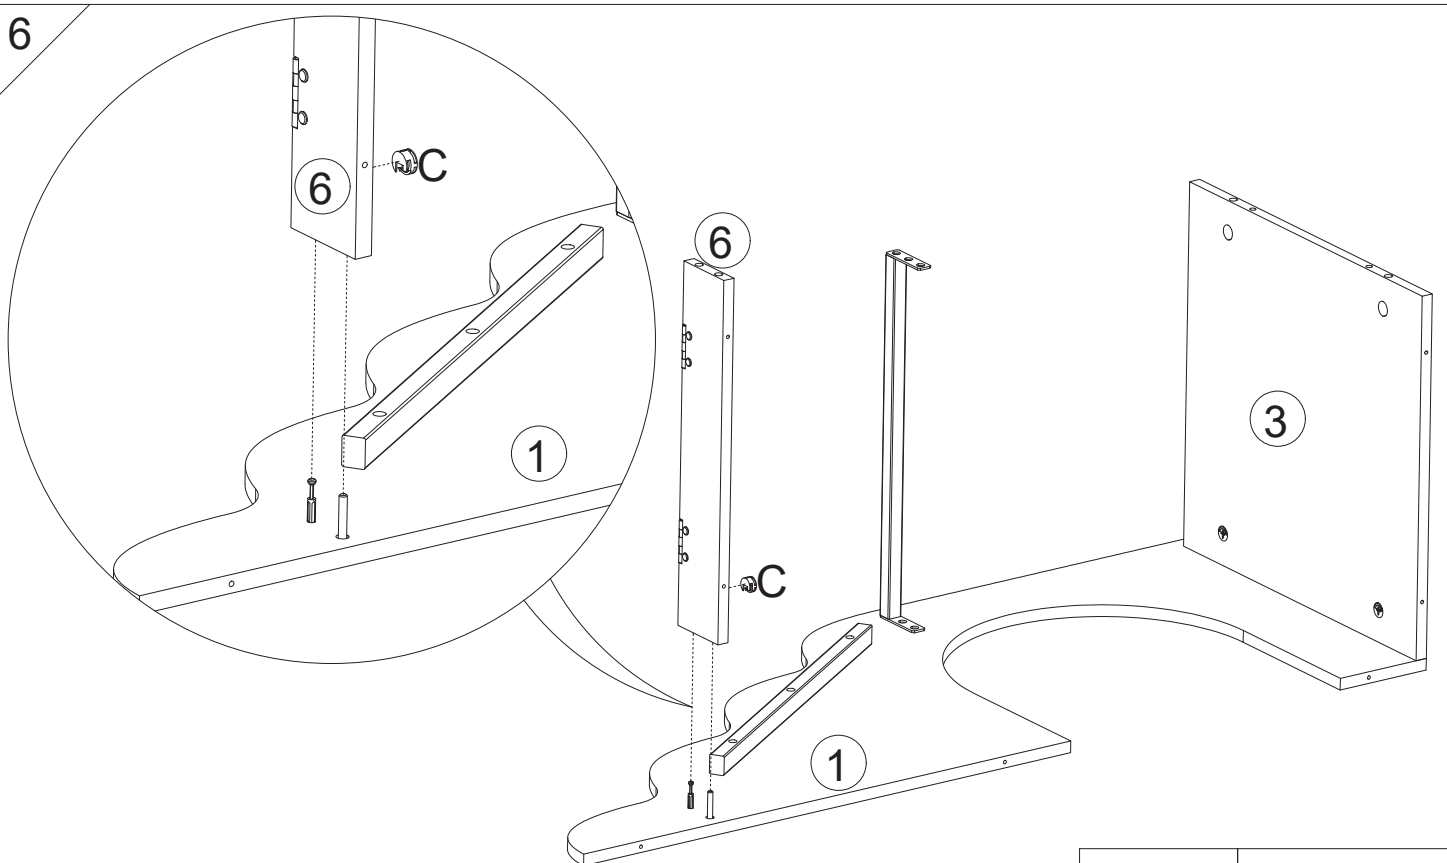


7

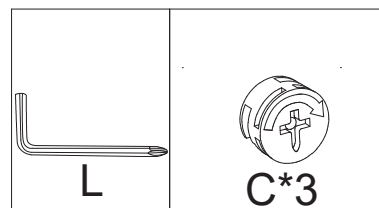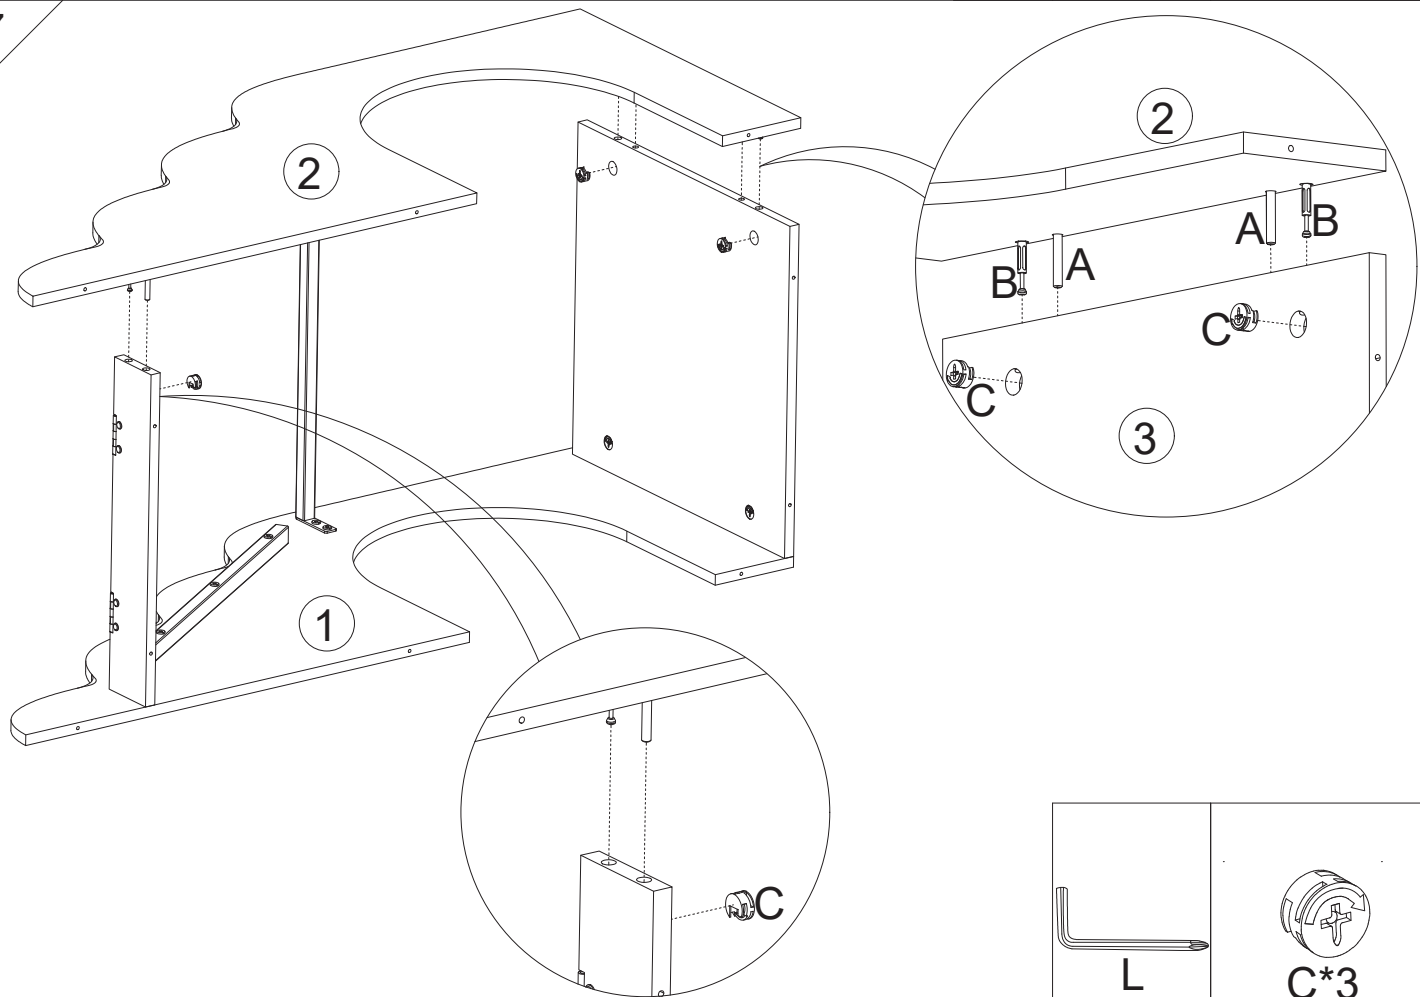

8

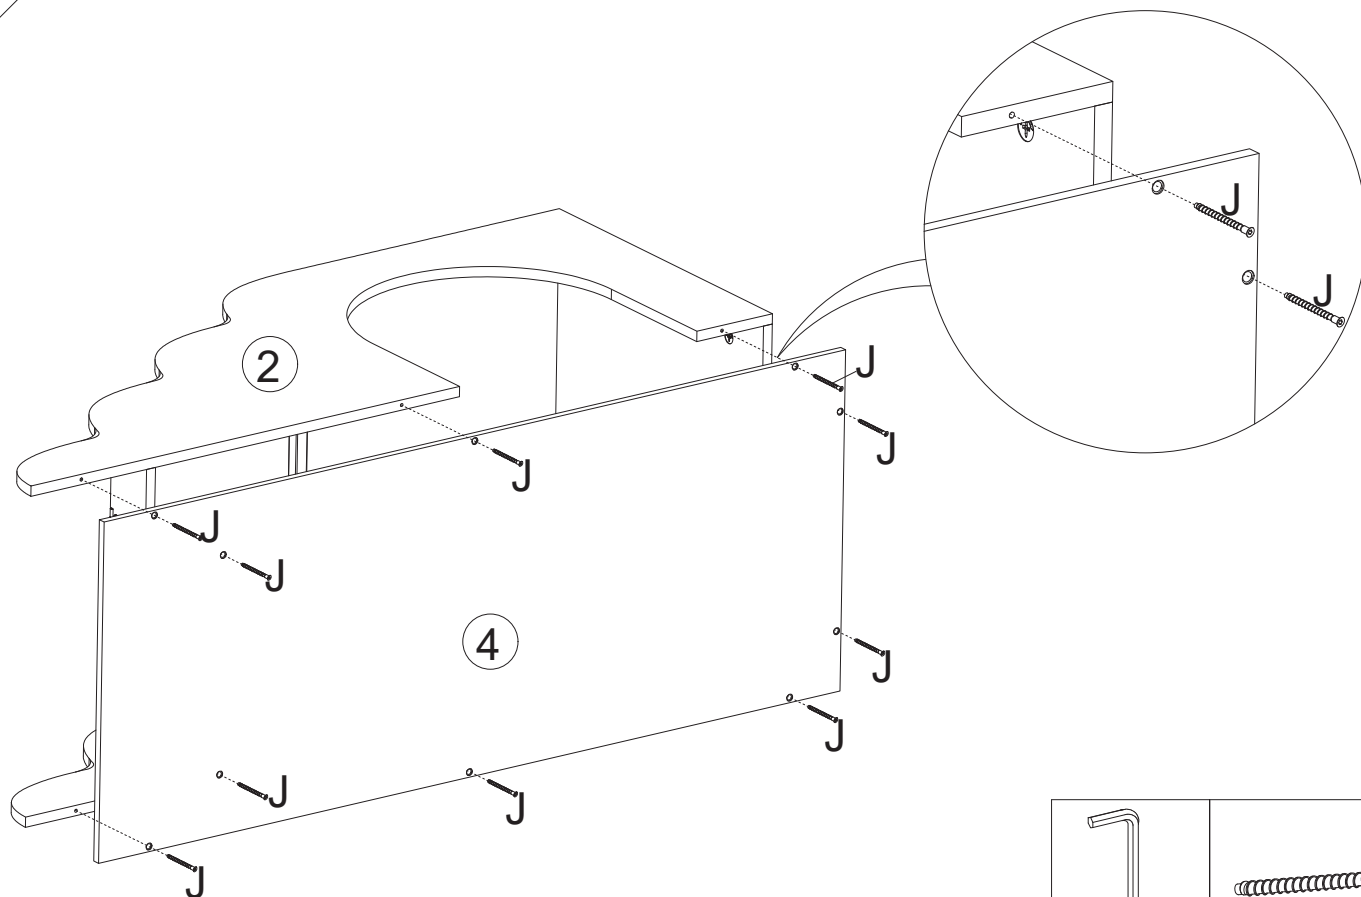



M




J *10
M5*40



9

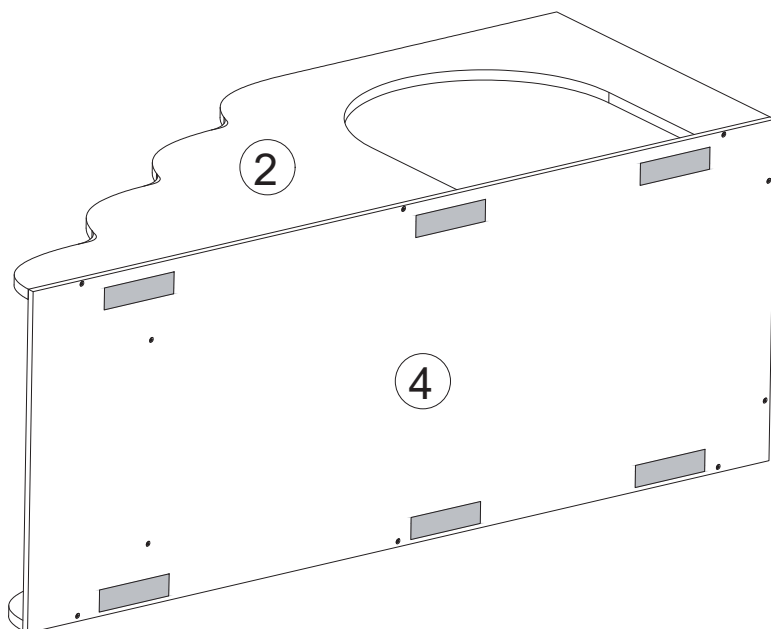


Stick the anti slip mat N onto the bottom plate 4




K *6
anti-slip mat

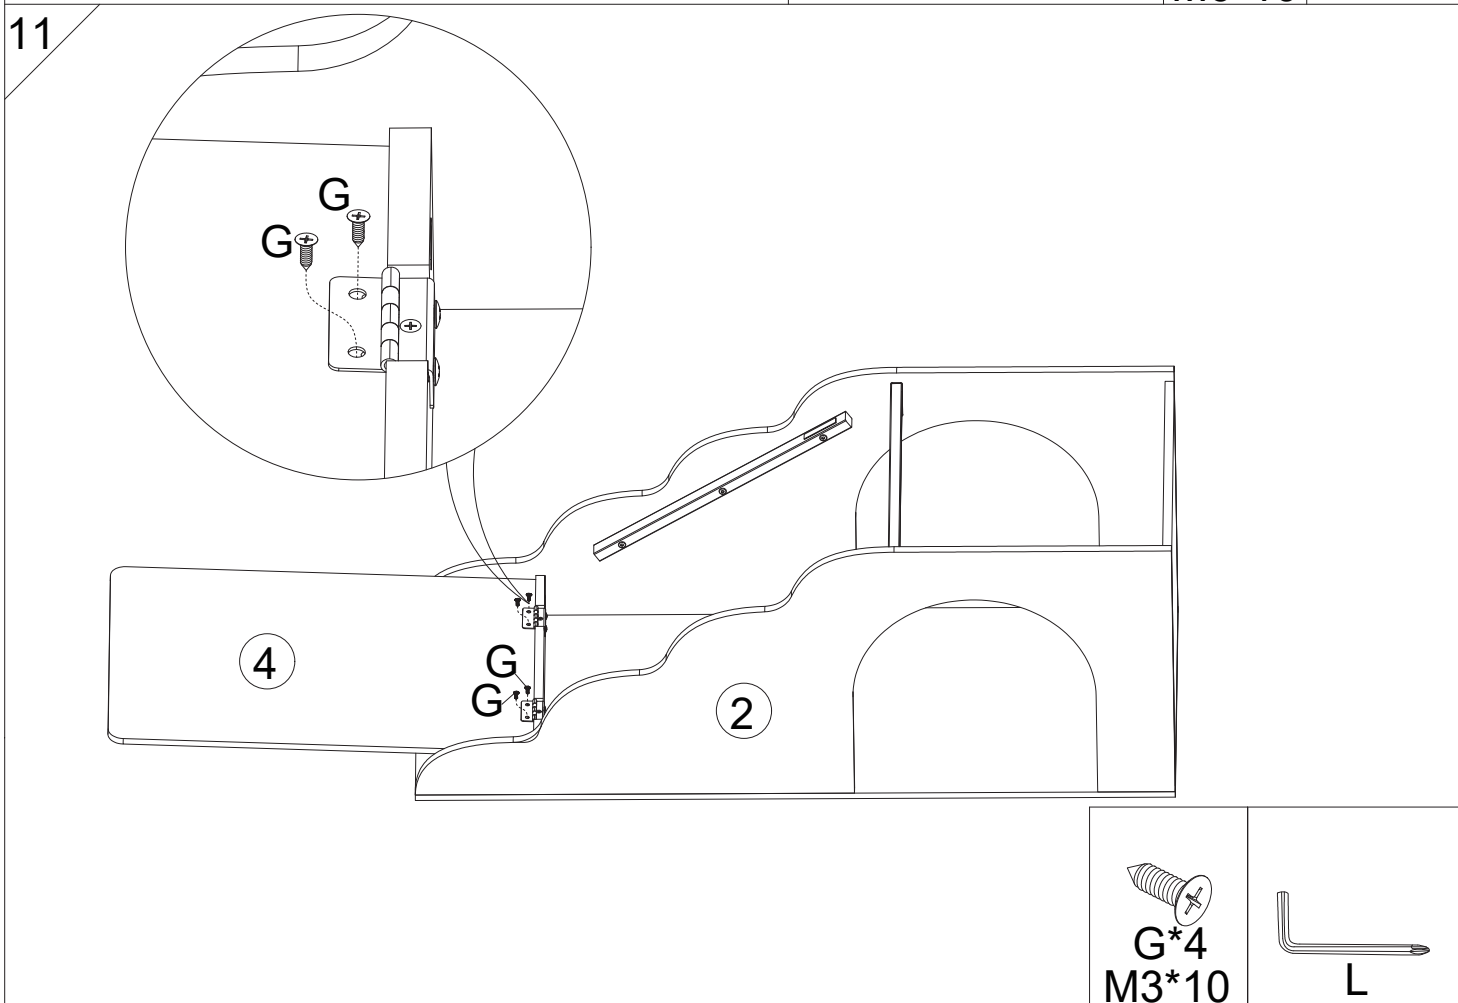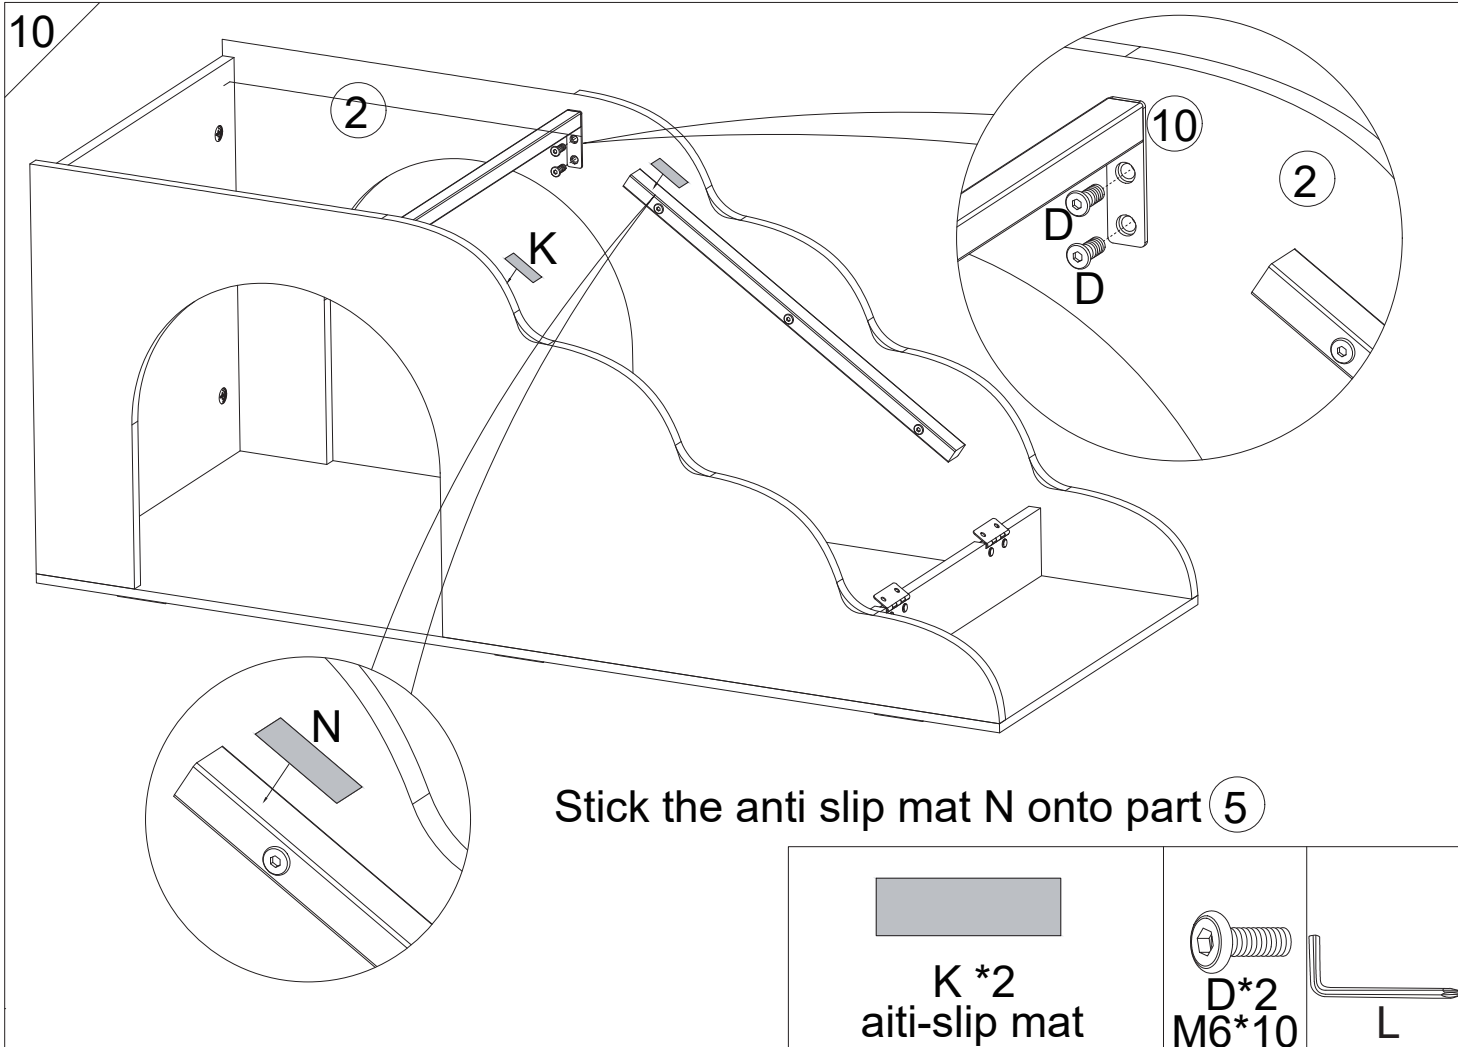

12

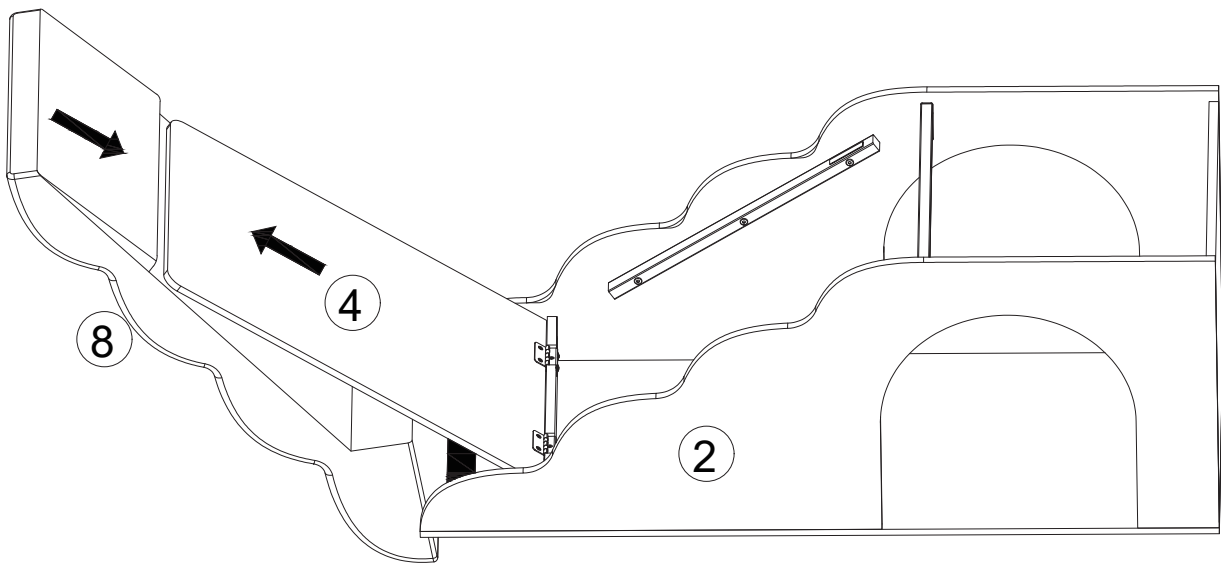

13

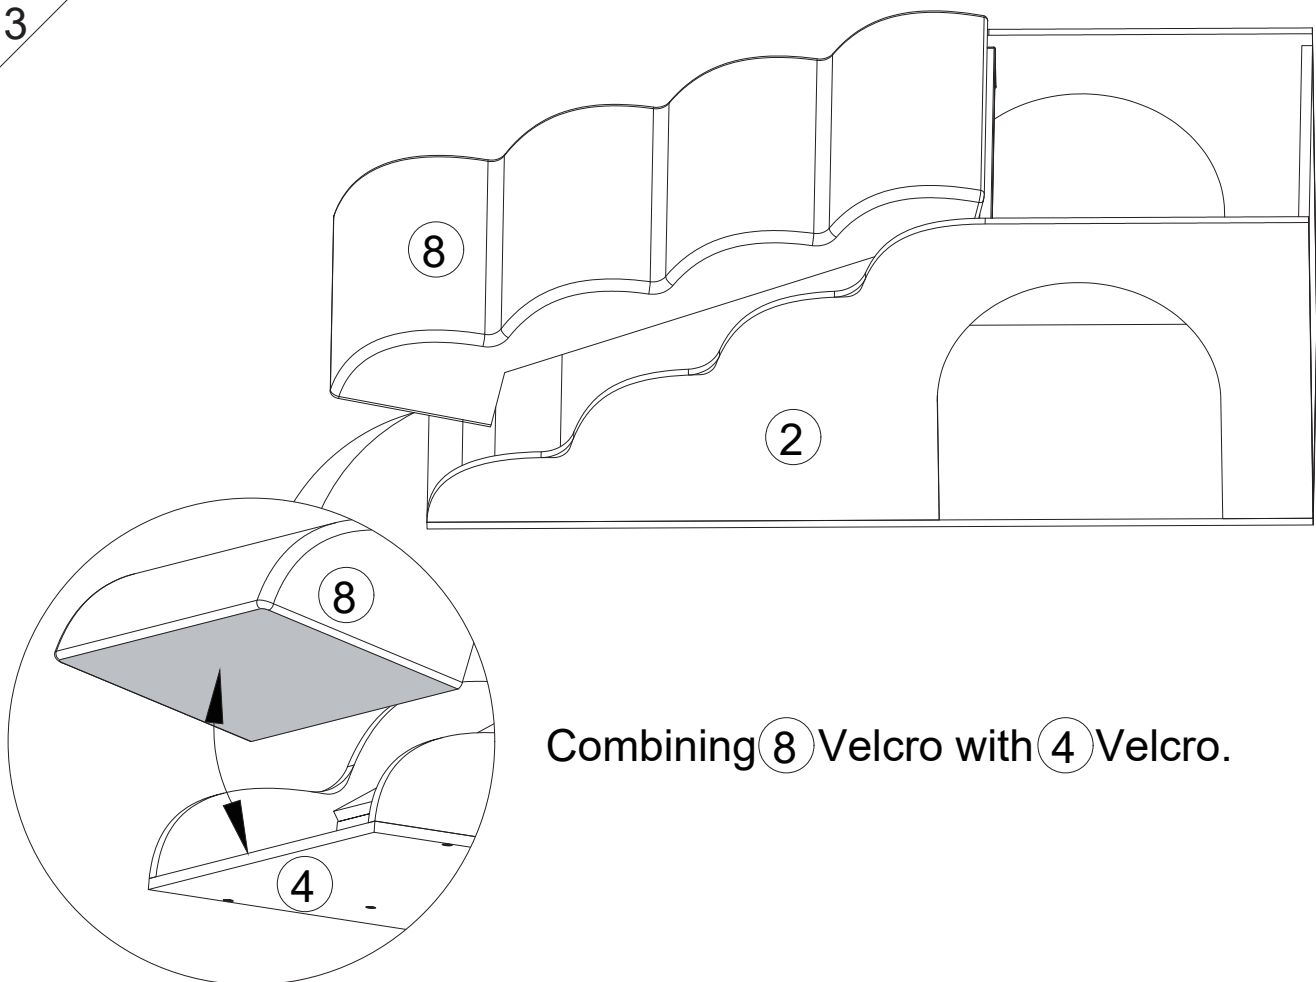

Combining 8 Velcro with 4 Velcro.

