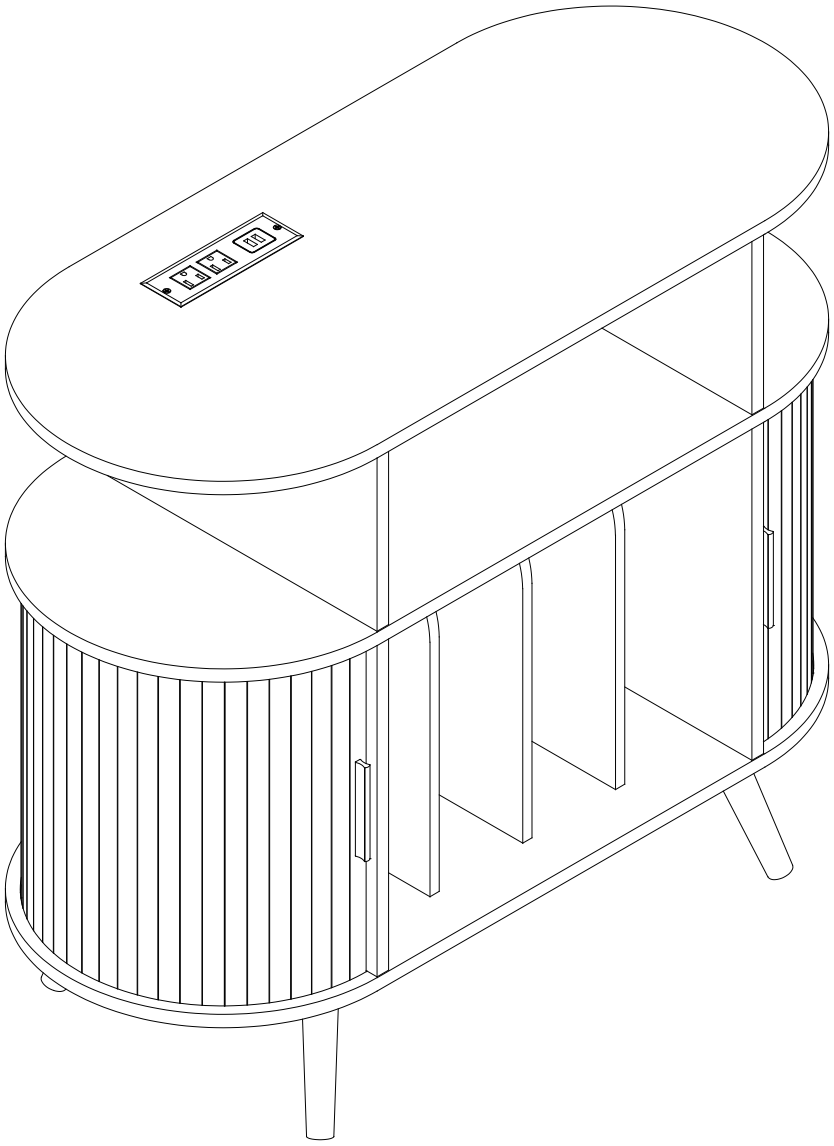



ATTENTION


If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.


PART LIST

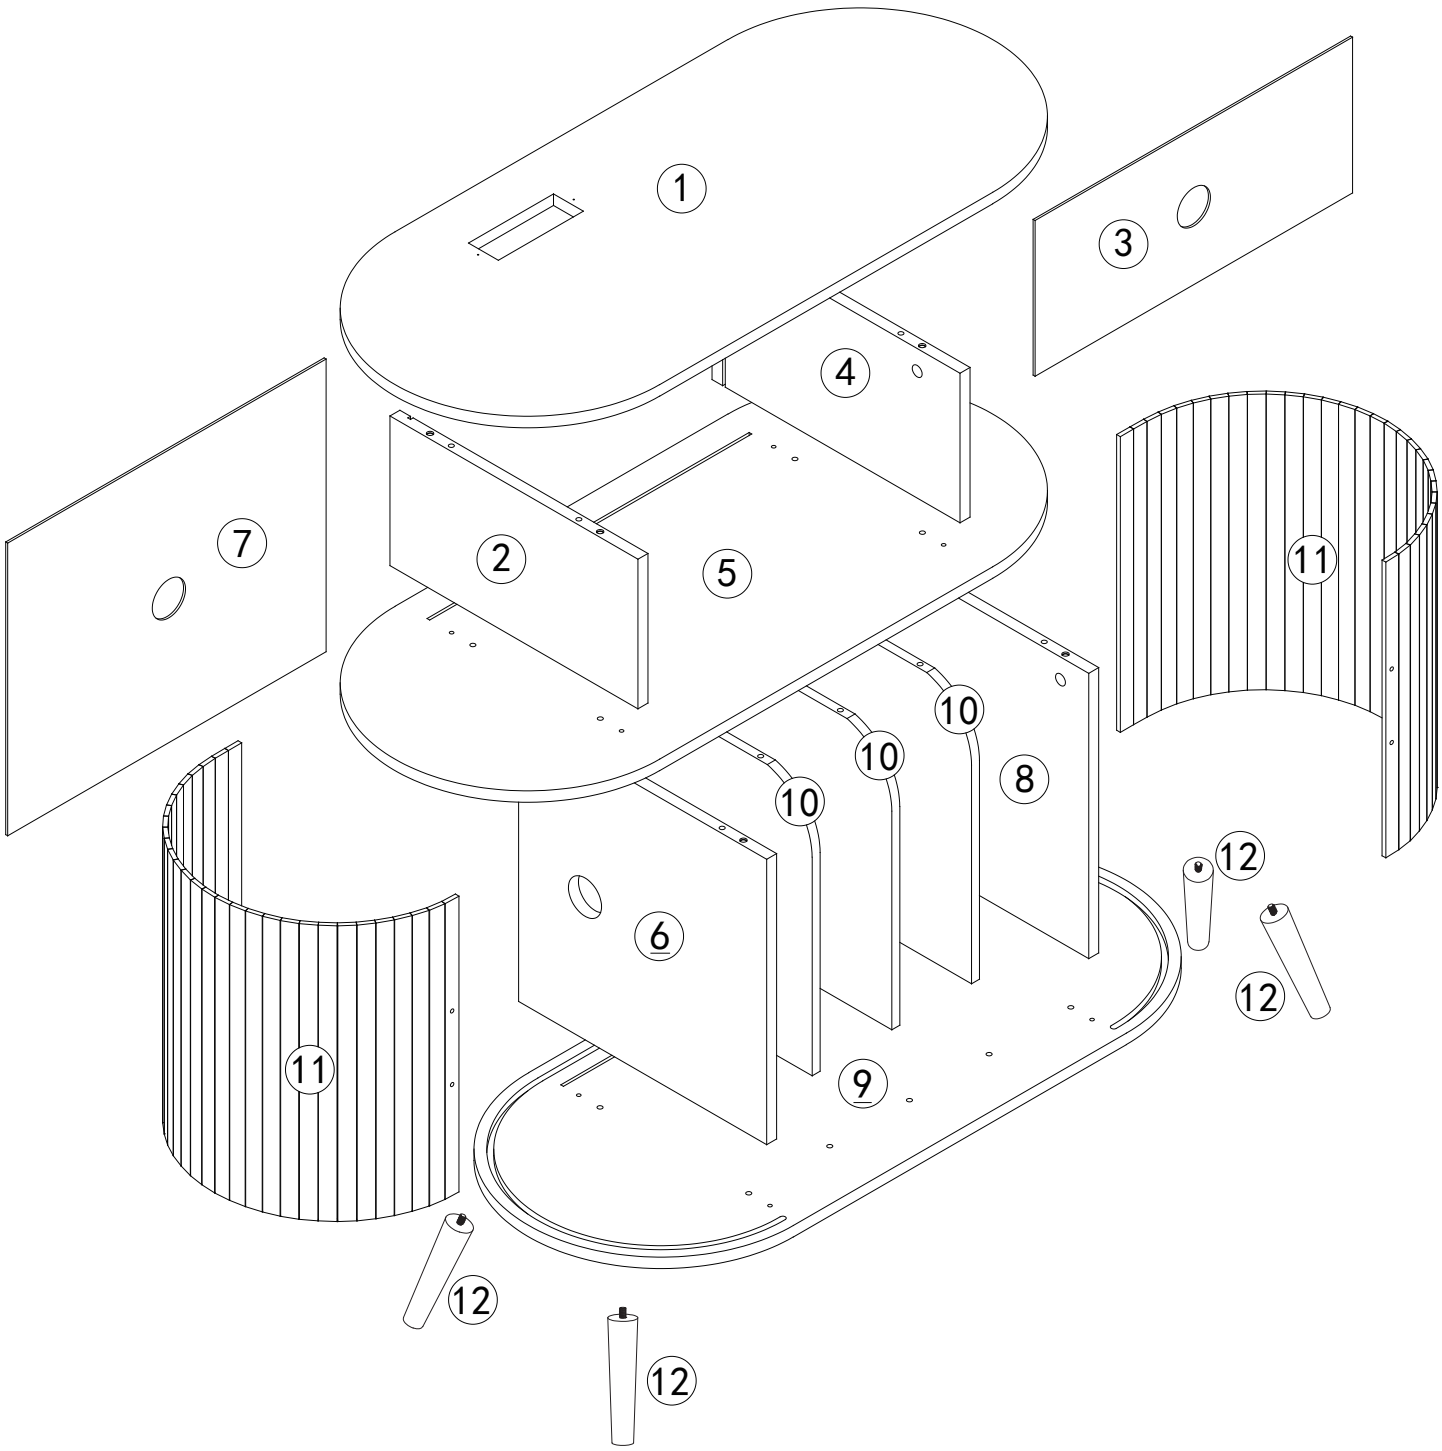


∅6x35MM
Ax8


∅15x10MM
Bx8


∅6x30MM
Cx28+3




M4x40mm M4x12mm
Dx2



M4x8mm
Ex4


96mm
Fx2


M4x12mm
Gx20+2



M65x70mm
Hx4



M3x16mm
Ix8


M4x35mm
Jx8












M161x54x40mm
Kx1


M3x12mm
Lx2



∅20MM
Mx4


∅21x100MM
x1


PART LIST

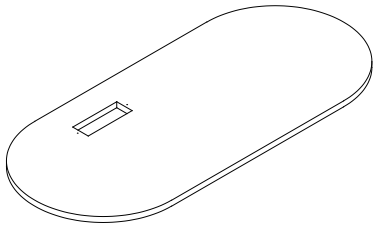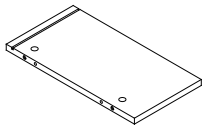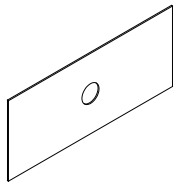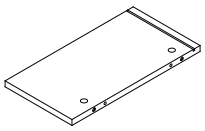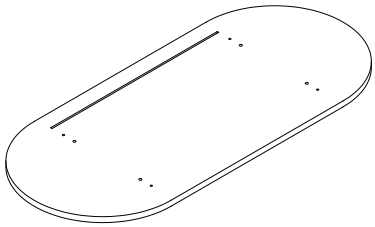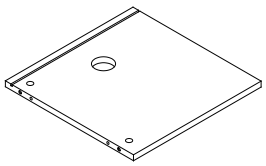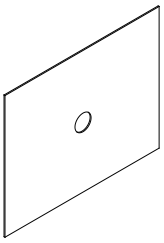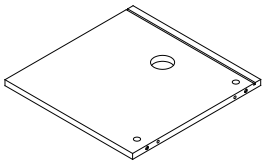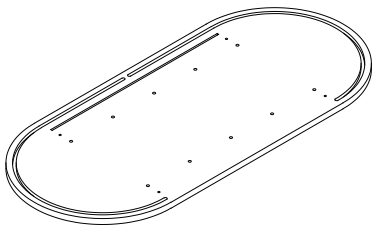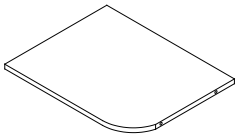1 x1 	2 x1 	3 x1 
4 x1 	5 x1 	6 x1 
7 x1 	8 x1 	9 x1 
10 x3 	11 x2 	12 x4 

D =




1



2




3

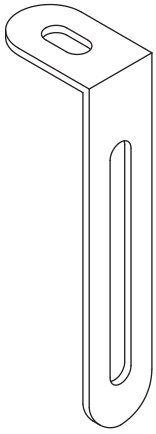

4


STEP1


Note: Place the anti-tip device D4 at the
rear top position of the side panel, and secure it with screw D3.

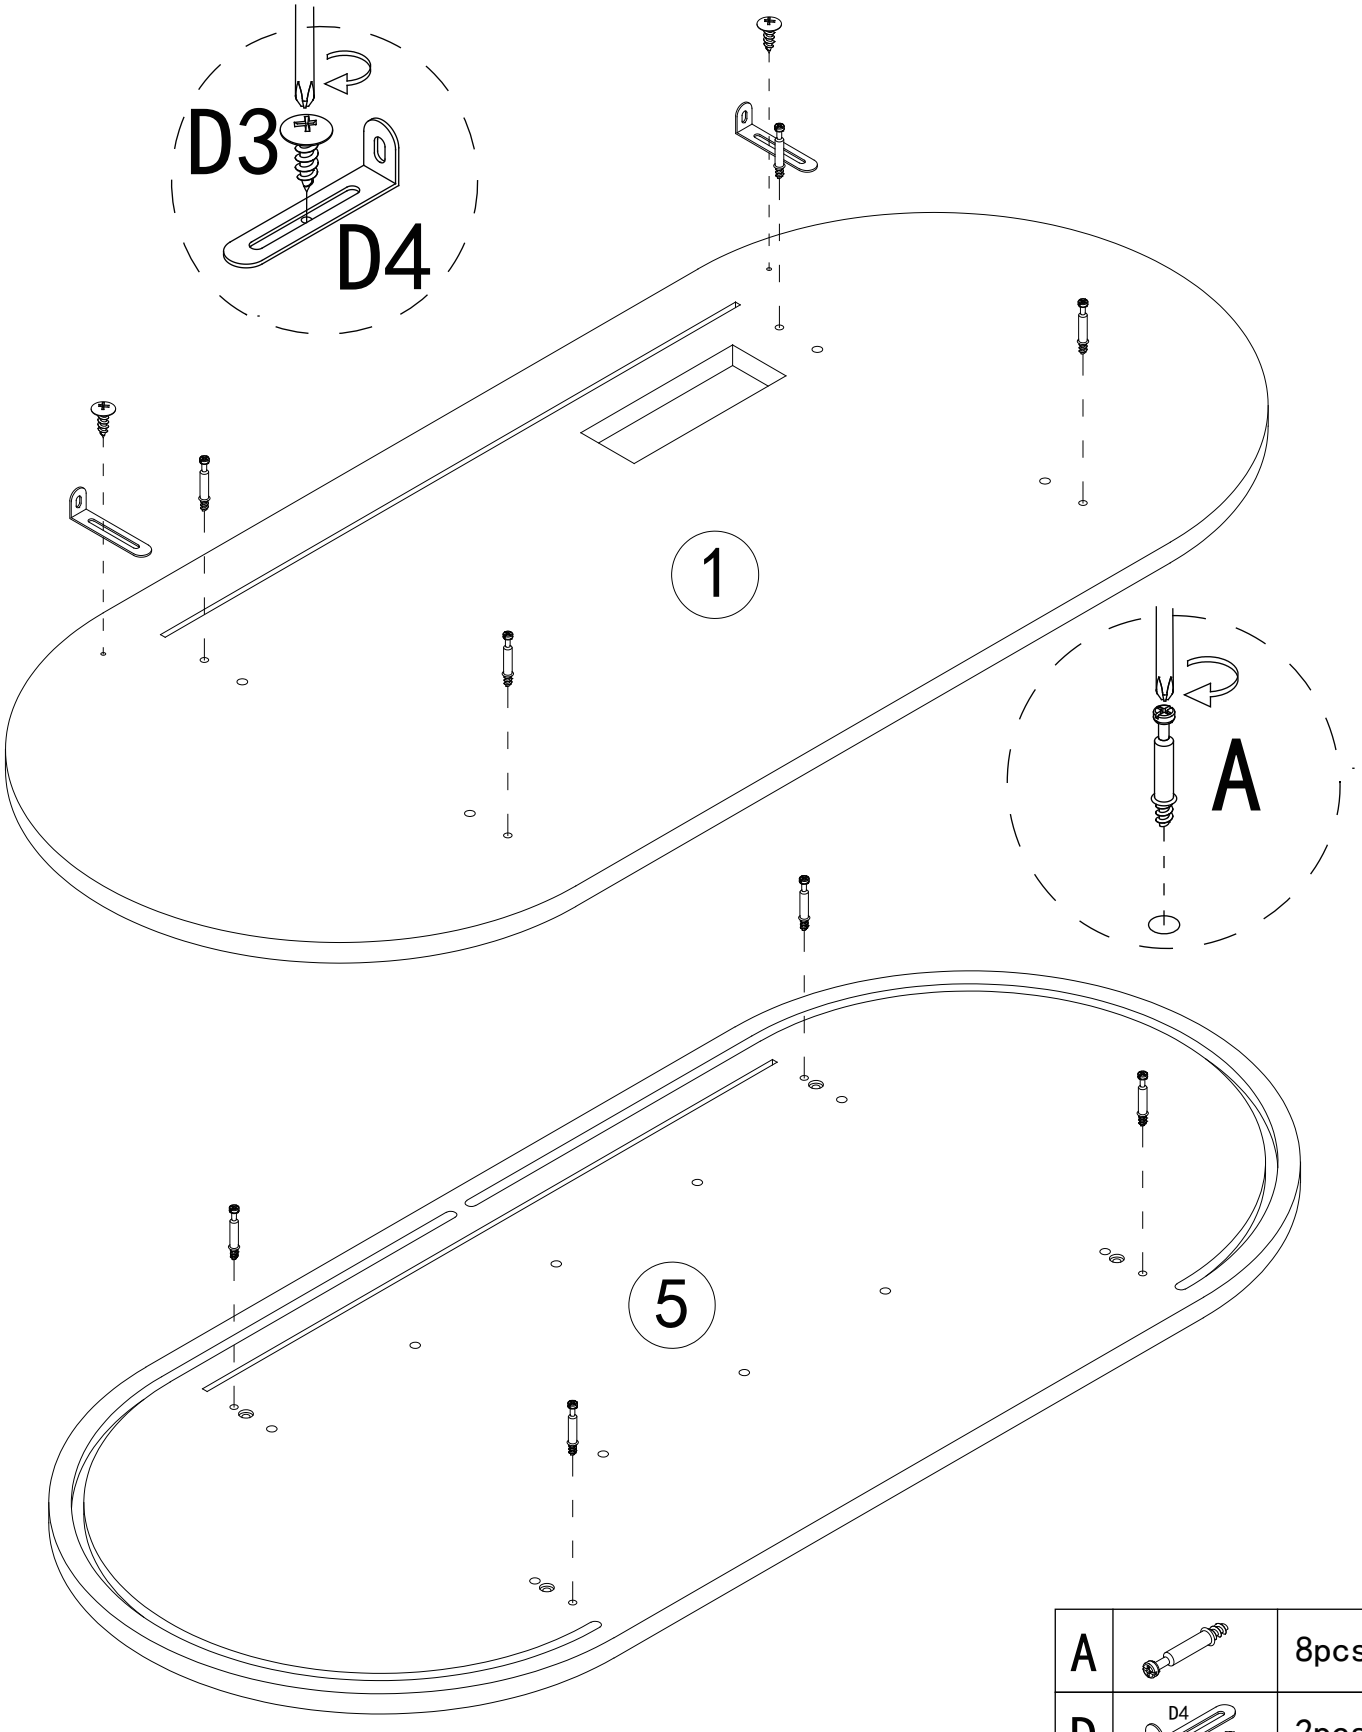


A		8pcs
D	D4 D3	2pcs


STEP2

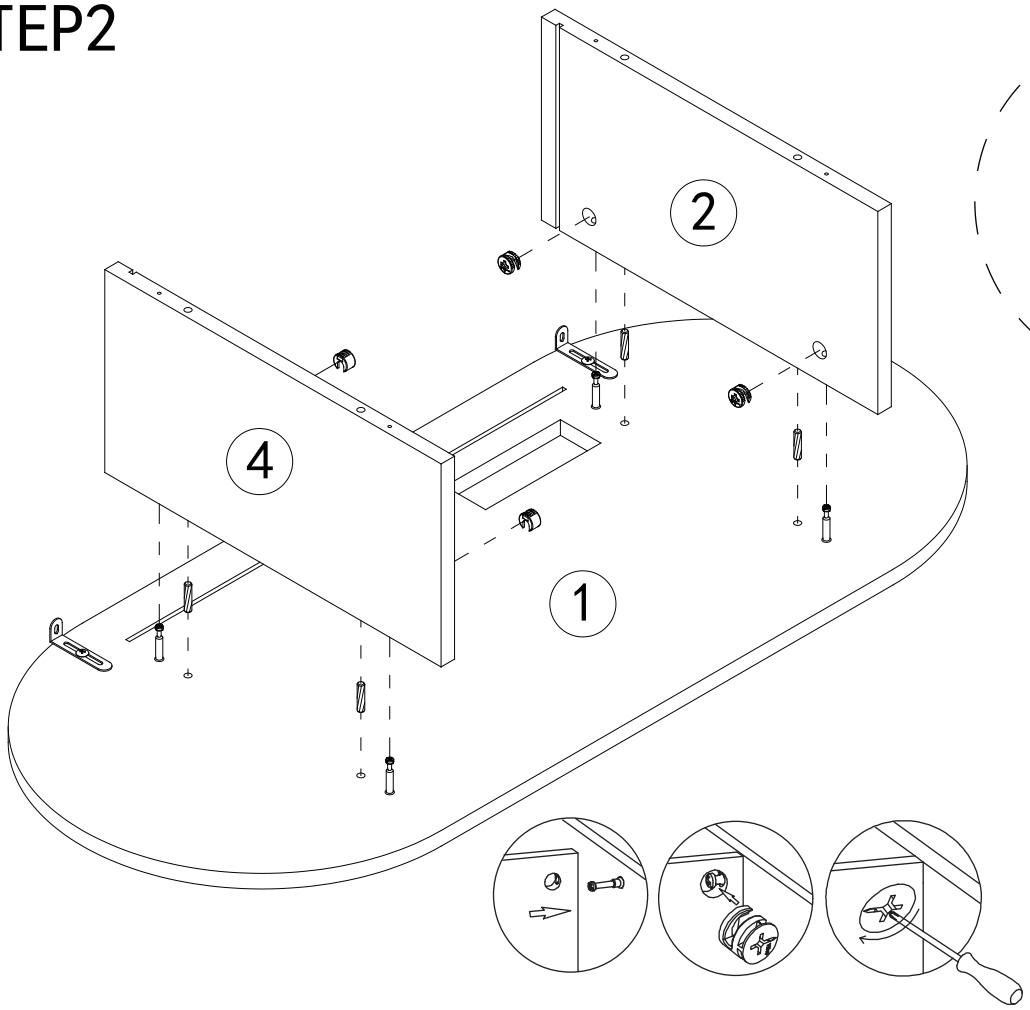

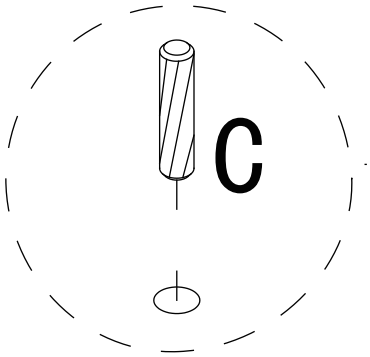


B		4pcs
C		4pcs

STEP3

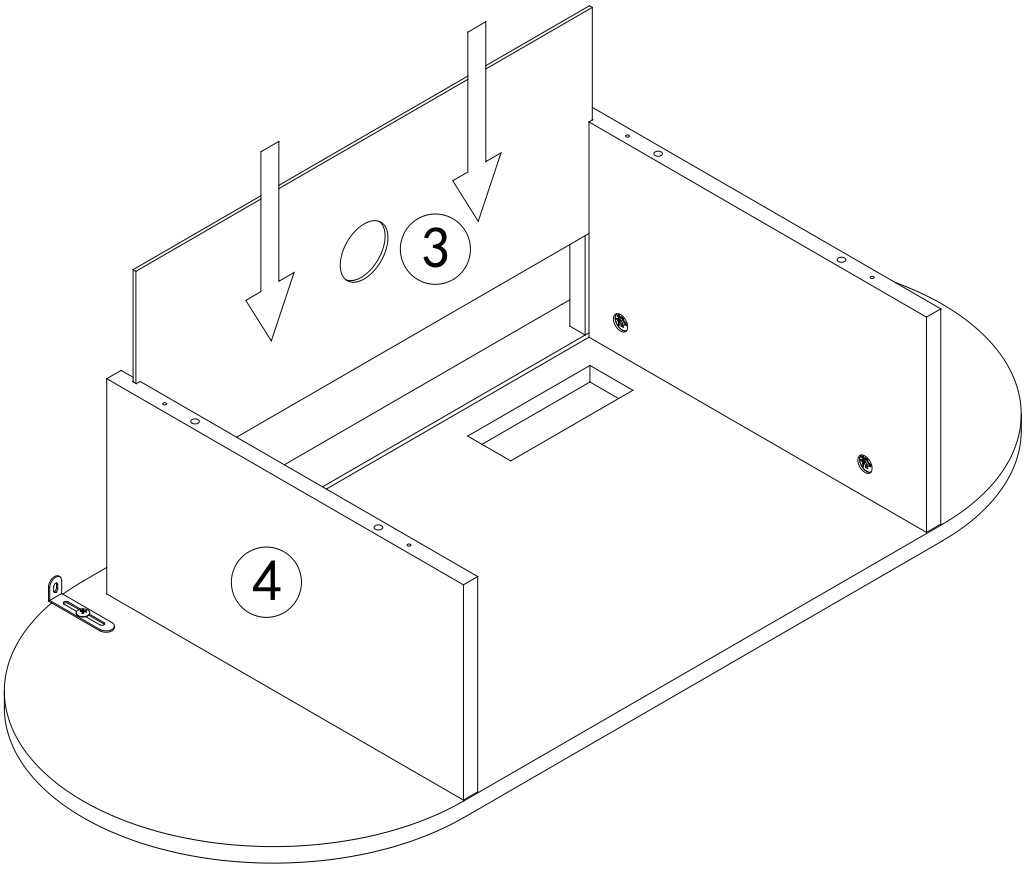



STEP4

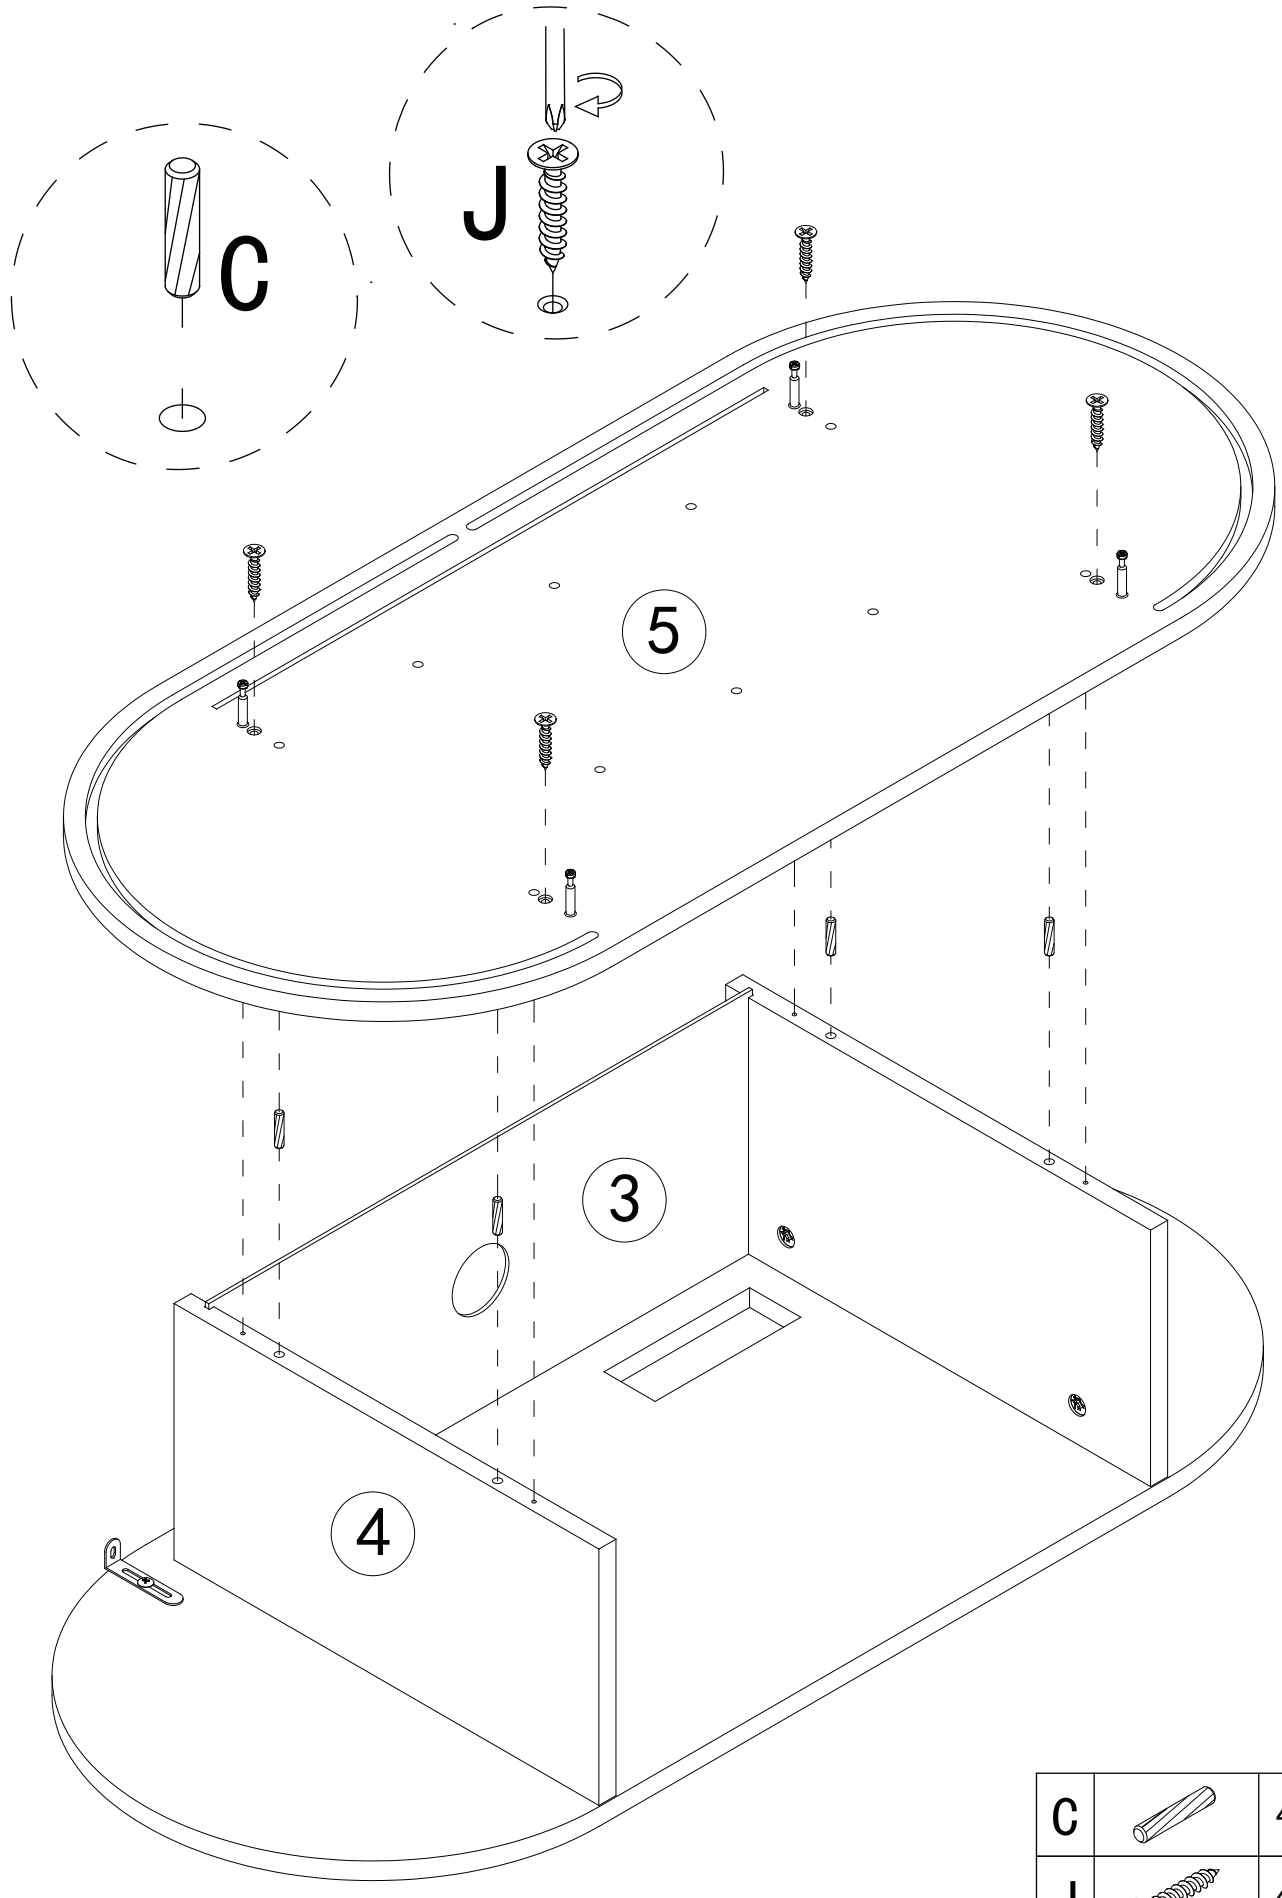

C		4pcs
J		4pcs


STEP5

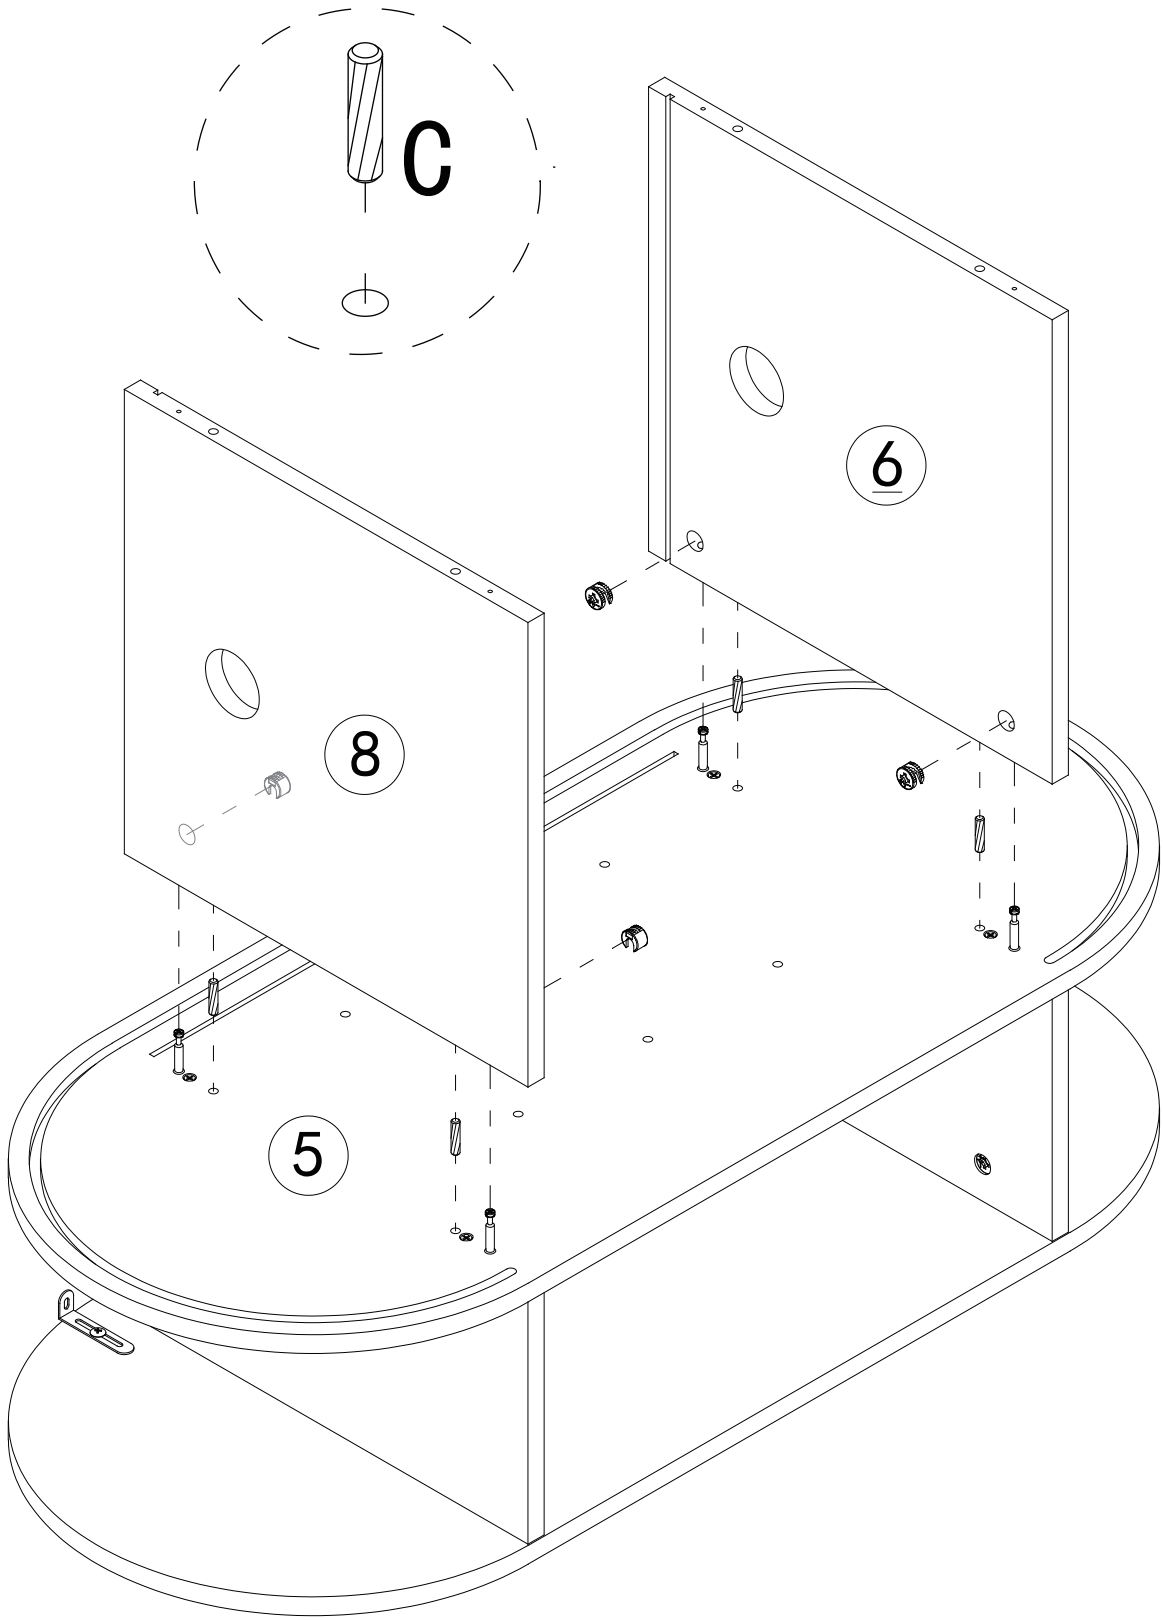

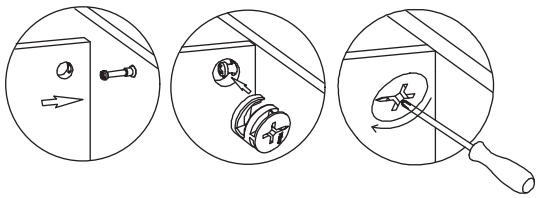



B		4pcs
C		4pcs


STEP6

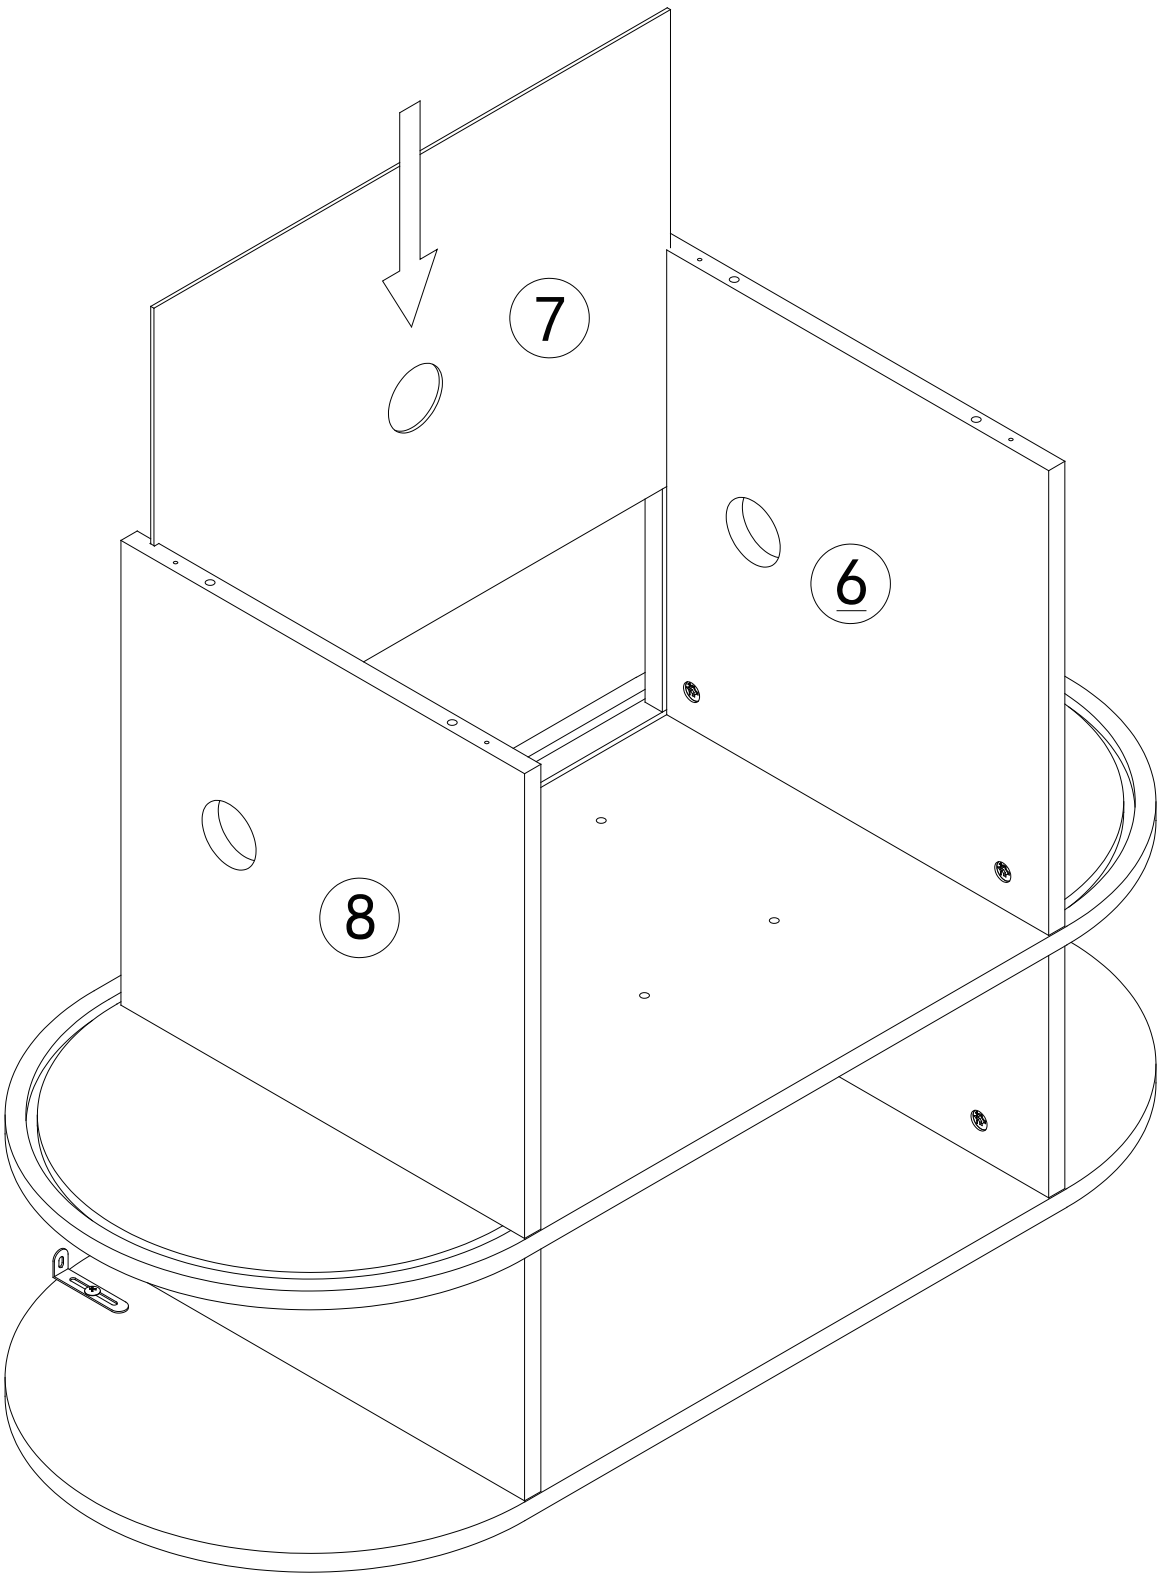

STEP7

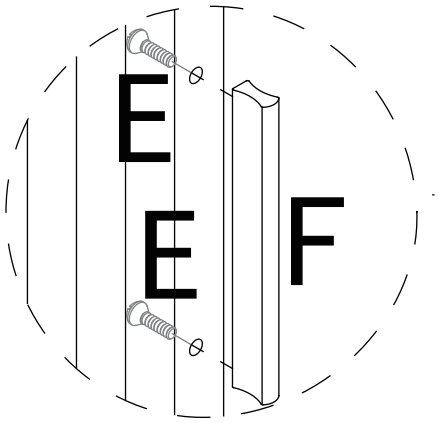


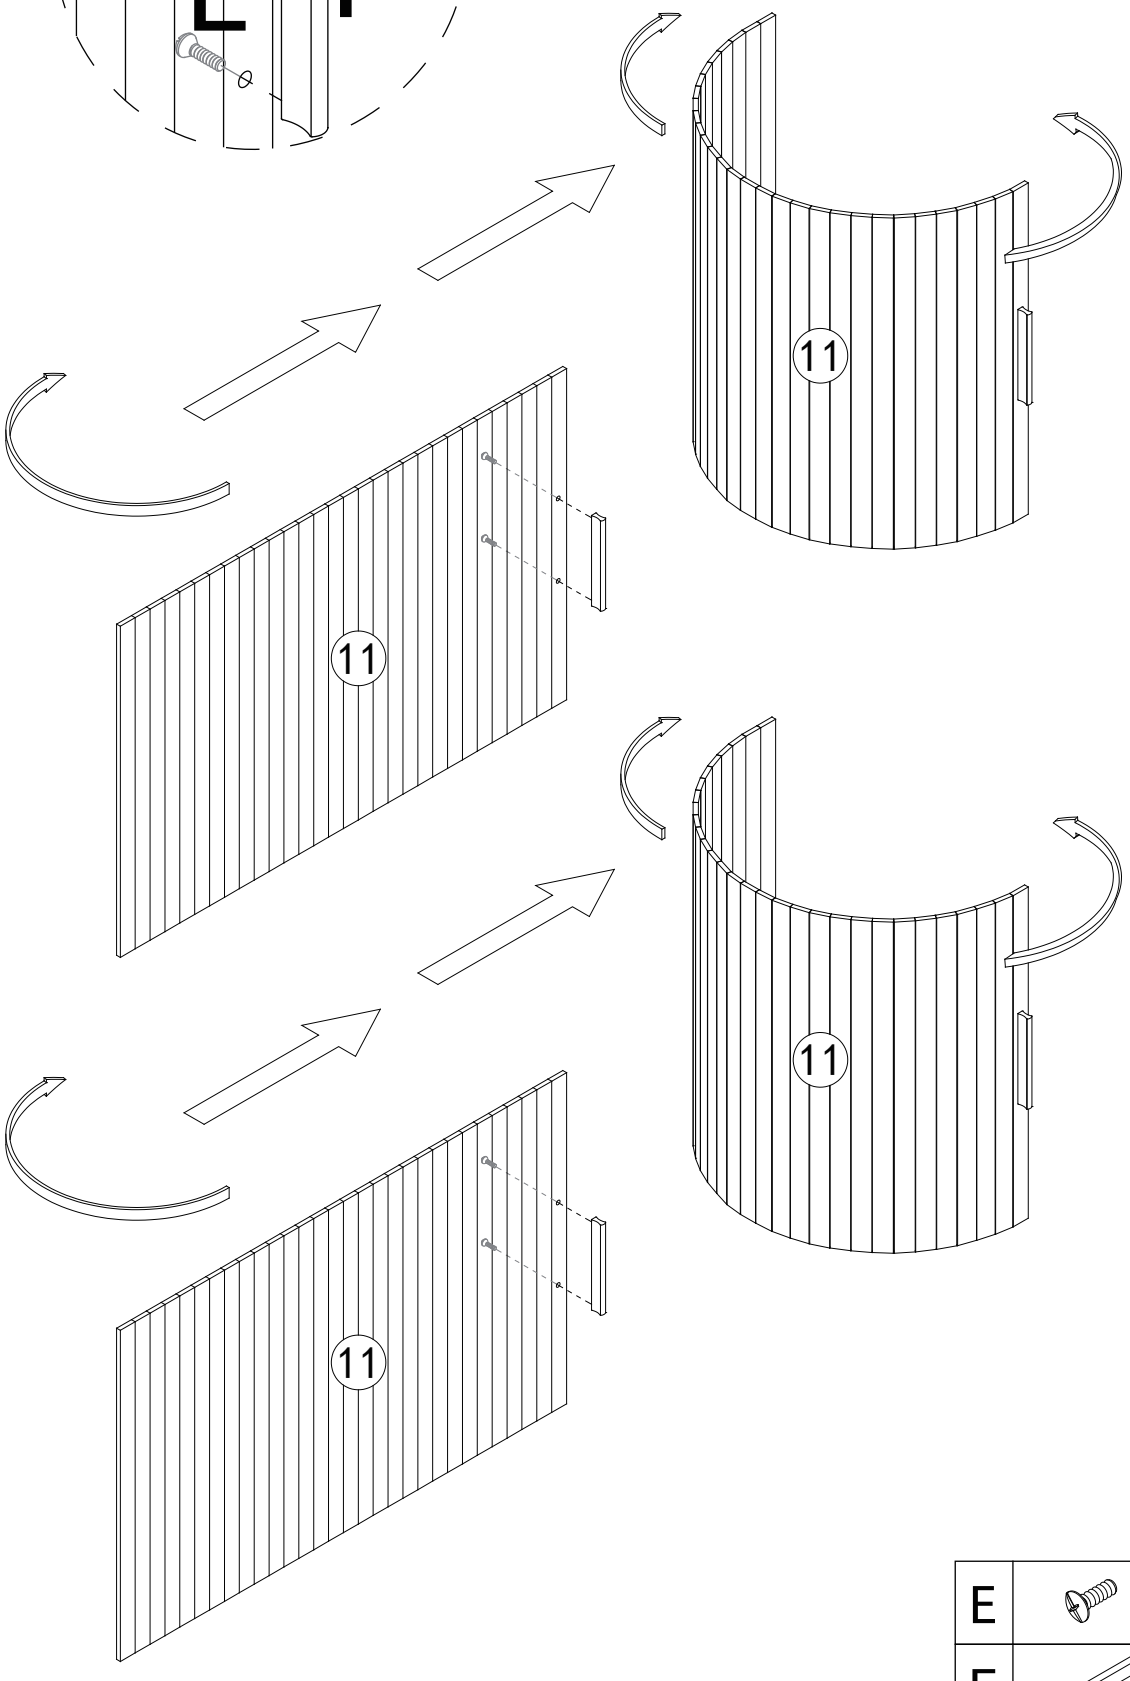


E		4pcs
F		2pcs

STEP8

Apply vertical downward force to make sure the curtain slides into the track to prevent pinching.

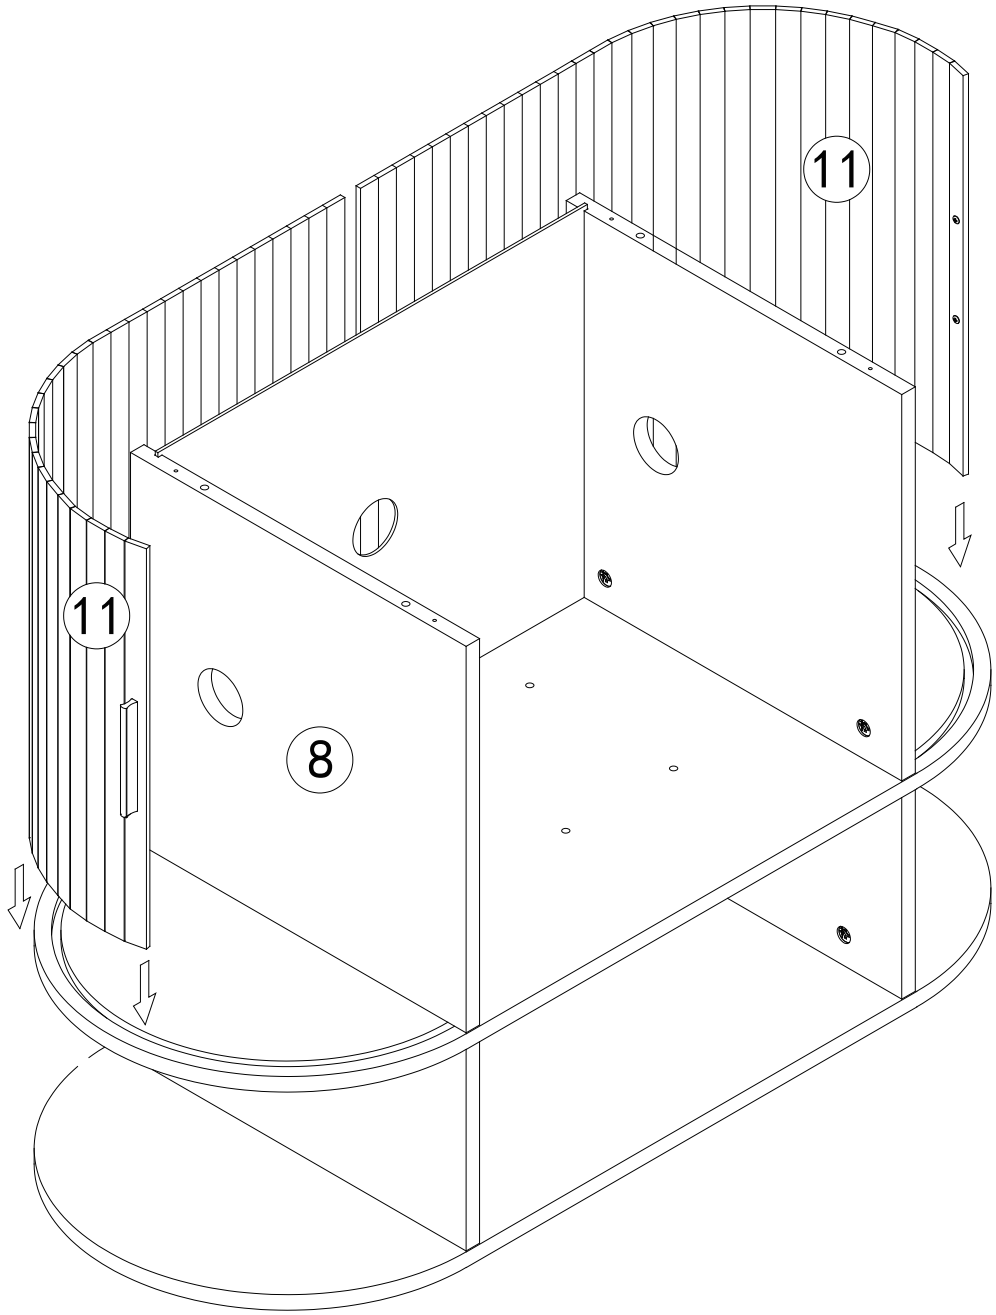


STEP9

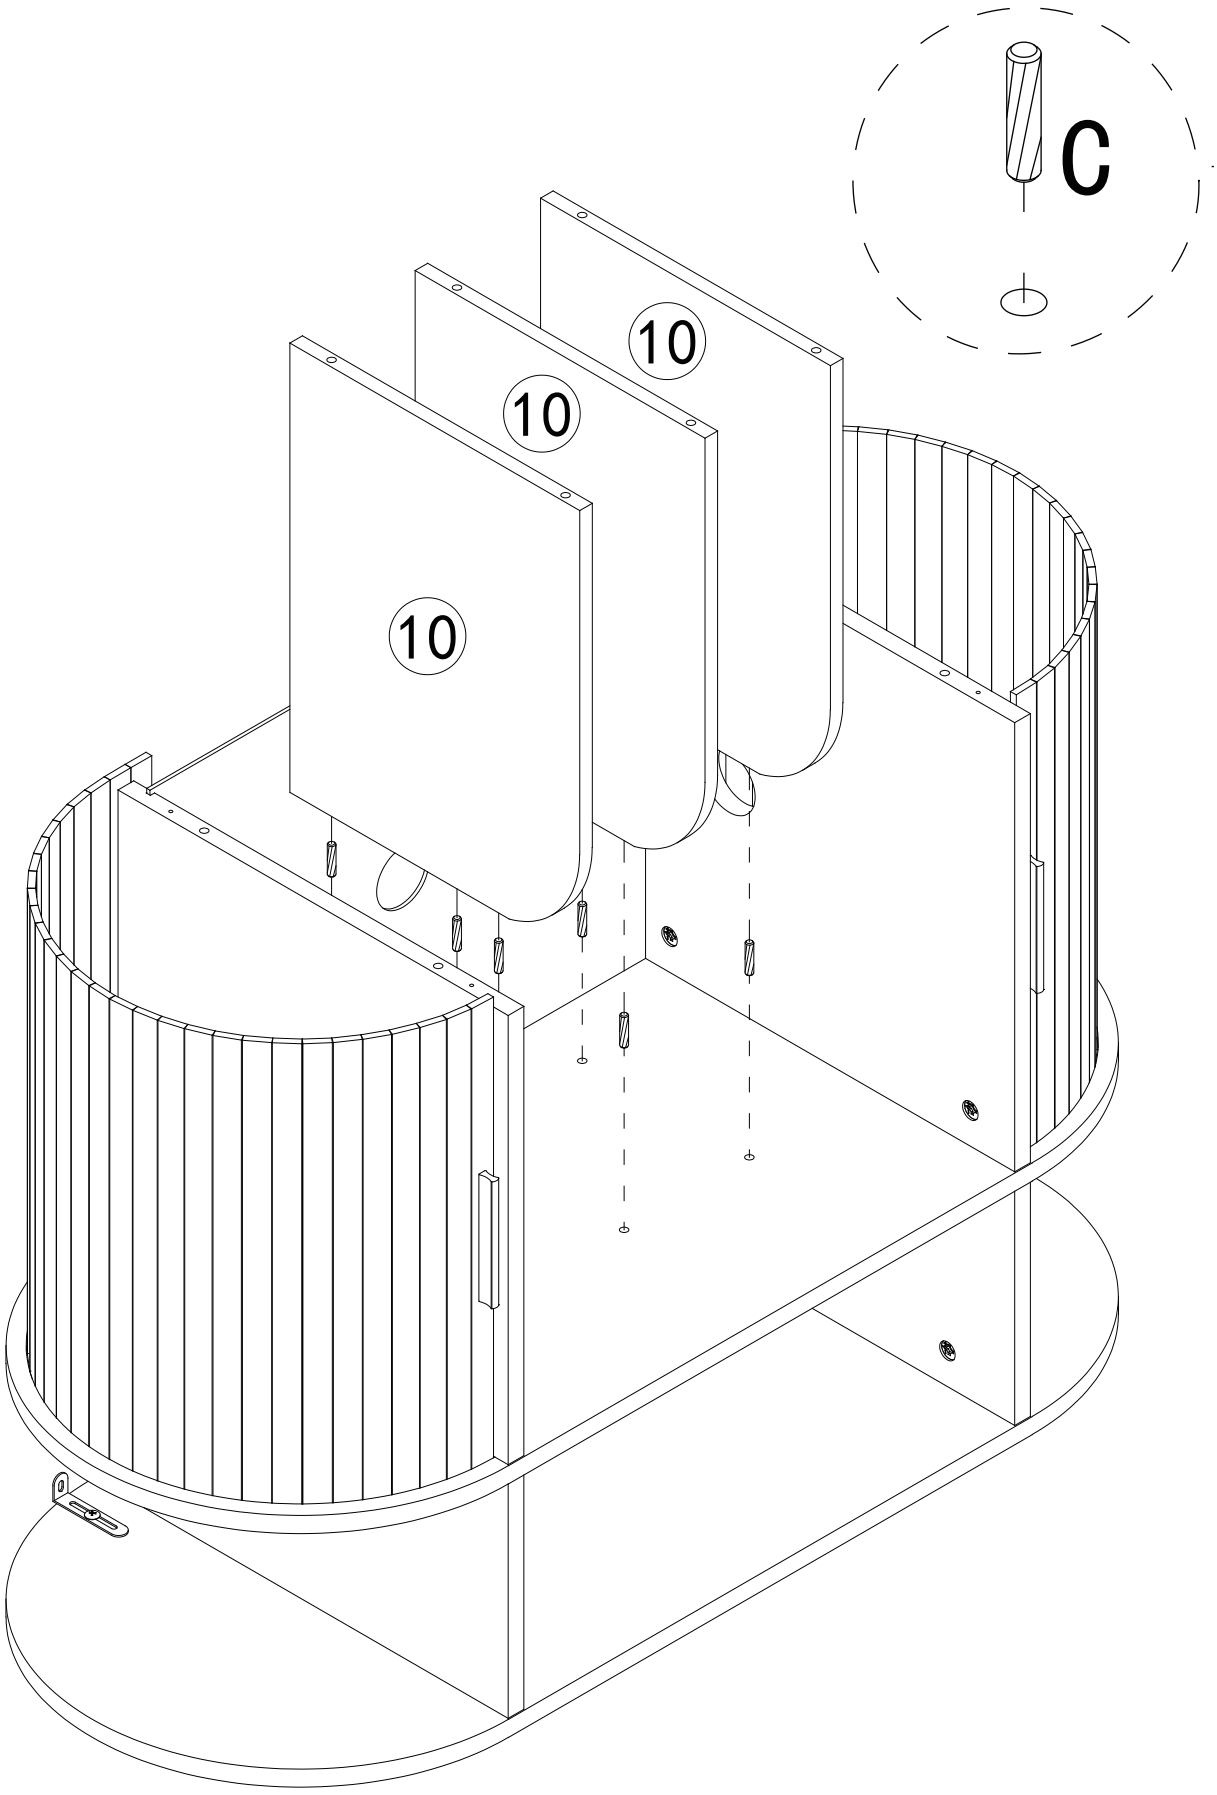


C		6pcs


STEP10


This step requires two people to work together to install.

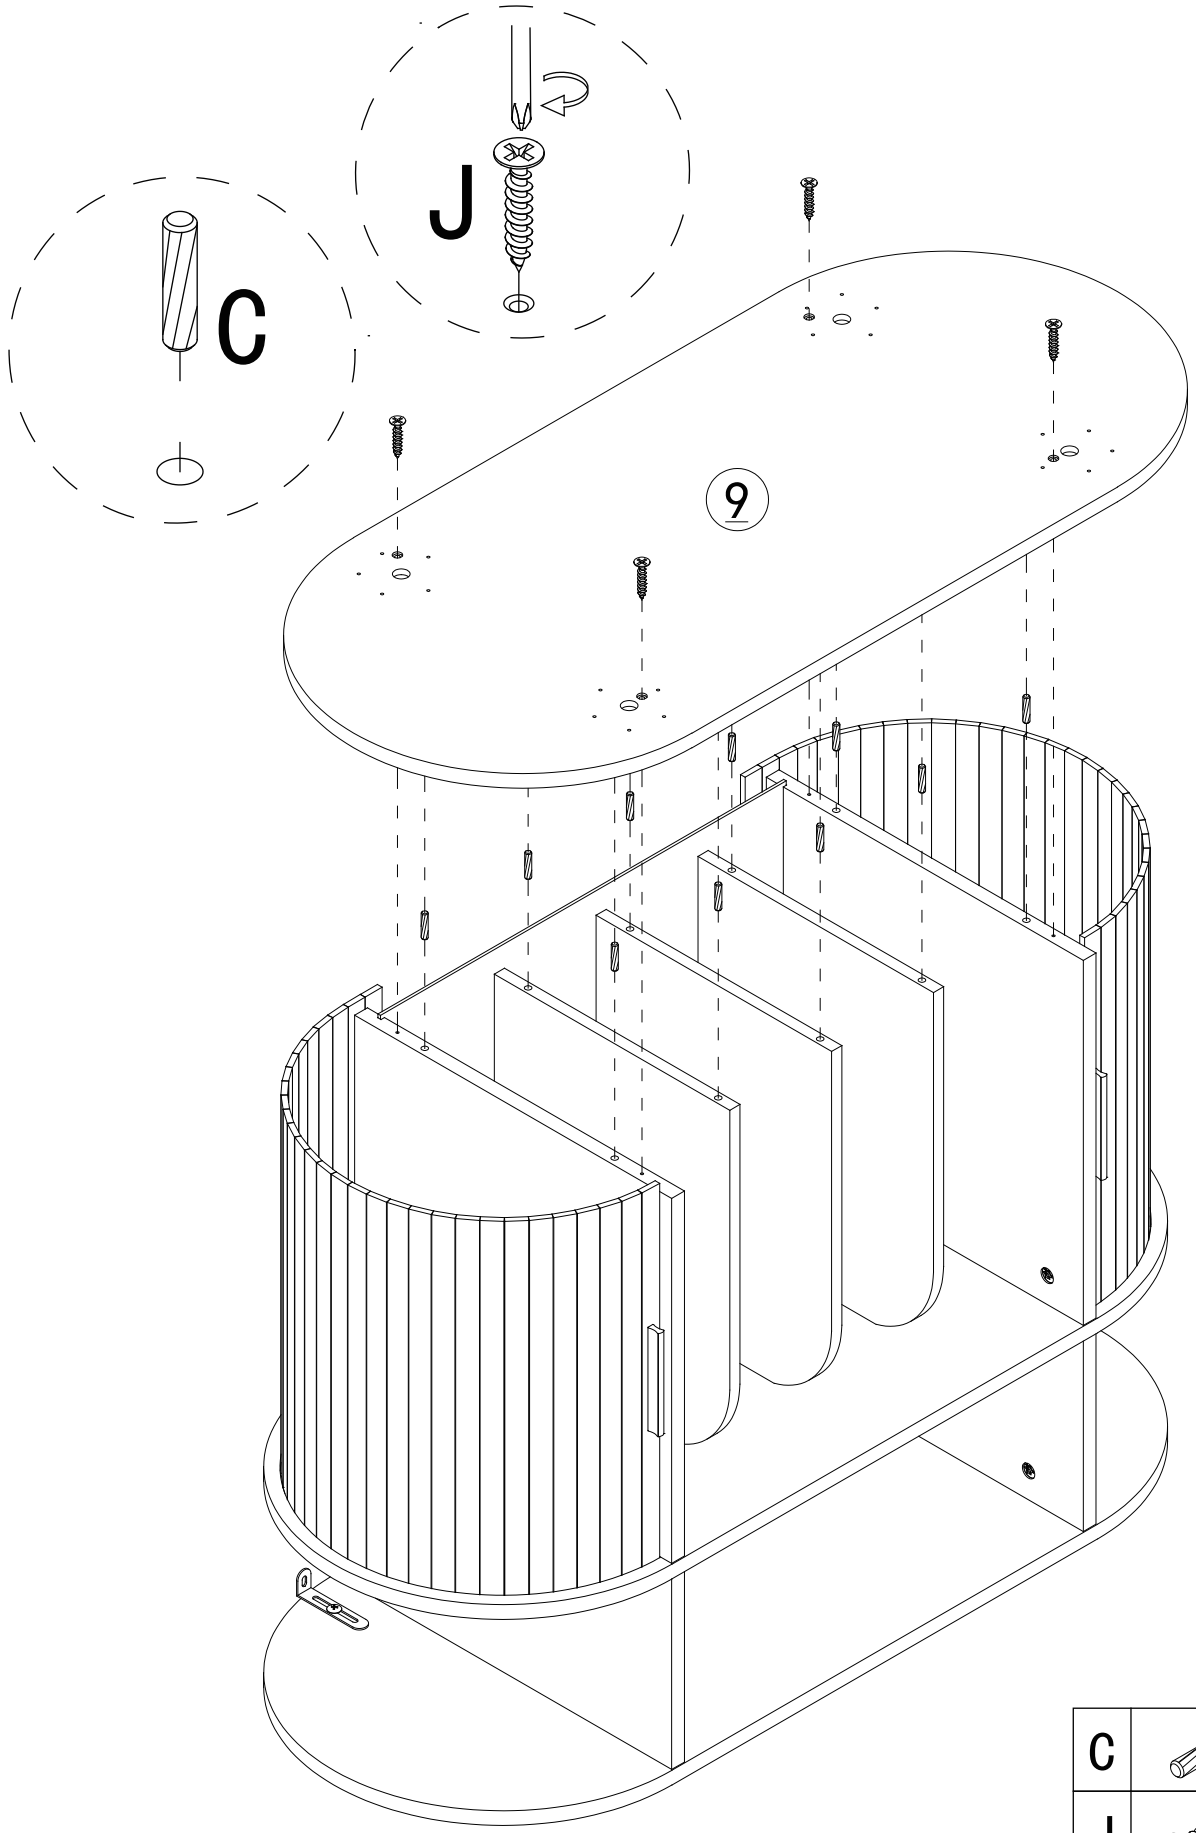

C		10pcs
J		4pcs


STEP11

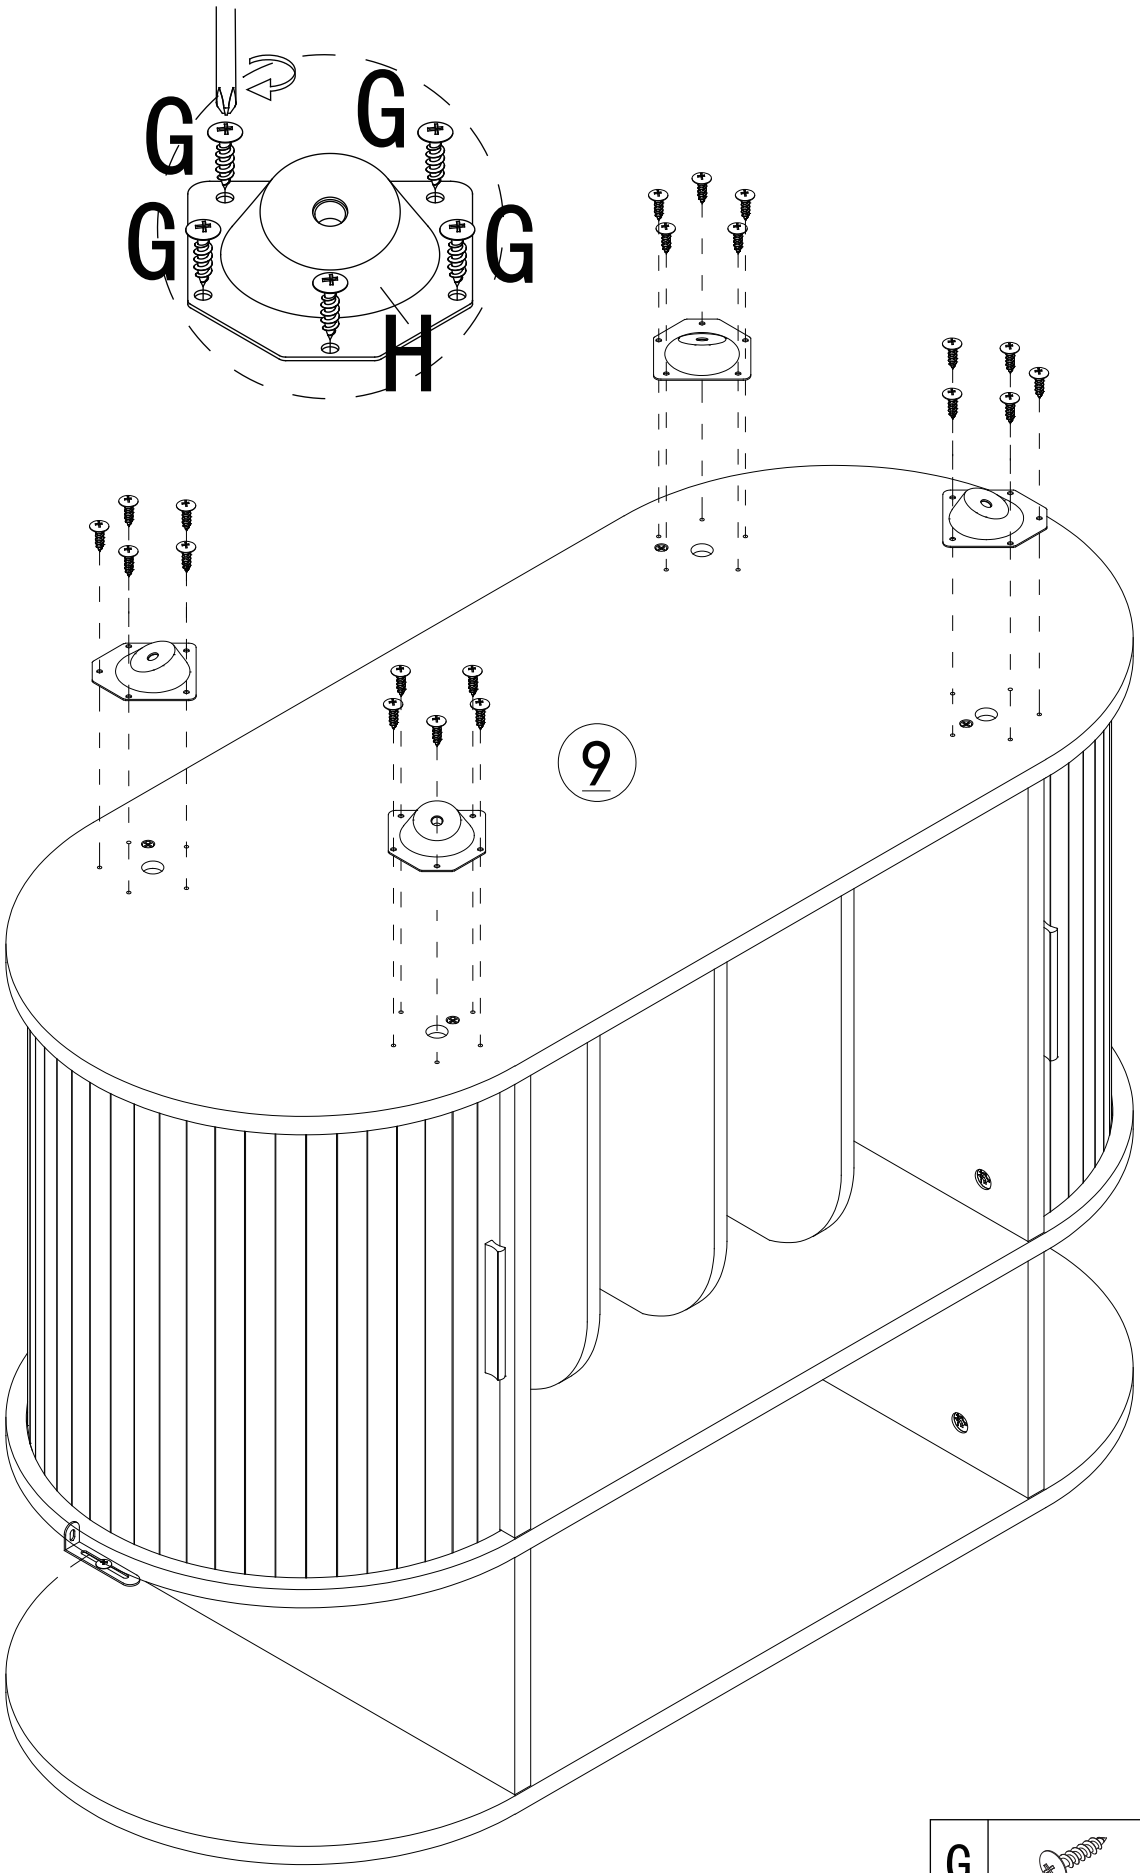

G		20pcs
H		4pcs


STEP12


If you screw it in place, you can't screw it anymore.

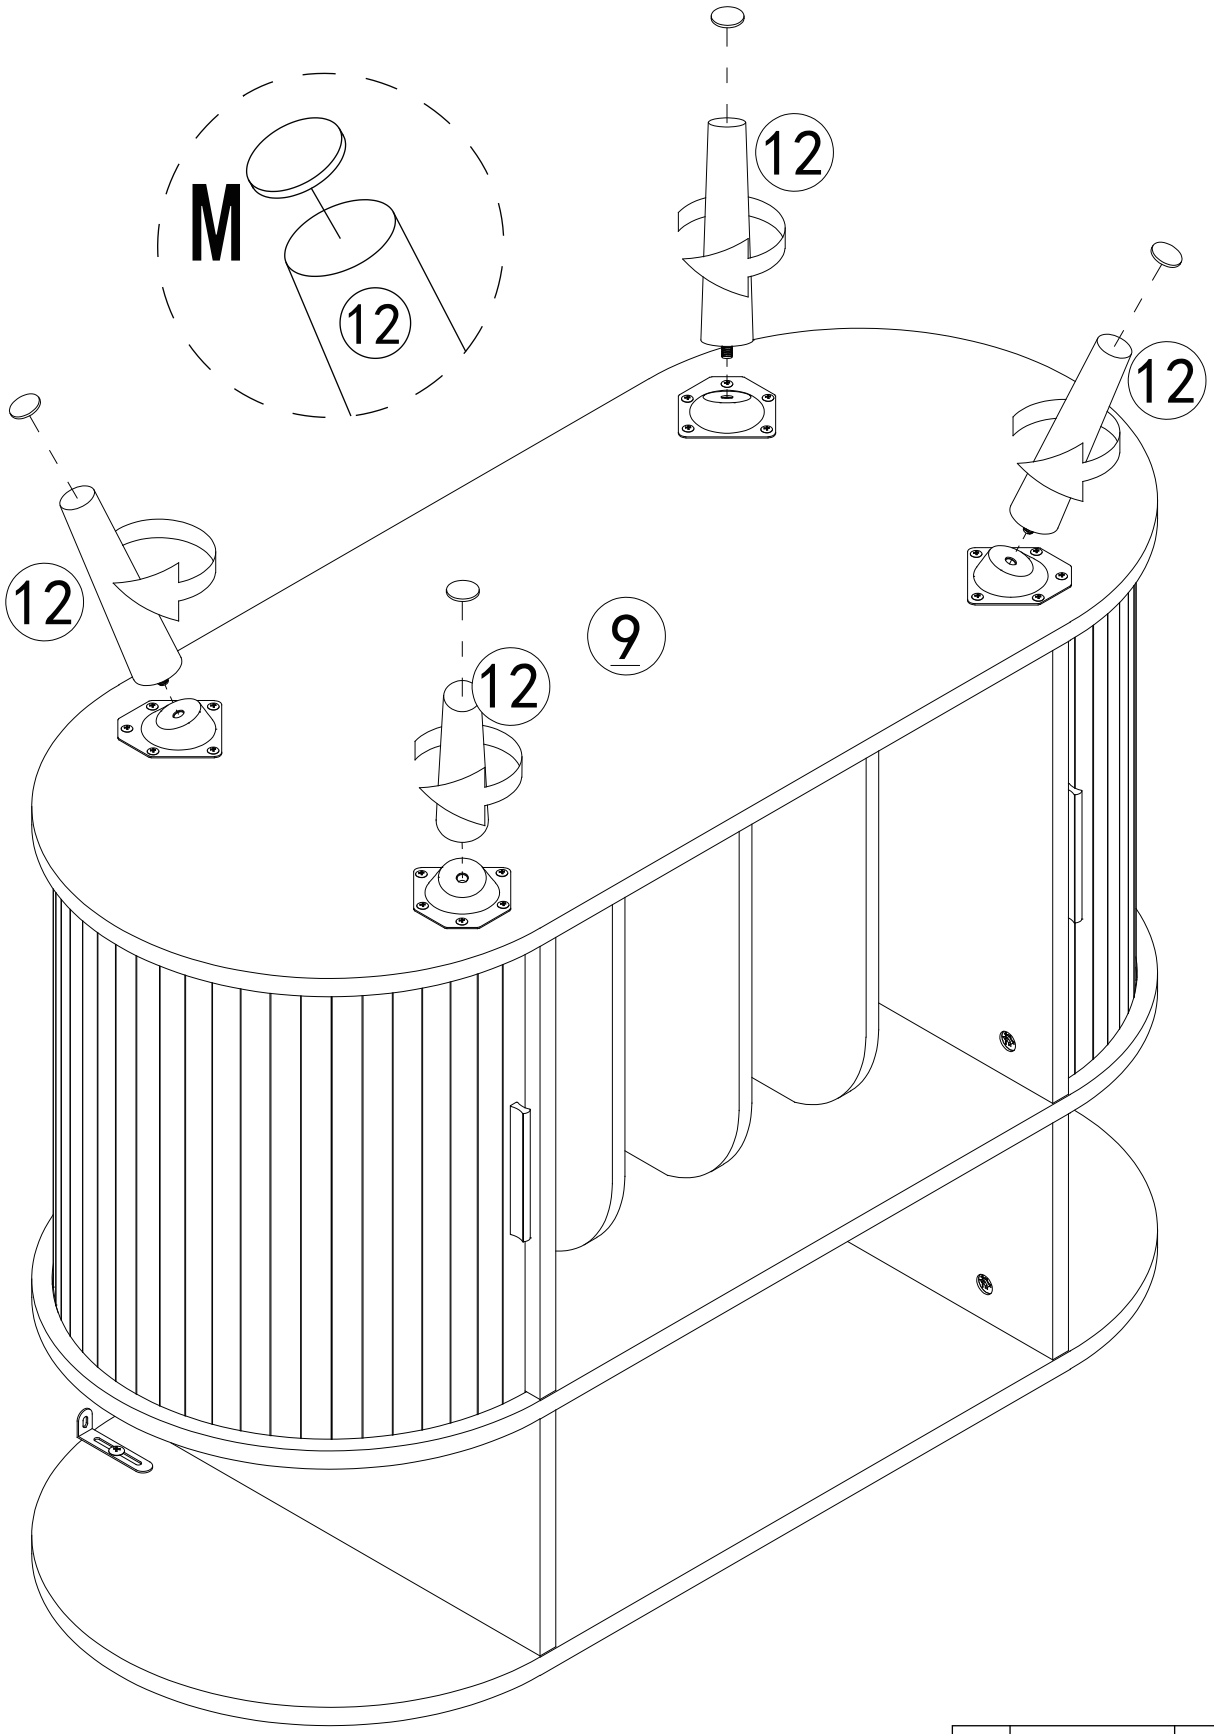


M		4pcs

STEP13

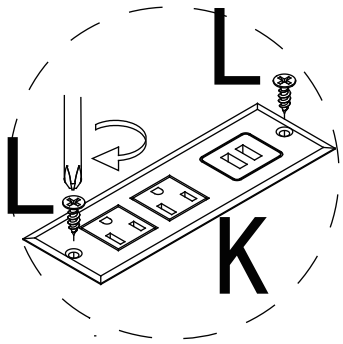


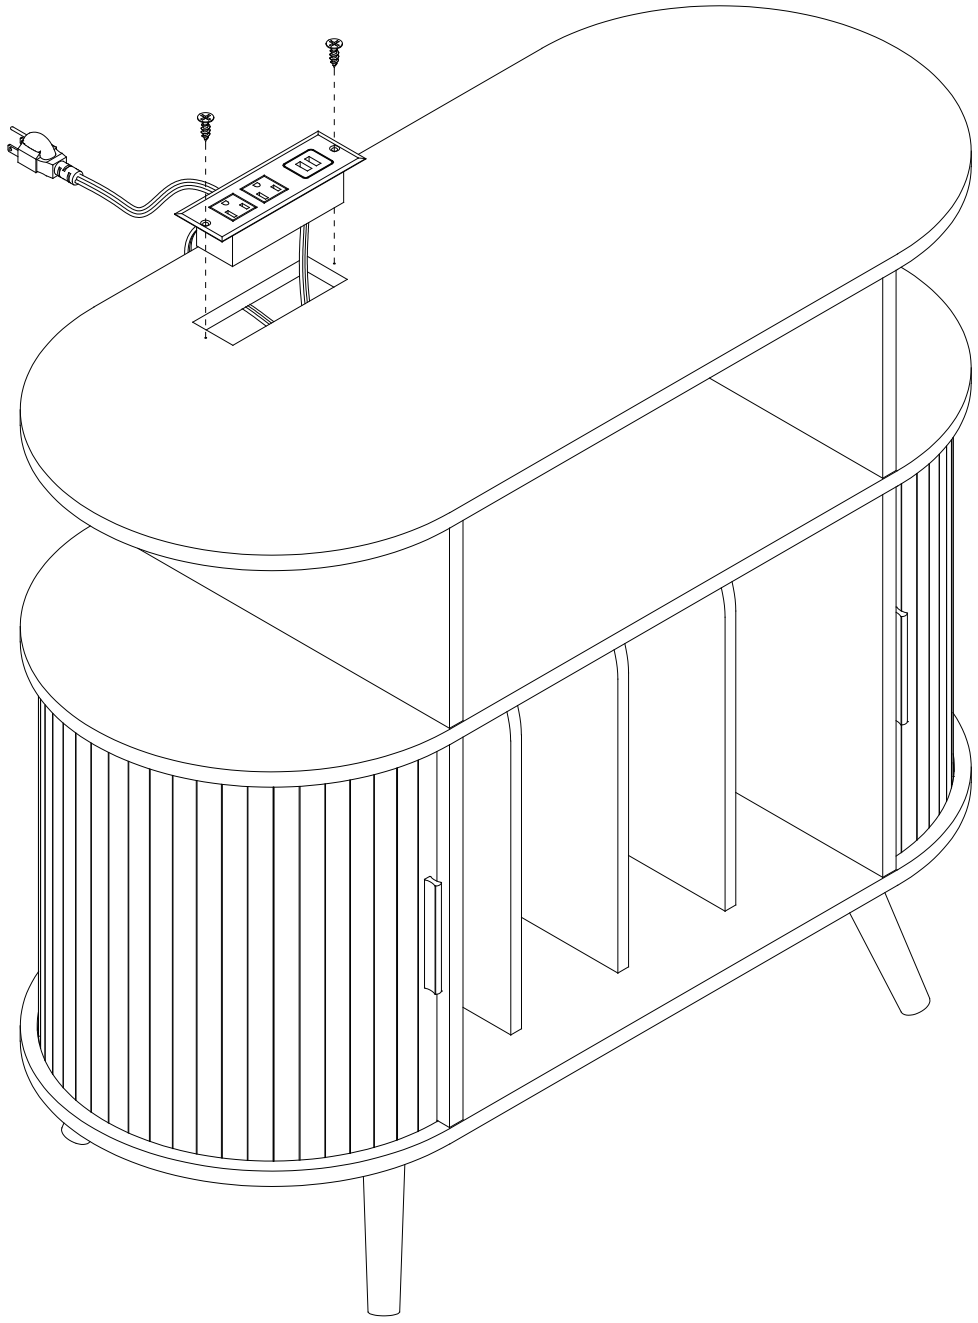


K		1pc
L		2pcs

STEP14


Be sure to install back plate buckle to prevent the cabinet from shaking.

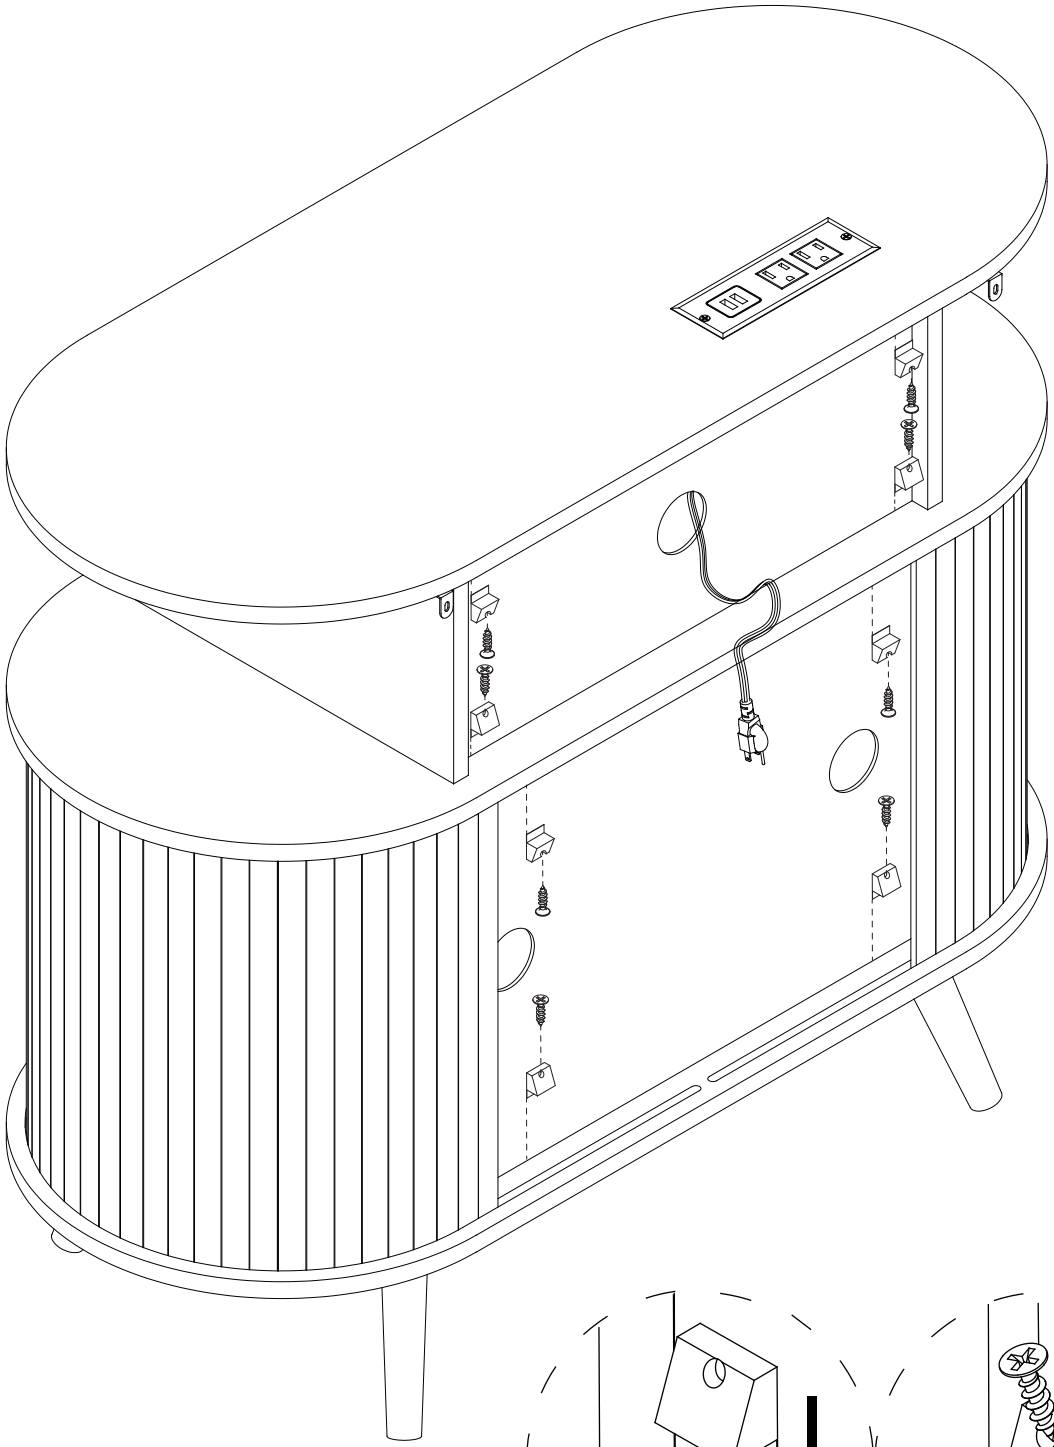


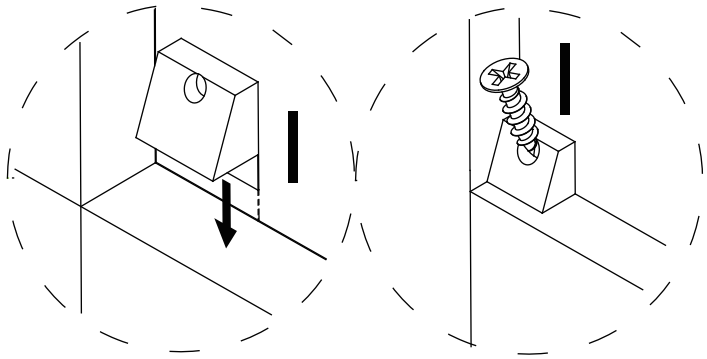

I		8pcs

STEP15

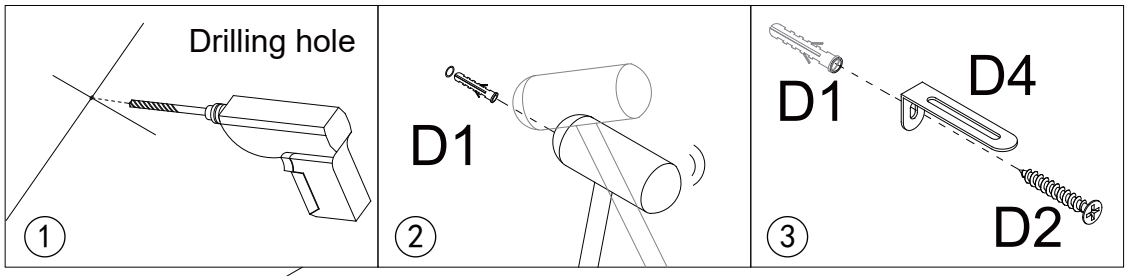

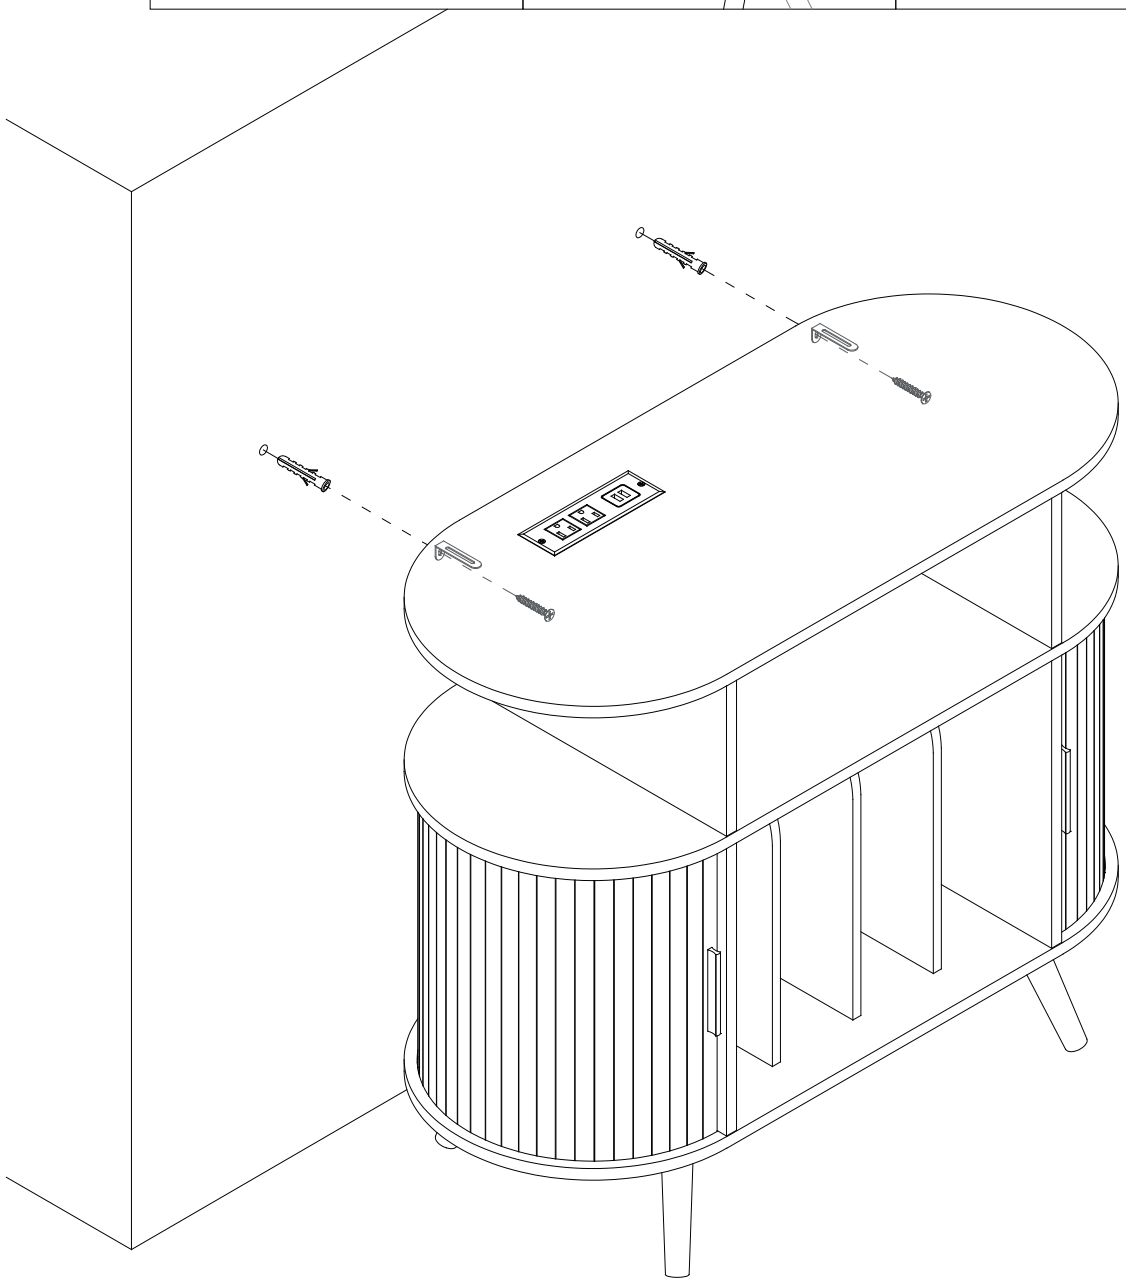

Drill a hole in the wall, then hammer the D1 into the wall with a hammer.

Note: Follow step
link D4 and D1 with a D2 using a screwdriver,and assembly it tightly.

Instructions for use: The cabinet legs should be designed to avoid lateral stress.
When moving, please lift vertically off the ground.
Dragging may cause loose connectors, affecting stability and service life.

D		2pcs