


# RVA6104

## Bathtub Popup Drain

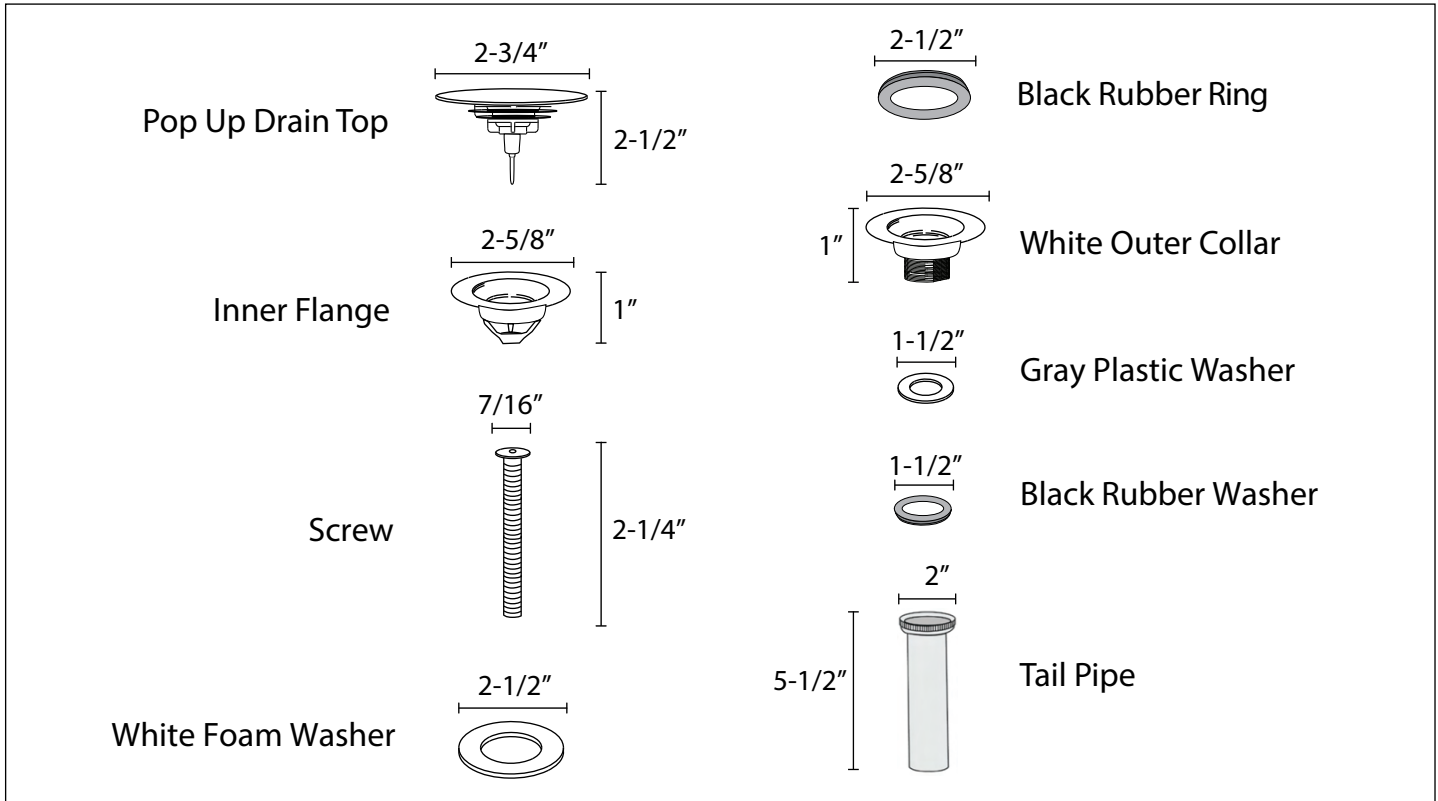

### INSTALLATION GUIDE

Note: This pop-up drain assembly connects your tub to your floor plumbing. You will need to prepare your floor plumbing properly, or have a rough-in kit in place on the floor. We recommend the OS&B Freestanding Tub Rough-in.

1. Lay the tub on its side. Have some blankets on the floor to prevent damage to the sides of the tub.
2. Insert the **Inner Flange** and **White Foam Washer** through the top of the tub's drain opening.
3. From under the tub, place the **Black Rubber Ring** and **Outer Collar**.
4. Insert the **Screw** from inside the **Inner Flange** and screw all the way into the **Outer Collar**.  
Tighten fully with a flat head screwdriver.
5. Attach the **Tail Pipe** to the bottom of the **Outer Collar** (make sure you have the **Grey Plastic Washer** and the **Black Rubber Washer** in place) and tighten fully with your hand.  
The **Tail Pipe** should now be tightly connected and not move if you try to twist by hand.
6. Push the **Popup Drain Top** into place.
7. Follow the instructions for your floor plumbing rough-in kit. The **Tail Pipe** of the drain assembly will slide into your floor rough-in.

Pop Up Drain Top

Inner Flange

White Foam Washer

Screw



Black Rubber Ring

White Outer Collar

Gray Plastic Washer

Black Rubber Washer

Tail Pipe



cUPC certified by IAPMO to meet US and Canada plumbing standards.  
Codes compliance: ASME A112.19.3/CSA B45.4

**RUVATI®**

Address: 2705 Meister Pl, Round Rock, TX 78664

USA Phone: 1.855.478.8284

Email: [support@ruvati.com](mailto:support@ruvati.com)