


wampat™

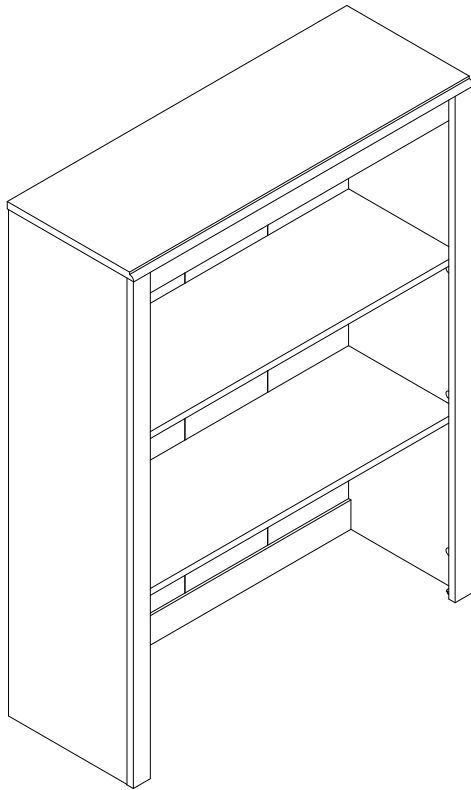


ASSEMBLY INSTRUCTIONS

**/ MODEL
W08HD080L W08HD081N**



IMPORTANT : please read this manual carefully before beginning
assembly of this product. keep this manual for future reference.


wampat

WHAT'S IN THE BOX

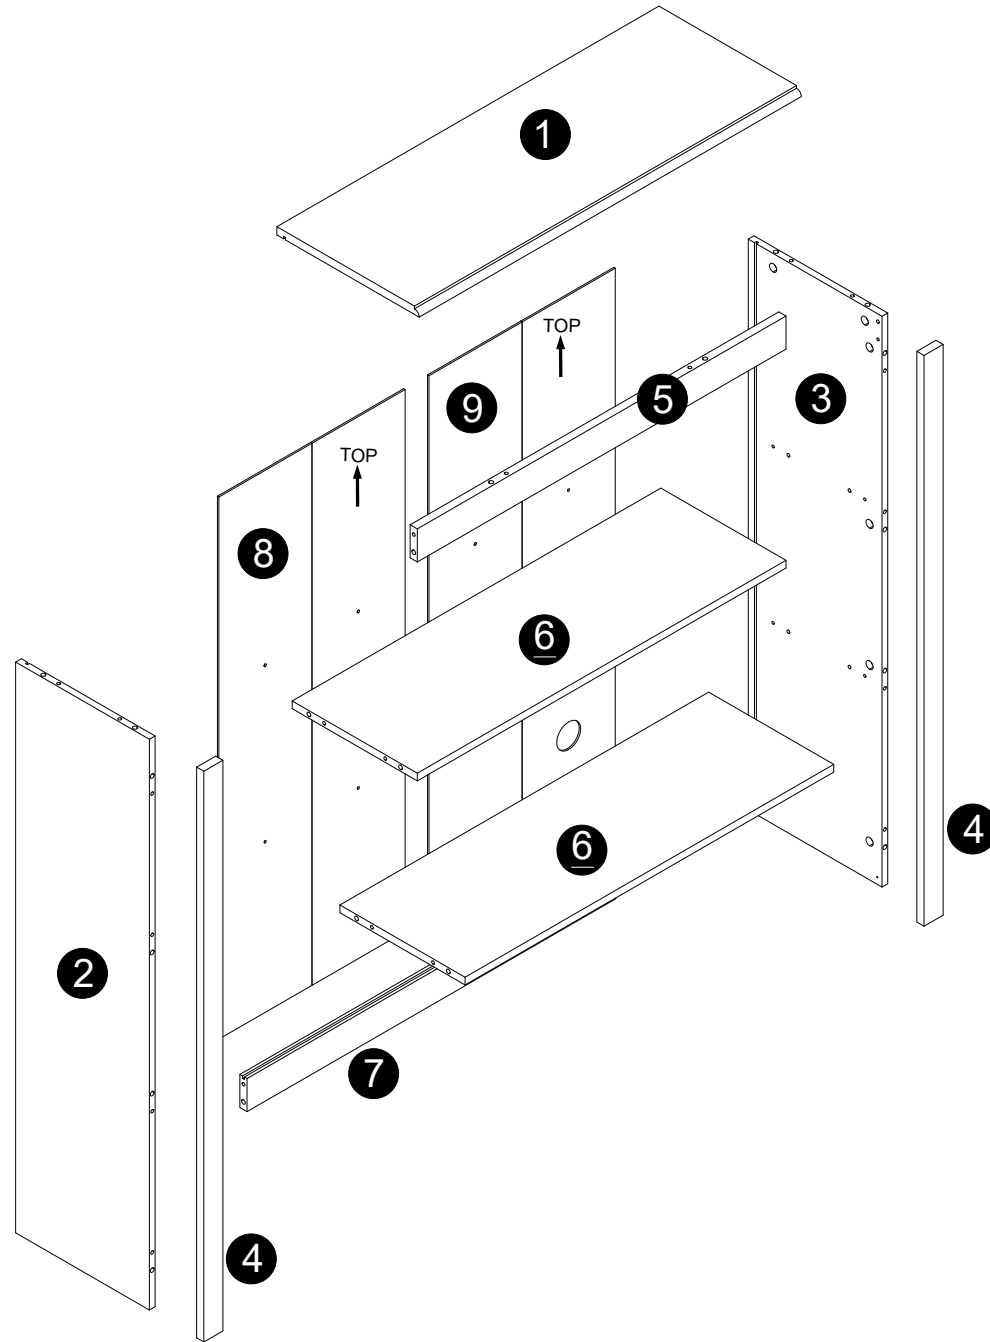


WHAT'S IN THE BOX

 Wooden dowel Ø6x30mm A x 26	 Cam bolt Ø6x35mm B x 26	 Cam lock Ø15x9mm C x 26	 Screw Ø3.5*14 D x 8
 Glue tube E x 1	 Plastic wedge F x 10	 Flat-head screw Ø3x16mm G x 10	 L-bracket H x 2
 Plastic wedge I x 2	 Screw Ø3.5x12mm J x 8	 Screw Ø4*12 K x 2	 Screw Ø4*25 L x 2
 Plastic strap M x 2	 Nut N x 2		

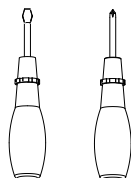


Tools Required
(Not included)

- The provided glue(E) is to secure wood dowels(A) in place .
When first inserting dowels, locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel .
Wipe away excess glue immediately.

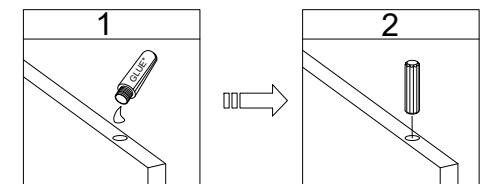




- In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together.
Wipe away excess glue immediately.

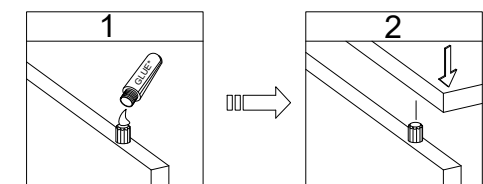

INSTALLATION STEPS

1




- Unpack the unit and confirm that you have all the hardware and required parts.
Assemble the unit on a carpeted floor or the empty carton to avoid any scratches.

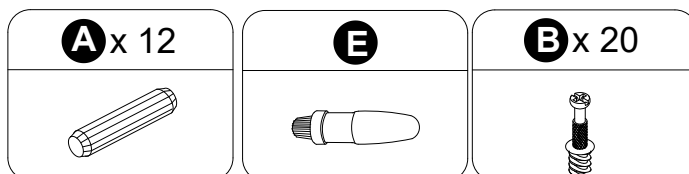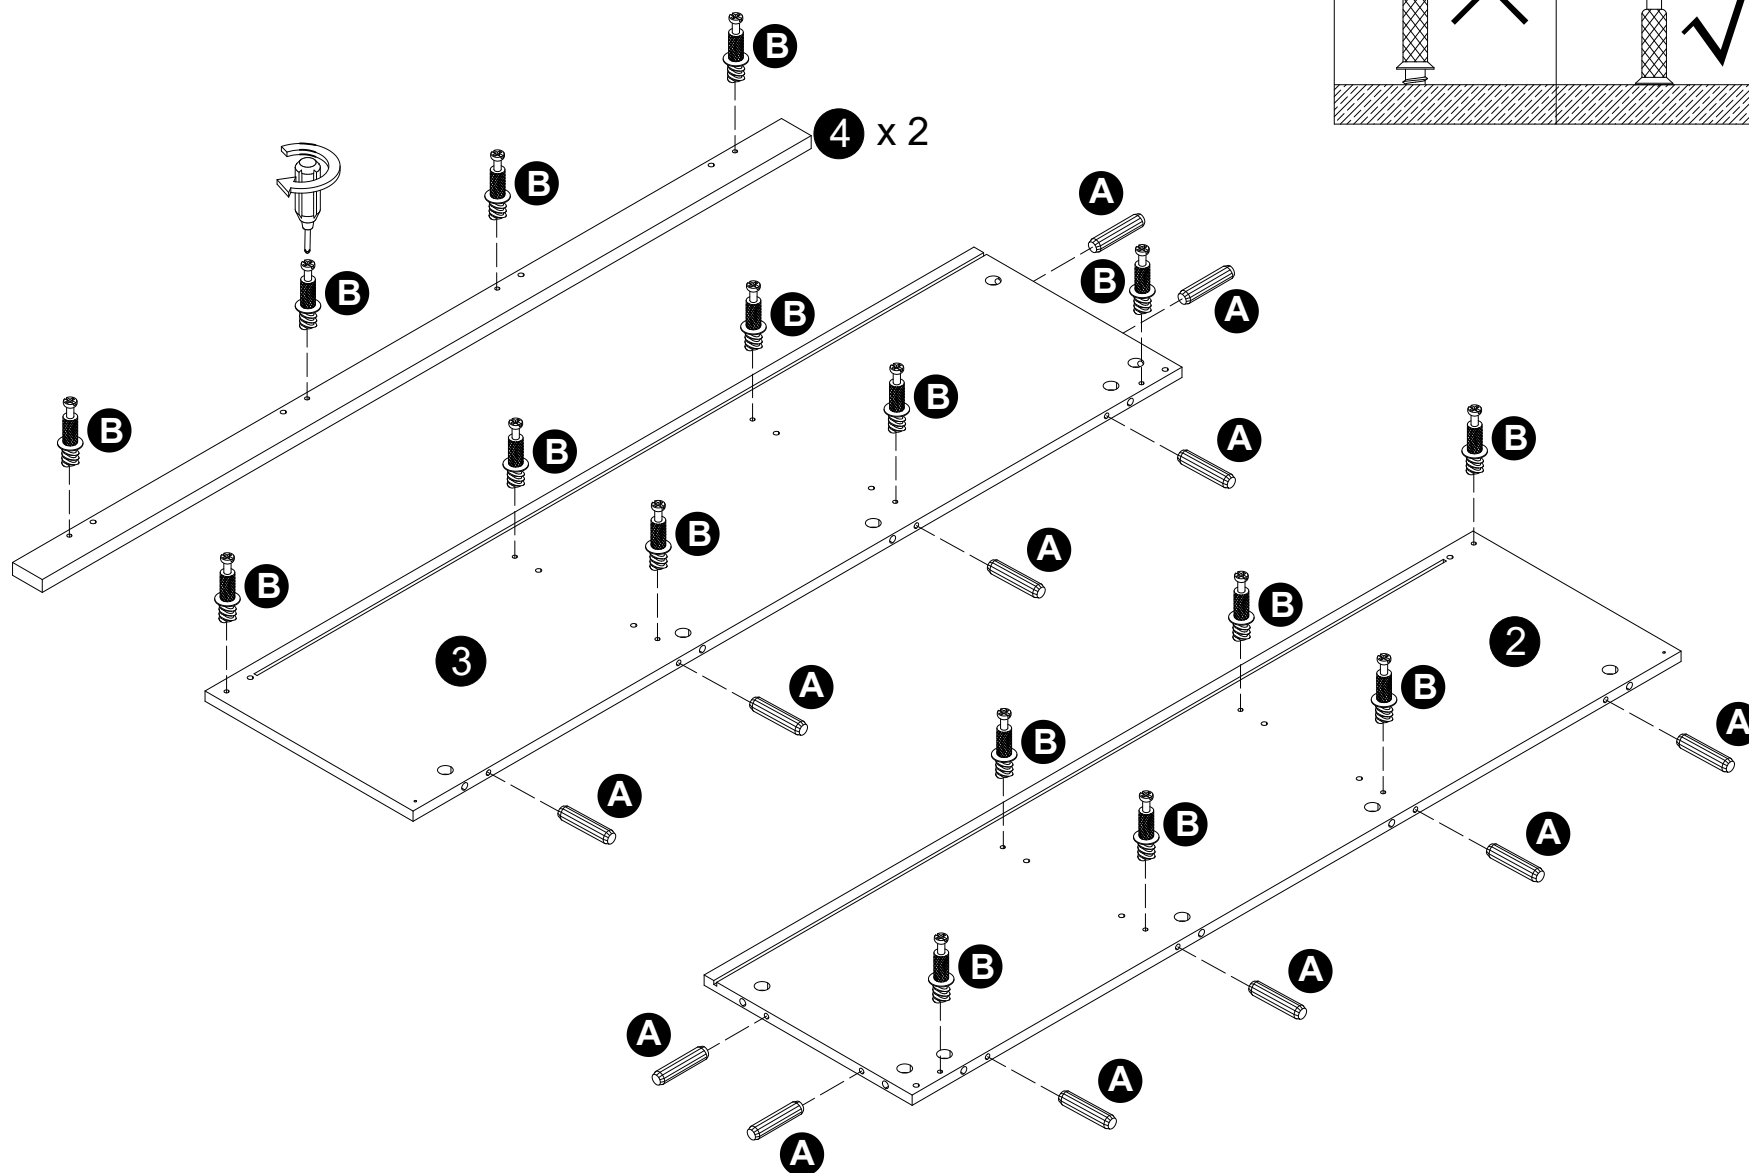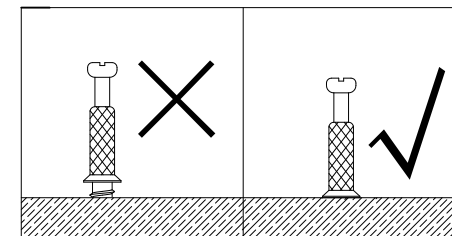

- Screw cam bolts (B) into panels (2,3,4).
- Insert dowels (A) into panels (2,3).

2







INSTALLATION STEPS

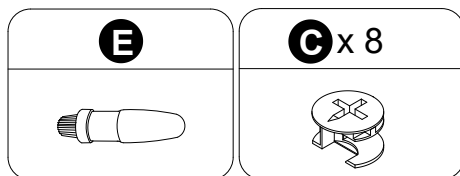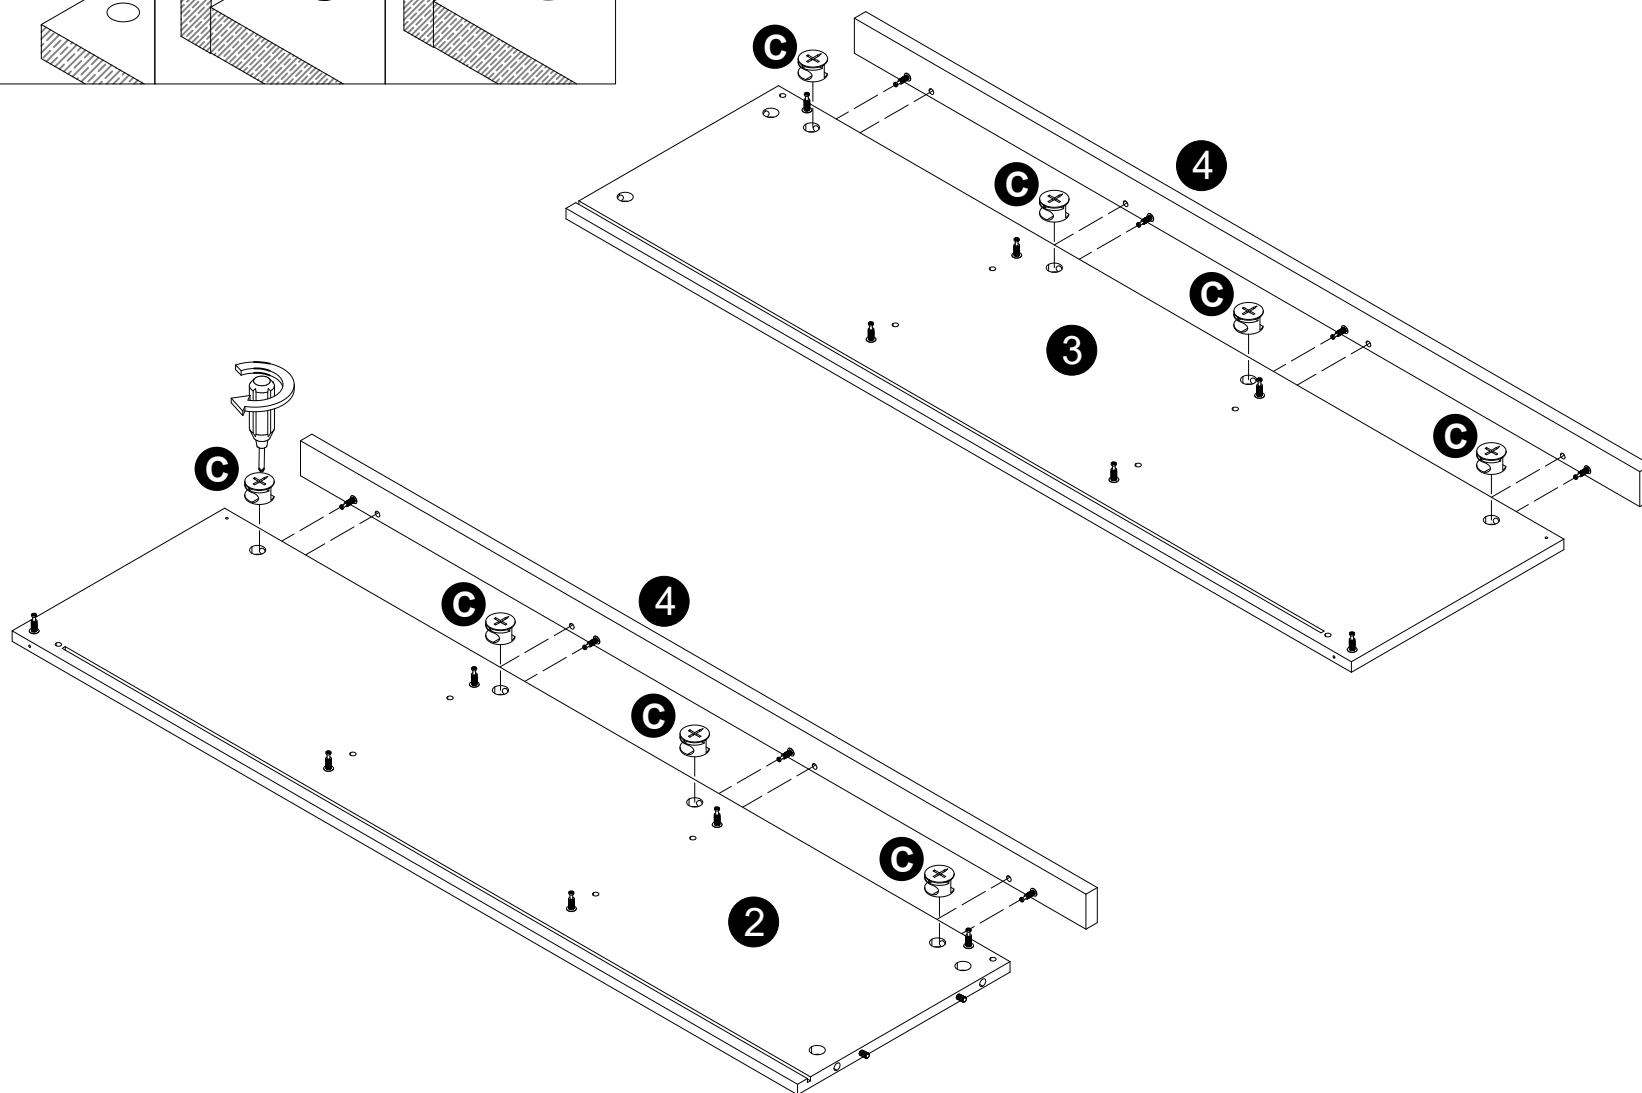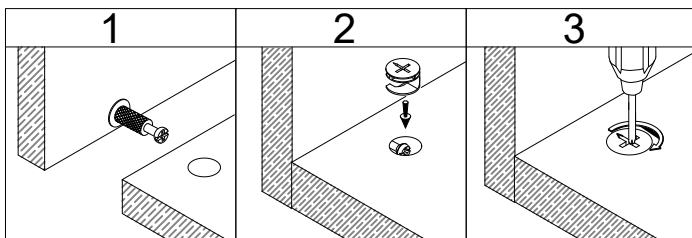

- Attach panels (4) to panels (2,3).
- Insert and secure cam locks(C) to panels (2,3) to lock it.

3






INSTALLATION STEPS

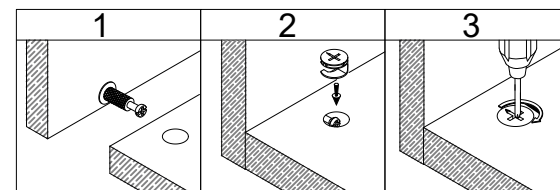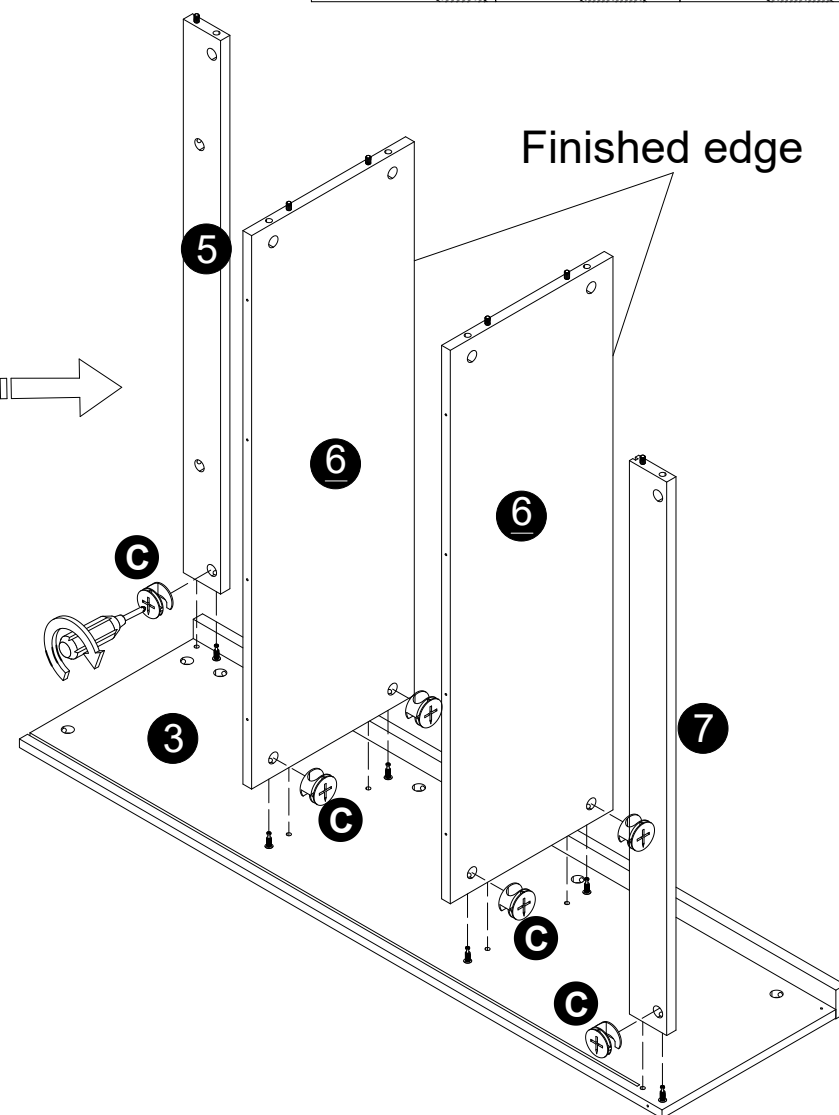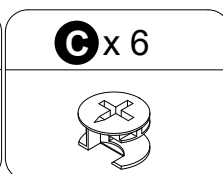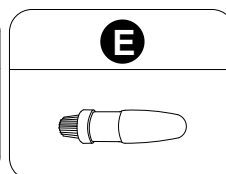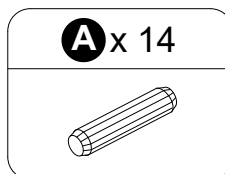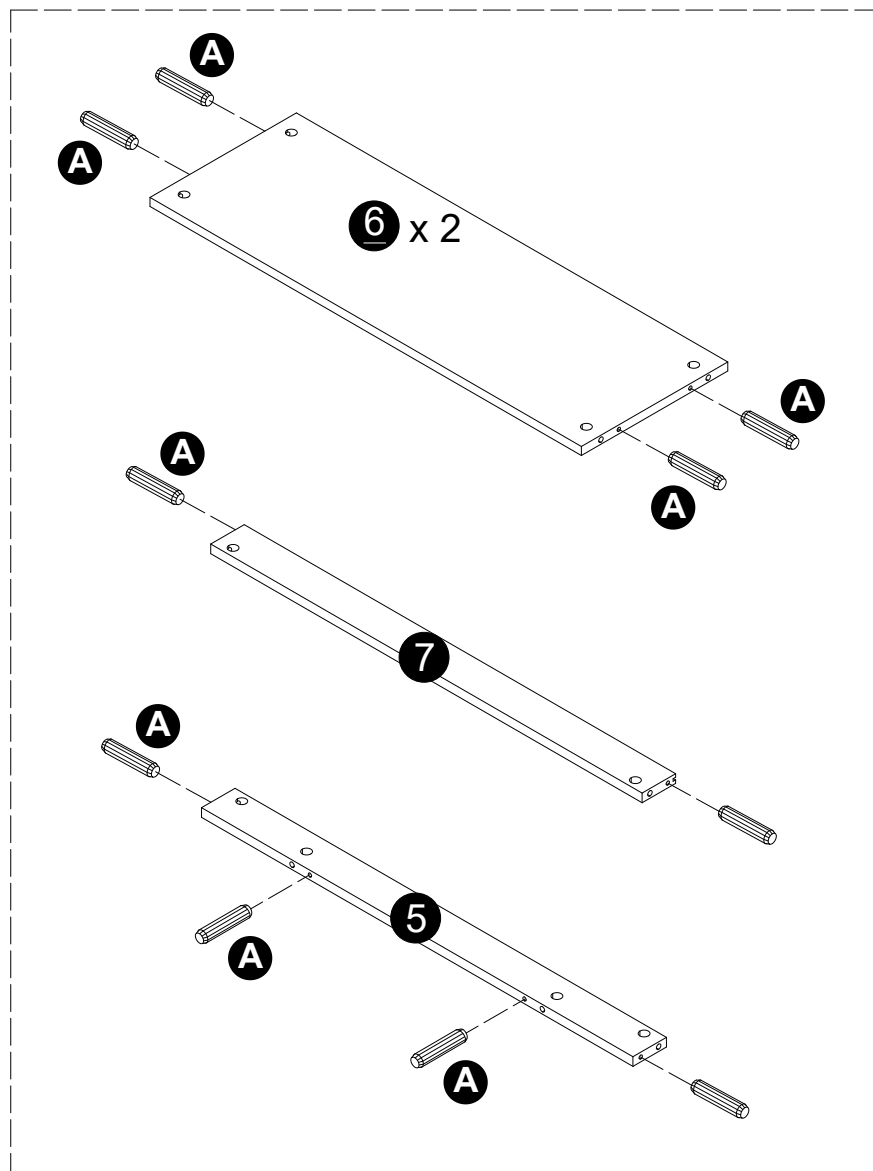

- Insert dowels (A) into panels (5,6,7).
- Attach panels (5,6,7) to panel (3).
- Insert and secure cam locks(C) to panels (5,6,7) to lock it.

4


INSTALLATION STEPS

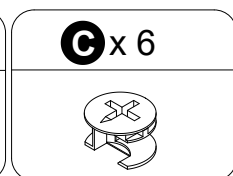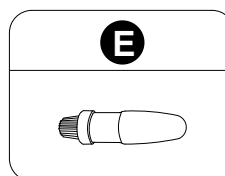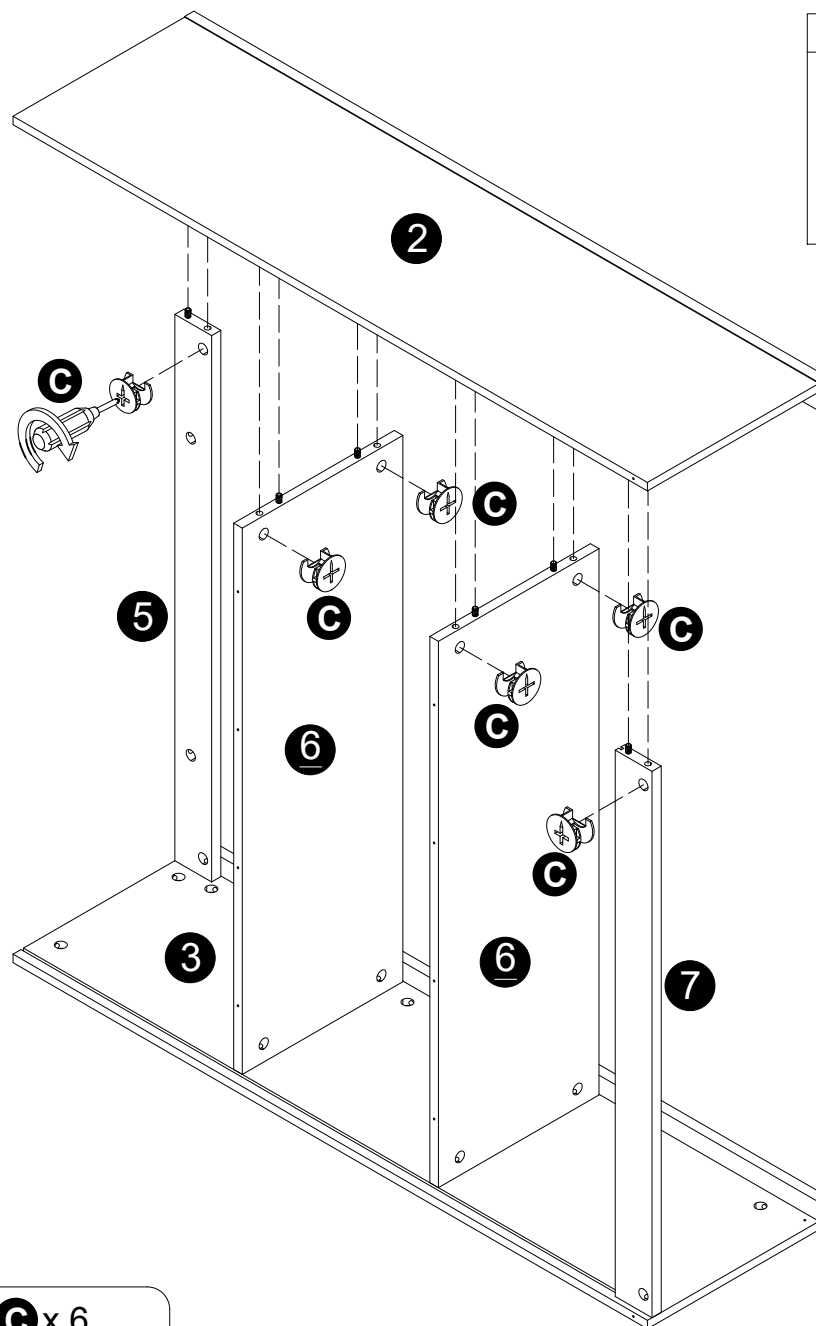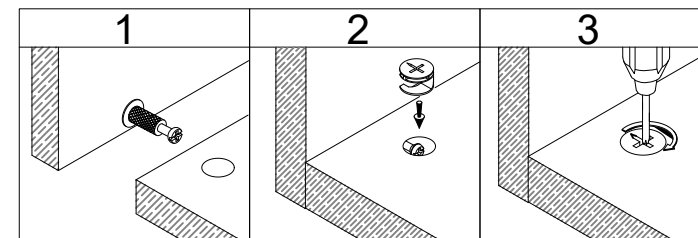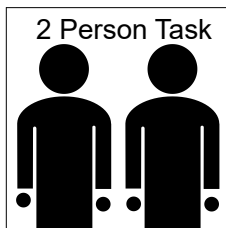

- Attach panel (2) to panels (5,6,7).
- Insert and secure cam locks(C) to panels (5,6,7) to lock it.

5





INSTALLATION STEPS

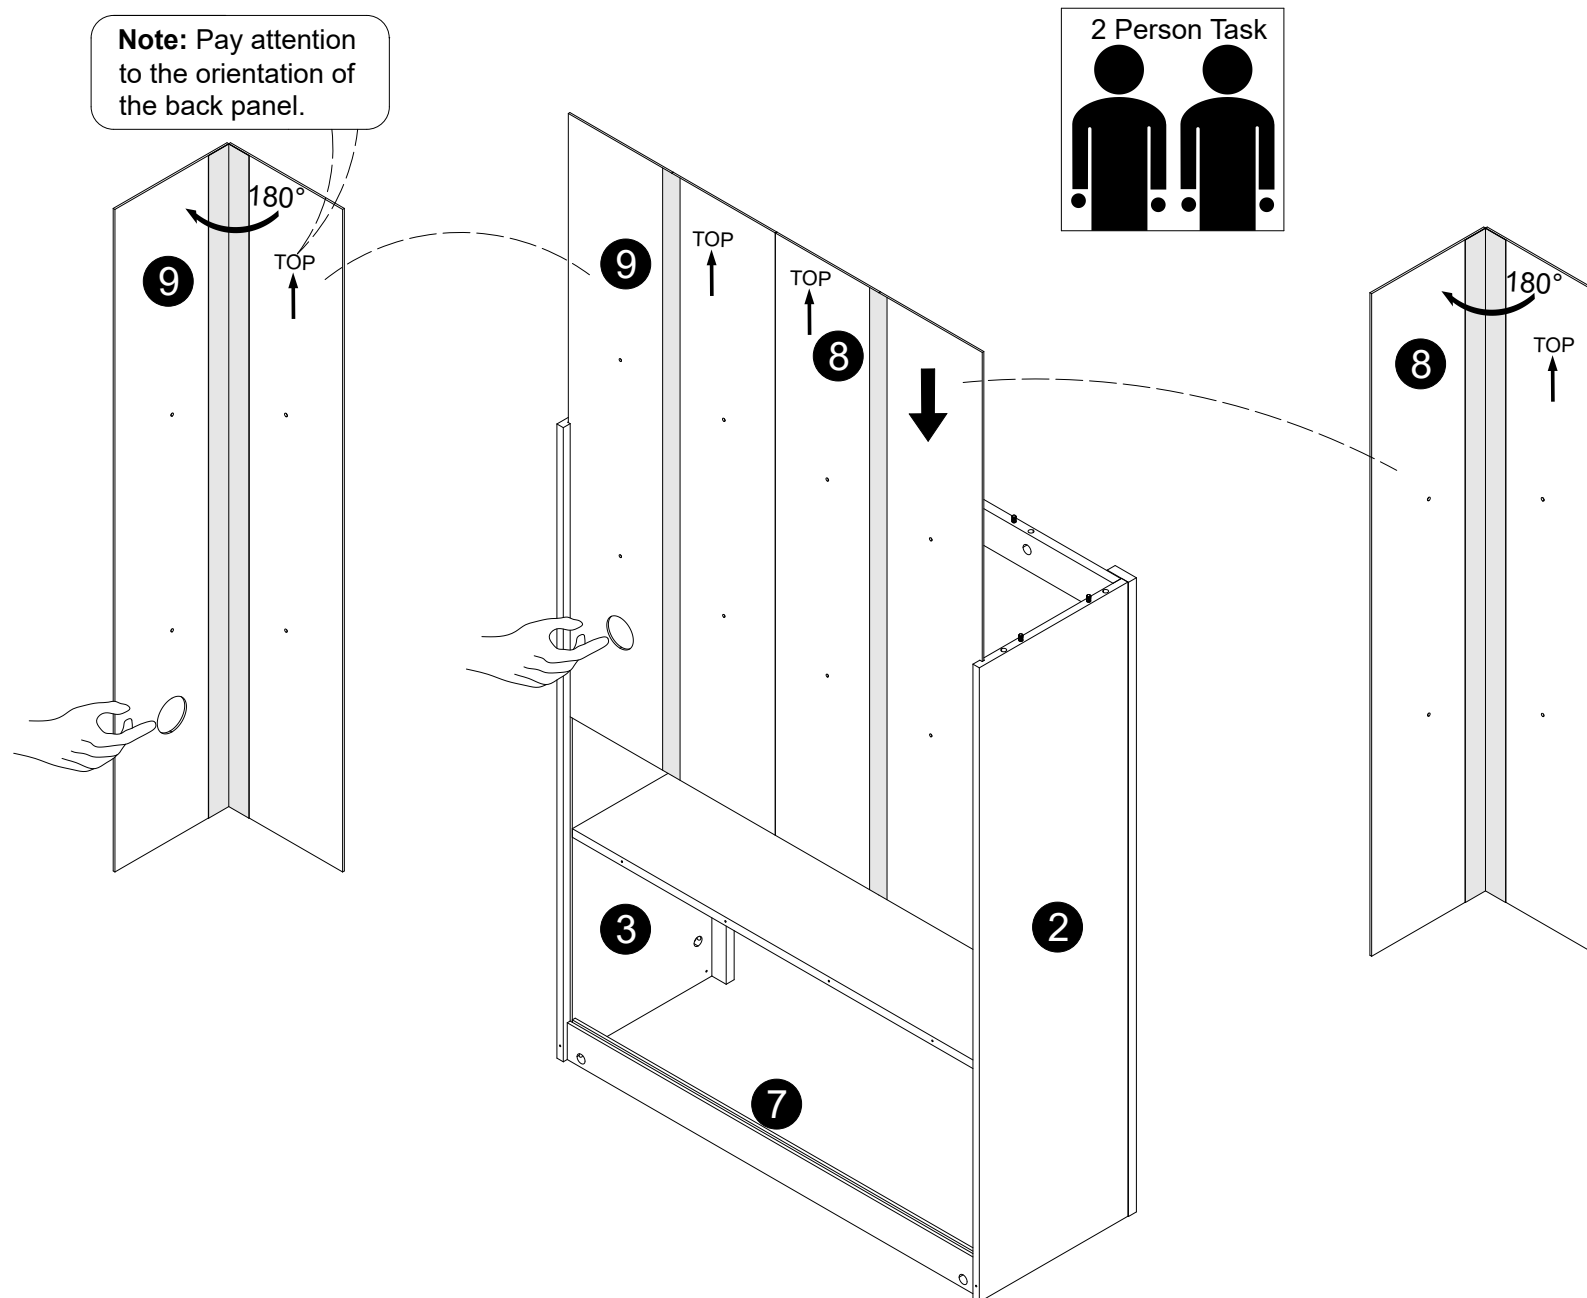

· Carefully slide parts (8,9) into place along the back of the assembly.

6



INSTALLATION STEPS

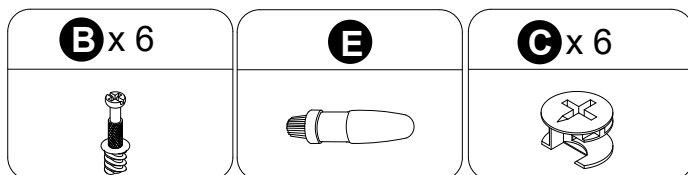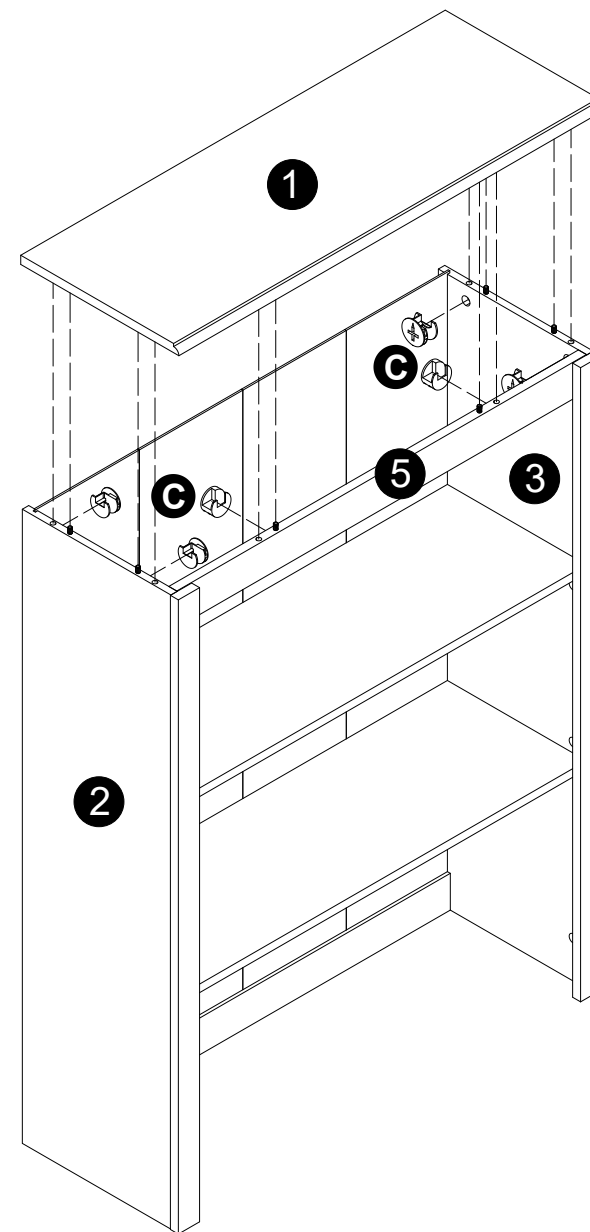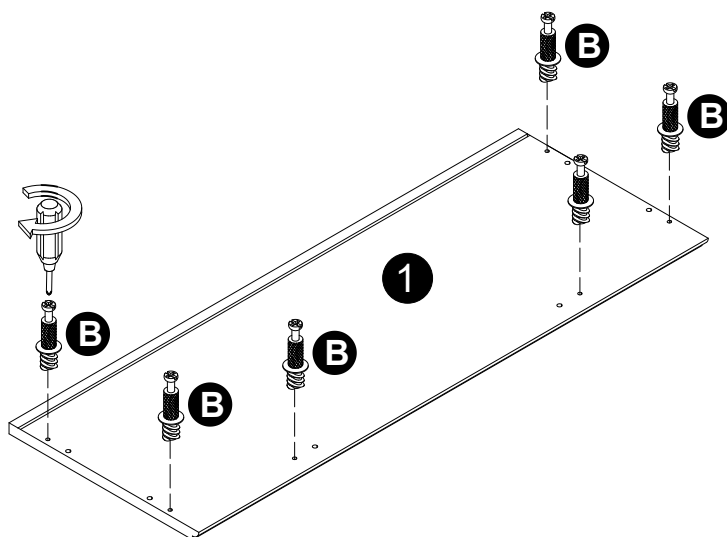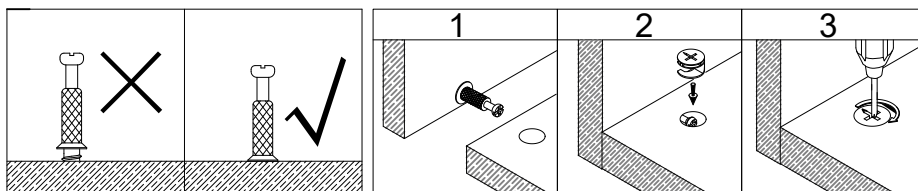

- Screw cam bolts (B) into panel (1).
- Attach panel (1) to panels (2,3,5).
- Insert and secure cam locks (C) to panels (2,3,5) to lock it.

7

INSTALLATION STEPS

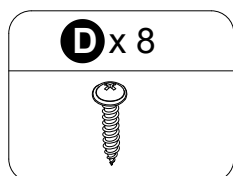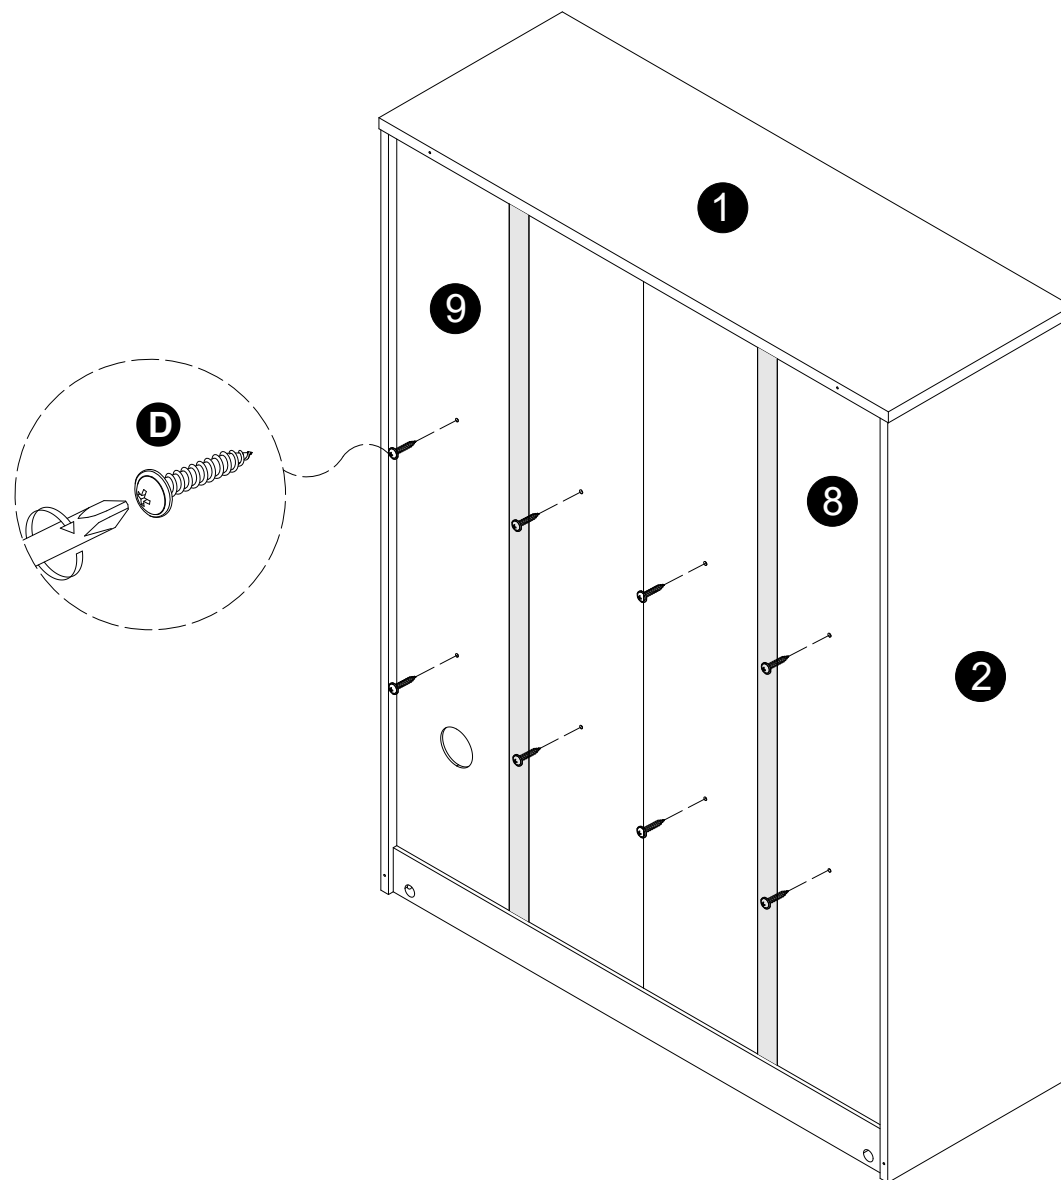


· Attach screws (D) into panels (8,9)

8

INSTALLATION STEPS

NOTE: Ensure the cabinet body is stable, please make sure to lock the plastic wedge.

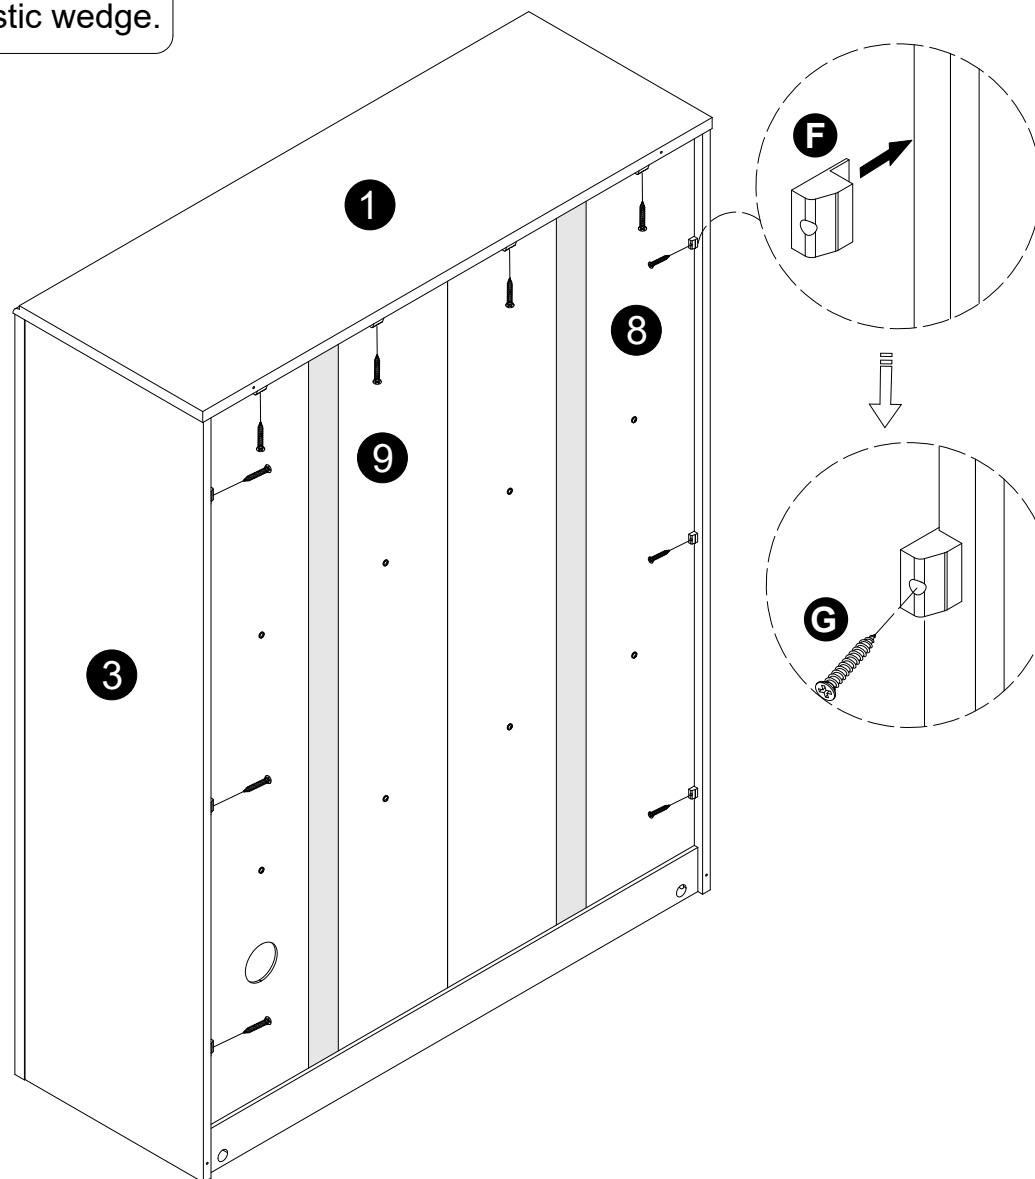

F x 10





G x 10




· Secure parts (F) with screws (G) as per diagram.

9

INSTALLATION STEPS

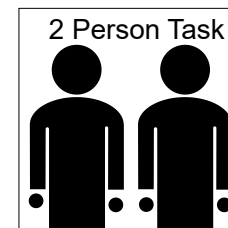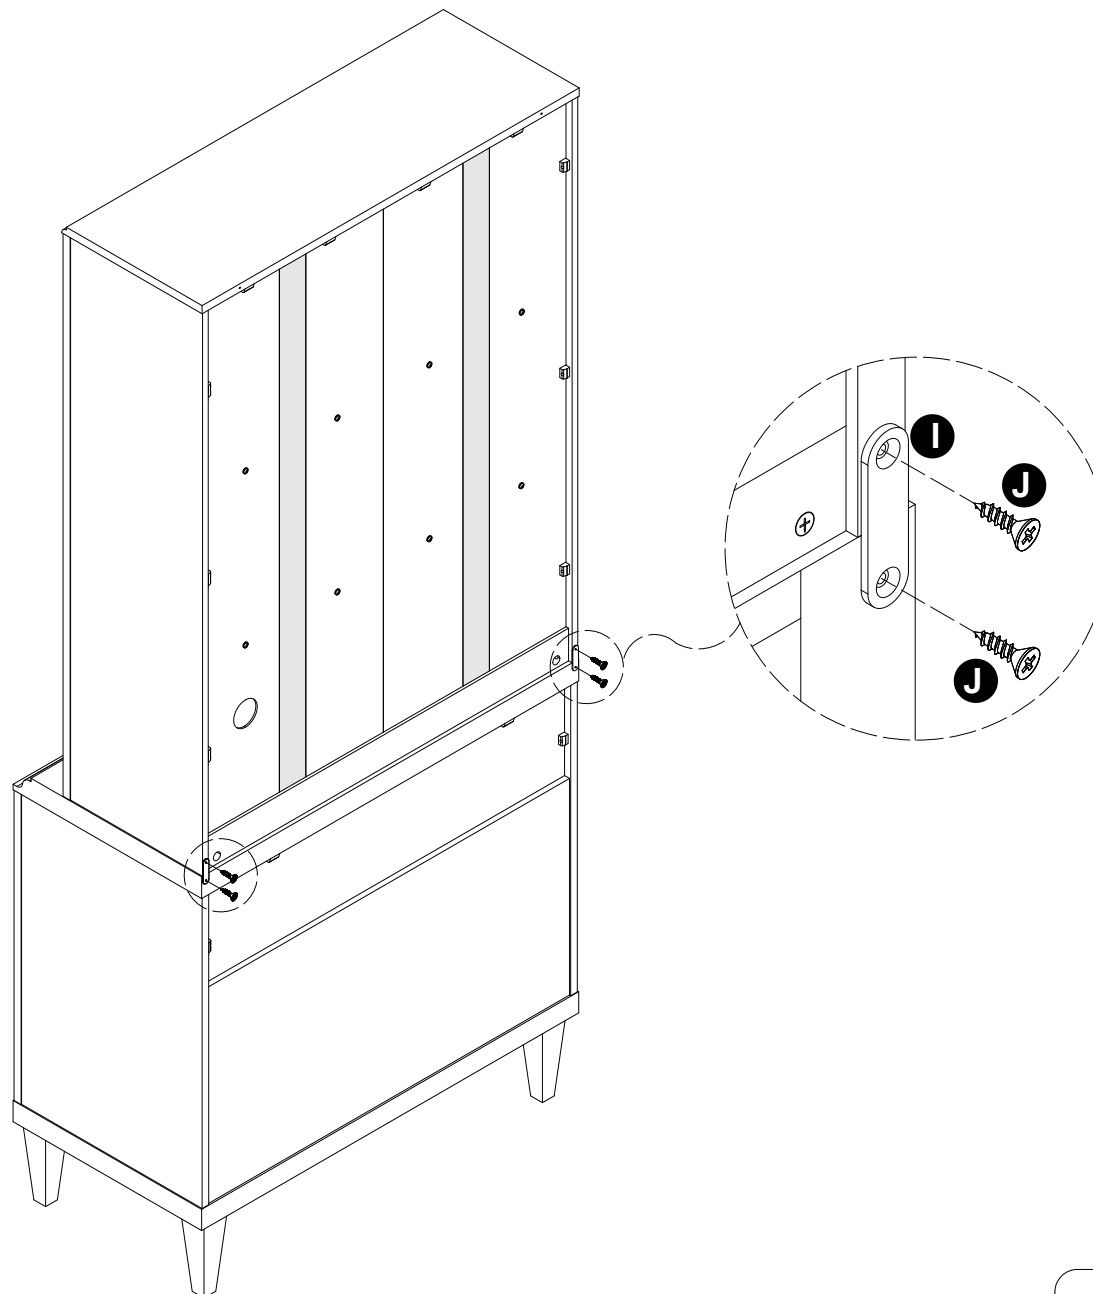


· Secure parts (I) with screws (J) as per diagram.

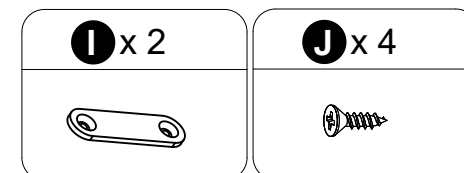

10

INSTALLATION STEPS

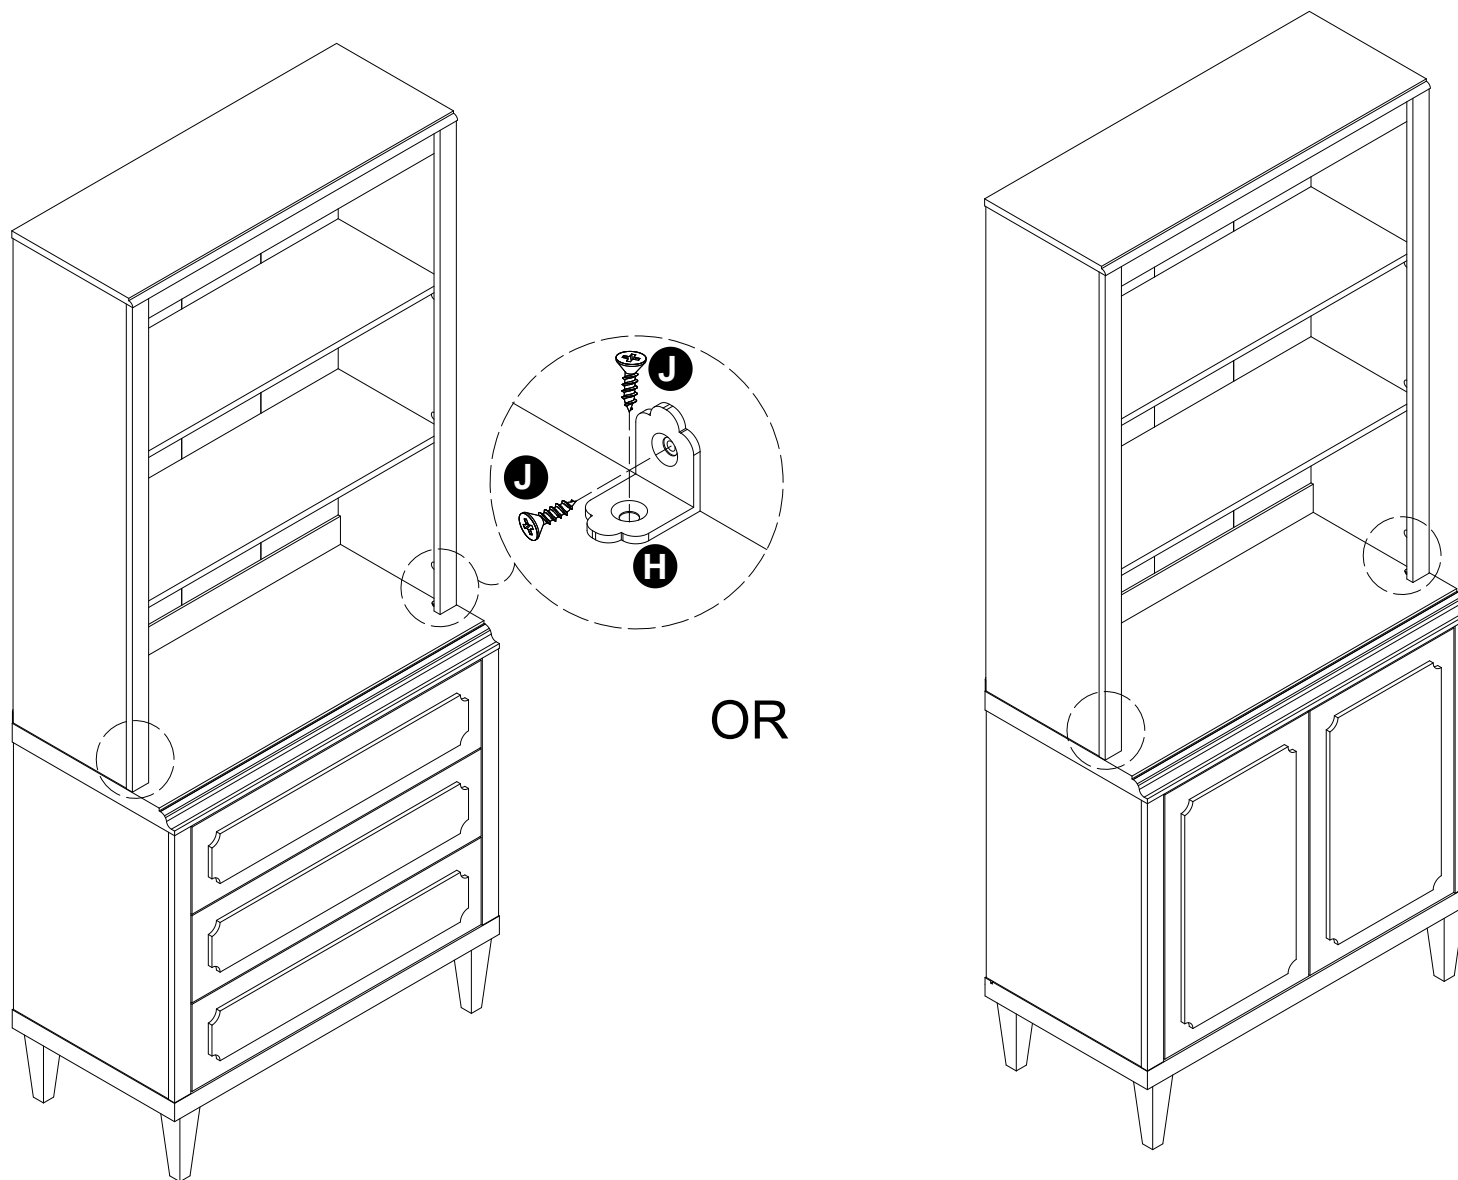


· Secure parts (H) with screws (J) as per diagram.

H x 2	J x 4


11

INSTALLATION STEPS


Step ①

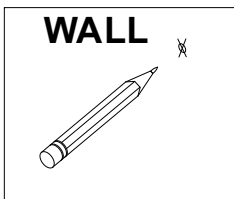


Step ②

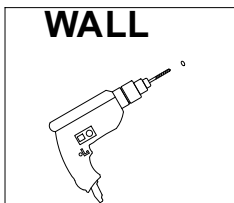


Step ③

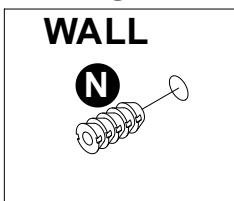

Step ④

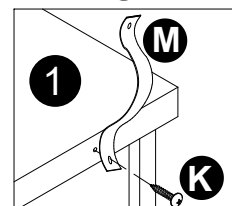

Step ⑤

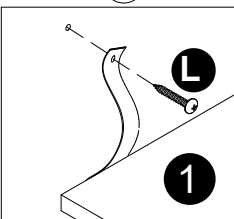


WARNING

Serious or fatal crushing injuries can occur from furniture tipover.

To prevent tipover:

- * Install tipover restraint provided
 - * place heaviest items in the lowest drawers
 - * Unless specifically designed to accommodate, do not set TV or other heavy objects on the top of this product
 - * Never allow children to climb or hang on drawers, door, or shelves.
- Use of tipover restraints may only reduce, but not eliminate the risk of tipover**

Tools required: Phillips screwdriver, Power Drill, 15/64" Drill Bit and Rubber Mallet.

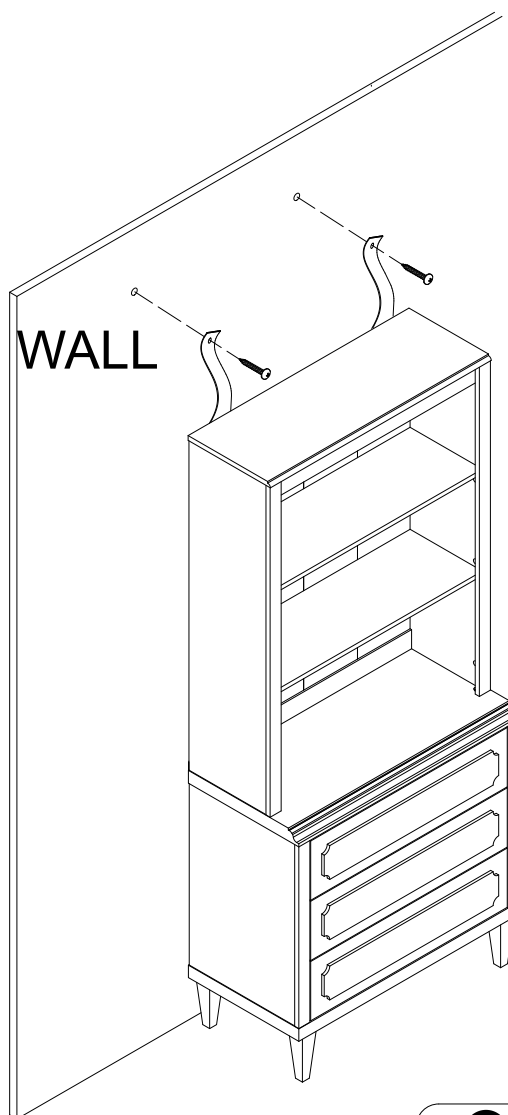

K x 2



L x 2



M x 2



N x 2



Dear customer:

Thanks for your purchase in our store.

Any questions, please contact us via Support @ s-wampat.com with below details:

- 1. Purchase platform & order number**
- 2. Model number & Instruction version#**
- 3. The detailed photo (faulty part, damage part, if some parts are missing,
please circle it/them on the manual instruction) and send to us.**

wampatTM



We'll reply as soon as we receive your message (usually within 24 hours).