



Assembly Instruction

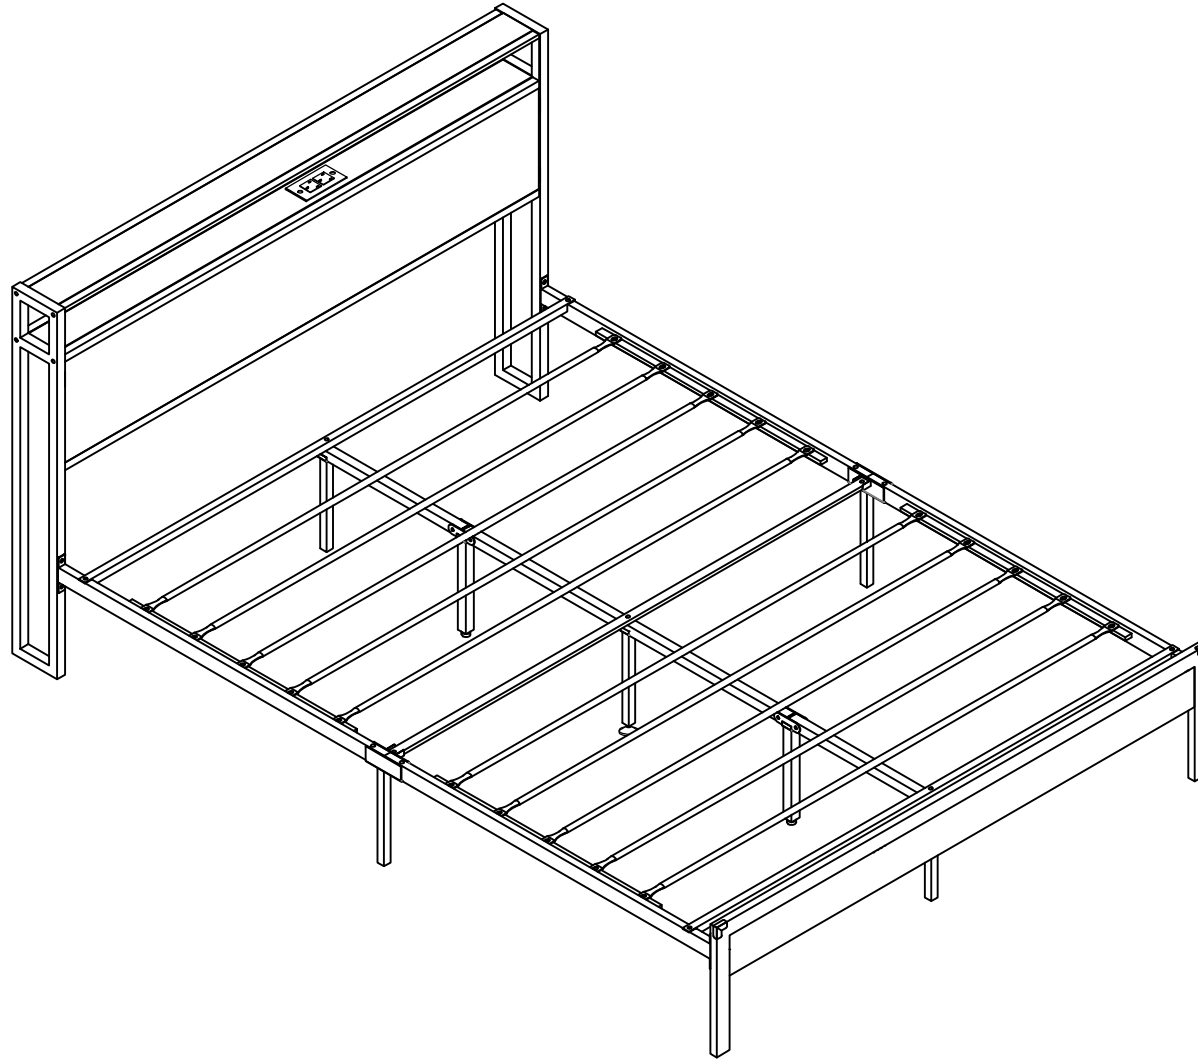

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Assembly Instruction

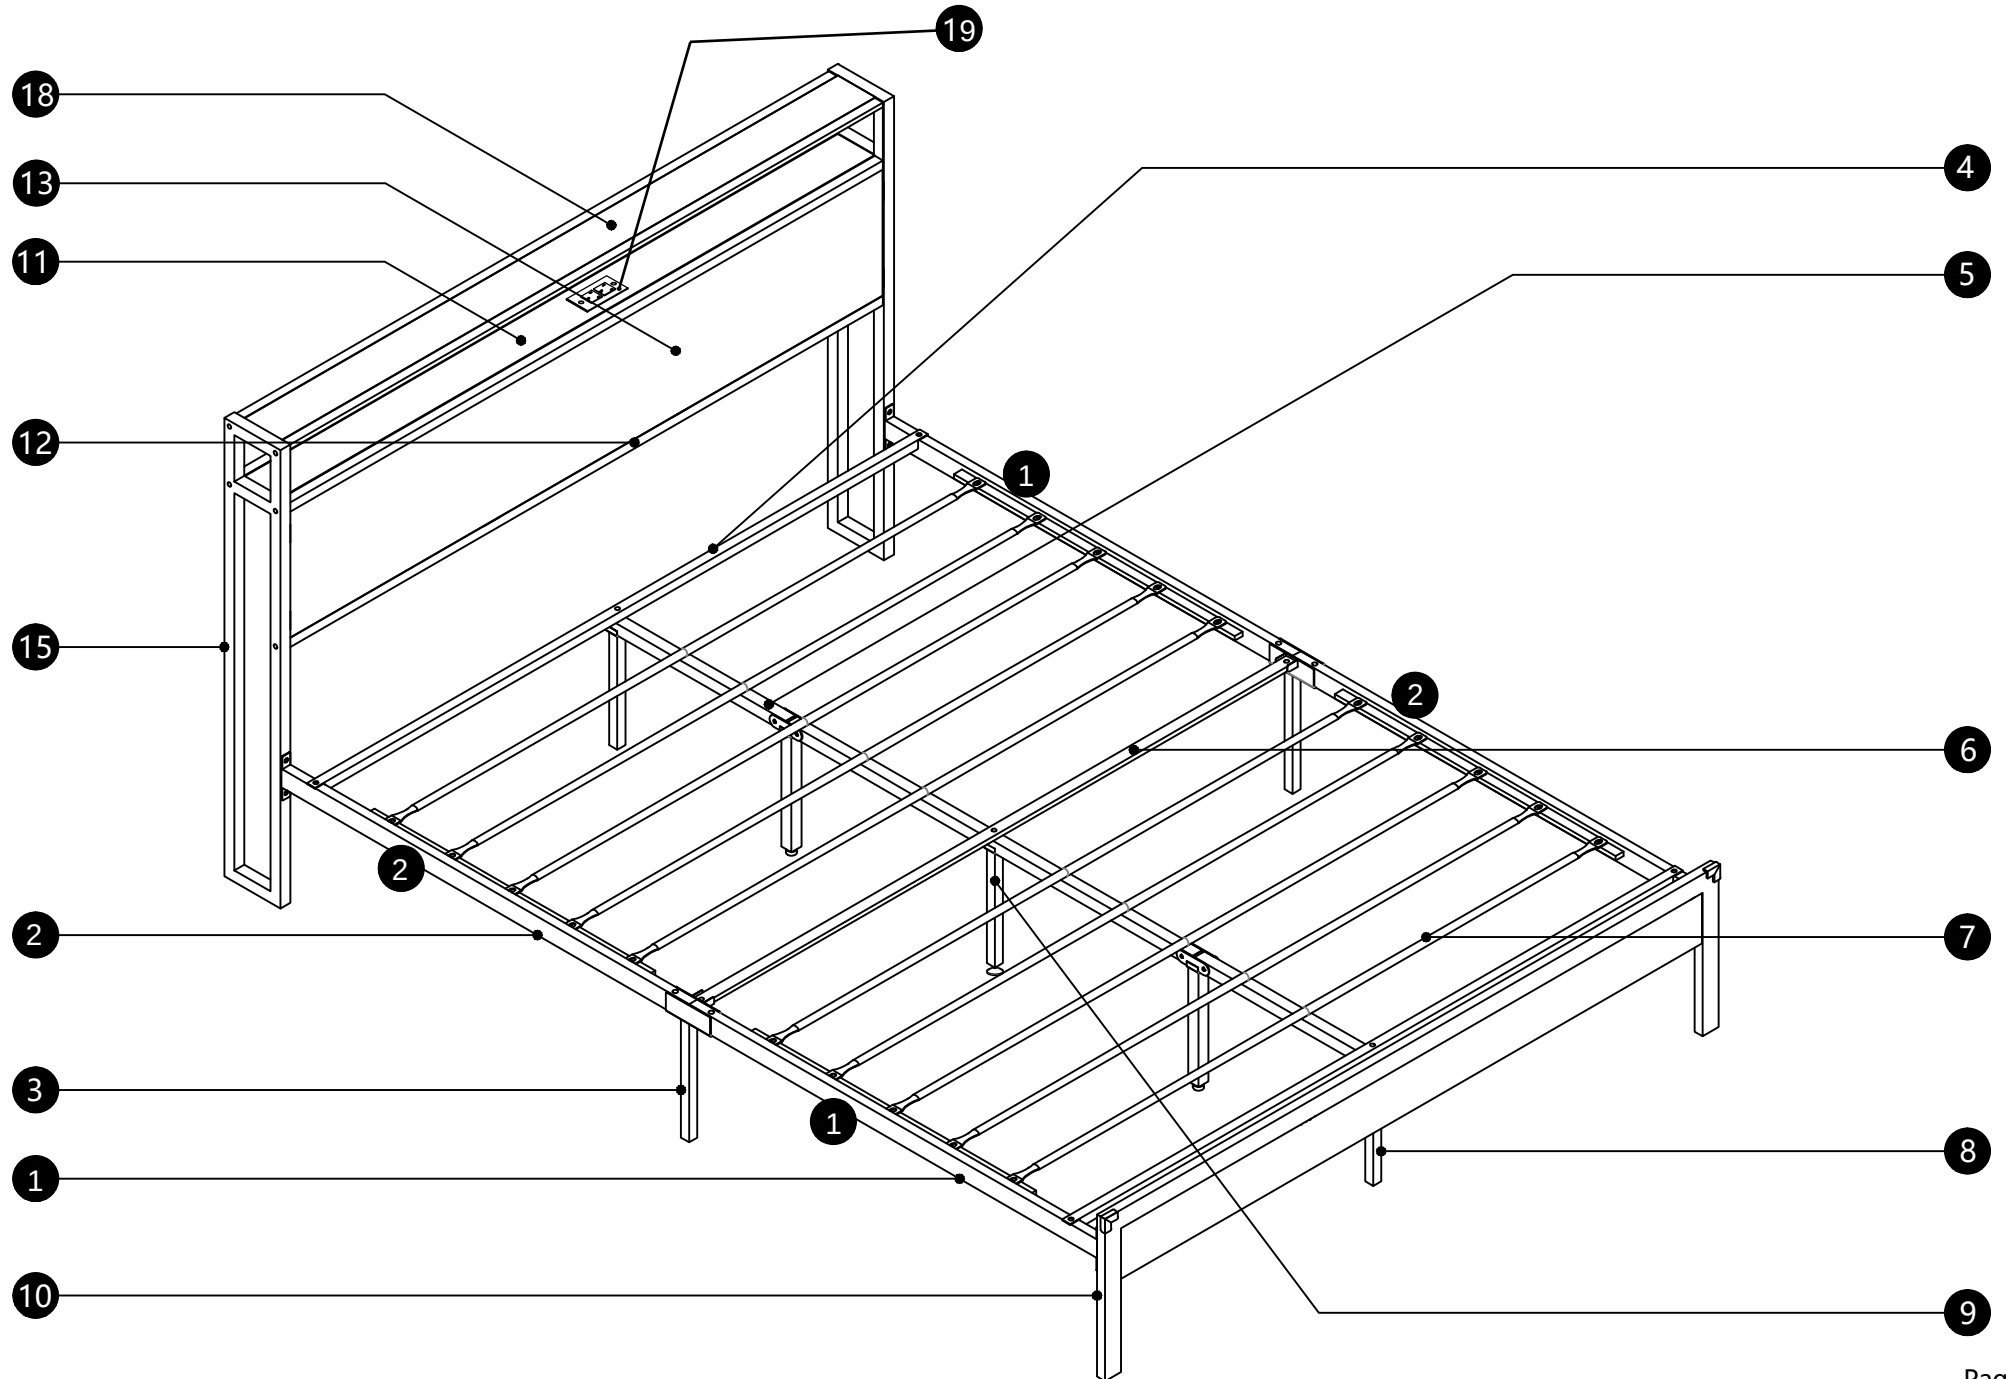


Assembly Instruction

Hardware arts



M6*15

A 20PCS



M6*45

B 10PCS



M8*13

C 6PCS



M4*10

D 2PCS




M8*20

D 14PCS




M8*55

E 7PCS



M8


F 1PC




M6

G 1PC

Part list

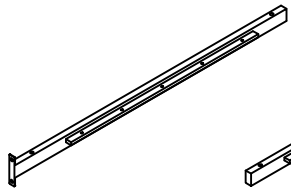


1 2PCS

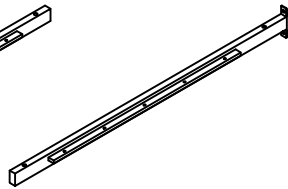


2 2PCS




3 2PCS

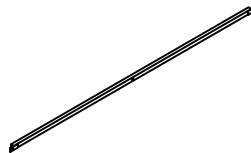


4 2PCS

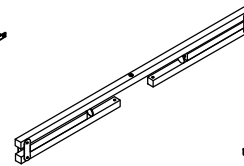

5 1 PC

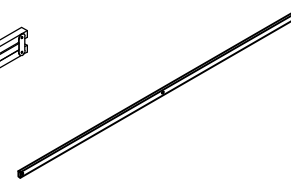


6 1PC

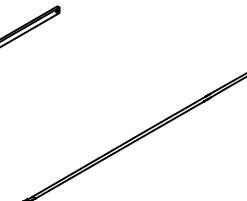


7 10PCS




8 2PCS




9 1PC

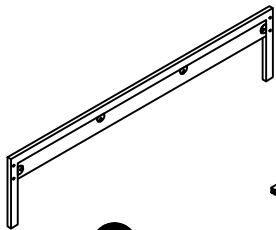


10 1PC

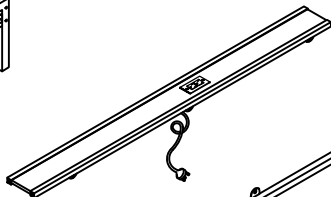

11 1PC

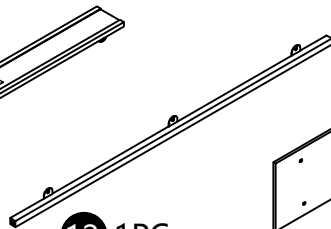

12 1PC

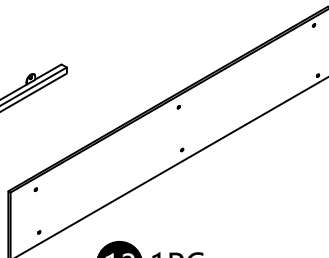

13 1PC



15 2PCS




Crash pads

16 2PCS



Double faced
adhesive tape

17 4PCS

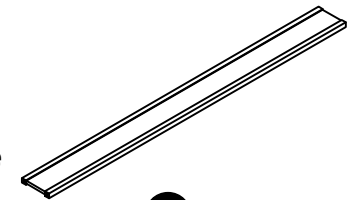


18 1PC



19 1PC

Assembly Instruction


Step:1



B X 6PCS




M4*10 X 2PCS

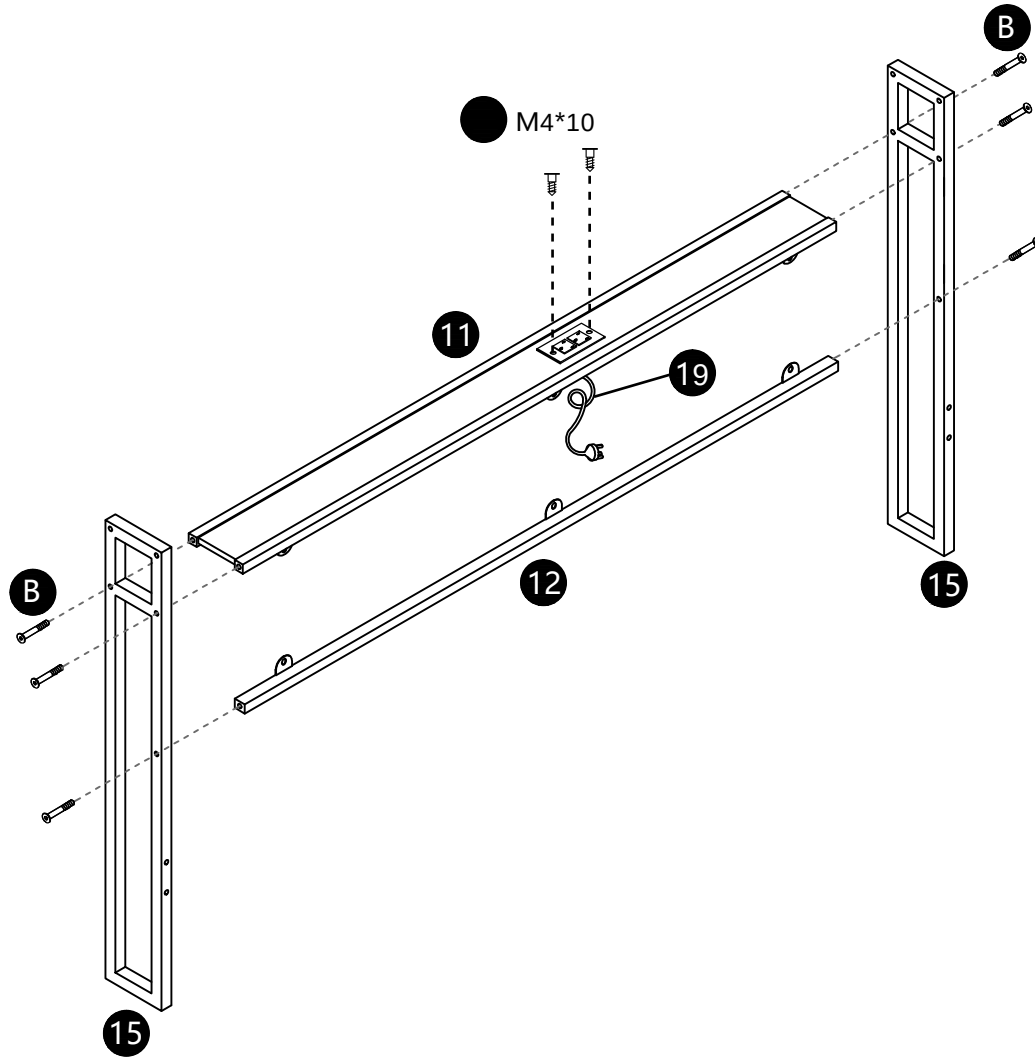

Step:2





C X 6PCS

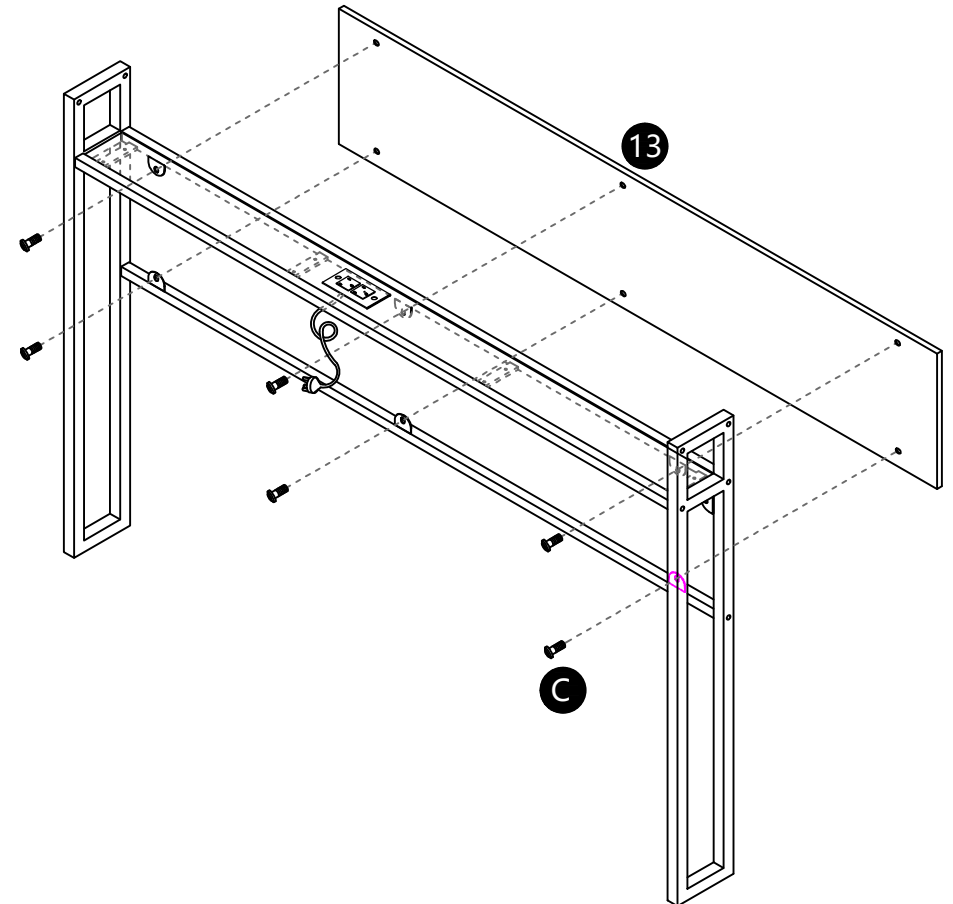


Assembly Instruction

Step:3

 M6*45 **B** X 4PCS

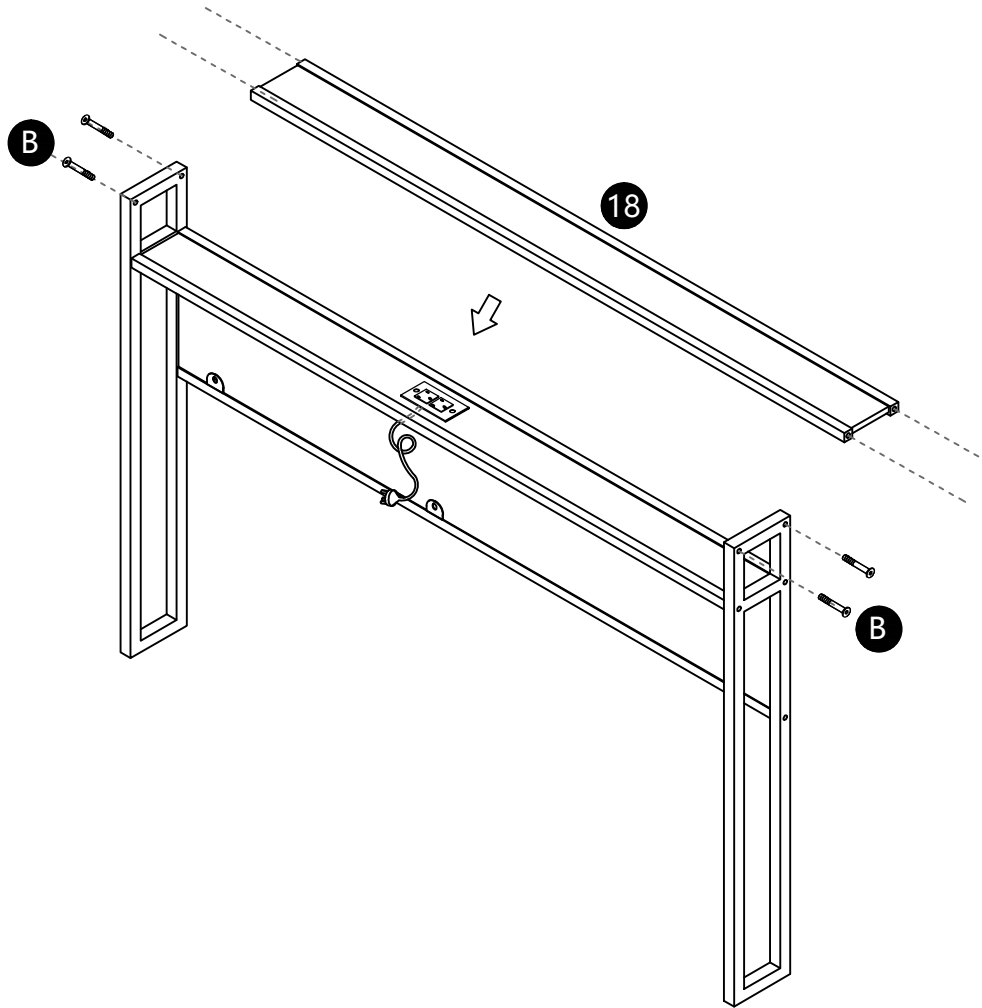


Step:4

 M8*55 **E** X 4PCS



Please pay attention to the direction arrow in the illustration to avoid reverse installation

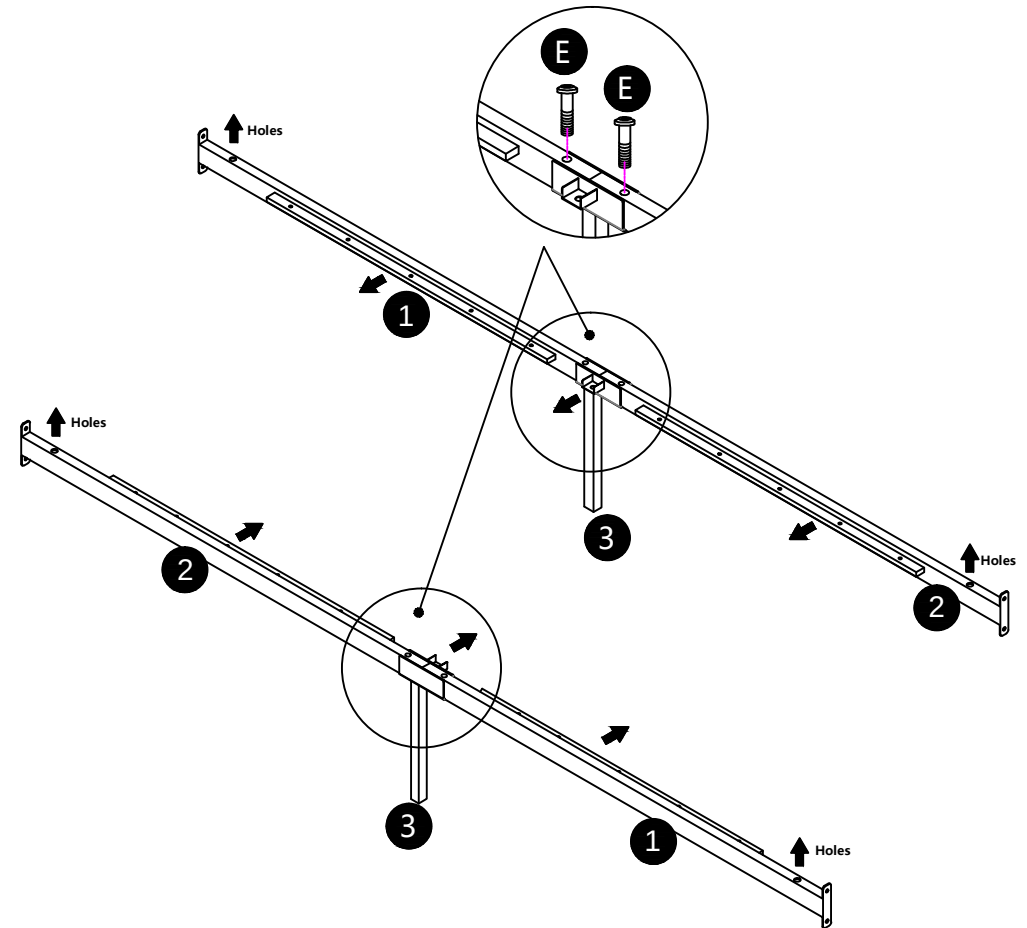


Assembly Instruction

Step:5




D X 8PCS

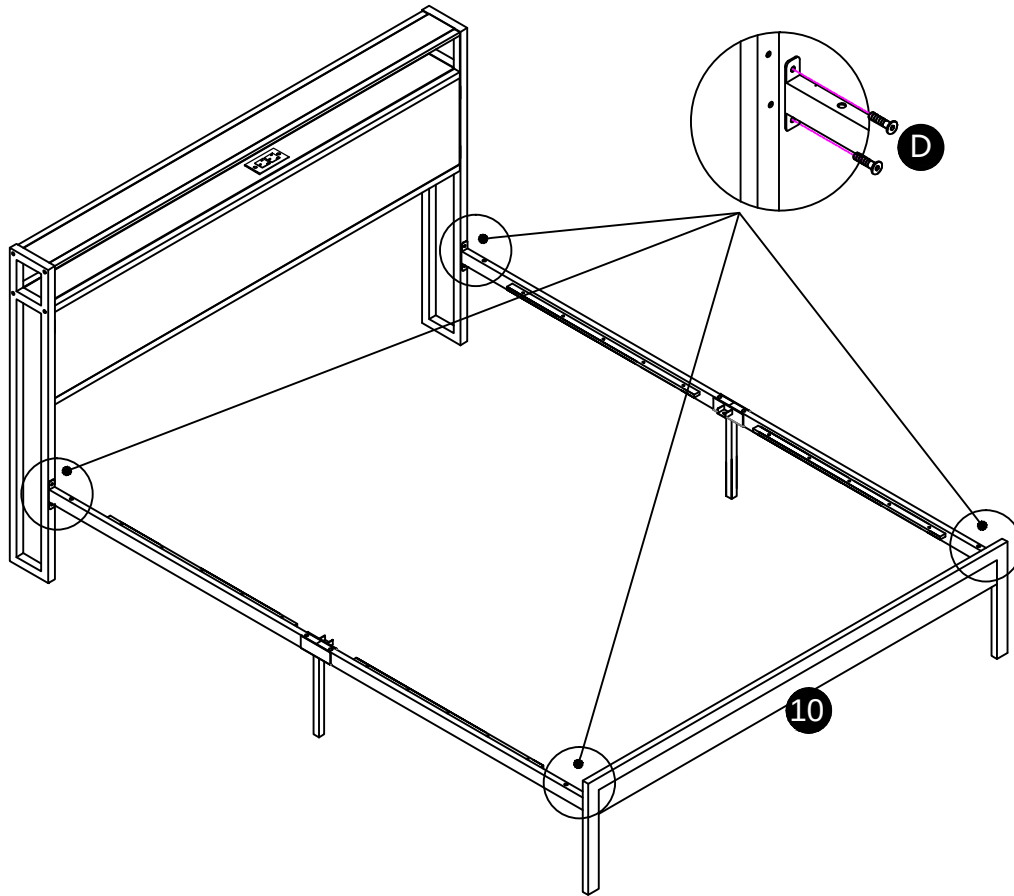

Step:6





D X 6PCS

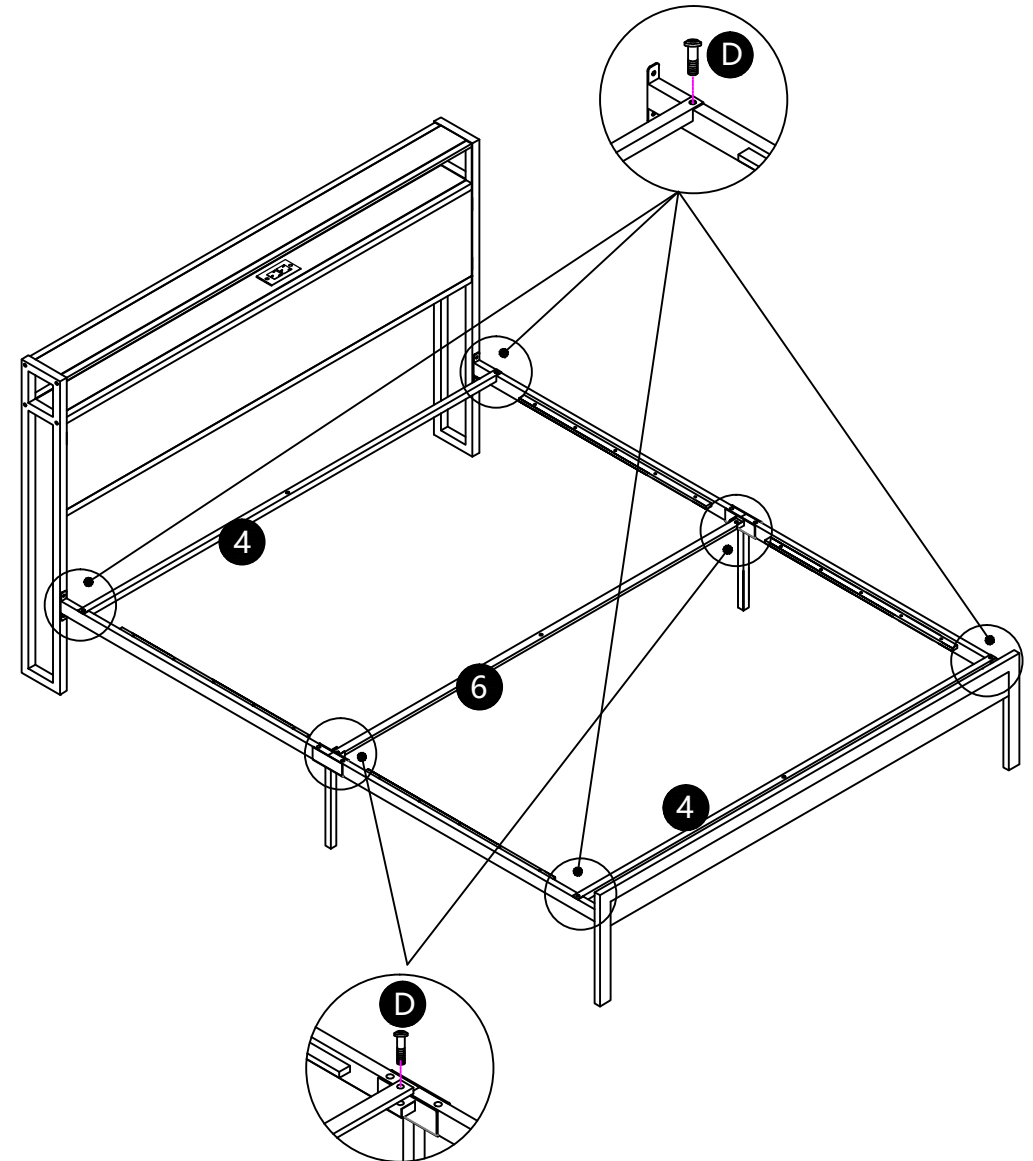

Assembly Instruction


Step:7

 **E** X 3PCS
M8*55

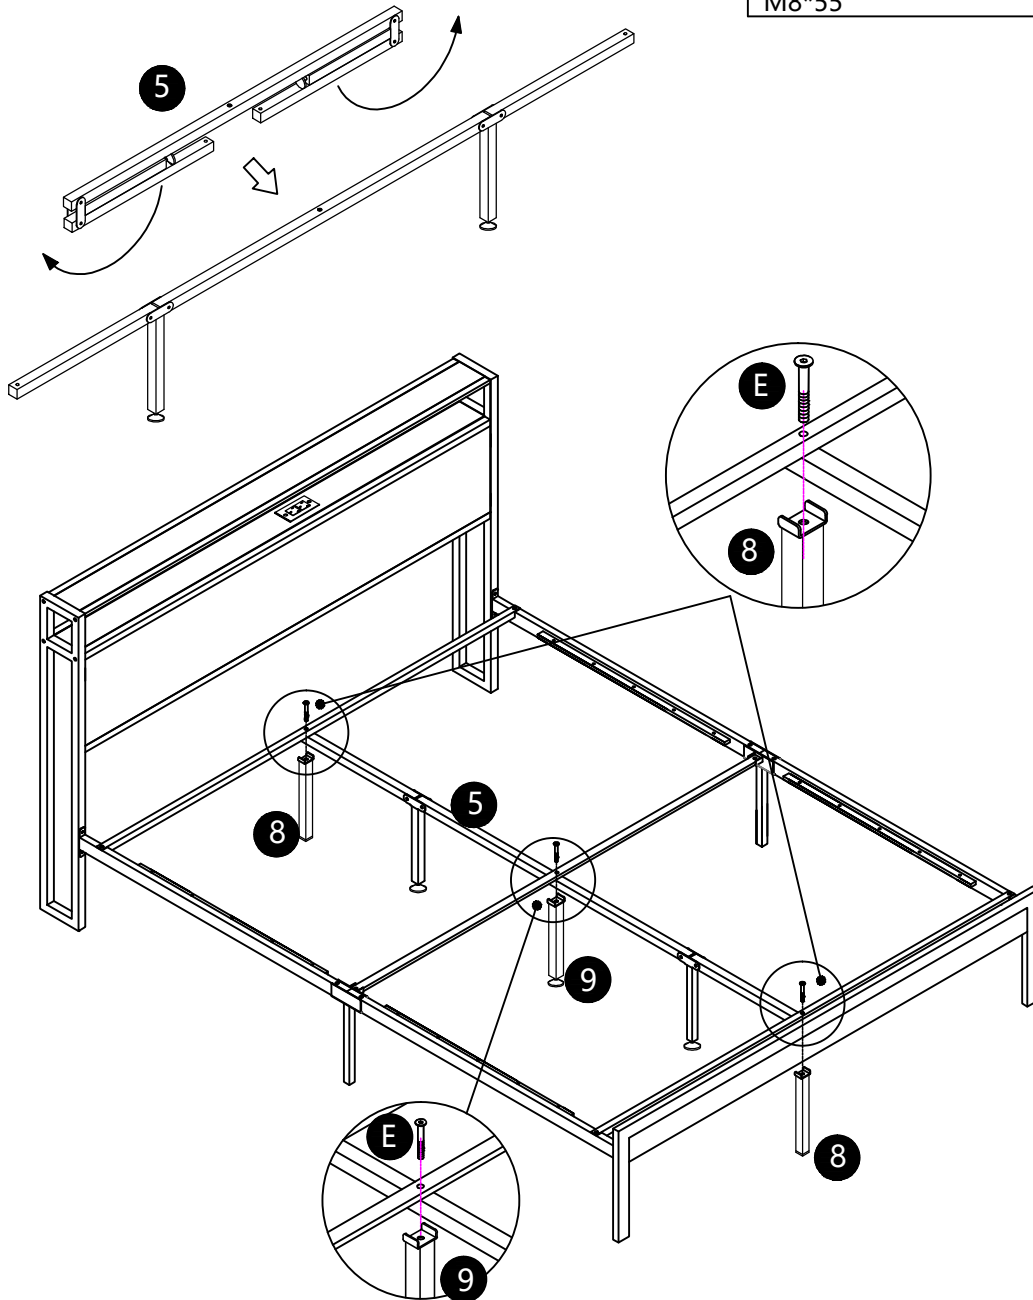

Step:8

 **A** X 20PCS
M6*15

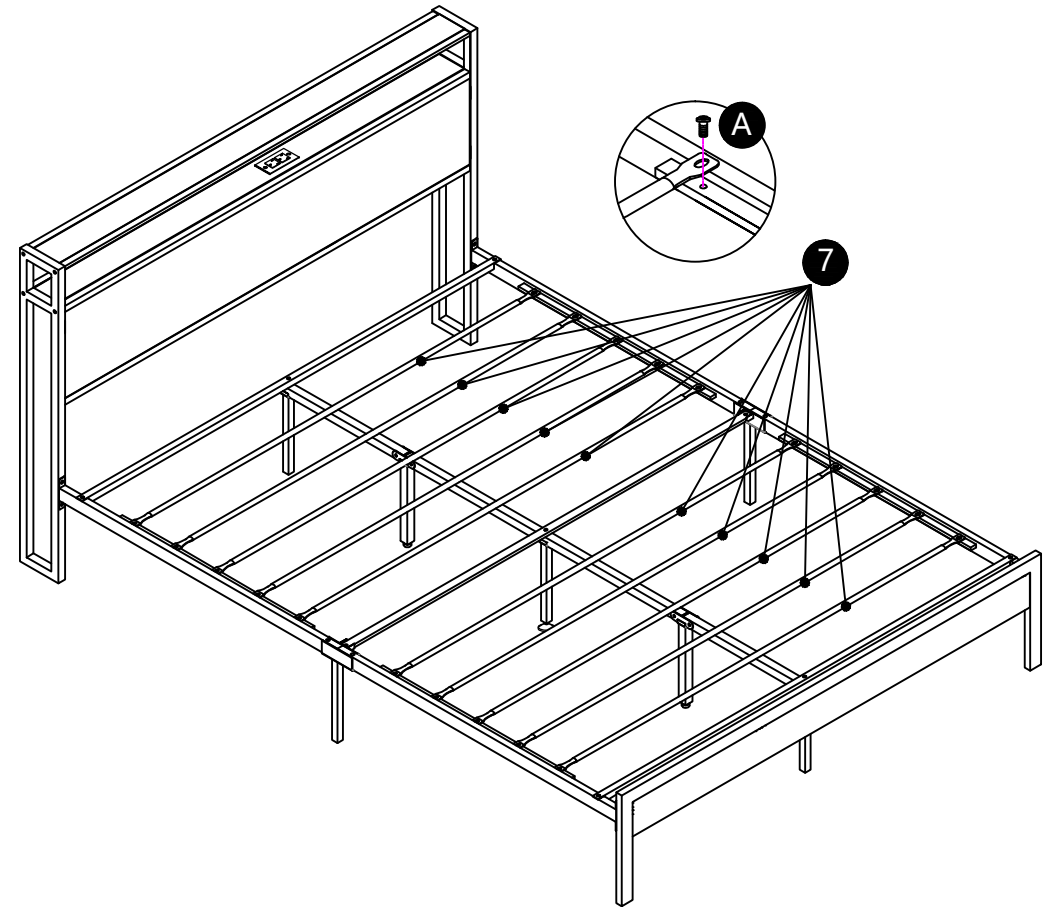

Assembly Instruction

There is a small sealing pocket in the package. There are two pieces of double-sided adhesive tape and two crash pads in the sealing pocket. As shown in the figure below.

