


Shelves

Product ID. 7AP2S

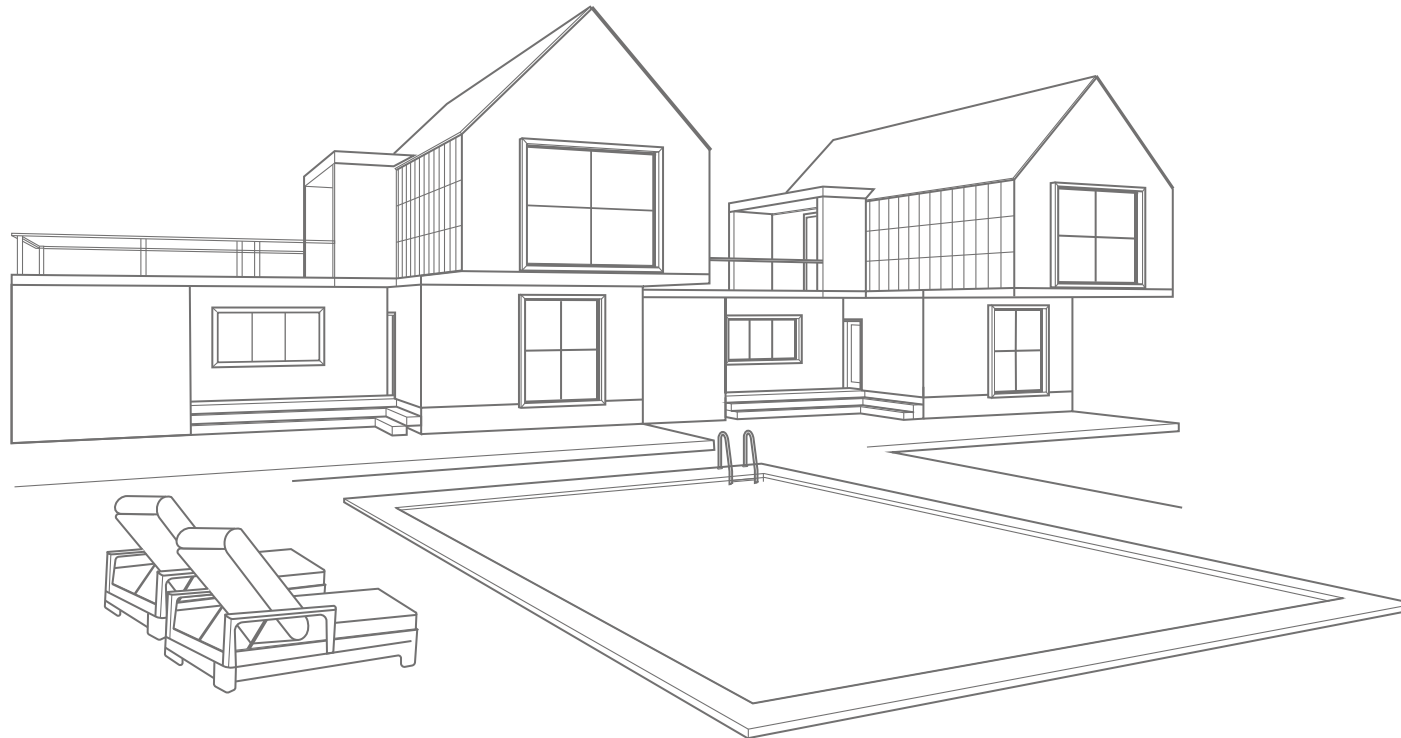

Scan for Support
support@garvee.com



Distributed by
GARVEE.com

After-sales Service

Dear customer,

We're excited that you've chosen our product to be a part of your home. We care deeply about your experience and want to make sure you have all the help you need.


If you have any questions while assembling your new product, don't hesitate to contact our dedicated customer support team through the original purchase platform.

Creating your ideal space is important, and we're committed to helping you every step of the way.






Thank you for choosing us, where comfort and style meet practicality.

Sincerely,
Customer Service Manager

ASSEMBLY INSTRUCTION

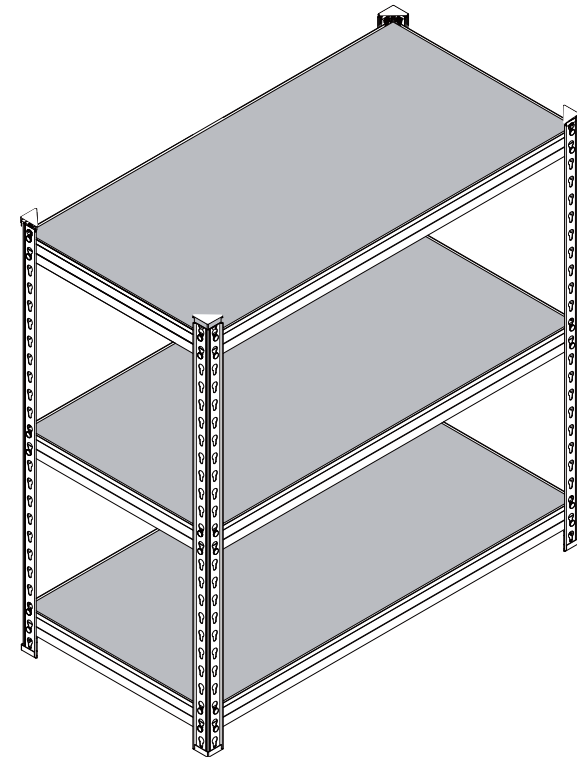


PART LIST

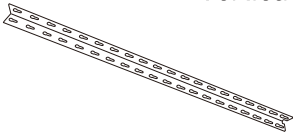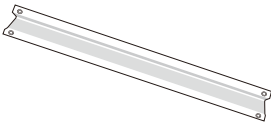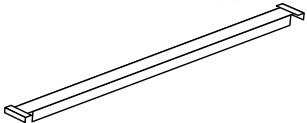① Vertical Bar  x4	② Short Cross Bar  x6
③ Long Cross Bar  x6	A Rubber Foot Pad  x8
B Board  x3	C Support Bar  x6
Rubber Hammer Gloves   x1	



ATTENTION


For the overall stability of shelves, every cross bar (②&③) must be knocked fully tight into the end while installing.

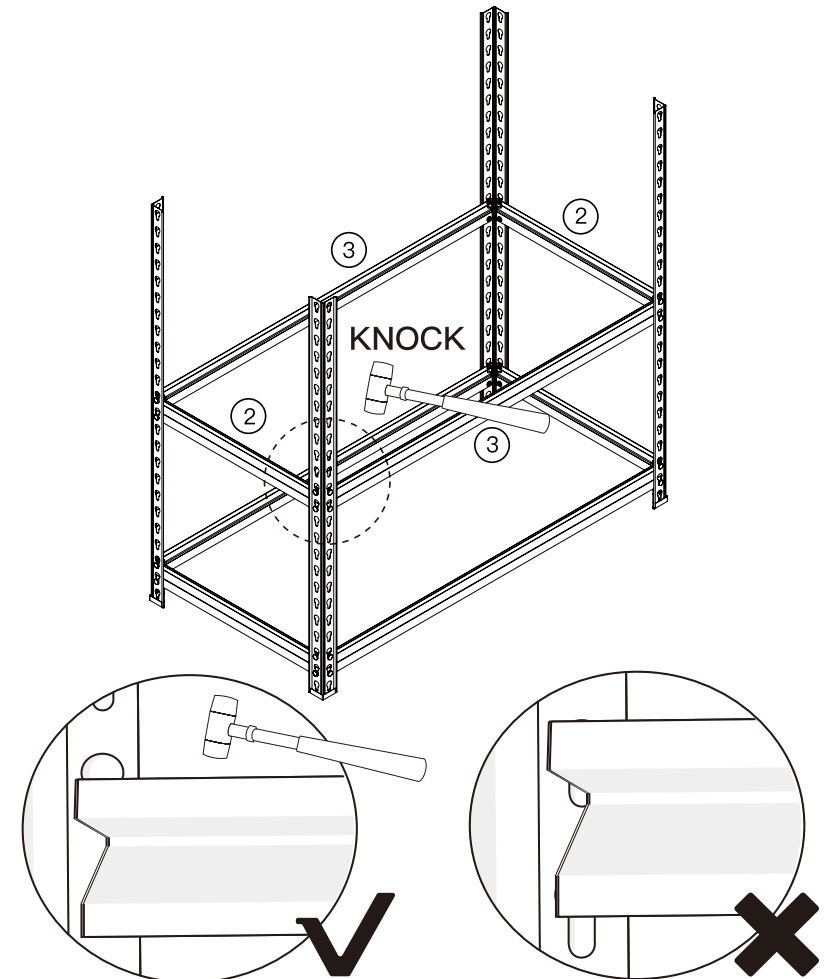

HOW TO INSTALL

Note: Please wear gloves before installation.


Step 1 Insert rubber foot pad (A) into 4 vertical bars (1) as below.

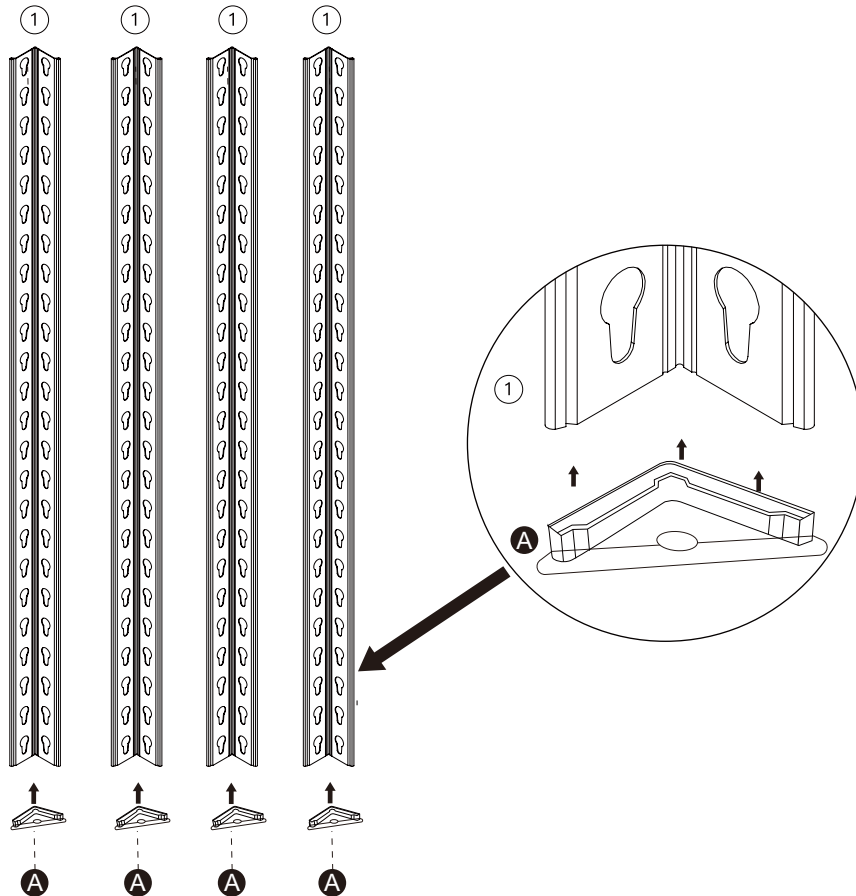

Step 2 Install short cross bar (2) and long cross bar (3) on vertical bars (1), tighten them with hammer.


! NOTICE

A: Make sure small holes on the vertical bar facing down.

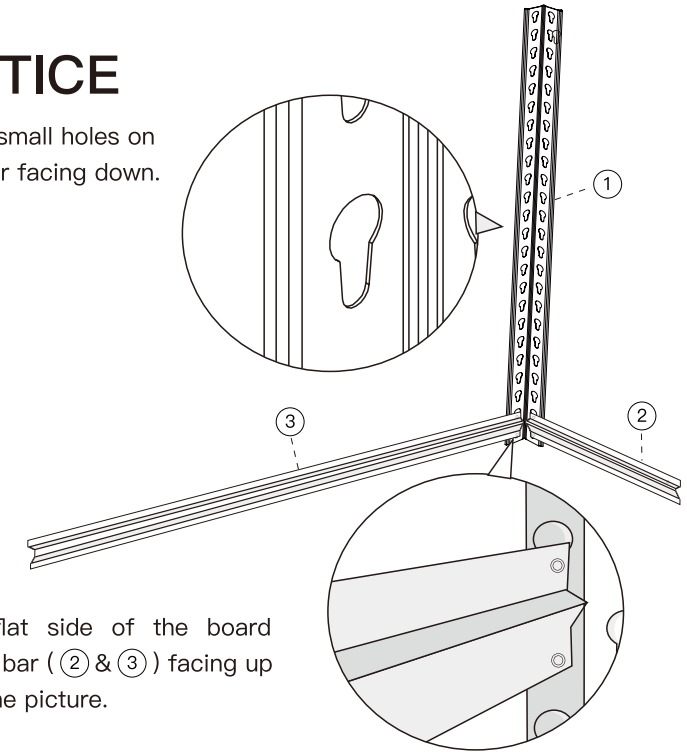


B: Put the flat side of the board support cross bar (2 & 3) facing up as shown in the picture.


C: Knock on cross bar (2 & 3) with rubber hammer until the bar covered the small holes completely.

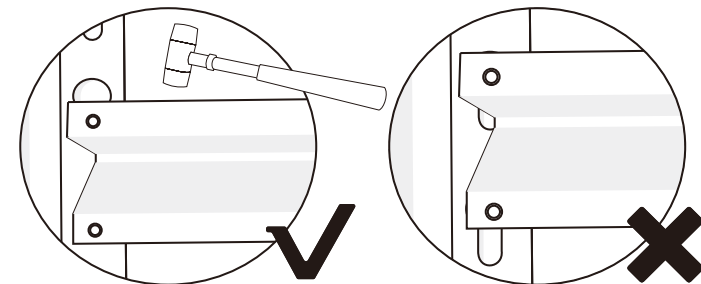

Step 3 Repeat last step to assembled an identical part.

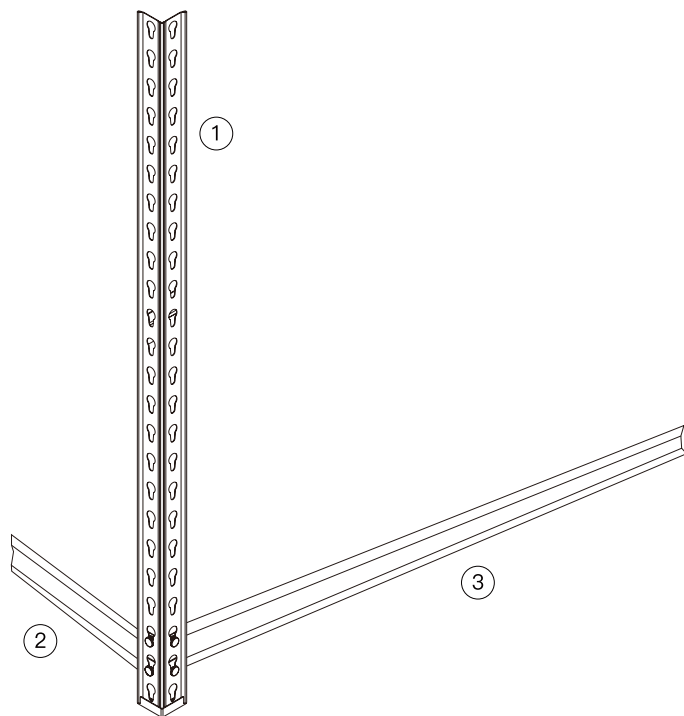


Step 4 Assemble the parts assembled with another 2 vertical bars through the cross bar.

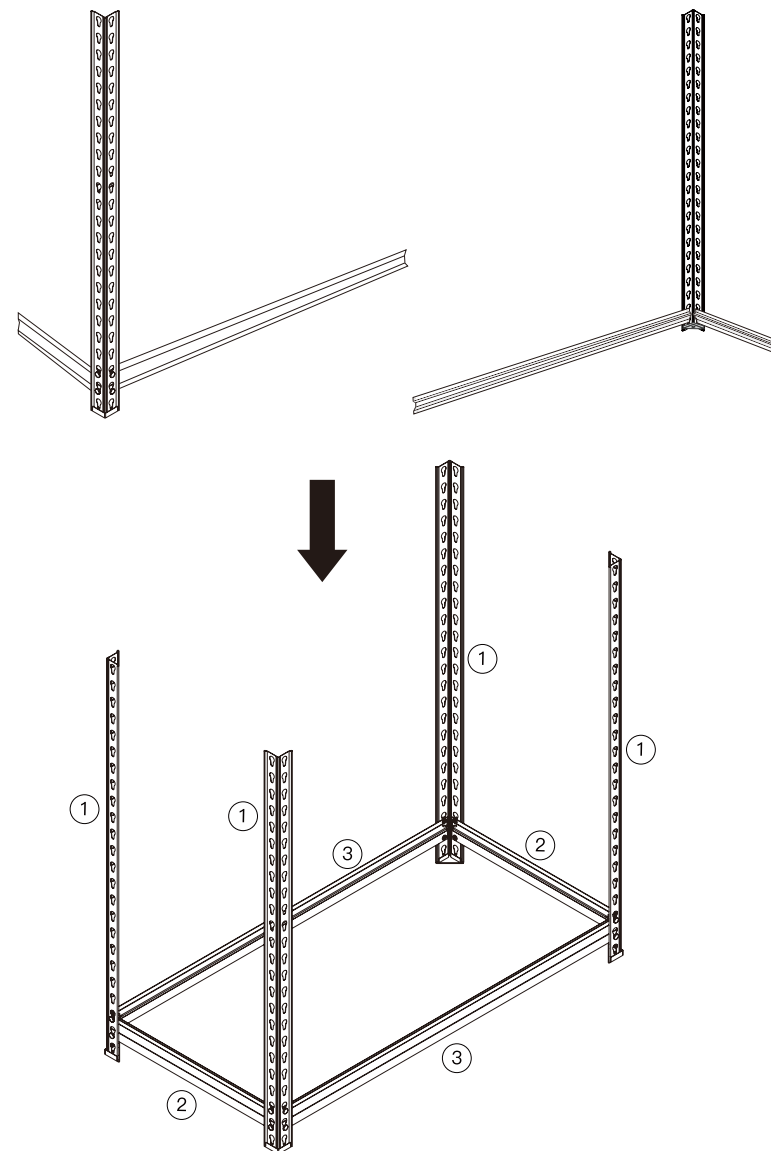


Step 5

Install 2 short cross bars (②) and 2 long cross bars (③) on the finished part, as shown in the figure.

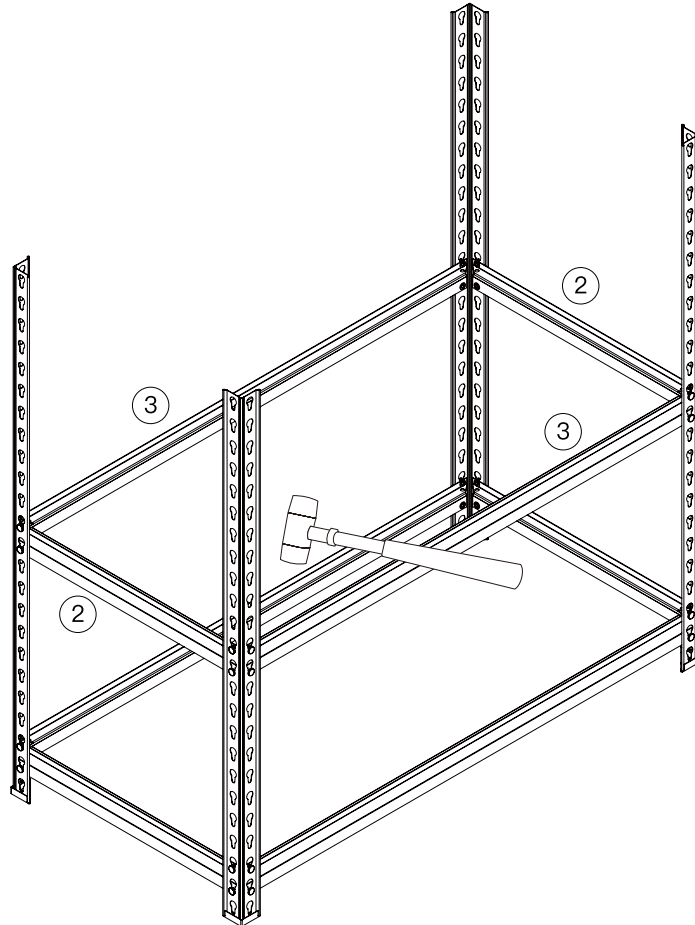


Step 6

Assemble the remaining cross bars as previous steps shown in the figure.

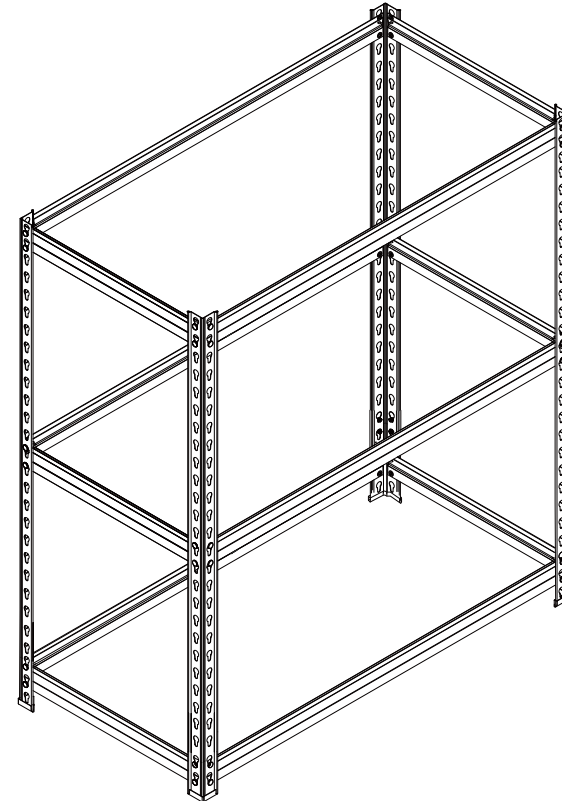


Step 7

Put all support bars (C) on the long cross bars of every tier as shown above.

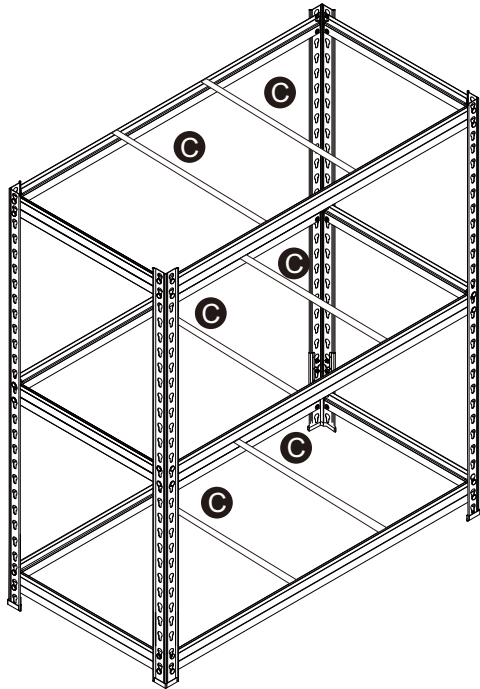


Step 8

Place all the boards (B) on the frame, as shown in the figure.

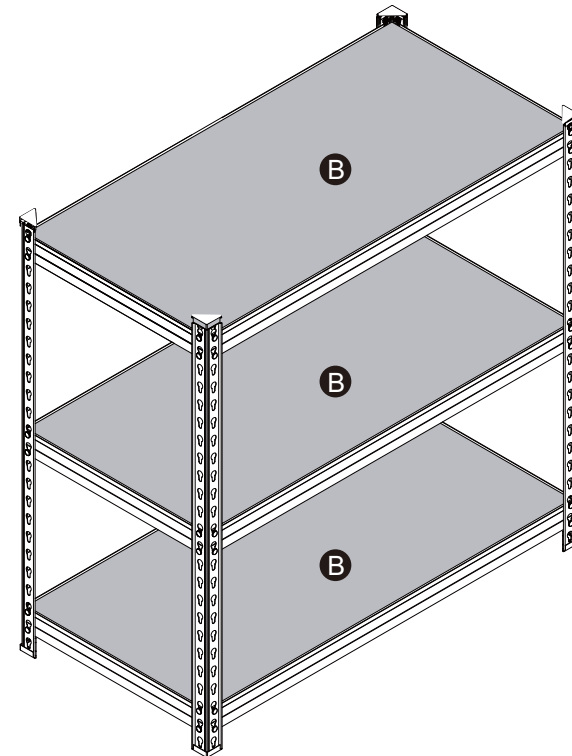

Step 9

Insert rubber foot pad (A) into the rest 4 vertical bars (1) as below.

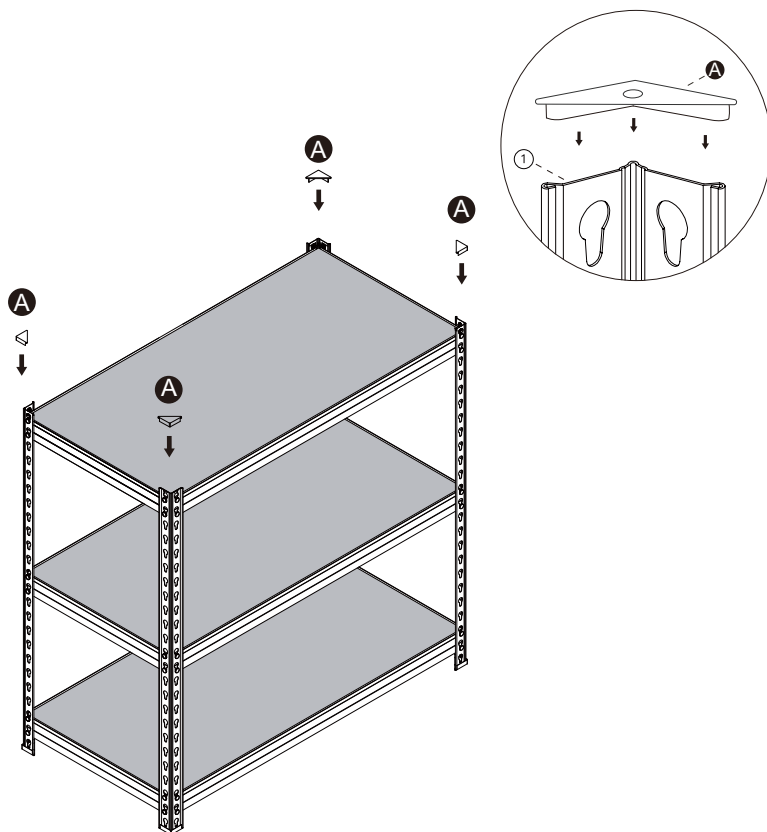

Step 10

The final complete installation result.

