

# ASSEMBLY INSTRUCTIONS

## ATTENTION:


1. Please read these instructions carefully before assembly.
2. Since aluminum is soft metal over tightening may strip thread or break the part.
3. DO NOT use power tools.
4. Check parts against the parts list to make sure you have all parts needed for proper assembly.
5. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

## Assembly step:

1. Put the top(A) on a soft surface. then loosely attach the leg(B) to the top with the flat washer(E),lock washer(F), bolt(D)and PVC cover(G).  
Do not over tighten.

2. Tighten all the bolts and fasten firmly.

Warning : DO NOT use acid or alkaline washing liquid to clean the product.

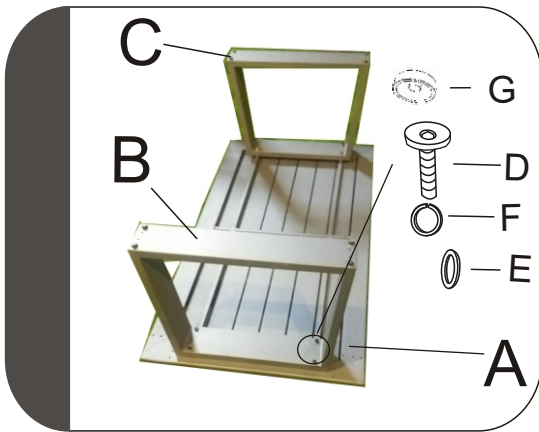

Parts list	Parts picture	Description	Q'ty	Parts list	Parts picture	Description	Q'ty
A		Seat	1	D	(M6*40)	Bolt	8
B		Leg	2	E		Flat washer	8
C		PE cap	Factory already assembled	F		Lock washer	8
				G		PVC cover	8
				H		Wrench	1

\* DO NOT OVER TIGHTEN

\* NO POWER TOOLS

\* NO SOCKET DRIVERS



# ASSEMBLY INSTRUCTIONS

## ATTENTION:



1. Please read these instructions carefully before assembly.
2. Since aluminum is soft metal over tightening may strip thread or break the part.
3. DO NOT use power tools.
4. Check parts against the parts list to make sure you have all parts needed for proper assembly.
5. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.









## Assembly step:

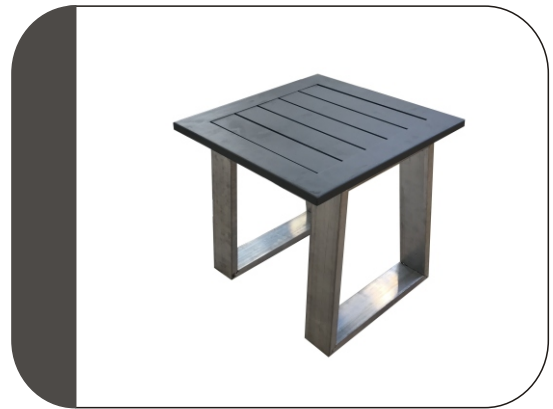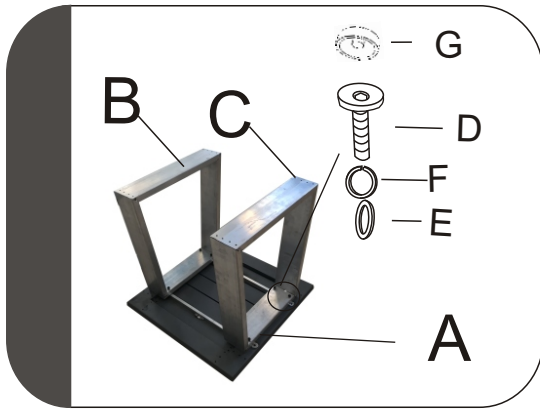1. Put the top(A) on a soft surface. then loosely attach the leg(B) to the top with the flat washer(E),lock washer(F), bolt(D)and PVC cover(G).  
Do not over tighten.

2. Tighten all the bolts and fasten firmly.

Warning : DO NOT use acid or alkaline washing liquid to clean the product.



Parts list	Parts picture	Description	Q'ty	Parts list	Parts picture	Description	Q'ty
A		Seat	1	D	 (M6*40)	Bolt	8
B		Leg	2	E		Flat washer	8
C		PE cap	Factory already assembled	F		Lock washer	8
				G		PVC cover	8
				H		Wrench	1

\* DO NOT OVER TIGHTEN

\* NO POWER TOOLS

\* NO SOCKET DRIVERS




# PRODUCT INSTRUCTIONS


## WARNING!

○If cushion gets wet, hang over chair to dry to prevent mold/mildew.

Remove all protective packing material and position base on floor. Adjust all the foot levelers level, and put on the cushion, attach the cushion on the ottoman frame. Now the chair is ready to use.

Warning: DO NOT use acid or alkaline washing liquid to clean the product.

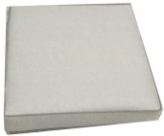A		OTTOMAN	1
B		PE cap	Factory already assembled
C		CUSHION	1

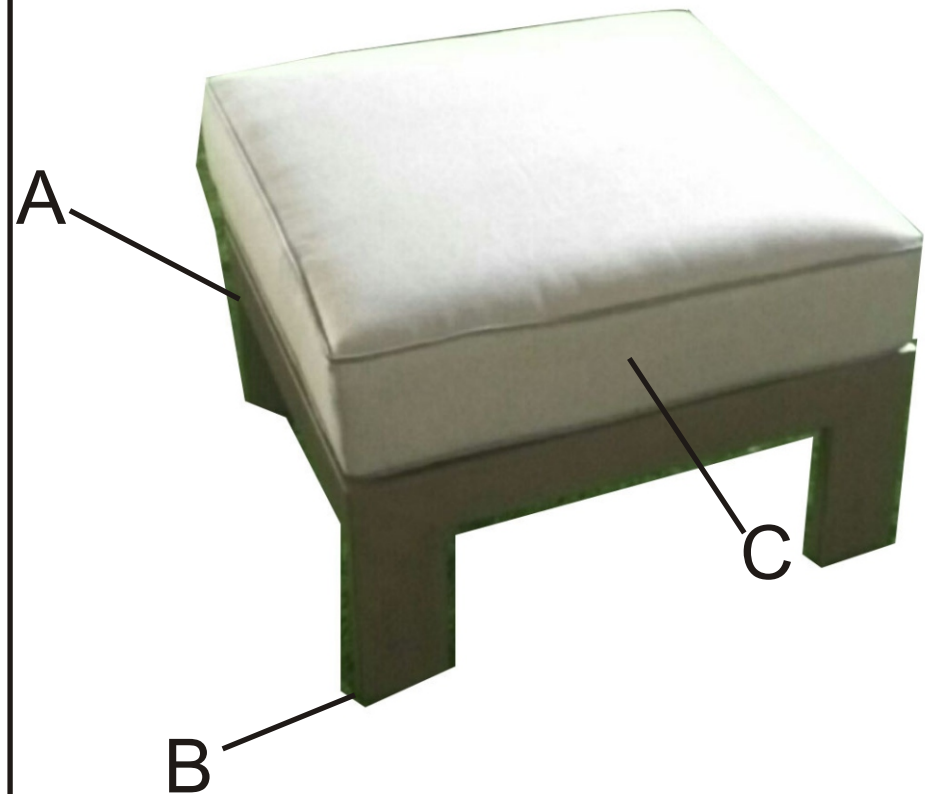

This parts have been assemble by factory already!

# ASSEMBLY INSTRUCTIONS

## WARNING!

○ If cushion gets wet, hang over chair to dry to prevent mold/mildew.

## ATTENTION:





1. Please read these instructions carefully before assembly.
2. Since aluminum is soft metal over tightening may strip thread or break the part.
3. DO NOT use power tools.

## Assembly steps:

1. Loosely attach the chair(A) to the arms(B&B1) with bolt(E&F&G), flat washers(E1&G1), lock washer(E2&G2), lock nut(H) and PVC cover(J), Nut cap(I).  
DO NOT tighten the nuts.

2. Turn the chair onto its legs and put the cushion (D&D1)then you can use it.

Warning : Do not use acid or alkaline washing liquid to clean the product.

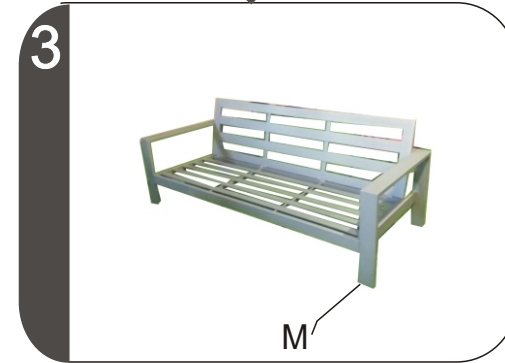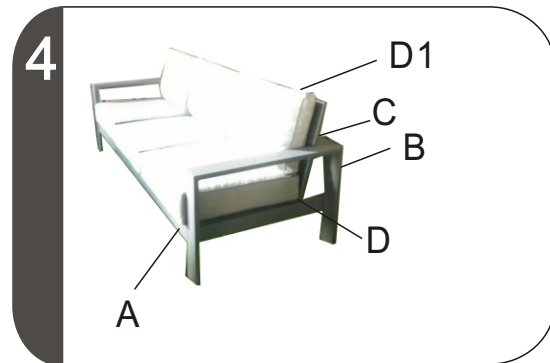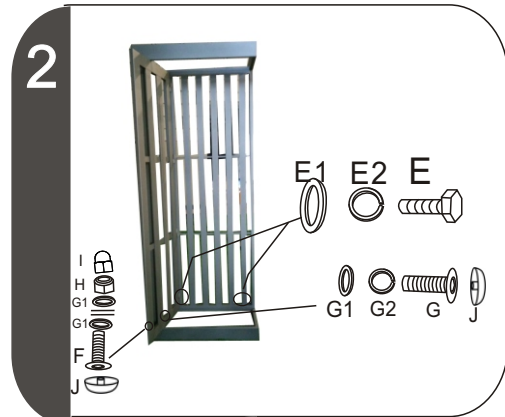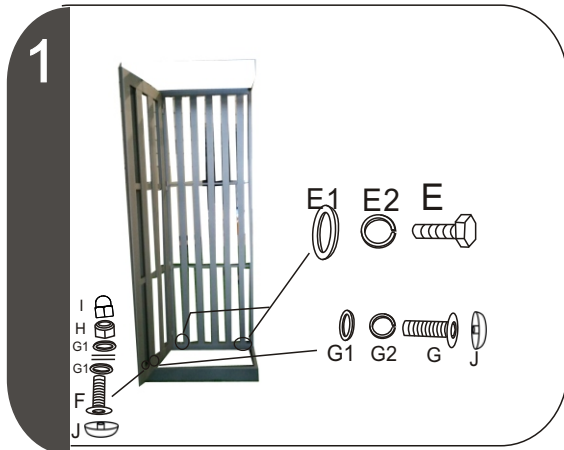

Parts list	Parts picture	Description	Q'ty	Parts list	Parts picture	Description	Q'ty
A		Chair	1	E		Bolt	4
B		Left arm	1	E1		Large flat washer	4
B1		Right arm	1	E2		Large lock washer	4
C		After Connecting Pipe	1	F		Bolt	2
D		Seat cushion	3	G		Bolt	2
D1		Back cushion	3	G1		Small flat washer	6
				G2		Small lock washer	2
				H		Lock nut	2
				I		Nut cap	2
				J		PVC cover	4
				K		Wrench	1
				L		Wrench	1
				M		PE cap	1

\* DO NOT OVER TIGHTEN

\* NO POWER TOOLS

\* NO SOCKET DRIVERS



# ASSEMBLY INSTRUCTIONS

## WARNING!

⊗ If cushion gets wet, hang over chair to dry to prevent mold/mildew.





## ATTENTION:

1. Please read these instructions carefully before assembly.
2. Since aluminum is soft metal over tightening may strip thread or break the part.
3. DO NOT use power tools.

## Assembly steps:

1. Loosely attach the chair(A) to the arms(B&B1) with bolt(E&F&G), flat washers(E1&G1) lock washer(E2&G2), lock nut(H) and PVC cover(J), Nut cap(I).  
DO NOT tighten the nuts.
2. Turn the chair onto its legs and put the cushion (D&D1) then you can use it.

Warning : Do not use acid or alkaline washing liquid to clean the product.

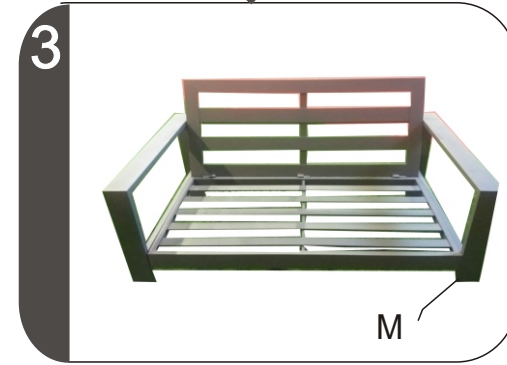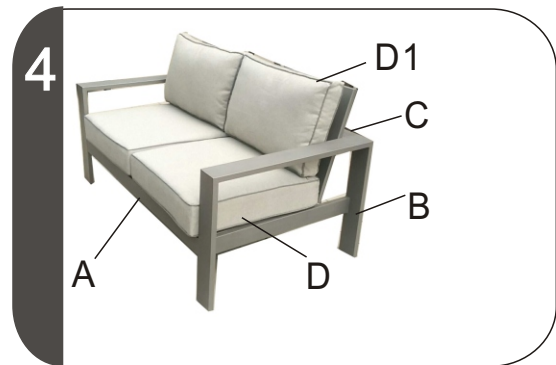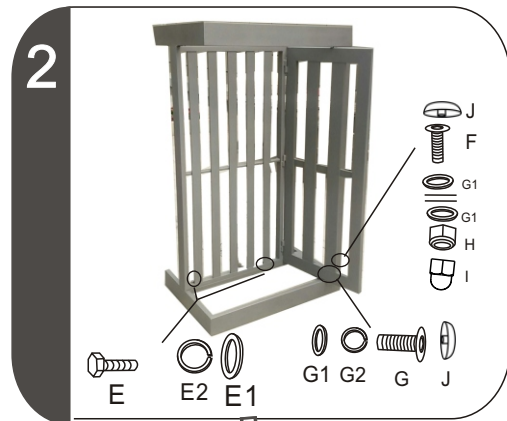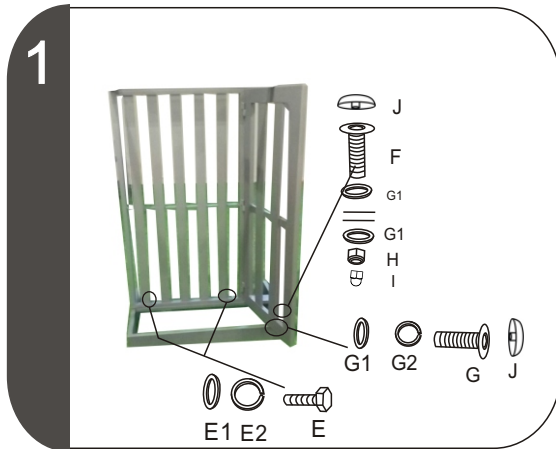

Parts list	Parts picture	Description	Q'ty	Parts list	Parts picture	Description	Q'ty
A		Chair	1	E		Bolt	4
B		Left arm	1	E1		Large flat washer	4
B1		Right arm	1	E2		Large lock washer	4
C		After Connecting Pipe	1	F		Bolt	2
D		Seat cushion	2	G		Bolt	2
D1		Back cushion	2	G1		Small flat washer	6
				G2		Small lock washer	2
				H		Lock nut	2
				I		Nut cap	2
				J		PVC cover	4
				K		Wrench	1
				L		Wrench	1
				M		PE cap	1

\* DO NOT OVER TIGHTEN

\* NO POWER TOOLS

\* NO SOCKET DRIVERS



# ASSEMBLY INSTRUCTIONS

## WARNING!

⦿ If cushion gets wet, hang over chair to dry to prevent mold/mildew.


## ATTENTION:

1. Please read these instructions carefully before assembly.
2. Since aluminum is soft metal over tightening may strip thread or break the part.
3. DO NOT use power tools.

## Assembly steps:

1. Loosely attach the chair(A) to the arms(B&B1) with bolt(E&F&G), flat washers(E1&G1) lock washer(E2&G2), lock nut(H) and PVC cover(J), Nut cap(I).  
DO NOT tighten the nuts.
2. Turn the chair onto its legs and put the cushion on (D&D1)then it is ready to use.

Warning : Do not use acid or alkaline washing liquid to clean the product.

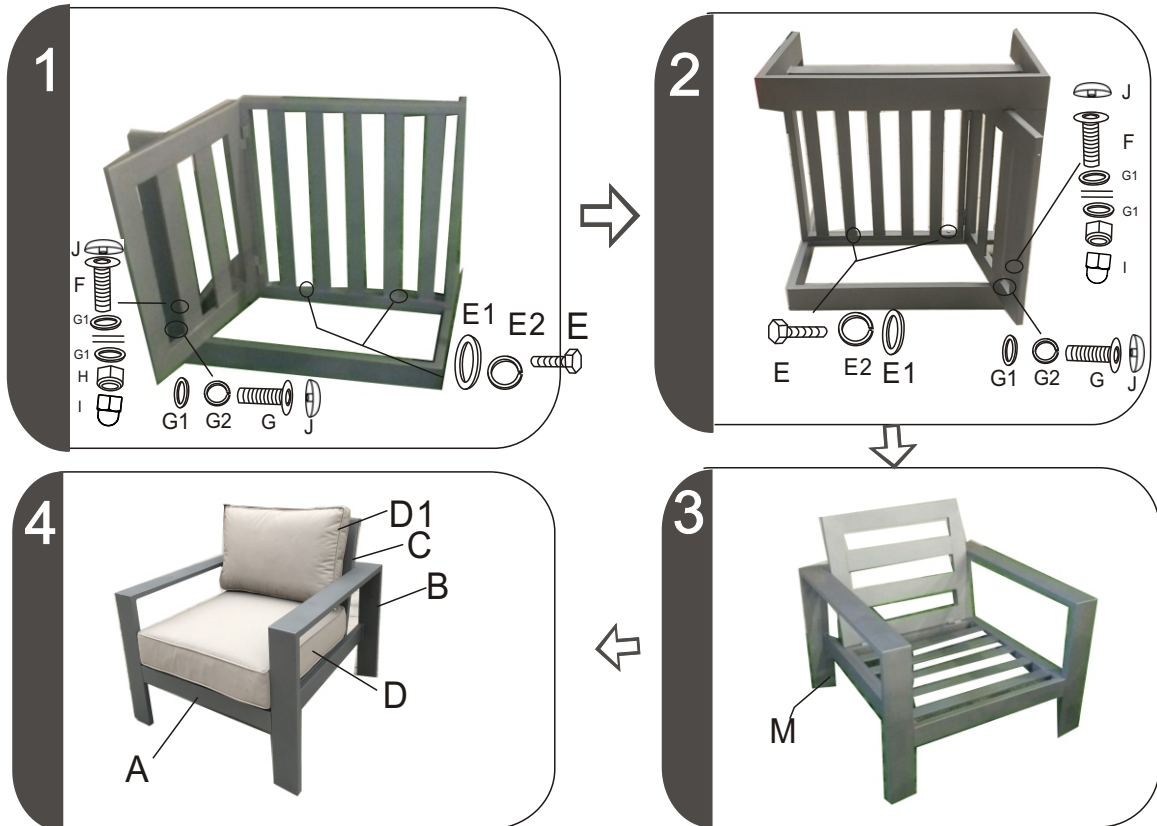

Parts list	Parts picture	Description	Q'ty	Parts list	Parts picture	Description	Q'ty
A		Chair	1	E		Bolt (M8*35)	4
B		Left arm	1	E1		Large flat washer	4
B1		Right arm	1	E2		Large lock washer	4
C		After Connecting Pipe	1	F		Bolt (M6*30)	2
D		Seat cushion	1	G		Bolt (M6*15)	2
D1		Back cushion	1	G1		Small flat washer	6
				G2		Small lock washer	2
				H		Lock nut	2
				I		Nut cap	2
				J		PVC cover	4
				K		Wrench	1
				L		Wrench	1
				M		PE cap	1

\* DO NOT OVER TIGHTEN

\* NO POWER TOOLS

\* NO SOCKET DRIVERS

