


Important

Please inspect all items carefully before assembling.

If for any reason you need to return this item, you must return it in its original packaging.

Assembled items can not be returned.

Model No.:
MAT7601-N

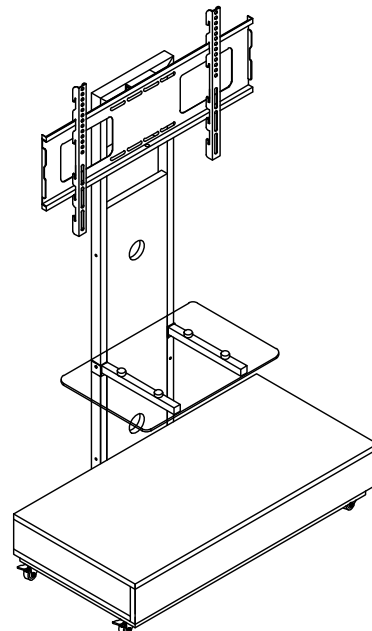


Important Note:









*Place all parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.

*Kindly follow the assembly instruction step by step.



*Don't tighten all screws until the table is fully set-up.

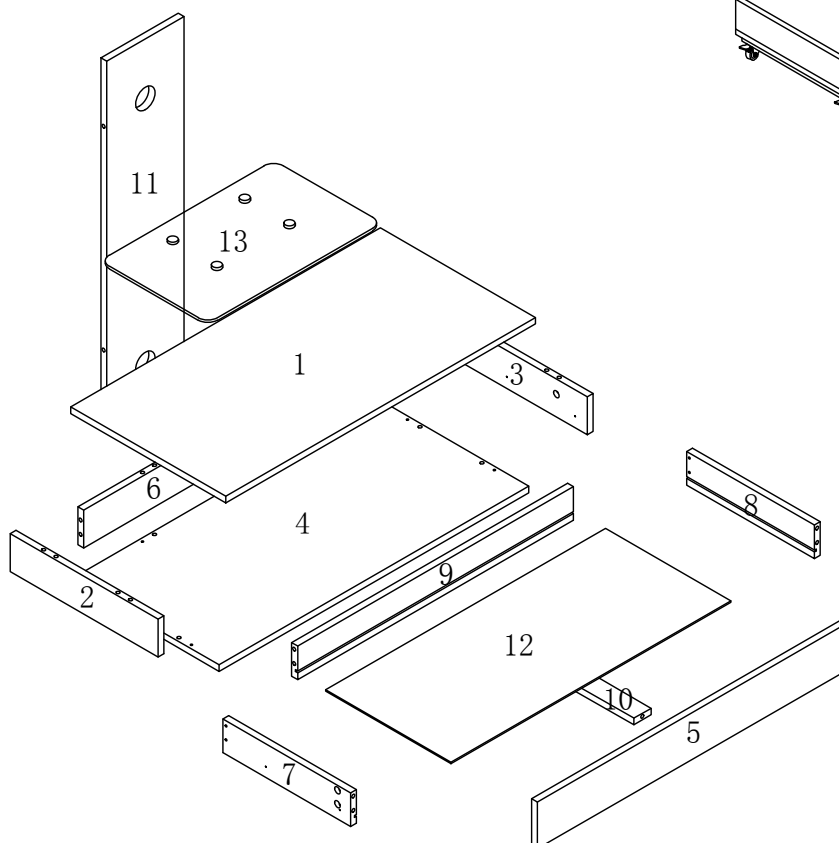


⑭ x1	⑮ x1 (SET) (Left) (Right)	⑯ x2	⑰ x1
⑱ x2	⑲ x4	⑳ x1	

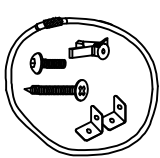A x15  A1 A2 φ 6*38mm φ 15*11mm	B x12  φ 8*40mm	C x8  ST3.5*14mm	D x11  ST4*35mm
E x4  M6*40mm E1  E2  E3	F x2  (Rubber washer) F1  M8*16mm F2  F3	G x6  M6.3*50mm	H x2 (SET) 350mm 
I x2  M6*70mm	J x4  M6*40mm J1  J2	K x4  M6*15mm	L x6  M6*12mm
M x2  M1  M2 M5*30mm	N x4  N1  N2  N3  N4	S Screws for TV	Z x1 Tipping Restraint Hardware Kit 


1 Install the drawer.

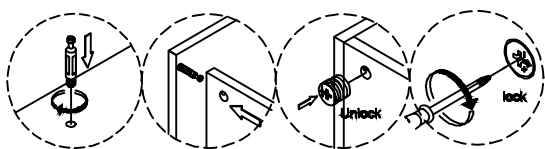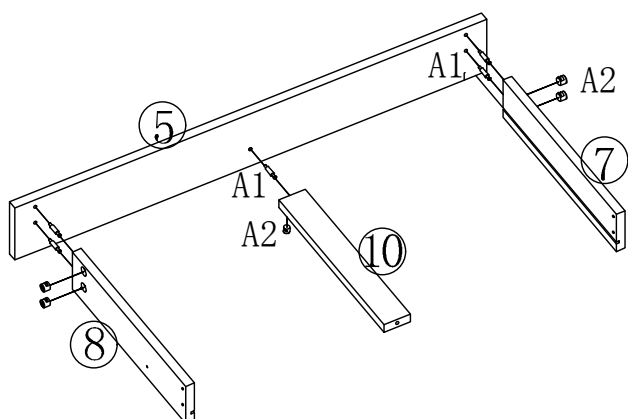


2 Install the drawer.

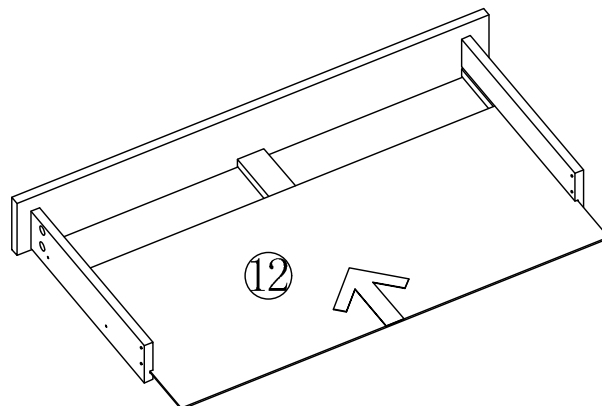

3 Install the drawer.

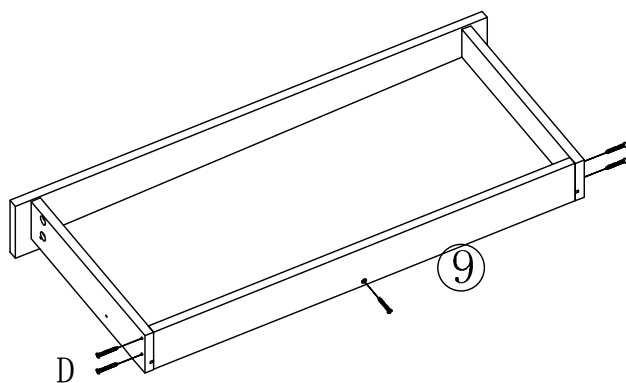

4 Split component H.


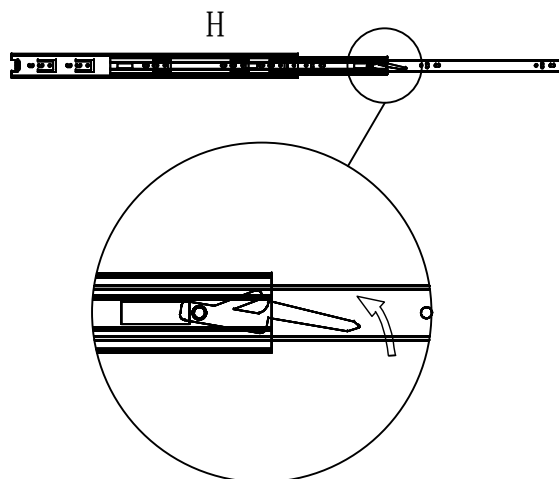


Taking the inner fixing rail off,
please press dismounting rod.



5



Install the drawer.

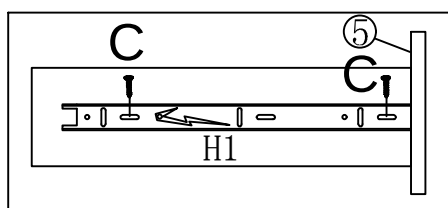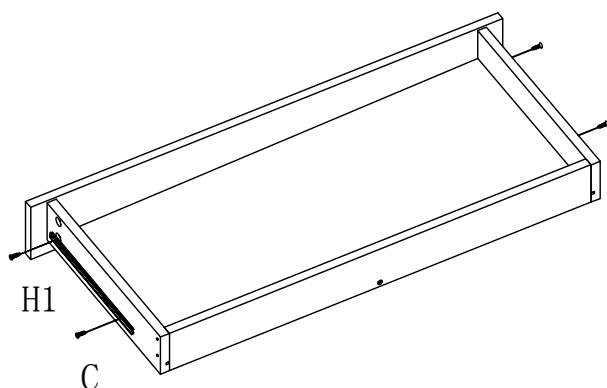


6

Install the drawer.


* Please pay attention to the left and right.

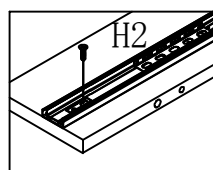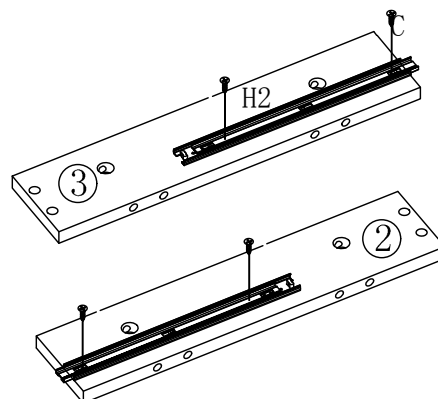

The smaller end of H2 is flush with the sheet metal, and an 'C' screw is screwed into the first hole.

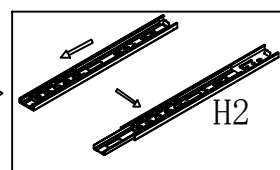



Slide out the track of H2

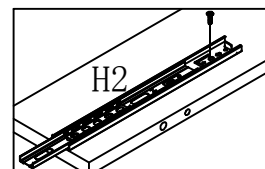

Align with the second hole and tighten the screw.


7

Install the drawer.

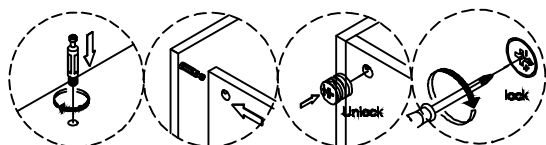
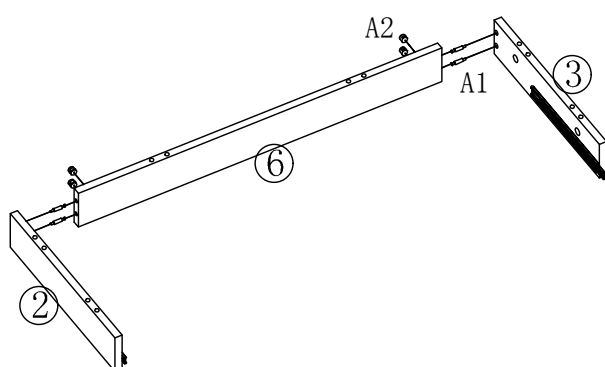


8


Install the drawer.

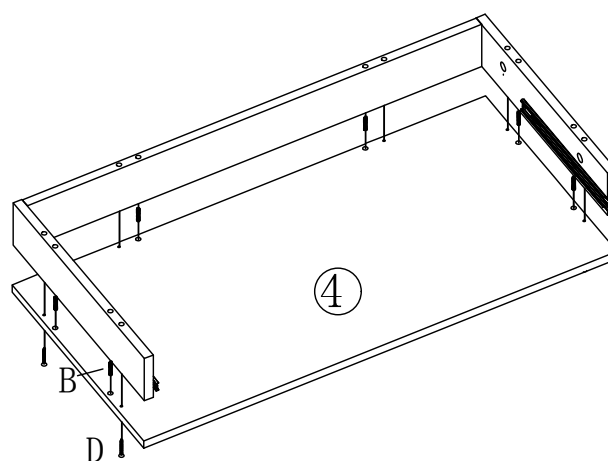

9 Install the drawer.

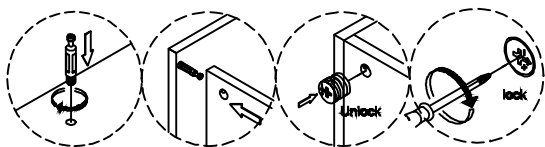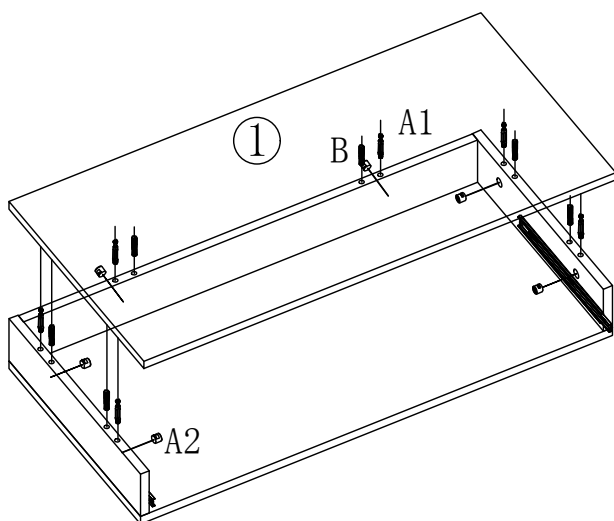



10 Install the drawer.

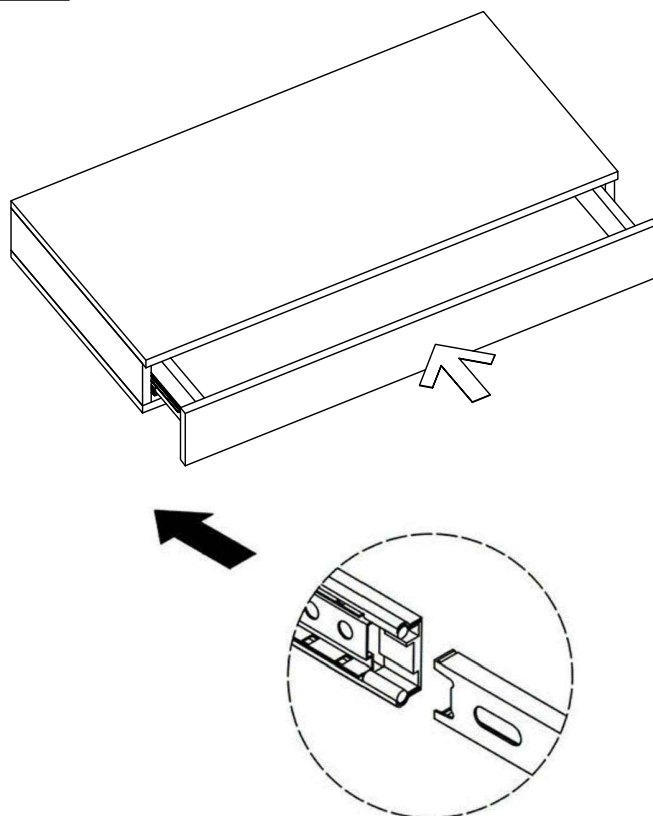


Align the outer track with the center of the inner track and push in.

11 Install the bottom bracket and the wheels


Apply the brakes before installing the wheels.

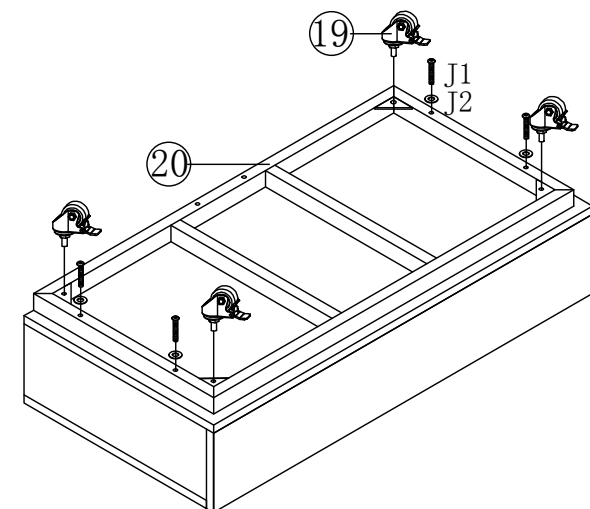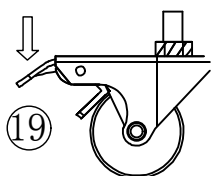


12 Assemble the lower frame and base.

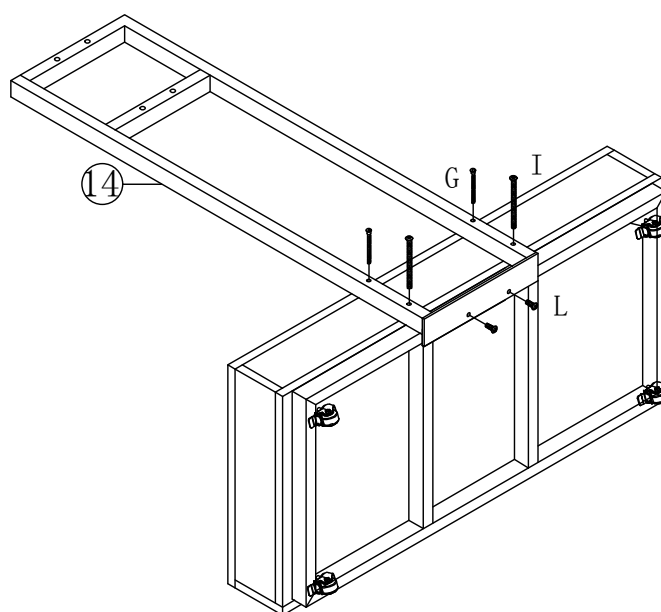


13 Install the front plate.

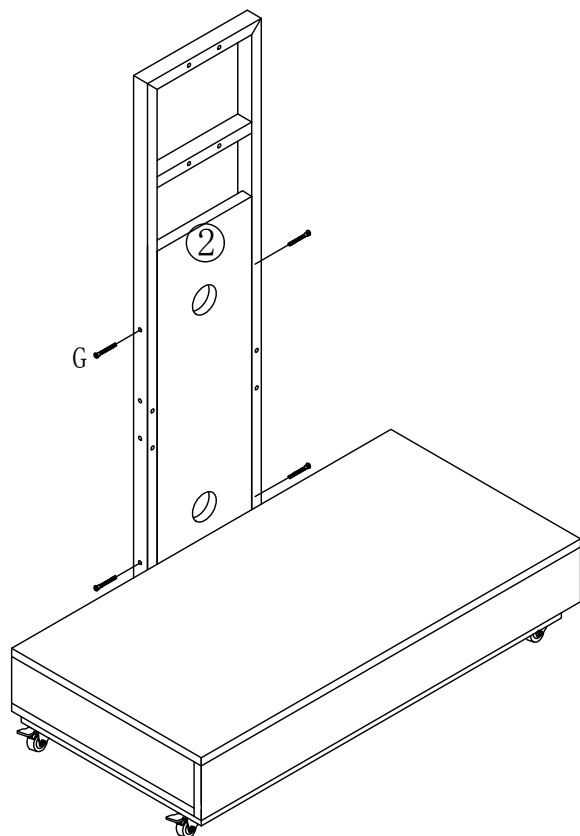


14 Position the shelf board and install the left and right shelf board brackets.

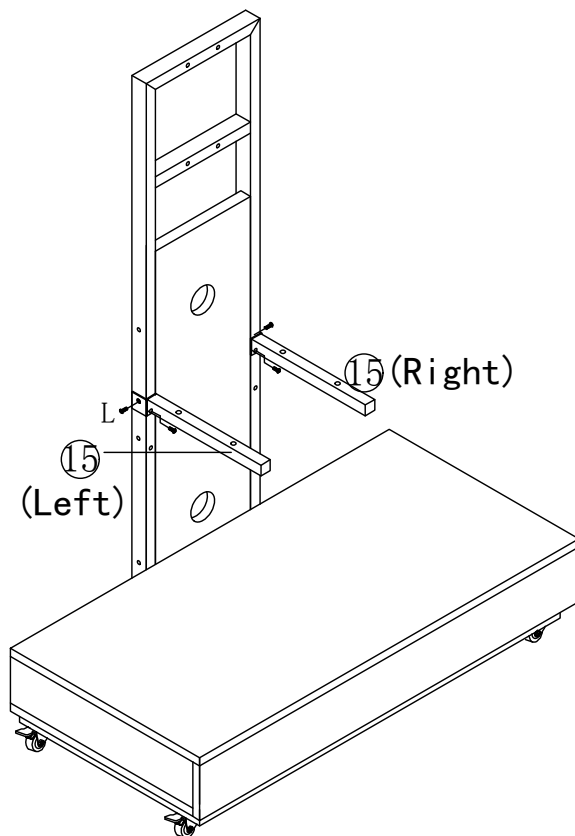


15 Install the bracket .

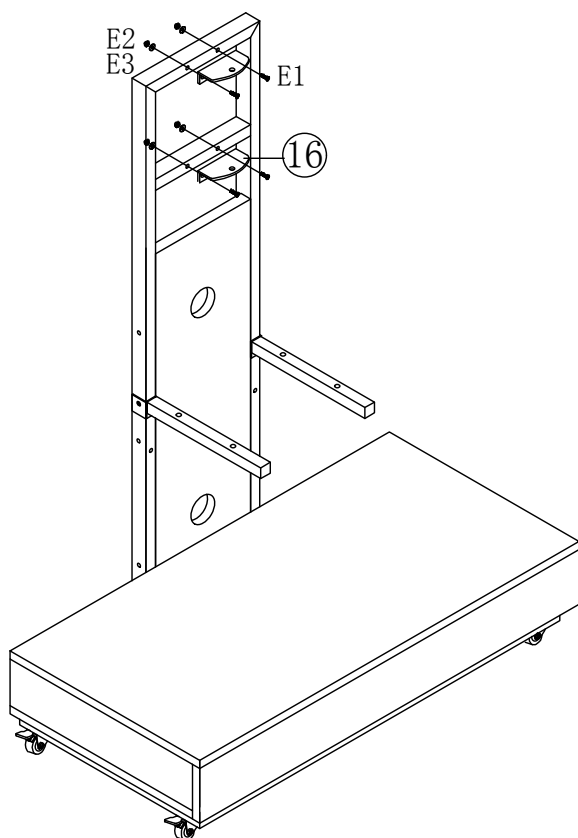


16 Install bracket.

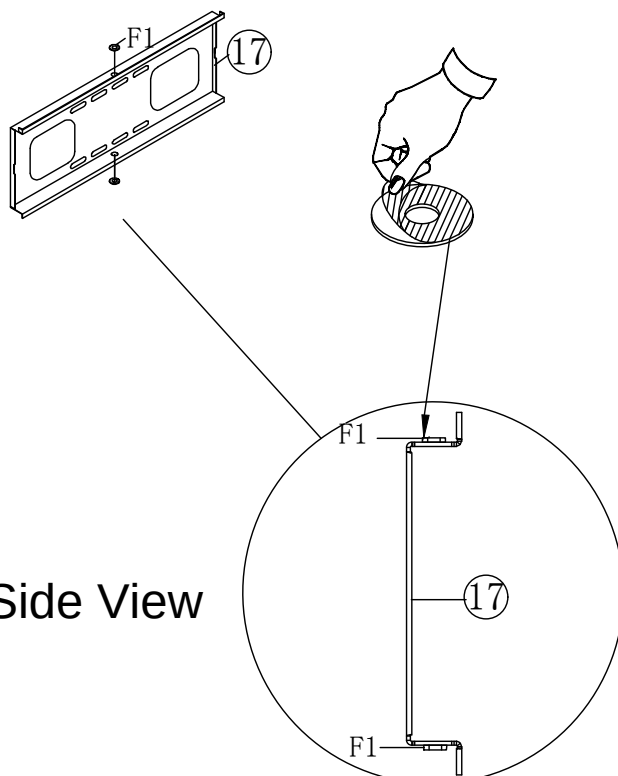

17 Install bracket.

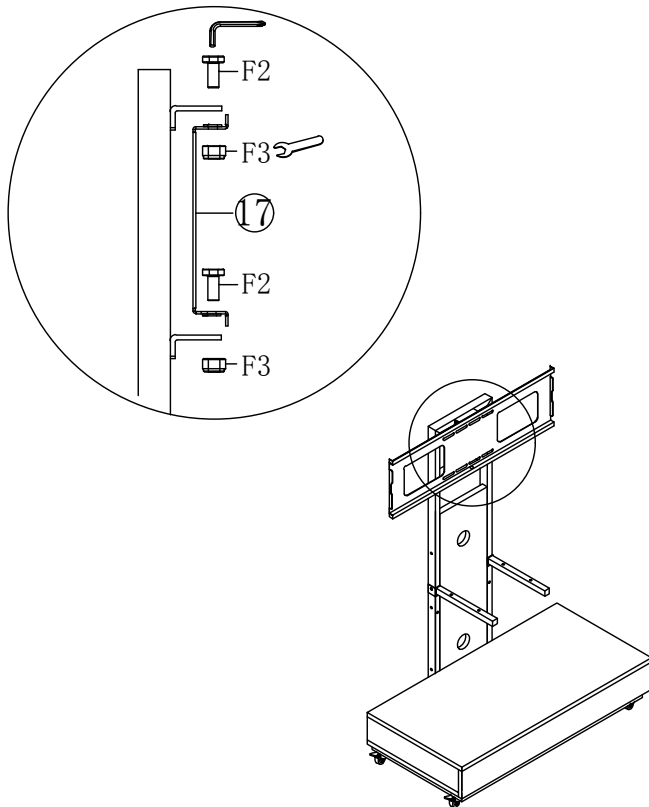

18 Install the shelf board.

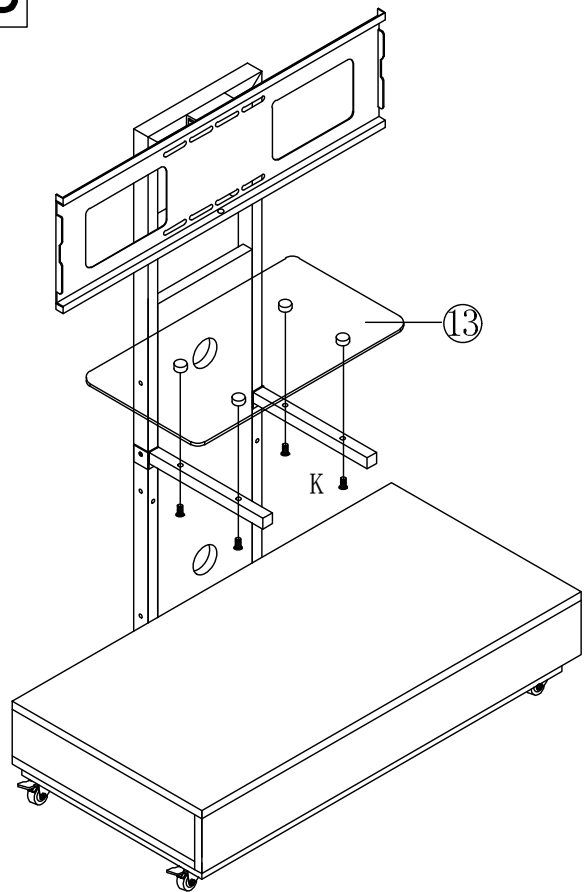


19

S1	M6X25 x4	S5	Square Washer x4
S2	M6X40 x4	S6	Space 18X22 x4
S3	M8X25 x4		Space 13X17 x4
S4	M8X45 x4	18	x2

Choose right screws for TV, the screws suit to most of TVs, but not all TVs.

In case the supplied screws are not compatible with your TV's threaded holes, you will need to obtain the correct size screws on your own.

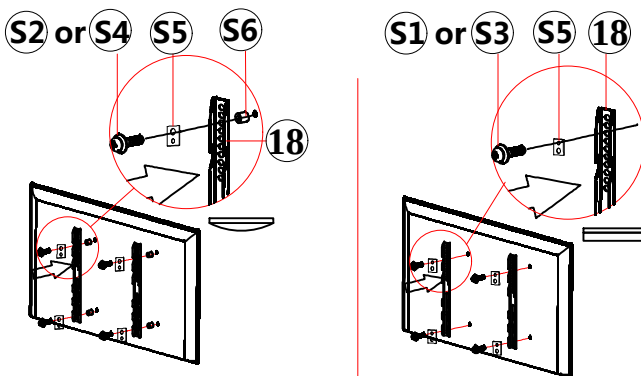


Curved or Recessed TV

Flat Panel TV





20

Close the bolt on the lower side of the attached bracket 18 to secure the TV.

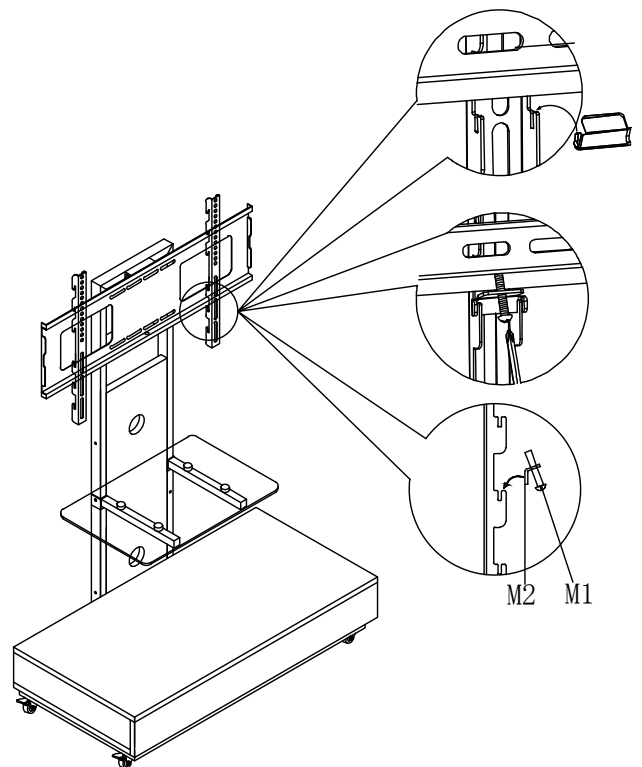

Position the assembled console at the desired location against a wall. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach the tip-over restraint to the Top Metal Frame and the wall.

NOTE: YOU MUST USE THIS TIPPING RESTRAINT TO ATTACH THIS UNIT TO THE WALL, TO PREVENT ACCIDENTS AND/OR INJURIES.

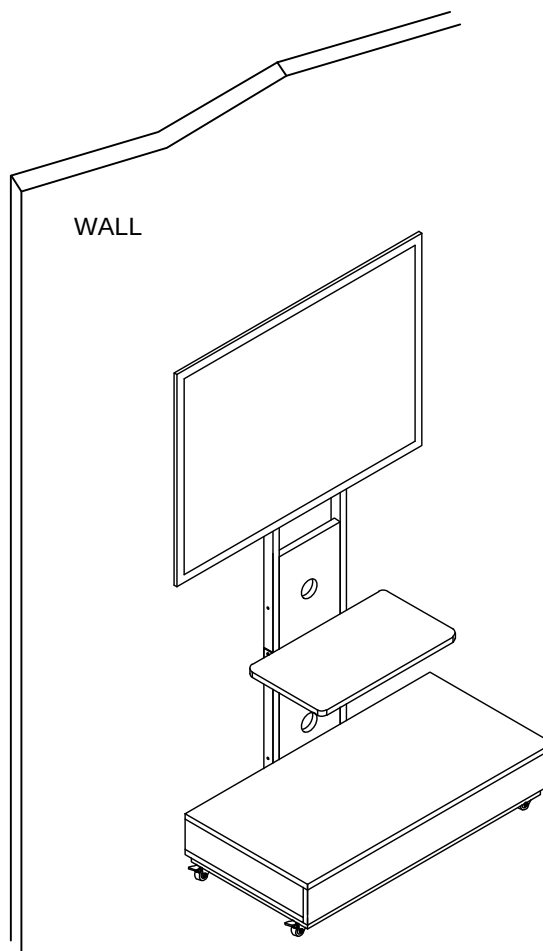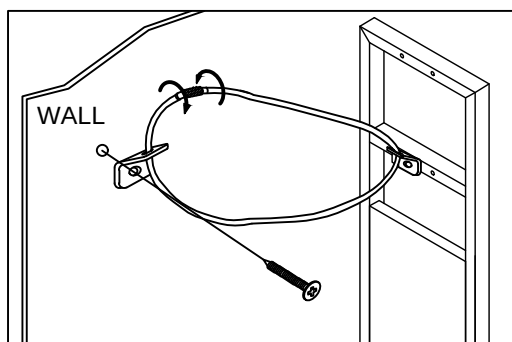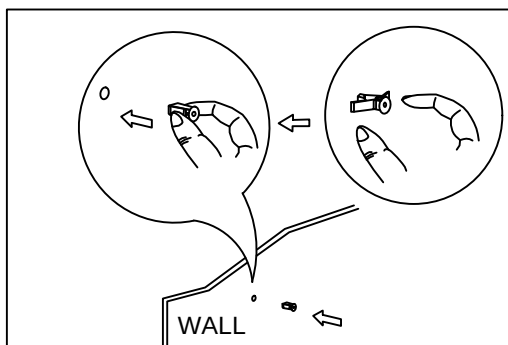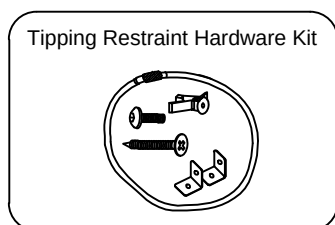

This unit is just for sample display.