


**IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE**

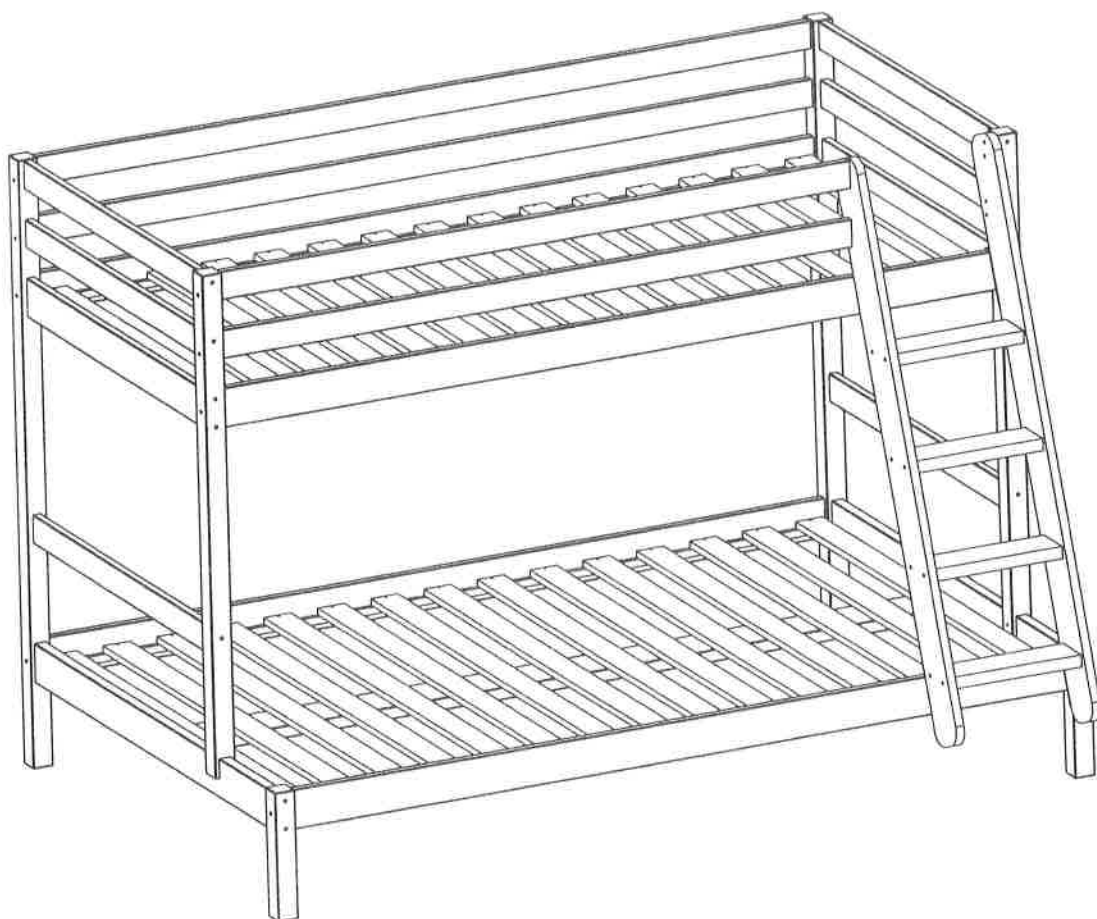

### **Dimensions**

Width - 198,5cm

Depth - 154cm

Height - 148,5cm

**Assembly instruction - read these instruction fully before starting assembly**

If you need help or have damaged or missing parts, call the Customer Helpline

# Components - panels

Please check you have all the panels listed below



1 Long side rail x4 (188x9 cm)



2 Long leg x1 (139x5 cm)



3 Long leg x1 (139x5 cm)



4 Middle leg x1 (115x5 cm)



5 Middle leg x1 (115x5 cm)



6 Long side rail x2 (188x6 cm)



7 Middle side rail x2 (153x6 cm)



8 End cross rail x2 (87x9 cm)



9 End cross rail x2 (117x9cm)



10 Middle support x1 (189x11 cm)



11 Stair side x2 (123x11 cm)



12 End cross rail x6 (87x6cm)



13 Long slat x15 (119x6 cm)



14 Short leg x1 (29x5 cm)



15 Short leg x1 (29x5 cm)



16 Short slat x15 (89x6 cm)



17 Stair step x4 (31x9 cm)




















# Components - Fittings


If you have damaged or missing components, call the Customer Helpline

Please check you have all the fittings listed below


**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  90mm Bolt x8	<b>B</b>  13mm Barrel nut x8	<b>C</b>  Stair support hook x4
<b>D</b>  Wooden dowel x38	<b>E</b>  60 mm Bolt x1	<b>F</b>  Metal head x1
<b>G</b>  90 mm Wooden screw x34	<b>H</b>  50 mm Wooden screw x20	<b>I</b>  35 mm Wooden screw x8
<b>J</b>  30 mm Wooden screw x60	<b>K</b>  15 mm Plastic spacer x1	<b>L</b>  Z-key x1
<b>M</b>  7 mm Cover cap x4	<b>N</b>  30 mm Wooden screw x2	<b>O</b>  Slat support x2
<b>P</b>  Slat support plate x2	<b>R</b>  15 mm Wooden screw x16	


## Tools required



Phillips screwdriver  
(medium)



Flatblade screwdriver  
(medium)



Small  
hammer



Ruler/tape  
measure



Eye protection  
(when using a  
hammer or glue)

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170





# Assembly Instructions

## Step 1

### Insert dowels

Insert dowel **D** in components


**1** and **6**

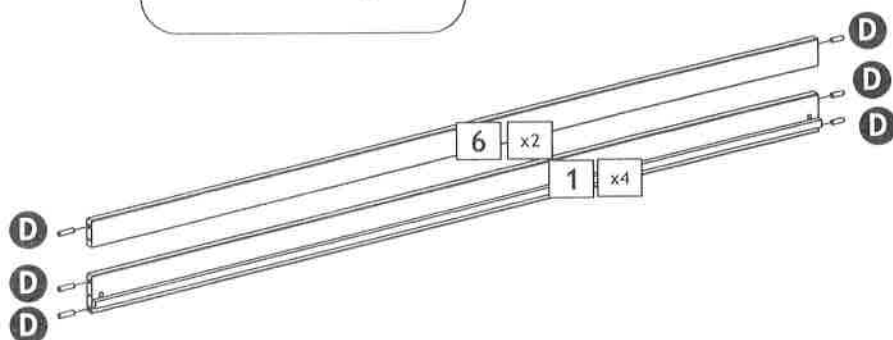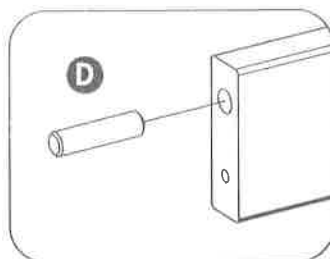

## Step 2

### Mounting legs

Attach long side rail **6** using wooden screw **G** and long side rail **1** using bolts **A** and barrel **B** to leg **2** and leg **3**

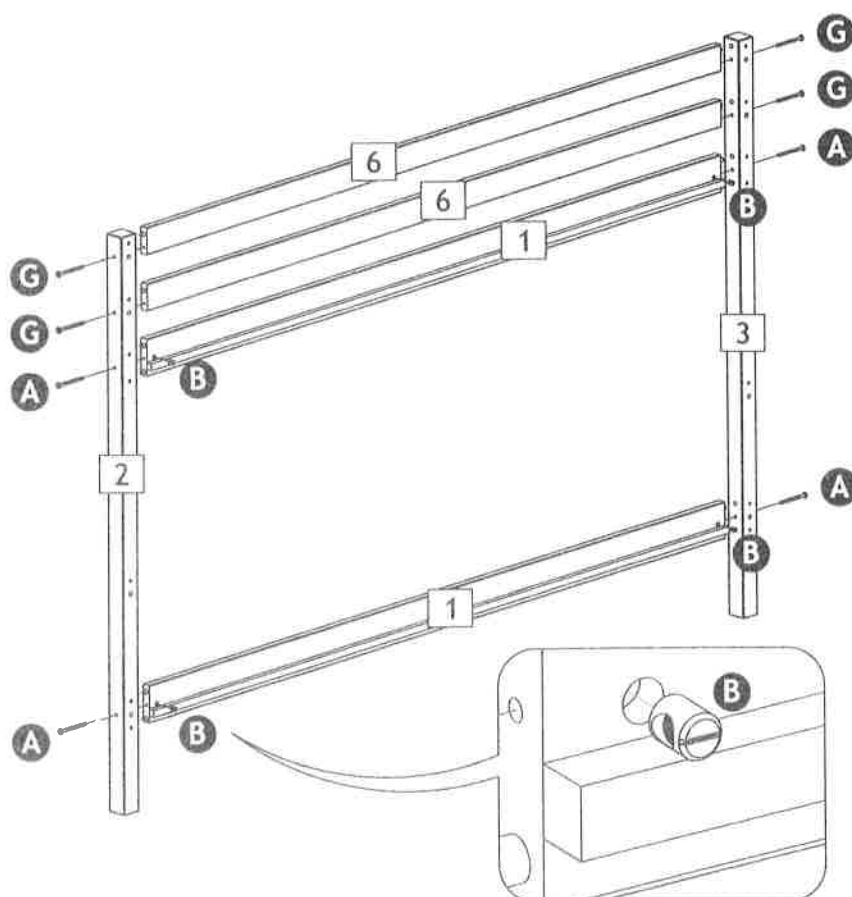


# Assembly Instructions

## Step 3

### Mounting short legs

Attach long side rail **1** to short leg **14** and short leg **15** using bolts **A** and barrel **B**

Insert dowel **D** in end cross rail **9**

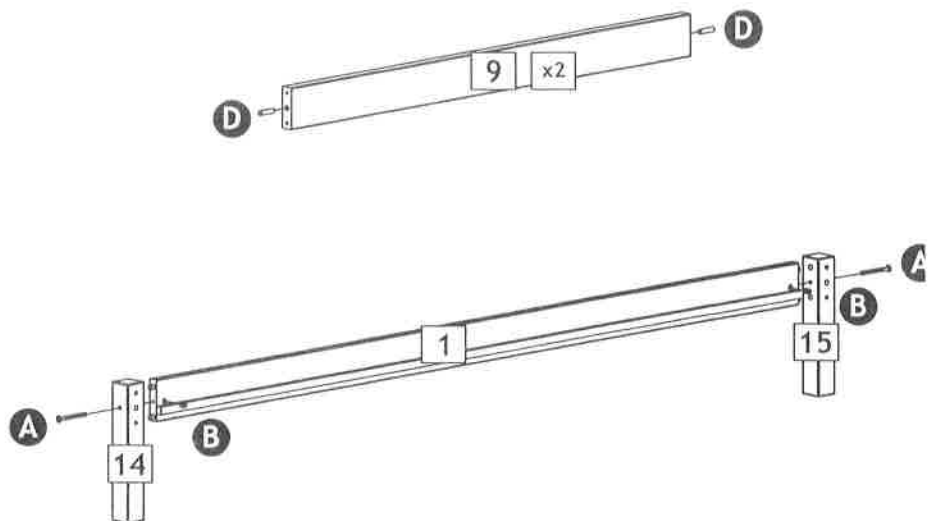


## Step 4

### Assembling frame

a. Mount end cross rail **9** between long legs and short legs using wooden screw **G**

b. Mount slat support plate **P** on center of cross rail **9** with wooden screw **R**

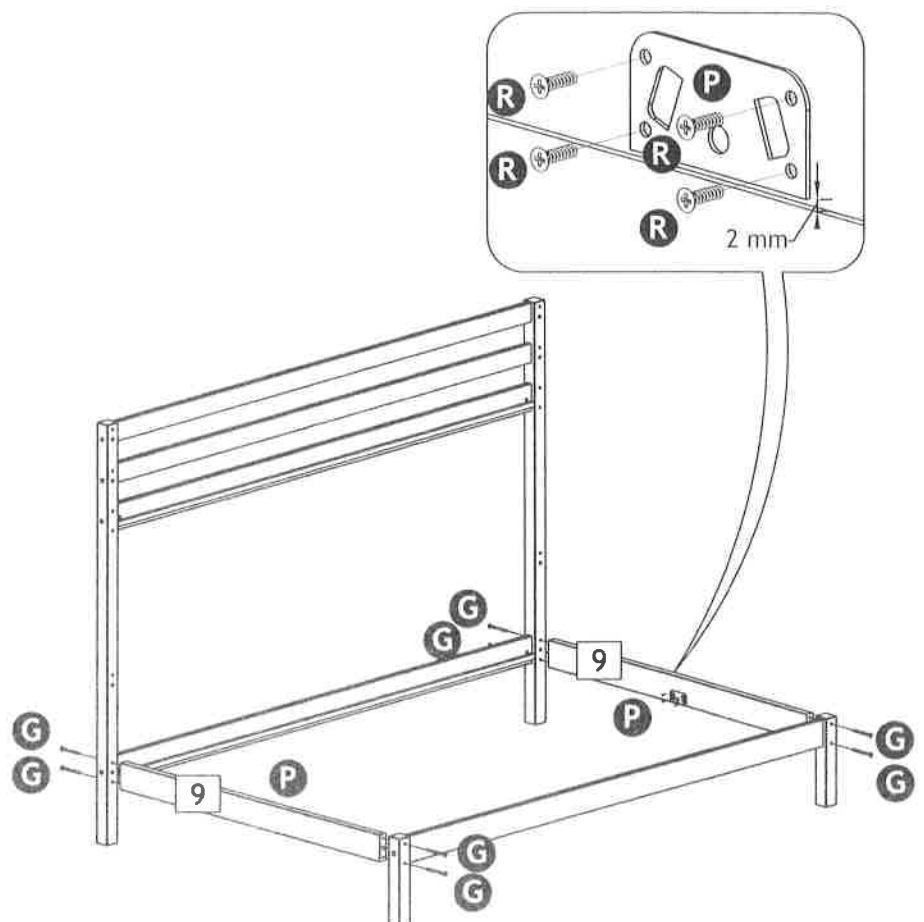


# Assembly Instructions

## Step 5

Assembling of middle leg + 12  
dowels insert

Insert dowel **D** in parts **12** x 6


Assemble middle leg **4** and **5**  
using wooden screw **G**

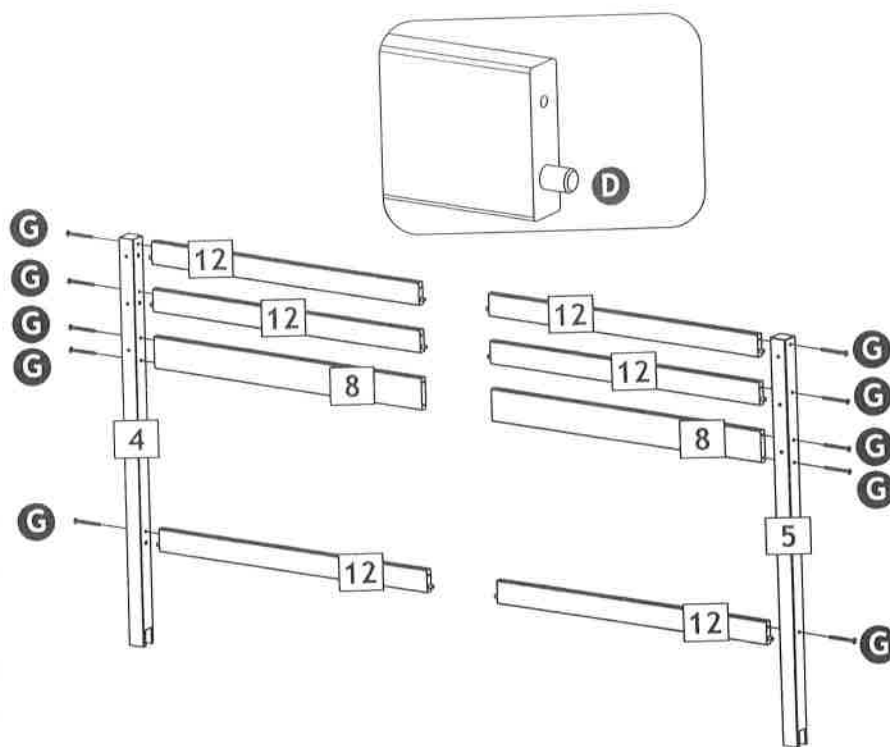

## Step 6

Assembling frame

Mount middle leg frame to big leg  
frame with wooden screw **G**

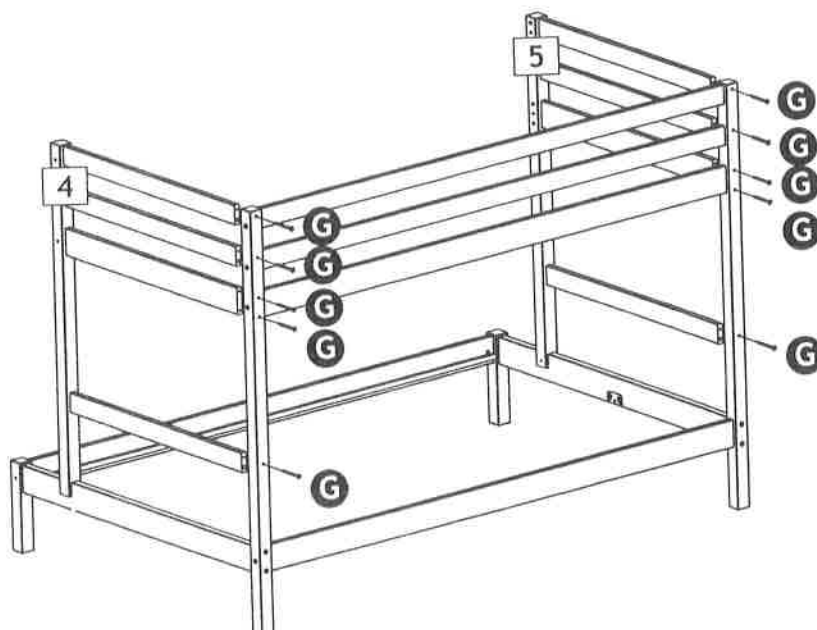

# Assembly Instructions


## Step 7

**Assembling of front rails+insert dowel in rail 7x2**

Insert dowel **G** in middle side rail **7**

Assembling Long side rail **1** using bolt **A** and barrel **B** and middle side rail **7** using wooden screw **G**

Fix middle leg **4** and **5** using wooden screw **N**

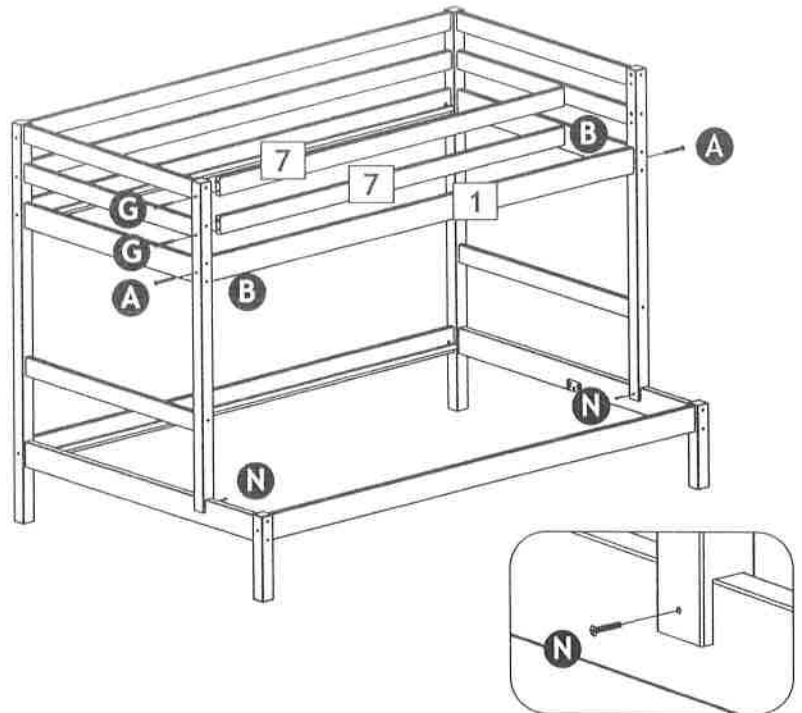


## Step 8

**Assembling stair**

Assembling stair steps **17** to stair side **11** using wooden screw **H**

**Important:** Please read information on label and do not remove

Mounting stair support hook **C** on stair side **11** using wooden screw **I** in to "pilot" holes

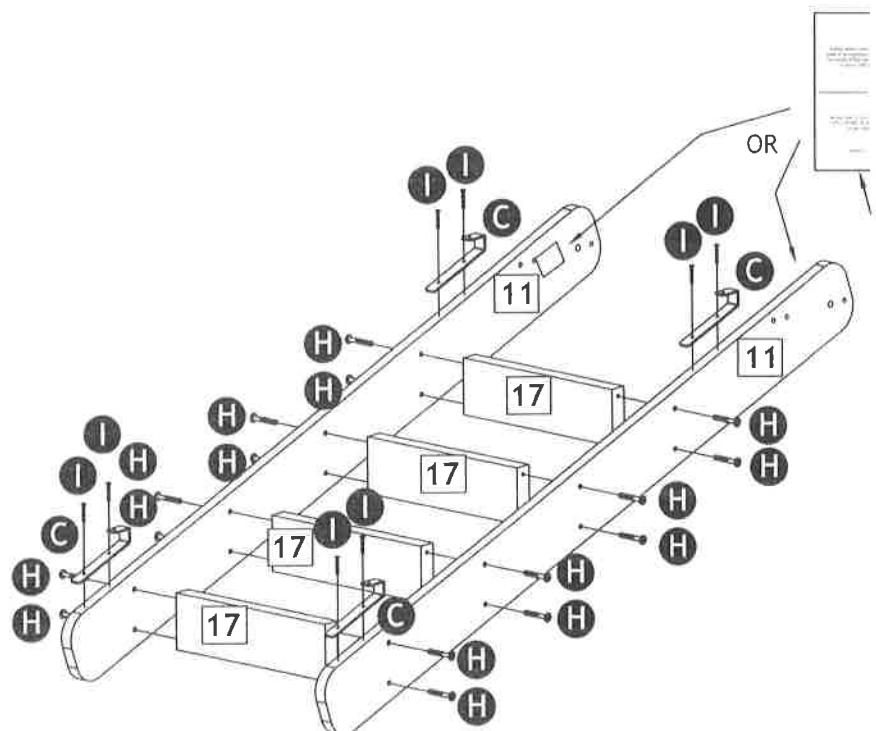

# Assembly Instructions



## Step 9

### Attach stair

Attach stair using wooden screw **H** x4 and plastic spacer **K** on second screw down.

Then bolt **E** metal head **F** and cover 3 remaining holes with plastic cover **M**.


Use wooden screw **R** to attach Stair support hook **C** to side rails **1**

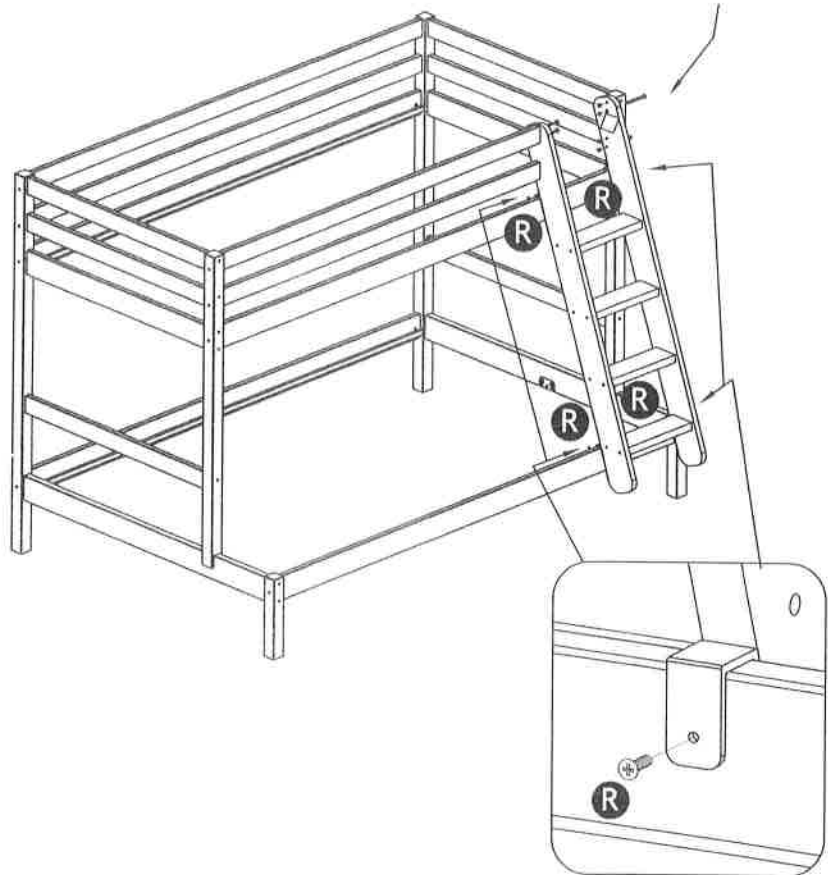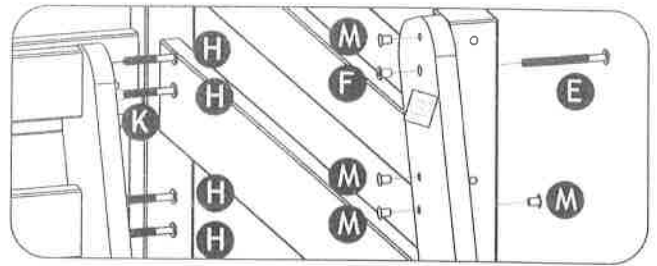

## Step 10

### Mounting slat support

Mounting slat support **O** on middle support **10** using wooden screw **R**

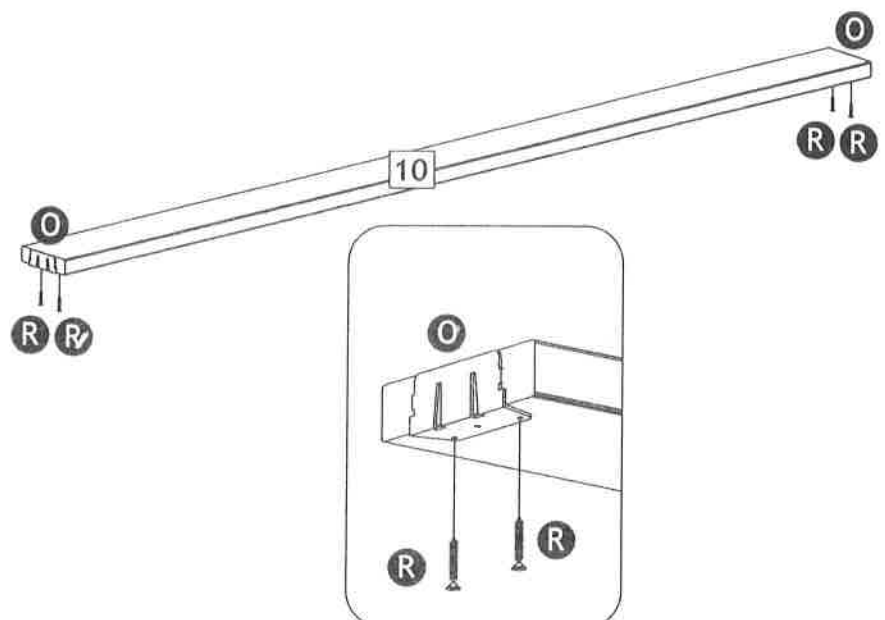




# Assembly Instructions

## Step 11

Attach middle support

Attach middle support **10**

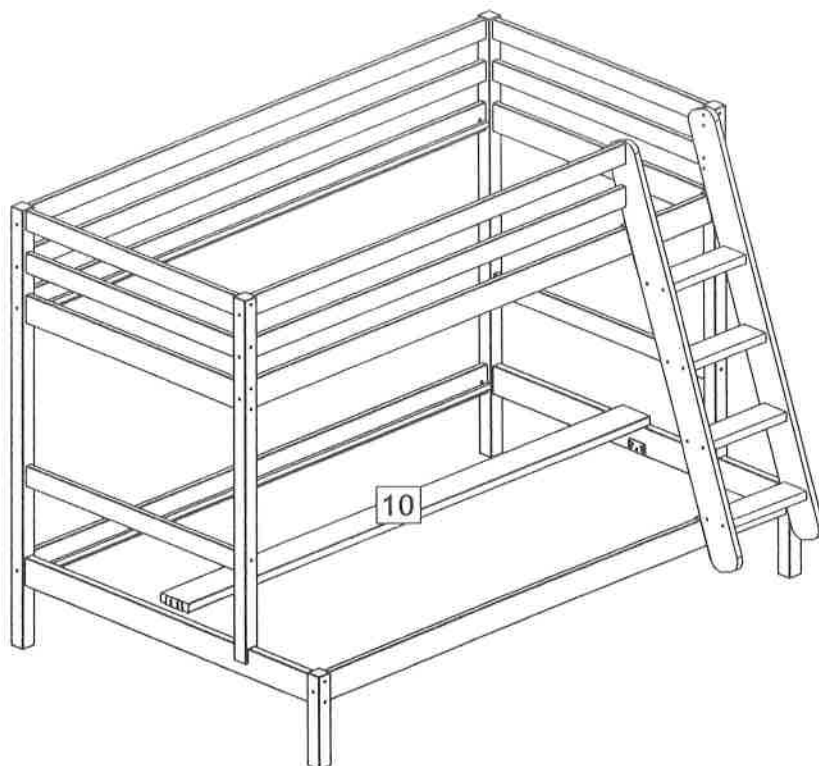

## Step 12

Adjust slats

Place one slat **16** and **13** in center of bed and next slat place with 64 mm space, using wooden screw **J**

Start assembling slats **16** and **13** from center of the bed

