
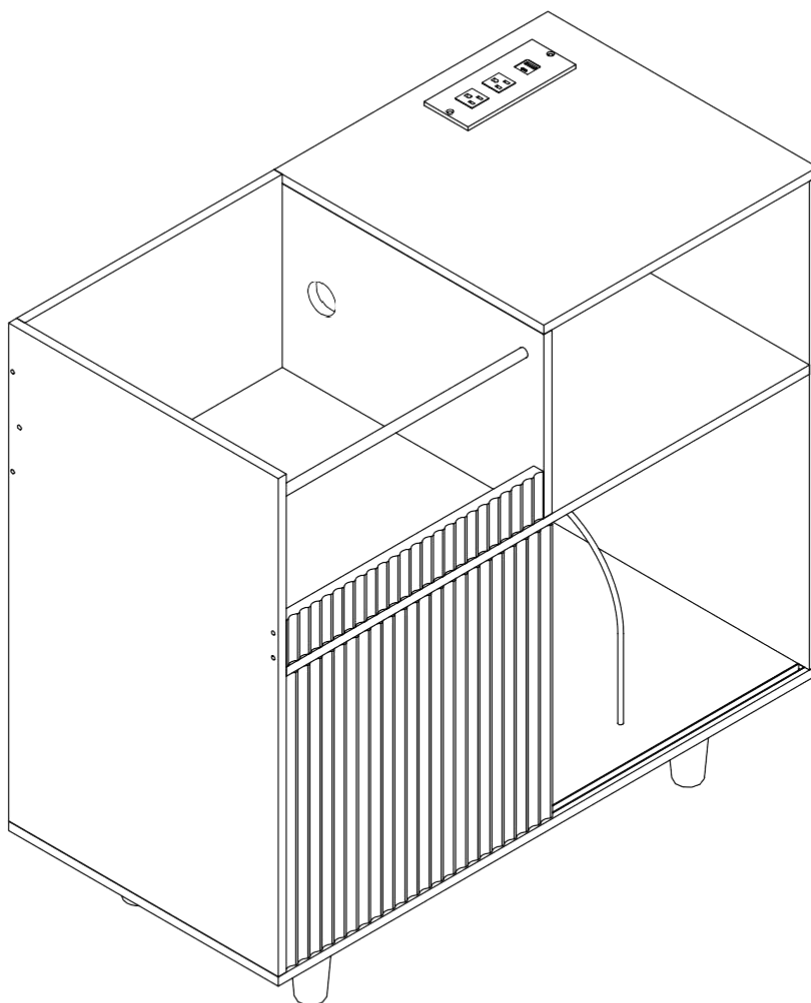
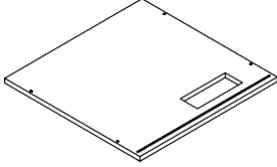
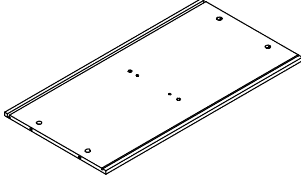
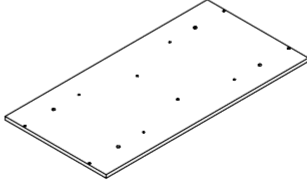
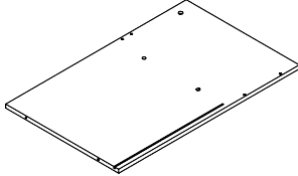
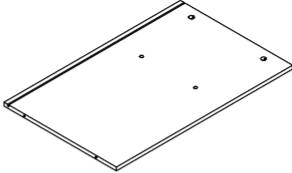
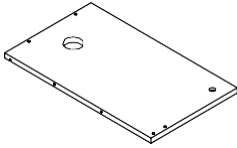
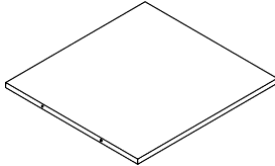


Assembly Instructions






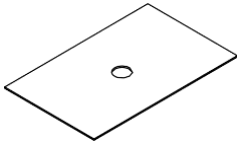


Two-adults installation required







Component

Letter (number)	Part	Design	Quantity
①	Top Panel		X1
②	Shelf Panel		X1
③	Bottom Panel		X1
④	Left Side Panel		X1
⑤	Right Side Panel		X1
⑥	Upper Middle Divider Panel		X1
⑦	Upper Middle Divider Panel		X1
⑧	Upper right back Panel		X1






Component

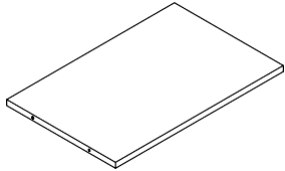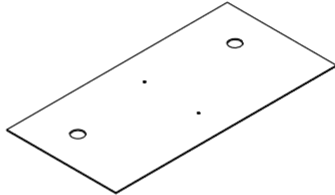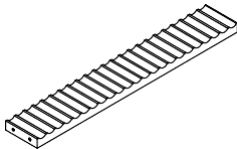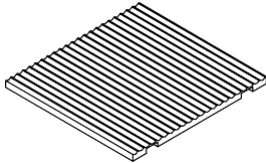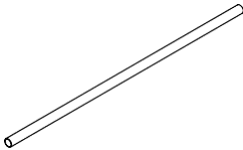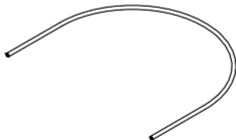Letter (number)	Part	Design	Quantity
9	Upper left back Panel		X1
10	Lower Back Panel		X1
12	Upper Left Baffle Panel		X1
13	Door Pane		X1
14	Wooden Feet		X4
15	Tube		X1
16	Partition Bar		X2


Component

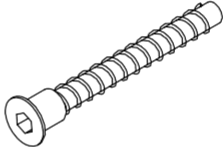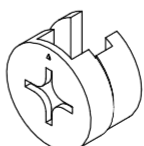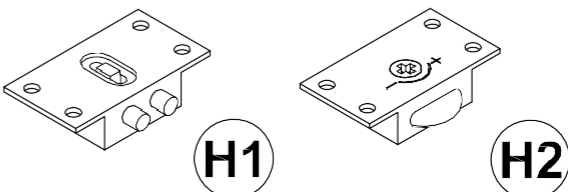Letter (number)	Part	Design	Quantity
A	Screw M4*10 mm		X16
B	Screw M4*12 mm		X2
C	Screw M5*25 mm		X4
D	Screw $\Phi 5 * \Phi 9 * 35$ mm		X18
E	Cam Screw		X6
F	Cam Screw		X4
G	Linkage Nut		X10
H	Sliding Door Hardware Set	  	X2




Component

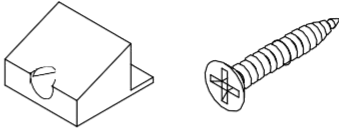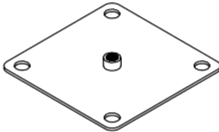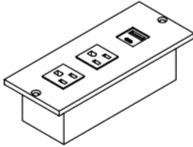
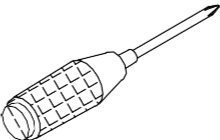
Letter (number)	Part	Design	Quantity
I	Screw M6*10 mm		X18
J	Back Panel Fastener		X10
K	Anti-Tip Kit		X2
L	Iron Sheet		X4
M	Socket		X1
N	LED Strip Lights		X1
O	S3 Allen Wrench (for tightening screws)		X1
P	Phillips Screwdriver		X1

Before starting the installation, let's have an understanding of the main parts of the product.



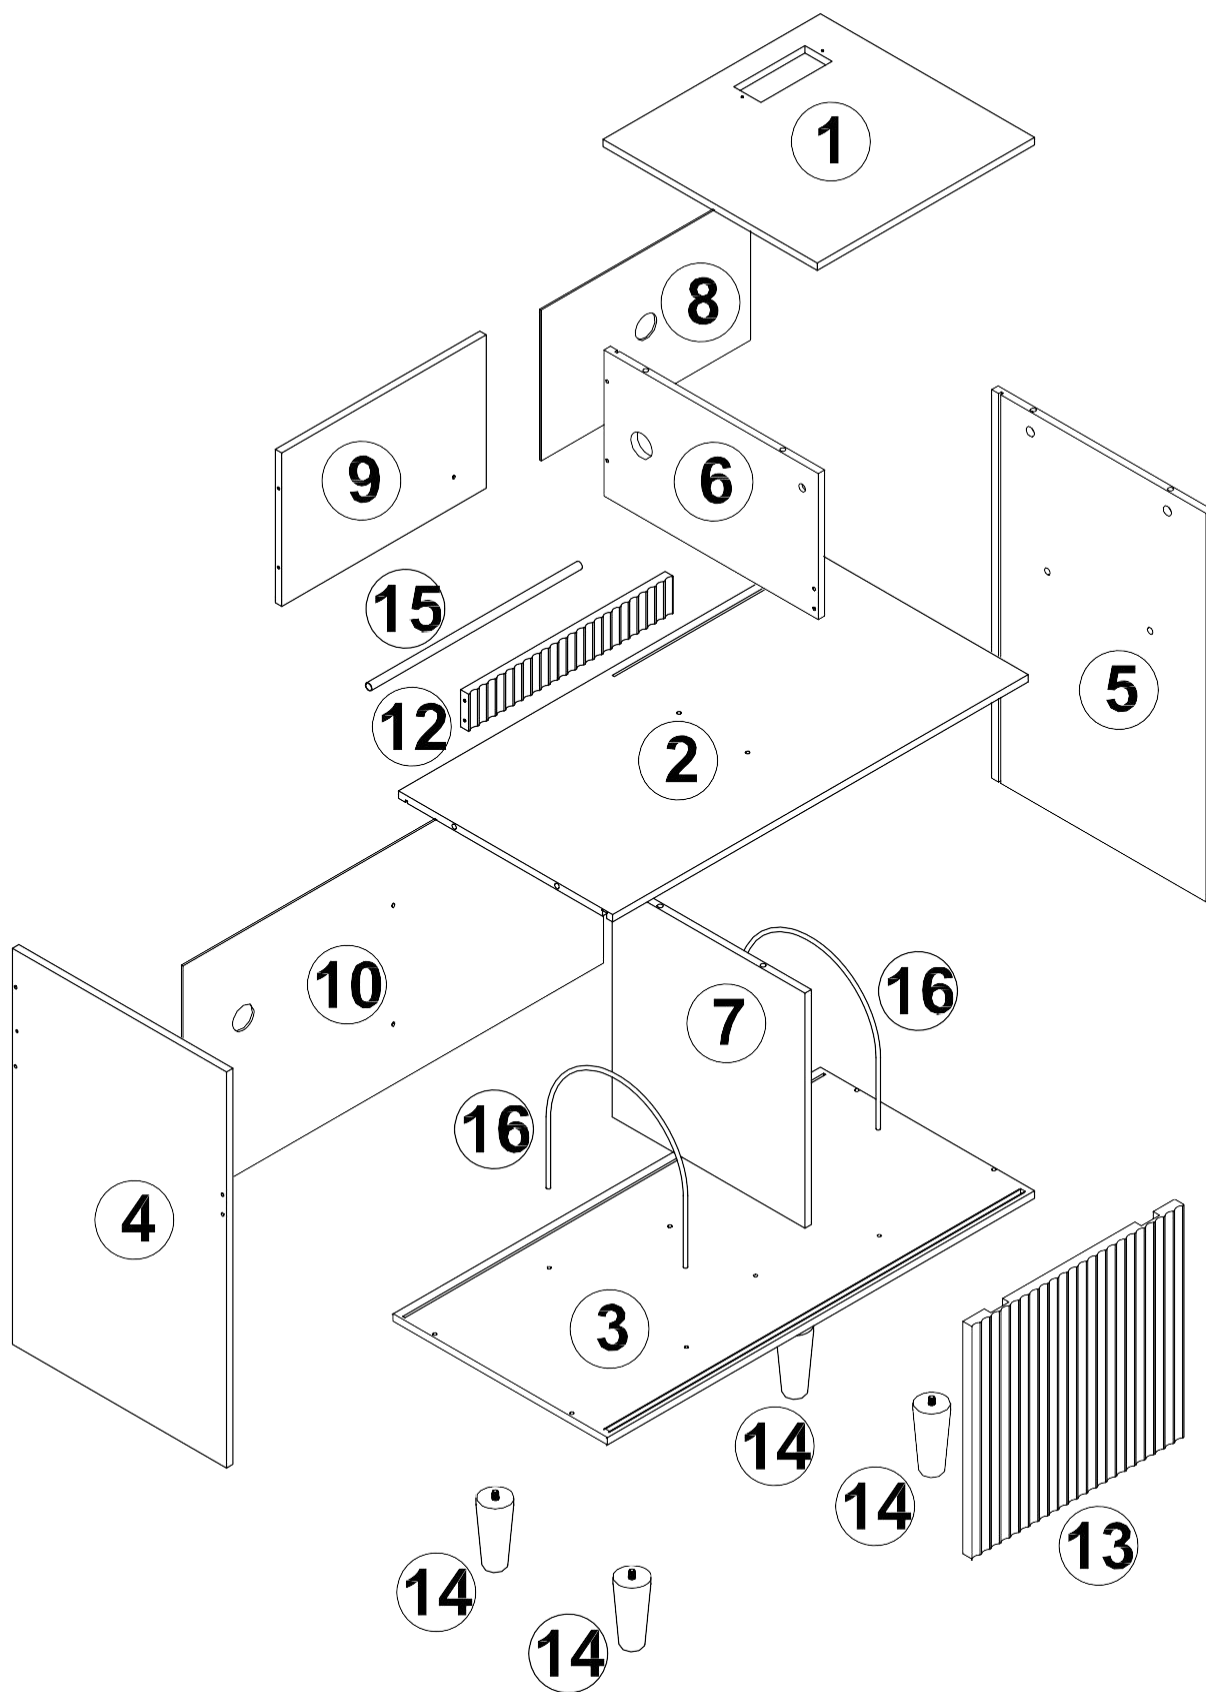


Step 1



E	F	P
 x 2	 x 4	

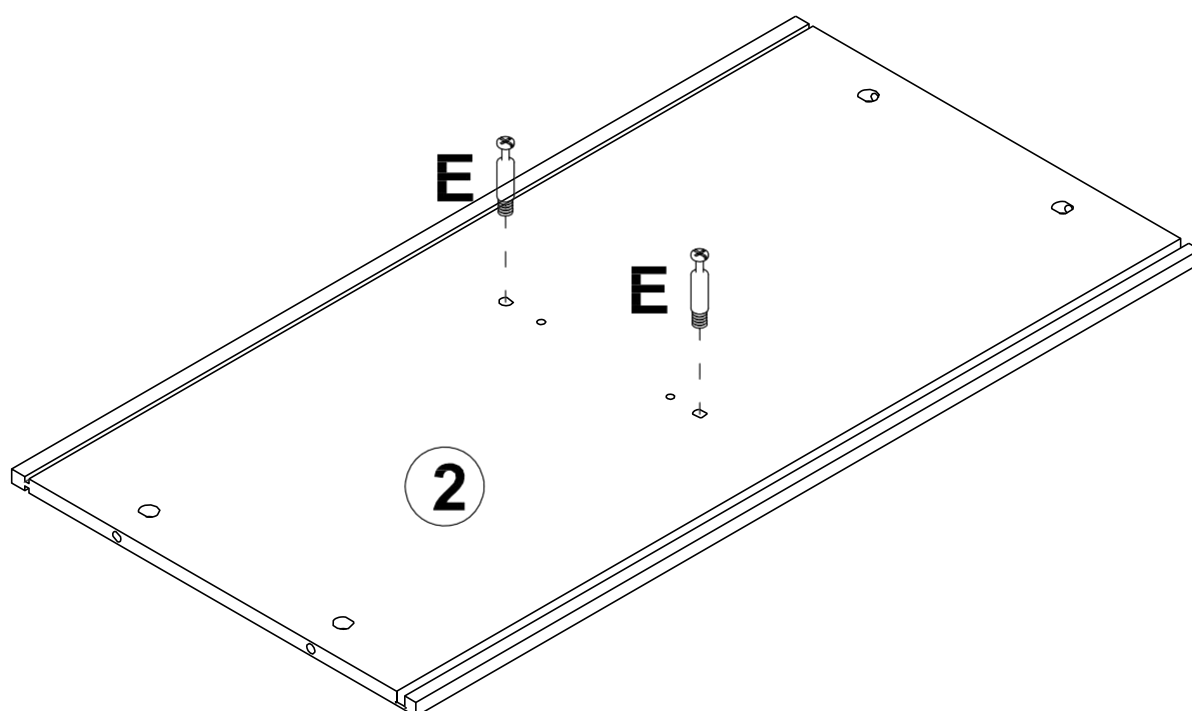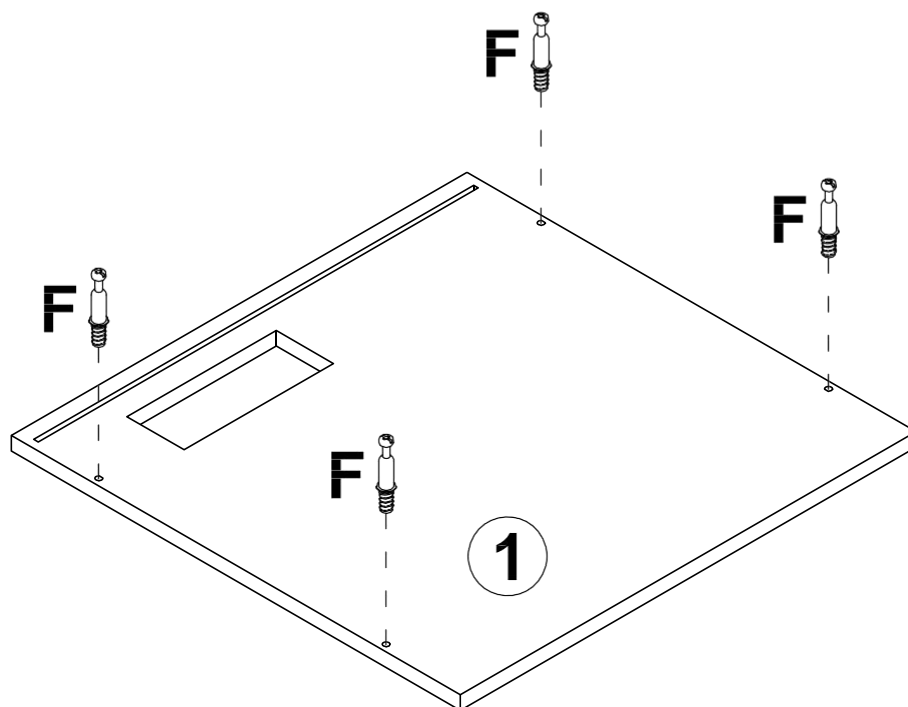

Step 2

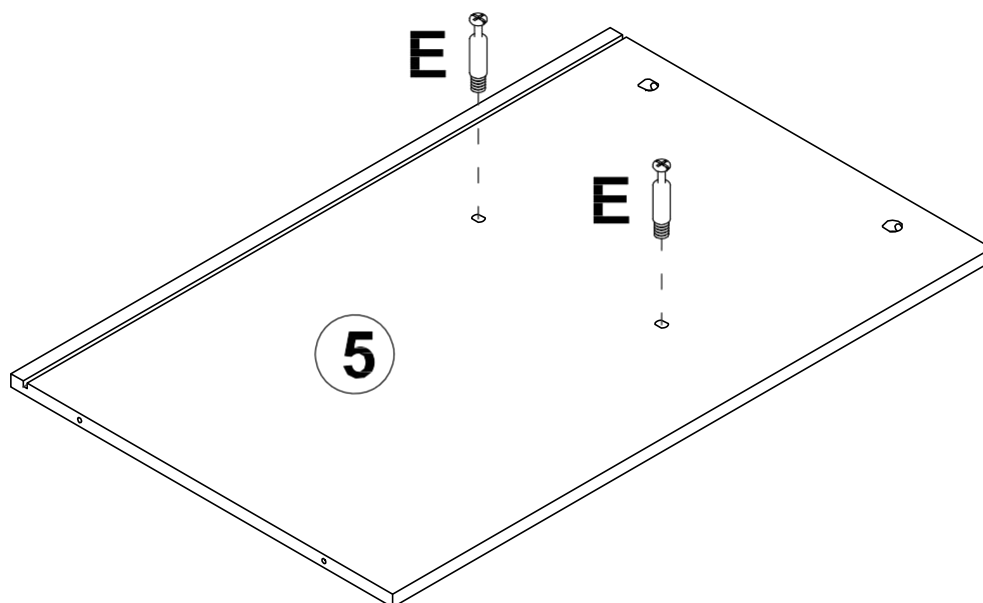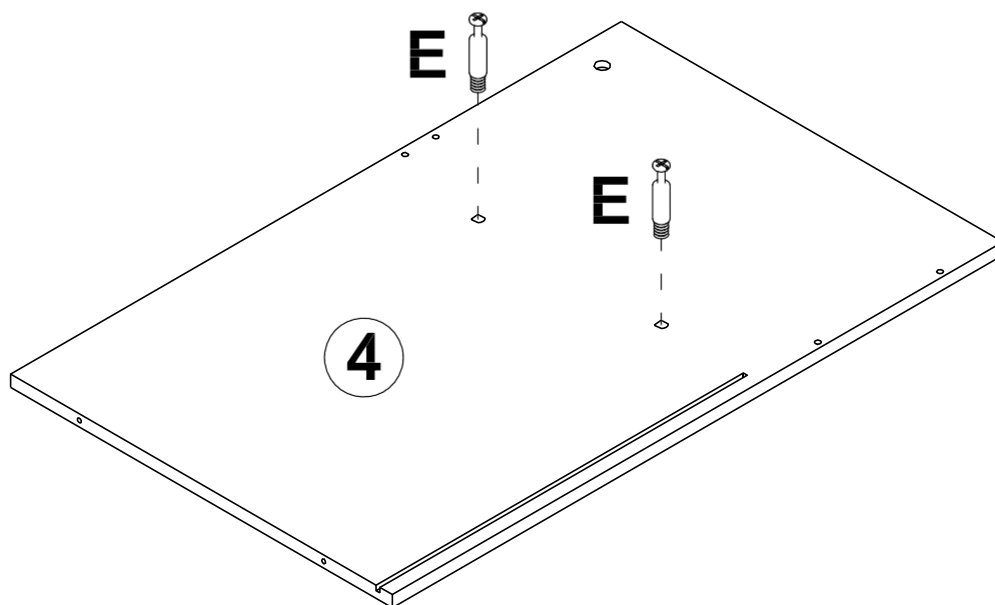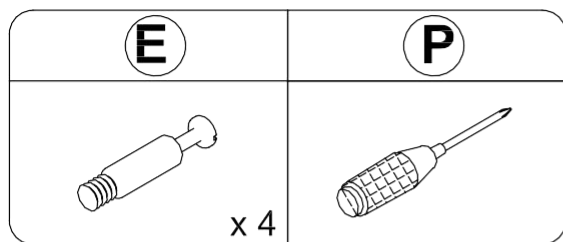


Step 3

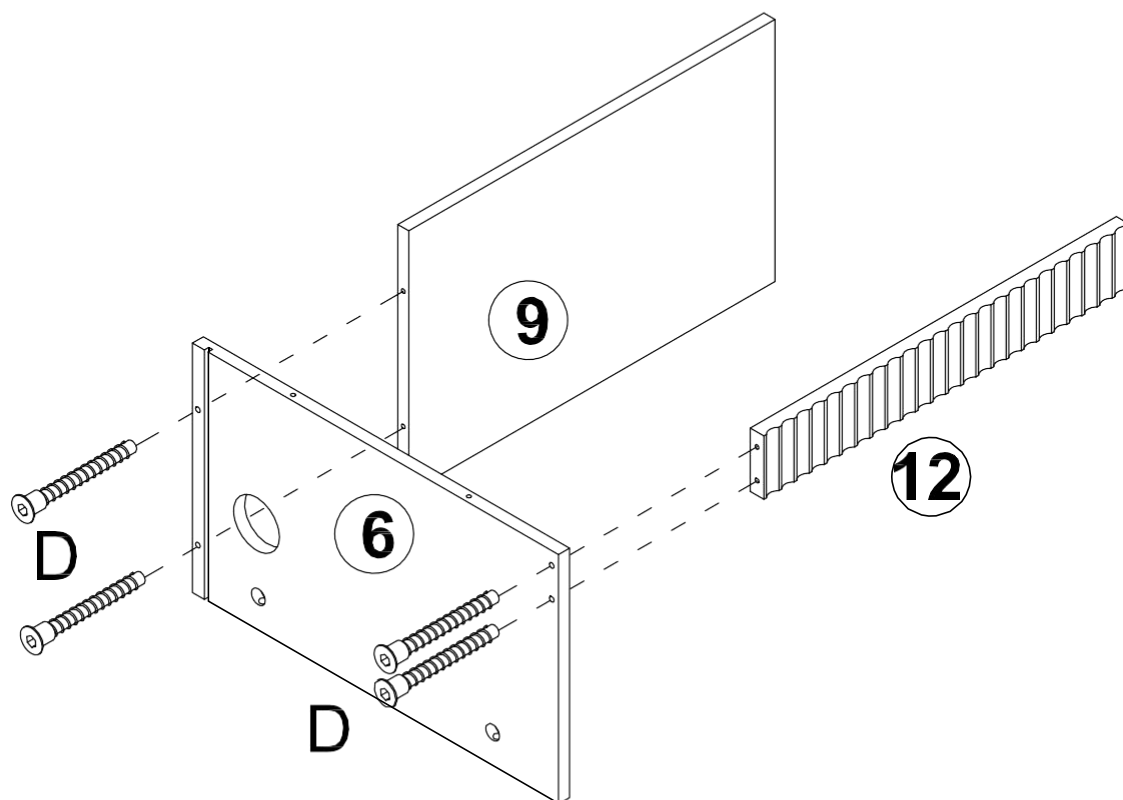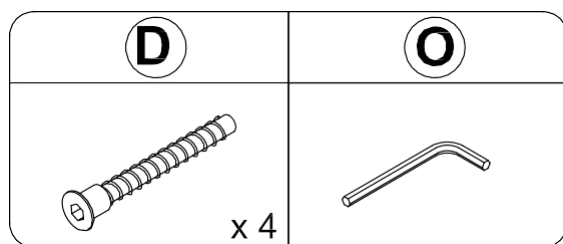


Note: Please check the hole orientation of panel # ⑥ during installation to avoid incorrect assembly.

Step 4

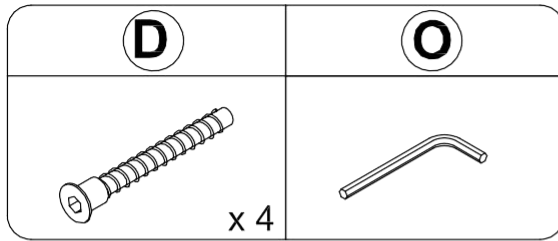



Note: Please note the correct slot direction of Panel #④.

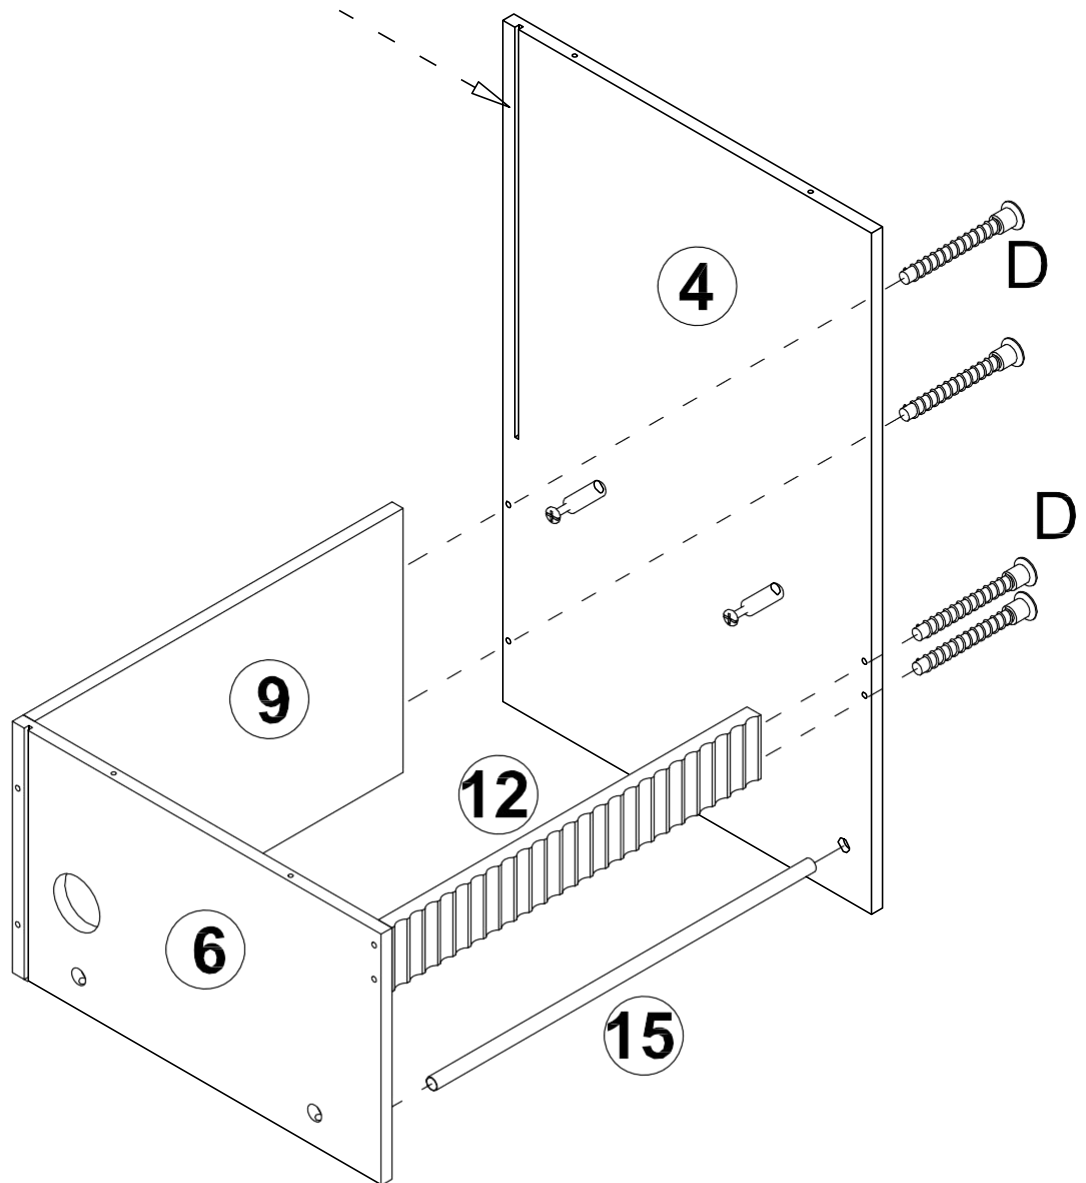


Step 5

② Side A


② Side B

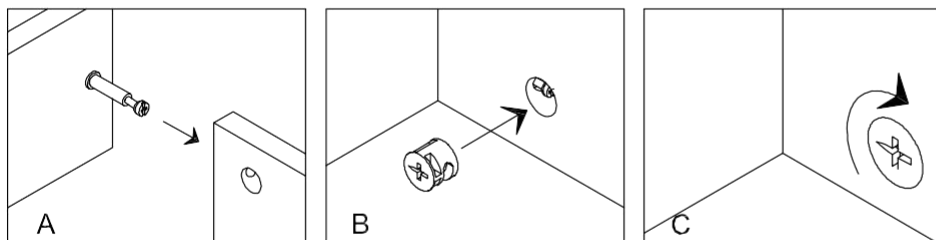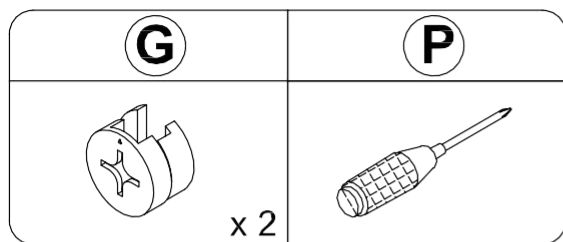

Back Panel Slot


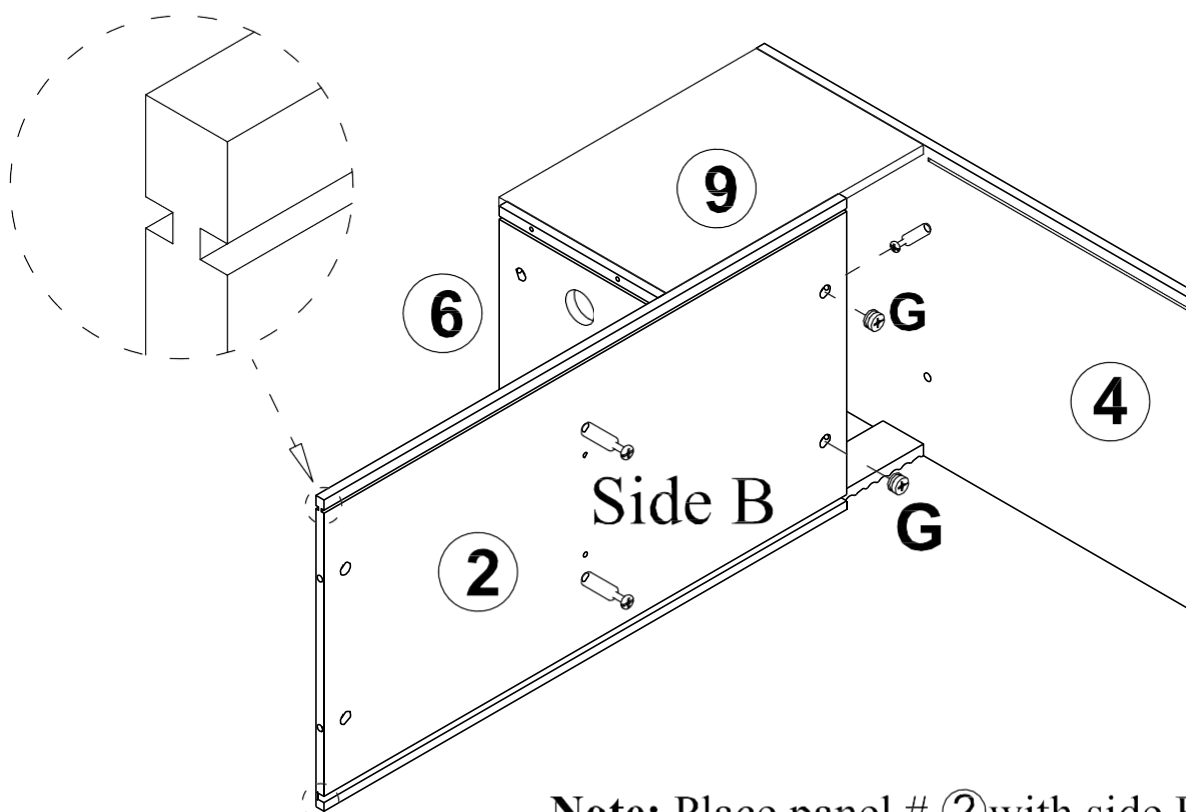


Note: Place panel # ② with side B facing down, and pay attention to the front and rear orientation of the slot to avoid incorrect installation!



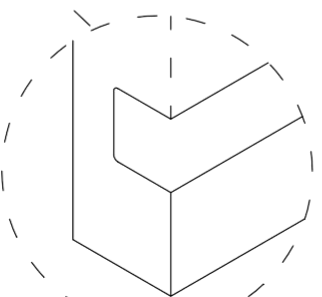


Front Panel Slot

Step 6

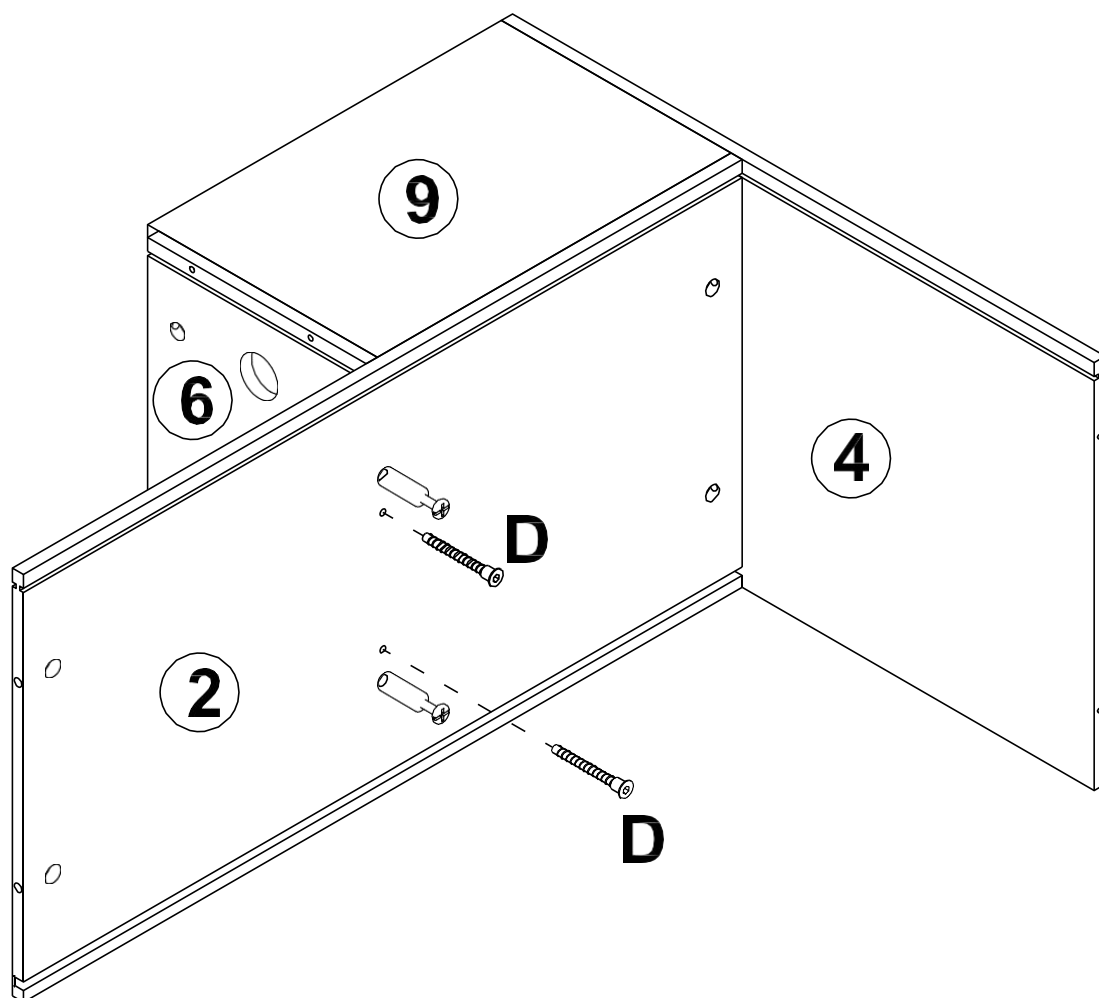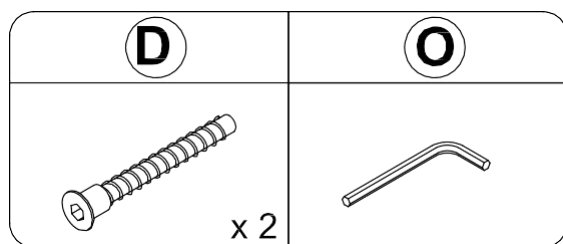


Step 7


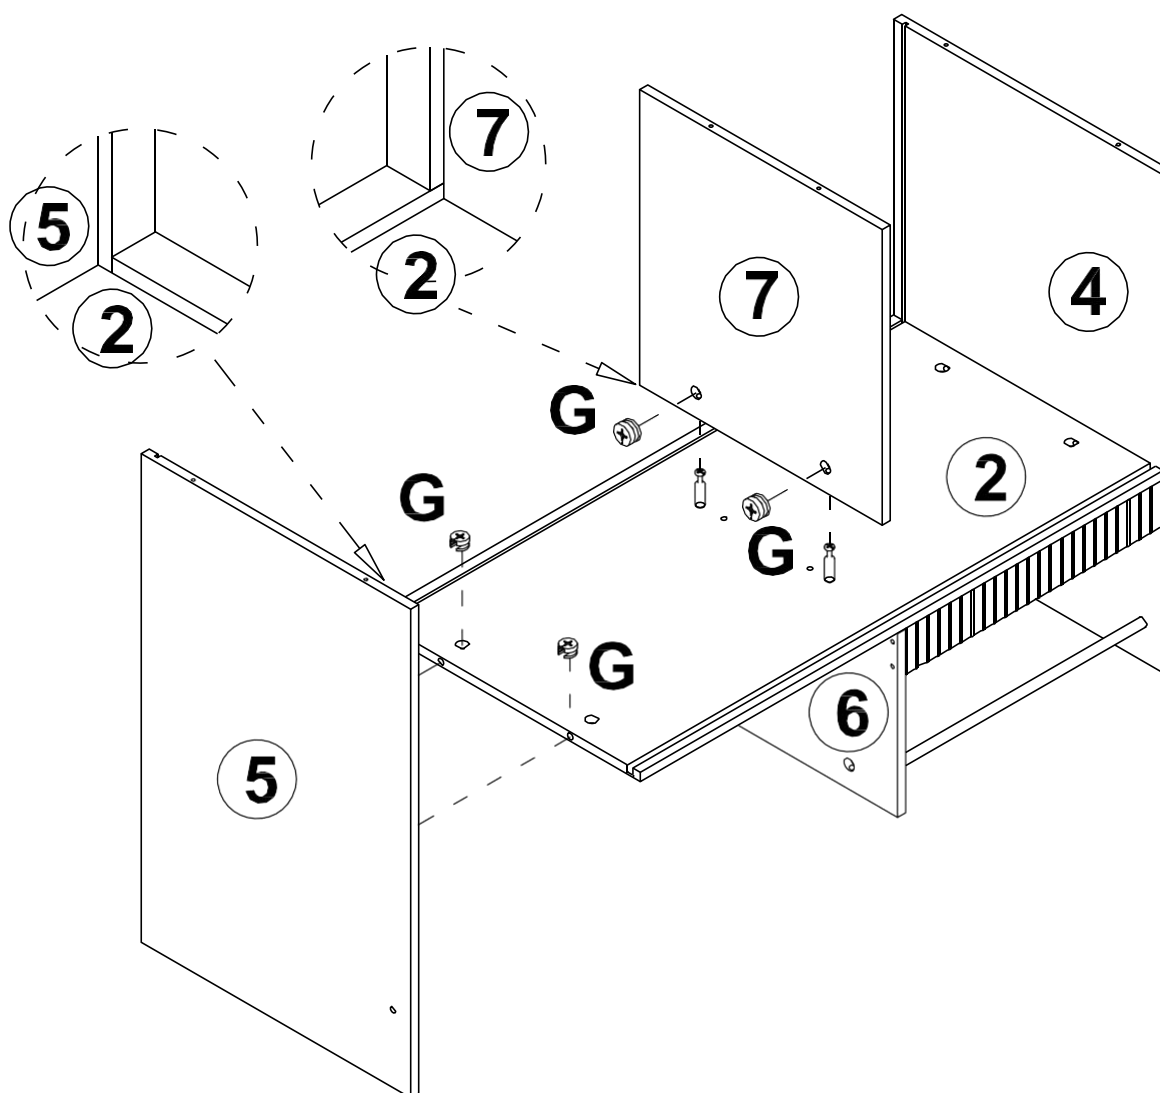
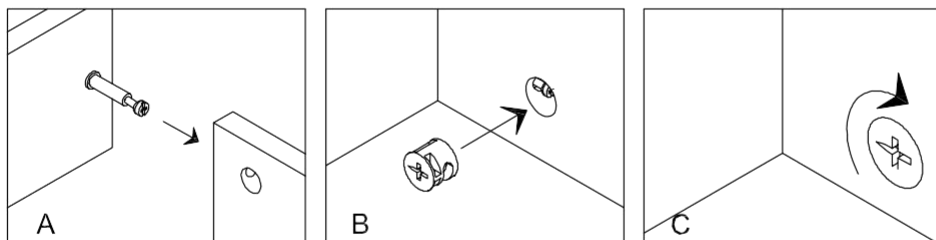
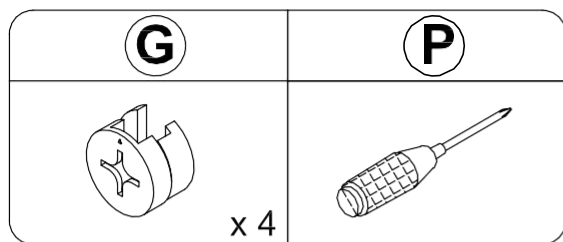


Step 8

Note: Panel # ⑩ must be inserted into the slots corresponding to panel # ④, and # ⑤.

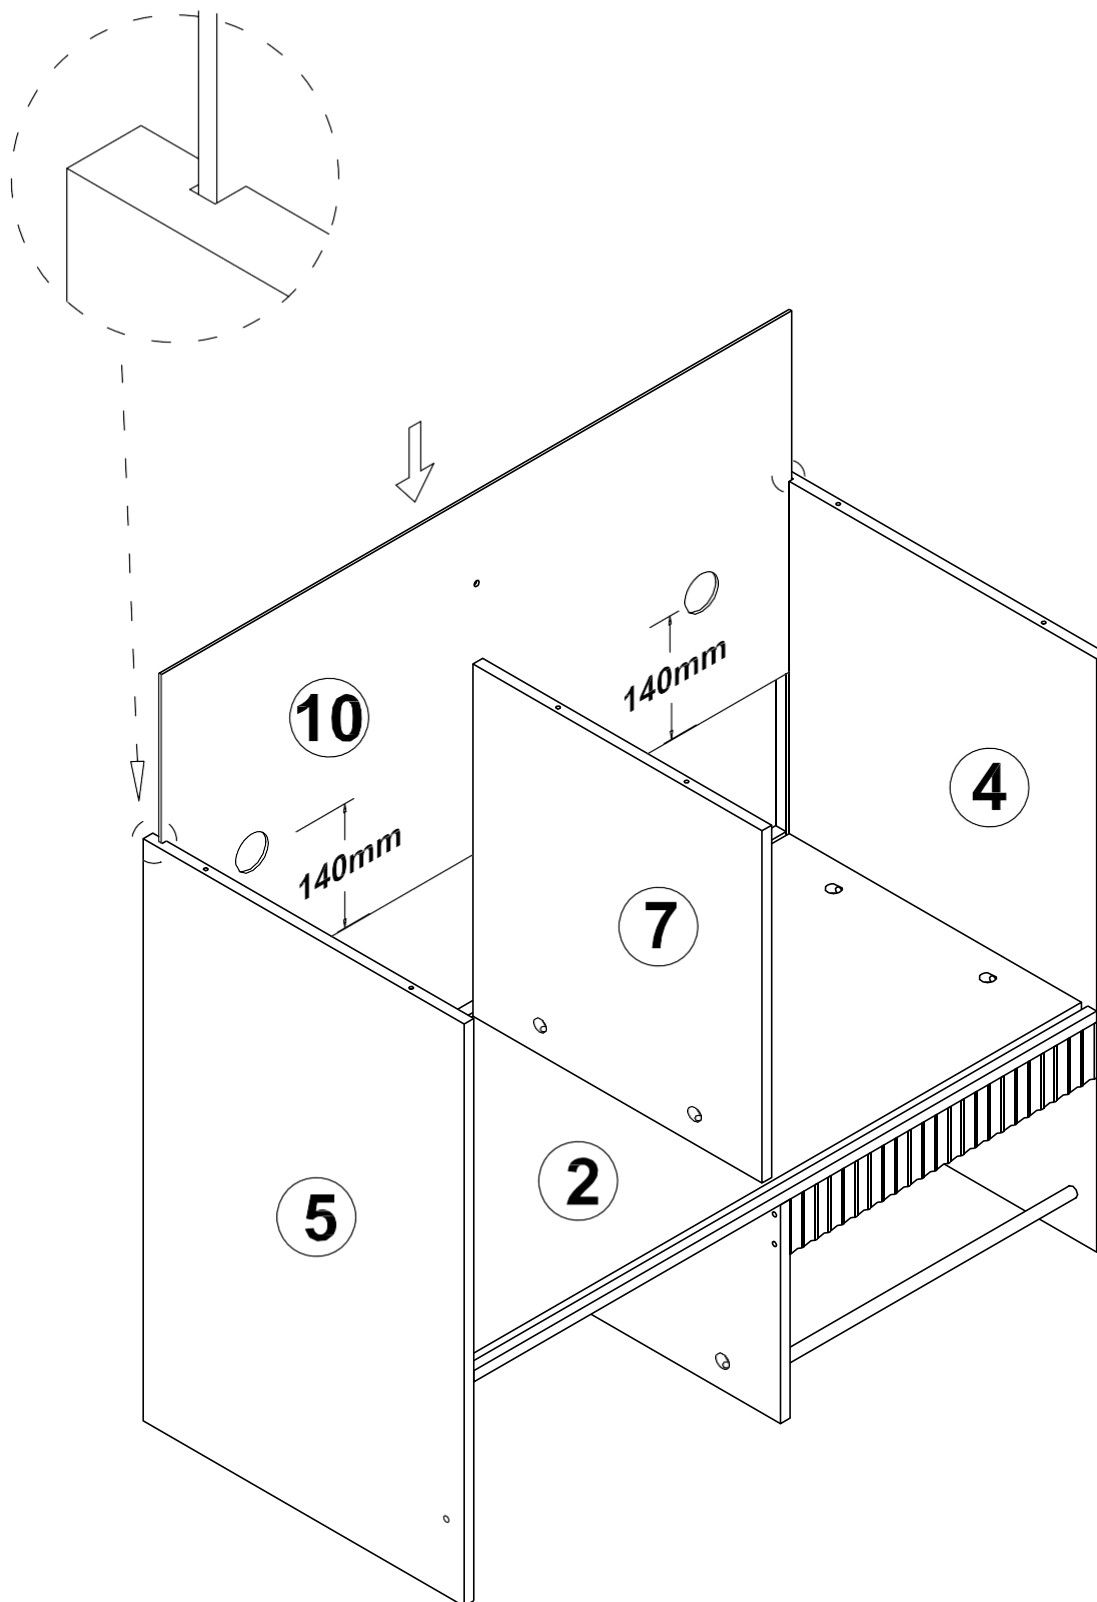


Step 9

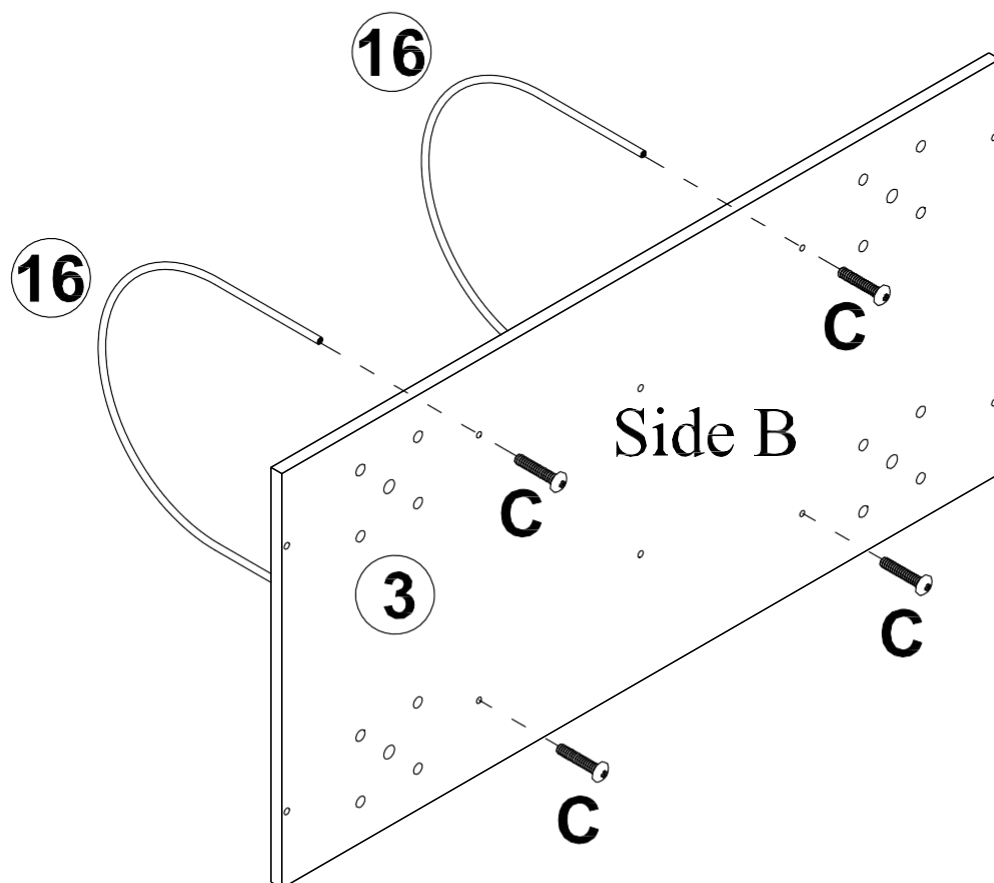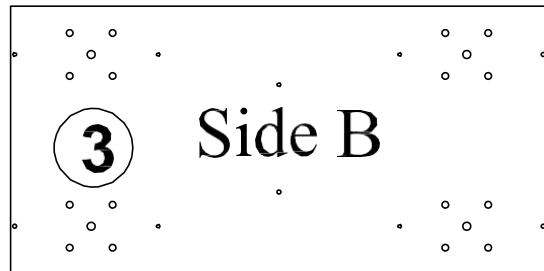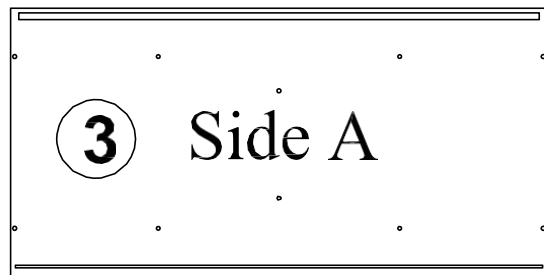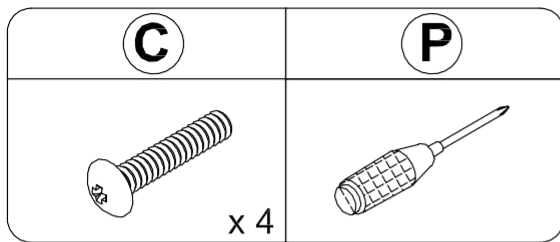


Note: Install fastener C on side B of panel # 3 to avoid incorrect assembly.


Step 10

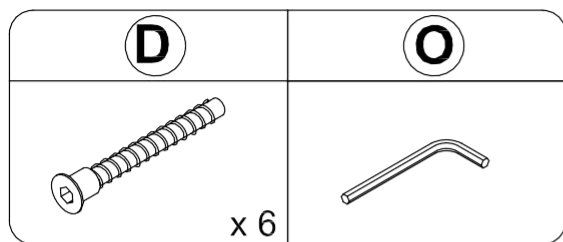


Note: Please install the middle **D** screw first, then install the **D** screws on both sides.

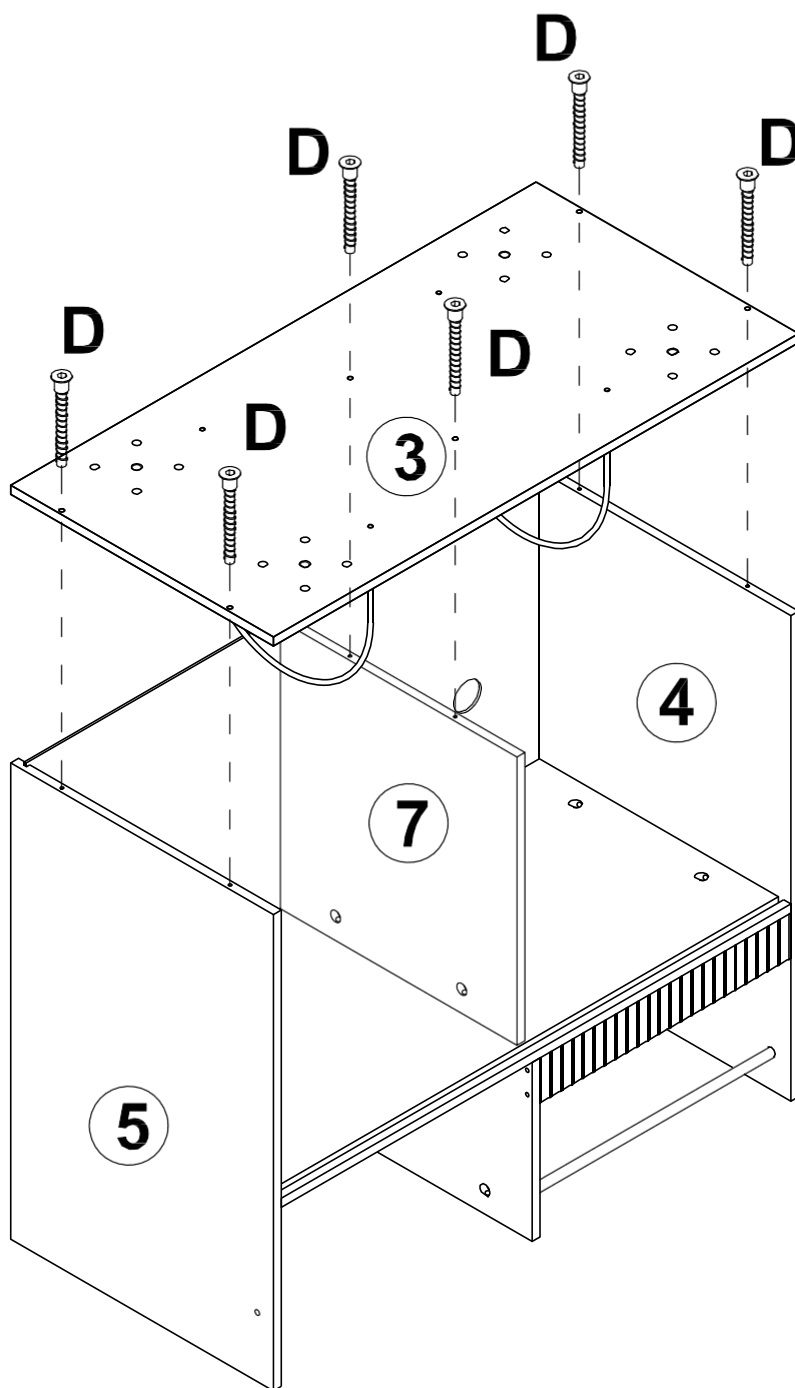


Step 11


I	L	O
		
x 16	x 4	

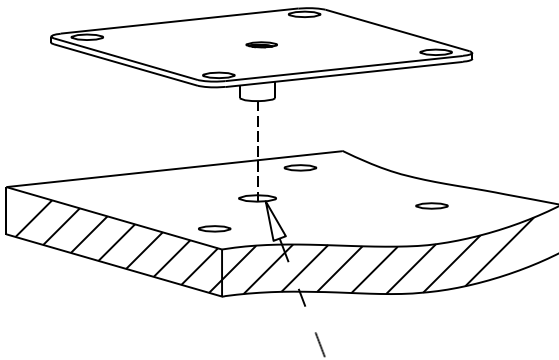

Note: During installation, the protruding area of the iron plate should be facing downwards.


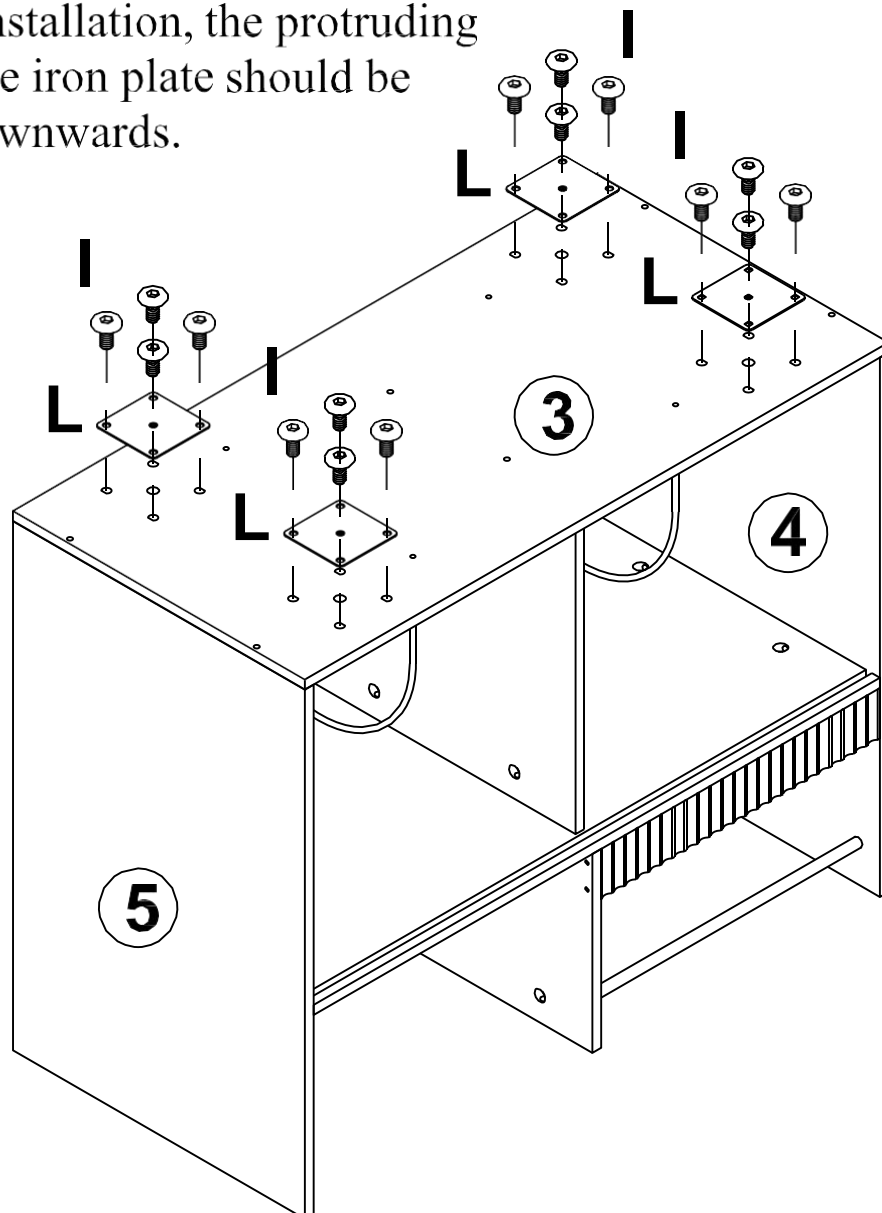


Step 12

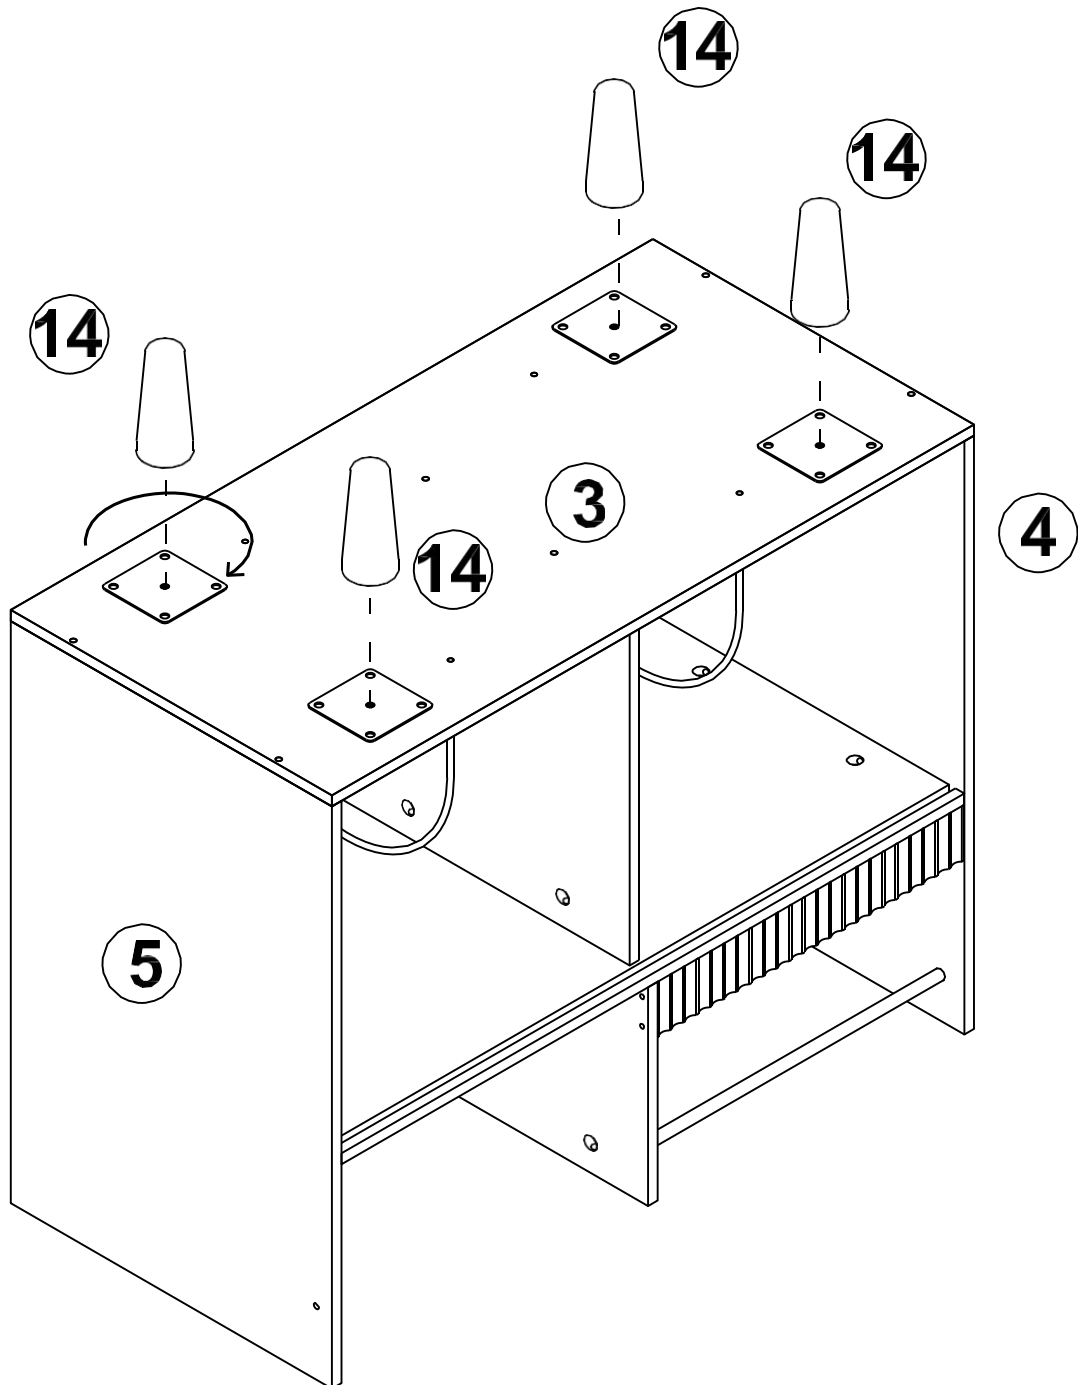


Note: The cabinet must be flipped by two people to avoid damage or personal injury.



Step 13

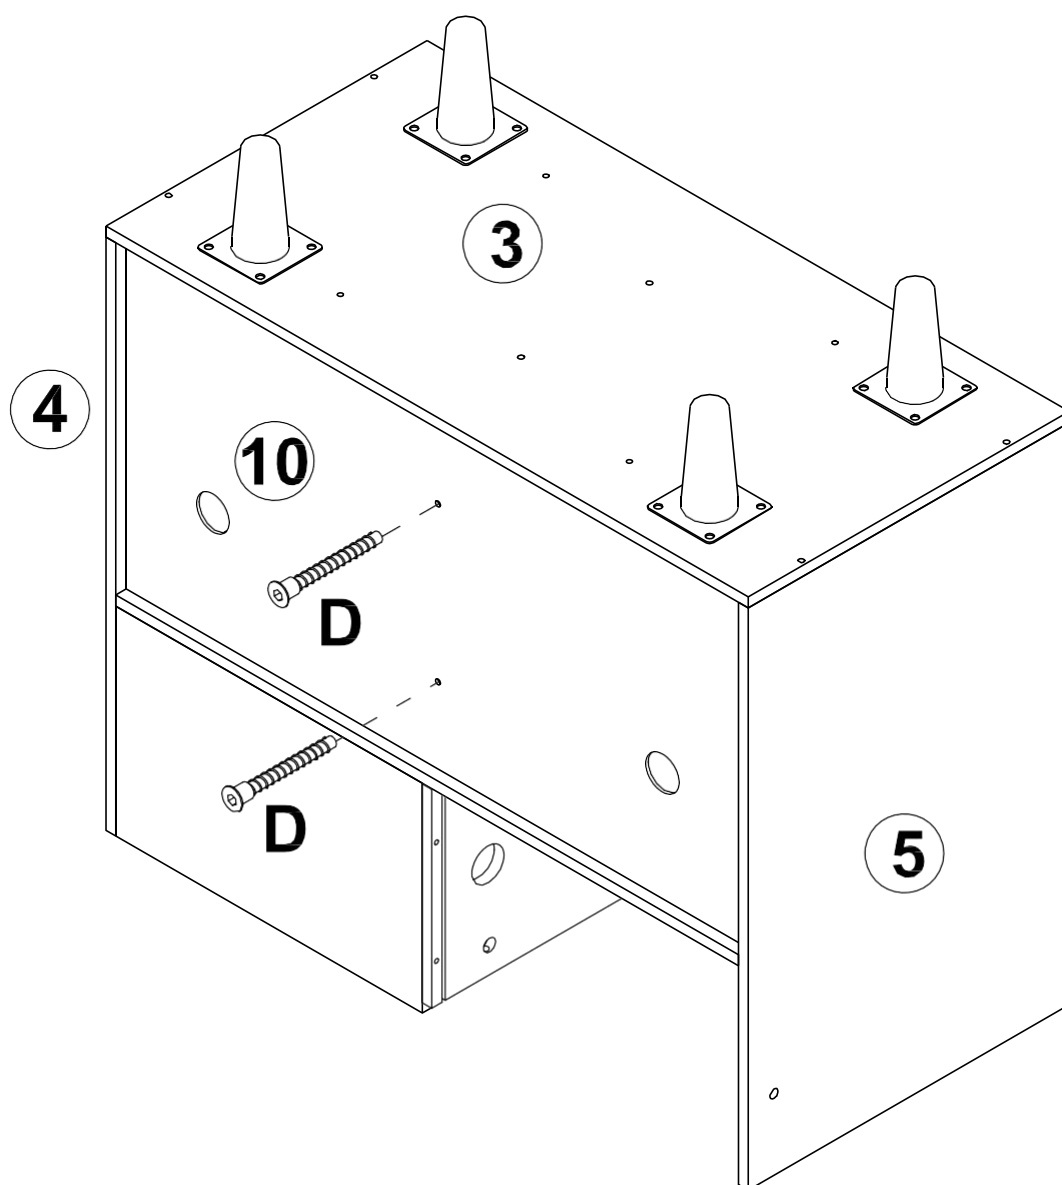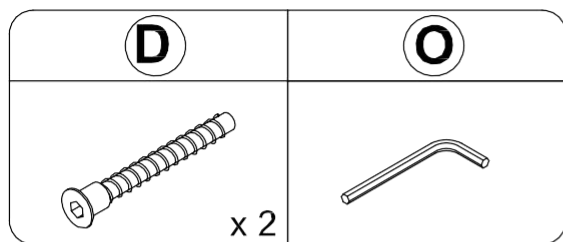


Step 14

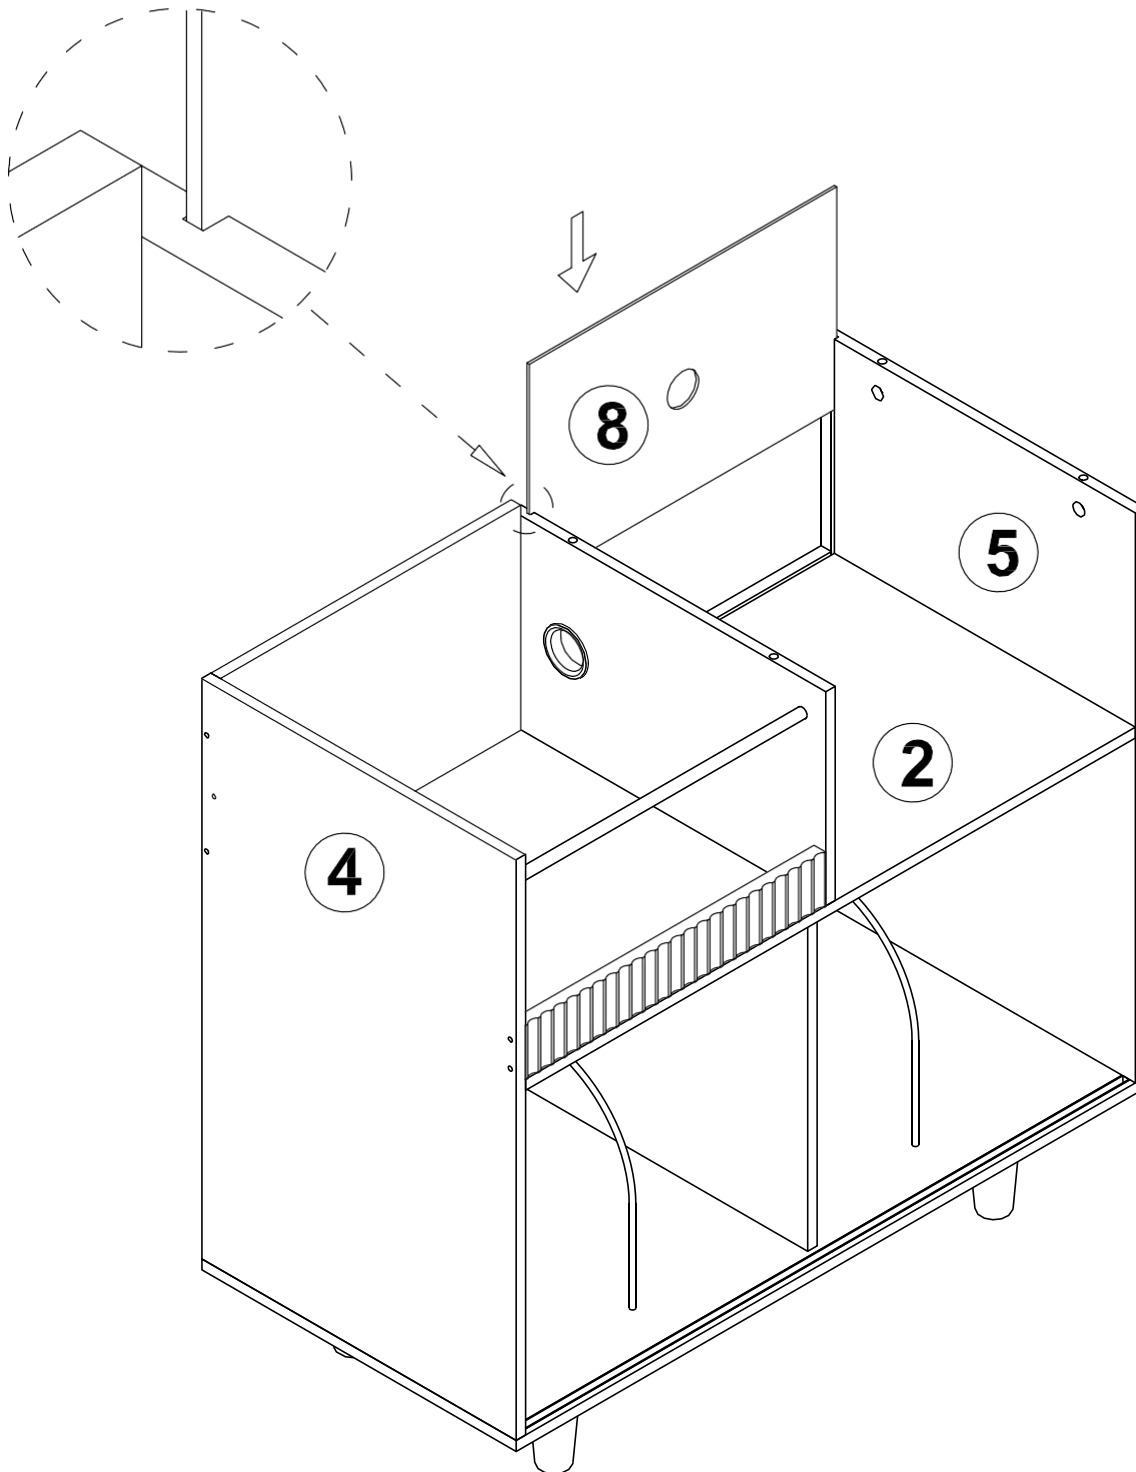

Step 15




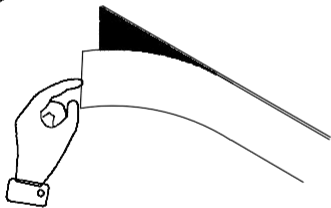
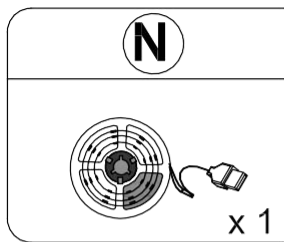


Peel off the tape, then press it firmly onto the top panel.


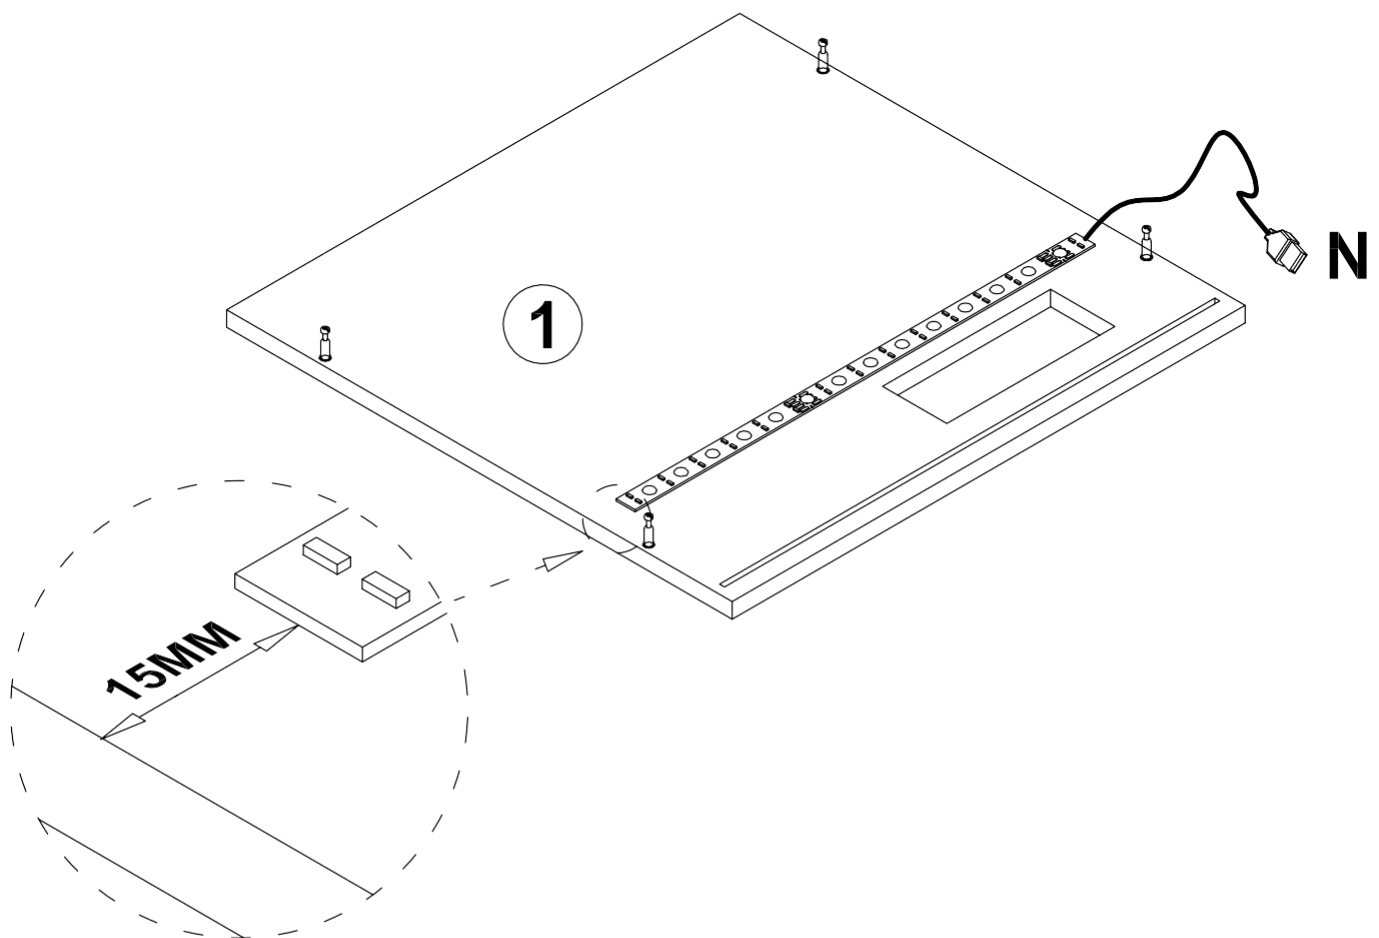



Note: Leave a clearance of at least 15mm on both sides of the light strip to ensure proper installation of panel #①.

Step 16

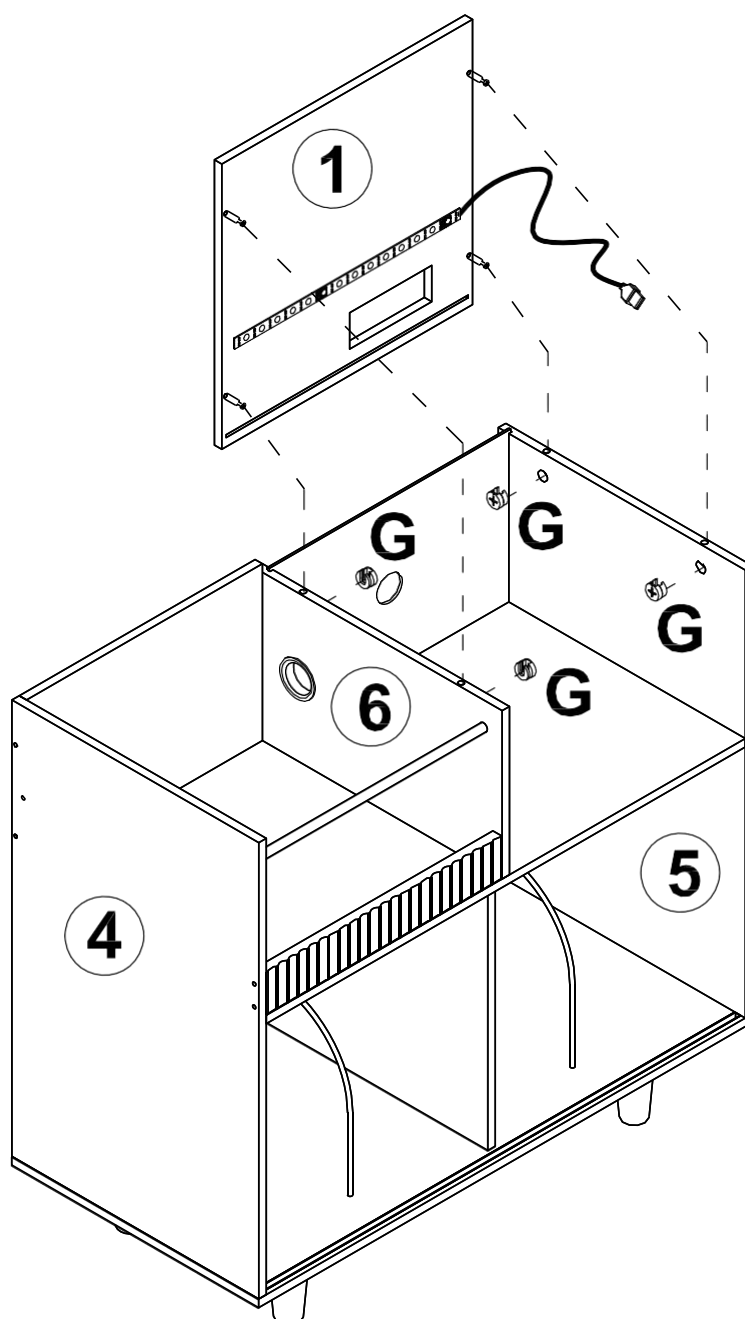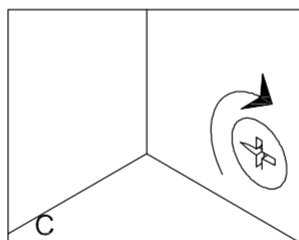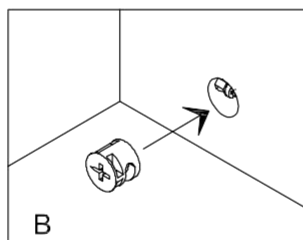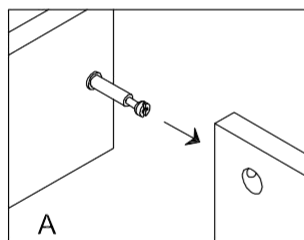
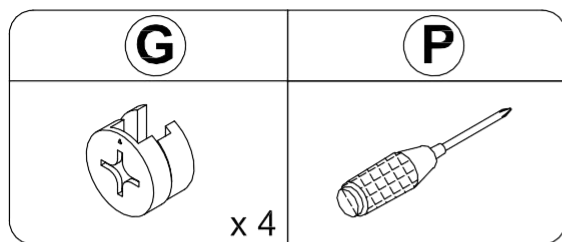


Step 17

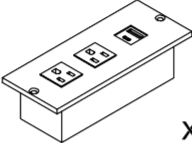

B	M	P
 x 2	 x 1	

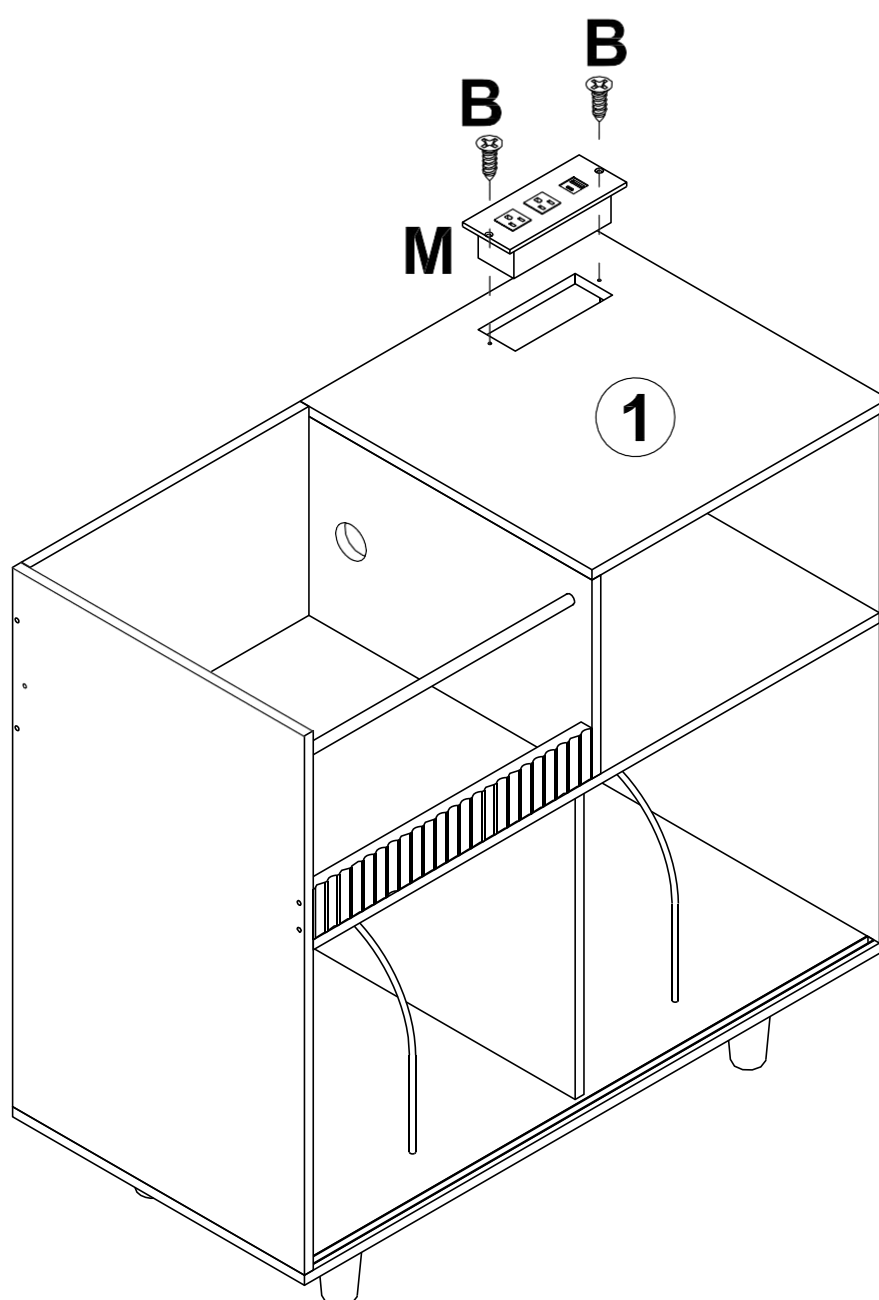


Step 18

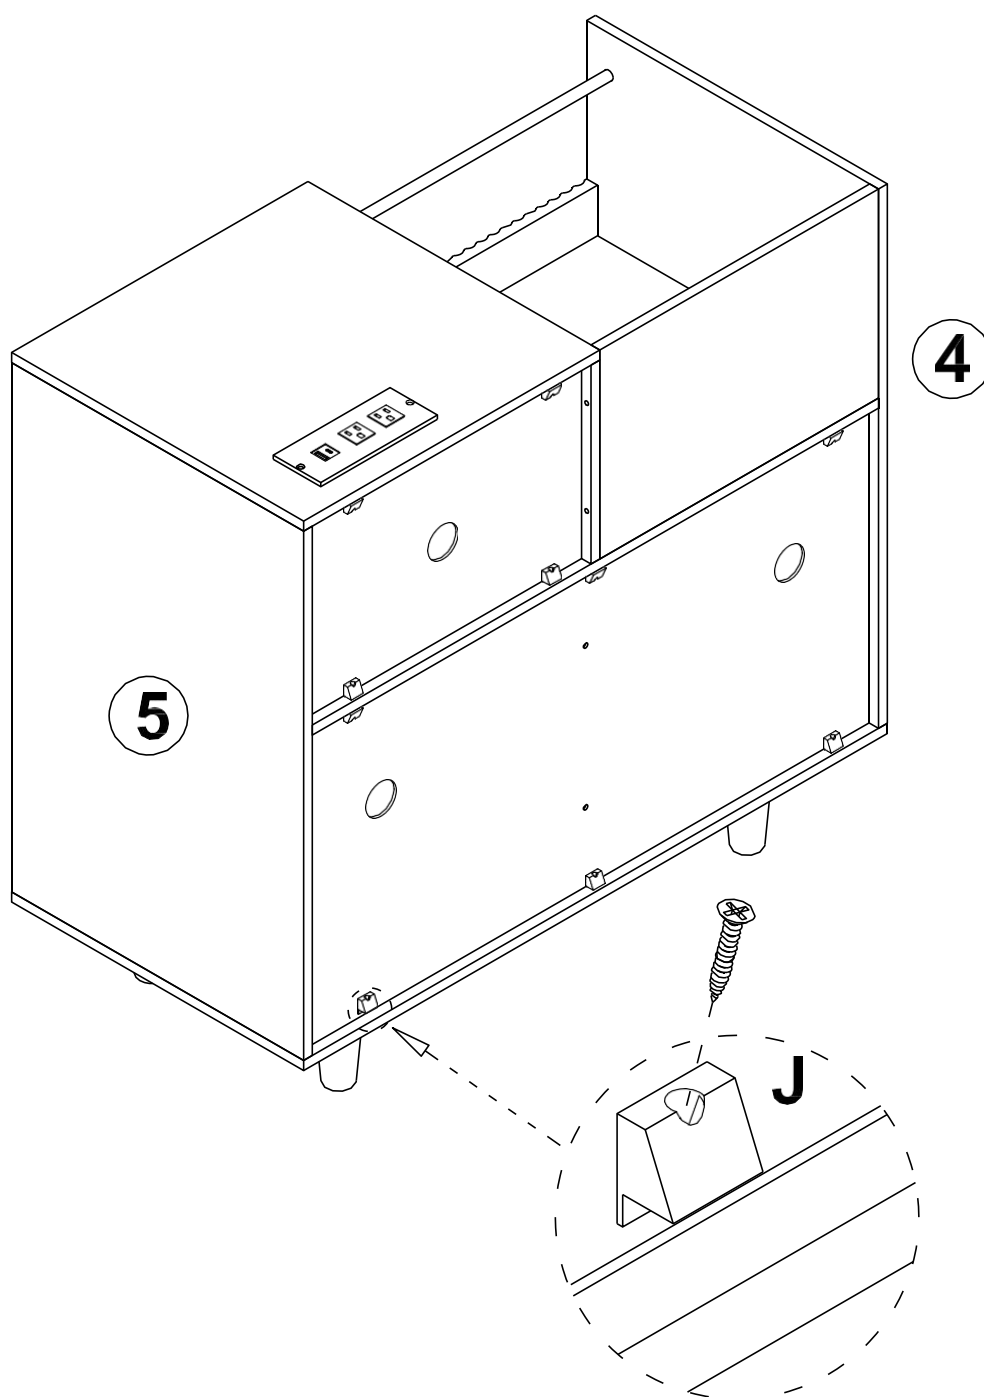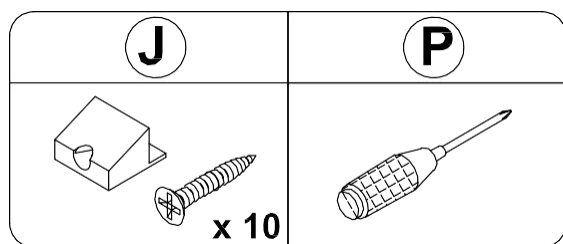

Step 19


A	H	P
 x 16	 H1  H2 x 2	

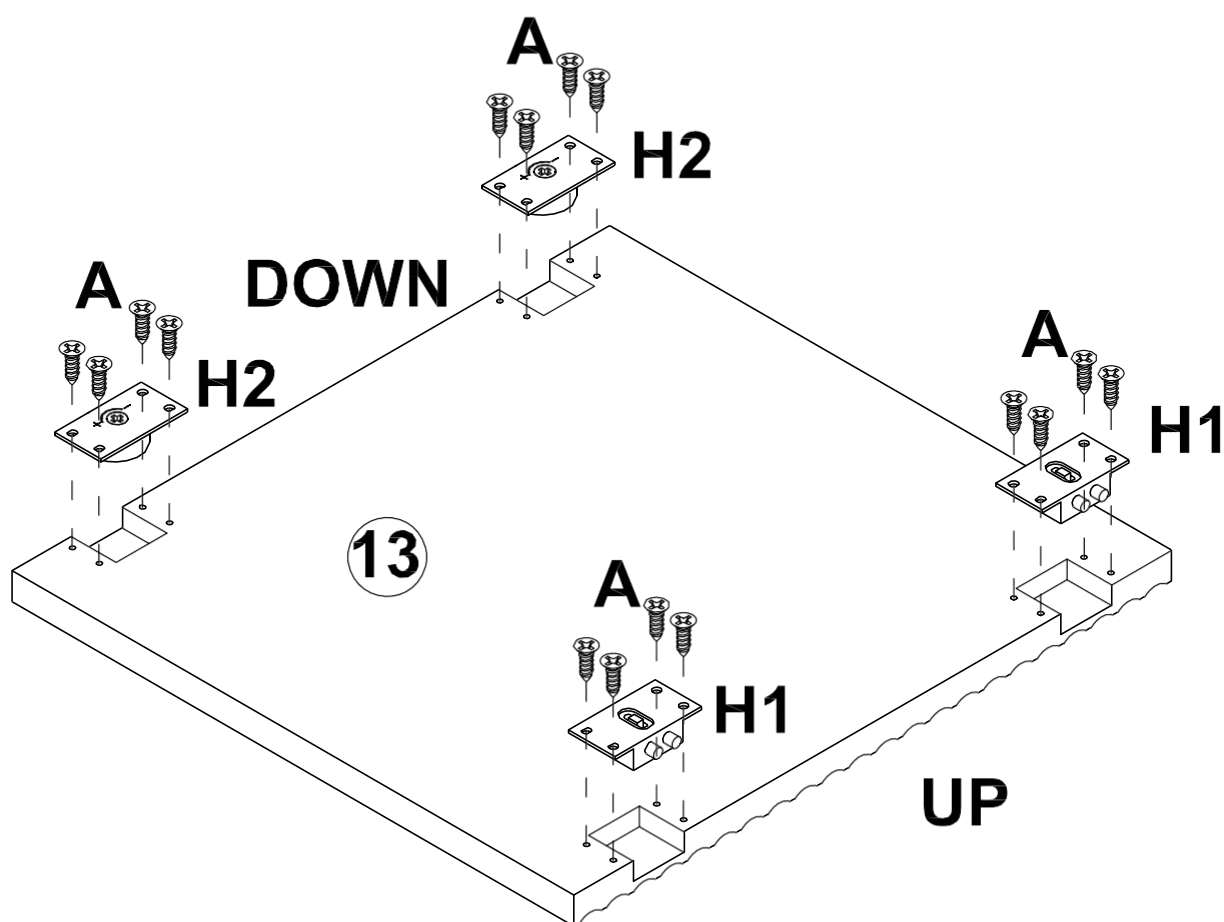

Note: Identical parts (H1) and (H2) must be installed in the same uniform direction to ensure proper function.


Step 20

Slide up and insert into the rail.

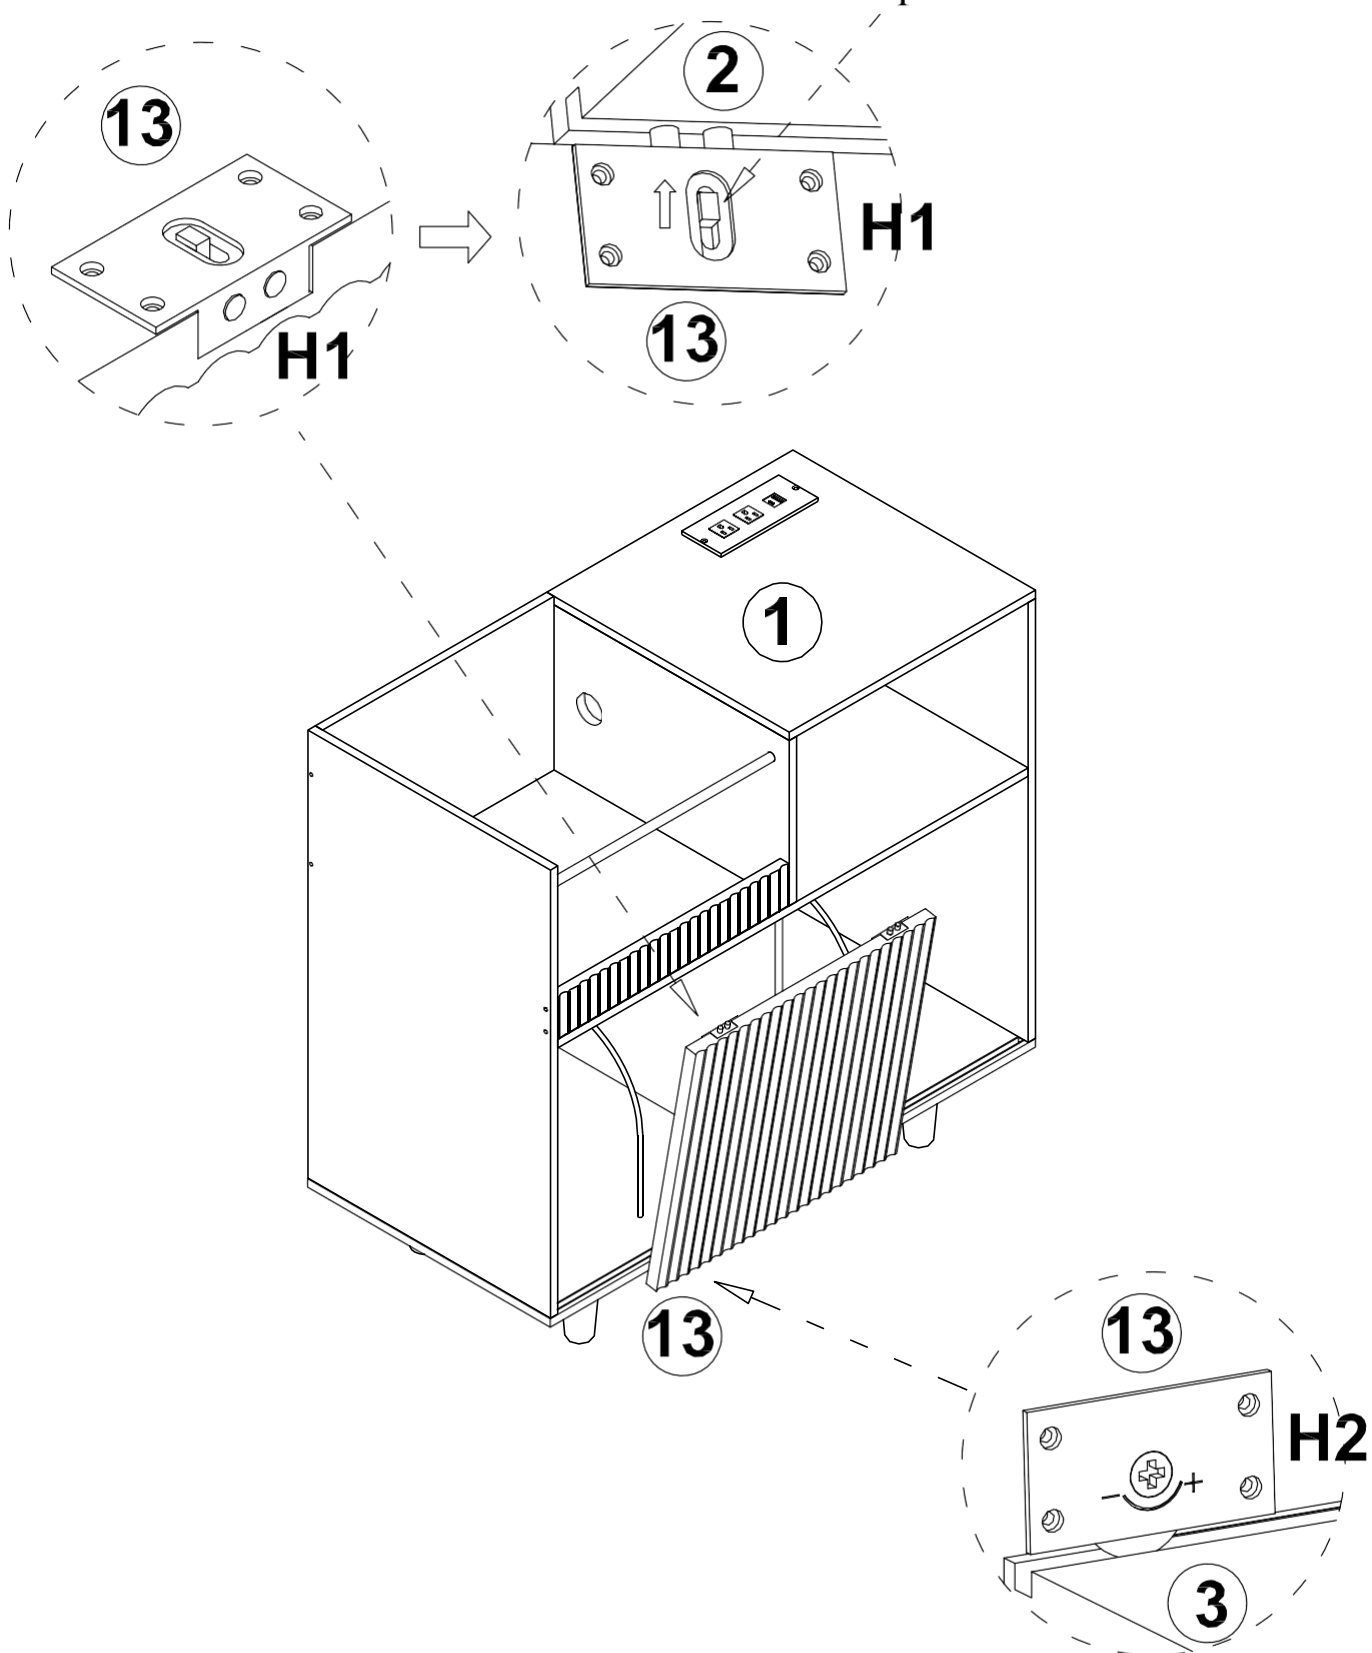

Note: First insert the H2 accessory of Panel # 13 into the lower slide rail. Then, push the H1 accessory to insert the slide rod into the upper slide rail.

Step 21

I	K	O	P
 x 2	 x 2		